

SUZUKI

PARTS CATALOGUE

DF300

DF300AP



OUTBOARD MOTOR

E01/E40

2011-12

1ST EDITION

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF300A production start Dec.2011.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E.NO.	: Engine number	OS	: Over size
F.NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	X,XX	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E.NO.30002P-123456	PTT	: Power trim and tilt
123456~	: From E.NO.30002P-123456		
12 x 34 x 5.6	 Figures in the description column		
	show the dimensions of parts.		
ID OD T(or W,L)			

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

→12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual. When assembling, use "SUZUKI SERVICE MANUAL".

6. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	ENGINE No.
DF300AP	E01,E40	30002P	X,XX	30002P-210001 ~

[illegible][illegible]

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.1

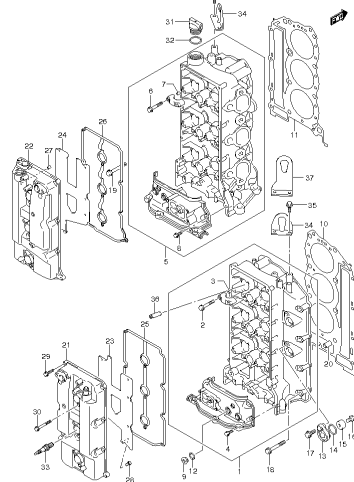


DF300A E01 012_001
CYLINDER HEAD

FIG.2

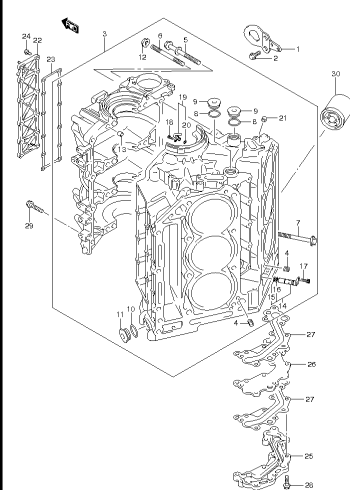


DF300A E01 012_002
CYLINDER BLOCK

FIG.3

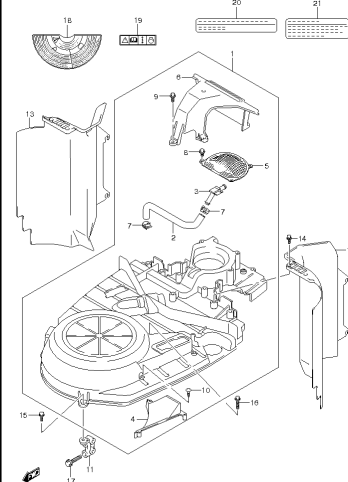


DF300A E01 012_003
RING GEAR COVER

FIG.4

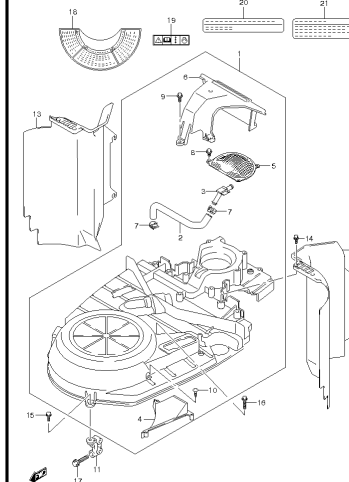


DF300A E01 012_004
RING GEAR COVER

FIG.5

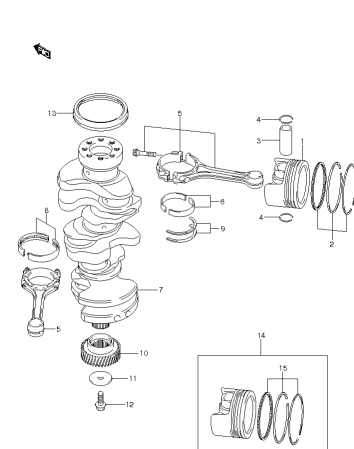


DF300A E01 012_005
CRANKSHAFT

FIG.6

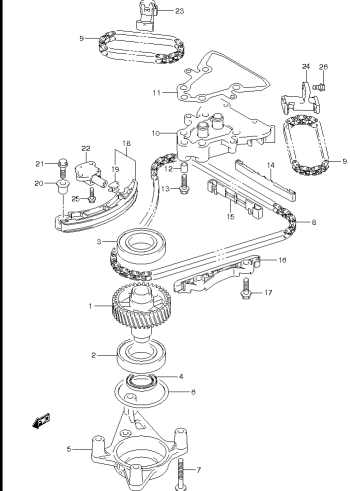


DF300A E01 012_006
TIMING CHAIN

FIG.7

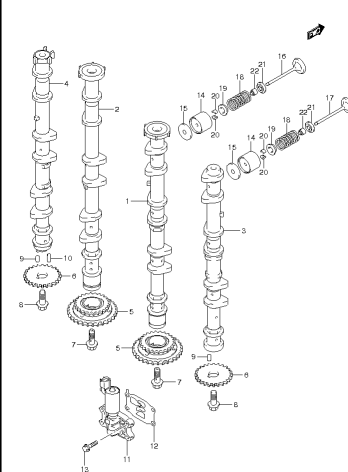


DF300A E01 012_007
CAMSHAFT

FIG.8

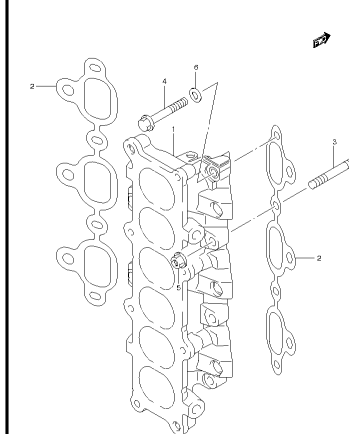


DF300A E01 012_008
INTAKE MANIFOLD

FIG.9

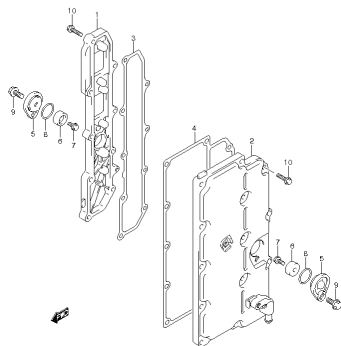


DFS300A E01 012_009
EXHAUST COVER

FIG.10

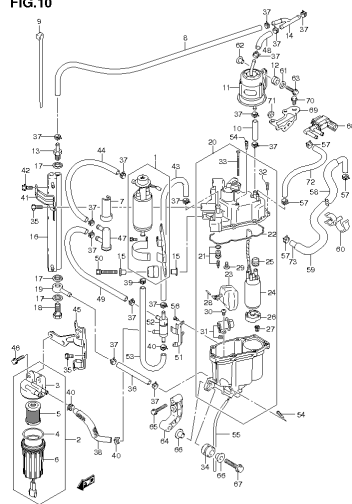


DFS300A E01 012_010
FUEL PUMP / FUEL VAPOR SEPARATOR

FIG.11

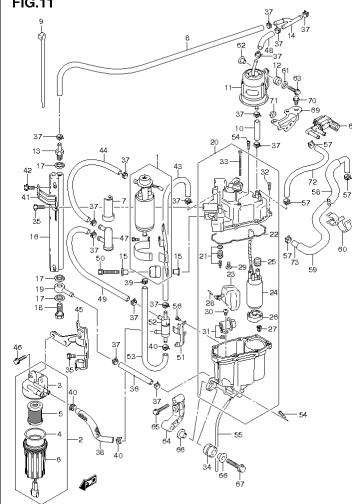


DFS300A E01 012_011
FUEL PUMP / FUEL VAPOR SEPARATOR

FIG.12

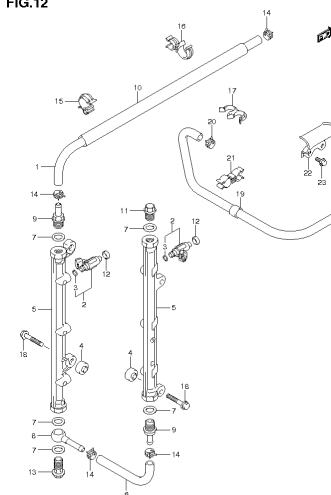


DFS300A E01 012_012
FUEL INJECTOR

FIG.13

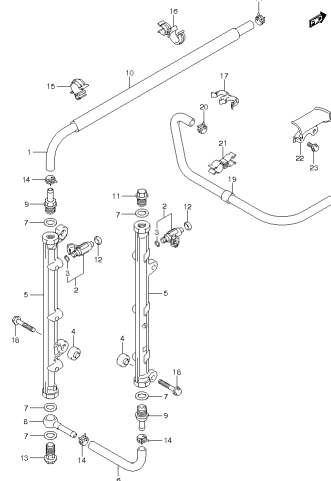


DFS300A E01 012_013
FUEL INJECTOR

FIG.14

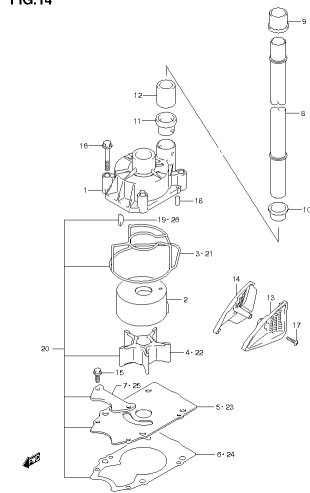


DFS300A E01 012_014
WATER PUMP

FIG.15

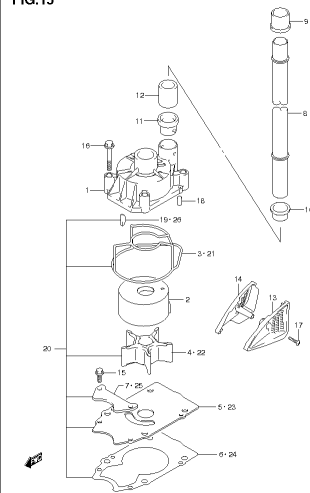

DFS300A E01 012_015
WATER PUMP

FIG.16

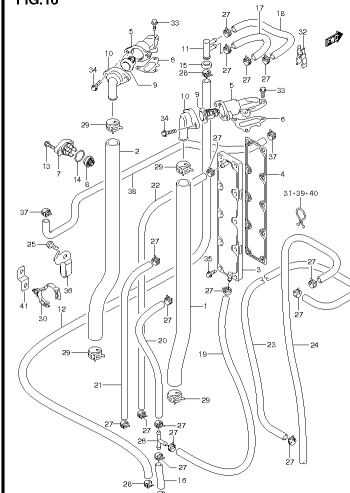

DFS300A E01 012_016
THERMOSTAT

FIG.17

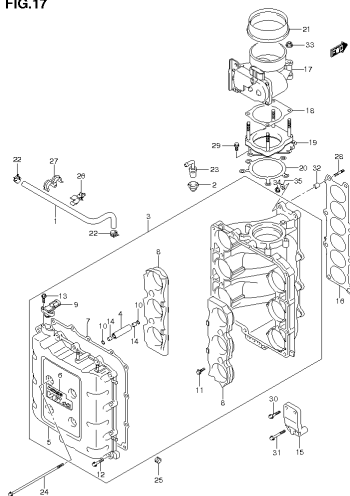
DF300A E01 012_017
THROTTLE BODY

FIG.18

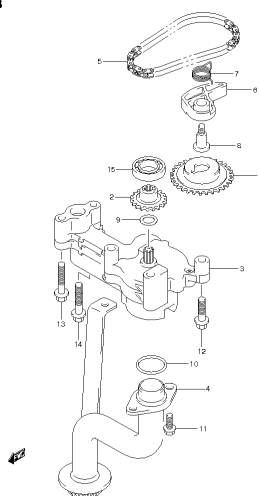
DF300A E01 012_018
OIL PUMP

FIG.19

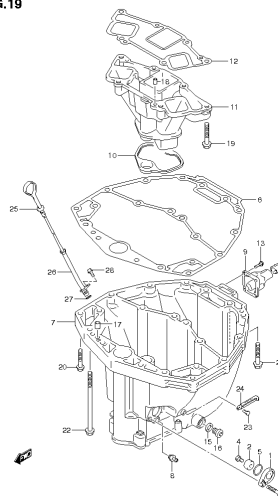
DF300A E01 012_019
OIL PAN

FIG.20

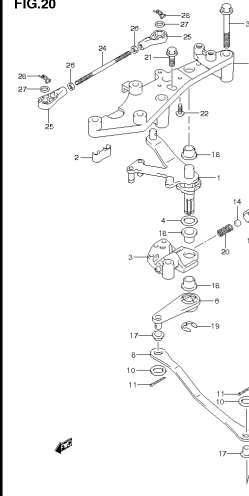
DF300A E01 012_020
CLUTCH SHAFT

FIG.21

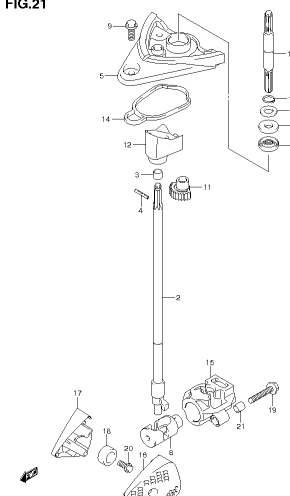
DF300A E01 012_021
CLUTCH ROD

FIG.22

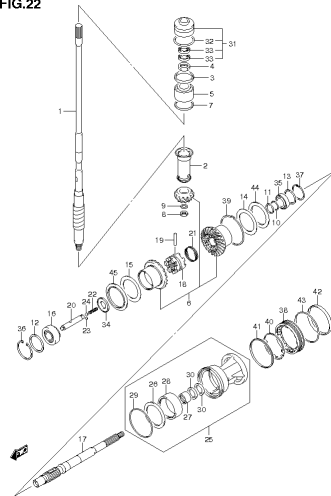
DF300A E01 012_022
TRANSMISSION

FIG.23

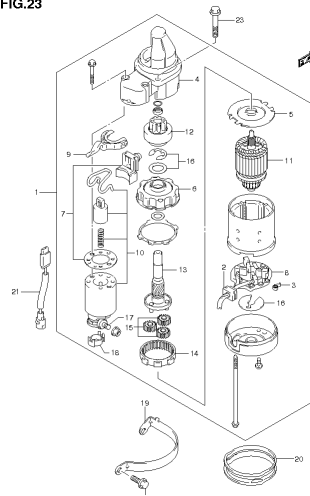
DF300A E01 012_023
STARTING MOTOR

FIG.24




DF300A E01 012_024
MAGNETO

FIG.25




DF300A E01 012_026
RECTIFIER/IGNITION COIL

FIG.26

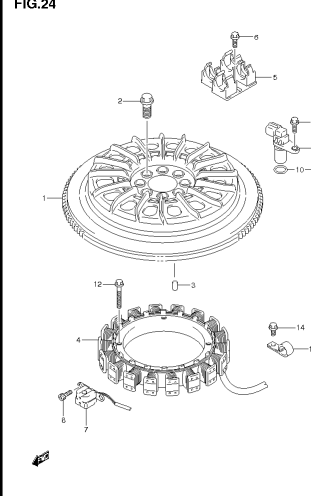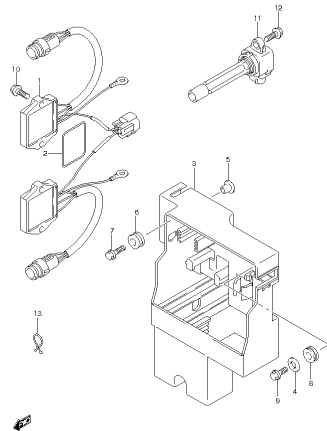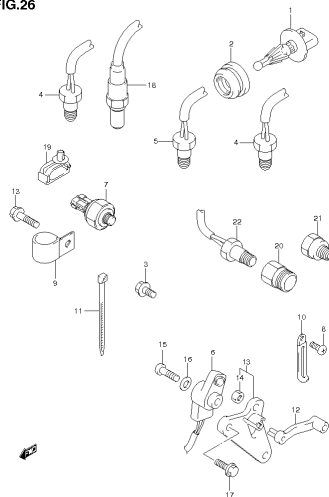


DF300A E01 012_026
SENSOR

FIG.27

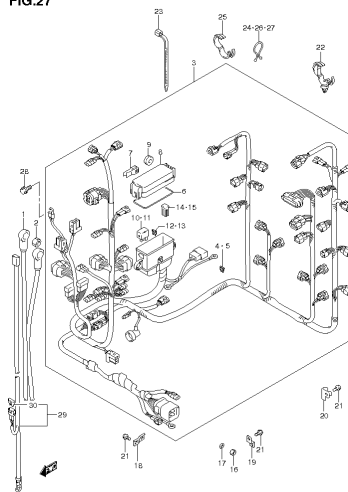


DF300A E01 012_027
HARNESS

FIG.28

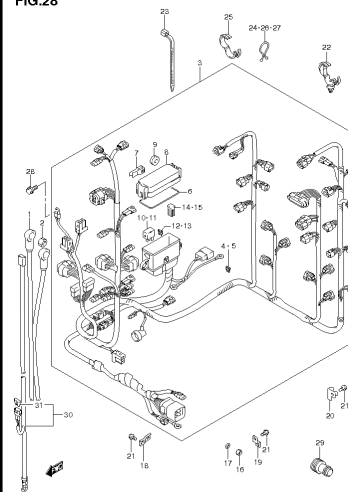


DF300A E01 012_026
HARNESS

FIG.29

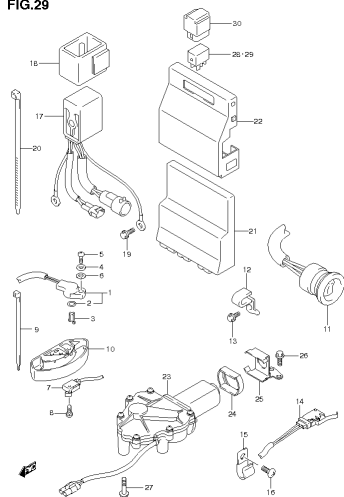


DF300A E01 012_029
PTT SWITCH/ENGINE CONTROL UNIT

FIG.30

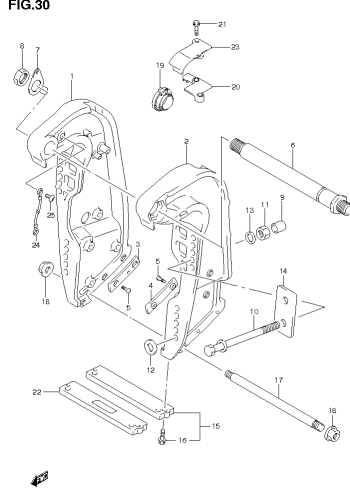


DF300A E01 012_030
CLAMP BRACKET

FIG.31

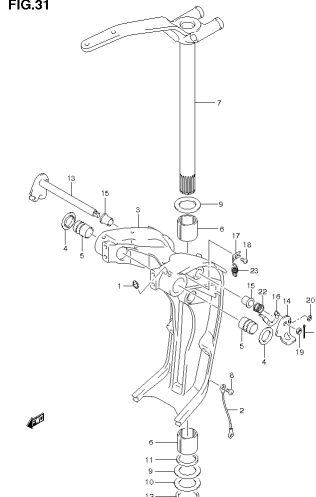


DF300A E01 012_031
6WVEL BRACKET

FIG.32

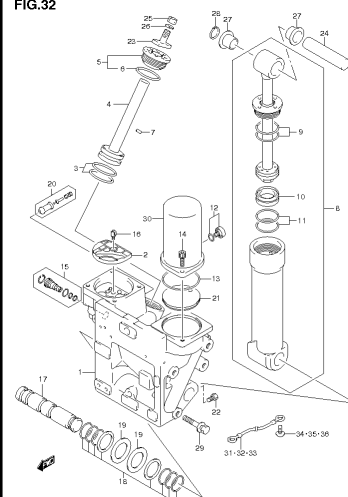


DF300A E01 012_032
TRIM CYLINDER

FIG.33

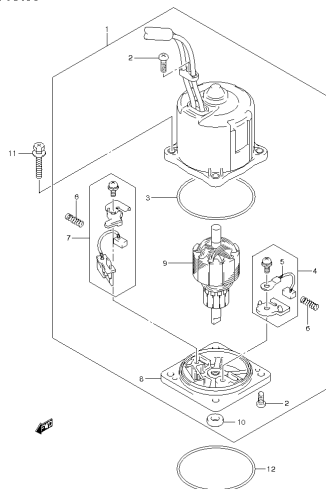


DF300A E01 012_033
PTT MOTOR

FIG.34

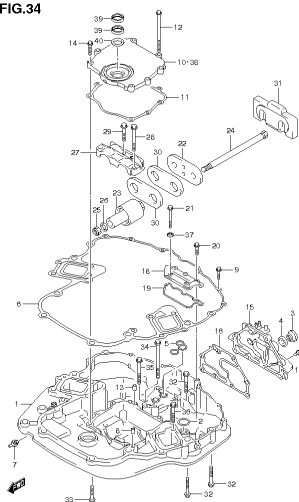


DF300A E01 012_034
ENGINE HOLDER

FIG.35

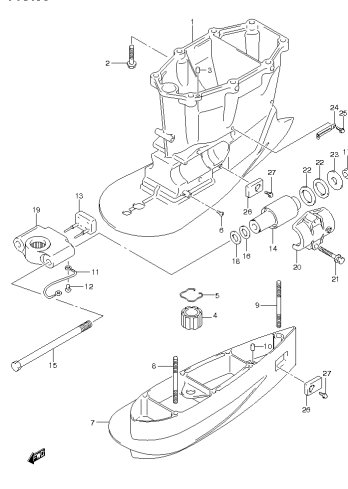


DF300A E01 012_035
DRIVE SHAFT HOUSING

FIG.36

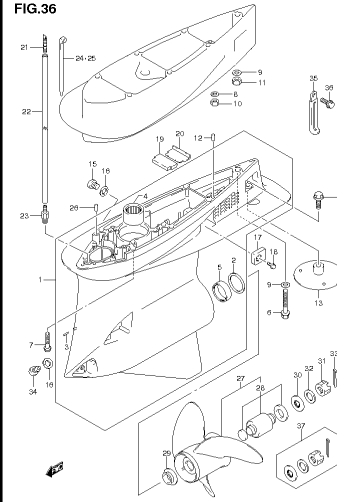


DF300A E01 012_036
GEAR CASE

FIG.37

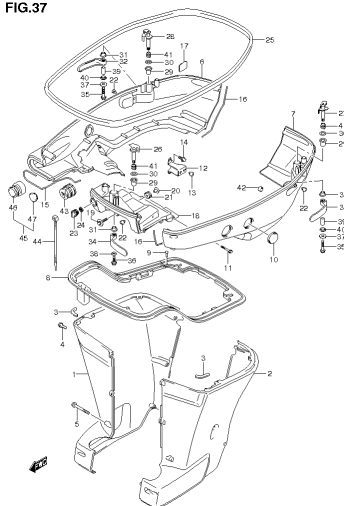


DF300A E01 012_037
SIDE COVER

FIG.38

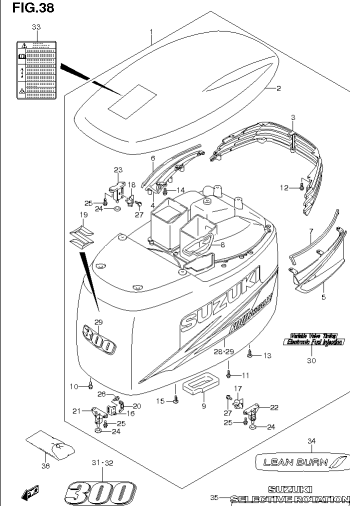


DF300A E01 012_038
ENGINE COVER

FIG.39

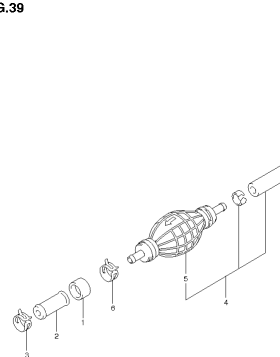


DF300A E01 012_039
FUEL HOSE

FIG.40

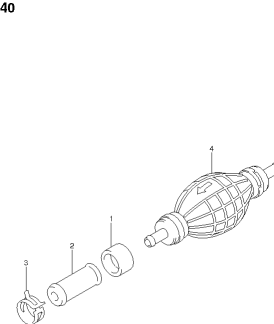


DF300A E01 012_040
FUEL HOSE

FIG.41

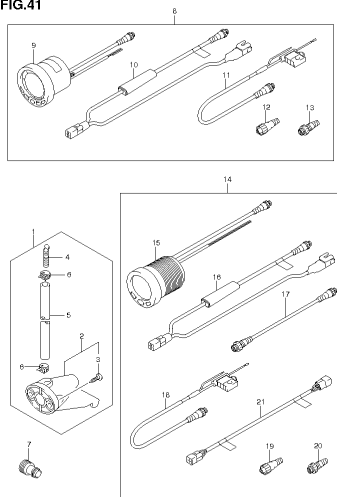


DF300A E01 012_041
OPT. METER

FIG.42

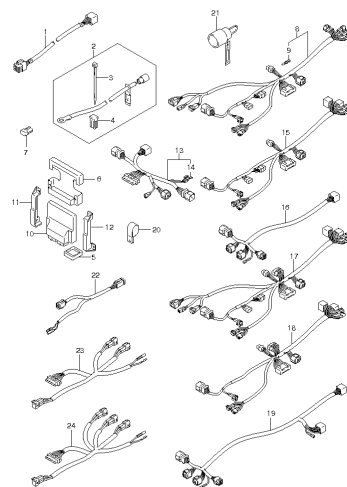


DF300A E01 012_042
OPT. HARNESS

FIG.43

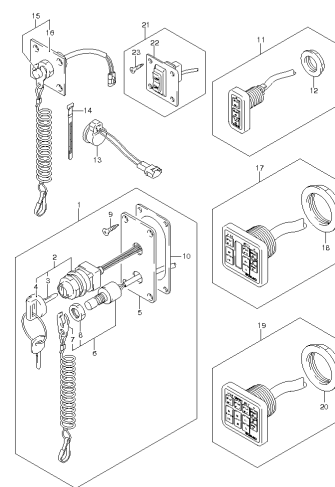


DF300A E01 012_043
OPT. SWITCH

FIG.44

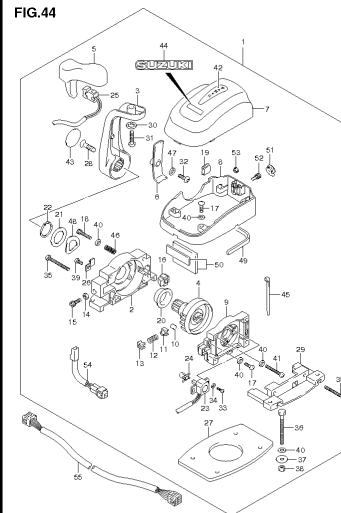


DF300A E01 012_044
OPT. TOP MOUNT SINGLE

FIG.45

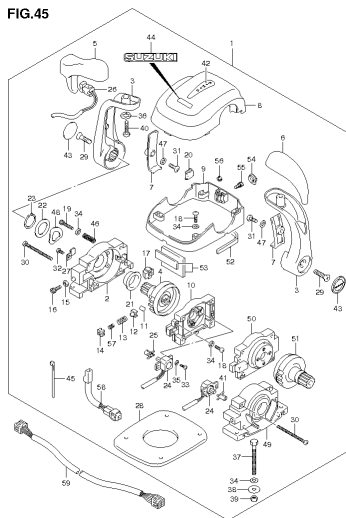


DF300A E01 012_045
OPT. TOP MOUNT DUAL

FIG.46

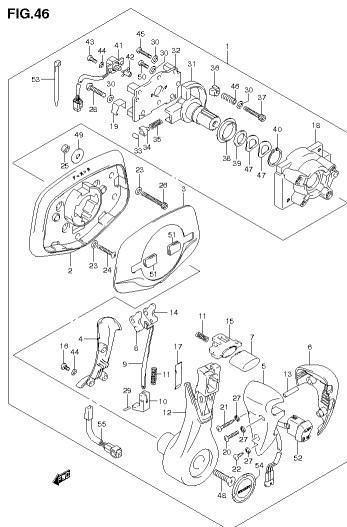


DF300A E01 012_046
OPT. FLUSH MOUNT REMOCON

FIG.47

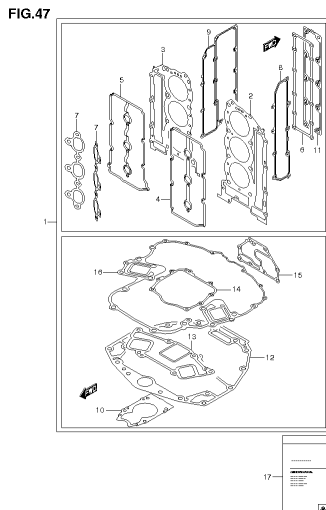


DF300A E01 012_047
OPT. GASKET SET

FIG.48

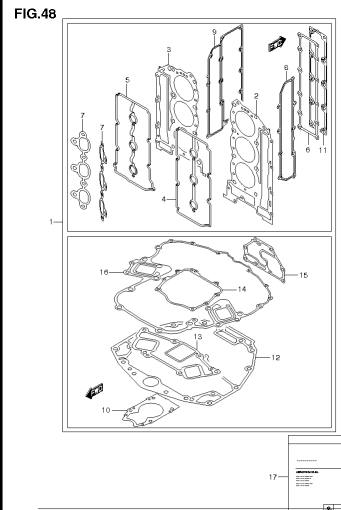

DF300A E01 012_048
OPT. GASKET SET

FIG.49

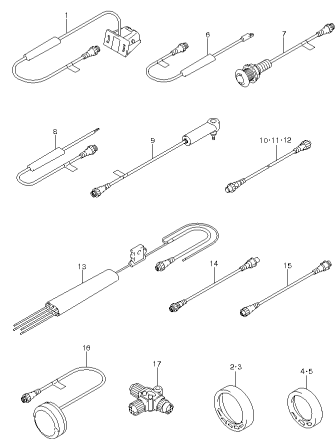

DF300A E01 012-049
DIFF. LOWRANCE GAUGE

FIG.1

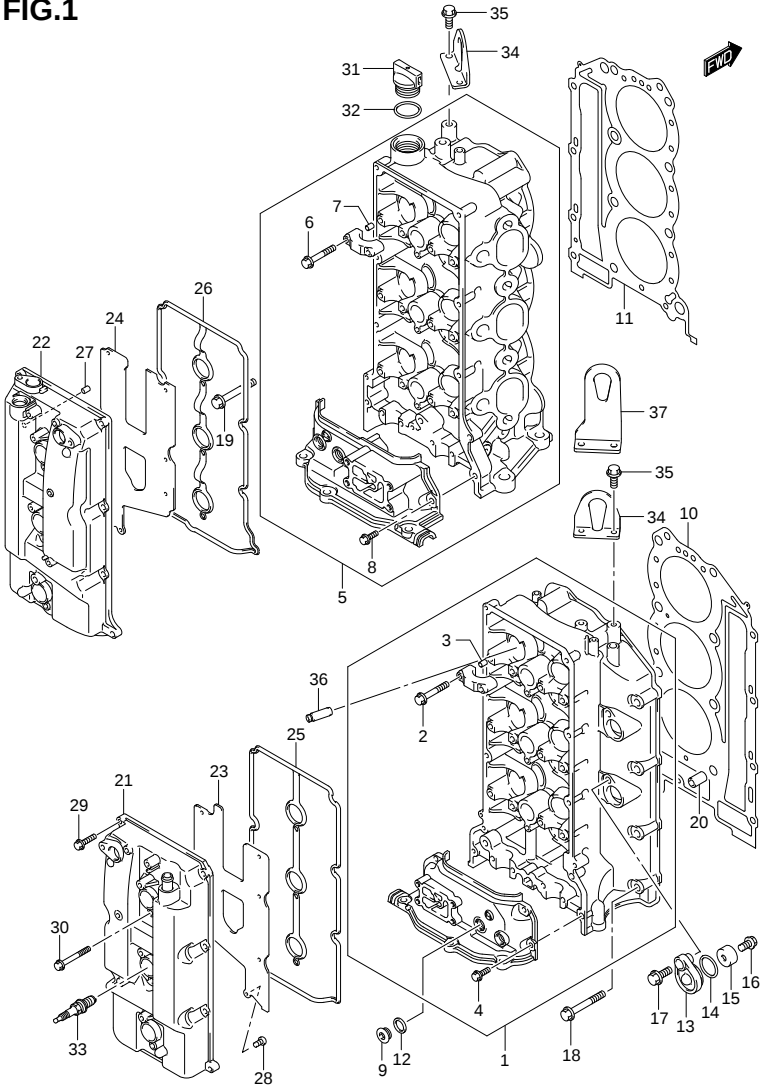


FIG. 1 (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	11101-98J02	HEAD ASSY, CYLINDER STBD	1	
2	11128-90J00	·BOLT, CAM SHAFT HOUSING	16	
3	09206-08001	·PIN (8X11)	14	
4	01550-06207	·BOLT	4	
5	11103-98J02	HEAD ASSY, CYLINDER PORT	1	
6	11128-90J00	·BOLT, CAM SHAFT HOUSING	16	
7	09206-08001	·PIN (8X11)	14	
8	01550-06207	·BOLT	2	
9	11116-93J01	PLUG	4	
10	11141-98J10	GASKET, CYL HEAD STBD	1	
11	11142-98J10	GASKET, CYL HEAD PORT	1	
12	09168-16009	GASKET (16X22X0.8)	4	
13	11261-93J00	COVER, PROTECTION ANODE	4	
14	09280-22019	O RING (D:1.9,ID:21.8)	4	
15	55321-87J00	ANODE, PROTECTION	4	
16	09103-06281	BOLT (6X14)	4	
17	01550-08207	BOLT	4	
18	01550-08607	BOLT	5	
19	01550-08607	BOLT	4	
20	09206-14004	PIN (14X11.4X23)	4	
21	11170-93J01	COVER, CYL HEAD STBD	1	
22	11180-98J01	COVER, CYLINDER HEAD PORT	1	
23	11173-93J00	PLATE, BREATHER STBD	1	
24	11183-93J00	PLATE, BREATHER PORT	1	
25	11179-93J00	GASKET, CYL HEAD COVER STBD	1	
26	11189-93J00	GASKET, CYL HEAD COVER PORT	1	
27	09206-08001	PIN (8X11)	1	
28	02112-0612A	SCREW	14	
29	01547-06257	BOLT	16	
30	01547-06507	BOLT	6	
31	11382-93J00	CAP, OIL FILLER	1	
32	09280-26006	O RING (D:3.1,ID:26.4)	1	
33	09482-00427	SPARK PLUG (NGK, BKR6E)	6	
34	11291-93J00	HOOK, ENGINE	2	

FIG.1


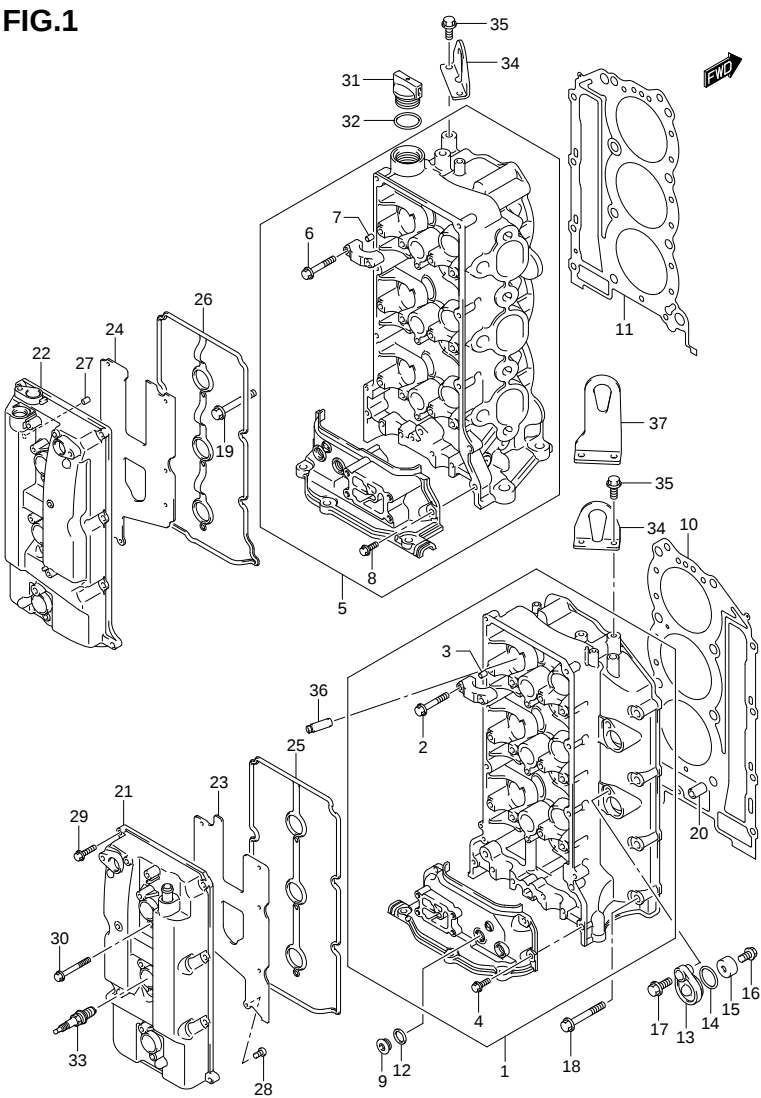


FIG. 1 (1-B-3) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
35	01550-08207	BOLT	4	
36	11115-93J10-001	GUIDE, VALVE OS	24	OPT
37	11291-98J00	HOOK, ENGINE	1	OPT

FIG.2

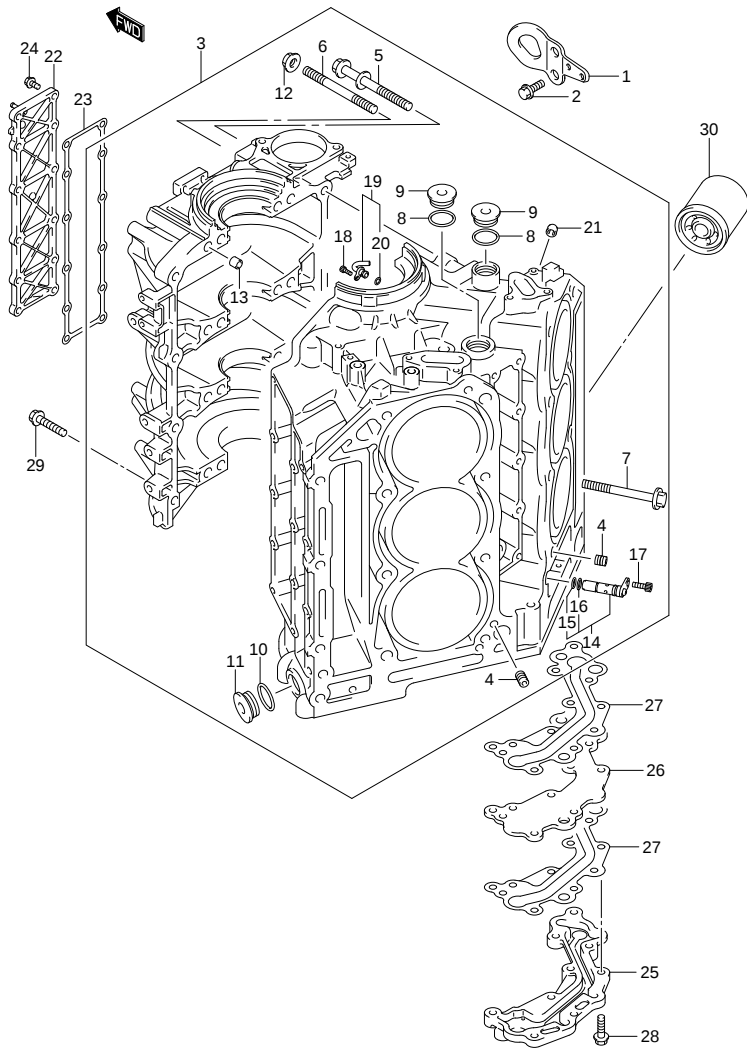

DF300A E01 012_002
CYLINDER BLOCK

FIG. 2 (1-B-4) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	11293-98J00	HOOK, ENGINE FRONT	1	
2	01550-08207	BOLT	2	
3	11301-98J30	BLOCK SET, CYLINDER	1	
4	11112-93J00	·PLUG, OIL VENTURI	2	
5	11117-93J10	·BOLT, CRANKCASE	12	
6	11117-98J10	·BOLT, CRANKCASE STUD	4	
7	11119-93J00	·BOLT, CYLINDER HEAD	16	
8	11217-85FA0	·GASKET, M26 PLUG	3	
9	09248-26001	·PLUG (26X11)	3	
10	09160-18031	·WASHER (18.5X28X2.6)	2	
11	09248-18006	·PLUG (18X8)	2	
12	09159-10116	·NUT	4	
13	09206-13019	·PIN (10.4X13X16)	5	
14	16700-93J00	·VALVE, PISTON JET	1	
15	09280-10009	··O RING (D:1.3,ID:9.8)	1	
16	09280-10016	··O RING (D:1.9,ID:9.8)	1	
17	07130-0616A	·BOLT	1	
18	07130-0510A	·BOLT	6	
19	11390-98J00	·JET, PISTON COOLING	6	
20	09280-06005	··O RING (D:1.9,ID:5.7)	6	
21	09246-05006	·PLUG	1	
22	11330-93J01	COVER, CRANKCASE WTR JKT	1	
23	11332-93J00	GASKET, CRANKCASE WTR JKT COV	1	
24	01550-06207	BOLT	12	
25	16430-93J00	COVER, OIL GALLERY	1	
26	16431-93J00	PLATE, OIL GALLERY	1	
27	16433-93J00	GASKET, OIL GALLERY	2	
28	01550-0835A	BOLT	9	
29	01550-08457	BOLT	8	
30	16510-96J00	FILTER ASSY, OIL	1	

DF300A E01 012

FIG.3

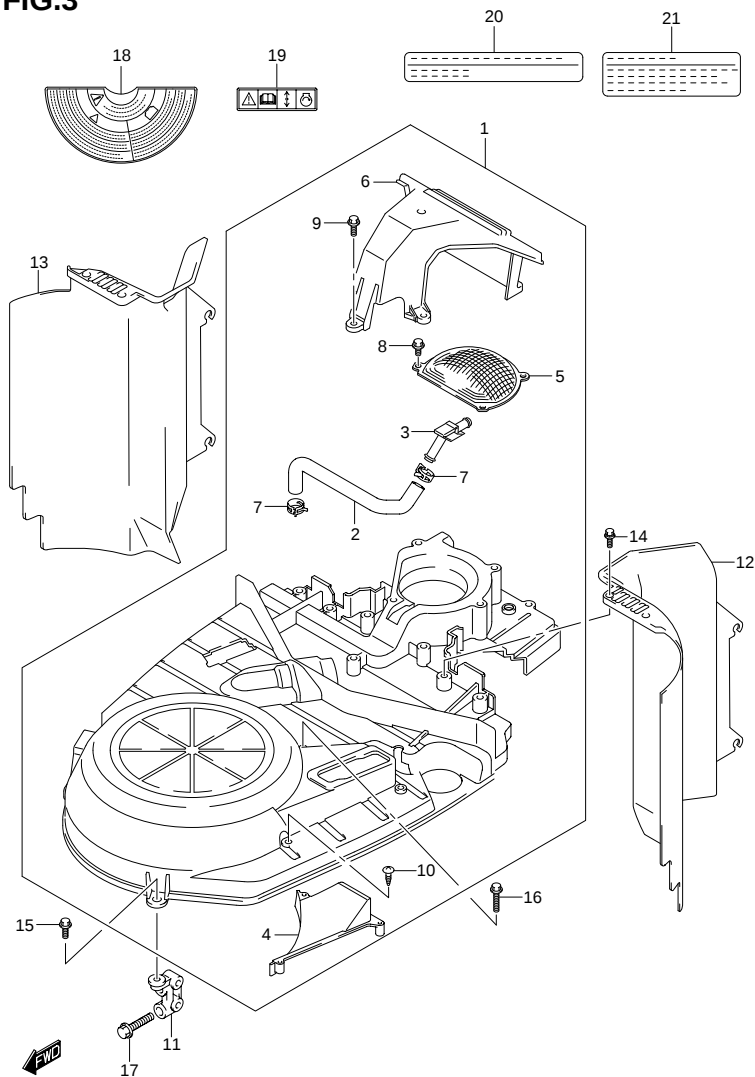


FIG.3 (1-B-5) RING GEAR COVER (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	11510-98J02	COVER, RING GEAR	1	
2	11174-98J00	·HOSE, BREATHER	1	
3	11176-98J00	·UNION, BREATHER	1	
4	11514-98J00	·PLATE, RING GEAR COVER	1	
5	13710-98J00	·ARRESTER, FLAME	1	
6	13811-98J00	·SILENCER, UPPER COVER	1	
7	09401-18410	·CLIP	2	
8	01550-06127	·BOLT	4	
9	01550-06207	·BOLT	5	
10	11517-98J00	·SCREW	3	
11	11515-93J00	BRACE, RING GEAR COVER	1	
12	13841-98J10	GUARD, AIR DUCT STBD	1	
13	13851-98J10	GUARD, AIR DUCT PORT	1	
14	01550-06207	BOLT	4	
15	01550-06207	BOLT	2	
16	01550-06407	BOLT	1	
17	01550-08357	BOLT	2	
18	61472-93E40	LABEL, MAG COVER	1	
19	69711-93E10	LABEL (S.I.G.P)	1	
20	61493-93J00	LABEL, CLEARANCE	1	
21	61494-96J00	LABEL, OIL	1	

FIG.4

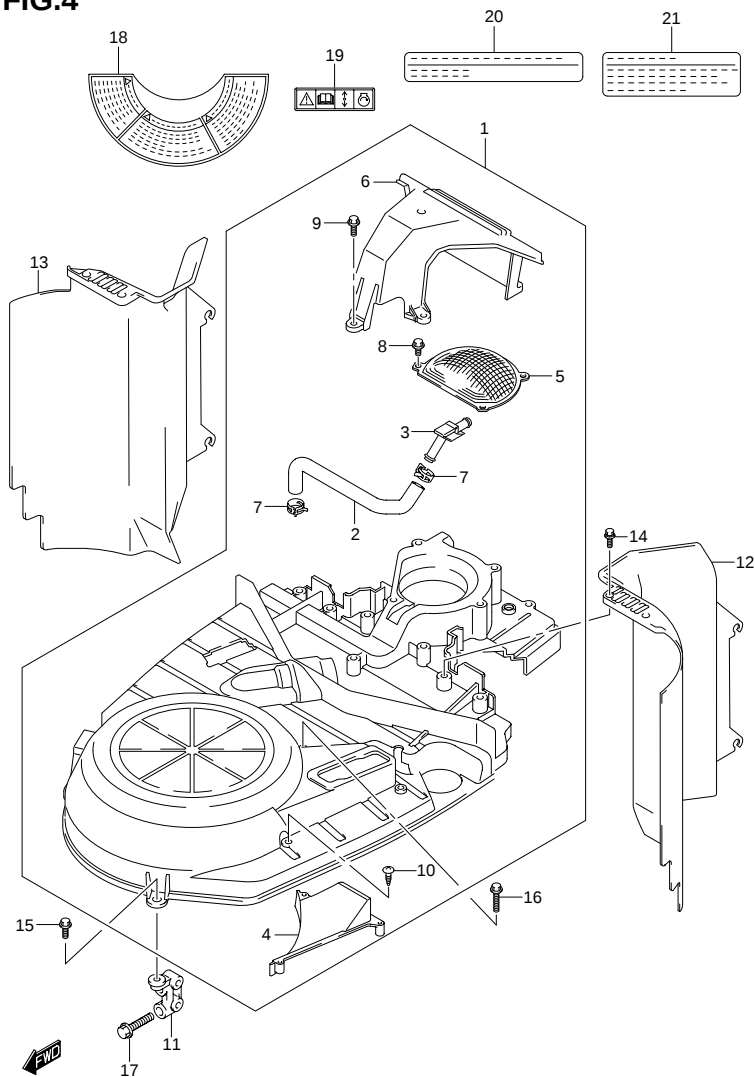


FIG. 4 (1-B-6) RING GEAR COVER (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	11510-98J02	COVER, RING GEAR	1	
2	11174-98J00	·HOSE, BREATHER	1	
3	11176-98J00	·UNION, BREATHER	1	
4	11514-98J00	·PLATE, RING GEAR COVER	1	
5	13710-98J00	·ARRESTER, FLAME	1	
6	13811-98J00	·SILENCER, UPPER COVER	1	
7	09401-18410	·CLIP	2	
8	01550-06127	·BOLT	4	
9	01550-06207	·BOLT	5	
10	11517-98J00	·SCREW	3	
11	11515-93J00	BRACE, RING GEAR COVER	1	
12	13841-98J10	GUARD, AIR DUCT STBD	1	
13	13851-98J10	GUARD, AIR DUCT PORT	1	
14	01550-06207	BOLT	4	
15	01550-06207	BOLT	2	
16	01550-06407	BOLT	1	
17	01550-08357	BOLT	2	
18	61472-93E32	LABEL, MAG COVER	1	
19	69711-93E10	LABEL (S.I.G.P)	1	
20	61493-93J00	LABEL, CLEARANCE	1	
21	61494-96J00	LABEL, OIL	1	

FIG.5

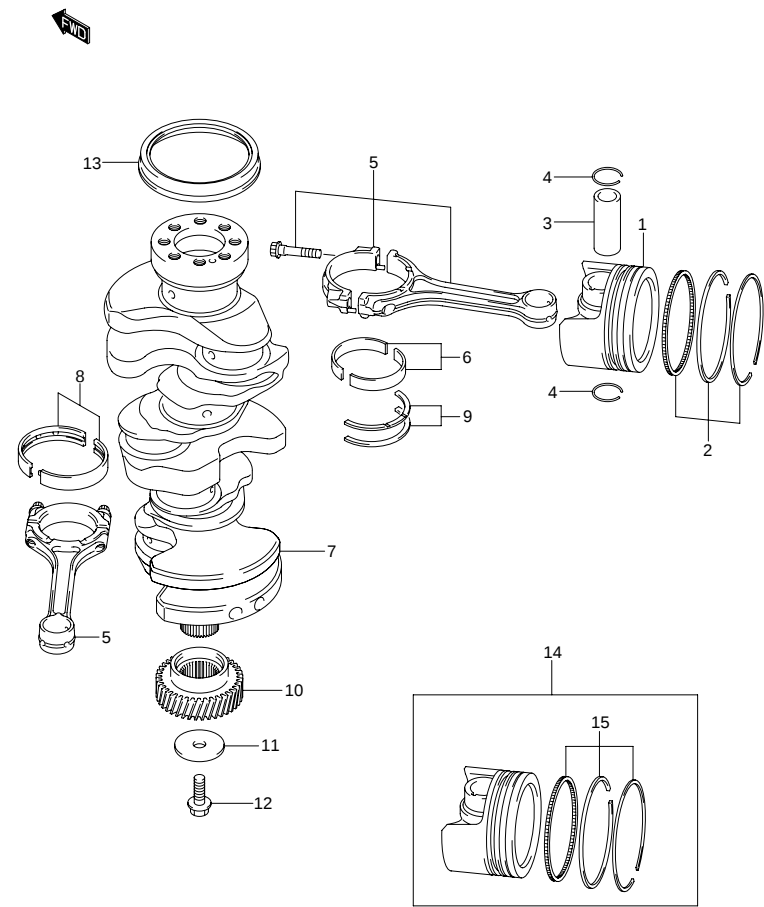


FIG. 5 (1-B-7) CRANKSHAFT

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	12111-98J00-0B0	PISTON	6	
2	12140-98J00	RING SET, PISTON	6	
3	12151-02F00	PIN, PISTON	6	
4	09381-22010	CIRCLIP	12	
5	12160-98J00	CONNROD ASSY	6	
6-1	12100-98810-0A0	BEARING SET, CONNROD (GREEN)	6	
6-2	12100-98810-025	BEARING SET, CONNROD (US:0.25)	6	OPT
7	12220-98J00	CRANKSHAFT	1	
8-1	12340-98J00-0A0	BEARING SET, CRANKSHAFT (BLACK)	4	
8-2	12340-98J00-0B0	BEARING SET, CRANKSHAFT (NON)	4	
8-3	12340-98J00-0C0	BEARING SET, CRANKSHAFT (YELLOW)	4	
8-4	12340-98J00-0D0	BEARING SET, CRANKSHAFT (BULE)	4	
8-5	12340-98J00-0E0	BEARING SET, CRANKSHAFT (PINK)	4	
8-6	12300-98810-0AA	BEARING SET, CRANKSHAFT (RED/BLACK)	4	OPT US:0.25
8-7	12300-98810-0BA	BEARING SET, CRANKSHAFT (RED)	4	OPT US:0.25
8-8	12300-98810-0CA	BEARING SET, CRANKSHAFT (RED/YELLOW)	4	OPT US:0.25
8-9	12300-98810-0DA	BEARING SET, CRANKSHAFT (RED/BLUE)	4	OPT US:0.25
8-10	12300-98810-0EA	BEARING SET, CRANKSHAFT (RED/PINK)	4	OPT US:0.25
9-1	12300-98821	BEARING SET, CRANK THRUST	1	
9-2	12300-98821-012	BEARING SET, CRANK THRUST	1	OPT OS:0.12
10	12242-98J00	GEAR, DRIVE	1	
11	09160-10104	WASHER (10.5X50X3.2)	1	
12	01550-1025A	BOLT	1	
13	09283-91001	OIL SEAL (91X109X10)	1	
14	12100-98J00-050	PISTON SET (OS:0.50)	6	OPT
15	12140-98J00-050	·RING SET, PISTON (OS:0.50)	6	OPT

FIG.6

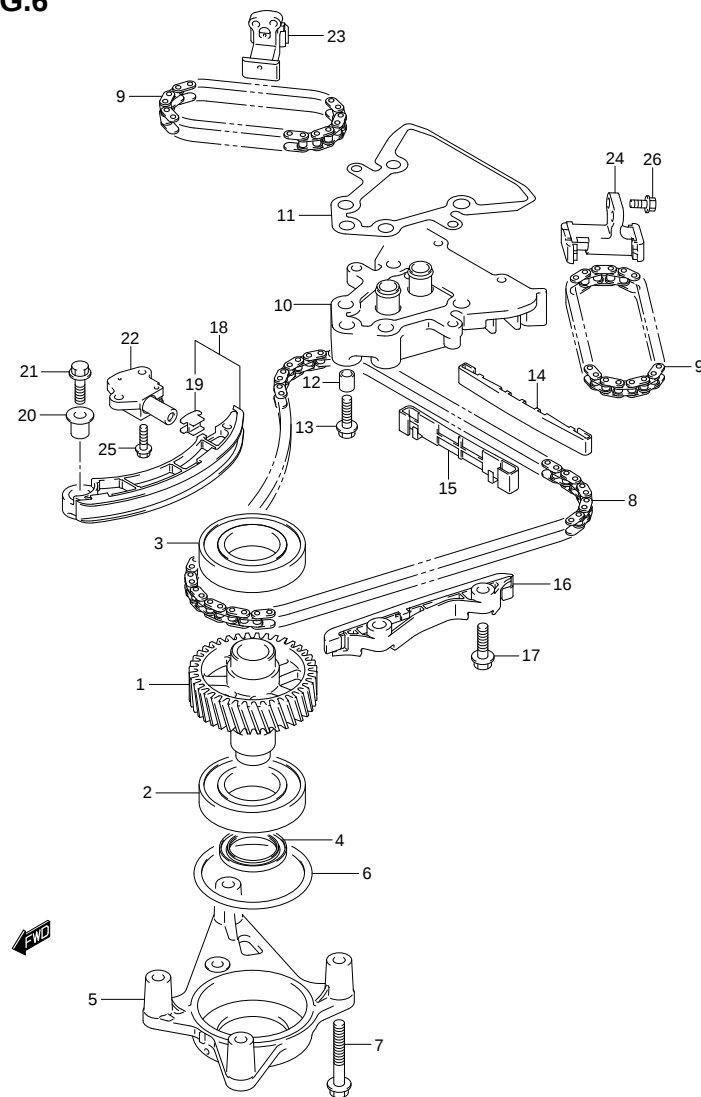


FIG.6 (1-B-8) TIMING CHAIN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12730-98J00	GEAR, DRIVEN	1	
2	09262-40018	BEARING (40X80X18)	1	LOWER
3	09262-40017	BEARING (40X80X18)	1	UPPER
4	09283-32044	OIL SEAL (32X47X6)	1	
5	12734-93J00	HOLDER, DRIVEN GEAR	1	
6	09280-70012	O RING (D:5.7,ID:69.6)	1	
7	01550-0855A	BOLT	4	
8	12761-93J00	CHAIN, TIMING 1ST	1	
9	12762-93J00	CHAIN, TIMING 2ND	2	
10	12770-93J00	BASE, TIMING CHAIN GUIDE NO.1	1	
11	12778-93J00	GASKET, GUIDE BASE	1	
12	04211-13149	PIN	2	
13	01550-0830A	BOLT	2	
14	12771-93J00	SHOE, TIMING CHAIN UPPER	1	
15	12775-93J00	SHOE, TIMING CHAIN LOWER	1	
16	12772-93J00	GUIDE, TIMING CHAIN NO.2	1	
17	01550-0830A	BOLT	2	
18	12810-93J00	TENSIONER ASSY, TIMING CHAIN	1	
19	12813-73G00	PAD, TIMING CHAIN TENSIONER	1	
20	12812-90J00	SPACER, TIMING CHAIN TENSIONER	1	
21	01550-0830A	BOLT	1	
22	12831-93J01	ADJUSTER ASSY, TENSIONER	1	
23	12832-93J00	TENSIONER ASSY, STBD	1	
24	12833-93J00	TENSIONER ASSY, PORT	1	
25	01550-0620A	BOLT	2	
26	01550-0620A	BOLT	4	

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98J10	CAMSHAFT, INTAKE STBD	1	
2	12705-98J10	CAMSHAFT, INTAKE PORT	1	
3	12721-98J10	CAMSHAFT, EXH STBD	1	
4	12729-98J20	CAMSHAFT, EXH PORT	1	
5	12740-93J00	SPROCKET ASSY, CAM TIMING	2	
6	12748-93J00	SPROCKET, EXH CAMSHAFT	2	
7	12753-93J00	BOLT, INTAKE CAMSHAFT	2	
8	12749-93J00	BOLT, CAMSHAFT EXHAUST	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE, OIL CONTROL	2	
12	16555-93J00	GASKET, VALVE	2	
13	01550-06257	BOLT	8	
14	12891-93J00	TAPPET	24	
15-1	12892-93J00-218	SHIM, TAPPET	AR	
15-2	12892-93J00-220	SHIM, TAPPET	AR	
15-3	12892-93J00-223	SHIM, TAPPET	AR	
15-4	12892-93J00-225	SHIM, TAPPET	AR	
15-5	12892-93J00-228	SHIM, TAPPET	AR	
15-6	12892-93J00-230	SHIM, TAPPET	AR	
15-7	12892-93J00-233	SHIM, TAPPET	AR	
15-8	12892-93J00-235	SHIM, TAPPET	AR	
15-9	12892-93J00-238	SHIM, TAPPET	AR	
15-10	12892-93J00-240	SHIM, TAPPET	AR	
15-11	12892-93J00-243	SHIM, TAPPET	AR	
15-12	12892-93J00-245	SHIM, TAPPET	AR	
15-13	12892-93J00-248	SHIM, TAPPET	AR	
15-14	12892-93J00-250	SHIM, TAPPET	AR	
15-15	12892-93J00-253	SHIM, TAPPET	AR	
15-16	12892-93J00-255	SHIM, TAPPET	AR	
15-17	12892-93J00-258	SHIM, TAPPET	AR	
15-18	12892-93J00-260	SHIM, TAPPET	AR	
15-19	12892-93J00-263	SHIM, TAPPET	AR	
15-20	12892-93J00-265	SHIM, TAPPET	AR	

FIG.7

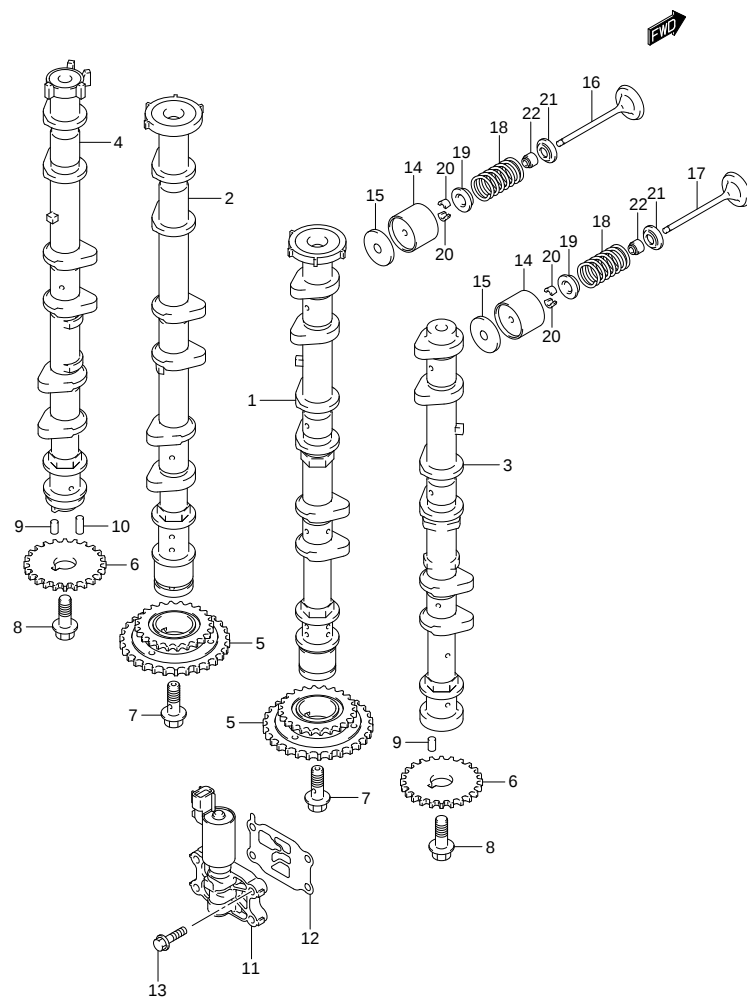


FIG.7 (1-B-10) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
15-21	12892-93J00-268	SHIM, TAPPET	AR	
15-22	12892-93J00-270	SHIM, TAPPET	AR	
15-23	12892-93J00-273	SHIM, TAPPET	AR	
15-24	12892-93J00-275	SHIM, TAPPET	AR	
15-25	12892-93J00-278	SHIM, TAPPET	AR	
15-26	12892-93J00-280	SHIM, TAPPET	AR	
15-27	12892-93J00-283	SHIM, TAPPET	AR	
15-28	12892-93J00-285	SHIM, TAPPET	AR	
15-29	12892-93J00-288	SHIM, TAPPET	AR	
15-30	12892-93J00-290	SHIM, TAPPET	AR	
15-31	12892-93J00-293	SHIM, TAPPET	AR	
15-32	12892-93J00-295	SHIM, TAPPET	AR	
15-33	12892-93J00-298	SHIM, TAPPET	AR	
15-34	12892-93J00-300	SHIM, TAPPET	AR	
16	12911-98J00	VALVE, INTAKE	12	
17	12915-93J10	VALVE, EXHAUST	12	
18	12921-93J10	SPRING, VALVE	24	
19	12931-78G00	RETAINER, VALVE SPRING	24	
20	12932-24400	COTTER, VALVE	48	
21	12933-69G10	SEAT, VALVE SPRING	24	
22	09289-05012	OIL SEAL (5.5X11.5X9.3)	24	

FIG.8

FIG. 8 (1-B-11) INTAKE MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	13110-98J10	MANIFOLD, INTAKE	1	
2	13119-98J00	GASKET, INTAKE MANIFOLD	2	
3	09108-08282	STUD BOLT	4	
4	09103-08437	BOLT (8X65)	4	
5	09159-08136	NUT	4	
6	09160-08161	WASHER (8.2X23X3.2)	8	

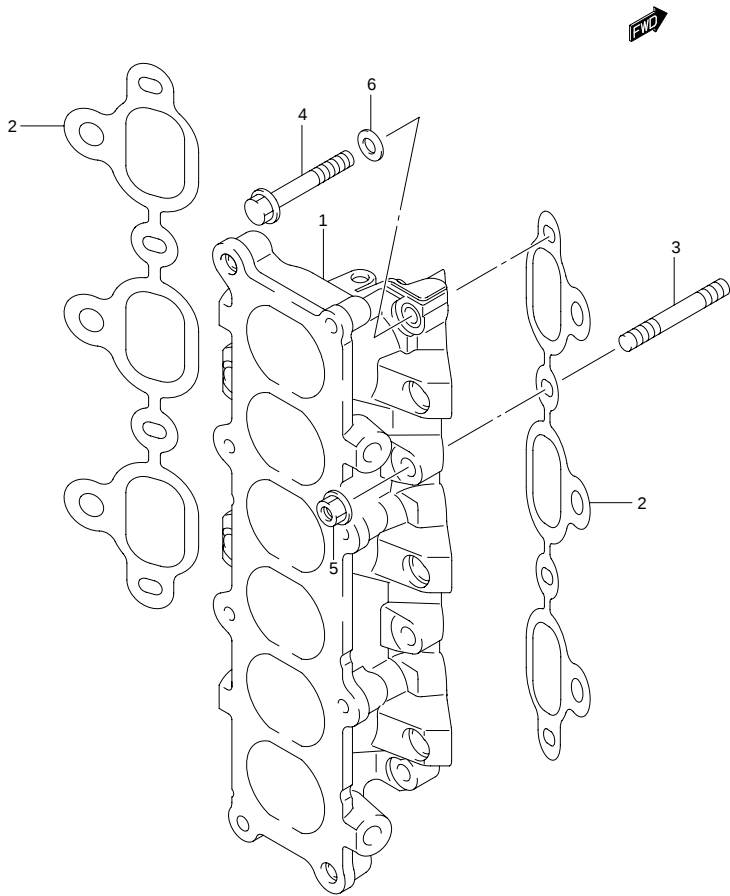


FIG.9


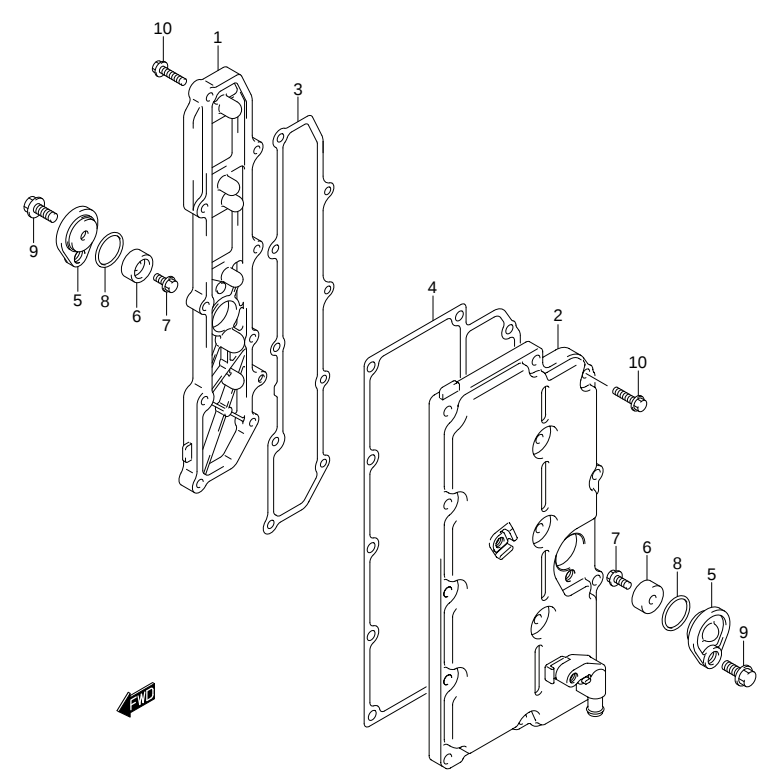


FIG. 9 (1-B-12) EXHAUST COVER

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	14141-93J01	COVER, EXHAUST STBD	1	
2	14140-98J01	COVER, EXHAUST PORT	1	
3	14151-93J00	GASKET, EXHAUST COVER STBD	1	
4	14152-93J00	GASKET, EXHAUST COVER PORT	1	
5	11261-93J00	COVER, PROTECTION ANODE	2	
6	55321-87J00	ANODE, PROTECTION	2	
7	09103-06281	BOLT (6X14)	2	
8	09280-22019	O RING (D:1.9,ID:21.8)	2	
9	01550-08207	BOLT	2	
10	01550-06257	BOLT	23	

FIG.10

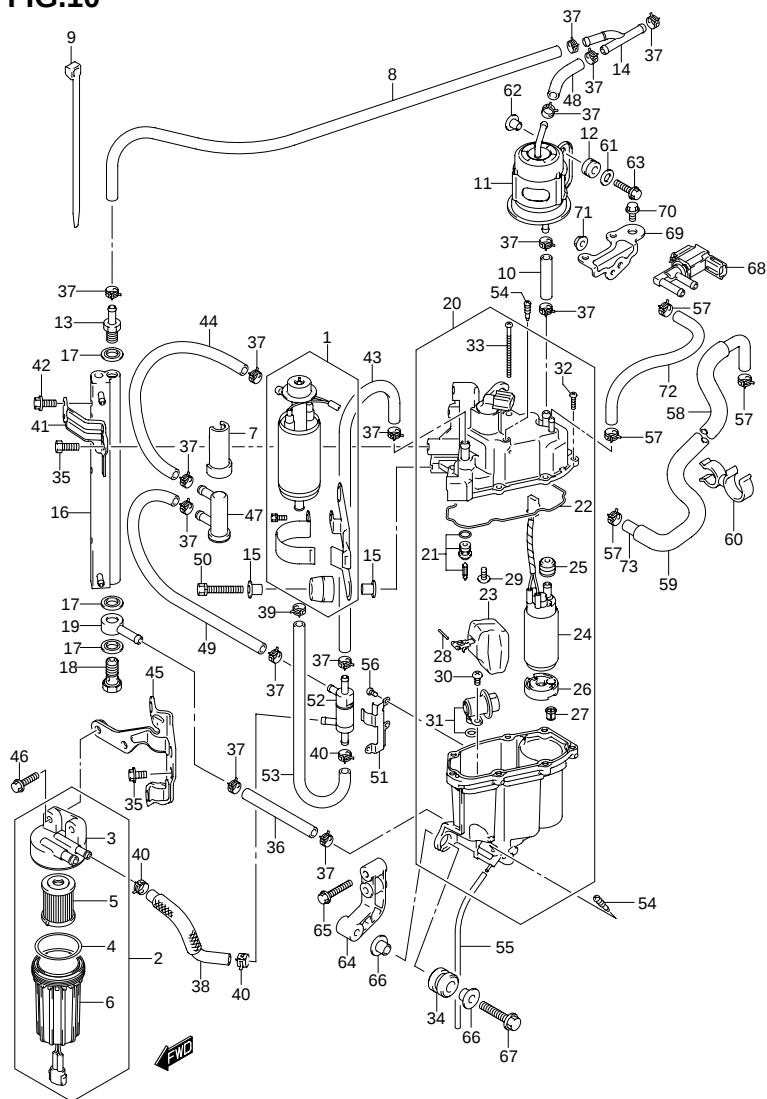

DF300A E01 012_010
FUEL PUMP / FUEL VAPOR SEPARATOR

FIG.10 (1-B-13) FUEL PUMP / FUEL VAPOR SEPARATOR (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94900	PUMP ASSY, FUEL (L)	1	
2	15410-93J10	FILTER, FUEL (L)	1	
3	15411-93J10	·CAP, FILTER	1	
4	15415-93J10	·SEAL, NO.1	1	
5	15412-93J10	·FILTER ASSY, FUEL	1	
6	15413-93J10	·CASE ASSY, FILTER	1	
7	15644-93J00	COVER, FUEL FILTER	3	
8	15633-93J20	HOSE, FUEL (H)	1	
9	15646-93J00	CLAMP, FUEL FILTER	1	
10	09343-75001-600	HOSE, FUEL	1	L:600->65
11	15440-93J00	FILTER, FUEL (EPI)	1	
12	09320-08501	CUSHION	2	
13	15773-90J00	UNION, FUEL HOSE (H)	1	
14	15830-93J00	UNION, 3 WAY	1	
15	09169-06062	WASHER	4	
16	15770-93J00	COOLER, FUEL	1	
17	09168-12013	GASKET (11.8X22X1.2)	3	
18	09360-12008	UNION	1	
19	09363-08004	UNION	1	
20	15600-98J00	SEPARATOR ASSY, FUEL VAPOR	1	
21	13370-93J00	·VALVE ASSY, NEEDLE	1	
22	15626-93J00	·GASKET, SEPARATOR	1	
23	15650-93J00	·FLOAT ASSY	1	
24	15200-98J00	·PUMP ASSY, FUEL (H)	1	
25	15647-93J00	·BUSH, FUEL PUMP	1	
26	15641-90J00	·SPACER, FUEL PUMP	1	
27	15642-90J00	·FILTER, FUEL PUMP	1	
28	15654-99E00	·PIN, FLOAT	1	
29	02142-0408B	·SCREW	1	
30	02112-05107	·SCREW	1	
31	15760-93J00	·REGULATOR, FUEL PRESSURE	1	
32	15628-99E00	·SCREW	6	
33	15627-93J00	·SCREW	1	
34	09320-12072	CUSHION	3	

FIG.10


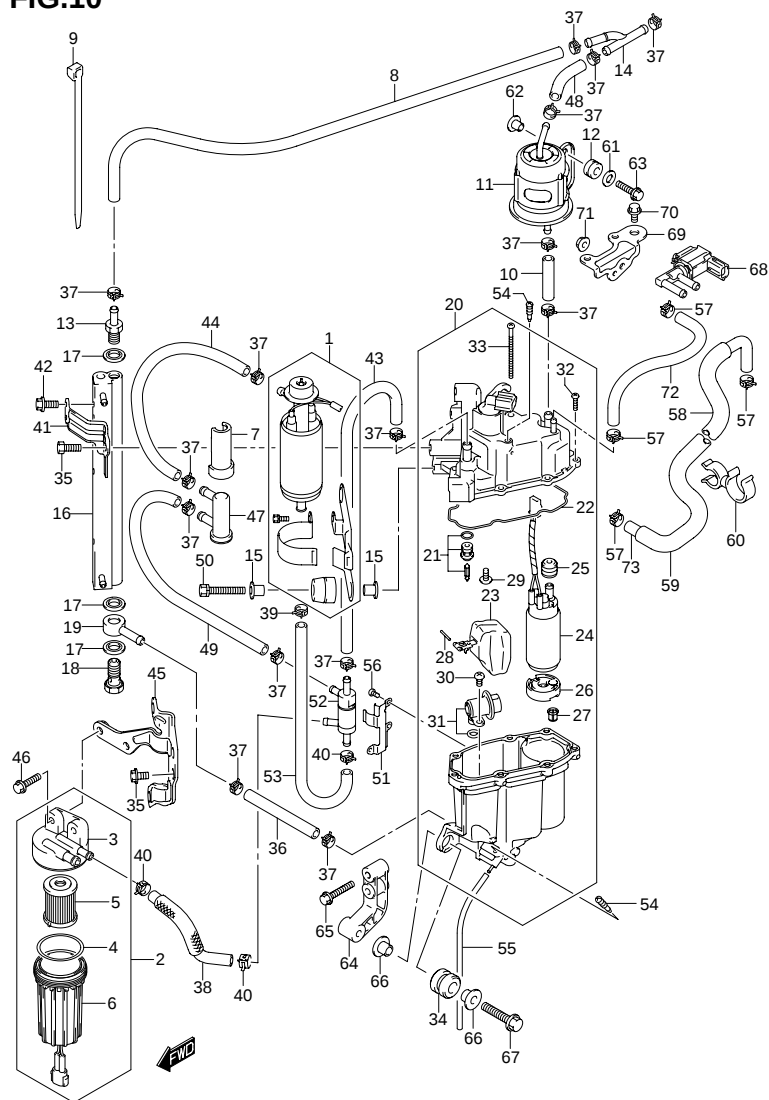


FIG.10 (1-B-14) FUEL PUMP / FUEL VAPOR SEPARATOR (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	15675-93J00	BOLT, COOLER BRACKET	3	
36	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->50
37	09401-11414	CLIP (ID:11.5)	14	
38	15636-98J20	HOSE, FUEL (L)	1	
39	15686-93J00	CLIP	1	
40	15685-93J00	CLIP	3	
41	15672-93J00	BRACKET, FUEL COOLER	1	
42	01500-06167	BOLT	4	
43	15635-93J20	HOSE, FUEL (H)	1	
44	15632-93J20	HOSE, FUEL (H)	1	
45	15673-98J00	BRACKET, FUEL FILTER	1	
46	01550-06257	BOLT	2	
47	15643-93J00	FILTER, FUEL (L)	1	
48	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
49	15634-93J20	HOSE, FUEL (H)	1	
50	01570-06357	BOLT	2	
51	15674-93J00	BRACKET, CHECK VALVE	1	
52	15645-93J00	VALVE, CHECK	1	
53	15637-93J20	HOSE, FUEL (L)	1	
54	15629-99E10	SCREW, DRAIN	2	
55	15683-87J00	HOSE, DRAIN	1	
56	02112-0406B	SCREW	3	
57	09401-08412	CLIP	4	
58	18498-87JC0	PROTECTOR, EVAP HOSE (L:450)	1	
59	18498-87JC0	PROTECTOR, EVAP HOSE (L:450)	1	L:450->300
60	09408-00105	CLAMP	1	
61	09160-06084	WASHER (6.5X18X1.6)	2	
62	09169-06062	WASHER	2	
63	01500-06257	BOLT	2	
64	15671-93J00	BRACKET, VAPOR SEPARATOR	1	
65	01550-06357	BOLT	2	
66	09169-08042	WASHER	6	
67	01550-08407	BOLT	3	
68	18117-52G10	VALVE ASSY, EVAP PURGE	1	

FIG.10

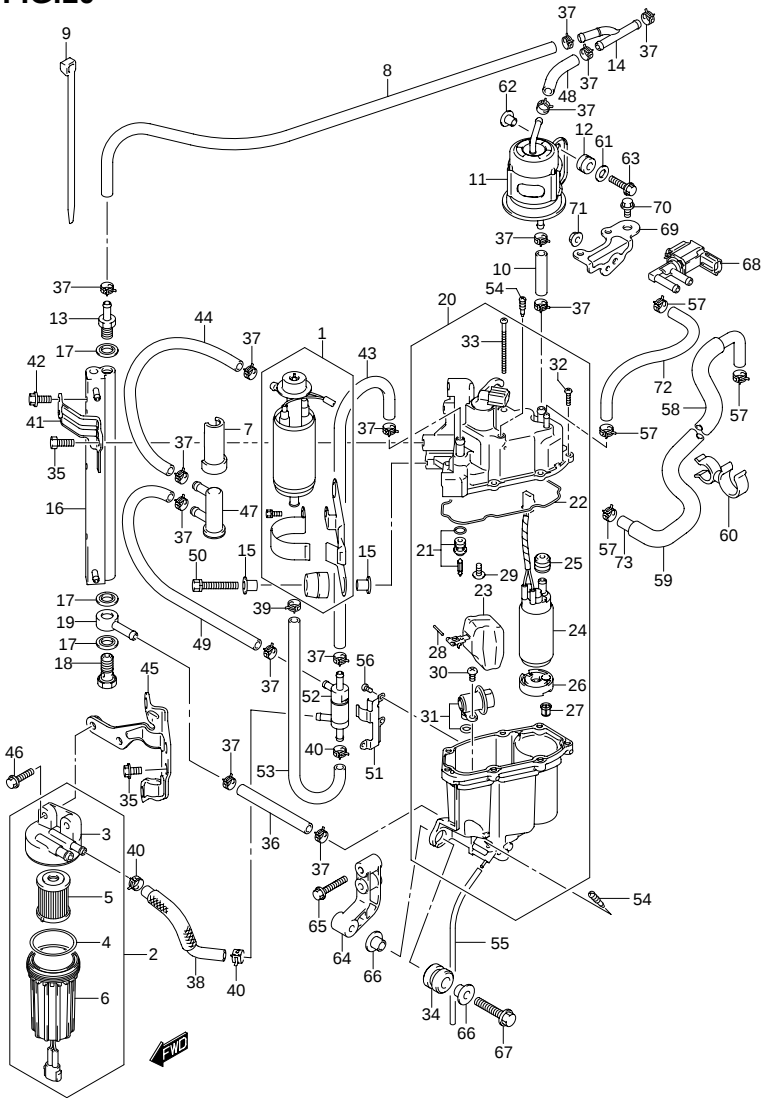


DF300A E01 012_010
FUEL PUMP / FUEL VAPOR SEPARATOR

FIG.10 (1-B-15) FUEL PUMP / FUEL VAPOR SEPARATOR (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
69	18417-93J00	BRACKET, PURGE VALVE	1	
70	01550-06127	BOLT	2	
71	08316-10067	NUT	1	
72	09352-50823-600	HOSE (5X8.2X600)	1	L:600->220
73	09352-50823-00B	HOSE (5X8.2X2000)	1	L:2000->810

FIG.11

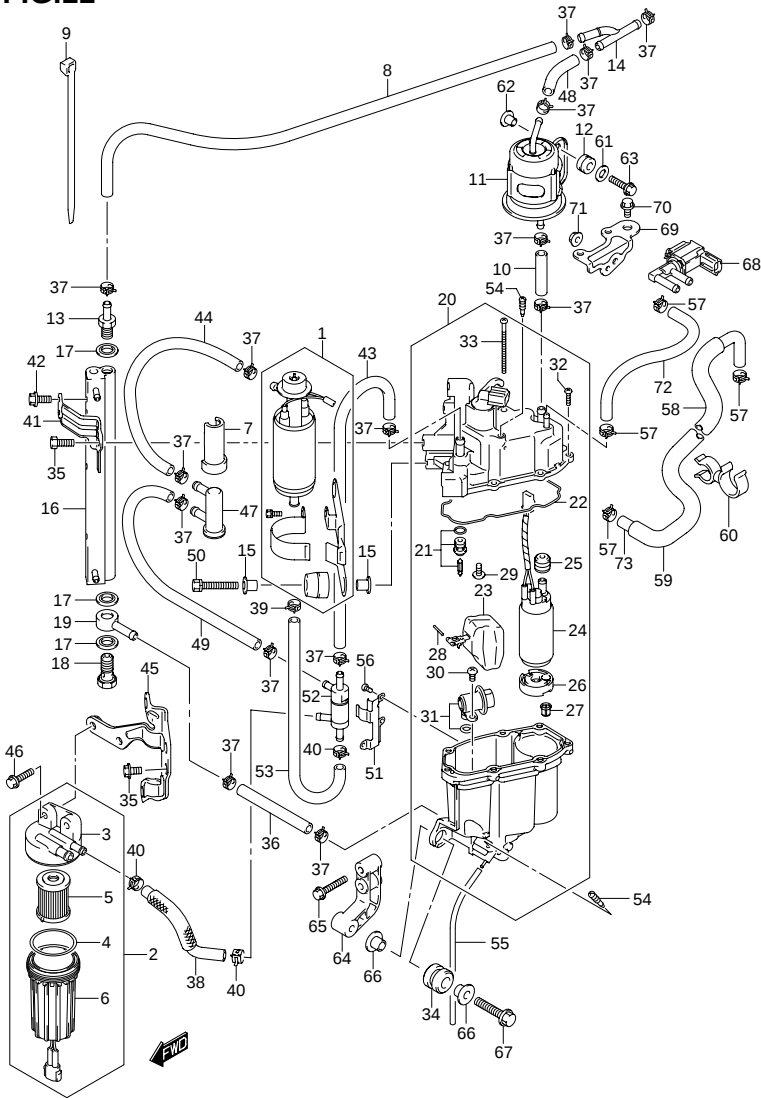

DF300A E01 012_011
FUEL PUMP / FUEL VAPOR SEPARATOR

FIG.11 (1-C-2) FUEL PUMP / FUEL VAPOR SEPARATOR (DF300A F40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94900	PUMP ASSY, FUEL (L)	1	
2	15410-93J10	FILTER, FUEL (L)	1	
3	15411-93J10	·CAP, FILTER	1	
4	15415-93J10	·SEAL, NO.1	1	
5	15412-93J10	·FILTER ASSY, FUEL	1	
6	15413-93J10	·CASE ASSY, FILTER	1	
7	15644-93J00	COVER, FUEL FILTER	3	
8	15633-93J20	HOSE, FUEL (H)	1	
9	15646-93J00	CLAMP, FUEL FILTER	1	
10	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
11	15440-93J10	FILTER, FUEL (EPI)	1	
12	09320-08501	CUSHION	2	
13	15773-90J00	UNION, FUEL HOSE (H)	1	
14	15830-93J00	UNION, 3 WAY	1	
15	09169-06062	WASHER	4	
16	15770-93J00	COOLER, FUEL	1	
17	15762-90J00	GASKET, FUEL COOLER UNION	3	
18	09360-12013	UNION	1	
19	15830-90J00	UNION, FUEL COOLER	1	
20	15600-98J10	SEPARATOR ASSY, FUEL VAPOR	1	
21	13370-93J00	·VALVE ASSY, NEEDLE	1	
22	15626-93J10	·GASKET, SEPARATOR	1	
23	15650-93J00	·FLOAT ASSY	1	
24	15200-98J10	·PUMP ASSY, FUEL (H)	1	
25	15647-93J10	·BUSH, FUEL PUMP	1	
26	15641-90J10	·SPACER, FUEL PUMP	1	
27	15642-90J00	·FILTER, FUEL PUMP	1	
28	15654-99E00	·PIN, FLOAT	1	
29	13614-93J00	·SCREW	1	
30	15631-99E10	·SCREW, REGULATOR	1	
31	15760-93J00	·REGULATOR, FUEL PRESSURE	1	
32	15628-99E00	·SCREW	6	
33	15627-93J00	·SCREW	1	
34	09320-12072	CUSHION	3	

FIG.11


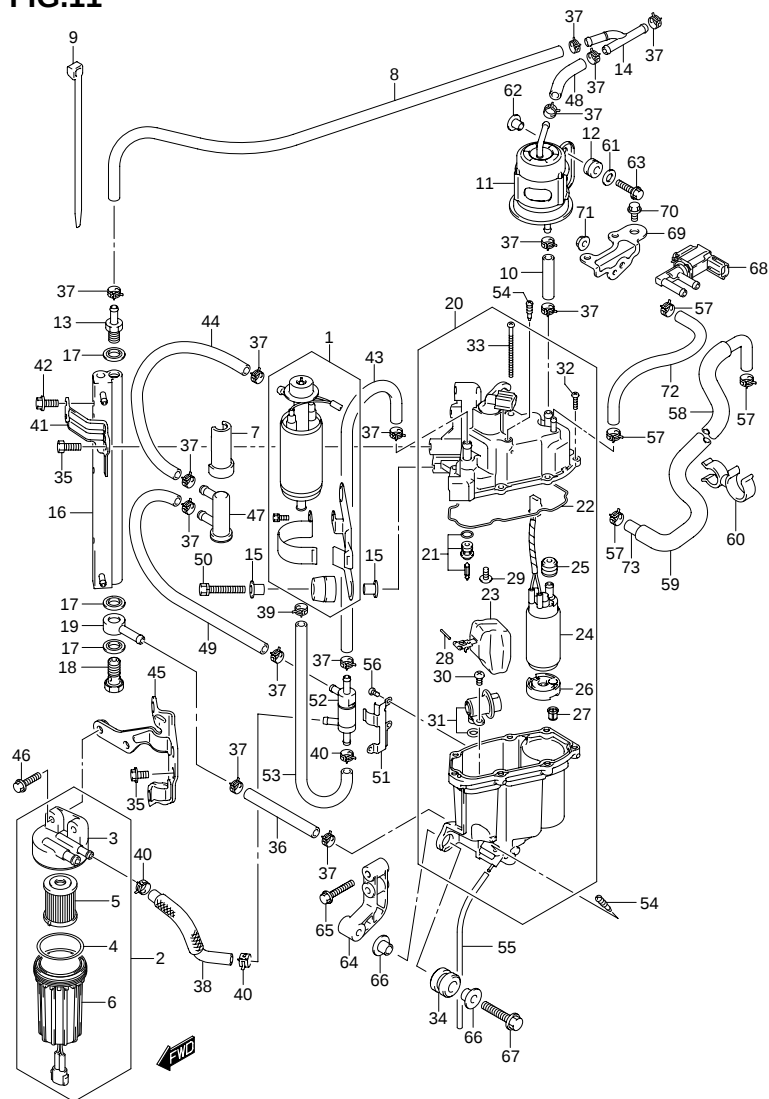


FIG.11 (1-C-3) FUEL PUMP / FUEL VAPOR SEPARATOR (DF300A F40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	15675-93J00	BOLT, COOLER BRACKET	3	
36	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->50
37	09401-11414	CLIP (ID:11.5)	14	
38	15636-98J20	HOSE, FUEL (L)	1	
39	15686-93J00	CLIP	1	
40	15685-93J00	CLIP	3	
41	15672-93J00	BRACKET, FUEL COOLER	1	
42	01500-06167	BOLT	4	
43	15635-93J20	HOSE, FUEL (H)	1	
44	15632-93J20	HOSE, FUEL (H)	1	
45	15673-98J00	BRACKET, FUEL FILTER	1	
46	01550-06257	BOLT	2	
47	15643-93J00	FILTER, FUEL (L)	1	
48	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
49	15634-93J20	HOSE, FUEL (H)	1	
50	01570-06357	BOLT	2	
51	15674-93J00	BRACKET, CHECK VALVE	1	
52	15645-93J10	VALVE, CHECK	1	
53	15637-93J20	HOSE, FUEL (L)	1	
54	15629-99E10	SCREW, DRAIN	2	
55	15683-87J00	HOSE, DRAIN	1	
56	02112-0406B	SCREW	3	
57	09401-08412	CLIP	4	
58	18498-87JC0	PROTECTOR, EVAP HOSE (L:450)	1	
59	18498-87JC0	PROTECTOR, EVAP HOSE (L:450)	1	L:450->300
60	09408-00105	CLAMP	1	
61	09160-06084	WASHER (6.5X18X1.6)	2	
62	09169-06062	WASHER	2	
63	01500-06257	BOLT	2	
64	15671-93J00	BRACKET, VAPOR SEPARATOR	1	
65	01550-06357	BOLT	2	
66	09169-08042	WASHER	6	
67	01550-08407	BOLT	3	
68	18117-52G10	VALVE ASSY, EVAP PURGE	1	

FIG.11

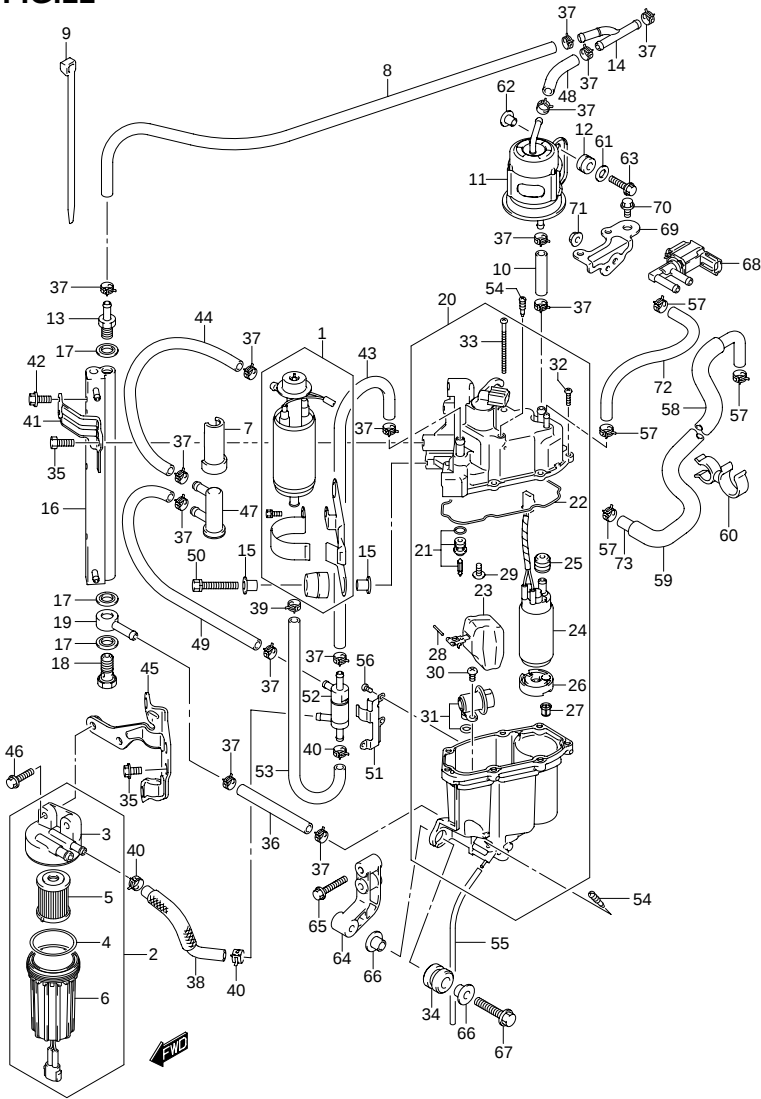


DF300A E01 012_011
FUEL PUMP / FUEL VAPOR SEPARATOR

FIG.11 (1-C-4) FUEL PUMP / FUEL VAPOR SEPARATOR (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
69	18417-93J00	BRACKET, PURGE VALVE	1	
70	01550-06127	BOLT	2	
71	08316-10067	NUT	1	
72	09352-50823-600	HOSE (5X8.2X600)	1	L:600->220
73	09352-50823-00B	HOSE (5X8.2X2000)	1	L:2000->810

DF300A E01 012

FIG.12

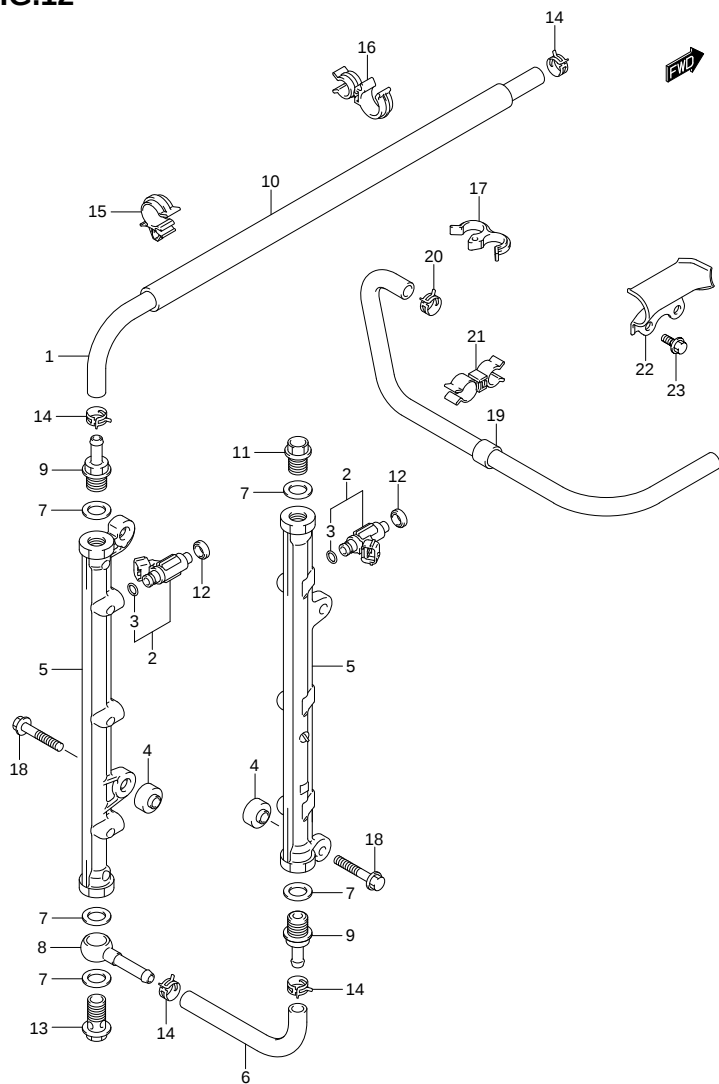

DF300A E01 012_012
FUEL INJECTOR

FIG.12 (1-C-5) FUEL INJECTOR (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-93J01	HOSE, FUEL (3WAY TO DLVY PIPE)	1	
2	15710-96J00	INJECTOR ASSY, FUEL	6	
3	15717-16G00	O RING	6	
4	15735-58B00	INSULATOR, DELIVERY PIPE	4	
5	15751-93J00	PIPE, DELIVERY	2	
6	15756-93J01	HOSE, FUEL (DLVY TO DLVY)	1	
7	15762-93J00	GASKET, DELIVERY PIPE	5	
8	15830-77EA0	UNION, DELIVERY PIPE	1	
9	15831-93J00	UNION, DELIVERY PIPE	2	
10	18498-93J00	PROTECTOR, FUEL HOSE (L:340)	1	
11	09247-14041	PLUG (14X14)	1	
12	09320-08062	CUSHION	6	
13	09360-14009	UNION	1	
14	09401-11425	CLIP	4	
15	09403-16307	CLAMP	1	
16	09408-00105	CLAMP	1	
17	09408-00155	CLAMP	1	
18	01550-08407	BOLT	4	
19	15680-93J21	HOSE, FUEL (PUMP TO FILTER)	1	
20	09401-13423	CLIP	1	
21	09408-00135	CLIP	2	
22	15684-98J00	GUIDE, FUEL HOSE	1	
23	01550-06107	BOLT	2	

DF300A E01 012

FIG.13

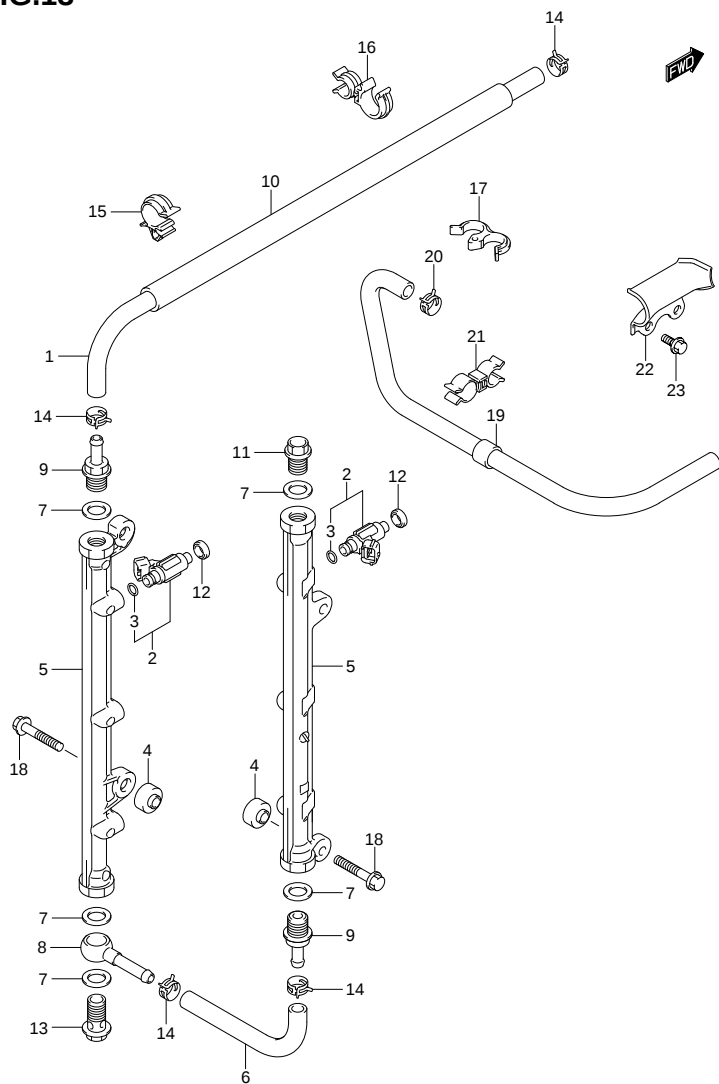


FIG.13 (1-C-6) FUEL INJECTOR (DF300A F40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-93J01	HOSE, FUEL (3WAY TO DLVY PIPE)	1	
2	15710-96J00	INJECTOR ASSY, FUEL	6	
3	15717-16G00	O RING	6	
4	15735-58B00	INSULATOR, DELIVERY PIPE	4	
5	15751-93J00	PIPE, DELIVERY	2	
6	15756-93J01	HOSE, FUEL (DLVY TO DLVY)	1	
7	15762-93J10	GASKET, DELIVERY PIPE	5	
8	15832-93J00	UNION, DELIVERY PIPE	1	
9	15831-93J00	UNION, DELIVERY PIPE	2	
10	18498-93J00	PROTECTOR, FUEL HOSE (L:340)	1	
11	09247-14042	PLUG (14X14)	1	
12	09320-08062	CUSHION	6	
13	09360-14014	UNION	1	
14	09401-11425	CLIP	4	
15	09403-16307	CLAMP	1	
16	09408-00105	CLAMP	1	
17	09408-00155	CLAMP	1	
18	01550-08407	BOLT	4	
19	15680-93J21	HOSE, FUEL (PUMP TO FILTER)	1	
20	09401-13423	CLIP	1	
21	09408-00135	CLIP	2	
22	15684-98J00	GUIDE, FUEL HOSE	1	
23	01550-06107	BOLT	2	

FIG.14

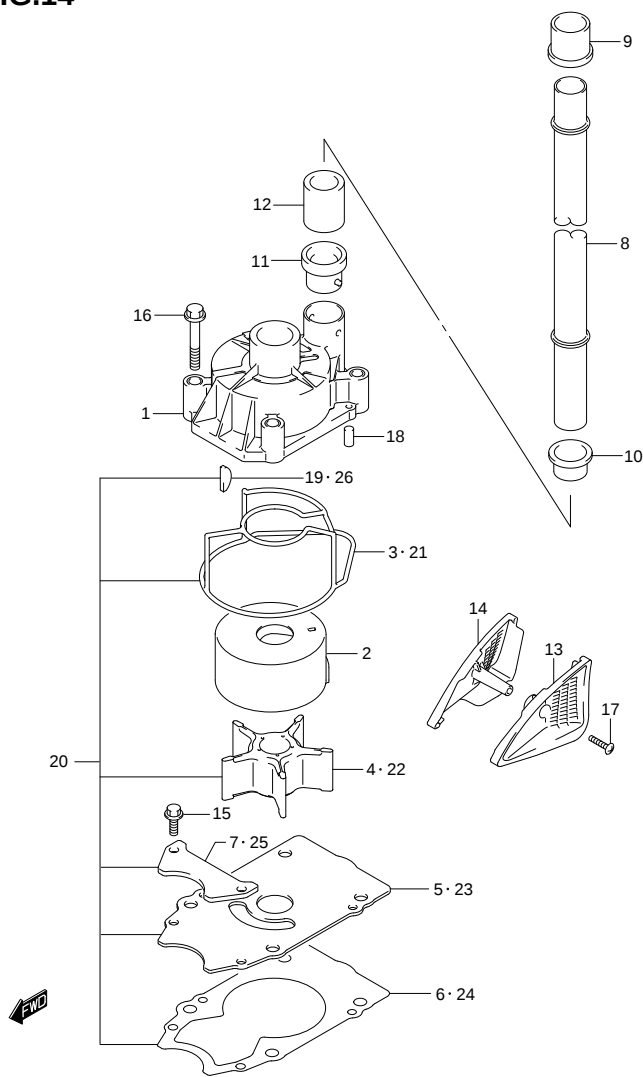


FIG.14 (1-C-7) WATER PUMP (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	17410-93J00	CASE, WATER PUMP	1	
2	17413-93J02	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98J01	PANEL, PUMP CASE UNDER	1	
6	17472-98J00	GASKET, PUMP CASE PANEL	1	
7	17473-98J00	PANEL, WATER PUMP NO.2	1	
8-1	17561-93J03	TUBE, WATER (UL)	1	W/TRANSOM(X)
8-2	17561-93J13	TUBE, WATER (XX)	1	W/TRANSOM(XX)
9	17562-93J00	BUSH, WATER TUBE UPPER	1	
10	17563-93J00	BUSH, WATER TUBE LOWER	1	
11	17564-93J00	BUSH, WATER PUMP CASE	1	
12	17612-93J00	SPACER, WATER TUBE	1	
13	17631-93L00	FILTER, WATER PORT SIDE	1	
14	17632-93L00	FILTER, WATER STBD SIDE	1	
15	29116-93J00	BOLT, PUMP CASE PANEL	2	
16	09116-08131	BOLT (8X45)	4	
17	09132-04034	SCREW (4X18)	1	
18	09202-06031	PIN (6X12)	2	
19	09420-05009	KEY	1	
20	17400-98J01	WATER PUMP REPAIR KIT	1	OPT
21	17416-93J00	·SEALING, CASE	1	OPT
22	17461-93J00	·IMPELLER, WATER PUMP	1	OPT
23	17471-98J01	·PANEL, PUMP CASE UNDER	1	OPT
24	17472-98J00	·GASKET, PUMP CASE PANEL	1	OPT
25	17473-98J00	·PANEL, WATER PUMP NO.2	1	OPT
26	09420-05009	·KEY	1	OPT

FIG.15

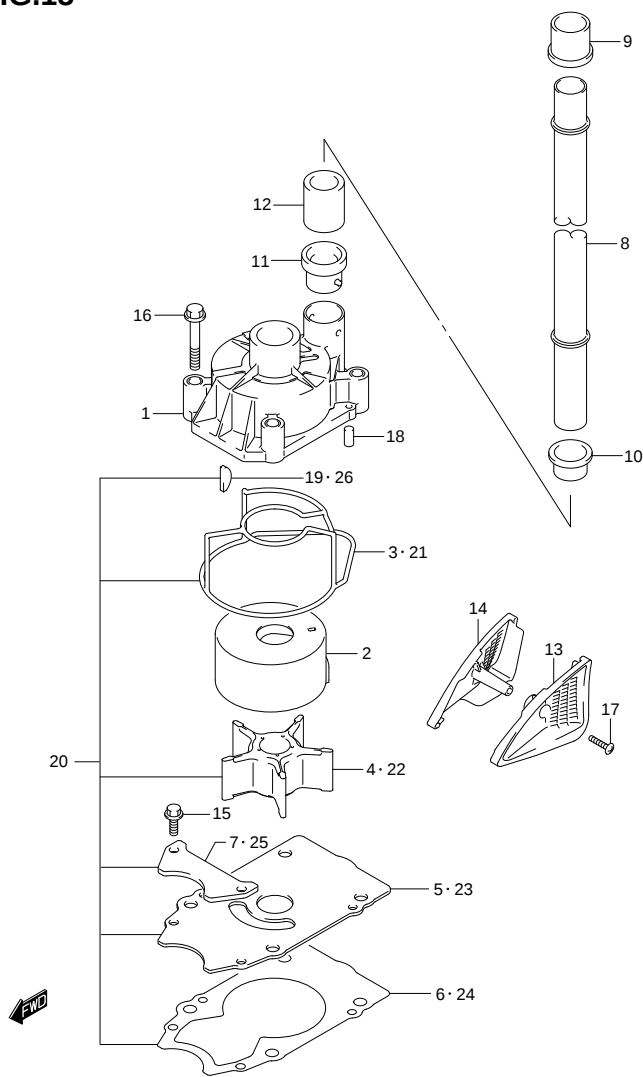


FIG.15 (1-C-8) WATER PUMP (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	17410-93J00	CASE, WATER PUMP	1	
2	17413-93J12	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98J11	PANEL, PUMP CASE UNDER	1	
6	17472-98J00	GASKET, PUMP CASE PANEL	1	
7	17473-98J00	PANEL, WATER PUMP NO.2	1	
8-1	17561-93J03	TUBE, WATER (UL)	1	W/TRANSOM(X)
8-2	17561-93J13	TUBE, WATER (XX)	1	W/TRANSOM(XX)
9	17562-93J00	BUSH, WATER TUBE UPPER	1	
10	17563-93J00	BUSH, WATER TUBE LOWER	1	
11	17564-93J00	BUSH, WATER PUMP CASE	1	
12	17612-93J00	SPACER, WATER TUBE	1	
13	17631-93L00	FILTER, WATER PORT SIDE	1	
14	17632-93L00	FILTER, WATER STBD SIDE	1	
15	29116-93J00	BOLT, PUMP CASE PANEL	2	
16	09116-08131	BOLT (8X45)	4	
17	09132-04034	SCREW (4X18)	1	
18	09202-06031	PIN (6X12)	2	
19	09420-05009	KEY	1	
20	17400-98J01	WATER PUMP REPAIR KIT	1	OPT
21	17416-93J00	·SEALING, CASE	1	OPT
22	17461-93J00	·IMPELLER, WATER PUMP	1	OPT
23	17471-98J01	·PANEL, PUMP CASE UNDER	1	OPT
24	17472-98J00	·GASKET, PUMP CASE PANEL	1	OPT
25	17473-98J00	·PANEL, WATER PUMP NO.2	1	OPT
26	09420-05009	·KEY	1	OPT

FIG.16

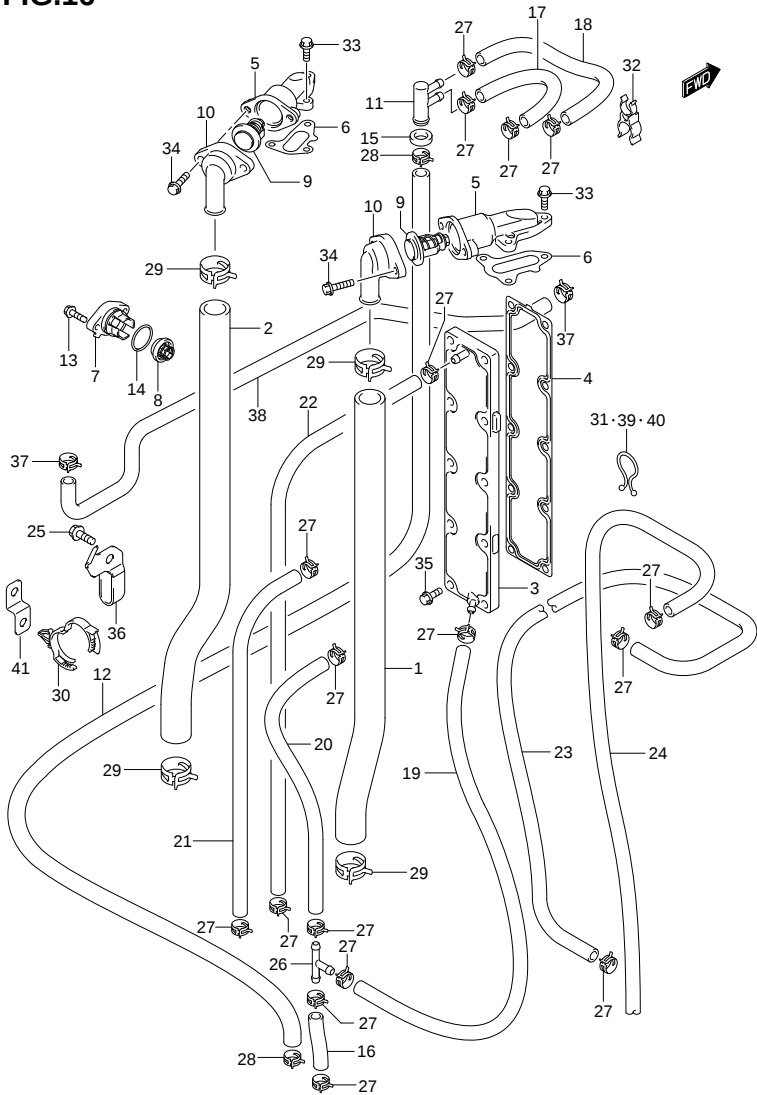


FIG. 16 (1-C-9) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	11196-93J00	HOSE, WATER RETURN STBD	1	
2	11197-93J00	HOSE, WATER RETURN PORT	1	
3	11270-93J00	PLATE, CYL BLOCK WTR JKT	1	
4	11272-93J00	GASKET, CYL BLOCK PLATE	1	
5	17581-93J00	PIPE, OUTLET	2	
6	17582-93J00	GASKET, OUTLET PIPE	2	
7	17611-90J00-0EP	COVER, WATER PRESS VALVE (BLACK)	1	
8	17660-99E01	VALVE, WATER PRESSURE	1	
9-1	17670-90J20	THERMOSTAT (50°C)	2	
9-2	17670-90J10	THERMOSTAT (71°C)	1	OPT
10	17681-93J00	COVER, THERMOSTAT	2	
11	17711-90J00	3 WAY, WATER HOSE	1	
12	17712-93J00	HOSE (3 WAY TO E/H COV)	1	
13	09116-06121	BOLT (6X25)	2	
14	09280-26006	O RING (D:3.1,ID:26.4)	1	
15	09320-12014	CUSHION	1	
16	09352-50903-600	HOSE (5X9X600)	1	L:600->60
17	09352-50903-600	HOSE (5X9X600)	1	L:600->120
18	09352-50903-600	HOSE (5X9X600)	1	L:600->190
19	09352-50903-600	HOSE (5X9X600)	1	L:600->300
20	09352-50903-600	HOSE (5X9X600)	1	L:600->330
21	09352-50903-600	HOSE (5X9X600)	1	
22	09352-50903-600	HOSE (5X9X600)	1	
23	09352-50903-00B	HOSE (5X9X2000)	1	L:2000->850
24	09352-50903-00B	HOSE (5X9X2000)	1	L:2000->1010
25	01550-08127	BOLT	1	
26	09367-06002	JOINT, 3 WAY	1	
27	09401-08413	CLIP	18	
28	09401-14409	CLIP	2	
29	09401-25406	CLIP	4	
30	09403-25304	CLAMP	1	
31	09408-00008	CLIP (ID:20)	1	
32	09408-00189	CLAMP	1	

FIG.16


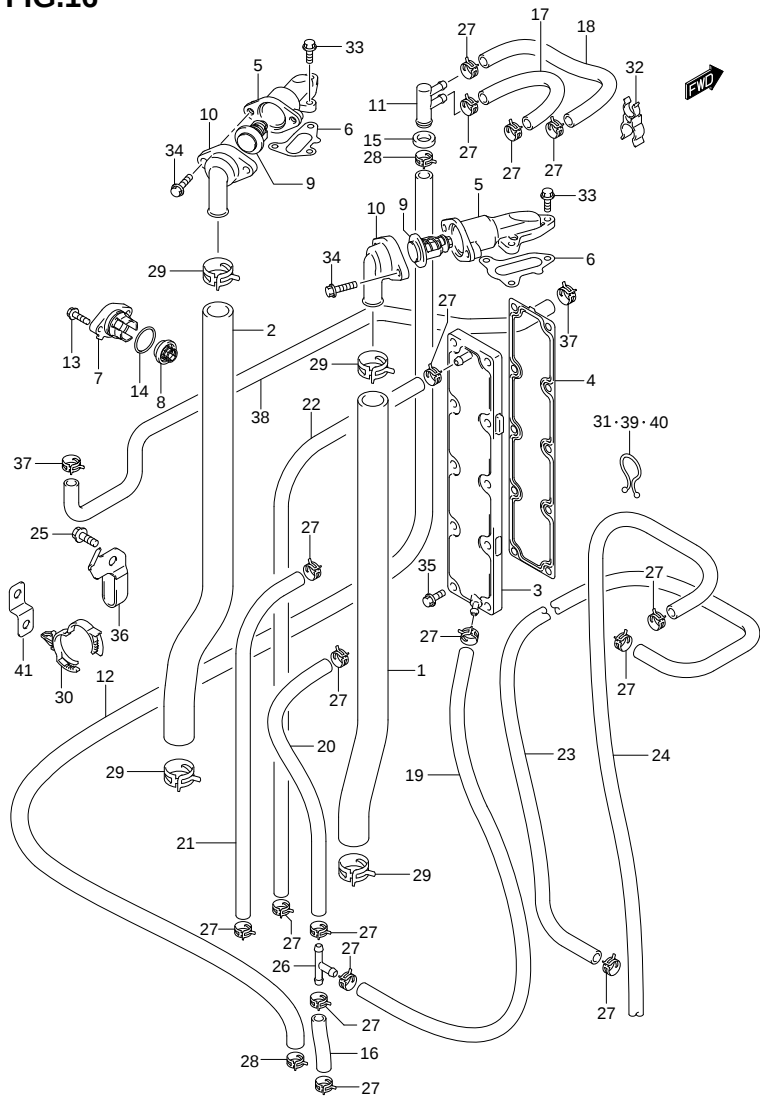


FIG.16 (1-C-10) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
33	01550-06207	BOLT	6	
34	01550-06207	BOLT	4	
35	01550-06257	BOLT	10	
36	17713-98J00	HOLDER, WATER HOSE	1	
37	09401-15414	CLIP	2	
38	17915-98J01	HOSE, WATER FLUSH	1	
39	09408-00024	CLIP (ID:23)	1	
40	09408-00021	CLIP (ID:16)	1	
41	36617-93J10	BRACKET, HOSE CLAMP	1	

FIG.17

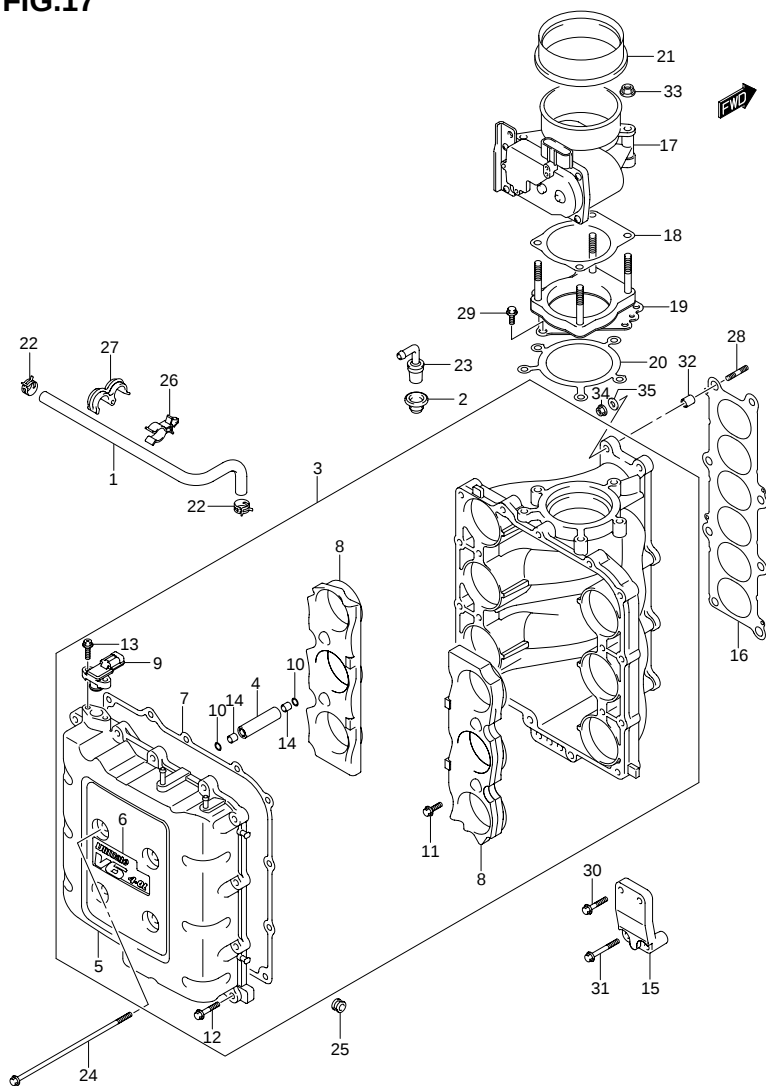

DF300A E01 012_017
THROTTLE BODY

FIG.17 (1-C-11) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11193-98J00	HOSE, PCV	1	
2	11198-58B00	SEAL, PCV VALVE	1	
3	13100-98J01	COLLECTOR ASSY	1	
4	13137-98J00	·SPACER, COLLECTOR	4	
5	13140-98J01	·COVER, COLLECTOR	1	
6	61436-98J00	··MARK, EMBLEM V6 (4.0L)	1	
7	13147-98J00	·GASKET, COLLECTOR COVER	1	
8	13180-98J00	·FUNNEL, COLLECTOR	2	
9	18590-68H00	·SENSOR, MAP	1	
10	09280-10009	·O RING (D:1.3,ID:9.8)	8	
11	01550-08167	·BOLT	4	
12	01550-08357	·BOLT	11	
13	02162-05207	·SCREW	2	
14	04211-11129	·PIN	8	
15	13134-98J00	BRACKET, COLLECTOR	1	
16	13139-98J00	GASKET, COLLECTOR	1	
17	13310-98J00	BODY ASSY, THROTTLE	1	
18	13343-98J10	GASKET, THROTTLE BODY	1	
19	13315-98J00	DAMPER, THROTTLE BODY	1	
20	13421-98J00	GASKET, THROTTLE BODY	1	
21	13813-98J00	GROMMET, THROTTLE BODY	1	
22	09401-13423	CLIP	2	
23	18118-93J00	VALVE, PCV	1	
24	09103-08370	BOLT (8X250)	6	
25	09320-08076	GROMMET	4	
26	09403-13310	CLAMP	1	
27	09408-00155	CLAMP	1	
28	01421-08357	BOLT	2	
29	01550-08167	BOLT	5	
30	01550-08357	BOLT	2	
31	01550-08607	BOLT	2	
32	04211-11129	PIN	2	
33	09159-08136	NUT	4	
34	08316-10087	NUT	2	
35	09160-08161	WASHER (8.2X23X3.2)	2	

FIG.18

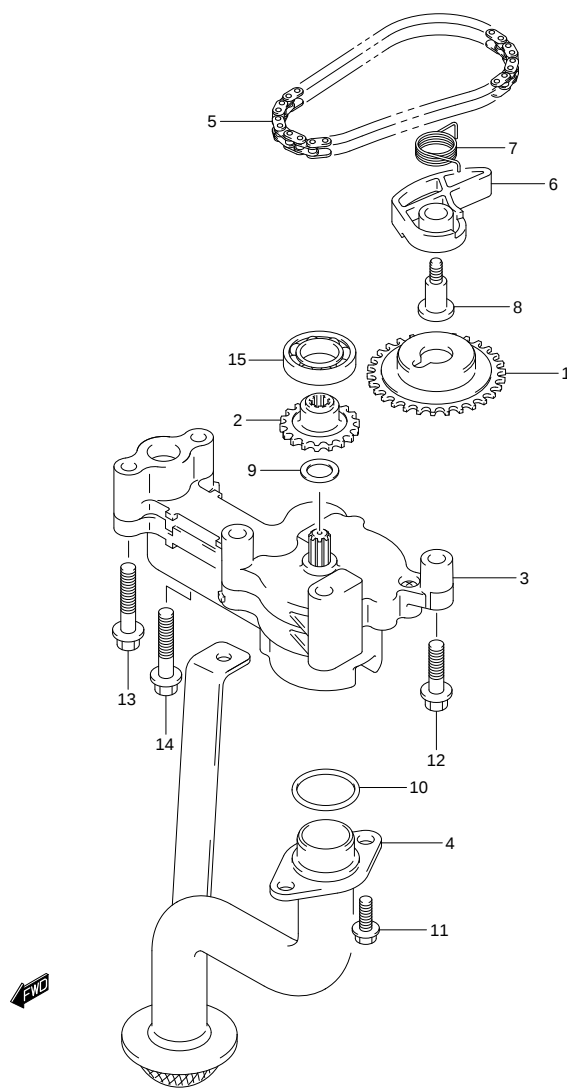


FIG.18 (1-C-12) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	12632-93J11	SPROCKET, OIL PUMP DRIVE	1	
2	16113-93J10	SPROCKET, OIL PUMP DRIVEN	1	
3	16400-93J02	PUMP ASSY, OIL	1	
4	16520-93J00	STRAINER, OIL PUMP	1	
5	16760-93J00	CHAIN, OIL PUMP DRIVE	1	
6	16781-93J00	TENSIONER, OIL PUMP CHAIN	1	
7	16782-93J00	SPRING, OIL PUMP TENSIONER	1	
8	16783-93J01	BOLT, OIL PUMP TENSIONER	1	
9	09181-12158	SHIM (12X20X0.5)	1	
10	09280-22020	O RING (D:2.4,ID:21.8)	2	
11	01550-0616A	BOLT	3	
12	01550-0845A	BOLT	1	
13	01550-0865A	BOLT	3	
14	01550-0885A	BOLT	1	
15	08110-60020	BEARING	1	

FIG.19

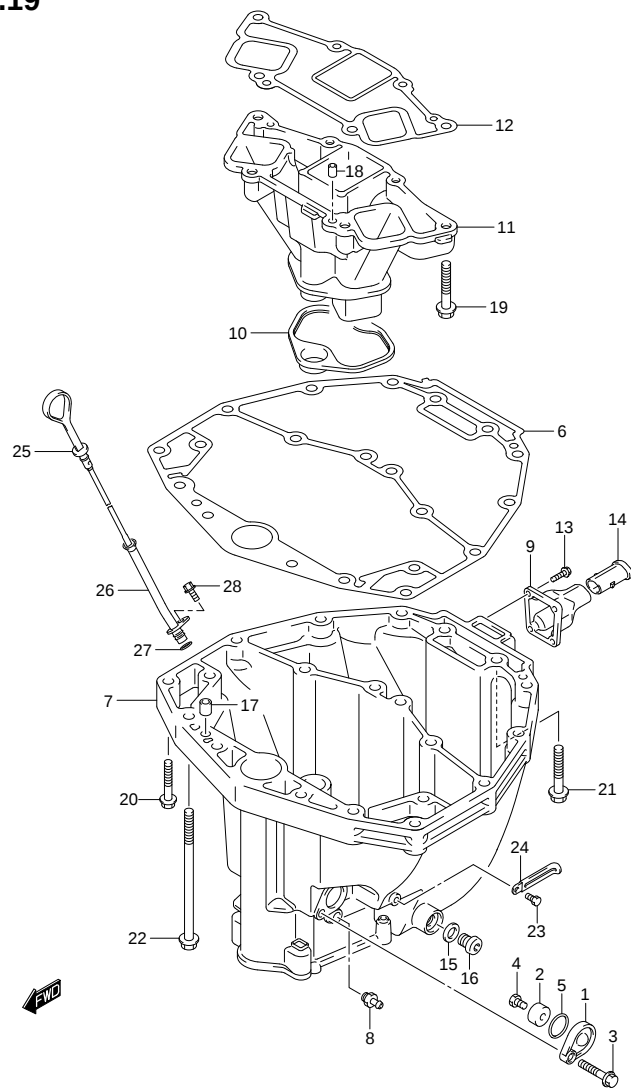


FIG.19 (1-C-13) OIL PAN

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	11261-93J00-0EP	COVER, PROTECTION ANODE (BLACK)	1	
2-1	55321-87J00	ANODE, PROTECTION	1	OPT
2-2	55321-87J10	ANODE (MAGNESIUM)	1	
3	29103-93J30	BOLT, ANODE COVER	1	
4	09103-06281	BOLT (6X14)	1	
5	09280-22019	O RING (D:1.9,ID:21.8)	1	
6	11489-93J00	GASKET, OIL PAN	1	
7	11501-93J02-0EP	PAN, OIL (BLACK)	1	
8	11591-93J10	UNION, OIL PAN	1	
9	11541-93J00-0EP	PIPE, EXHAUST (BLACK)	1	
10	14154-93J01	SEAL, EXHAUST TUBE	1	
11	14211-98J00	TUBE, EXHAUST	1	
12	14212-93J00	GASKET, EXHAUST TUBE	1	
13	29116-93J00	BOLT, EXHAUST PIPE	4	
14	11435-93J00	PIPE, EXHAUST RELEASE	1	
15	09168-12012	GASKET (12.5X20X2.5)	1	
16	09248-12009	PLUG (12X18.65)	1	
17	09202-08006	PIN	2	
18	09202-08006	PIN	2	
19	01550-1050A	BOLT	4	
20	09116-08128	BOLT (8X40)	10	
21	09116-10175	BOLT (10X50)	2	
22	09116-10146	BOLT (10X195)	4	
23	29103-93J00	BOLT, SPEEDOMETER HOSE CLAMP	1	
24	29404-93J10	CLAMP, SPEEDOMETER HOSE	1	
25	16910-93J00	GAUGE, OIL LEVEL	1	
26	16930-93J00	GUIDE, OIL LEVEL GAUGE	1	
27	09280-09008	O RING (D:2.1,ID:8.8)	1	
28	01550-06127	BOLT	1	

FIG.20

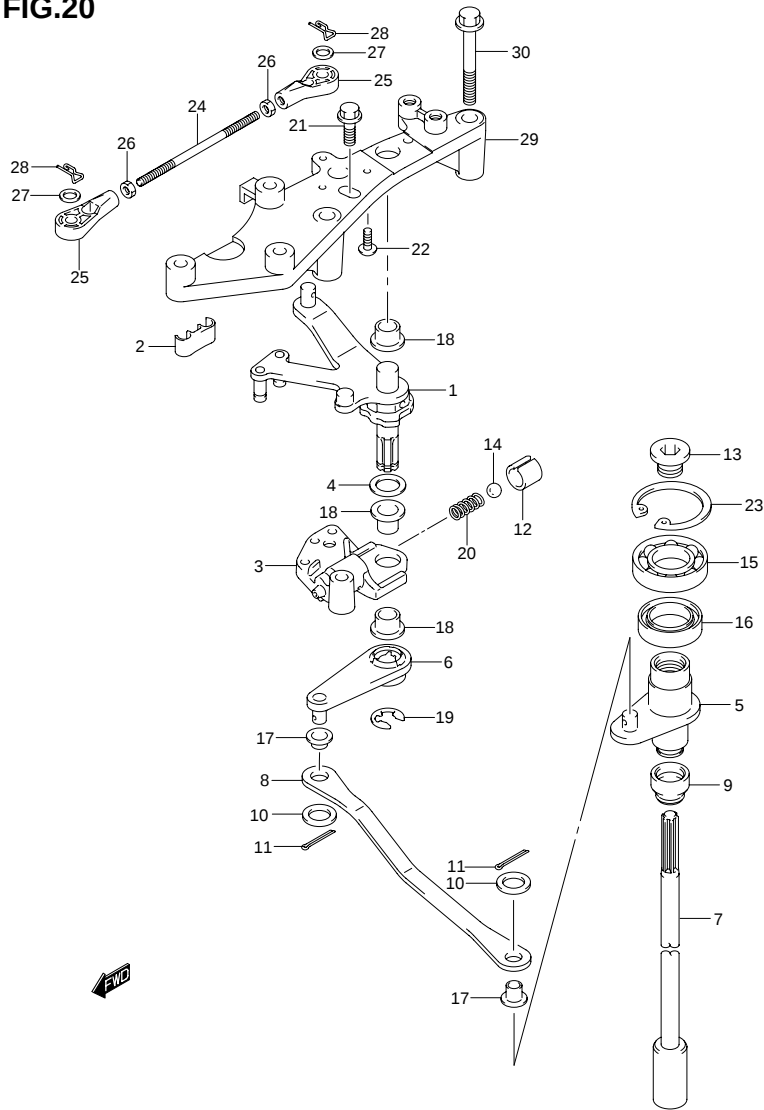


FIG. 20 (1-C-14) CLUTCH SHAFT

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	21110-98J00	LEVER, CLUTCH	1	
2	21131-93J00	BUSH, CLUTCH LEVER	1	
3	21151-93J00	HOLDER, CLUTCH LEVER	1	
4	09160-10148	WASHER (10X20X3)	1	
5	21210-98J00	SHAFT, CLUTCH	1	
6	21230-98J00	ARM, CLUTCH SHAFT	1	
7	23111-93J00	ROD, CLUTCH (UL)	1	
8	23115-98J00	LINK, CLUTCH LEVER	1	
9	25223-94400	COVER, CLUTCH ROD	1	
10	09160-06094	WASHER (6.5X15X1.5)	2	
11	09204-01006	PIN	2	
12	09205-10006	SPRING PIN (10.2X10)	1	
13	09248-12011	PLUG (12X9)	1	
14	09260-10005	BALL	1	
15	09262-17019	BEARING (17X35X8)	1	
16	09289-18001	OIL SEAL (18X30X8)	1	
17	09306-06005	BUSH	2	
18	09306-10001	BUSH	3	
19	09383-08004	E RING	1	
20	09440-07051	SPRING	1	
21	01550-06207	BOLT	1	
22	02142-05107	SCREW	2	
23	08331-41359	CIRCLIP	1	
24	21241-98J00	LINK, CLUTCH LEVER NO.2	1	
25	67467-89J01	CONNECTOR, REMOCON CABLE	2	
26	67471-99E00	NUT, REMOCON CABLE	2	
27	09160-06055	WASHER (7X12X1)	2	
28	09385-06012	CLIP	2	
29	19115-98J10	HOLDER, CLUTCH LEVER	1	
30	01550-08557	BOLT	2	

FIG. 21 (1-D-2) CLUTCH ROD

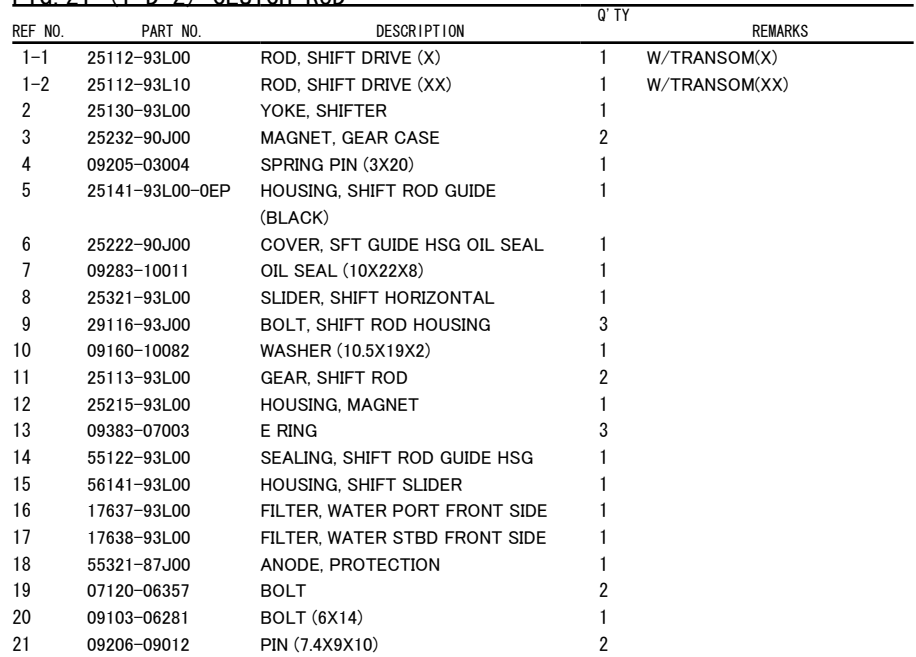


FIG.22

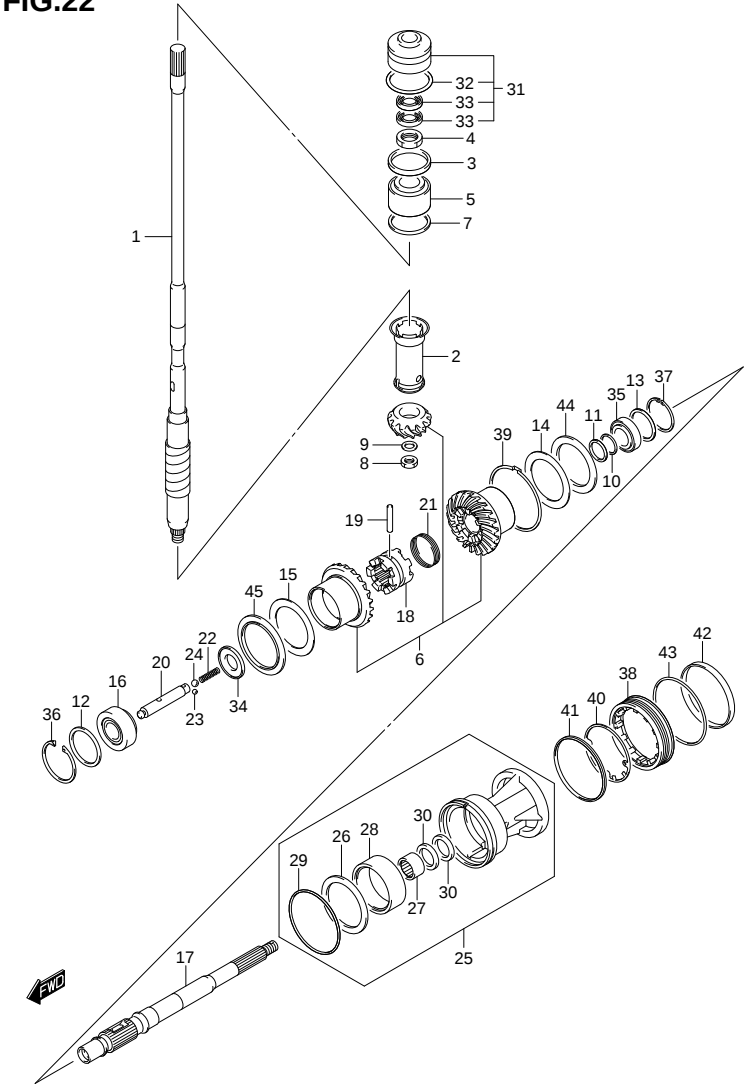


FIG. 22 (1-D-3) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1-1	57110-93L10	SHAFT, DRIVE (X)	1	W/TRANSOM(X)
1-2	57110-93L20	SHAFT, DRIVE (XX)	1	W/TRANSOM(XX)
2	57133-93L00	COLLAR, DRIVE SHAFT	1	
3	57134-93J00	SPACER, DRIVE SHAFT BEARING	1	
4	09159-28003	NUT	1	
5	09269-32002	BEARING (32X66X49)	1	
6	57300-93L00	SET GEAR	1	
7-1	09181-60004	SHIM (60X66X0.45)	1	
7-2	09181-60005	SHIM (60X66X0.5)	1	
7-3	09181-60006	SHIM (60X66X0.55)	1	
7-4	09181-60007	SHIM (60X66X0.6)	1	
7-5	09181-60008	SHIM (60X66X0.65)	1	
7-6	09181-60009	SHIM (60X66X0.7)	1	
7-7	09181-60010	SHIM (60X66X0.75)	1	
7-8	09181-60011	SHIM (60X66X0.8)	1	
7-9	09181-60012	SHIM (60X66X0.85)	1	
7-10	09181-60013	SHIM (60X66X0.9)	1	
8	09140-16026	NUT	1	
9	08221-16256	WASHER	1	
10	09180-32006	SPACER (32.4X40X3)	1	REV GEAR
11-1	09181-32035	SHIM (32X37X0.5)	1	REV GEAR
11-2	09181-32036	SHIM (32X37X0.55)	1	REV GEAR
11-3	09181-32037	SHIM (32X37X0.6)	1	REV GEAR
11-4	09181-32038	SHIM (32X37X0.65)	1	REV GEAR
11-5	09181-32039	SHIM (32X37X0.7)	1	REV GEAR
11-6	09181-32040	SHIM (32X37X0.75)	1	REV GEAR
11-7	09181-32041	SHIM (32X37X0.8)	1	REV GEAR
11-8	09181-32042	SHIM (32X37X0.85)	1	REV GEAR
11-9	09181-32043	SHIM (32X37X0.9)	1	REV GEAR
11-10	09181-32044	SHIM (32X37X0.95)	1	REV GEAR
12	09160-60012	WASHER (60X72X3)	1	FWD GEAR
13	09160-50006	WASHER (50X58X3)	1	REV GEAR
14-1	09181-78001	SHIM (78.5X105X0.5)	1	REV GEAR
14-2	09181-78002	SHIM (78.5X105X0.55)	1	REV GEAR

FIG.22

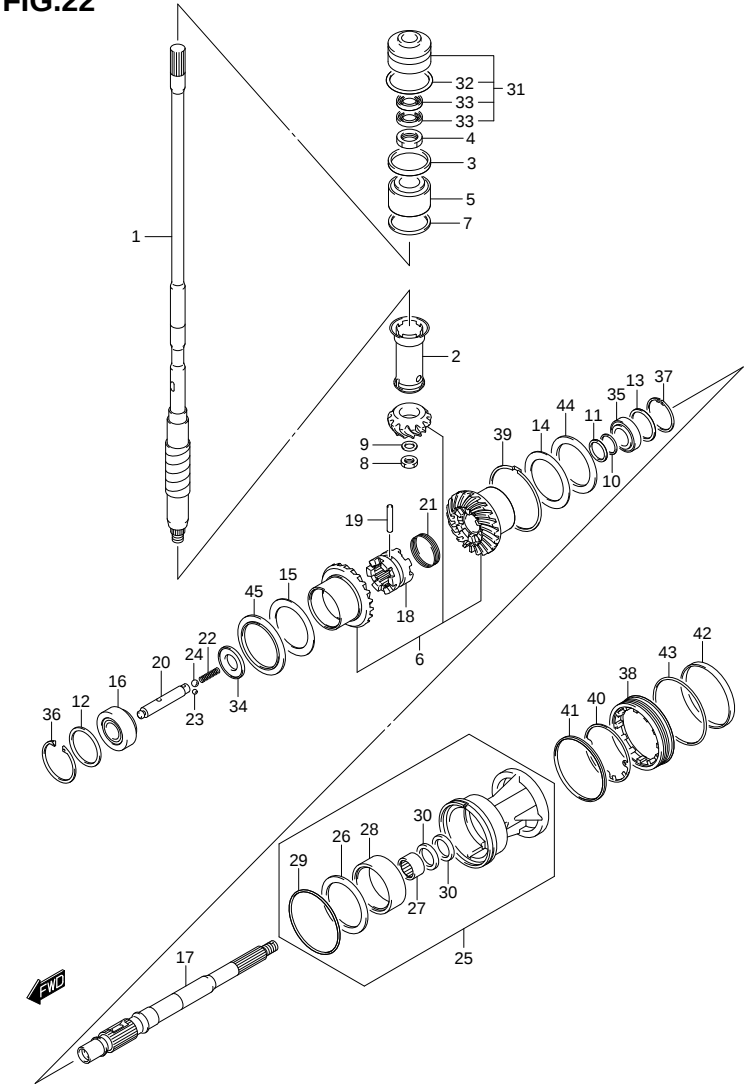


FIG. 22 (1-D-4) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14-3	09181-78003	SHIM (78.5X105X0.6)	1	REV GEAR
14-4	09181-78004	SHIM (78.5X105X0.65)	1	REV GEAR
14-5	09181-78005	SHIM (78.5X105X0.7)	1	REV GEAR
14-6	09181-78006	SHIM (78.5X105X0.75)	1	REV GEAR
14-7	09181-78007	SHIM (78.5X105X0.8)	1	REV GEAR
14-8	09181-78008	SHIM (78.5X105X0.85)	1	REV GEAR
14-9	09181-78009	SHIM (78.5X105X0.9)	1	REV GEAR
14-10	09181-78010	SHIM (78.5X105X0.95)	1	REV GEAR
15-1	09181-84001	SHIM (83.5X110X0.5)	1	FWD GEAR
15-2	09181-84002	SHIM (83.5X110X0.55)	1	FWD GEAR
15-3	09181-84003	SHIM (83.5X110X0.6)	1	FWD GEAR
15-4	09181-84004	SHIM (83.5X110X0.65)	1	FWD GEAR
15-5	09181-84005	SHIM (83.5X110X0.7)	1	FWD GEAR
15-6	09181-84006	SHIM (83.5X110X0.75)	1	FWD GEAR
15-7	09181-84007	SHIM (83.5X110X0.8)	1	FWD GEAR
15-8	09181-84008	SHIM (83.5X110X0.85)	1	FWD GEAR
15-9	09181-84009	SHIM (83.5X110X0.9)	1	FWD GEAR
15-10	09181-84010	SHIM (83.5X110X0.95)	1	FWD GEAR
16	09265-30033	BEARING (30X72X28.75)	1	
17	57610-93L00	SHAFT, PROPELLER	1	
18	57621-93L00	SHIFTER, CLUTCH DOG	1	
19	09202-08013	PIN (8X55)	1	
20	57631-93L00	PIN, CONNECTOR	1	
21	09440-58001	SPRING	1	
22	57617-93L00	SPRING, DETENT	1	
23	06111-07004	BALL	2	
24	06111-11004	BALL	2	
25	56120-93L00-0EP	HOUSING, PROP SFT BRG (BLACK)	1	
26	56124-93L00	·WASHER, REVERSE GEAR THRUST	1	
27	09263-30023	·BEARING (30X40X25)	1	
28	09263-72001	·BEARING (72X90X34)	1	
29	09280-00047	·O RING (D:3.ID:109)	1	
30	09282-30006	·OIL SEAL (30X45X6)	2	
31	56130-93J01	HOUSING, DRIVE SHAFT BRG	1	

FIG. 22

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	09280-66004	O RING (D:3.1,ID:65.4)	1	
33	09282-24004	OIL SEAL (24X40X7)	2	
34	57622-93L00	SPACER, FORWARD THRUST	1	
35	09265-32003	BEARING (32X58X18.9)	1	
36	09381-72001	CIRCLIP	1	
37	08331-4158A	CIRCLIP	1	
38	56122-93L00	STOPPER, PROP SFT BRG HSG	1	
39	56126-93L00	WASHER,, PROP SFT BRG HSG NO.1	1	
40	56127-93L00	WASHER,, PROP SFT BRG HSG NO.2	1	
41	56128-93L00	SEAL, PROP SFT BRG HSG	1	
42	56129-93L00	BUSH, STOPPER	1	
43	09280-00030	O RING (D:1.8,ID:117.6)	1	
44	09263-78001	BEARING (78.26X105X5.45)	1	REVERSE
45	09263-83001	BEARING	1	FORWARD

FIG.23

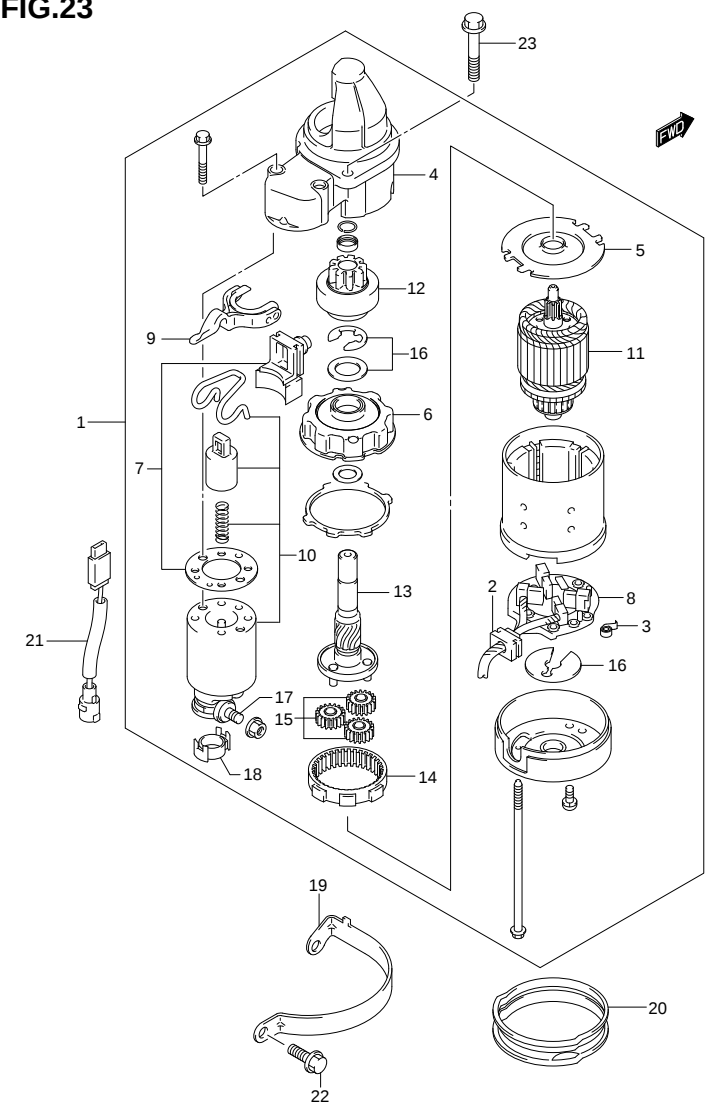


FIG. 23 (1-D-6) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	31100-96J01	STARTING MOTOR	1	
2	31131-90J01	·BRUSH SET, PLUS	1	
3	31135-90J00	·SPRING	4	
4	31151-94J00	·CASE, GEAR	1	
5	31152-90J00	·PLATE, CENTER	1	
6	31153-90J00	·BRACKET, PLANET GEAR	1	
7	31171-96J00	·COVER KIT, DUST	1	
8	31173-90J01	·HOLDER, BRUSH	1	
9	31191-96J00	·LEVER, SHIFT	1	
10	31220-94J00	·SWITCH, MAGNET	1	
11	31310-90J00	·ARMATURE	1	
12	31320-93J00	·PINION	1	
13	31341-93J00	·SHAFT, PINION	1	
14	31343-90J00	·INTERNAL GEAR	1	
15	31344-90J00	·GEAR, PLANETARY	3	
16	31360-93J01	·WASHER SET	1	
17	31913-93J00	·TERMINAL	1	
18	31914-93J00	·CAP, TERMINAL	1	
19	31912-98J00	BAND, STARTING MOTOR	1	
20	31918-90J10	DAMPER, LOWER	1	
21	36645-93J00	LEAD WIRE	1	
22	01550-08207	BOLT	2	LOWER
23	01550-08307	BOLT	2	UPPER

FIG.24

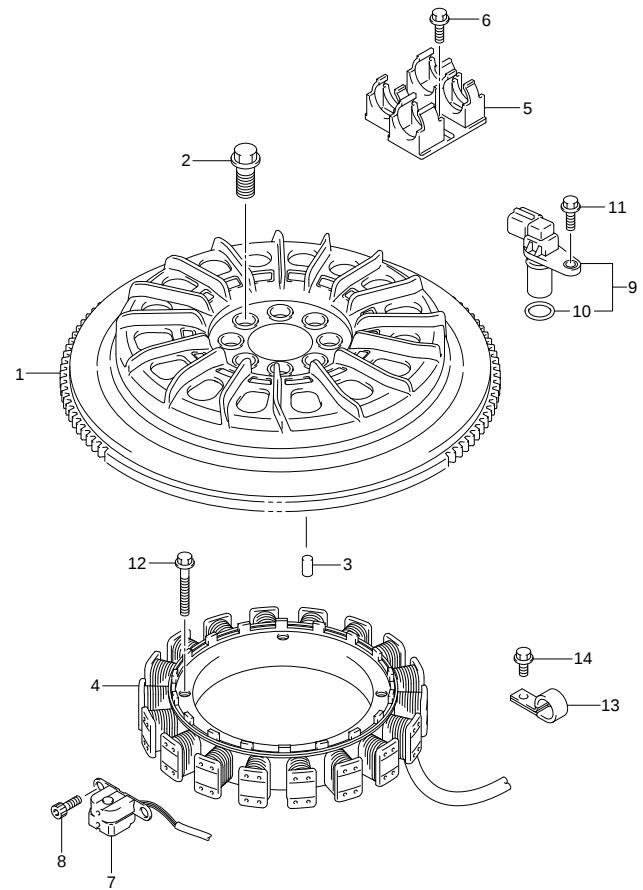


FIG. 24 (1-D-7) MAGNETO

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	32102-98J01	FLYWHEEL	1	
2	09103-12071	BOLT (12X26)	8	
3	09202-06031	PIN (6X12)	1	
4	32120-93J00	COIL, BATTERY CHARGING	1	
5	32131-93J00	HOLDER, STATOR CONNECTING	1	
6	01550-06167	BOLT	2	
7	32160-88L00	COIL, IGNITION TIMING	1	
8	09106-05030	BOLT (5X10)	2	
9	33220-69J00	SENSOR, CAM POSITION	3	
10	33221-42F00	O RING	3	
11	01550-06167	BOLT	3	
12	09103-06231	BOLT (6X35)	4	
13	09403-13408	CLAMP	2	
14	01550-06127	BOLT	2	

FIG.25


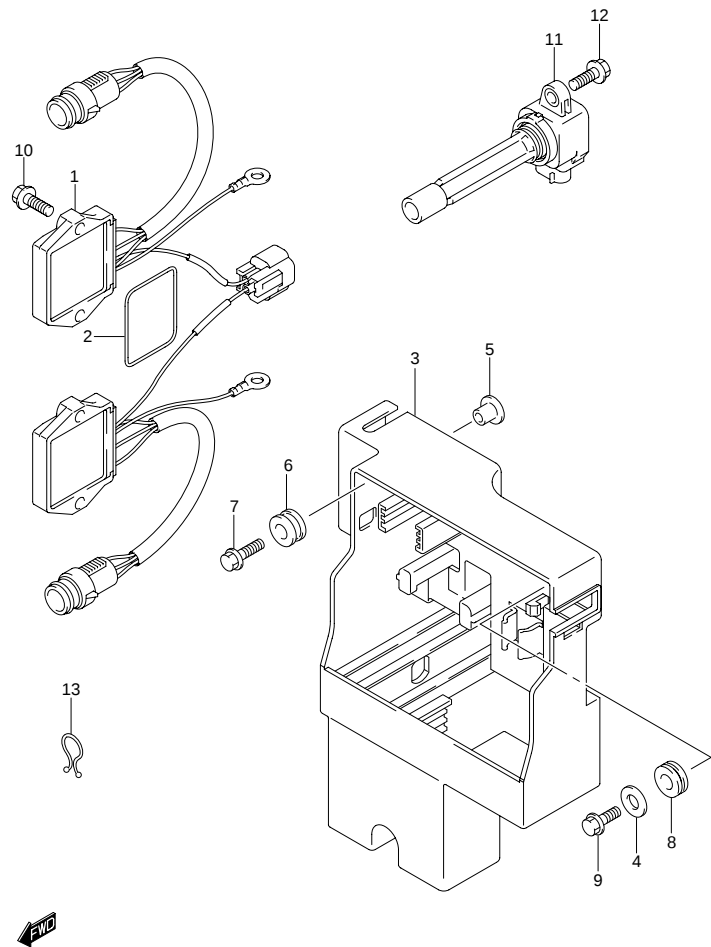


FIG. 25 (1-D-8) RECTIFIER / IGNITION COIL

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	32800-98J01	RECTIFIER & REGULATOR	1	
2	32805-93J00	O RING, RECTIFIER & REGULATOR	2	
3	32890-98J01	HOLDER, ELECTRIC PARTS	1	
4	09160-06134	WASHER (6.5X24X1.6)	1	
5	09169-06062	WASHER	3	
6	09320-09016	CUSHION	3	
7	09116-06202	BOLT (6X25)	3	
8	09320-12076	CUSHION	1	
9	01550-06127	BOLT	1	
10	01550-06257	BOLT	4	
11	33410-93J00	COIL ASSY, IGNITION	6	
12	01550-06207	BOLT	6	
13	09408-00184	CLAMP	1	

FIG.26

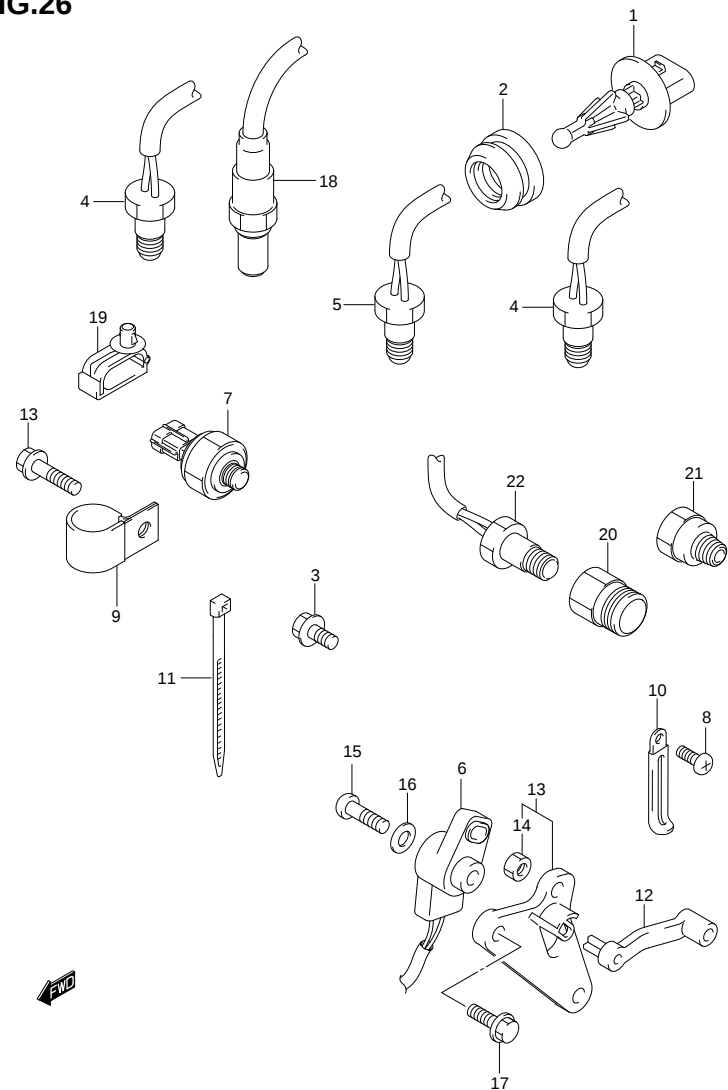


DF300A E01 012_026
SENSOR

FIG. 26 (1-D-9) SENSOR

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	13650-52G00	SENSOR, INLET AIR TEMP	1	
2	13655-87J00	GROMMET, AIR TEMP SENSOR	1	
3	29103-93J00	BOLT, PTT MOTOR LEAD CLAMP	1	
4	34830-87J20	SENSOR ASSY, EXHAUST TEMP	2	
5	34830-87J20	SENSOR ASSY, CYLINDER TEMP	1	
6	34840-98J02	SENSOR ASSY, TRIM	1	
7	37820-99E01	SWITCH ASSY, OIL PRESSURE	1	
8	09125-06063	SCREW (6X10)	1	
9	09403-19409	CLAMP	1	
10	29404-93J10	CLAMP, PTT MOTOR LEAD	1	
11	09407-14407	CLAMP (L:145)	2	
12	34841-88L00	LEVER, TRIM SENSOR	1	
13	34845-88L00	BRACKET, TRIM SENSOR	1	
14	09140-05005	NUT	1	
15	09125-05048	SCREW (5X16)	1	
16	09160-05029	WASHER (5.5X12X0.8)	1	
17	09103-06093	BOLT (6X20)	2	
18	18213-98J00	SENSOR, OXYGEN	1	
19	09403-07340	CLAMP	1	
20	11218-98J00	HOLDER, TEMP SENSOR	1	
21	11219-98J00	HOLDER, OIL SENSOR	1	
22	34830-98J00	SENSOR ASSY, OIL TEMP	1	

DF300A E01 012

FIG.27

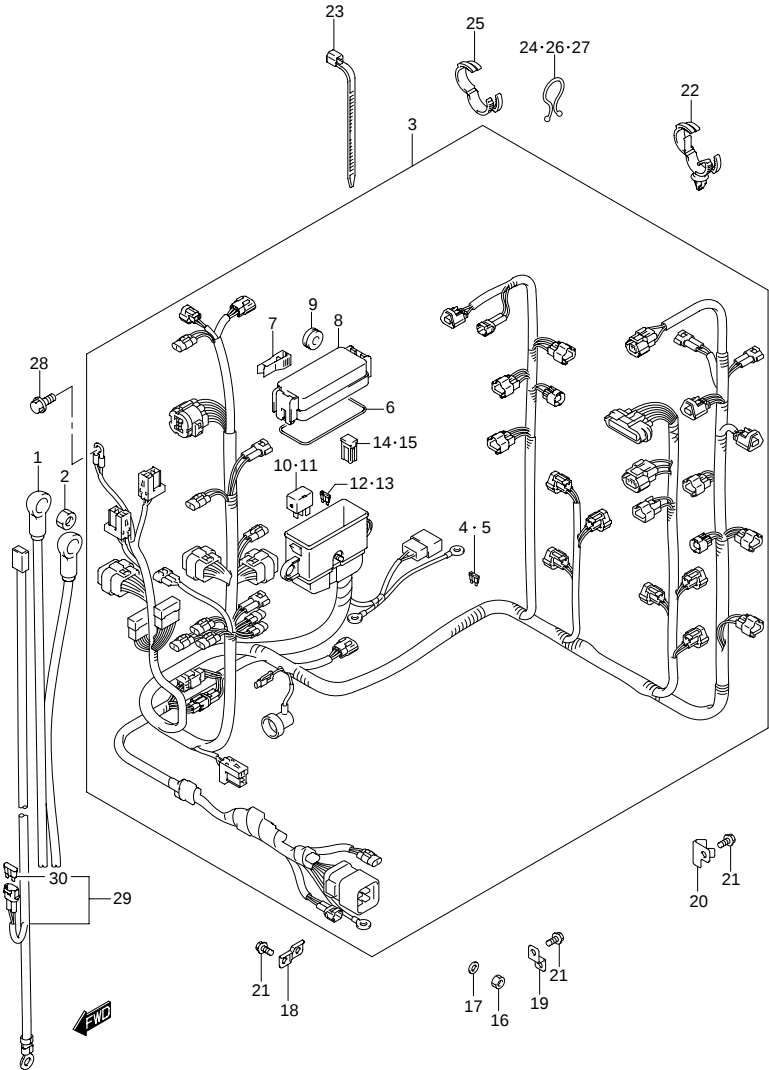


DF300A E01 012_027
HARNESS

FIG. 27 (1-D-10) HARNESS (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-93J01	CABLE, STARTER MOTOR	1	L:4000
2	08316-10087	NUT	1	
3	36610-98J40	HARNESS ASSY, WIRING	1	
4	09481-10501	·FUSE (10A)	2	
5	09481-15501	·FUSE (15A)	2	
6	36721-96J00	·O-RING, UPPER COVER	1	
7	36737-96J00	·PULLER, FUSE	1	
8	36738-98J00	·COVER, FUSE CASE UPPER	1	
9	09320-08021	·CUSHION	2	
10	38860-76F01	·RELAY, ENG CONTROL UNIT	1	
11	38860-76F01	·RELAY, STARTER MOTOR	1	
12	09481-15501	·FUSE (15A)	5	
13	09481-30501	·FUSE (30A)	3	
14	09481-40401	·FUSE (40A)	1	
15	09481-60401	·FUSE (60A)	2	
16	08310-00067	NUT	1	
17	08321-01067	WASHER	1	
18	36617-93J00	BRACKET, HARNESS	3	
19	36617-93J10	BRACKET, HARNESS	8	
20	36617-98J00	BRACKET, HARNESS	1	
21	01550-06127	BOLT	12	
22	09403-20308	CLAMP	1	
23	09407-18402	CLAMP (L:165)	4	
24	09408-00008	CLIP (ID:20)	2	
25	09408-00184	CLAMP	3	
26	09408-00012	CLIP (ID:11.5)	1	
27	09408-00024	CLIP (ID:23)	1	
28	01550-06127	BOLT	1	
29	36625-98J10	WIRE ASSY, BATTEERY	1	OPT
30	09481-30501	·FUSE (30A)	1	OPT

DF300A E01 012

FIG.28

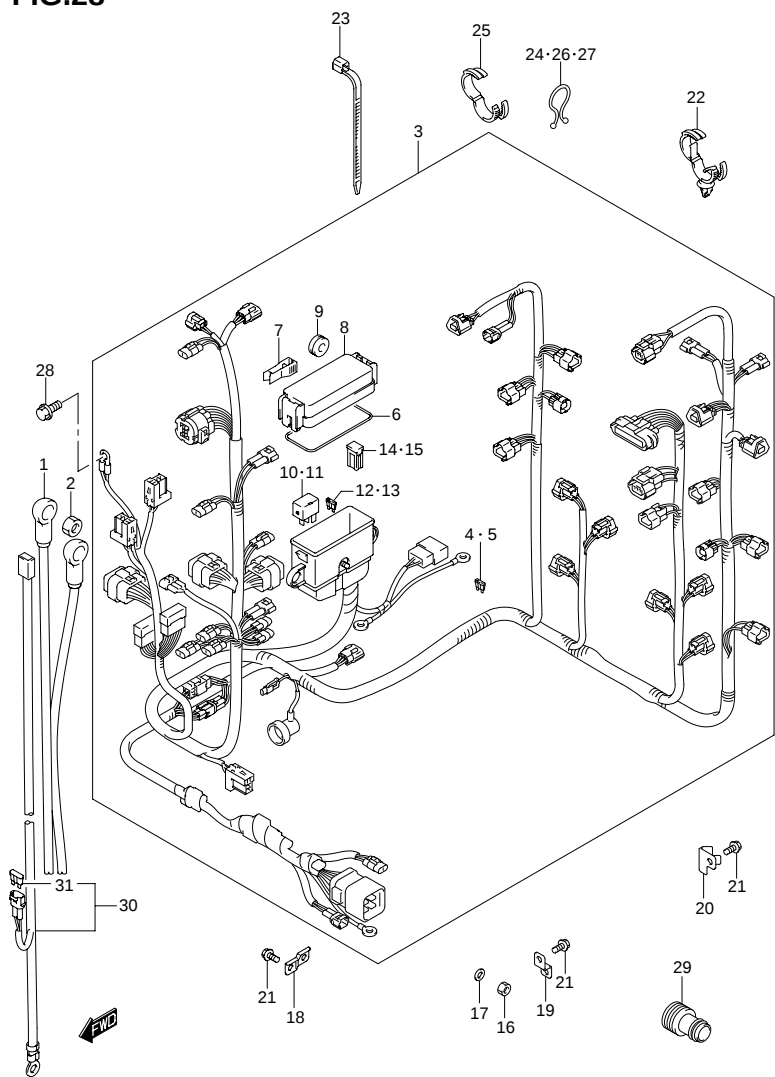

DF300A E01 012_028
HARNESS

FIG.28 (1-D-11) HARNESS (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-93J01	CABLE, STARTER MOTOR	1	L:4000
2	08316-10087	NUT	1	
3	36610-98J40	HARNESS ASSY, WIRING	1	
4	09481-10501	·FUSE (10A)	2	
5	09481-15501	·FUSE (15A)	2	
6	36721-96J00	·O-RING, UPPER COVER	1	
7	36737-96J00	·PULLER, FUSE	1	
8	36738-98J00	·COVER, FUSE CASE UPPER	1	
9	09320-08021	·CUSHION	2	
10	38860-76F01	·RELAY, ENG CONTROL UNIT	1	
11	38860-76F01	·RELAY, STARTER MOTOR	1	
12	09481-15501	·FUSE (15A)	5	
13	09481-30501	·FUSE (30A)	3	
14	09481-40401	·FUSE (40A)	1	
15	09481-60401	·FUSE (60A)	2	
16	08310-00067	NUT	1	
17	08321-01067	WASHER	1	
18	36617-93J00	BRACKET, HARNESS	3	
19	36617-93J10	BRACKET, HARNESS	8	
20	36617-98J00	BRACKET, HARNESS	1	
21	01550-06127	BOLT	12	
22	09403-20308	CLAMP	1	
23	09407-18402	CLAMP (L:165)	4	
24	09408-00008	CLIP (ID:20)	2	
25	09408-00184	CLAMP	3	
26	09408-00012	CLIP (ID:11.5)	1	
27	09408-00024	CLIP (ID:23)	1	
28	01550-06127	BOLT	1	
29	17917-87L00	CONNECTOR, FLUSH WATER	1	
30	36625-98J10	WIRE ASSY, BATTEERY	1	OPT
31	09481-30501	·FUSE (30A)	1	OPT

DF300A E01 012

FIG.29

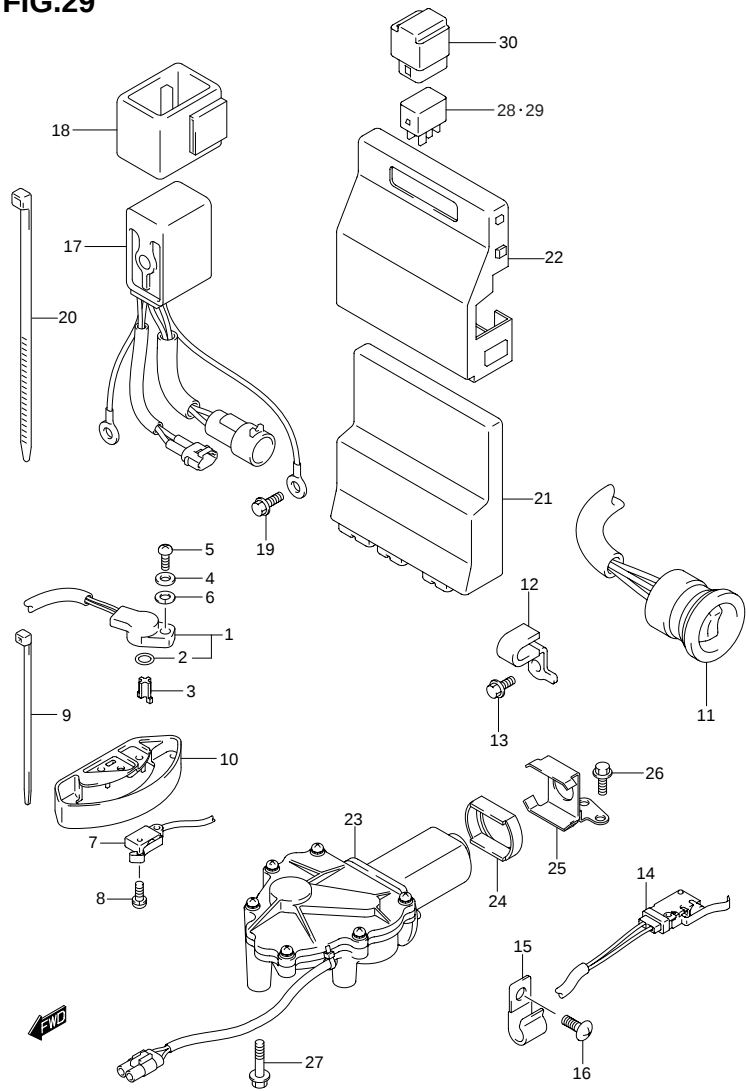


FIG.29 (1-D-12) PTT SWITCH / ENGINE CONTROL UNIT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13580-98J02	SENSOR ASSY, SHIFT POSITION	1	
2	13575-40F00	O RING	1	
3	37729-98J00	LEVER, SHIFT SENSOR	1	
4	09160-05029	WASHER (5.5X12X0.8)	1	
5	07130-05167	BOLT	1	
6	08321-0105A	WASHER	1	
7	37721-93J00	SWITCH ASSY, NEUTRAL	1	
8	09137-04004	SCREW (4X16)	2	
9	09407-10404	CLAMP (L:100)	2	
10	37725-93J11	COVER, SWITCH ASSY	1	
11	37850-99E04	SWITCH ASSY, PTT	1	
12	09403-11315	CLAMP	1	
13	01550-06127	BOLT	1	
14	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
15	09403-09316	CLAMP	1	
16	29125-93J00	SCREW, TILT LIMIT CLAMP	1	
17	38410-93J12	RELAY, PTT	1	
18	38415-93J00	HOLDER, PTT RELAY	1	
19	01550-06127	BOLT	1	
20	09407-30401	CLAMP (L:300)	1	
21	33920-98JA0	UNIT, ENGINE CONTROL	1	
22	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
23	38890-98J00	ACTUATOR, SHIFT	1	
24	38892-98J00	DAMPER, SHIFT ACTUATOR	1	
25	38895-98J00	BRACKET, SHIFT ACTUATOR	1	
26	01550-06167	BOLT	2	
27	01550-06357	BOLT	3	
28	38860-76F01	RELAY, ACTUATOR	2	
29	38860-76F01	RELAY, OXYGEN SENSOR HEATER	1	
30	38915-90J00	HOLDER, RELAY	3	

FIG.30

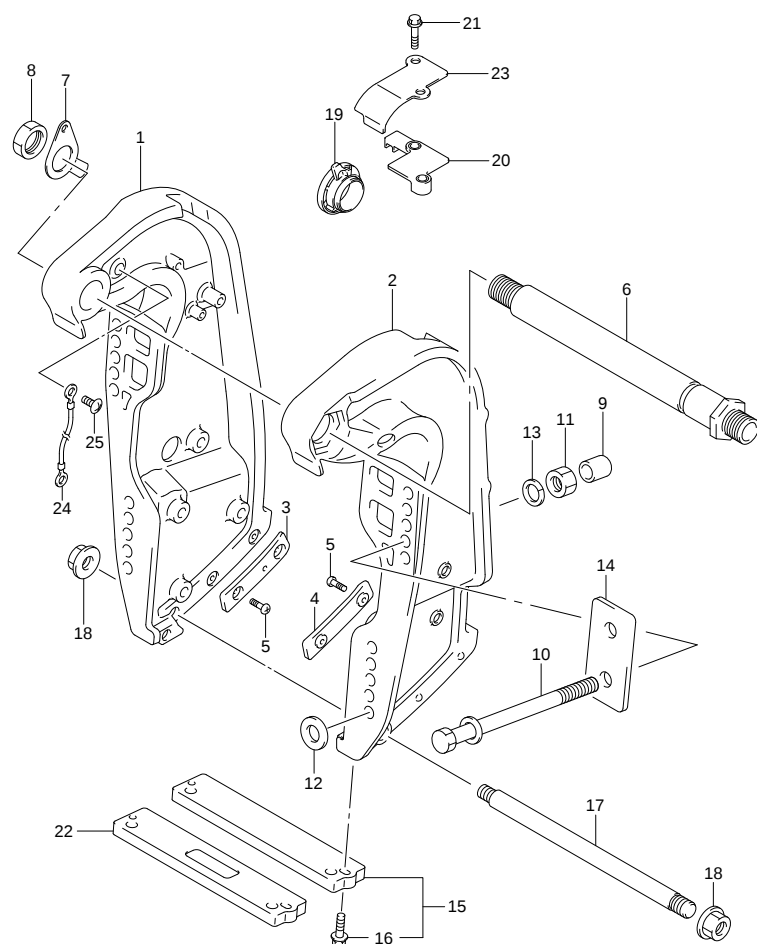


FIG. 30 (1-D-13) CLAMP BRACKET

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	41111-93J14-0EP	BRACKET, CLAMP STBD (BLACK)	1	
2	41121-93J06-0EP	BRACKET, CLAMP PORT (BLACK)	1	
3	41117-93J01	PLATE, CLAMP BRKT LOWER STBD	1	
4	41122-93J01	PLATE, CLAMP BRKT LOWER PORT	1	
5	09125-06063	SCREW (6X10)	4	
6	41130-93J12	SHAFT, CLAMP BRKT	1	
7	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
8	09159-22006	NUT	1	
9	41153-93J00	CAP, TRANSOM BOLT	6	
10-1	09100-12085	BOLT (12.7X115)	1	OPT
10-2	09100-12092	BOLT (12X75)	1	OPT
10-3	09100-12085	BOLT (12.7X115)	6	
11	09159-12062	NUT	6	
12	09160-13017	WASHER (13.2X45X5)	4	
13	09160-13016	WASHER (13.2X26X3)	6	
14	41155-93J02	PLATE, TRANSOM	2	
15	55320-94900	ZINC SET, PROTECTION	1	
16	09116-06121	BOLT (6X25)	2	
17	45421-87D02	PIN, TILT LOCK	1	
18	09159-14020	NUT	2	
19	48140-93J01	CAM, TILT LIMIT SWITCH	1	
20	48144-93J00	HOLDER, TILT LIMIT SWITCH	1	
21	09103-06278	BOLT (6X25)	2	
22	55321-94910	ANODE (MAGNESIUM)	1	OPT
23	48145-93J00	COVER, TILT LIMIT SWITCH	1	
24	36894-87D00	LEAD (CLAMP TO SWIVEL)	1	
25	09125-06063	SCREW (6X10)	2	

FIG.31


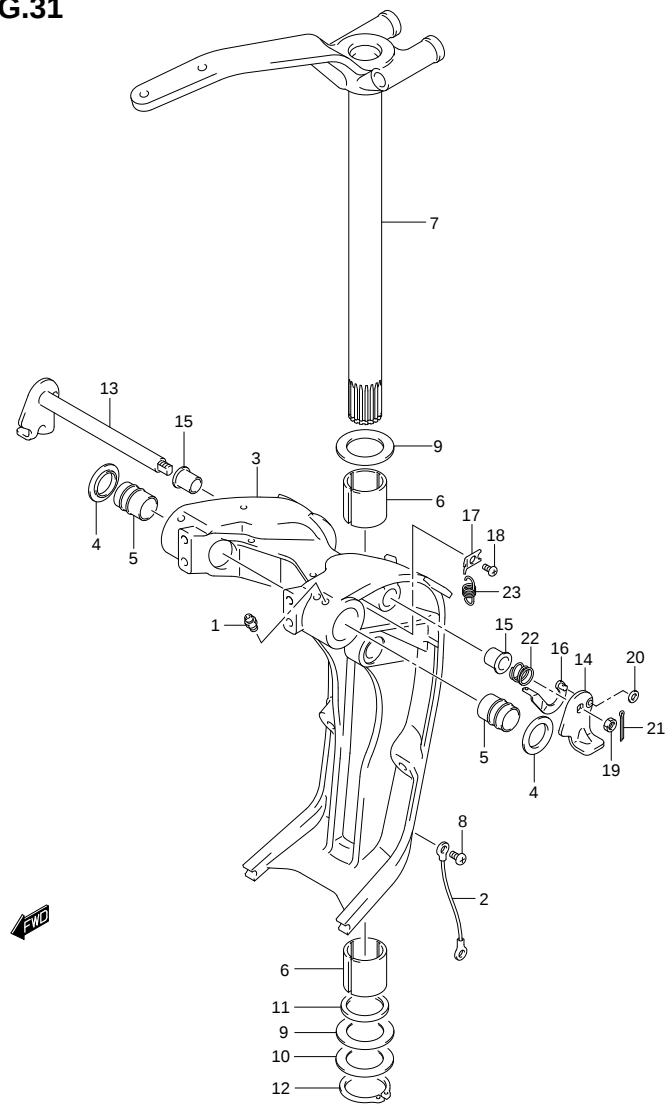


FIG. 31 (1-D-14) SWIVEL BRACKET

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	22511-99011	NIPPLE, GREASE SWIVEL BRKT	4	
2	36894-87D00	LEAD (SWIVEL TO MOUNT BRKT)	1	
3	43111-93J23-0EP	BRACKET, SWIVEL (BLACK)	1	
4	43114-93J00	WASHER, SWIVEL TO CLAMP BRKT	2	
5	43211-93J00	BUSH, CLAMP SHAFT SWIVEL	2	
6	43711-97E00	BUSH, STEERING	2	
7	43750-93J02-0EP	BRACKET, STEERING (BLACK)	1	
8	09125-06063	SCREW (6X10)	1	
9	09160-39001	WASHER (39.5X64X1)	2	
10	09181-39001	SHIM (39.5X64X0.3)	AR	
11	09282-39001	OIL SEAL (39X51X5)	1	
12	09380-38003	CIRCLIP	1	
13	41220-93J11	LEVER, TILT LOCK	1	
14	41234-93J11	LEVER, TILT LOCK PORT	1	
15	41224-95E01	BUSH, TILT STOPPER ROD	2	
16	41230-96J00	LINK, TILT LOCK LEVER	1	
17	41233-95E10	BRACKET, TILT LOCK SPRING	1	
18	09125-06063	SCREW (6X10)	1	
19	09140-10032	NUT	1	
20	09160-06082	WASHER (6.5X13X1.0)	1	
21	09204-01006	PIN	1	
22	09440-19028	SPRING	1	
23	09443-10043	SPRING	1	

FIG.32

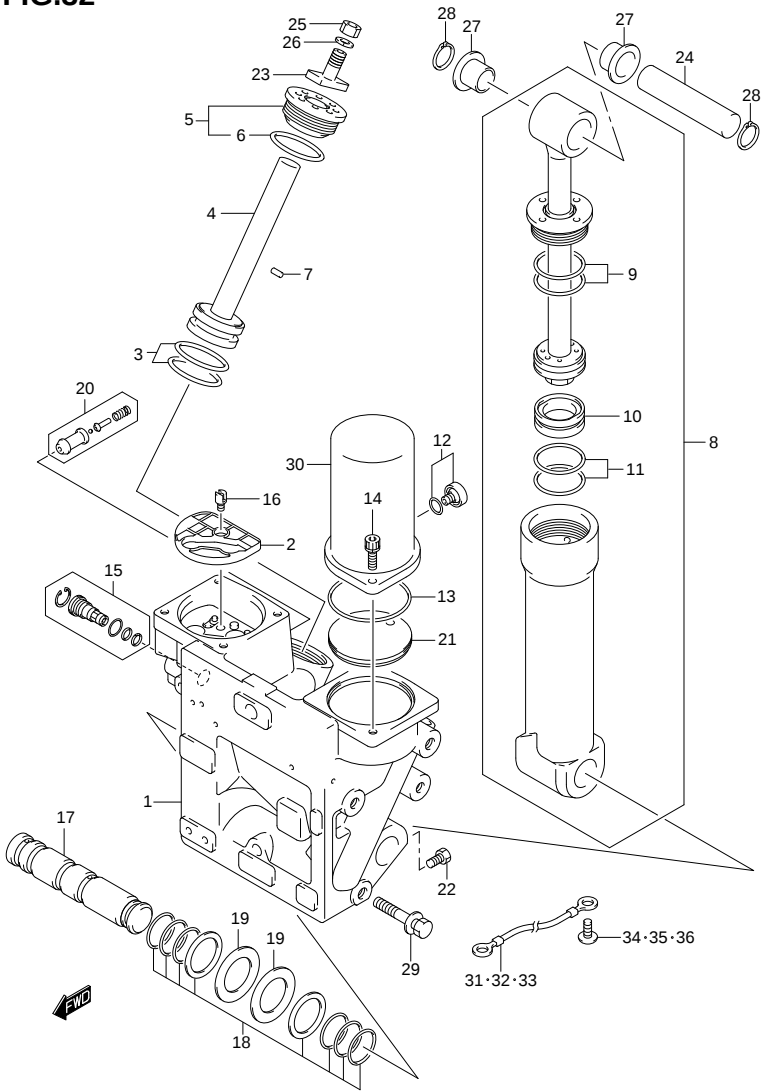

DF300A E01 012_032
TRIM CYLINDER

FIG. 32 (1-D-15) TRIM CYLINDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48500-98J02	MANIFOLD ASSY	1	
2	48582-95E01	·FILTER	1	
3	48605-93J00	·O RING SET	2	
4	48610-93J01	·PISTON / RAM	2	
5	48630-98J01	·ROD GUIDE	2	
6	48633-93J00	··O RING	2	
7	48691-93J00	·CHECK VALVE	1	
8	48400-98J01	CYLINDER ASSY	1	
9	48405-93J00	·O RING SET	1	
10	48650-93J00	·PISTON, FREE	1	
11	48627-93J00	·O RING SET	1	
12	48572-87J10	PLUG	1	
13	48585-95E00	O RING	1	
14	48862-87J10	BOLT, RESERVOIR	2	
15	48864-93J00	MANUAL VALVE	1	
16	48583-95E00	JOINT, DRIVE	1	
17	48121-93J12	SHAFT	1	
18	48125-93J00	O RING SET	1	
19	48126-93J00	WASHER, TILT CYL TO MANIF	2	
20	48320-93J00	VALVE SET, UP BLOW	1	
21	48573-93J00	COVER	1	
22	48128-93J10	BOLT	1	
23	48311-96J00	PAD, TRIM CYL RAM	2	
24	48321-93J00	SHAFT, TILT CYL UPPER	1	
25	29141-93J20	NUT, TRIM CYL RAM	2	
26	09162-10005	LOCK WASHER (10.2X18.4X2.5)	2	
27	09306-24001	BUSH	2	
28	09380-21002	CIRCLIP	2	
29	09116-10175	BOLT (10X50)	8	
30	48571-93J00	RESERVOIR TANK	1	
31	36894-87D00	LEAD, PTT TO ANODE	1	
32	36895-87D01	LEAD, PTT TO ANODE	1	
33	36895-87D01	LEAD, PTT TO ANODE	1	
34	09125-06063	SCREW (6X10)	1	
35	09125-06063	SCREW (6X10)	1	
36	09125-06063	SCREW (6X10)	1	

DF300A E01 012

FIG.33

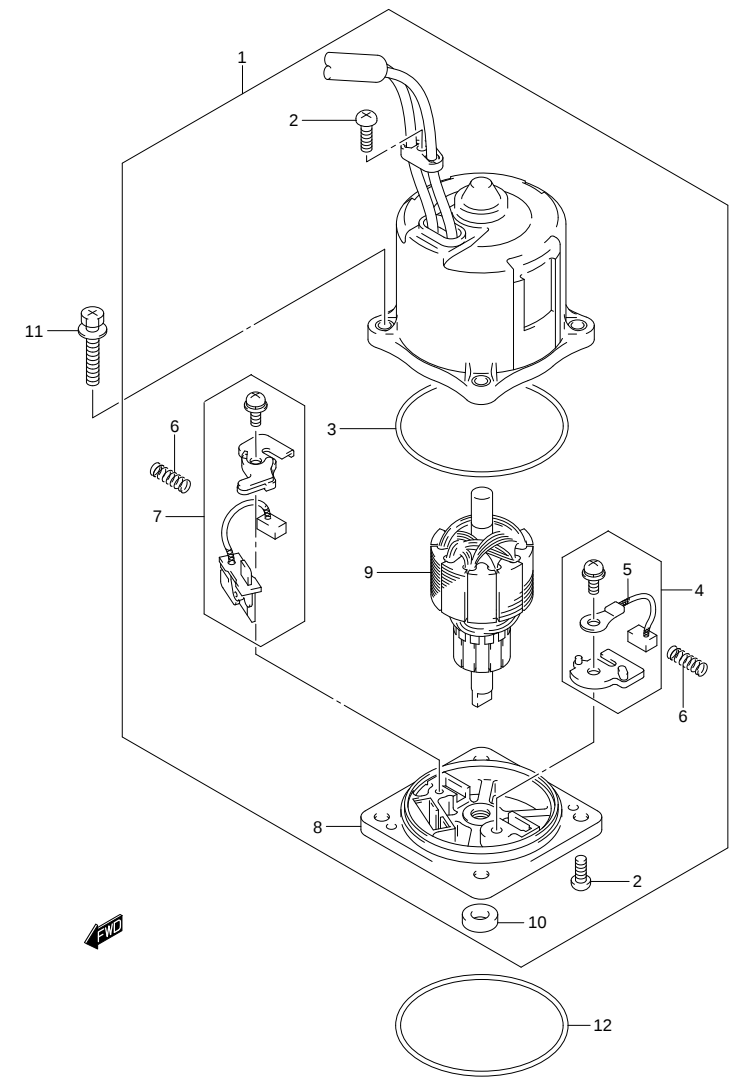


FIG.33 (1-E-2) PTT MOTOR

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	38100-93J03	MOTOR ASSY, PTT	1	
2	31111-94900	·SCREW, YOKE	3	
3	31123-94910	·O RING	1	
4	31133-90J00	·BRUSH SET, PLUS	1	
5	31133-94900	··BRUSH	1	
6	31135-94900	·SPRING	2	
7	31136-90J10	·BREAKER	1	
8	31173-94910	·HOLDER, BRUSH	1	
9	31311-93J00	·ARMATURE	1	
10	33799-97E00	·OIL SEAL	1	
11	31281-92J00	BOLT	4	
12	48585-95E00	O RING	1	

FIG.34

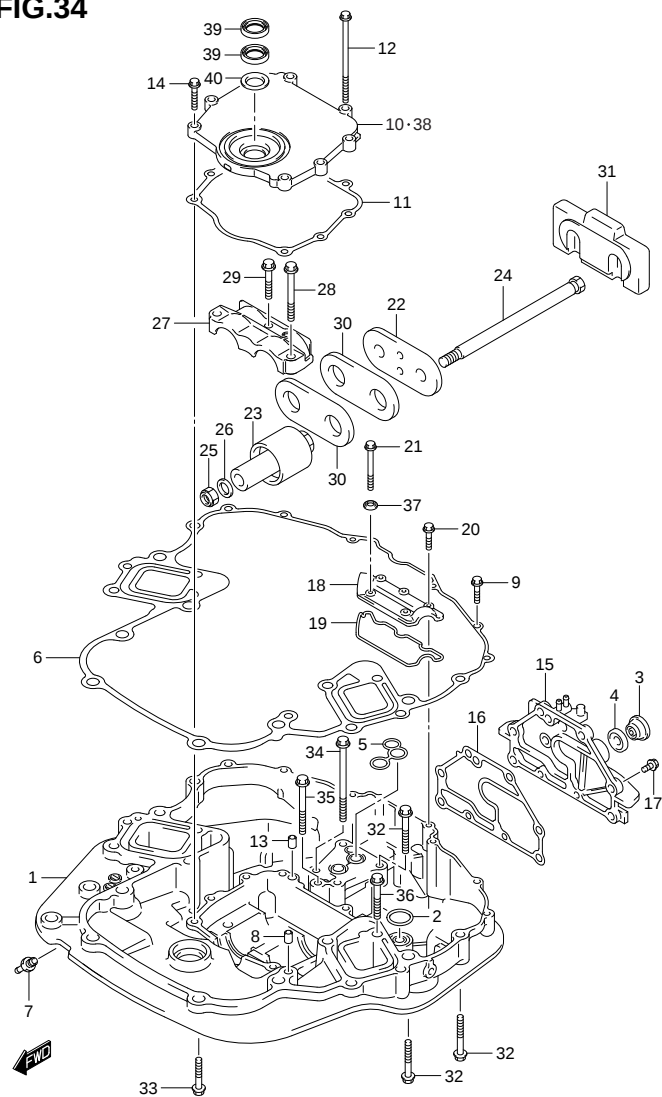


FIG. 34 (1-E-3) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	51111-93J03-0EP	HOLDER, ENGINE (BLACK)	1	
2	16519-93J00	SEAL, ENGINE HOLDER OIL	1	
3	17913-93J00	PLUG, WATER	1	
4	17914-93J00	GASKET, WATER PLUG	1	
5	51116-93J00	SEAL, WATER RETURN	1	
6	51211-93J00	GASKET, ENGINE HOLDER	1	
7	61155-93J20	UNION, WATER INDICATOR	1	
8	09206-08001	PIN (8X11)	2	
9	01550-08307	BOLT	6	
10	51122-93J02	COVER, MOUNT OIL SEAL	1	
11	51123-93J00	GASKET, MOUNT OIL SEAL COVER	1	
12	09103-08109	BOLT (8X120)	2	
13	09206-08001	PIN (8X11)	2	
14	01550-0830A	BOLT	6	
15	51140-98J00-0EP	COVER, ENGINE HOLDER (BLACK)	1	
16	51142-93J00	GASKET, ENGINE HOLDER COV	1	
17	09116-08122	BOLT (8X30)	8	
18	51151-93J00	COVER, ENGINE HOLDER UPPER	1	
19	51152-93J00	SEAL, ENGINE HOLDER UPPER COV	1	
20	01550-08307	BOLT	3	
21	01550-08607	BOLT	2	
22	54123-93J02	PLATE, UPPER MOUNT	1	
23	54130-93J01	MOUNT, UPPER	2	
24	09100-14004	BOLT (14X220)	2	
25	09159-14026	NUT	2	
26	09160-15051	WASHER (15X24X3)	2	
27	54137-93J02	COVER, UPPER MOUNT	1	
28	09116-10135	BOLT (10X95)	2	
29	09116-10175	BOLT (10X50)	1	
30	54121-98J00	STOPPER, UPPER THRUST	2	
31	54140-98J00	MOUNT, UPPER THRUST REVERSE	1	
32	09116-10137	BOLT (10X70)	6	
33	09116-10175	BOLT (10X50)	4	
34	09116-10146	BOLT (10X195)	2	

FIG.34

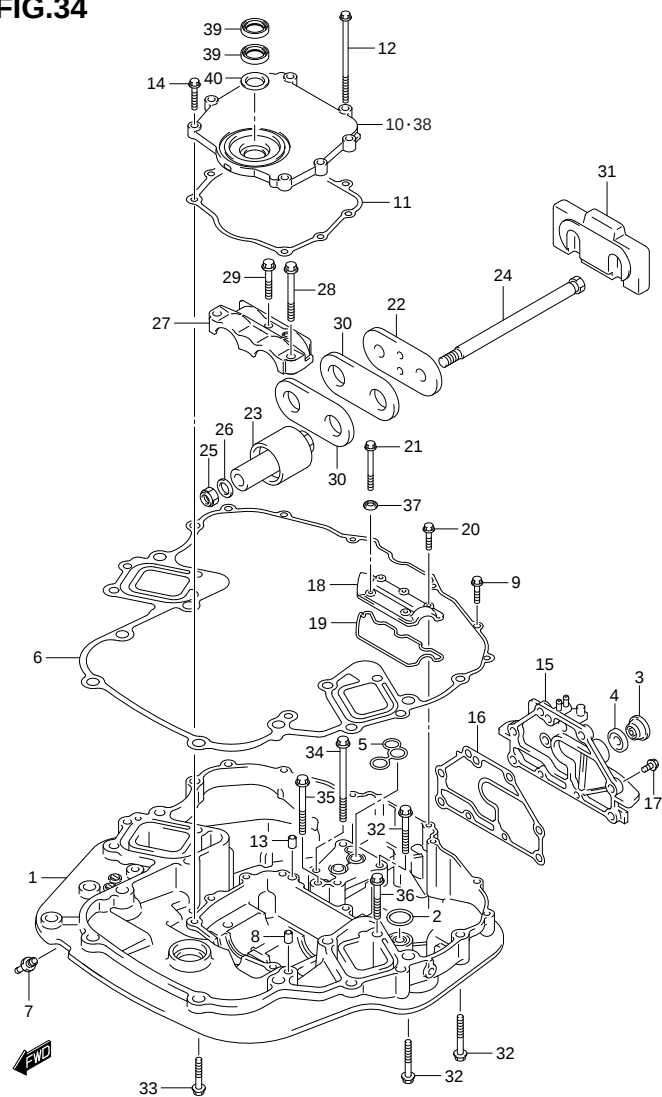


FIG. 34 (1-E-4) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09116-10134	BOLT (10X115)	1	
36	09116-08126	BOLT (8X65)	4	
37	09169-08038	WASHER (8.3X15X3)	2	
38	51122-93J02	COVER, MOUNT OIL SEAL	1	
39	51124-93J00	OIL SEAL	2	
40	51125-93J00	SCRAPER	1	

FIG.35


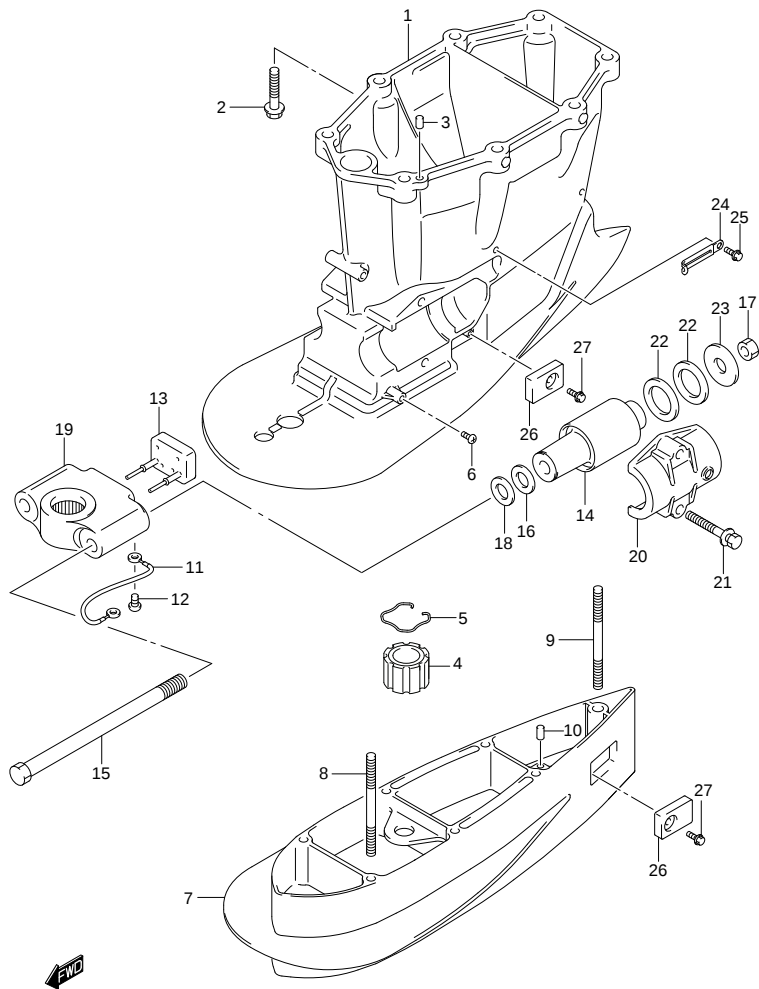


FIG.35 (1-E-5) DRIVE SHAFT HOUSING

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	52111-98J00-0EP	HOUSING, DRIVE SHAFT (BLACK)	1	
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH, DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	52131-93J00-0EP	CASE, EXTENSION (BLACK)	1	W/TRANSOM(XX)
8	09108-10115	STUD BOLT	6	W/TRANSOM(XX)
9	09108-12013	STUD BOLT	1	W/TRANSOM(XX)
10	09202-08006	PIN (8X12)	2	W/TRANSOM(XX)
11	36894-87D00	LEAD, MT BRKT TO HSG	1	
12	09125-06063	SCREW (6X10)	1	
13	54150-98J00	MOUNT, LOWER THRUST	1	
14	54160-98J00	MOUNT, LOWER	2	
15	09100-14004	BOLT (14X220)	2	
16	09160-16050	WASHER (16X32X3)	2	
17	09159-14026	NUT	2	
18	09160-16050	WASHER (16X32X3)	2	
19	54211-93J00	BRACKET, LOWER MOUNT	1	
20	54221-93J00	COVER, LOWER MOUNT	2	
21	09116-10175	BOLT (10X50)	4	
22	54165-98J00	DAMPER, REVERSE STOPPER LOWER	4	
23	09160-14066	WASHER (14X50X4)	2	
24	29404-93J10	CLAMP, SPEEDOMETER HOSE	1	
25	29103-93J00	BOLT, CLAMP (6X12)	1	
26-1	55321-93J00	ANODE, PROTECTION	1	W/TRANSOM(X)
26-2	55321-93J00	ANODE, PROTECTION	2	W/TRANSOM(XX)
27-1	09116-06094	BOLT (6X15)	1	W/TRANSOM(X)
27-2	09116-06094	BOLT (6X15)	2	W/TRANSOM(XX)

FIG.36

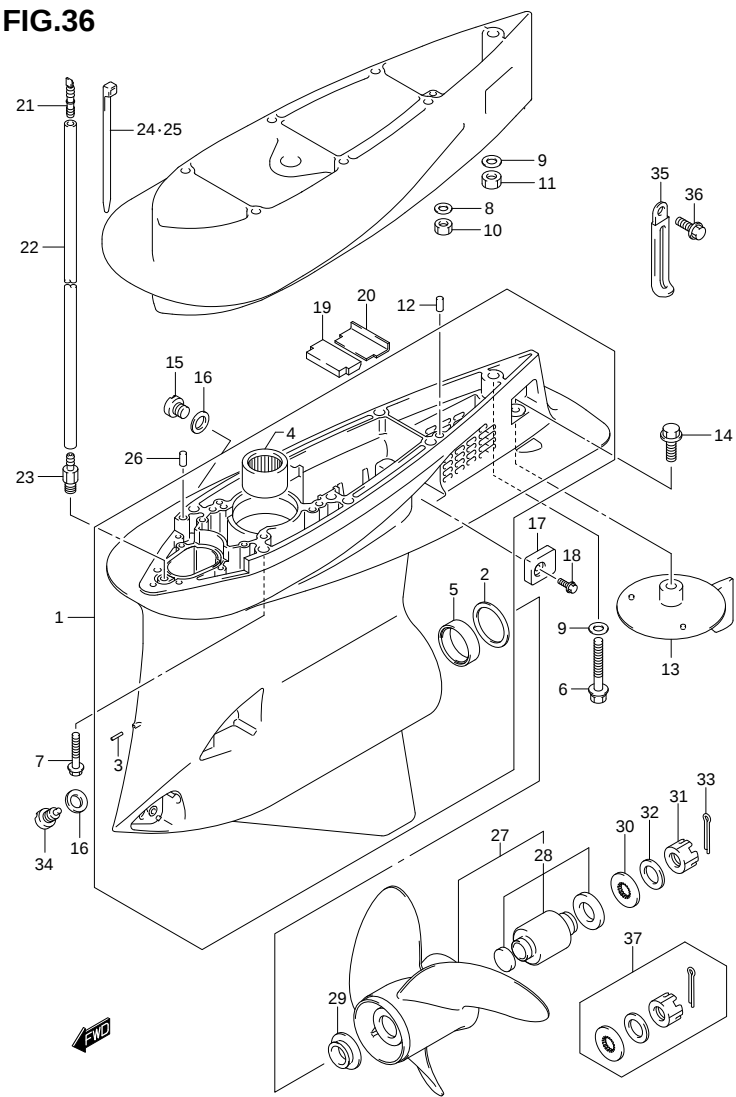


DF300A E01 012_036
GEAR CASE

FIG.36 (1-E-6) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55110-93L00-0EP	CASE, GEAR (BLACK)	1	
2	55118-93L00	·WASHER, FORWARD GEAR THRUST	1	
3	09206-03001	·BUSH (2X3X11)	1	
4	09263-35048	·BEARING (35X56X37)	1	
5	09263-80001	·BEARING	1	
6	09100-12052	BOLT (12X70)	1	W/TRANSOM(X)
7	09116-10150	BOLT (10X55)	6	W/TRANSOM(X)
8	09160-10141	WASHER (10.5X19X2)	6	W/TRANSOM(XX)
9	09160-12066	WASHER (12.5X22X2.5)	1	
10	29141-93J20	NUT, EXTENSION BOLT NO.1	6	W/TRANSOM(XX)
11	09159-12014	NUT	1	W/TRANSOM(XX)
12	09202-08006	PIN (8X12)	2	
13	55125-93L00	TAB, TRIM	1	
14	09116-08137	BOLT (8X22)	1	
15	55128-93J10	PLUG, DRAIN	1	
16	09168-10034	GASKET (9.5X16.5X2)	2	
17	55321-93J00	ANODE, PROTECTION	2	
18	09116-06094	BOLT (6X15)	2	
19	55332-98J00	RUBBER, EXHAUST SEAL	1	
20	55333-98J00	PLATE, EXHAUST SEAL	1	
21	55127-87D00	UNION, SPEEDOMETER HOSE	1	
22	09355-40805-00B	HOSE (4X8X2000)	1	L:2000->1300
23	09362-09008	UNION	1	
24	09407-10404	CLAMP (L:100)	1	
25	09401-08412	CLIP	1	
26	09202-06031	PIN (6X12)	2	
27-1	58200-93L00	PROPELLER (3X16X17)	1	W/REGULAR ROTATION
27-2	58200-93L10	PROPELLER (3X16X18.5)	1	W/REGULAR ROTATION
27-3	58200-93L20	PROPELLER (3X16X20)	1	W/REGULAR ROTATION
27-4	58200-93L30	PROPELLER (3X16X21.5)	1	W/REGULAR ROTATION
27-5	58200-93L40	PROPELLER (3X16X23)	1	W/REGULAR ROTATION
27-6	58200-93L50	PROPELLER (3X16X24.5)	1	W/REGULAR ROTATION
27-7	58200-93L60	PROPELLER (3X16X26)	1	OPT W/REGULAR ROTATION

FIG.36

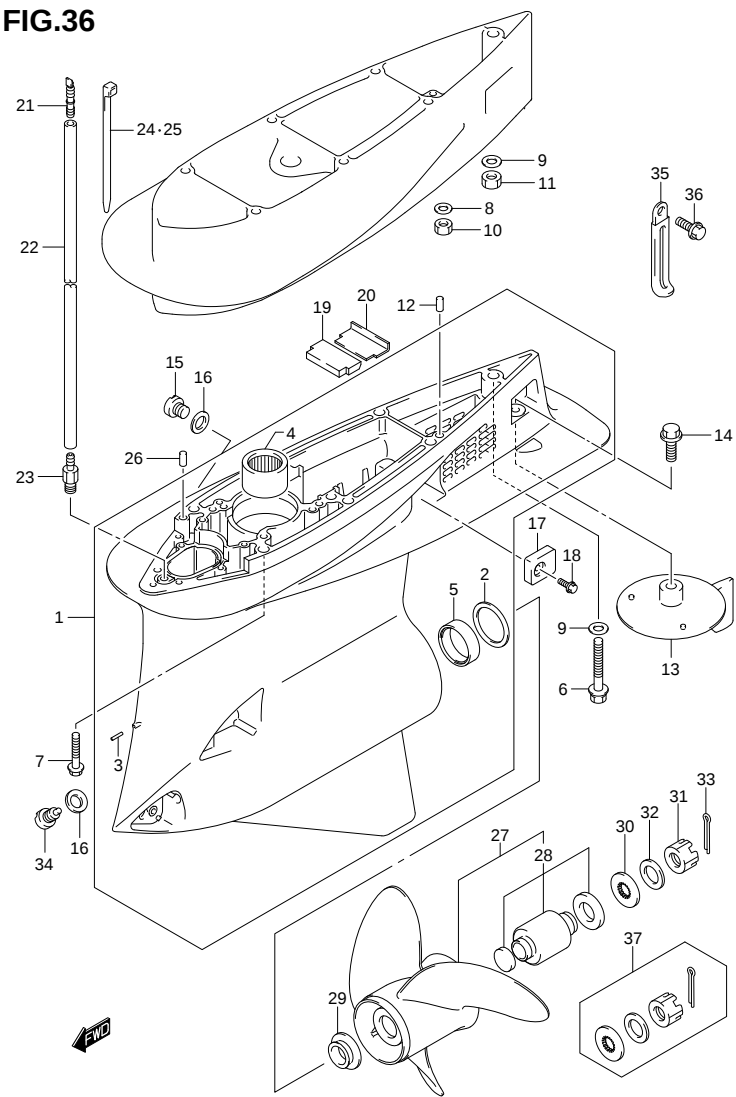

DF300A E01 012_036
GEAR CASE

FIG. 36 (1-E-7) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27-8	58200-93L70	PROPELLER (3X16X27.5)	1	OPT W/REGULAR ROTATION
27-9	58200-96J00	PROPELLER (3X15.5X17)	1	OPT W/REGULAR ROTATION
27-10	58200-96J10	PROPELLER (3X15.25X19)	1	OPT W/REGULAR ROTATION
27-11	58200-96J20	PROPELLER (3X14.75X21)	1	OPT W/REGULAR ROTATION
27-12	58200-96J30	PROPELLER (3X14.75X23)	1	OPT W/REGULAR ROTATION
27-13	58200-96J40	PROPELLER (3X14.5X25)	1	OPT W/REGULAR ROTATION
27-14	58200-96J50	PROPELLER (3X14.5X27)	1	OPT W/REGULAR ROTATION
27-15	58300-93J00	PROPELLER (4X15.25X18)	1	OPT W/REGULAR ROTATION
27-16	58300-93J10	PROPELLER (4X15.25X20)	1	OPT W/REGULAR ROTATION
27-17	58300-93J20	PROPELLER (4X15.25X22)	1	OPT W/REGULAR ROTATION
27-18	58300-93J30	PROPELLER (4X15.25X24)	1	OPT W/REGULAR ROTATION
27-19	58300-93J40	PROPELLER (4X15.25X26)	1	OPT W/REGULAR ROTATION
27-20	58200-93LA0	PROPELLER (3X16X18.5)	1	W/COUNTER ROTATION
27-21	58200-93LB0	PROPELLER (3X16X20)	1	W/COUNTER ROTATION
27-22	58200-93LC0	PROPELLER (3X16X21.5)	1	W/COUNTER ROTATION
27-23	58200-93LD0	PROPELLER (3X16X23)	1	W/COUNTER ROTATION
27-24	58200-93LE0	PROPELLER (3X16X17)	1	W/COUNTER ROTATION
27-25	58200-93LF0	PROPELLER (3X16X24.5)	1	OPT W/COUNTER ROTATION
27-26	58200-93LG0	PROPELLER (3X16X24.5)	1	OPT W/COUNTER ROTATION
27-27	58200-96JA0	PROPELLER (3X15.5X17)	1	OPT W/COUNTER ROTATION
27-28	58200-96JB0	PROPELLER (3X15.25X19)	1	OPT W/COUNTER ROTATION
27-29	58200-96JC0	PROPELLER (3X14.75X21)	1	OPT W/COUNTER ROTATION
27-30	58200-96JD0	PROPELLER (3X14.75X23)	1	OPT W/COUNTER ROTATION
27-31	58200-96JE0	PROPELLER (3X14.5X25)	1	OPT W/COUNTER ROTATION

DF300A E01 012_042

FIG.36

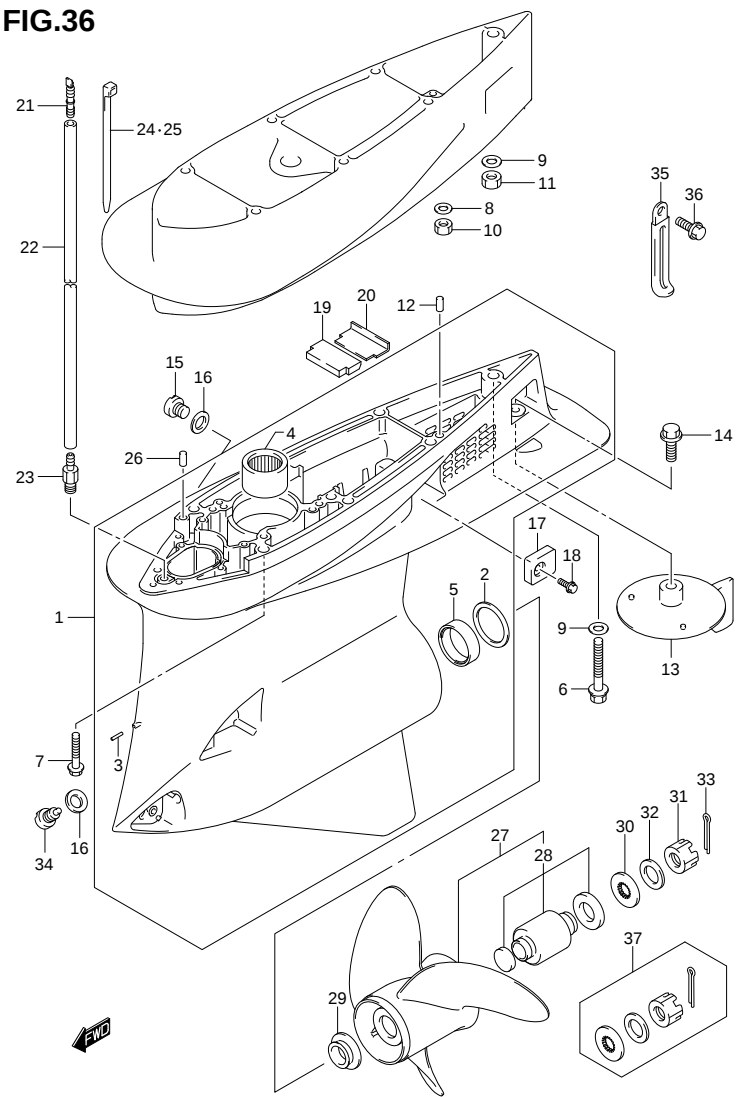


FIG. 36 (1-E-8) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
27-32	58200-96JF0	PROPELLER (3X14.5X27)	1	OPT W/COUNTER ROTATION
27-33	58300-93JA0	PROPELLER (3X15.25X20)	1	OPT W/COUNTER ROTATION
27-34	58300-93JB0	PROPELLER (3X15.25X22)	1	OPT W/COUNTER ROTATION
27-35	58300-93JC0	PROPELLER (3X15.25X24)	1	OPT W/COUNTER ROTATION
27-36	58300-93JD0	PROPELLER (3X15.25X26)	1	OPT W/COUNTER ROTATION
28	58105-93J10	·BUSH SET, PROPELLER	1	OPT
29	57632-93L00	STOPPER, PROPELLER BUSH	1	
30	57633-87D30	SPACER, PROPELLER NUT	1	
31	09141-18005	NUT	1	
32	09160-18028	WASHER (18.5X31X1)	1	
33	09204-03003	COTTER PIN	1	
34	55128-93L00	PLUG, DRAIN	1	
35	29404-93J10	CLAMP	1	
36	01550-06127	BOLT	2	
37	57630-92E00	KIT, PROPELLER NUT	1	OPT
38	25700-93L00	KIT, GEAR CASE SEALING	1	OPT NOT ILLUSTRATED

FIG.37

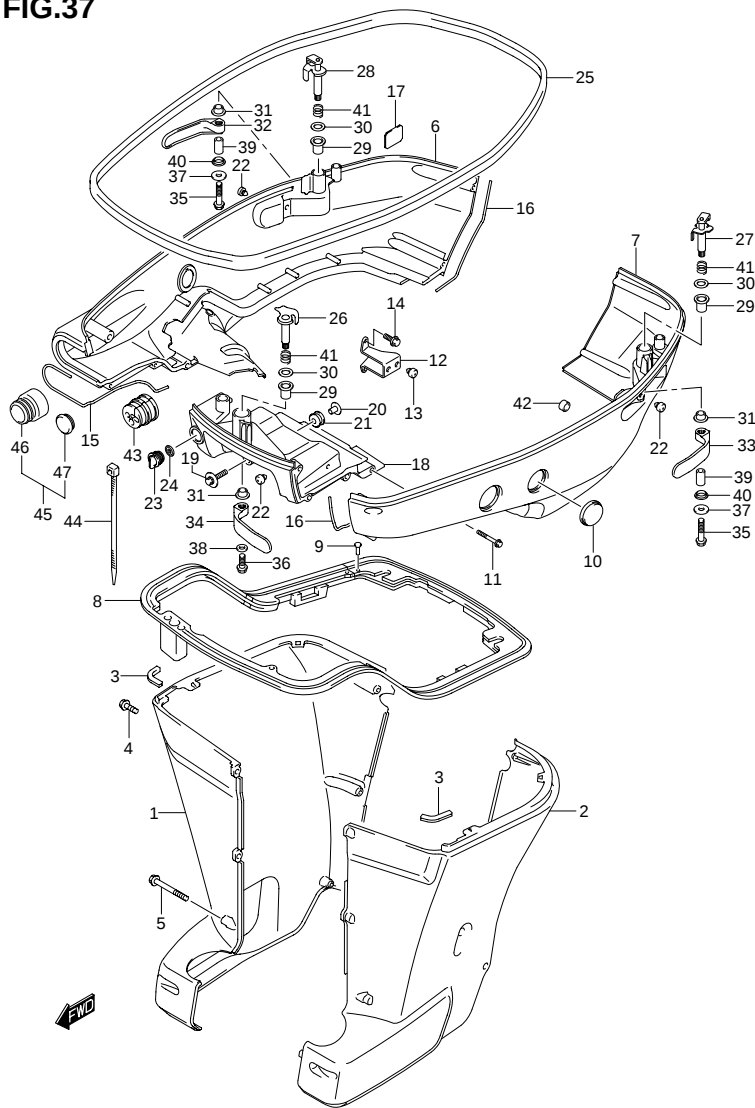


FIG. 37 (1-E-9) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	61131-93J01-0EP	COVER, OIL PAN STBD (BLACK)	1	
2	61141-93J01-0EP	COVER, OIL PAN PORT (BLACK)	1	
3	61137-93J00	CUSHION, OIL PAN COV UPPER	2	
4	09139-06135	SCREW (6X17)	5	
5	09139-06136	SCREW (6X65)	3	
6	61811-98J10-0EP	COVER, SIDE STBD (BLACK)	1	
7	61821-98J01-0EP	COVER, SIDE PORT (BLACK)	1	
8	61134-93J20	SEAL, SIDE COVER	1	
9	09409-05302-5PK	CLIP (BLACK)	2	
10	61817-93J00	PLUG, SIDE COVER	2	
11	09136-06148	SCREW (6X35)	10	
12	61827-93J02	HOLDER, SIDE COVER	1	
13	09321-10030	CUSHION	2	
14	01550-08207	BOLT	2	
15	61832-98J00	SEAL, FRONT PANEL STBD	1	
16	61812-98J00	SEAL, SIDE COVER	1	
17	61814-98J00	PROTECTOR, SIDE COVER	1	
18	61831-98J02-0EP	PANEL, FRONT (BLACK)	1	
19	09118-08127	BOLT (8X40)	2	
20	09169-08039	WASHER	2	
21	09320-11013	CUSHION	2	
22	09321-10030	CUSHION	3	
23	17913-93J00	PLUG, WATER	1	
24	17914-93J00	GASKET, WATER PLUG	1	
25	61112-98J00	RUBBER, SIDE COVER	1	
26	61630-98J00	SHAFT, COVER HOOK (FRONT)	1	
27	63632-98J20	SHAFT, COVER HOOK (PORT)	1	
28	63632-98J30	SHAFT, COVER HOOK (STBD)	1	
29	09306-17002	BUSH	3	
30	09160-17052	WASHER (17X30X3)	3	
31	61636-98J00	BUSH	3	
32	61633-98J10-0EP	LEVER, HOOK RR STBD (BLACK)	1	
33	61634-98J10-0EP	LEVER, HOOK RR PORT (BLACK)	1	
34	61645-98J00-0EP	LEVER, HOOK FRONT (BLACK)	1	

FIG.37

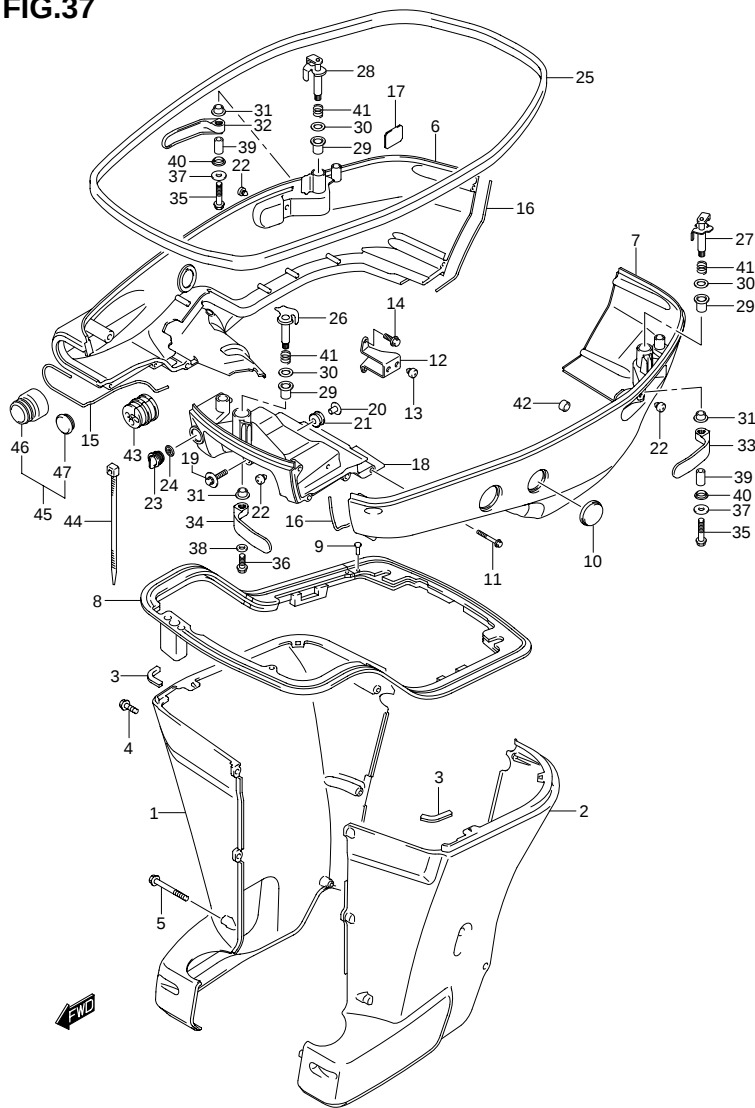


FIG. 37 (1-E-10) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
35	29103-93J20	BOLT, HOOK LEVER (8X45) (STBD / PORT)	2	
36	29103-93J30	BOLT, HOOK LEVER (8X25) (FRONT)	1	
37	09160-08152	WASHER (8.5X28X1.5)	2	
38	09160-08082	WASHER (8.5X16X1.2)	1	
39	61635-98J00	SPACER	2	
40	61643-98J00	BUSH	2	
41	61658-98J00	SPRING, HOOK SHAFT	3	
42	09329-14002	CUSHION	1	
43	61124-98J00	GROMMET, REMOCON CABLE	1	
44	09407-25402	CLAMP (L:248)	1	
45	67300-93J00	KIT, HOSE ADAPTER	1	OPT
46	67361-93J00	·ADAPTER, HOSE	1	OPT
47	09250-21003	·PLUG (OD:28)	1	OPT

FIG.38

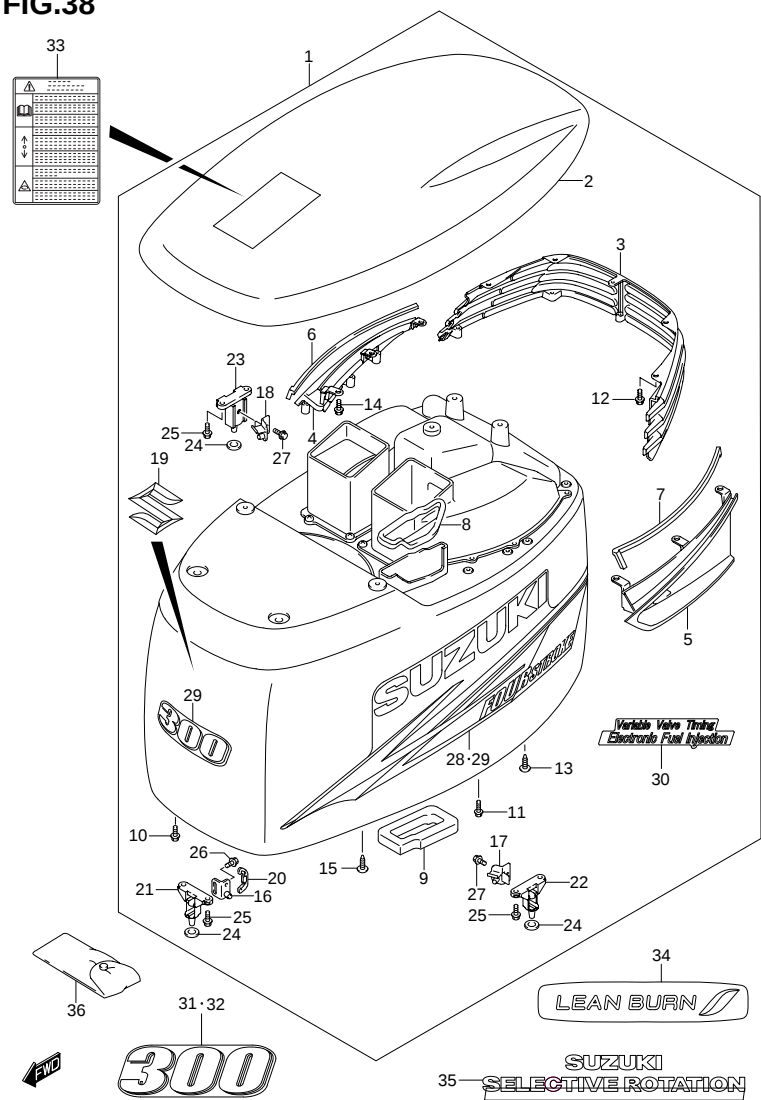


FIG.38 (1-E-11) ENGINE COVER

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	61400-98Y50-0EP	COVER SET, ENGINE (BLACK)	1	
2	61431-98J03-0EP	COVER, TOP (BLACK)	1	
3	61432-98J01	LOUVER, AIR INTAKE	1	
4	61433-98J01	GRIP, UPPER COVER STBD	1	
5	61434-98J02	GRIP, UPPER COVER PORT	1	
6	61439-98J00	SEAL, GRIP STBD	1	
7	61439-98J10	SEAL, GRIP PORT	1	
8	61439-98J21	SEAL, AIR VENT NO.2	1	
9	61476-98J00	SEAL, AIR VENT NO.1	1	
10	01550-06167	BOLT	2	
11	01550-06207	BOLT	3	
12	01550-06167	BOLT	3	
13	03542-06169	BOLT	5	
14	01550-06167	BOLT	4	
15	03542-06169	BOLT	4	
16	61610-98J00	FASTENER (FRONT)	1	
17	61610-98J30	FASTENER (PORT)	1	
18	61610-98J40	FASTENER (STBD)	1	
19	77811-54GC0-0PG	EMBLEM "S" (CHROME)	1	
20	61614-98J00	PROTECTOR, FASTENER	1	
21	61621-98J01	BRACKET, FASTENER FRONT	1	
22	61624-98J10	BRACKET, FASTENER PORT	1	
23	61625-98J10	BRACKET, FASTENER STBD	1	
24	61619-98J00	CUSHION, ENG COV FASTENER	3	
25	01547-06167	BOLT	6	
26	01550-06127	BOLT	1	
27	01550-06127	BOLT	2	
28	61443-93J32	STRIPE, ENGINE COVER STBD	1	
29	61453-93J32	STRIPE, ENGINE COVER PORT	1	
30	61446-93J32	DECAL, EFI & VVT	1	
31	61422-98J12	MARK, EMBLEM FRONT (300)	1	
32	61435-98J12	MARK, EMBLEM REAR (300)	1	
33	61458-99E40	LABEL, ENGINE COVER	1	
34	61471-98J00	DECAL, LEAN BURN	1	
35	61473-98J00	DECAL (S.S.R.)	1	
36	09800-81834	TOOL SET	1	

FIG.39

FIG. 39 (1-E-12) FUEL HOSE (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	09251-09002	CAP	1	
2	09367-10001	JOINT	1	
3	09401-13423	CLIP	1	
4	65700-93J01	HOSE, FUEL (TANK TO ENGINE)	1	
5	65770-93J10	PUMP, SQUEEZE	1	
6	09401-13423	CLIP	1	

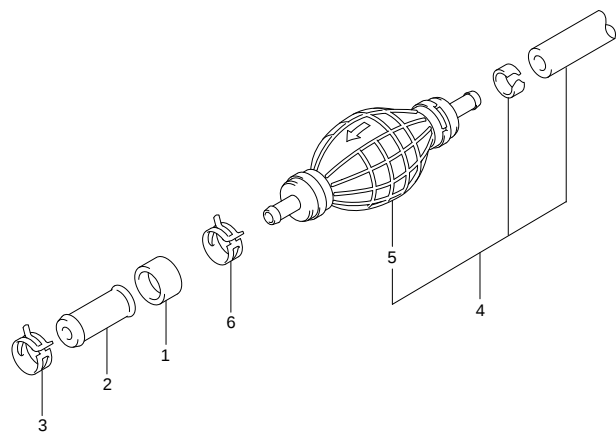


FIG.40

FIG. 40 (1-E-13) FUEL HOSE (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	09251-09002	CAP	1	
2	09367-10001	JOINT	1	
3	09401-13423	CLIP	1	
4	65770-93J10	PUMP, SQUEEZE	1	


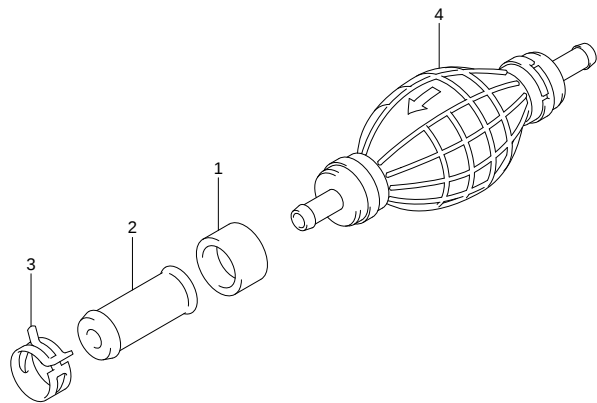


FIG.41

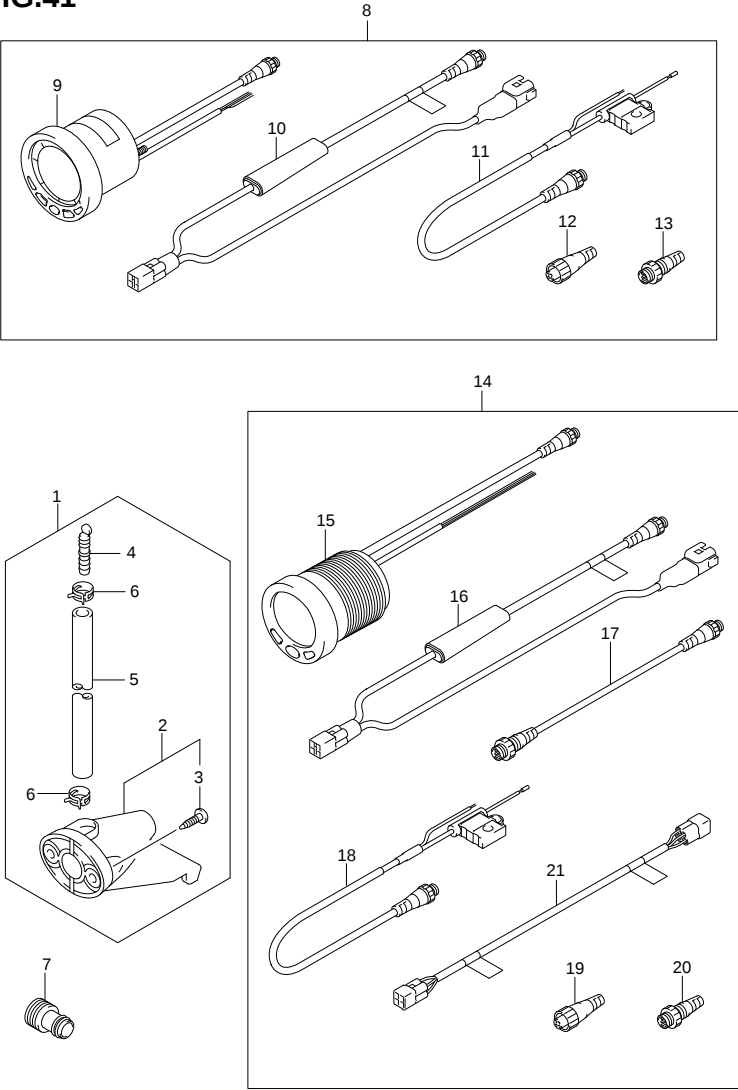


DF300A E01 012_041
OPT:METER

FIG. 41 (1-E-14) OPT:METER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34120-98J01	KIT, SPEEDOMETER SUB	1	
2	34190-95500	·SENDER ASSY, SPEEDOMETER	1	
3	03112-06303	··SCREW	2	
4	55127-87D00	·UNION, HOSE	1	
5	09355-40805-00B	·HOSE (4X8X2000)	1	L:2000->1700
6	09407-10404	·CLAMP (L:100)	2	
7	17917-87L00	CONNECTOR, FLUSH WATER	1	
8	34011-88L01	KIT, 4 IN MULTI GAUGE	1	
9	34200-88L01	·GAUGE ASSY, 4 IN MULTI	1	
10	34922-88L00	·UNIT, INTERFACE	1	
11	36663-88L00	·HARNESS ASSY, NETWORK POWER	1	
12	36665-88L00	·UNIT, RESISTOR FEMALE	1	
13	36665-88L10	·UNIT, RESISTOR MALE	1	
14	34011-88L11	KIT, 2 IN MULTI GAUGE	1	
15	34800-88L01	·GAUGE ASSY, 2 IN MULTI	1	
16	34922-88L00	·UNIT, INTERFACE	1	
17	36662-88L00	·WIRE, 25 EXTENSION	1	
18	36663-88L00	·HARNESS ASSY, NETWORK POWER	1	
19	36665-88L00	·UNIT, RESISTOR FEMALE	1	
20	36665-88L10	·UNIT, RESISTOR MALE	1	
21	36668-88L00	·WIRE, ADAPTER TO DIAGNS	1	

FIG.42

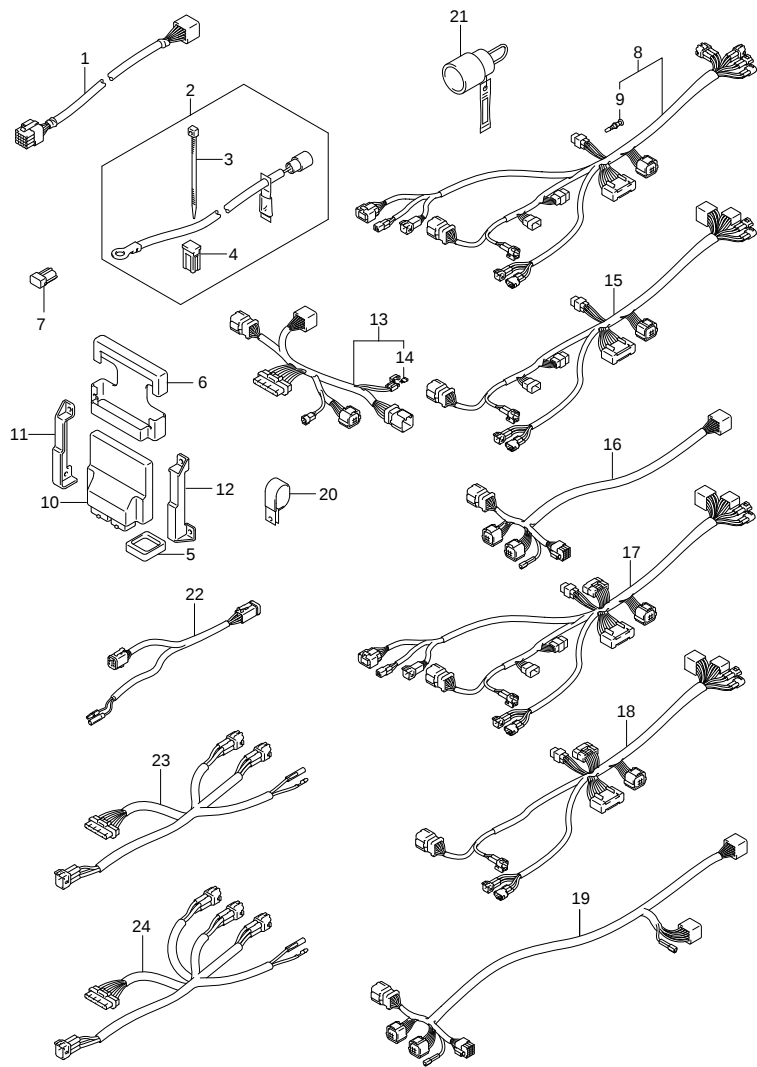


DF300A E01 012_042
OPT:HARNESS

FIG. 42 (1-F-2) OPT:HARNESS

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-98J50	WIRE ASSY, REMOCON EXTENSION	1	
2	33830-98J10	SET, BATTERY ISOLATOR LEAD	1	
3	09407-10404	·CLAMP (L:100)	2	
4	09481-40401	·FUSE (40A)	1	
5	33911-88BL0	CAP, BCM CONNECTOR	1	
6	33925-93J00	CUSHION, BCM	1	
7	33926-98J00	RESISTOR, TERMINAL	2	
8	36623-98J20	HARNESS ASSY, BCM NO.1 FOR SNGL	1	
9	36615-96300	·TERMINAL RESIN	2	
10	36770-98J10	CONTROLLER ASSY, BOAT ELECTRIC	1	
11	36775-98J00	HOLDER, BCM (L)	1	
12	36776-98J00	HOLDER, BCM (R)	1	
13	36622-98J00	HARNESS ASSY, DUAL STATION MAIN	1	
14	09481-10501	·FUSE (10A)	1	
15	36624-98J02	HARNESS ASSY, BCM NO.2 FOR SNGL	1	
16	36621-98J00	HARNESS ASSY, DUAL ENGINE	1	
17	36623-98J30	HARNESS ASSY, BCM NO.1 FOR MULT	1	
18	36624-98J11	HARNESS ASSY, BCM NO.2 FOR MULT	1	
19	36621-98J10	HARNESS ASSY, TRIPLE ENGINE	1	
20	09403-13402	CLAMP	18	
21	36612-98J00	CONNECTOR, COUNTER SELECT	1	
22	36661-98J10	ADAPTER, INTERFACE SINGLE	1	
23	36661-98J20	ADAPTER, INTERFACE DUAL	1	
24	36661-98J30	ADAPTER, INTERFACE TRIPLE	1	

FIG.43

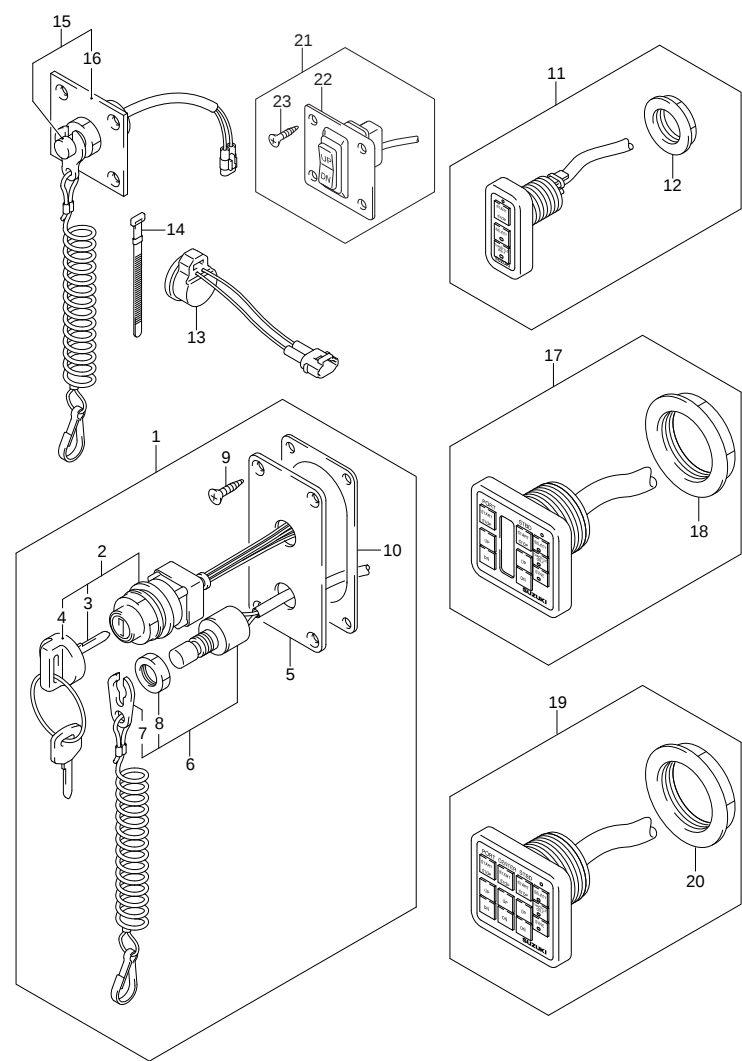


DF300A E01 012_043
OPT:SWITCH

FIG. 43 (1-F-3) OPT:SWITCH

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	37100-98J03	PANEL ASSY, MAIN SW	1	
2	37110-98J00	·SWITCH ASSY, MAIN	1	
3-1	37141-99EA0	··KEY (941)	1	
3-2	37141-99EB0	··KEY (942)	1	
3-3	37141-99E00	··KEY (931)	1	
3-4	37141-99E10	··KEY (932)	1	
3-5	37141-99E20	··KEY (933)	1	
3-6	37141-99E30	··KEY (934)	1	
3-7	37141-99E40	··KEY (935)	1	
3-8	37141-99E50	··KEY (936)	1	
3-9	37141-99E60	··KEY (937)	1	
3-10	37141-99E70	··KEY (938)	1	
3-11	37141-99E80	··KEY (939)	1	
3-12	37141-99E90	··KEY (940)	1	
4	37143-99E00	··CAP, KEY	1	
5	37139-98J00	·PANEL, MAIN SW	1	
6	37820-93J03	·SWITCH ASSY, EMERGENCY STOP	1	
7	37823-92E01	··PLATE ASSY, EMERGENCY SW LOCK	1	
8	37826-92E00	··NUT	1	
9	03122-05165	·SCREW	4	
10	37114-98J00	·SHEET, MAIN SW PANEL	1	
11	37100-98J11	PANEL ASSY, SINGLE	1	
12	37112-98J00	·NUT	1	

DF300A E01 012

FIG.43

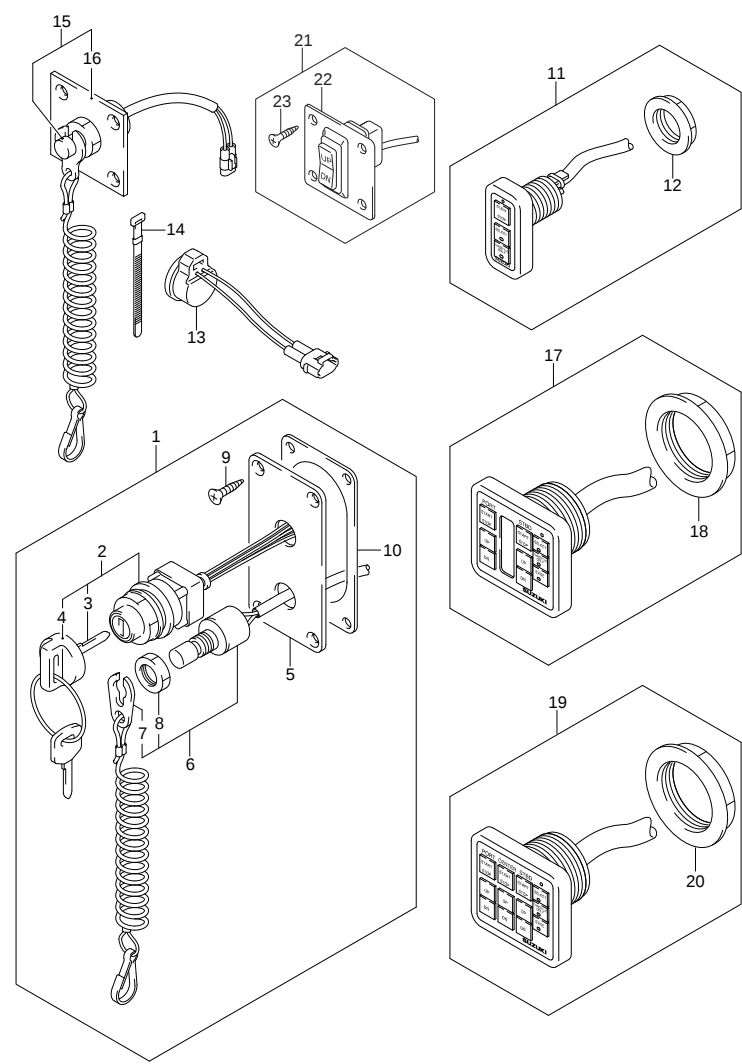


DF300A E01 012_043
OPT:SWITCH

FIG. 43 (1-F-4) OPT:SWITCH

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
13	38500-93J90	BUZZER ASSY, WARNING	1	
14	09407-08401	CLAMP (L:80)	1	
15	37803-93J03	PANEL ASSY, EMERGENCY SW	1	
16	37825-99E00	·PANEL, EMERGENCY STOP SW	1	
17	37100-98J21	PANEL ASSY, DUAL	1	
18	37112-98J10	·NUT	1	
19	37100-98J31	PANEL ASSY, TRIPLE	1	
20	37112-98J10	·NUT	1	
21	37860-87L00	PANEL ASSY, TROLLING CTR SW	1	
22	37862-87L00	·PANEL	1	
23	09131-05004	·SCREW	4	

FIG.44

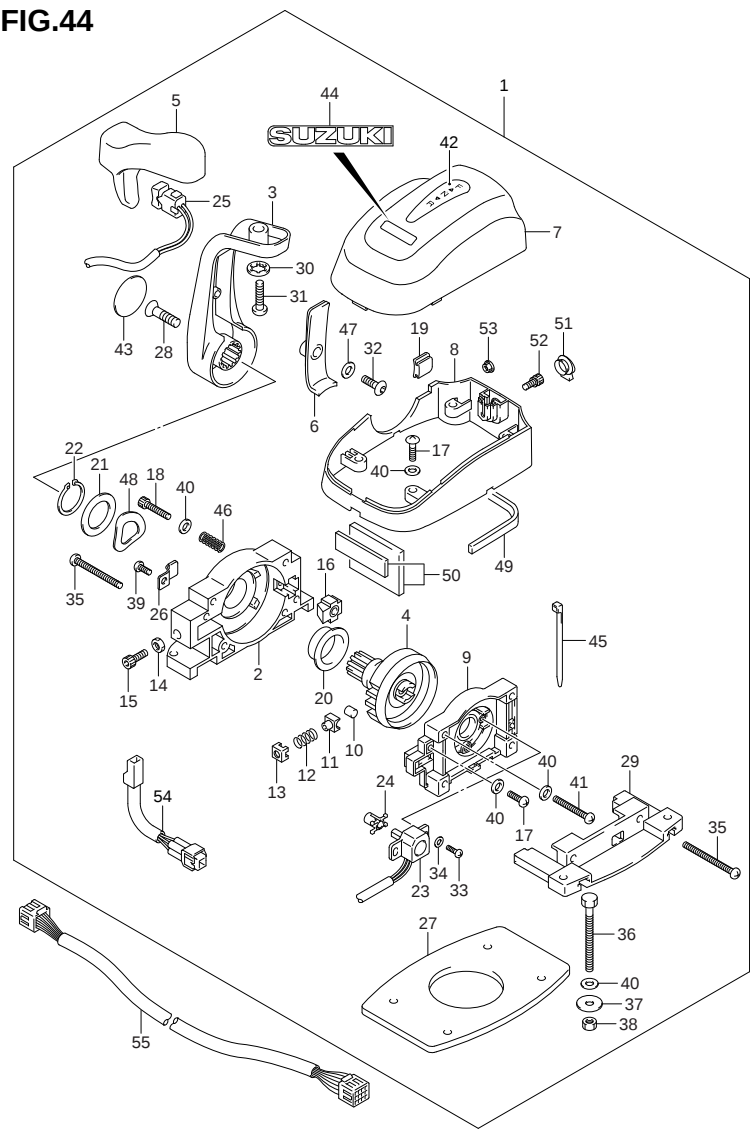


DF300A E01 012_044
OPT:TOP MOUNT SINGLE

FIG. 44 (1-F-5) OPT:TOP MOUNT SINGLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J03	REMOTE CONTROL ASSY	1	
2	67211-98J20	·HOUSING	1	
3	67251-98J00	·LEVER, HANDLE	1	
4	67246-98J10	·SHAFT, DRIVE	1	
5	67261-98J00	·GRIP, NO.1	1	
6	67263-98J00	·COVER, LEVER	1	
7	67212-98J20	·COVER, UPPER	1	
8	67271-98J30	·COVER, BOTTOM	1	
9	67222-98J10	·PANEL ASSY, BACK	1	
10	67236-98J00	·ROOLER, DETENT	1	
11	67235-98J10	·GUIDE, DETENT ROOLER	1	
12	67237-98J30	·SPRING, DETENT	1	
13	67233-98J10	·HOLDER, DETENT SPRING	1	
14	67287-92E00	·NUT (M5)	1	
15	67239-98J00	·SCREW, DETENT ADJUST (5X14)	1	
16	67223-98J00	·PAD, BRAKE	1	
17	67296-98J50	·SCREW (5X18)	6	
18	67296-98JA0	·SCREW, BRAKE ADJUST (5X30)	1	
19	67272-98J10	·GROMMET, COVER	1	
20	67252-98J10	·BUSH, DRIVE SHAFT	1	
21	67288-98J20	·WASHER	1	
22	67292-98J00	·C-RING	1	
23	15980-98J00	·POTENTIOMETER	1	
24	67227-98J10	·LEVER, POTENTIOMETER NO.2	1	
25	37850-98J02	·SWITCH ASSY, PTT	1	
26	67269-98J00	·CLAMP, LEAD	1	
27	67273-98J00	·PACKING	1	
28	67296-98J60	·SCREW (8X30)	1	
29	67274-98J00	·FLANGE, BASE	1	
30	67288-92E20	·WASHER	1	
31	67296-98J90	·SCREW	1	
32	67296-98J80	·SCREW (5X14)	1	
33	67296-94300	·SCREW (4X10)	2	
34	67288-98J00	·WASHER	2	

DF300A E01 012

FIG.44

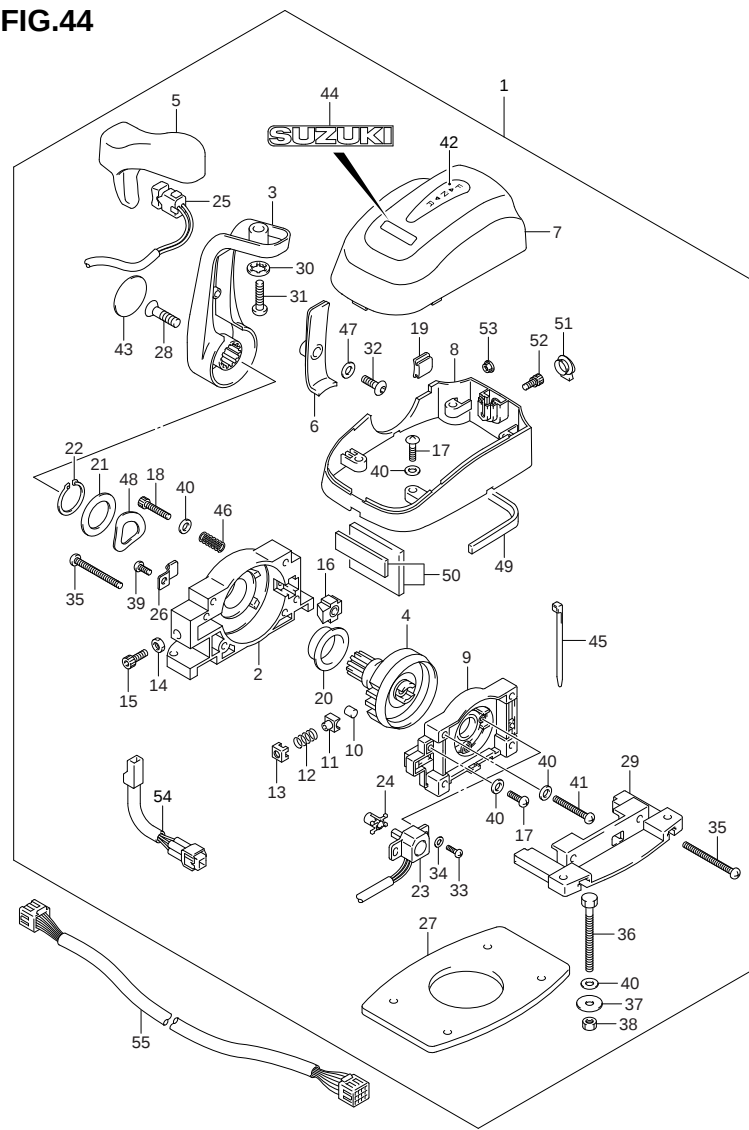


DF300A E01 012_044
OPT:TOP MOUNT SINGLE

FIG. 44 (1-F-6) OPT:TOP MOUNT SINGLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67296-98J20	·SCREW (5X50)	2	
36	67226-98J00	·BOLT (5X50)	4	
37	09160-05024	·WASHER (5.5X16X1.5)	4	
38	67287-92E00	·NUT	4	
39	67296-98J00	·SCREW (5X12)	1	
40	67288-98J40	·WASHER	12	
41	67296-98J10	·SCREW (5X35)	1	
42	67284-98J00	·MARK (F-N-R)	1	
43	68165-98J00	·MARK, LEVER (SUZUKI)	1	
44	68165-98J10	·EMBLEM (SUZUKI)	1	
45	67269-98J30	·BAND	1	
46	67288-98J10	·WASHER, SPRING	8	
47	67288-98J30	·WASHER	1	
48	67228-98J50	·WASHER, WAVE	1	
49	67273-98J10	·PACKING (FRONT)	1	
50	67273-98J30	·PACKING (REAR)	1	
51	67277-98J00	·GROMMET	1	
52	67296-98JF0	·BOLT (5X14)	1	
53	67297-98J00	·NUT	1	
54	36890-98J00	·CONDENSER, ADAPTER HARNESS	1	
55-1	36620-98J30	WIRE ASSY, REMOTE CONTROL	1	L:6500
55-2	36620-98J40	WIRE ASSY, REMOTE CONTROL	1	L:9500

FIG.45

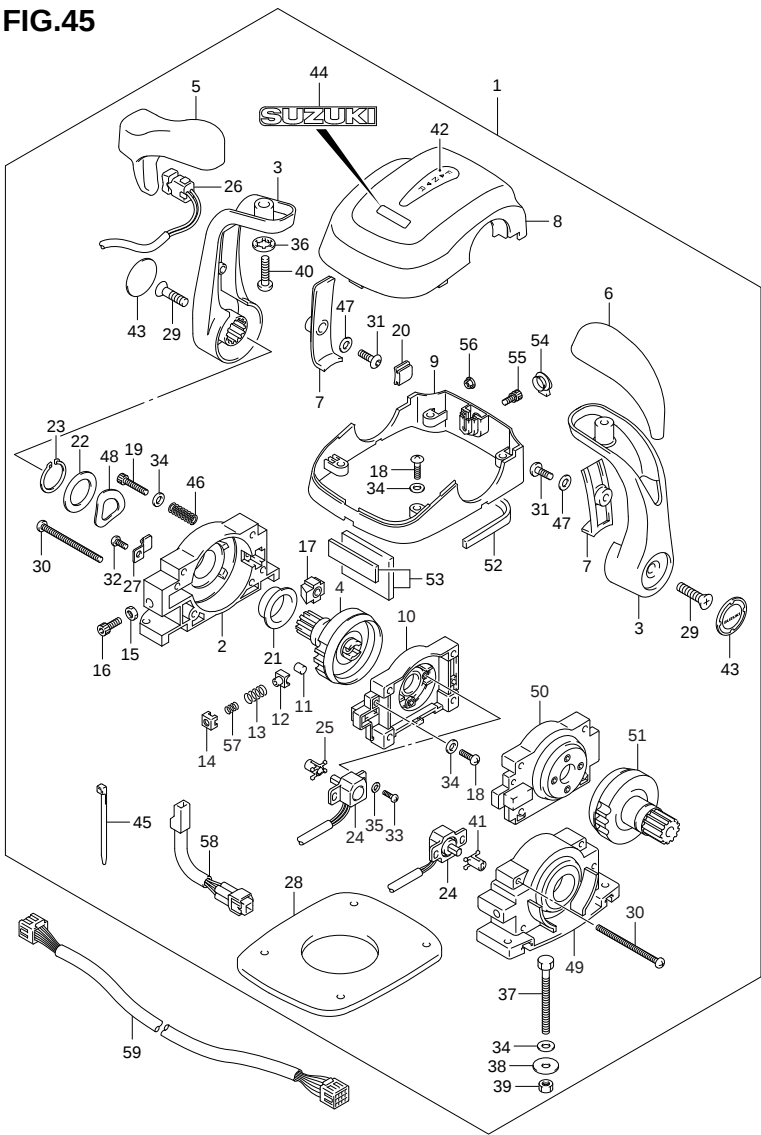


DF300A E01 012_045
OPT:TOP MOUNT DUAL

FIG. 45 (1-F-7) OPT:TOP MOUNT DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J13	REMOTE CONTROL ASSY	1	
2	67211-98J20	·HOUSING (L)	1	
3	67251-98J00	·LEVER, HANDLE	2	
4	67246-98J10	·SHAFT, DRIVE (L)	1	
5	67261-98J00	·GRIP, NO.1	1	
6	67261-98J10	·GRIP, NO.2	1	
7	67263-98J00	·COVER, LEVER	2	
8	67212-98J30	·COVER, UPPER	1	
9	67271-98J40	·COVER, BOTTOM	1	
10	67222-98J10	·PANEL ASSY, BACK (L)	1	
11	67236-98J10	·ROOLER, DETENT	2	
12	67235-98J10	·GUIDE, DETENT ROOLER	2	
13	67237-98J40	·SPRING, DETENT	2	
14	67233-98J10	·HOLDER, DETENT SPRING	2	
15	67287-92E00	·NUT (M5)	2	
16	67239-98J00	·SCREW, DETENT ADJUST (5X14)	2	
17	67223-98J00	·PAD, BRAKE	2	
18	67296-98J50	·SCREW (5X18)	8	
19	67296-98JA0	·SCREW, BRAKE ADJUST (5X30)	2	
20	67272-98J10	·GROMMET, COVER	2	
21	67252-98J10	·BUSH, DRIVE SHAFT	2	
22	67288-98J20	·WASHER	2	
23	67292-98J00	·C-RING	2	
24	15980-98J00	·POTENTIOMETER	2	
25	67227-98J10	·LEVER, POTENTIOMETER NO.2	1	
26	37850-98J02	·SWITCH ASSY, PTT	1	
27	67269-98J00	·CLAMP, LEAD	1	
28	67273-98J20	·PACKING	1	
29	67296-98J60	·SCREW (8X30)	2	
30	67296-98J30	·SCREW (5X65)	4	
31	67296-98J80	·SCREW (5X14)	2	
32	67296-98J00	·SCREW (5X12)	1	
33	67296-94300	·SCREW (4X10)	4	
34	67288-98J40	·WASHER	14	

DF300A E01 012

FIG.45

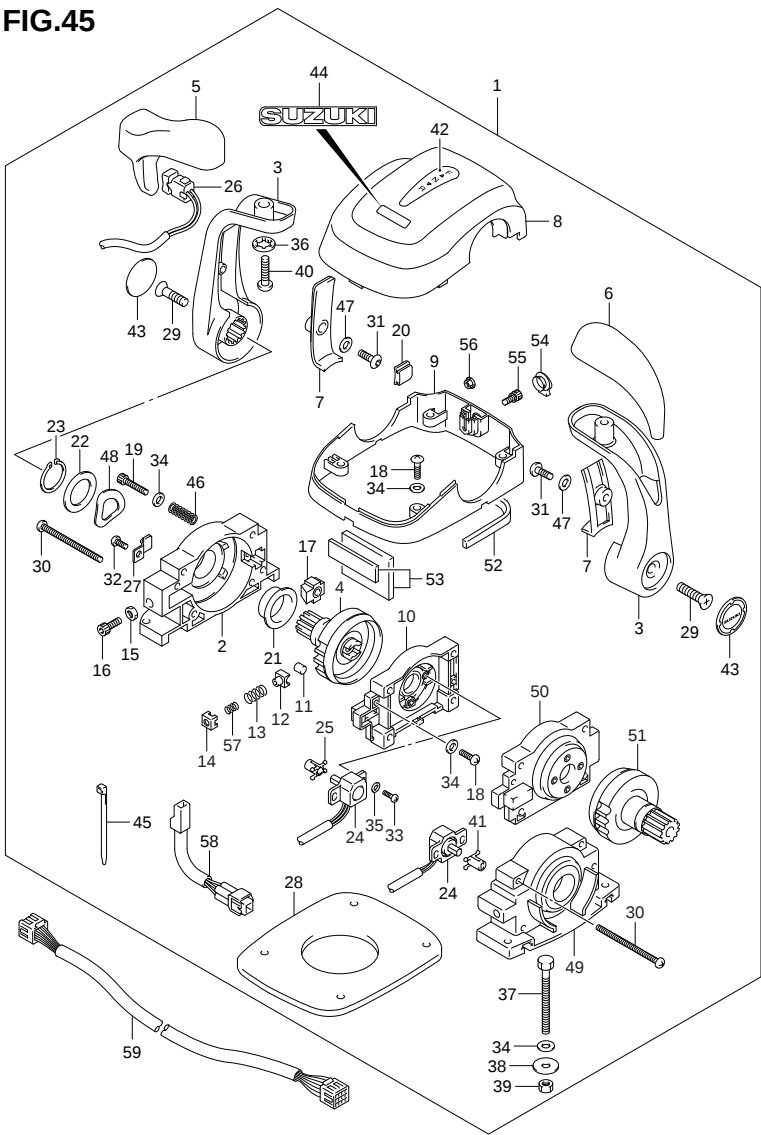


DF300A E01 012_045
OPT:TOP MOUNT DUAL

FIG. 45 (1-F-8) OPT:TOP MOUNT DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67288-98J00	·WASHER	4	
36	67288-92E20	·WASHER	2	
37	67226-98J00	·BOLT (5X50)	4	
38	09160-05024	·WASHER (5.5X16X1.5)	4	
39	67287-92E00	·NUT	4	
40	67296-98J90	·SCREW	2	
41	67227-98J00	·LEVER, POTENTIOMETER NO.1	1	
42	67284-98J00	·MARK (F-N-R)	1	
43	68165-98J00	·MARK, LEVER (SUZUKI)	2	
44	68165-98J10	·EMBLEM (SUZUKI)	1	
45	67269-98J30	·BAND	1	
46	67288-98J10	·WASHER, SPRING	16	
47	67288-98J30	·WASHER	2	
48	67228-98J50	·WASHER, WAVE	2	
49	67211-98J30	·HOUSING (R)	1	
50	67222-98J20	·PANEL ASSY, BACK (R)	1	
51	67246-98J20	·SHAFT, DRIVE (R)	1	
52	67273-98J10	·PACKING (FRONT)	1	
53	67273-98J30	·PACKING (REAR)	1	
54	67277-98J00	·GROMMET	1	
55	67296-98JF0	·BOLT (5X14)	1	
56	67297-98J00	·NUT	1	
57	67237-98J50	·SPRING, DETENT	2	
58	36890-98J00	·CONDENSER, ADAPTER HARNESS	1	
59-1	36620-98J30	WIRE ASSY, REMOTE CONTROL	1	L:6500
59-2	36620-98J40	WIRE ASSY, REMOTE CONTROL	1	L:9500

DF300A E01 012

FIG.46

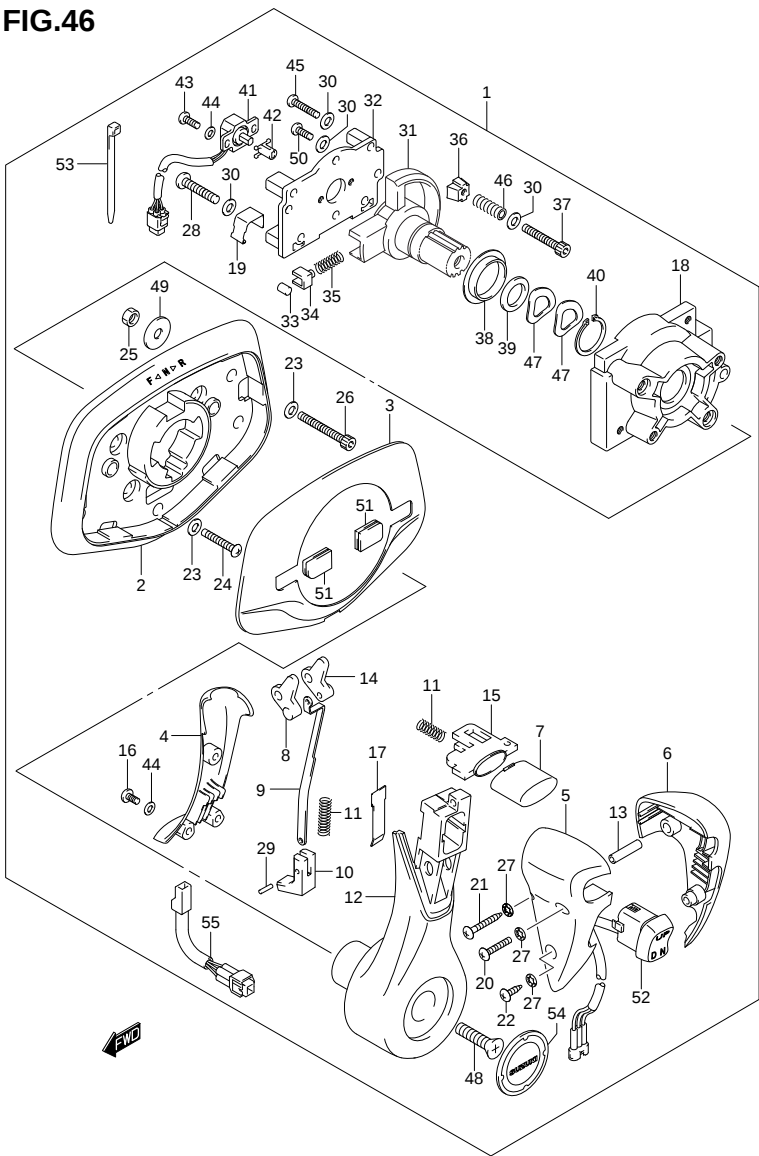


DF300A E01 012_046
OPT: FLUSH MOUNT REMOCON

FIG.46 (1-F-9) OPT: FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J22	REMOCON ASSY, FLUSH MOUNT	1	
2	67271-98J20	COVER, BOTTON BASE	1	
3	67264-98J00	COVER, TOP BASE	1	
4	67263-98J20	COVER, LEVER	1	
5	67261-98J20	GRIP, A	1	
6	67261-98J30	GRIP, B	1	
7	67265-98J00	BUTTON, NEUTRAL LOCK	1	
8	67255-98J00	LINK, NEUTRAL LOCK NO.1	1	
9	67258-98J00	PLATE, JOINT	1	
10	67256-98J00	BLOCK, NEUTRAL LOCK	1	
11	67259-98J00	SPRING	3	
12	67251-98J20	LEVER, HANDLE	1	
13	67294-98J00	SPACER	1	
14	67254-98J00	LINK, NEUTRAL LOCK NO.2	1	
15	67233-98J00	SLIDER, NEUTRAL BUTTON	1	
16	67296-98JA0	SCREW (4X10)	3	
17	67234-98J00	PLATE, LEVER	1	
18	67211-98J20	HOUSING	1	
19	67269-98J20	CLAMP, LEAD	1	
20	67296-98JB0	SCREW (4X30)	1	
21	67227-98J20	SCREW, TAPPING (4X35)	1	
22	67227-98J30	SCREW, TAPPING (4X20)	1	
23	67288-98J50	WASHER, PLANE	8	
24	67296-98JC0	SCREW (6X40)	4	
25	67287-98J00	NUT	4	
26	67226-98J10	BOLT (6X50)	4	
27	67288-98J60	WASHER, INTERNAL TOOTH (M4)	3	
28	67296-98JD0	SCREW (5X40)	1	
29	67238-98J00	PIN	2	
30	67288-98J70	WASHER, PLANE	5	
31	67246-98J00	SHAFT, DRIVE REMOCON	1	
32	67222-98J00	PANEL ASSY, BACK	1	
33	67236-98J00	ROLLER, DETENT	1	
34	67235-98J00	GUIDE, DETENT ROLLER	1	

FIG.46

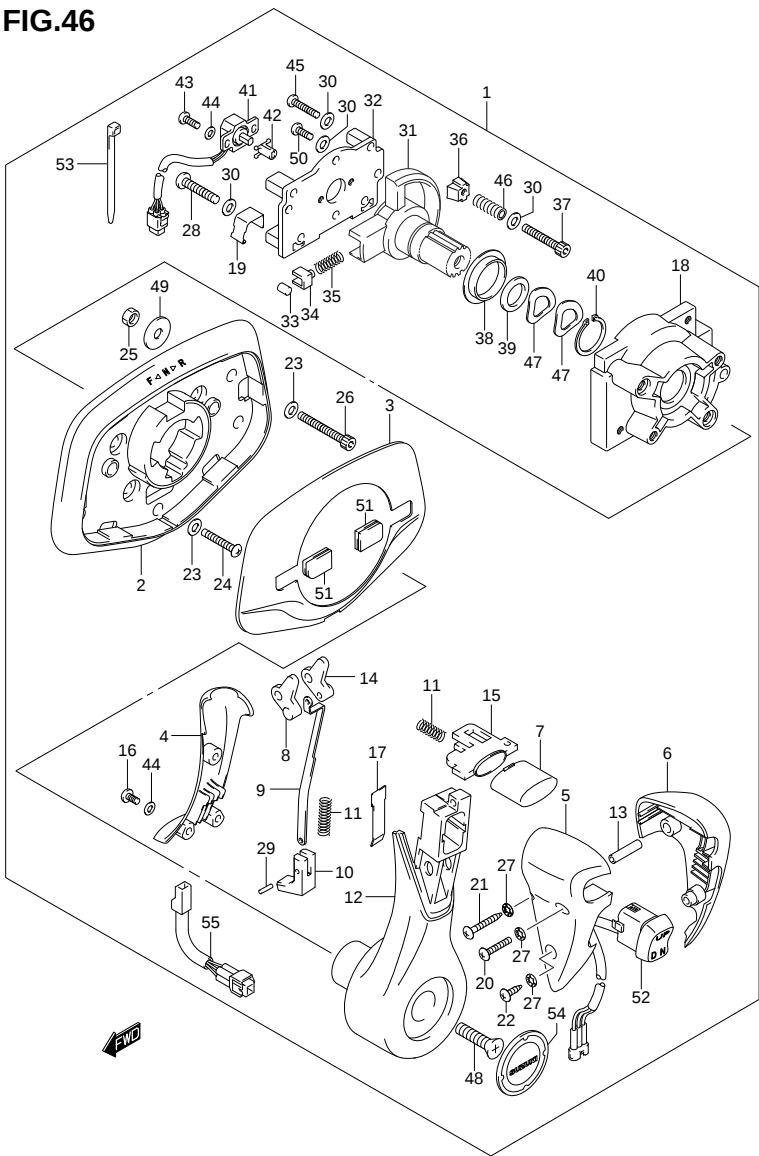

DF300A E01 012_046
OPT: FLUSH MOUNT REMOCON

FIG.46 (1-F-10) OPT: FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67237-98J00	·SPRING, DETENT	1	
36	67223-98J00	·PAD, BRAKE	1	
37	67296-98JE0	·SCREW, ADJUST (5X35)	1	
38	67252-98J00	·BUSH, DRIVE	1	
39	67288-98J20	·WASHER, PLANE	1	
40	67292-98J00	·C RING	1	
41	15980-98J00	·POTENTIOMETER	1	
42	67227-98J10	·LEVER, POTENTIOMETER NO.2	1	
43	67296-94300	·SCREW (4X10)	2	
44	67288-98J00	·WASHER, PLANE	5	
45	67296-98J10	·SCREW (5X35)	1	
46	67288-98J10	·WASHER, SPRING	8	
47	67228-98J50	·WASHER, WAVE	2	
48	67296-98J60	·SCREW (8X30)	1	
49	09160-06104	·WASHER (6.5X24X2)	4	
50	67296-98J50	·SCREW (5X18)	2	
51	67272-98J00	·GROMMET	2	
52	37850-98J02	·SWITCH ASSY, PTT	1	
53	67269-98J10	·BAND	1	
54	68165-98J00	·MARK, LEVER (SUZUKI)	1	
55	36890-98J00	·CONDENSER, ADAPTER HARNESS	1	

FIG.47

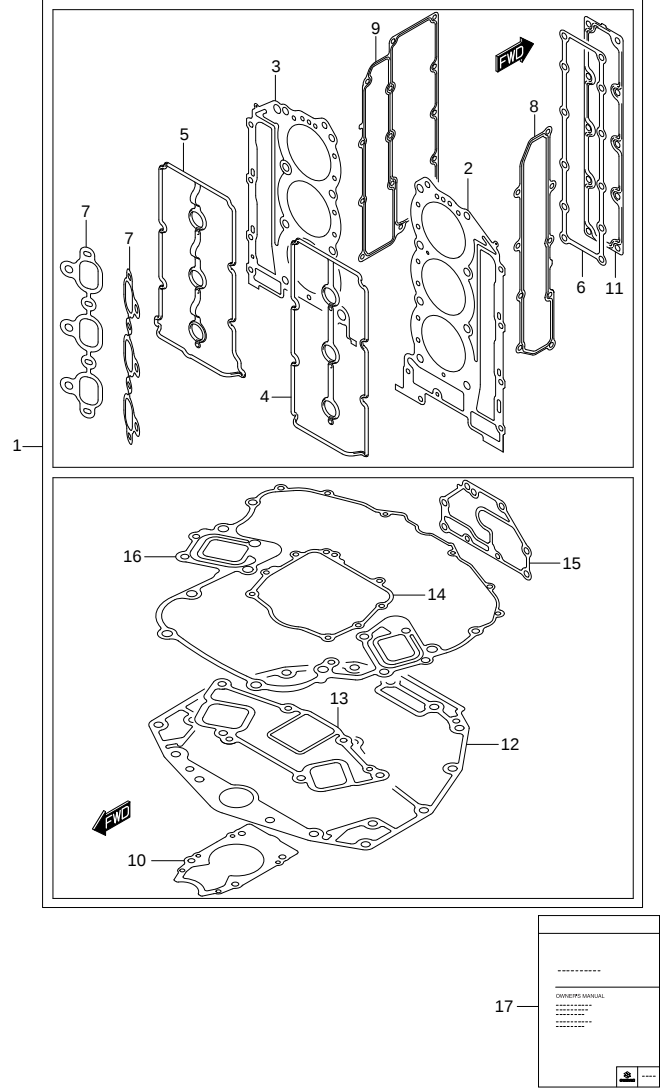


FIG.47 (1-F-11) OPT:GASKET SET (DF300A E1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11410-98830	GASKET SET	1	
2	11141-98J10	·GASKET, CYL HEAD STBD	1	
3	11142-98J10	·GASKET, CYL HEAD PORT	1	
4	11179-93J00	·GASKET, CYL HEAD COVER STBD	1	
5	11189-93J00	·GASKET, CYL HEAD COVER PORT	1	
6	11332-93J00	·GASKET, CRANKCASE WTR JKT COV	1	
7	13119-98J00	·GASKET, INTAKE MANIFOLD	2	
8	14151-93J00	·GASKET, EXH COVER STBD	1	
9	14152-93J00	·GASKET, EXH COVER PORT	1	
10	17472-98J00	·GASKET, PUMP CASE PANEL	1	
11	11272-93J00	·GASKET, CYL BLOCK PLATE	1	
12	11489-93J00	·GASKET, OIL PAN	1	
13	14212-93J00	·GASKET, EXHAUST TUBE	1	
14	51123-93J00	·GASKET, MOUNT OIL SEAL COVER	1	
15	51142-93J00	·GASKET, ENGINE HOLDER COVER	1	
16	51211-93J00	·GASKET, ENGINE HOLDER	1	
17-1	99011-98J10-059	MANUAL, OWNER'S (EN/FR/GE/IT/DU/SW)	1	
17-2	99011-98J10-054	MANUAL, OWNER'S (ENGLISH/VIETNAMESE)	1	

FIG.48

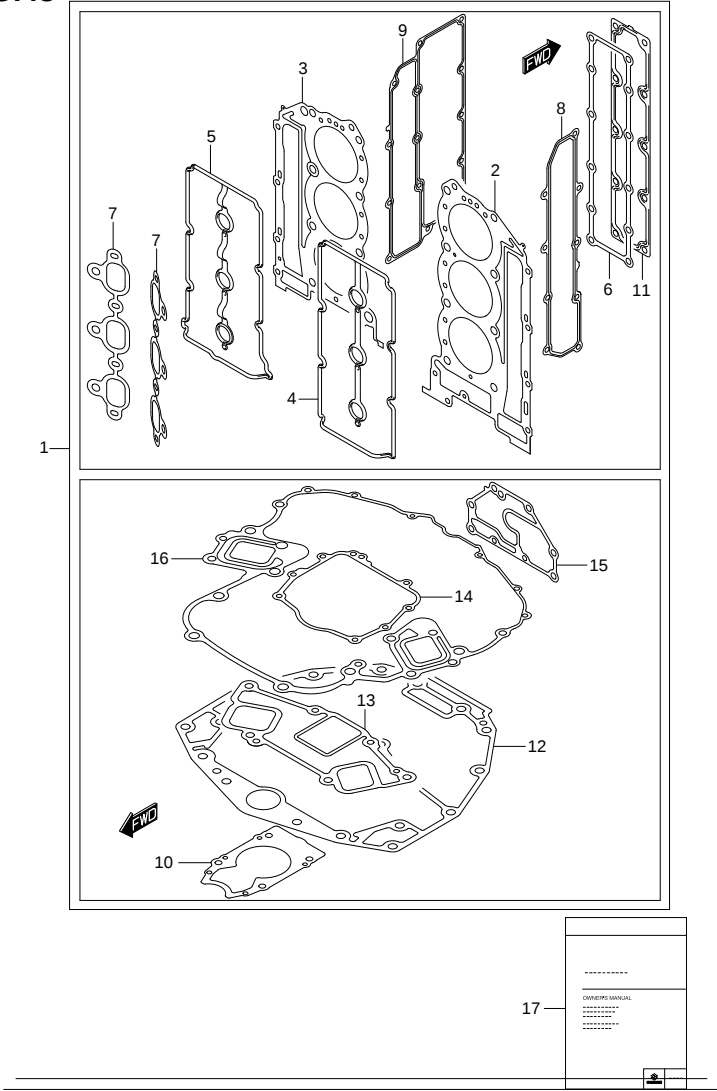


FIG. 48 (1-F-12) OPT:GASKET SET (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	11410-98830	GASKET SET	1	
2	11141-98J10	·GASKET, CYL HEAD STBD	1	
3	11142-98J10	·GASKET, CYL HEAD PORT	1	
4	11179-93J00	·GASKET, CYL HEAD COVER STBD	1	
5	11189-93J00	·GASKET, CYL HEAD COVER PORT	1	
6	11332-93J00	·GASKET, CRANKCASE WTR JKT COV	1	
7	13119-98J00	·GASKET, INTAKE MANIFOLD	2	
8	14151-93J00	·GASKET, EXH COVER STBD	1	
9	14152-93J00	·GASKET, EXH COVER PORT	1	
10	17472-98J00	·GASKET, PUMP CASE PANEL	1	
11	11272-93J00	·GASKET, CYL BLOCK PLATE	1	
12	11489-93J00	·GASKET, OIL PAN	1	
13	14212-93J00	·GASKET, EXHAUST TUBE	1	
14	51123-93J00	·GASKET, MOUNT OIL SEAL COVER	1	
15	51142-93J00	·GASKET, ENGINE HOLDER COVER	1	
16	51211-93J00	·GASKET, ENGINE HOLDER	1	
17	99011-98J10-059	MANUAL, OWNER'S (EN/FR/GE/IT/DU/SW)	1	

FIG.49

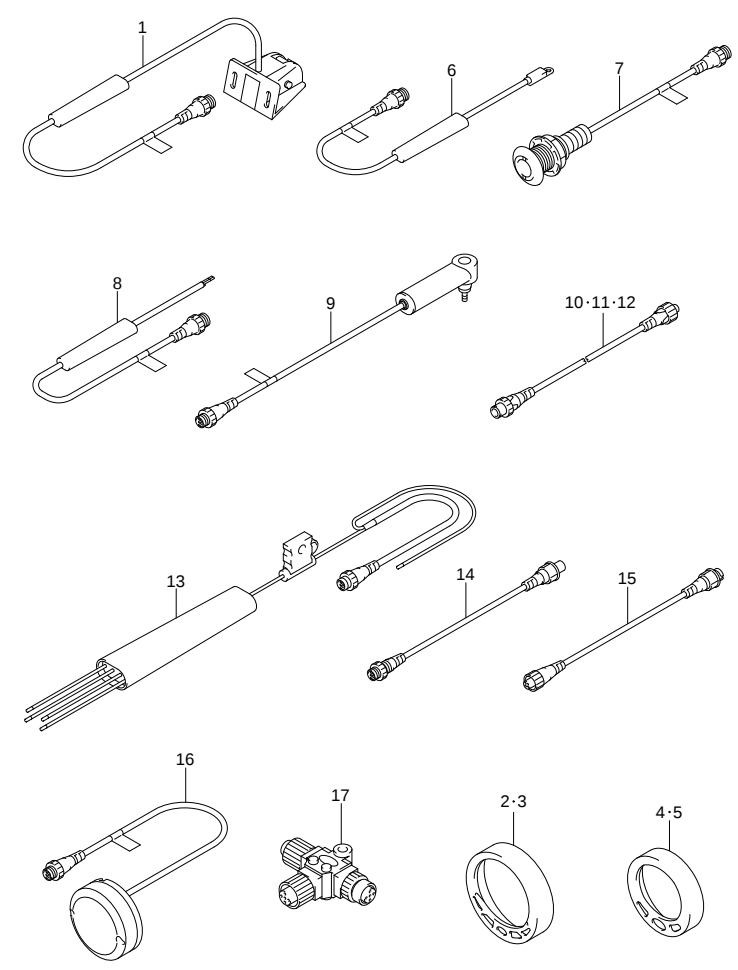


FIG. 49 (1-F-13) OPT:LOWRANCE GAUGE

REF NO.	PART NO.	DESCRIPTION	Q' TY	REMARKS
1	34190-88L00	SENSOR ASSY,PAD WHEEL	1	
2	34193-88L00	BEZEL, 4 IN CHR	1	
3	34193-88L20	BEZEL, 4 IN WHITE	1	
4	34193-88L40	BEZEL, 2 IN CHR	1	
5	34193-88L60	BEZEL, 2 IN WHITE	1	
6	34455-88L00	SENSOR ASSY, WATER TEMP	1	
7	34455-88L10	SENSOR ASSY, WATER TEMP	1	
8	34810-88L00	SENSOR ASSY, FLUID LEVEL	1	
9	34960-88L00	SENSOR ASSY, WATER PRESSURE	1	
10	36662-88L10	WIRE, 2 EXTENSION	1	
11	36662-88L20	WIRE, 6 EXTENSION	1	
12	36662-88L30	WIRE, 15 EXTENSION	1	
13	36663-88L10	HARNESS ASSY, NETWORK POWER	1	
14	36666-88L00	WIRE, ADAPTER TO N NETWORK	1	
15	36666-88L10	WIRE, ADAPTER TO L NETWORK	1	
16	39950-88L00	MODULE ASSY, GPS RECEIVER	1	
17	36664-88L00	CONNECTOR, BRANCH	1	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11291-98J00	1-37	12705-98J10	7-2
		11293-98J00	2-1	12721-98J10	7-3
		11301-98J30	2-3	12729-98J20	7-4
		11330-93J01	2-22	12730-98J00	6-1
		11332-93J00	2-23	12734-93J00	6-5
11101-98J02	1-1		47-6	12740-93J00	7-5
11103-98J02	1-5		48-6	12748-93J00	7-6
11112-93J00	2-4	11382-93J00	1-31	12749-93J00	7-8
11115-93J10-001	1-36	11390-98J00	2-19	12753-93J00	7-7
11116-93J01	1-9	11410-98830	47-1	12761-93J00	6-8
11117-93J10	2-5		48-1	12762-93J00	6-9
11117-98J10	2-6	11435-93J00	19-14	12770-93J00	6-10
11119-93J00	2-7	11489-93J00	19-6	12771-93J00	6-14
11128-90J00	1-2		47-12	12772-93J00	6-16
	1-6		48-12	12775-93J00	6-15
11141-98J10	1-10	11501-93J02-0EP	19-7	12778-93J00	6-11
	47-2	11510-98J02	3-1	12810-93J00	6-18
	48-2		4-1	12812-90J00	6-20
11142-98J10	1-11	11514-98J00	3-4	12813-73G00	6-19
	47-3		4-4	12831-93J01	6-22
	48-3	11515-93J00	3-11	12832-93J00	6-23
11170-93J01	1-21		4-11	12833-93J00	6-24
11173-93J00	1-23	11517-98J00	3-10	12891-93J00	7-14
11174-98J00	3-2		4-10	12892-93J00-218	7-15-1
	4-2	11541-93J00-0EP	19-9	12892-93J00-220	7-15-2
11176-98J00	3-3	11591-93J10	19-8	12892-93J00-223	7-15-3
	4-3	12100-98810-025	5-6-2	12892-93J00-225	7-15-4
11179-93J00	1-25	12100-98810-0A0	5-6-1	12892-93J00-228	7-15-5
	47-4	12100-98J00-050	5-14	12892-93J00-230	7-15-6
	48-4	12111-98J00-0B0	5-1	12892-93J00-233	7-15-7
11180-98J01	1-22	12140-98J00	5-2	12892-93J00-235	7-15-8
11183-93J00	1-24	12140-98J00-050	5-15	12892-93J00-238	7-15-9
11189-93J00	1-26	12151-02F00	5-3	12892-93J00-240	7-15-10
	47-5	12160-98J00	5-5	12892-93J00-243	7-15-11
	48-5	12220-98J00	5-7	12892-93J00-245	7-15-12
11193-98J00	17-1	12242-98J00	5-10	12892-93J00-248	7-15-13
11196-93J00	16-1	12300-98810-0AA	5-8-6	12892-93J00-250	7-15-14
11197-93J00	16-2	12300-98810-0BA	5-8-7	12892-93J00-253	7-15-15
11198-58B00	17-2	12300-98810-0CA	5-8-8	12892-93J00-255	7-15-16
11217-85FA0	2-8	12300-98810-0DA	5-8-9	12892-93J00-258	7-15-17
11218-98J00	26-20	12300-98810-0EA	5-8-10	12892-93J00-260	7-15-18
11219-98J00	26-21	12300-98821	5-9-1	12892-93J00-263	7-15-19
11261-93J00	1-13	12300-98821-012	5-9-2	12892-93J00-265	7-15-20
	9-5	12340-98J00-0A0	5-8-1	12892-93J00-268	7-15-21
11261-93J00-0EP	19-1	12340-98J00-0B0	5-8-2	12892-93J00-270	7-15-22
11270-93J00	16-3	12340-98J00-0C0	5-8-3	12892-93J00-273	7-15-23
11272-93J00	16-4	12340-98J00-0D0	5-8-4	12892-93J00-275	7-15-24
	47-11	12340-98J00-0E0	5-8-5	12892-93J00-278	7-15-25
	48-11	12632-93J11	18-1	12892-93J00-280	7-15-26
11291-93J00	1-34	12701-98J10	7-1	12892-93J00-283	7-15-27

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
12892-93J00-285	7-15-28		47-9	15643-93J00	10-47
12892-93J00-288	7-15-29		48-9		11-47
12892-93J00-290	7-15-30	14154-93J01	19-10	15644-93J00	10-7
12892-93J00-293	7-15-31	14211-98J00	19-11		11-7
12892-93J00-295	7-15-32	14212-93J00	19-12	15645-93J00	10-52
12892-93J00-298	7-15-33		47-13	15645-93J10	11-52
12892-93J00-300	7-15-34		48-13	15646-93J00	10-9
12911-98J00	7-16	15100-94900	10-1		11-9
12915-93J10	7-17		11-1	15647-93J00	10-25
12921-93J10	7-18	15200-98J00	10-24	15647-93J10	11-25
12931-78G00	7-19	15200-98J10	11-24	15650-93J00	10-23
12932-24400	7-20	15410-93J10	10-2		11-23
12933-69G10	7-21		11-2	15654-99E00	10-28
13100-98J01	17-3	15411-93J10	10-3		11-28
13110-98J10	8-1		11-3	15671-93J00	10-64
13119-98J00	8-2	15412-93J10	10-5		11-64
	47-7		11-5	15672-93J00	10-41
	48-7	15413-93J10	10-6		11-41
13134-98J00	17-15		11-6	15673-98J00	10-45
13137-98J00	17-4	15415-93J10	10-4		11-45
13139-98J00	17-16		11-4	15674-93J00	10-51
13140-98J01	17-5	15440-93J00	10-11		11-51
13147-98J00	17-7	15440-93J10	11-11	15675-93J00	10-35
13180-98J00	17-8	15600-98J00	10-20		11-35
13310-98J00	17-17	15600-98J10	11-20	15680-93J21	12-19
13315-98J00	17-19	15626-93J00	10-22		13-19
13343-98J10	17-18	15626-93J10	11-22	15681-93J01	12-1
13370-93J00	10-21	15627-93J00	10-33		13-1
	11-21		11-33	15683-87J00	10-55
13421-98J00	17-20	15628-99E00	10-32		11-55
13575-40F00	29-2		11-32	15684-98J00	12-22
13580-98J02	29-1	15629-99E10	10-54		13-22
13614-93J00	11-29		11-54	15685-93J00	10-40
13650-52G00	26-1	15631-99E10	11-30		11-40
13655-87J00	26-2	15632-93J20	10-44	15686-93J00	10-39
13710-98J00	3-5		11-44		11-39
	4-5	15633-93J20	10-8	15710-96J00	12-2
13811-98J00	3-6		11-8		13-2
	4-6	15634-93J20	10-49	15717-16G00	12-3
13813-98J00	17-21		11-49		13-3
13841-98J10	3-12	15635-93J20	10-43	15735-58B00	12-4
	4-12		11-43		13-4
13851-98J10	3-13	15636-98J20	10-38	15751-93J00	12-5
	4-13		11-38		13-5
14140-98J01	9-2	15637-93J20	10-53	15756-93J01	12-6
14141-93J01	9-1		11-53		13-6
14151-93J00	9-3	15641-90J00	10-26	15760-93J00	10-31
	47-8	15641-90J10	11-26		11-31
	48-8	15642-90J00	10-27	15762-90J00	11-17
14152-93J00	9-4		11-27	15762-93J00	12-7

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15762-93J10	13-7	17472-98J00	14-6		11-69
15770-93J00	10-16		14-24	18498-87JC0	10-58
	11-16		15-6		10-59
15773-90J00	10-13		15-24		11-58
	11-13		47-10		11-59
15830-77EA0	12-8		48-10	18498-93J00	12-10
15830-90J00	11-19	17473-98J00	14-7		13-10
15830-93J00	10-14		14-25	18590-68H00	17-9
	11-14		15-7	19115-98J10	20-29
15831-93J00	12-9		15-25		
	13-9	17561-93J03	14-8-1		
15832-93J00	13-8		15-8-1		
15980-98J00	44-23	17561-93J13	14-8-2	20000	
	45-24		15-8-2		
	46-41	17562-93J00	14-9		
16113-93J10	18-2		15-9	21110-98J00	20-1
16400-93J02	18-3	17563-93J00	14-10	21131-93J00	20-2
16430-93J00	2-25		15-10	21151-93J00	20-3
16431-93J00	2-26	17564-93J00	14-11	21210-98J00	20-5
16433-93J00	2-27		15-11	21230-98J00	20-6
16510-96J00	2-30	17581-93J00	16-5	21241-98J00	20-24
16519-93J00	34-2	17582-93J00	16-6	22511-99011	31-1
16520-93J00	18-4	17611-90J00-0EP	16-7	23111-93J00	20-7
16550-93J00	7-11	17612-93J00	14-12	23115-98J00	20-8
16555-93J00	7-12		15-12	25112-93L00	21-1-1
16700-93J00	2-14	17631-93L00	14-13	25112-93L10	21-1-2
16760-93J00	18-5		15-13	25113-93L00	21-11
16781-93J00	18-6	17632-93L00	14-14	25130-93L00	21-2
16782-93J00	18-7		15-14	25141-93L00-0EP	21-5
16783-93J01	18-8	17637-93L00	21-16	25215-93L00	21-12
16910-93J00	19-25	17638-93L00	21-17	25222-90J00	21-6
16930-93J00	19-26	17660-99E01	16-8	25223-94400	20-9
17400-98J01	14-20	17670-90J10	16-9-2	25232-90J00	21-3
	15-20	17670-90J20	16-9-1	25321-93L00	21-8
17410-93J00	14-1	17681-93J00	16-10	25700-93L00	36-38
	15-1	17711-90J00	16-11	29103-93J00	19-23
17413-93J02	14-2	17712-93J00	16-12		26-3
17413-93J12	15-2	17713-98J00	16-36		35-25
17416-93J00	14-3	17913-93J00	34-3	29103-93J20	37-35
	14-21		37-23	29103-93J30	19-3
	15-3	17914-93J00	34-4		37-36
	15-21		37-24	29116-93J00	14-15
17461-93J00	14-4	17915-98J01	16-38		15-15
	14-22	17917-87L00	28-29		19-13
	15-4		41-7		21-9
	15-22	18117-52G10	10-68	29125-93J00	29-16
17471-98J01	14-5		11-68	29141-93J20	32-25
	14-23	18118-93J00	17-23		36-10
	15-23	18213-98J00	26-18	29404-93J10	19-24
17471-98J11	15-5	18417-93J00	10-69		26-10

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	35-24	33810-93J01	27-1	36623-98J20	42-8
	36-35		28-1	36623-98J30	42-17
		33830-98J10	42-2	36624-98J02	42-15
		33911-88BL0	42-5	36624-98J11	42-18
		33920-98JA0	29-21	36625-98J10	27-29
		33925-93J00	42-6		28-30
		33925-98J00	29-22	36645-93J00	23-21
		33926-98J00	42-7	36661-98J10	42-22
		34011-88L01	41-8	36661-98J20	42-23
		34011-88L11	41-14	36661-98J30	42-24
		34120-98J01	41-1	36662-88L00	41-17
		34190-88L00	49-1	36662-88L10	49-10
		34190-95500	41-2	36662-88L20	49-11
		34193-88L00	49-2	36662-88L30	49-12
		34193-88L20	49-3	36663-88L00	41-11
		34193-88L40	49-4		41-18
		34193-88L60	49-5	36663-88L10	49-13
		34200-88L01	41-9	36664-88L00	49-17
		34455-88L00	49-6	36665-88L00	41-12
		34455-88L10	49-7		41-19
		34800-88L01	41-15	36665-88L10	41-13
		34810-88L00	49-8		41-20
		34830-87J20	26-4	36666-88L00	49-14
		34830-98J00	26-22	36666-88L10	49-15
		34840-98J02	26-6	36668-88L00	41-21
		34841-88L00	26-12	36721-96J00	27-6
		34845-88L00	26-13		28-6
		34922-88L00	41-10	36737-96J00	27-7
			41-16		28-7
		34960-88L00	49-9	36738-98J00	27-8
		36610-98J40	27-3		28-8
			28-3	36770-98J10	42-10
			42-21	36775-98J00	42-11
			42-9	36776-98J00	42-12
			27-18	36890-98J00	44-54
			28-18		45-58
			16-41	36894-87D00	46-55
			27-19		30-24
			28-19		31-2
			27-20		32-31
			28-20		35-11
			44-55-1	36895-87D01	32-32
			45-59-1		32-33
			44-55-2	37100-98J03	43-1
			45-59-2	37100-98J11	43-11
			42-1	37100-98J21	43-17
			24-9	37100-98J31	43-19
			24-10	37110-98J00	43-2
			25-11	37112-98J00	43-12
			42-13	37112-98J10	43-18

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.		
	43-20	40000		48691-93J00	32-7	50000			9-6	58200-96J10	36-27-10	4-21	
37114-98J00	43-10			48862-87J10	32-14				19-2-1	58200-96J20	36-27-11	61610-98J00	38-16
37139-98J00	43-5			48864-93J00	32-15				21-18	58200-96J30	36-27-12	61610-98J30	38-17
37141-99E00	43-3-3							55321-87J10	19-2-2	58200-96J40	36-27-13	61610-98J40	38-18
37141-99E10	43-3-4							55321-93J00	35-26-1	58200-96J50	36-27-14	61614-98J00	38-20
37141-99E20	43-3-5	41111-93J14-0EP	30-1	51111-93J03-0EP	34-1		35-26-2	58200-96JA0	36-27-27	61619-98J00	38-24		
37141-99E30	43-3-6	41117-93J01	30-3			55321-94910	36-17	58200-96JB0	36-27-28	61621-98J01	38-21		
37141-99E40	43-3-7	41121-93J06-0EP	30-2			55332-98J00	30-22	58200-96JCO	36-27-29	61624-98J10	38-22		
37141-99E50	43-3-8	41122-93J01	30-4			55332-98J00	36-19	58200-96JD0	36-27-30	61625-98J10	38-23		
37141-99E60	43-3-9	41130-93J12	30-6			55333-98J00	36-20	58200-96JE0	36-27-31	61630-98J00	37-26		
37141-99E70	43-3-10	41135-93J11	30-7	51116-93J00	34-5	56120-93L00-0EP	22-25	58200-96JF0	36-27-32	61633-98J10-0EP	37-32		
37141-99E80	43-3-11	41153-93J00	30-9	51122-93J02	34-10	56122-93L00	22-38	58300-93J00	36-27-15	61634-98J10-0EP	37-33		
37141-99E90	43-3-12	41155-93J02	30-14		34-10	56124-93L00	22-26	58300-93J10	36-27-16	61635-98J00	37-39		
37141-99EA0	43-3-1	41220-93J11	31-13		34-38	56126-93L00	22-39	58300-93J20	36-27-17	61636-98J00	37-31		
37141-99EB0	43-3-2	41224-95E01	31-15	51123-93J00	34-11	56127-93L00	22-40	58300-93J30	36-27-18	61643-98J00	37-40		
37143-99E00	43-4	41230-96J00	31-16		47-14	56128-93L00	22-41	58300-93J40	36-27-19	61645-98J00-0EP	37-34		
37721-93J00	29-7	41233-95E10	31-17		48-14	56129-93L00	22-42	58300-93JA0	36-27-33	61658-98J00	37-41		
37722-93J11	29-14	41234-93J11	31-14	51124-93J00	34-39	56130-93J01	22-31	58300-93JB0	36-27-34	61811-98J10-0EP	37-6		
37725-93J11	29-10	43111-93J23-0EP	31-3	51125-93J00	34-40	56141-93L00	21-15	58300-93JCO	36-27-35	61812-98J00	37-16		
37729-98J00	29-3	43114-93J00	31-4	51140-98J00-0EP	34-15	57110-93L10	22-1-1	58300-93JD0	36-27-36	61814-98J00	37-17		
37803-93J03	43-15	43211-93J00	31-5	51142-93J00	34-16	57110-93L20	22-1-2	61112-98J00	37-25	61817-93J00	37-10		
37820-93J03	43-6	43711-97E00	31-6		47-15	57130-87D10	35-4	61124-98J00	37-43	61821-98J01-0EP	37-7		
37820-99E01	26-7	43750-93J02-0EP	31-7		48-15	57133-93L00	22-2	61131-93J01-0EP	37-1	61827-93J02	37-12		
37823-92E01	43-7	45421-87D02	30-17	51151-93J00	34-18	57134-93J00	22-3	61134-93J20	37-8	61831-98J02-0EP	37-18		
37825-99E00	43-16	48121-93J12	32-17	51152-93J00	34-19	57300-93L00	22-6	61137-93J00	37-3	61832-98J00	37-15		
37826-92E00	43-8	48125-93J00	32-18	51211-93J00	34-6	57610-93L00	22-17	61141-93J01-0EP	37-2	63632-98J20	37-27		
37850-98J02	44-25	48126-93J00	32-19		47-16	57617-93L00	22-22	61155-93J20	34-7	63632-98J30	37-28		
	45-26	48128-93J10	32-22		48-16	57621-93L00	22-18	61400-98Y50-0EP	38-1	65700-93J01	39-4		
	46-52	48140-93J01	30-19	52111-98J00-0EP	35-1	57622-93L00	22-34	61422-98J12	38-31	65770-93J10	39-5		
37850-99E04	29-11	48144-93J00	30-20	52131-93J00-0EP	35-7	57630-92E00	36-37	61431-98J03-0EP	38-2		40-4		
37860-87L00	43-21	48145-93J00	30-23	54121-98J00	34-30	57631-93L00	22-20	61432-98J01	38-3	67200-98J03	44-1		
37862-87L00	43-22	48311-96J00	32-23	54123-93J02	34-22	57632-93L00	36-29	61433-98J01	38-4	67200-98J13	45-1		
38100-93J03	33-1	48320-93J00	32-20	54130-93J01	34-23	57633-87D30	36-30	61434-98J02	38-5	67200-98J22	46-1		
38410-93J12	29-17	48321-93J00	32-24	54137-93J02	34-27	58105-93J10	36-28	61435-98J12	38-32	67211-98J20	44-2		
38415-93J00	29-18	48400-98J01	32-8	54140-98J00	34-31	58200-93L00	36-27-1	61436-98J00	17-6		45-2		
38500-93J90	43-13	48405-93J00	32-9	54150-98J00	35-13	58200-93L10	36-27-2	61439-98J00	38-6		46-18		
38860-76F01	27-10	48500-98J02	32-1	54160-98J00	35-14	58200-93L20	36-27-3	61439-98J10	38-7	67211-98J30	45-49		
	27-11	48571-93J00	32-30	54165-98J00	35-22	58200-93L30	36-27-4	61439-98J21	38-8	67212-98J20	44-7		
	28-10	48572-87J10	32-12	54211-93J00	35-19	58200-93L40	36-27-5	61443-93J32	38-28	67212-98J30	45-8		
	28-11	48573-93J00	32-21	54221-93J00	35-20	58200-93L50	36-27-6	61446-93J32	38-30	67222-98J00	46-32		
	29-28	48582-95E01	32-2	55110-93L00-0EP	36-1	58200-93L60	36-27-7	61453-93J32	38-29	67222-98J10	44-9		
	29-29	48583-95E00	32-16	55118-93L00	36-2	58200-93L70	36-27-8	61458-99E40	38-33		45-10		
38890-98J00	29-23	48585-95E00	32-13	55122-93L00	21-14	58200-93LA0	36-27-20	61471-98J00	38-34	67222-98J20	45-50		
38892-98J00	29-24		33-12	55125-93L00	36-13	58200-93LB0	36-27-21	61472-93E32	4-18	67223-98J00	44-16		
38895-98J00	29-25	48605-93J00	32-3	55127-87D00	36-21	58200-93LC0	36-27-22	61472-93E40	3-18		45-17		
38915-90J00	29-30	48610-93J01	32-4		41-4	58200-93LD0	36-27-23	61473-98J00	38-35		46-36		
39950-88L00	49-16	48627-93J00	32-11	55128-93J10	36-15	58200-93LE0	36-27-24	61476-98J00	38-9	67226-98J00	44-36		
		48630-98J01	32-5	55128-93L00	36-34	58200-93LF0	36-27-25	61493-93J00	3-20		45-37		
		48633-93J00	32-6	55320-94900	30-15	58200-93LG0	36-27-26		4-20	67226-98J10	46-26		
		48650-93J00	32-10	55321-87J00	1-15	58200-96J00	36-27-9	61494-96J00	3-21	67227-98J00	45-41		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67227-98J10	44-24	67269-98J00	44-26	67296-94300	44-33
	45-25		45-27		45-33
	46-42	67269-98J10	46-53		46-43
67227-98J20	46-21	67269-98J20	46-19	67296-98J00	44-39
67227-98J30	46-22	67269-98J30	44-45		45-32
67228-98J50	44-48		45-45	67296-98J10	44-41
	45-48	67271-98J20	46-2		46-45
	46-47	67271-98J30	44-8	67296-98J20	44-35
67233-98J00	46-15	67271-98J40	45-9	67296-98J30	45-30
67233-98J10	44-13	67272-98J00	46-51	67296-98J50	44-17
	45-14	67272-98J10	44-19		45-18
67234-98J00	46-17		45-20		46-50
67235-98J00	46-34	67273-98J00	44-27	67296-98J60	44-28
67235-98J10	44-11	67273-98J10	44-49		45-29
	45-12		45-52		46-48
67236-98J00	44-10	67273-98J20	45-28	67296-98J80	44-32
	46-33	67273-98J30	44-50		45-31
67236-98J10	45-11		45-53	67296-98J90	44-31
67237-98J00	46-35	67274-98J00	44-29		45-40
67237-98J30	44-12	67277-98J00	44-51	67296-98JA0	44-18
67237-98J40	45-13		45-54		45-19
67237-98J50	45-57	67284-98J00	44-42		46-16
67238-98J00	46-29		45-42	67296-98JB0	46-20
67239-98J00	44-15	67287-92E00	44-14	67296-98JC0	46-24
	45-16		44-38	67296-98JD0	46-28
67246-98J00	46-31		45-15	67296-98JE0	46-37
67246-98J10	44-4		45-39	67296-98JF0	44-52
	45-4	67287-98J00	46-25		45-55
67246-98J20	45-51	67288-92E20	44-30	67297-98J00	44-53
67251-98J00	44-3		45-36		45-56
	45-3	67288-98J00	44-34	67300-93J00	37-45
67251-98J20	46-12		45-35	67361-93J00	37-46
67252-98J00	46-38		46-44	67467-89J01	20-25
67252-98J10	44-20	67288-98J10	44-46	67471-99E00	20-26
	45-21		45-46	68165-98J00	44-43
67254-98J00	46-14		46-46		45-43
67255-98J00	46-8	67288-98J20	44-21		46-54
67256-98J00	46-10		45-22	68165-98J10	44-44
67258-98J00	46-9		46-39		45-44
67259-98J00	46-11	67288-98J30	44-47	69711-93E10	3-19
67261-98J00	44-5		45-47		4-19
	45-5	67288-98J40	44-40		
67261-98J10	45-6		45-34		
67261-98J20	46-5	67288-98J50	46-23		
67261-98J30	46-6	67288-98J60	46-27		
67263-98J00	44-6	67288-98J70	46-30		
	45-7	67292-98J00	44-22		
67263-98J20	46-4		45-23		
67264-98J00	46-3		46-40		
67265-98J00	46-7	67294-98J00	46-13		

70000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
77811-54GC0-0PG	38-19		38-12	01550-0835A	2-28
			38-14	01550-08407	10-67
		01550-0616A	18-11		11-67
		01550-06207	1-4		12-18
			1-8		13-18
			2-24	01550-08457	2-29
			3-9	01550-0845A	18-12
			3-14	01550-08557	20-30
			3-15	01550-0855A	6-7
			4-9	01550-08607	1-18
			4-14		1-19
99011-98J10-054	47-17-2		4-15		17-31
99011-98J10-059	47-17-1		16-33		34-21
	48-17		16-34	01550-0865A	18-13
			20-21	01550-0885A	18-14
			25-12	01550-1025A	5-12
			38-11	01550-1050A	19-19
		01550-0620A	6-25	01570-06357	10-50
			6-26		11-50
		01550-06257	7-13	02112-0406B	10-56
01421-08357	17-28		9-10		11-56
01500-06167	10-42		10-46	02112-05107	10-30
	11-42		11-46	02112-0612A	1-28
01500-06257	10-63		16-35	02142-0408B	10-29
	11-63		25-10	02142-05107	20-22
01547-06167	38-25	01550-06357	10-65	02162-05207	17-13
01547-06257	1-29		11-65	03112-06303	41-3
01547-06507	1-30		29-27	03122-05165	43-9
01550-06107	12-23	01550-06407	3-16	03542-06169	38-13
	13-23		4-16		38-15
01550-06127	3-8	01550-08127	16-25	04211-11129	17-14
	4-8	01550-08167	17-11		17-32
	10-70		17-29	04211-13149	6-12
	11-70	01550-08207	1-17	06111-07004	22-23
	19-28		1-35	06111-11004	22-24
	24-14		2-2	07120-06357	21-19
	25-9		9-9	07130-0510A	2-18
	27-21		23-22	07130-05167	29-5
	27-28		37-14	07130-0616A	2-17
	28-21	01550-08307	23-23	08110-60020	18-15
	28-28		34-9	08221-16256	22-9
	29-13		34-20	08310-00067	27-16
	29-19	01550-0830A	6-13		28-16
	36-36		6-17	08316-10067	10-71
	38-26		6-21		11-71
	38-27		34-14	08316-10087	17-34
01550-06167	24-6	01550-08357	3-17		27-2
	24-11		4-17		28-2
	29-26		17-12	08321-0105A	29-6
	38-10		17-30	08321-01067	27-17

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	28-17	09125-06063	26-8	09160-12066	36-9
08331-41359	20-23		30-5	09160-13016	30-13
08331-4158A	22-37		30-25	09160-13017	30-12
09100-12052	36-6		31-8	09160-14066	35-23
09100-12085	30-10-1		31-18	09160-15051	34-26
	30-10-3		32-34	09160-16050	35-16
09100-12092	30-10-2		32-35		35-18
09100-14004	34-24		32-36	09160-17052	37-30
	35-15		35-6	09160-18028	36-32
09103-06093	26-17		35-12	09160-18031	2-10
09103-06231	24-12	09131-05004	43-23	09160-39001	31-9
09103-06278	30-21	09132-04034	14-17	09160-50006	22-13
09103-06281	1-16		15-17	09160-60012	22-12
	9-7	09136-06148	37-11	09162-10005	32-26
	19-4	09137-04004	29-8	09168-10034	36-16
	21-20	09139-06135	37-4	09168-12012	19-15
09103-08109	34-12	09139-06136	37-5	09168-12013	10-17
09103-08370	17-24	09140-05005	26-14	09168-16009	1-12
09103-08437	8-4	09140-10032	31-19	09169-06062	10-15
09103-12071	24-2	09140-16026	22-8		10-62
09106-05030	24-8	09141-18005	36-31		11-15
09108-08282	8-3	09159-08136	8-5		11-62
09108-10115	35-8		17-33		25-5
09108-12013	35-9	09159-10116	2-12	09169-08038	34-37
09116-06094	35-27-1	09159-12014	36-11	09169-08039	37-20
	35-27-2	09159-12062	30-11	09169-08042	10-66
	36-18	09159-14020	30-18		11-66
09116-06121	16-13	09159-14026	34-25	09180-32006	22-10
	30-16		35-17	09181-12158	18-9
09116-06202	25-7	09159-22006	30-8	09181-32035	22-11-1
09116-08122	34-17	09159-28003	22-4	09181-32036	22-11-2
09116-08126	34-36	09160-05024	44-37	09181-32037	22-11-3
09116-08128	19-20		45-38	09181-32038	22-11-4
09116-08131	14-16	09160-05029	26-16	09181-32039	22-11-5
	15-16		29-4	09181-32040	22-11-6
09116-08137	36-14	09160-06055	20-27	09181-32041	22-11-7
09116-10134	34-35	09160-06082	31-20	09181-32042	22-11-8
09116-10135	34-28	09160-06084	10-61	09181-32043	22-11-9
09116-10137	34-32		11-61	09181-32044	22-11-10
09116-10146	19-22	09160-06094	20-10	09181-39001	31-10
	34-34	09160-06104	46-49	09181-60004	22-7-1
09116-10150	36-7	09160-06134	25-4	09181-60005	22-7-2
09116-10175	19-21	09160-08082	37-38	09181-60006	22-7-3
	32-29	09160-08152	37-37	09181-60007	22-7-4
	34-29	09160-08161	8-6	09181-60008	22-7-5
	34-33		17-35	09181-60009	22-7-6
	35-21	09160-10082	21-10	09181-60010	22-7-7
09116-10176	35-2	09160-10104	5-11	09181-60011	22-7-8
09118-08127	37-19	09160-10141	36-8	09181-60012	22-7-9
09125-05048	26-15	09160-10148	20-4	09181-60013	22-7-10

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-78001	22-14-1	09248-18006	2-11	09320-08076	17-25
09181-78002	22-14-2	09248-26001	2-9	09320-08501	10-12
09181-78003	22-14-3	09250-21003	37-47		11-12
09181-78004	22-14-4	09251-09002	39-1	09320-09016	25-6
09181-78005	22-14-5		40-1	09320-11013	37-21
09181-78006	22-14-6	09260-10005	20-14	09320-12014	16-15
09181-78007	22-14-7	09261-05006	7-10	09320-12072	10-34
09181-78008	22-14-8	09262-17019	20-15		11-34
09181-78009	22-14-9	09262-40017	6-3	09320-12076	25-8
09181-78010	22-14-10	09262-40018	6-2	09321-10030	37-13
09181-84001	22-15-1	09263-30023	22-27		37-22
09181-84002	22-15-2	09263-35048	36-4	09329-14002	37-42
09181-84003	22-15-3	09263-72001	22-28	09343-75001-600	10-10
09181-84004	22-15-4	09263-78001	22-44		10-36
09181-84005	22-15-5	09263-80001	36-5		10-48
09181-84006	22-15-6	09263-83001	22-45		11-10
09181-84007	22-15-7	09265-30033	22-16		11-36
09181-84008	22-15-8	09265-32003	22-35		11-48
09181-84009	22-15-9	09269-32002	22-5	09352-50823-00B	10-73
09181-84010	22-15-10	09280-00030	22-43		11-73
09202-05032	7-9	09280-00047	22-29	09352-50823-600	10-72
09202-06031	14-18	09280-06005	2-20		11-72
	15-18	09280-09008	19-27	09352-50903-00B	16-23
	24-3	09280-10009	2-15		16-24
	36-26		17-10	09352-50903-600	16-16
09202-08006	19-17	09280-10016	2-16		16-17
	19-18	09280-22019	1-14		16-18
	35-3		9-8		16-19
	35-10		19-5		16-20
	36-12	09280-22020	18-10		16-21
09202-08013	22-19	09280-26006	1-32		16-22
09204-01006	20-11		16-14	09355-40805-00B	36-22
	31-21	09280-66004	22-32		41-5
09204-03003	36-33	09280-70012	6-6	09360-12008	10-18
09205-03004	21-4	09282-24004	22-33	09360-12013	11-18
09205-10006	20-12	09282-30006	22-30	09360-14009	12-13
09206-03001	36-3	09282-39001	31-11	09360-14014	13-13
09206-08001	1-3	09283-10011	21-7	09362-09008	36-23
	1-7	09283-32044	6-4	09363-08004	10-19
	1-27	09283-91001	5-13	09367-06002	16-26
	34-8	09289-05012	7-22	09367-10001	39-2
	34-13	09289-18001	20-16		40-2
09206-09012	21-21	09306-06005	20-17	09380-21002	32-28
09206-13019	2-13	09306-10001	20-18	09380-38003	31-12
09206-14004	1-20	09306-17002	37-29	09381-22010	5-4
09246-05006	2-21	09306-24001	32-27	09381-72001	22-36
09247-14041	12-11	09320-08021	27-9	09383-07003	21-13
09247-14042	13-11		28-9	09383-08004	20-19
09248-12009	19-16	09320-08062	12-12	09385-06012	20-28
09248-12011	20-13		13-12	09387-38002	35-5

SUZUKI **DF300** PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Technical Readiness Group, Quality Administration Department

300 Takatsuka, Minami, Hamamatsu, Japan

Reprint Prohibited

SUZUKI MOTOR CORPORATION