

DF8A/9. 9A

DF8A

DF8AR

DF9.9A

DF9.9AR



OUTBOARD MOTOR

P01

2017-6

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF8A/9. 9A production start 2017.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: with
LH(PORT)	: Left hand side	S, L	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 00994F-123456		
123456~	: From E. NO. 00994F-123456		

12 x 34 x 5.6..... Figures in the description column

| | | show the dimensions of parts.

ID OD T(or W, L)

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec.:

spec. code : DF8A(R) : P1 DF9.9A(R) : P1

7. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	ENGINE NO.
DF8A	P01	00801F	S, L	00801F-810001~
DF8AR	P01	00801F	S, L	00801F-810001~
DF9.9A	P01	00994F	S, L	00994F-810001~
DF9.9AR	P01	00994F	S, L	00994F-810001~

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.111A

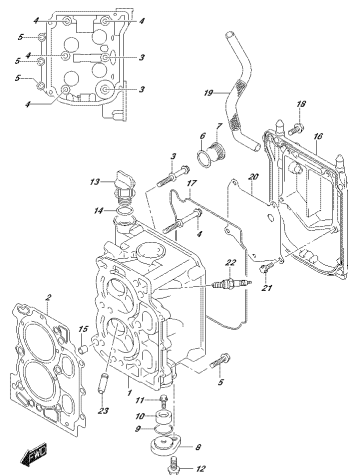


026AL_P01_0102_011A
CYLINDER HEAD

FIG.113A

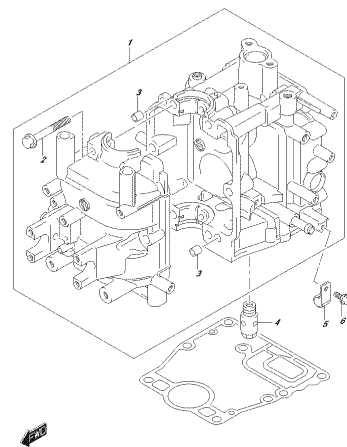


026AL_P01_0102_013A
CYLINDER BODY

FIG.116A

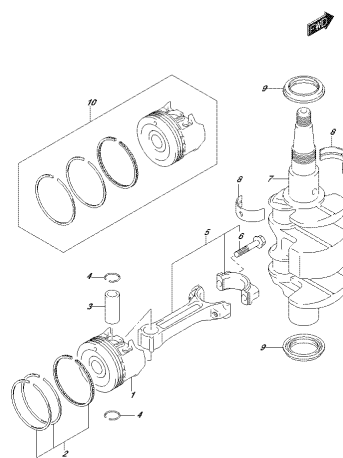


026AL_P01_0102_016A
CRANKSHAFT

FIG.120A

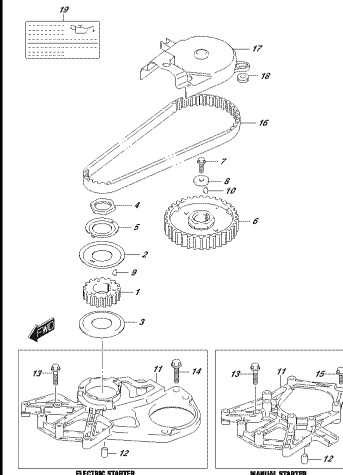


026AL_P01_0102_020A
ELECTRIC STARTER

FIG.120B

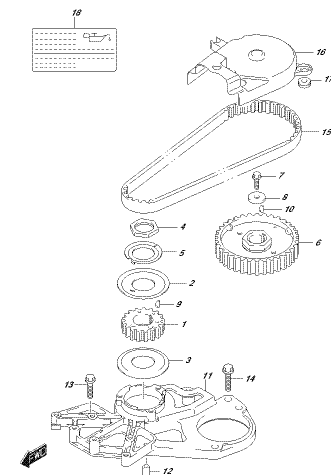


026AL_P01_0102_020B
ELECTRIC STARTER

FIG.121A

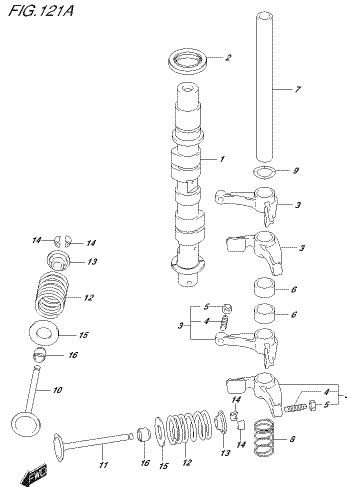


026AL_P01_0102_021A
CRANKSHAFT

FIG.121B

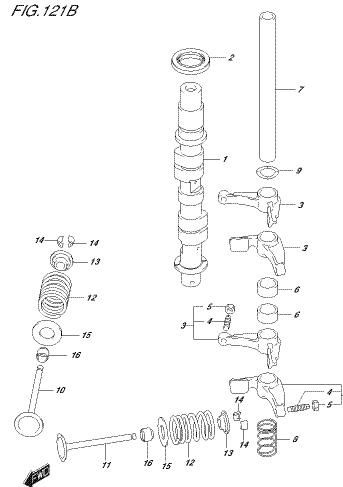


026AL_P01_0102_021B
CRANKSHAFT

FIG.126A

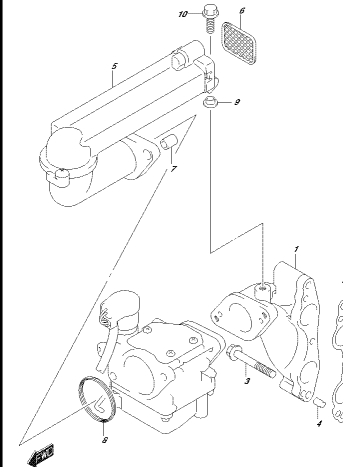


026AL_P01_0102_026A
ELECTRIC STARTER

FIG. 128A

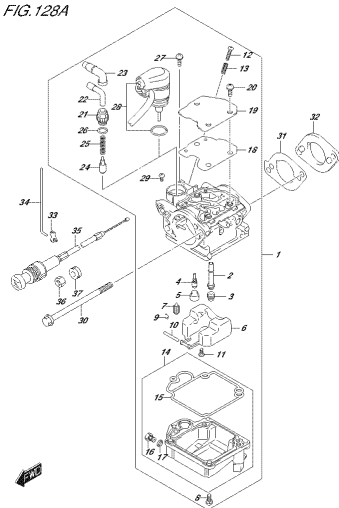


OKM_P01_012_128A
CARBURETOR

FIG. 128B

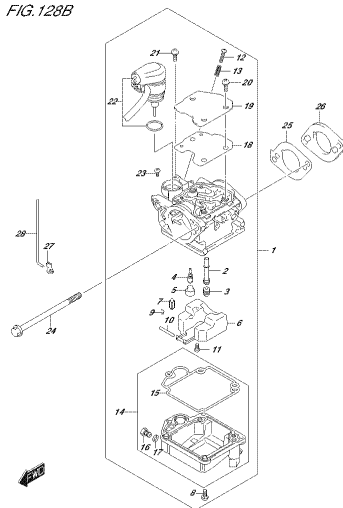


OKM_P01_012_128B
CARBURETOR

FIG. 128C

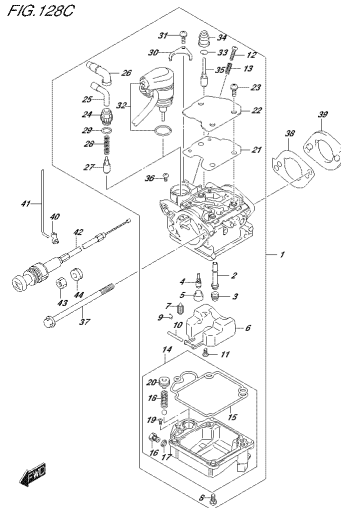


OKM_P01_012_128C
CARBURETOR

FIG. 128D

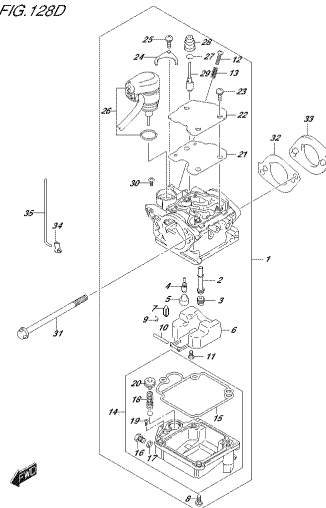


OKM_P01_012_128D
CARBURETOR

FIG. 146A

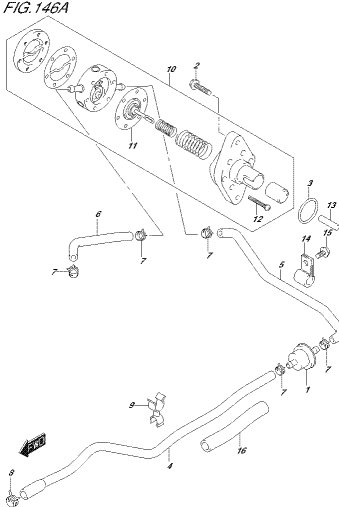


OKM_P01_012_146A
FUEL PUMP

FIG. 160A

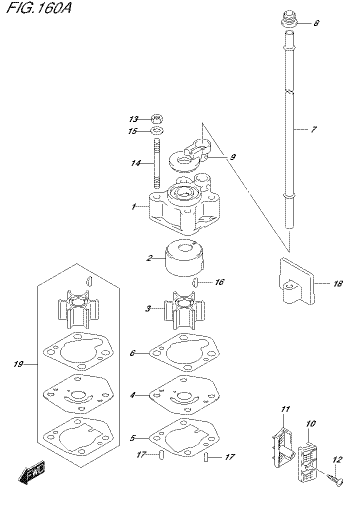


OKM_P01_012_160A
WATER PUMP

FIG. 162A

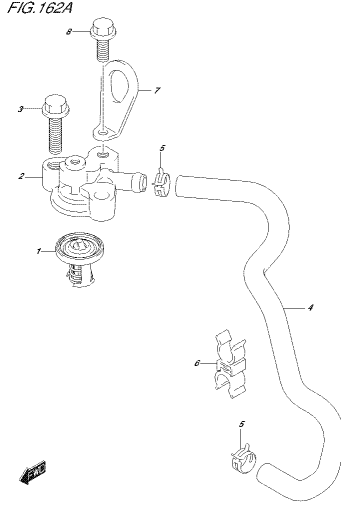


OKM_P01_012_162A
THERMOSTAT

FIG. 166A

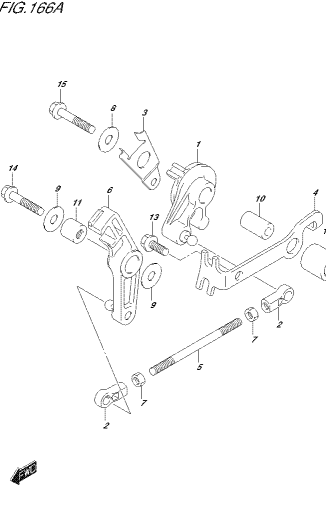


OKM_P01_012_166A
THROTTLE CABLE

FIG.166B

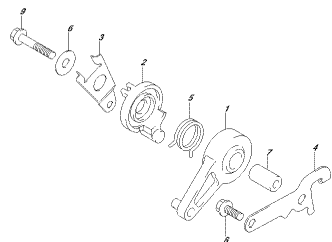


OKM_P01_010_166
THROTTLE CONTROL

FIG.167A

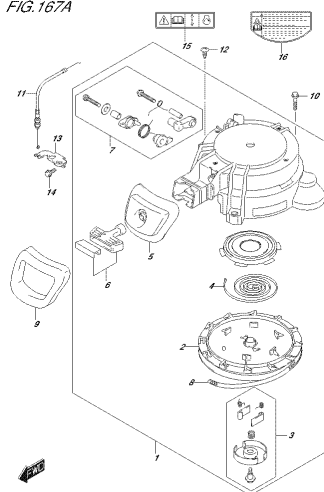


OKM_P01_010_167A
SECOND STARTER

FIG.175A

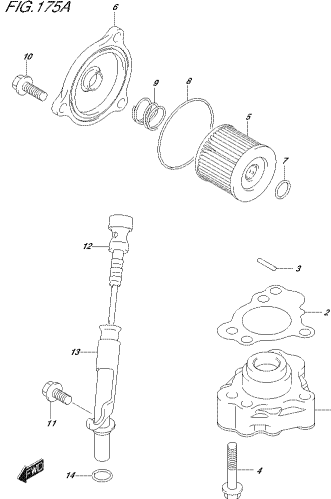


OKM_P01_010_175A
OIL PUMP

FIG.206A

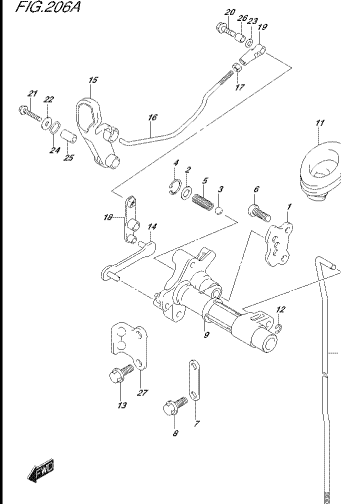


OKM_P01_010_206A
CLUTCH CABLE

FIG.206B

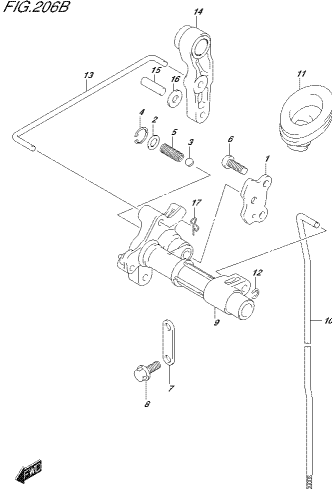


OKM_P01_010_206B
CLUTCH CABLE

FIG.210A

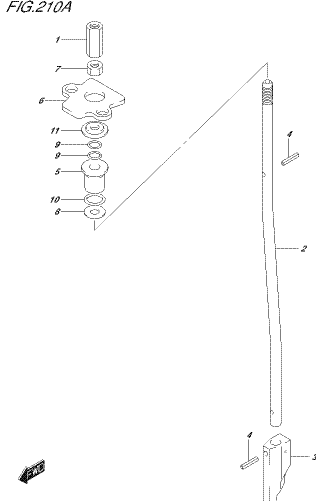


OKM_P01_010_210A
SHIFT CABLE

FIG.220A

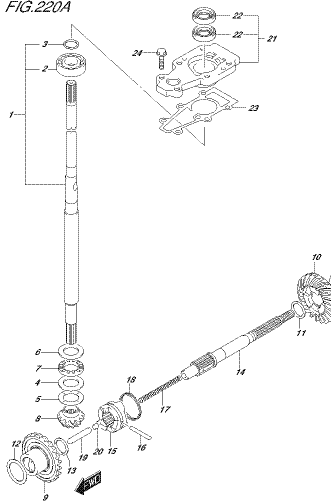

OKM_P01_010_220A
TRANSMISSION


FIG.301A

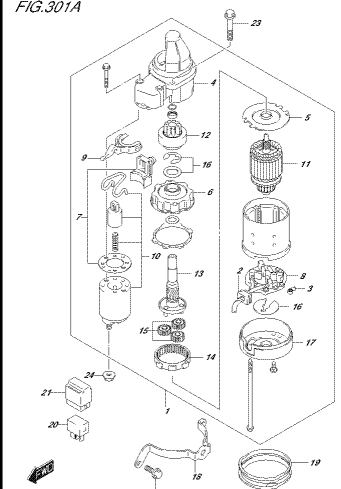


OKM_P01_010_301A
STARTING MOTOR

FIG.303A

ELECTRIC STARTER

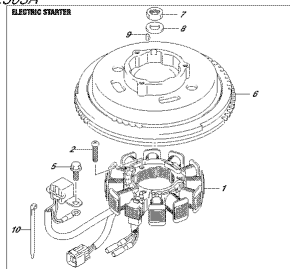


MANUAL STARTER

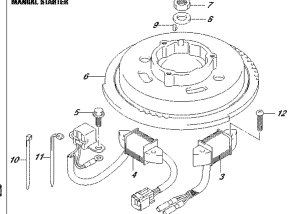


DKM_P01_010_004
MAGNETO

FIG.303B

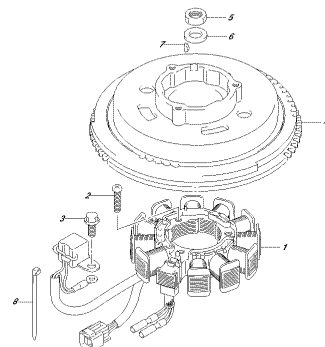


DKM_P01_010_005
MAGNETO

FIG.310A

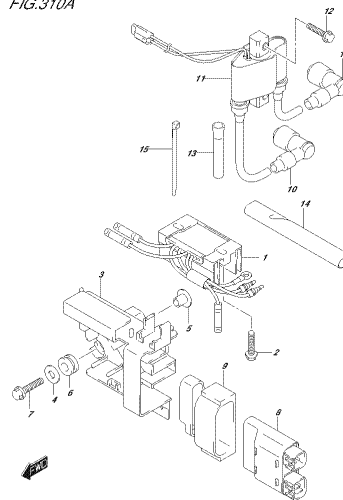


DKM_P01_010_004
SEE DISSEMINATION CODE

FIG.310B

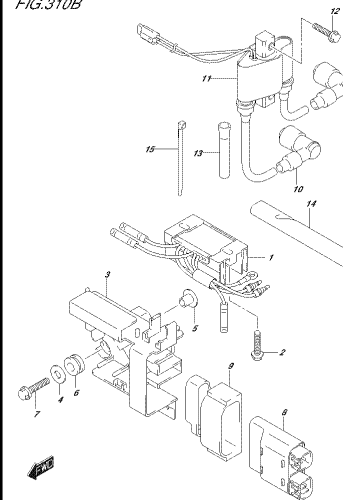


DKM_P01_010_005
SEE DISSEMINATION CODE

FIG.322A

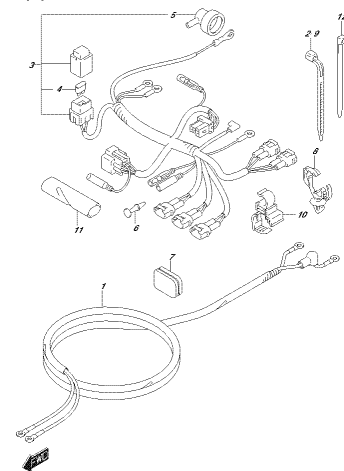


DKM_P01_010_004
HARNESS

FIG.322B

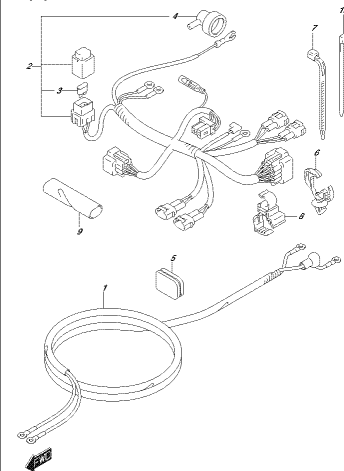


DKM_P01_010_005
HARNESS

FIG.334A

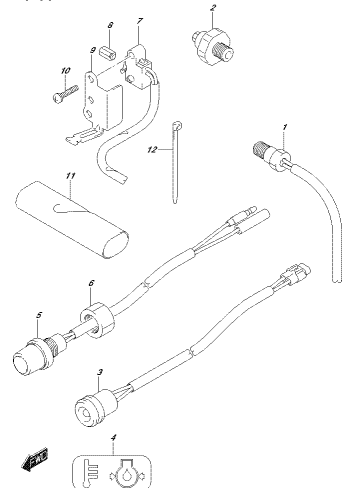


DKM_P01_010_004
SENSOR SWITCH

FIG.334B

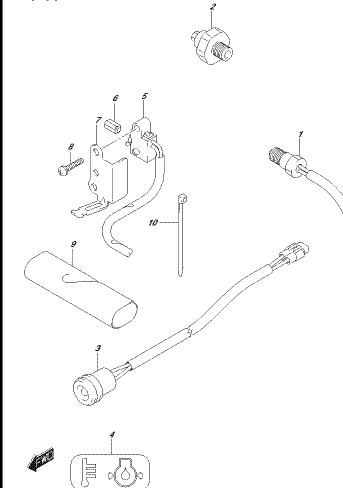


DKM_P01_010_004
SENSOR SWITCH

FIG.410B

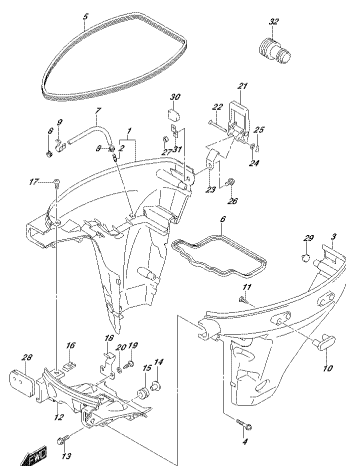


OKAWA_P01_0102_410B
USE COVER

FIG.420A

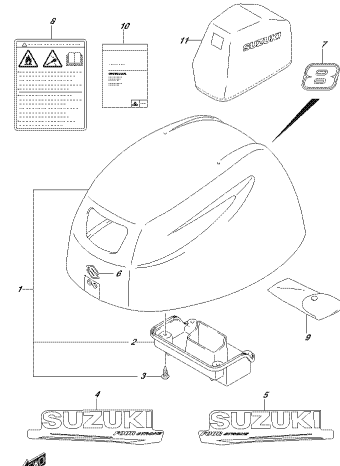


OKAWA_P01_0102_420A
ENGINE COVER

FIG.420B

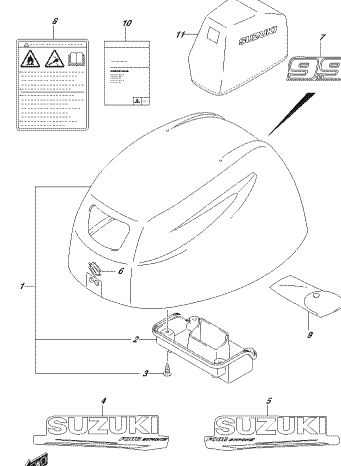


OKAWA_P01_0102_420B
ENGINE COVER

FIG.432A

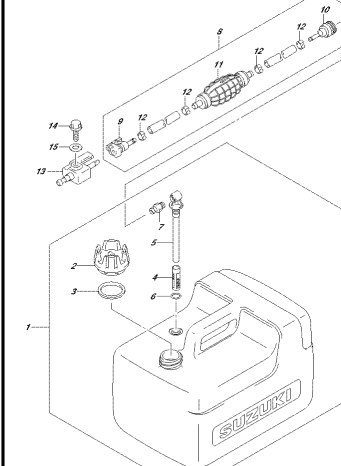


OKAWA_P01_0102_432A
FUEL TANK

FIG.442A

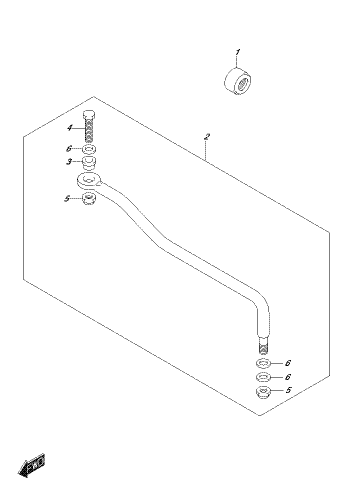


OKAWA_P01_0102_442A
TILLER LEVER

FIG.444A

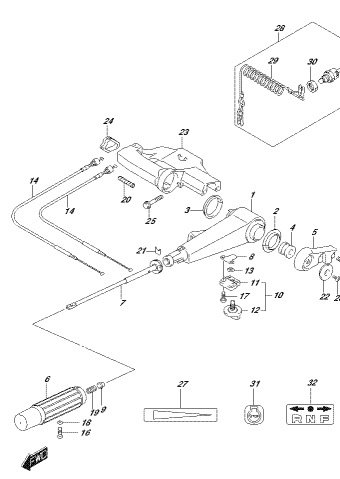


OKAWA_P01_0102_444A
TILLER HANDLE

FIG.450A

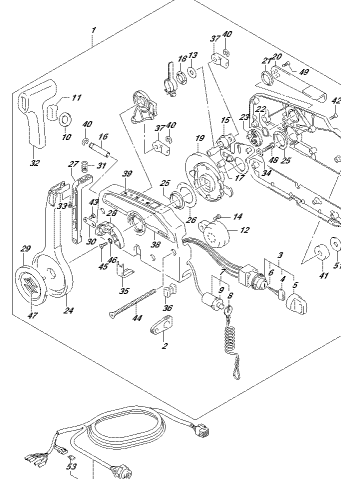


OKAWA_P01_0102_450A
REMOTE CONTROL

FIG.454A

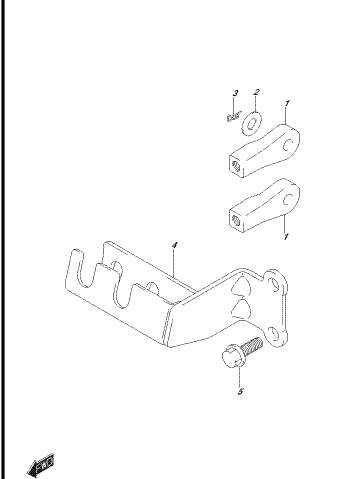


OKAWA_P01_0102_454A
REMOCON CABLE HOLDER

FIG.501A

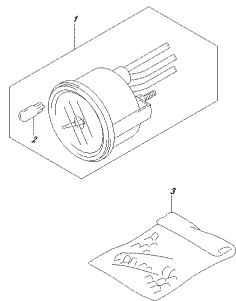


DKM_P01_010_01A
OPT. NETZ

FIG.513A

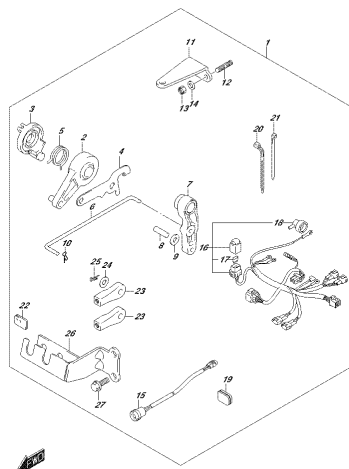


DKM_P01_010_05M
OPT. REMOTE CONTROL PARTS

FIG.515A

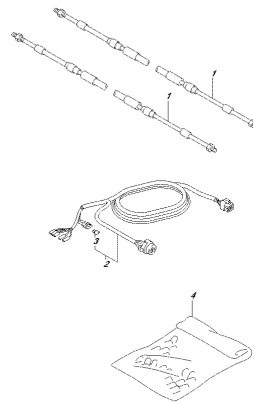


DKM_P01_010_05M
OPT. REMOTE CONTROL CABLE

FIG.515B

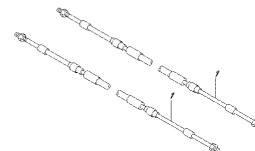


DKM_P01_010_05B
OPT. REMOTE CONTROL CABLE

FIG.544A

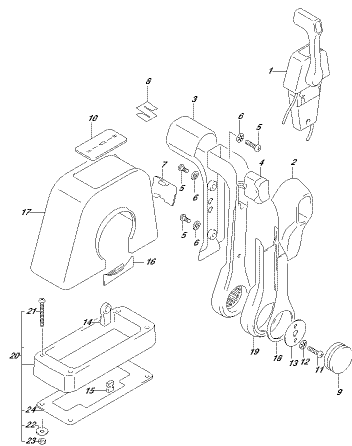


DKM_P01_010_04A
OPT. REMOTE CONTROL ASSY SINGLE (1)

FIG.545A

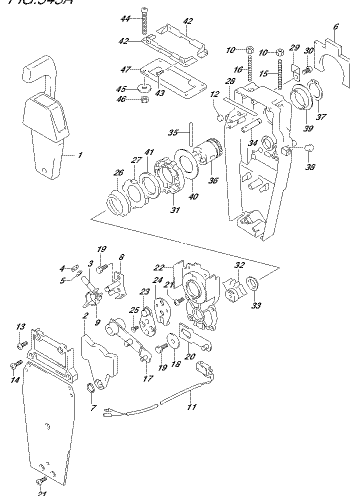


DKM_P01_010_05M
OPT. REMOTE CONTROL ASSY SINGLE (2)

FIG.553A

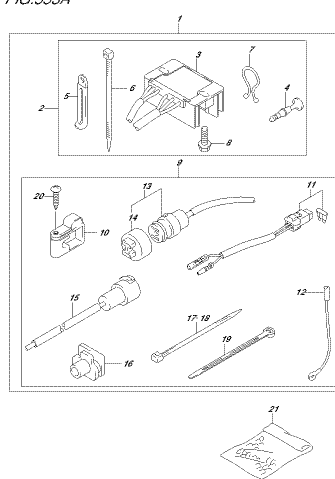


DKM_P01_010_05M
OPT. ELECTRICAL (MANUAL STARTER)

FIG.561A

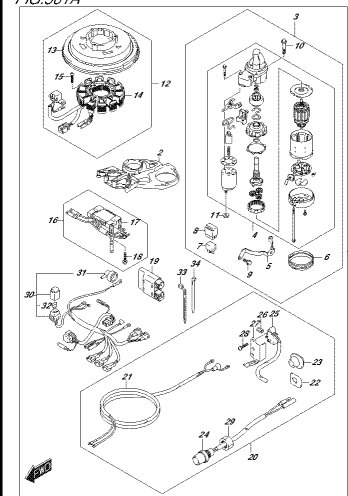

DKM_P01_010_06A
OPT. STARTING INDICATOR (MANUAL STARTER)

FIG. 583A

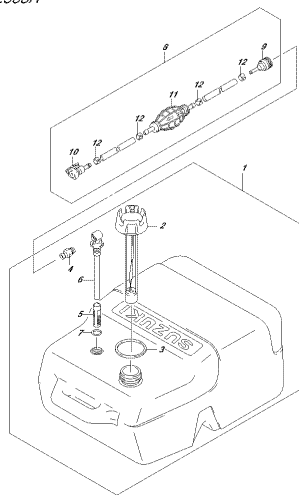

DEKALPULS 2018.03.01
001/001/001

FIG.111A

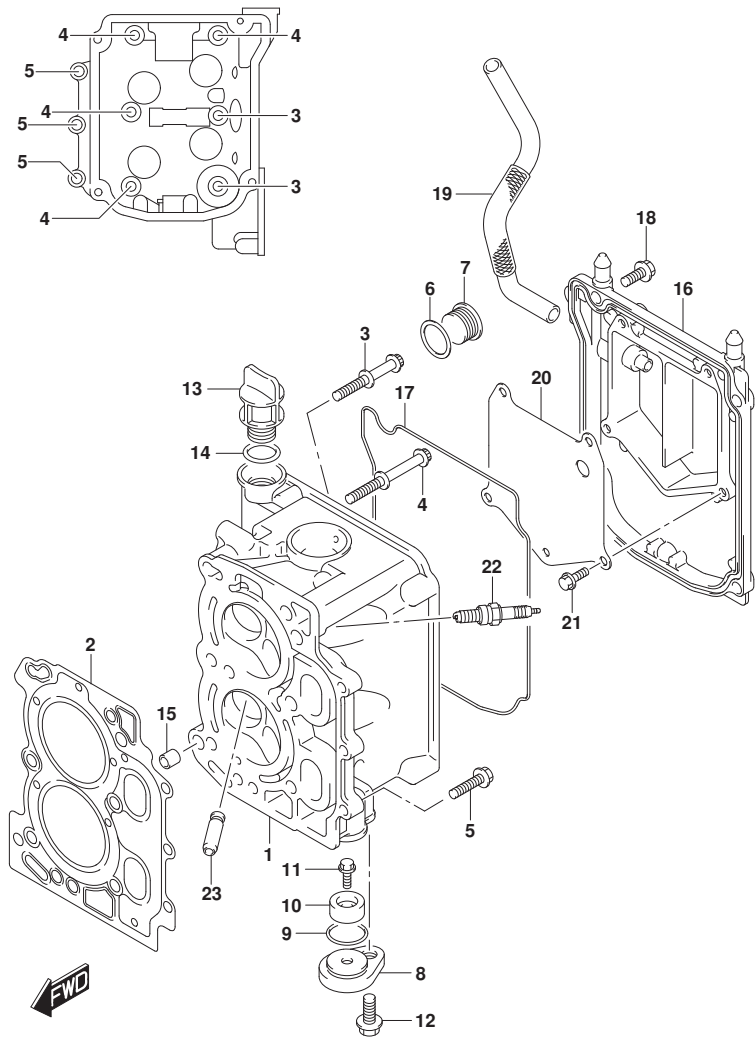


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11110-99J00	HEAD, CYLINDER	1	
2	11141-99J00	GASKET, CYLINDER HEAD	1	
3	11118-99JL0	BOLT, NO.1 (8X67)	2	
4	11119-99JL0	BOLT, NO.2 (8X77)	4	
5	01550-0625C	BOLT	3	
6	11216-90J00	GASKET, OIL GALLERY PLUG	1	
7	09248-22002	PLUG (22X11)	1	
8	11261-93J00	COVER, PROTECTION ANODE	1	
9	09280-22019	O RING (D:1.9,ID:21.8)	1	
10	55321-87J01	ANODE, PROTECTION	1	
11	09103-06281	BOLT (6X14)	1	
12	01550-0820C	BOLT	1	
13	11382-93E00	CAP, OIL FILLER	1	
14	09280-17003	O RING (D:3.1,ID:16.8)	1	
15	04211-09109	PIN	2	
16	11170-99J00	COVER, CYLINDER HEAD	1	
17	11178-99J00	O RING, CYLINDER HEAD COVER	1	
18	01550-0620C	BOLT	4	
19	11196-99J00	HOSE, BREATHER	1	
20	11173-99J00	PLATE, BREATHER	1	
21	01550-0612A	BOLT	4	
22	09482-00528	SPARK PLUG (CR6E)	2	NGK
23	11115-09G00-001	GUIDE, VALVE (OS)	4	OPT

FIG.113A

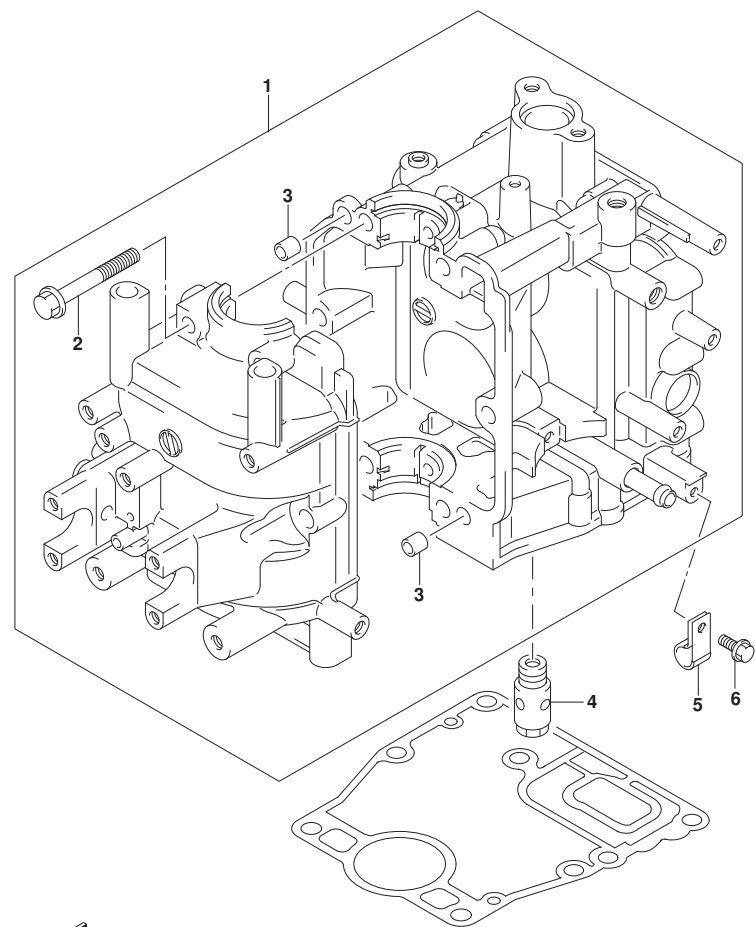


FIG.113A (1-B-3) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11301-99J10	BLOCK ASSY, CYLINDER	1	
2	01560-08557	.BOLT	6	
3	04211-09109	.PIN	2	
4	16440-11D00	REGULATOR ASSY, ENGINE	1	
5	09403-12406	CLAMP	1	
6	01550-0612C	BOLT	1	

FIG.116A

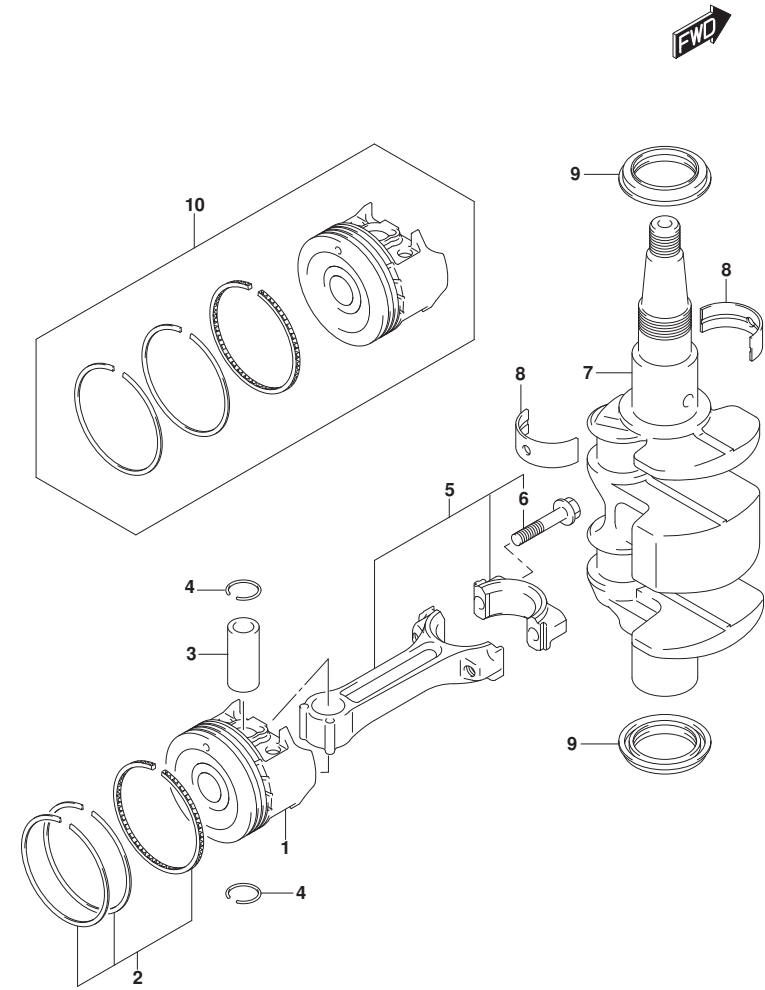


FIG.116A (1-B-4) CRANKSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-99JL0-0B0	PISTON (NONE)	2	
2	12140-99J00	RING SET, PISTON	2	
3	12151-99JL0	PIN, PISTON	2	
4	09381-14001	SNAP RING	4	
5	12160-99JL1	CONNROD ASSY	2	
6	12163-99JL1	.BOLT, CONNROD	4	
7	12220-99JL0	CRANKSHAFT	1	
8	12341-99J00	BEARING, CRANKSHAFT	4	
9	09283-30075	OIL SEAL (28.8X45.5X6.5)	2	
10	12100-99JL0-050	PISTON SET (OS:0.50)	2	OPT

19

17

18

16

7

8

10

6

4

5

2

9

1

3

FWD

13

11

14

12

13

11

15

12

ELECTRIC STARTER

MANUAL STARTER

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	12631-99JM0	PULLEY, CRANKSHAFT (NT:17)	1	
2	12635-99J00	GUIDE, TIMING BELT (UPPER)	1	
3	12636-99J00	GUIDE, TIMING BELT (LOWER)	1	
4	12637-99J00	NUT, TIMING PULLEY (M24)	1	
5	12638-99J00	WASHER, PULLEY NUT LOCK	1	
6	12741-99JL0	PULLEY, CAMSHAFT (NT:34)	1	
7	09103-06267	BOLT (6X18)	1	
8	09160-06171	WASHER (6.5X24X4)	1	
9	08341-31039	KEY	1	
10	08341-31039	KEY	1	
11-1	12625-99J00	BASE, STATOR	1	W/ELECTRIC STARTER
11-2	12625-99J10	BASE, STATOR	1	W/MANUAL STARTER
12	04211-09149	PIN	2	
13	01550-0630C	BOLT	3	
14	01550-08307	BOLT	1	W/ELECTRIC STARTER
15	01550-0612C	BOLT	1	W/MANUAL STARTER
16	12761-99J00	BELT, TIMING	1	
17	12764-99J00	COVER, TIMING BELT	1	
18	09308-08011	GROMMET	2	
19	61494-99J01	LABEL, OIL & CLEARANCE	1	

DF8A_P01_018

FIG.120B

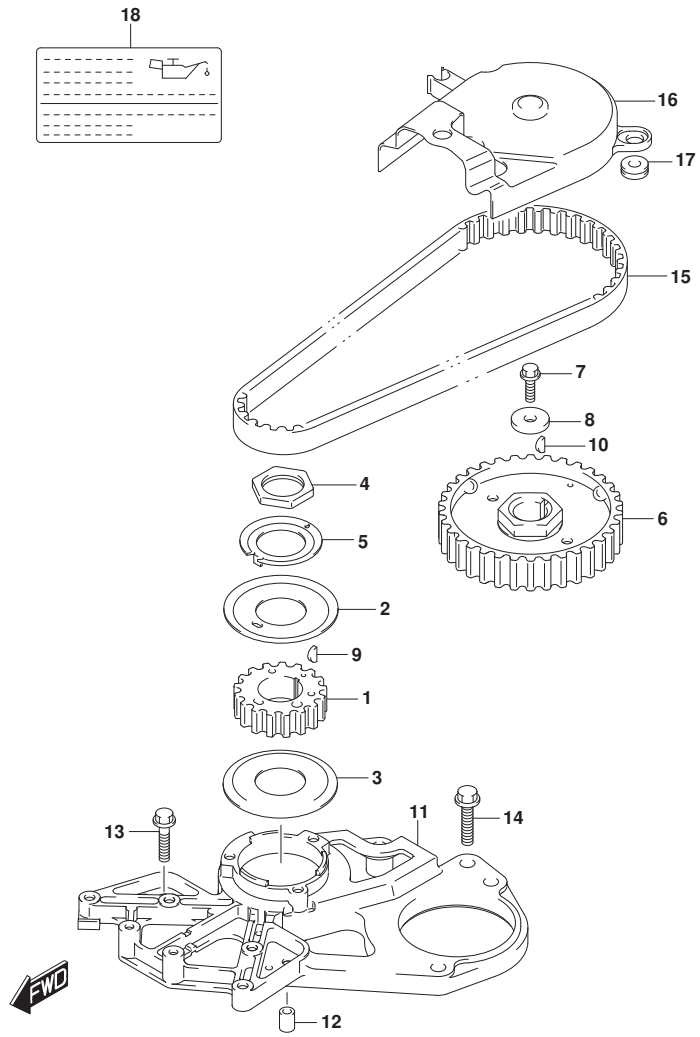


FIG.120B (1-B-6) TIMING BELT (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12631-99JM0	PULLEY, CRANKSHAFT (NT:17)	1	
2	12635-99J00	GUIDE, TIMING BELT (UPPER)	1	
3	12636-99J00	GUIDE, TIMING BELT (LOWER)	1	
4	12637-99J00	NUT, TIMING PULLEY (M24)	1	
5	12638-99J00	WASHER, PULLEY NUT LOCK	1	
6	12741-99JL0	PULLEY, CAMSHAFT (NT:34)	1	
7	09103-06267	BOLT (6X18)	1	
8	09160-06171	WASHER (6.5X24X4)	1	
9	08341-31039	KEY	1	
10	08341-31039	KEY	1	
11	12625-99J00	BASE, STATOR	1	
12	04211-09149	PIN	2	
13	01550-0630C	BOLT	3	
14	01550-08307	BOLT	1	
15	12761-99J00	BELT, TIMING	1	
16	12764-99J00	COVER, TIMING BELT	1	
17	09308-08011	GROMMET	2	
18	61494-99J01	LABEL, OIL & CLEARANCE	1	

DF8AR P01
DF9.9AR P01

FIG.121A

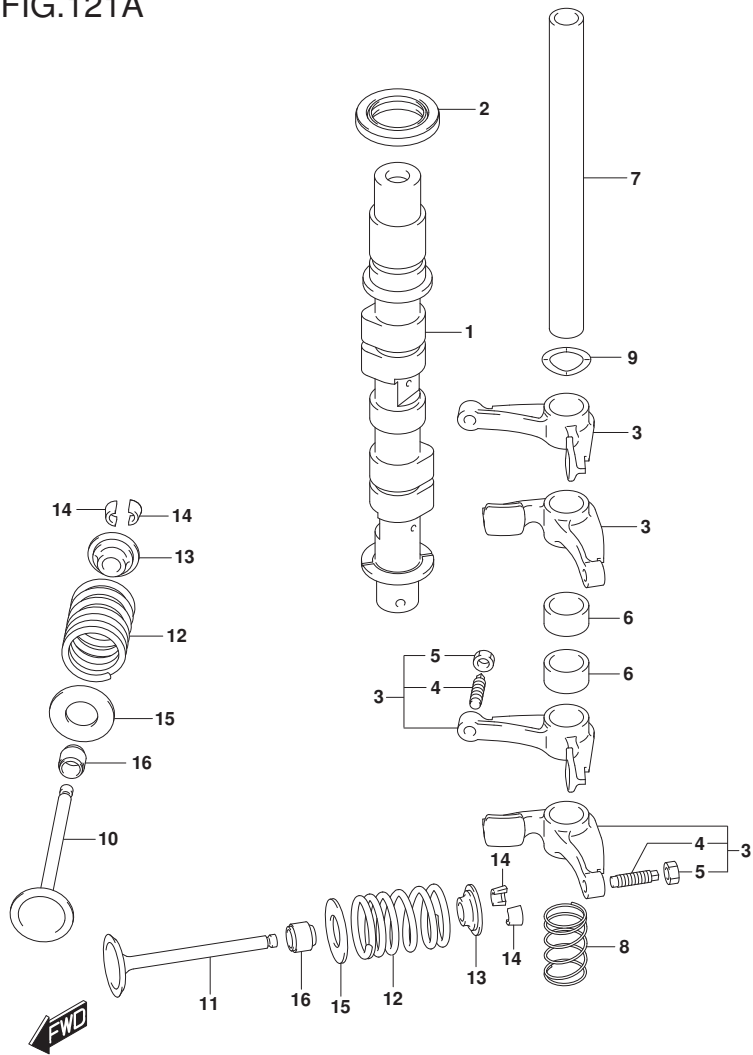


FIG.121A (1-B-7) CAMSHAFT (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	12700-99JL1	CAMSHAFT ASSY	1	W/MANUAL STARTER W/DECOMP
1-2	12711-99JM1	CAMSHAFT	1	W/ELECTRIC STARTER N/DECOMP
2	09283-21009	OIL SEAL (19.7X33X6)	1	
3	12840-99J00	ARM, ROCKER	4	
4	12842-49201	.SCREW, TAPPET ADJUSTING	4	
5	12843-27A00	.NUT, TAPPET ADJUSTING	4	
6	12843-99J00	SPACER, ROCKER ARM (13X18X9)	2	
7	12861-99JL0	SHAFT, ROCKER ARM (9X13X142.5)	1	
8	12891-99J00	SPRING, ROCKER SHAFT	1	
9	09164-13008	WASHER	1	
10	12911-99J10	VALVE, INTAKE	2	
11	12915-99J10	VALVE, EXHAUST	2	
12	12921-99J00	SPRING, VALVE	4	
13	12931-78G00	RETAINER, VALVE SPRING	4	
14	12932-50MA0	COTTER, VALVE	8	
15	12933-71C00	SEAT, VALVE SPRING	4	
16	09289-05008	OIL SEAL (5X10.5X8.4)	4	

DF8A P01
DF9.9A P01

FIG.121B

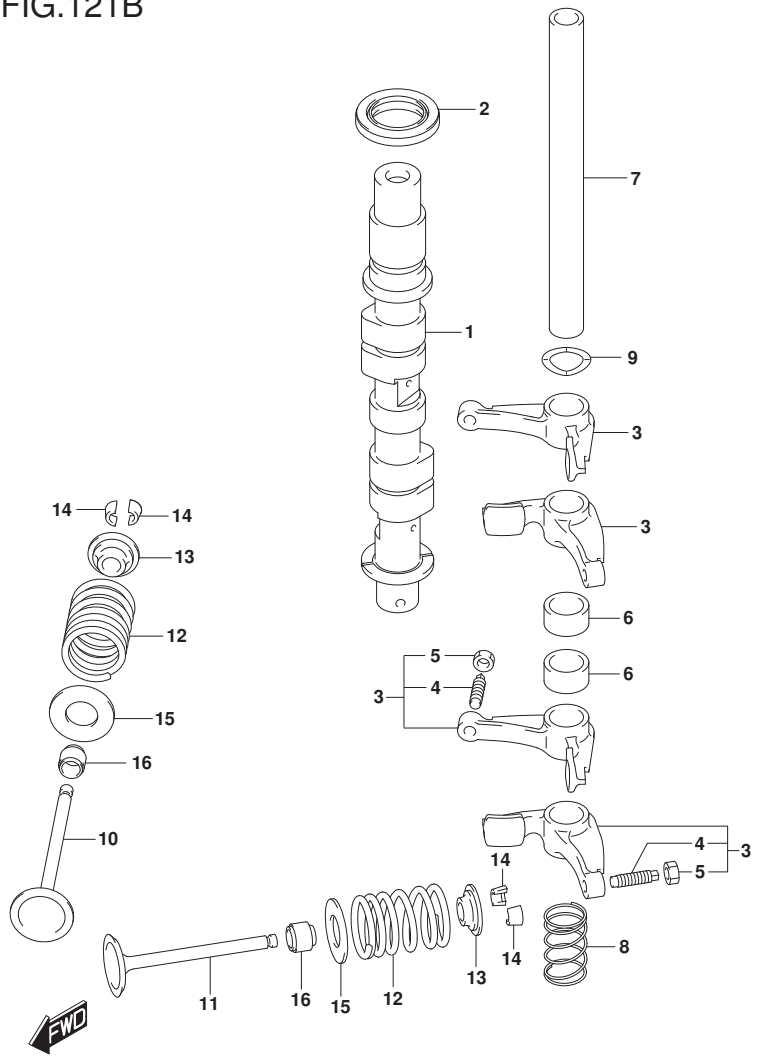


FIG.121B (1-B-8) CAMSHAFT (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12711-99JM1	CAMSHAFT	1	
2	09283-21009	OIL SEAL (19.7X33X6)	1	
3	12840-99J00	ARM, ROCKER	4	
4	12842-49201	.SCREW, TAPPET ADJUSTING	4	
5	12843-27A00	.NUT, TAPPET ADJUSTING	4	
6	12843-99J00	SPACER, ROCKER ARM (13X18X9)	2	
7	12861-99JL0	SHAFT, ROCKER ARM (9X13X142.5)	1	
8	12891-99J00	SPRING, ROCKER SHAFT	1	
9	09164-13008	WASHER	1	
10	12911-99J10	VALVE, INTAKE	2	
11	12915-99J10	VALVE, EXHAUST	2	
12	12921-99J00	SPRING, VALVE	4	
13	12931-78G00	RETAINER, VALVE SPRING	4	
14	12932-50MA0	COTTER, VALVE	8	
15	12933-71C00	SEAT, VALVE SPRING	4	
16	09289-05008	OIL SEAL (5X10.5X8.4)	4	

DF8AR P01
DF9.9AR P01

FIG.126A


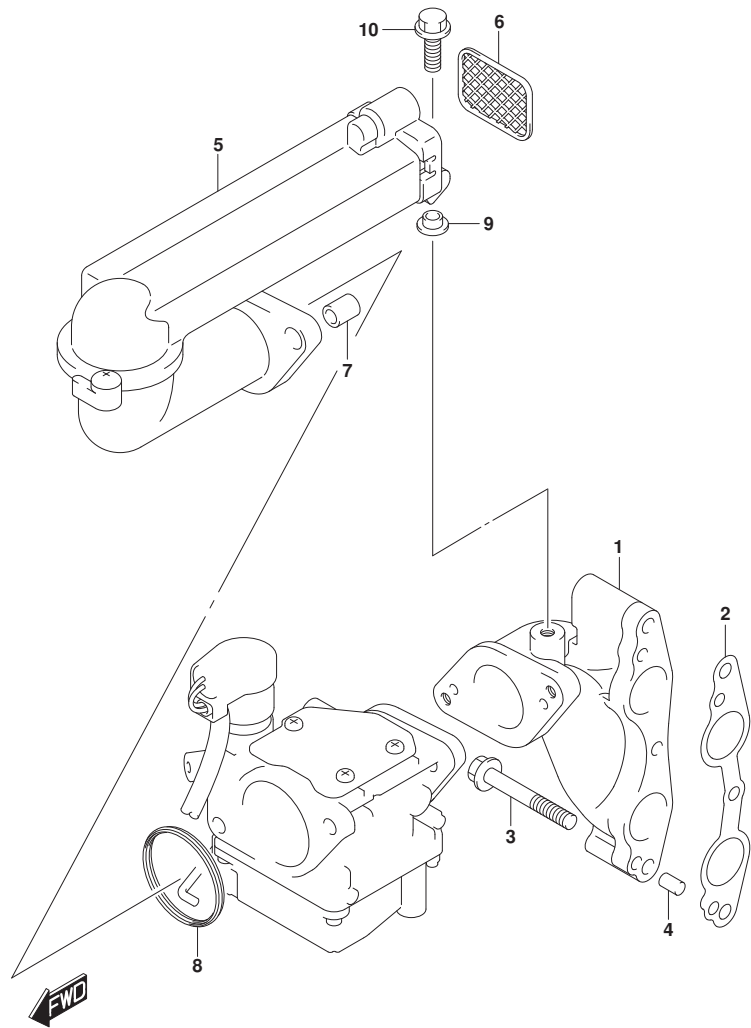


FIG.126A (1-B-9) INLET MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-99J00	MANIFOLD, INLET	1	
2	13119-99J00	GASKET, INLET MANIFOLD	1	
3	01560-06457	BOLT	3	
4	04221-05109	PIN	2	
5	13810-99J00	SILENCER	1	
6	13710-99J00	ARRESTER, FLAME	1	
7	09180-06290	SPACER (6.5X10X12)	2	
8	13832-94J00	SEAL, SILENCER	1	
9	09169-06082	WASHER	1	
10	01550-0616C	BOLT	1	

FIG.128A

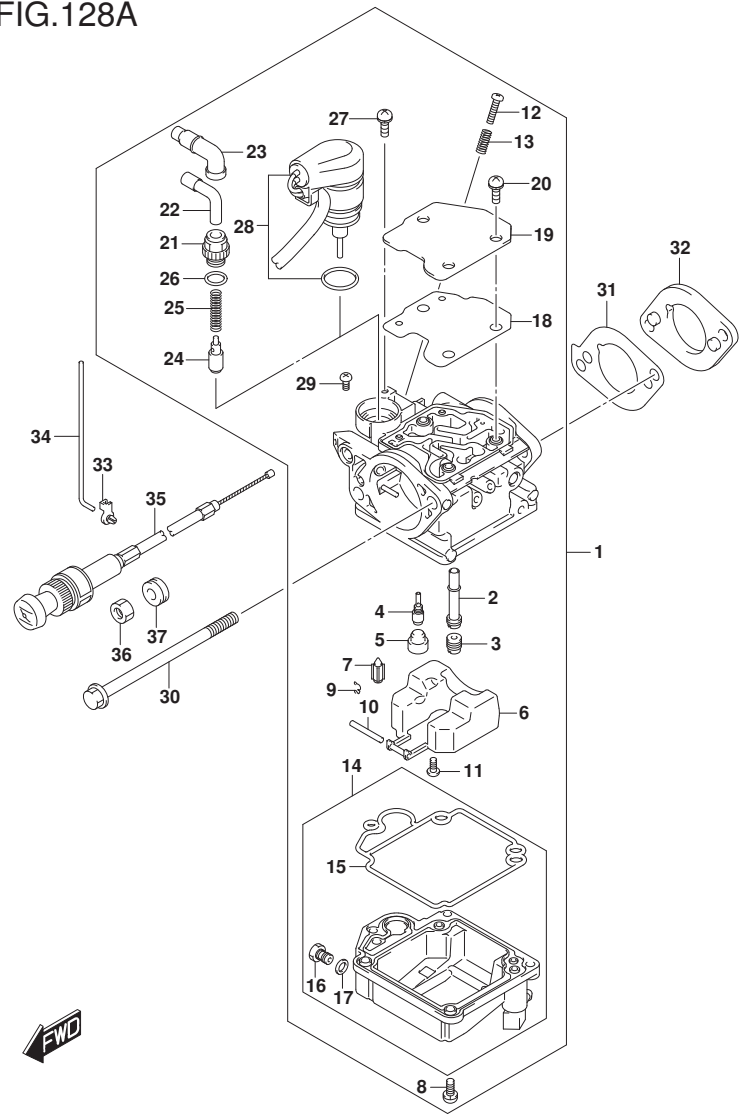


DF8A_P01_018_128A
CARBURETOR

FIG.128A (1-B-10) CARBURETOR (DF8A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	13200-99J00	CARBURETOR ASSY	1	W/MANUAL STARTER
1-2	13200-99J10	CARBURETOR ASSY	1	W/ELECTRIC STARTER
2	13236-99J00	.NOZZLE, MAIN	1	
3-1	09491-70020	.JET, MAIN (70)	1	
3-2	09491-68008	.JET, MAIN (68)	1	
4-1	09492-38011	.JET, PILOT (38)	1	
4-2	09492-35033	.JET, PILOT (35)	1	
5	13239-94J00	.CAP, RUBBER	1	
6	13250-99J00	.FLOAT	1	
7	13370-94J00	.VALVE, FLOAT	1	
8	13247-94J00	.SCREW	4	
9	13375-26E00	.CLIP	1	
10	13254-94J00	.PIN, ARM	1	
11	13802-94J00	.SCREW	1	
12	13534-94J00	.SCREW, STOP	1	
13	13268-94J00	.SPRING	1	
14-1	13240-99J00	.CHAMBER ASSY, FLOAT	1	W/MANUAL STARTER
14-2	13240-99J10	.CHAMBER ASSY, FLOAT	1	W/ELECTRIC SATRTER
15	13251-99J00	..GASKET, FLOAT CHAMBER	1	
16	13279-99J00	..SCREW, DRAIN	1	
17	13275-99J00	..WASHER, PLANE	1	
18	13283-99J00	.PACKING	1	
19	13282-99J00	.PLATE	1	
20	13367-94J00	.SCREW	3	
21	13361-99J00	.HOLDER, CABLE	1	W/MANUAL STARTER
22	13362-94J00	.GUIDE, CABLE	1	W/MANUAL STARTER
23	13363-94J00	.CAP, CABLE SEALING	1	W/MANUAL STARTER
24	13364-94J00	.VALVE, STARTER	1	W/MANUAL STARTER
25	13365-94J00	.SPRING	1	W/MANUAL STARTER
26	13295-14G00	.O RING	1	W/MANUAL STARTER


DF8A_P01_018

FIG.128A (1-B-11) CARBURETOR (DF8A)

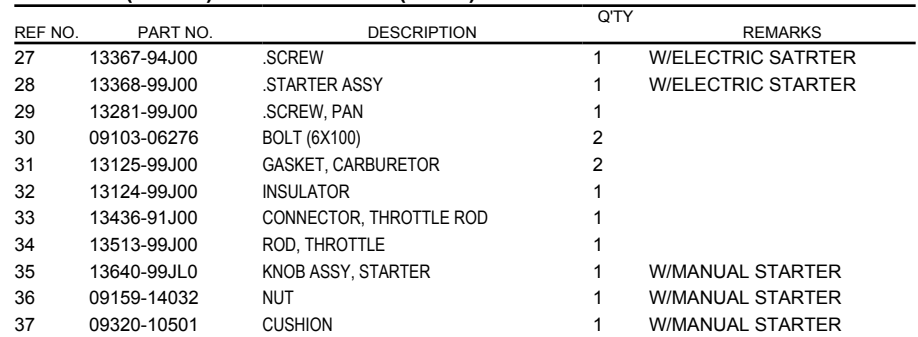

DF8A_P01_018

FIG.128B

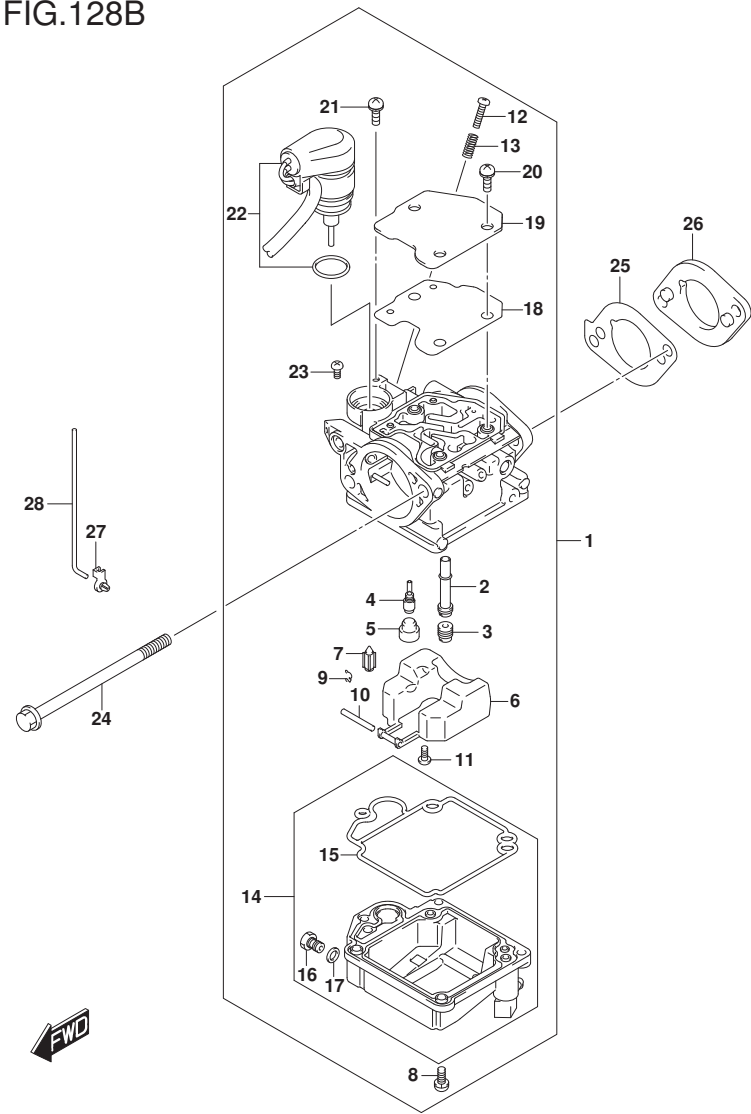


DF8A_P01_018_128B
CARBURETOR

FIG.128B (1-B-12) CARBURETOR (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-99J10	CARBURETOR ASSY	1	
2	13236-99J00	.NOZZLE, MAIN	1	
3-1	09491-70020	.JET, MAIN (70)	1	
3-2	09491-68008	.JET, MAIN (68)	1	
4-1	09492-38011	.JET, PILOT (38)	1	
4-2	09492-35033	.JET, PILOT (35)	1	
5	13239-94J00	.CAP, RUBBER	1	
6	13250-99J00	.FLOAT	1	
7	13370-94J00	.VALVE, FLOAT	1	
8	13247-94J00	.SCREW	4	
9	13375-26E00	.CLIP	1	
10	13254-94J00	.PIN, ARM	1	
11	13802-94J00	.SCREW	1	
12	13534-94J00	.SCREW, STOP	1	
13	13268-94J00	.SPRING	1	
14	13240-99J10	.CHAMBER ASSY, FLOAT	1	
15	13251-99J00	..GASKET, FLOAT CHAMBER	1	
16	13279-99J00	..SCREW, DRAIN	1	
17	13275-99J00	..WASHER, PLANE	1	
18	13283-99J00	.PACKING	1	
19	13282-99J00	.PLATE	1	
20	13367-94J00	.SCREW	3	
21	13367-94J00	.SCREW	1	
22	13368-99J00	.STARTER ASSY	1	
23	13281-99J00	.SCREW, PAN	1	
24	09103-06276	BOLT (6X100)	2	
25	13125-99J00	GASKET, CARBURETOR	2	
26	13124-99J00	INSULATOR	1	
27	13436-91J00	CONNECTOR, THROTTLE ROD	1	
28	13513-99J00	ROD, THROTTLE	1	

DF8AR P01

FIG.128C

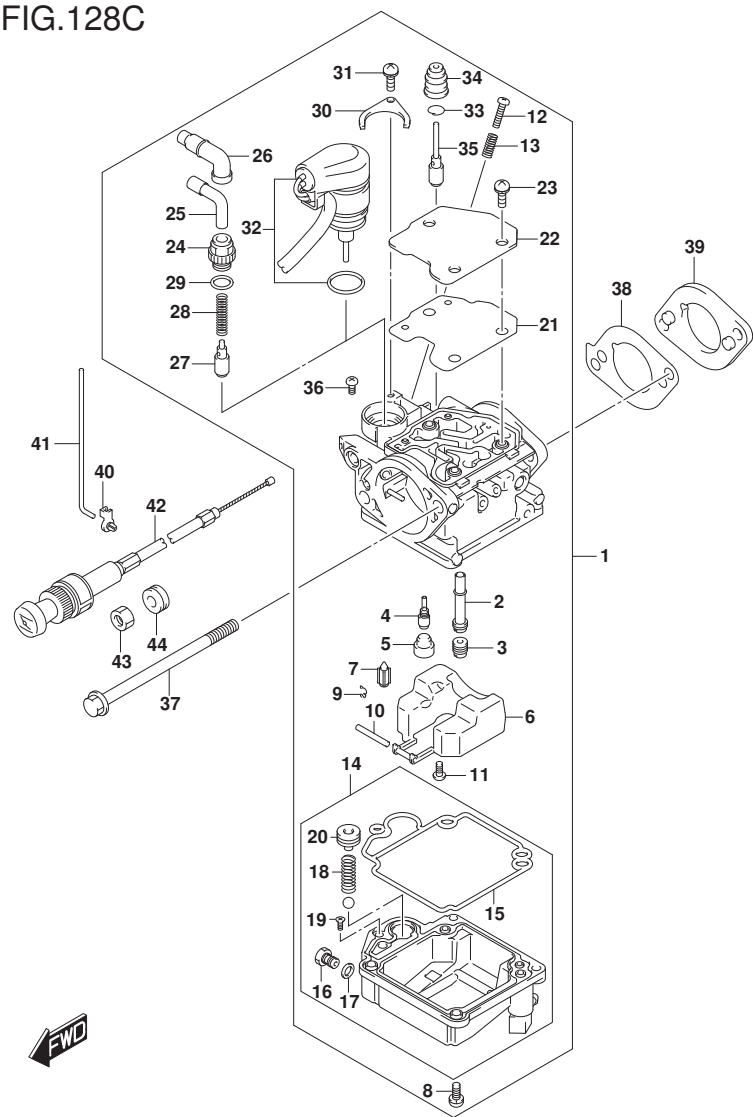

DF8A_P01_018_128C
CARBURETOR

FIG.128C (1-B-13) CARBURETOR (DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	13200-99J20	CARBURETOR ASSY	1	W/MANUAL STARTER
1-2	13200-99J30	CARBURETOR ASSY	1	W/ELECTRIC SATRTER
2	13236-99J20	.NOZZLE, MAIN	1	
3-1	09491-82013	.JET, MAIN (82)	1	
3-2	09491-80017	.JET, MAIN (80)	1	
4-1	09492-38011	.JET, PILOT (38)	1	
4-2	09492-35033	.JET, PILOT (35)	1	
5	13239-94J00	.CAP, RUBBER	1	
6	13250-99J00	.FLOAT	1	
7	13370-94J00	.VALVE, FLOAT	1	
8	13247-94J00	.SCREW	4	
9	13375-26E00	.CLIP	1	
10	13254-94J00	.PIN, ARM	1	
11	13802-94J00	.SCREW	1	
12	13534-94J00	.SCREW, STOP	1	
13	13268-94J00	.SPRING	1	
14-1	13240-99J20	.CHAMBER ASSY, FLOAT	1	W/MANUAL STARTER
14-2	13240-99J30	.CHAMBER ASSY, FLOAT	1	W/ELECTRIC SATRTER
15	13251-99J00	..GASKET, FLOAT CHAMBER	1	
16	13279-99J00	..SCREW, DRAIN	1	
17	13275-99J00	..WASHER, PLANE	1	
18	13441-99J00	..SPRING	1	
19	13443-99J00	..SCREW, SPECIAL	1	
20	13493-99J00	..PLUNGER	1	
21	13283-99J00	.PACKING	1	
22	13282-99J00	.PLATE	1	
23	13367-94J00	.SCREW	3	

DF8A_P01_018

FIG.128C

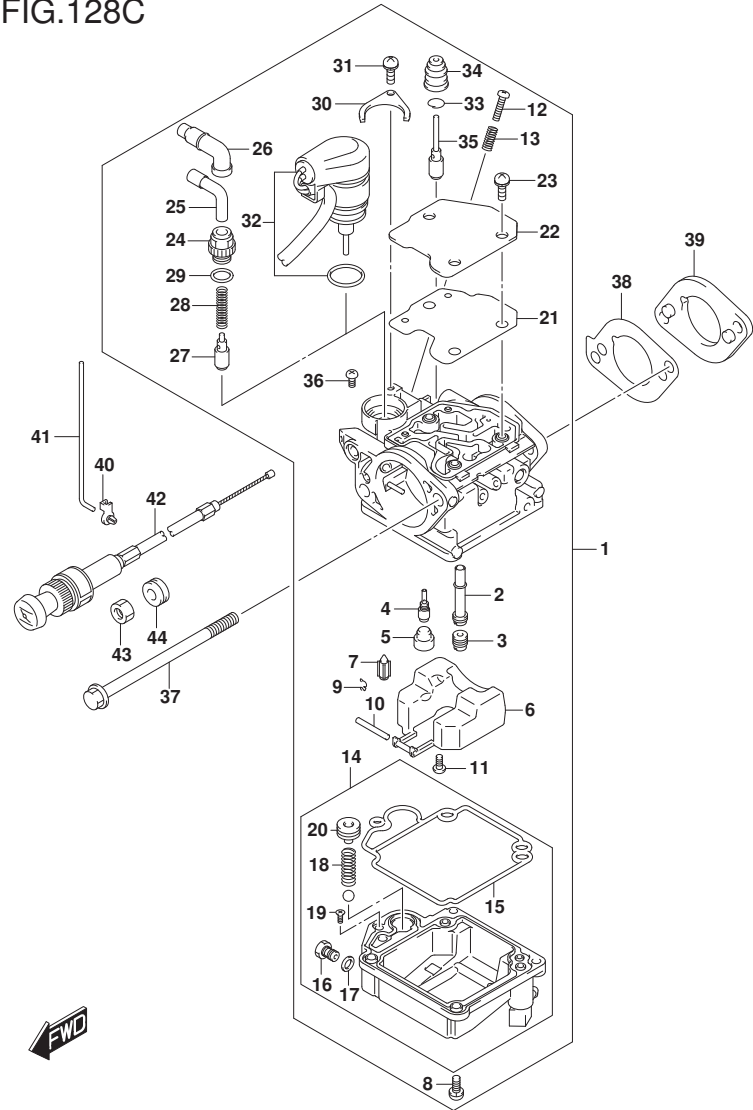


FIG.128C (1-B-14) CARBURETOR (DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	13361-99J00	.HOLDER, CABLE	1	W/MANUAL STARTER
25	13362-94J00	.GUIDE, CABLE	1	W/MANUAL STARTER
26	13363-94J00	.CAP, CABLE SEALING	1	W/MANUAL STARTER
27	13364-94J00	.VALVE, STARTER	1	W/MANUAL STARTER
28	13365-94J00	.SPRING	1	W/MANUAL STARTER
29	13295-14G00	.O RING	1	W/MANUAL STARTER
30	13428-06F30	.PLATE	1	W/ELECTRIC SATRTER
31	13367-94J00	.SCREW	1	W/ELECTRIC SATRTER
32	13368-99J00	.STARTER ASSY	1	W/ELECTRIC STARTER
33	13494-94J00	.CLIP	1	
34	13495-94J00	.CAP, RUBBER	1	
35	13496-99J00	.ROD, LINK	1	
36	13281-99J00	.SCREW, PAN	1	
37	09103-06276	BOLT (6X100)	2	
38	13125-99J00	GASKET, CARBURETOR	2	
39	13124-99J00	INSULATOR	1	
40	13436-91J00	CONNECTOR, THROTTLE ROD	1	
41	13513-99J00	ROD, THROTTLE	1	
42	13640-99JL0	KNOB ASSY, STARTER	1	W/MANUAL STARTER
43	09159-14032	NUT	1	W/MANUAL STARTER
44	09320-10501	CUSHION	1	W/MANUAL STARTER

DF9.9A P01

FIG.128D


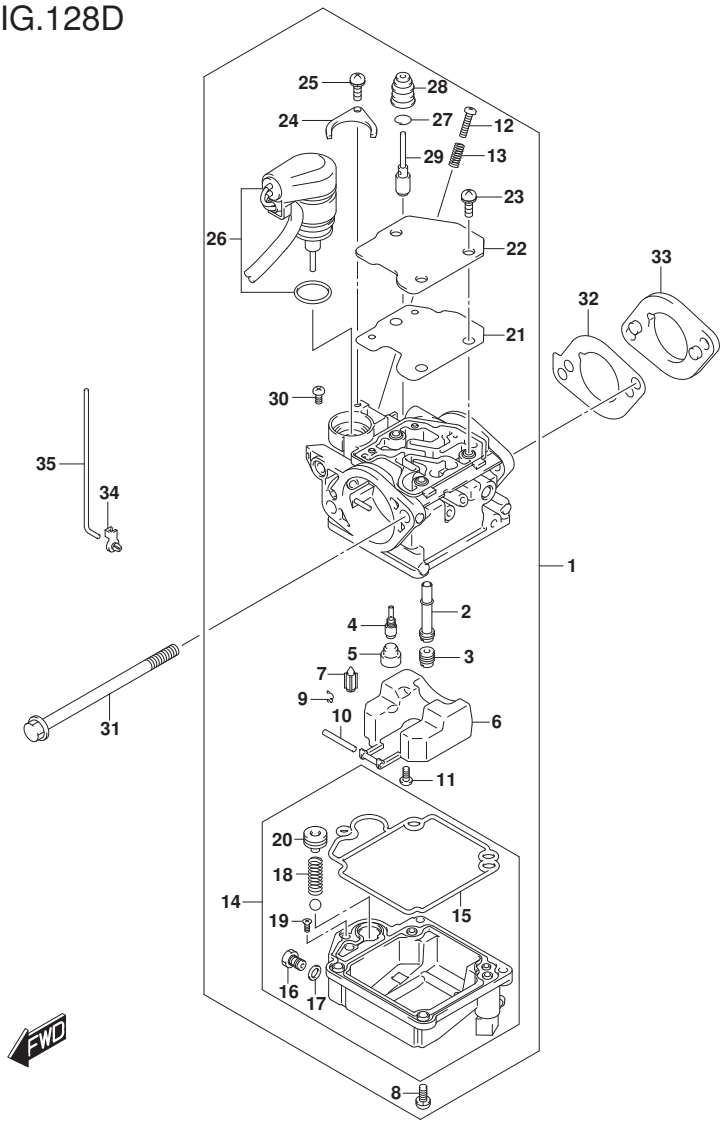


FIG.128D (1-B-15) CARBURETOR (DF9.9AR)


REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-99J30	CARBURETOR ASSY	1	
2	13236-99J20	.NOZZLE, MAIN	1	
3-1	09491-82013	.JET, MAIN (82)	1	
3-2	09491-80017	.JET, MAIN (80)	1	
4-1	09492-38011	.JET, PILOT (38)	1	
4-2	09492-35033	.JET, PILOT (35)	1	
5	13239-94J00	.CAP, RUBBER	1	
6	13250-99J00	.FLOAT	1	
7	13370-94J00	.VALVE, FLOAT	1	
8	13247-94J00	.SCREW	4	
9	13375-26E00	.CLIP	1	
10	13254-94J00	.PIN, ARM	1	
11	13802-94J00	.SCREW	1	
12	13534-94J00	.SCREW, STOP	1	
13	13268-94J00	.SPRING	1	
14	13240-99J30	.CHAMBER ASSY, FLOAT	1	
15	13251-99J00	..GASKET, FLOAT CHAMBER	1	
16	13279-99J00	..SCREW, DRAIN	1	
17	13275-99J00	..WASHER, PLANE	1	
18	13441-99J00	..SPRING	1	
19	13443-99J00	..SCREW, SPECIAL	1	
20	13493-99J00	..PLUNGER	1	
21	13283-99J00	.PACKING	1	
22	13282-99J00	.PLATE	1	
23	13367-94J00	.SCREW	3	
24	13428-06F30	.PLATE	1	
25	13367-94J00	.SCREW	1	
26	13368-99J00	.STARTER ASSY	1	
27	13494-94J00	.CLIP	1	
28	13495-94J00	.CAP, RUBBER	1	

FIG.128D (1-C-2) CARBURETOR (DF9.9AR)

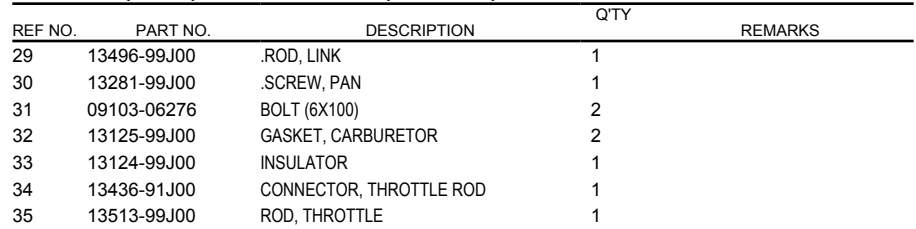

DF8A_P01_018

FIG.146A

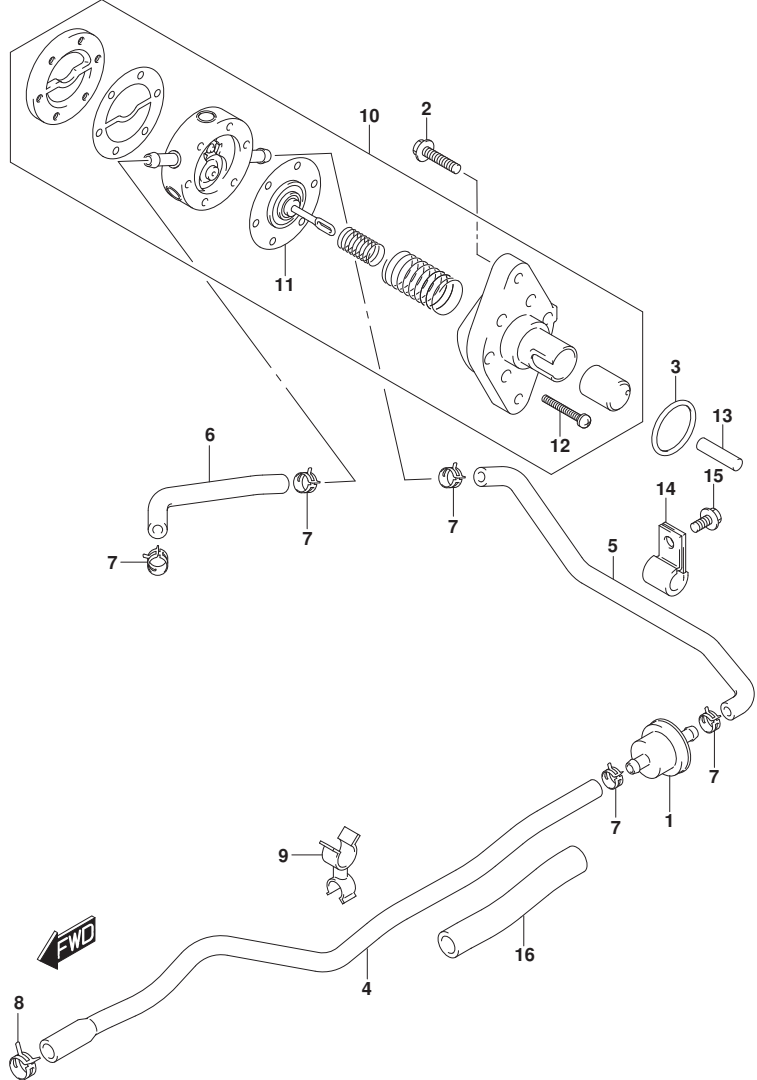

DF8A_P01_018_146A
FUEL PUMP

FIG.146A (1-C-3) FUEL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15410-98500	FILTER, FUEL	1	
2	01550-0625C	BOLT	2	
3	09280-26005	O RING (D:2.4,ID:26.2)	1	
4	15192-99JL0	HOSE, FUEL (CONN TO FILTER)	1	
5	15193-99JL0	HOSE, FUEL (FILTER TO PUMP)	1	
6	15191-99J11	HOSE, FUEL (PUMP TO CARB)	1	
7	09401-09404	CLIP	5	
8	09401-11422	CLIP	1	
9	09408-00054	CLAMP	1	
10	15100-94J02	PUMP ASSY, FUEL	1	
11	15170-94J02	.DIAPHRAGM SET	1	
12	15251-93E01	.SCREW	6	
13	15131-99J00	ROD, FUEL PUMP	1	
14	09403-12406	CLAMP	1	
15	01550-0612C	BOLT	1	
16	18498-99J00	PROTECTOR, FUEL HOSE (100)	1	

FIG.160A

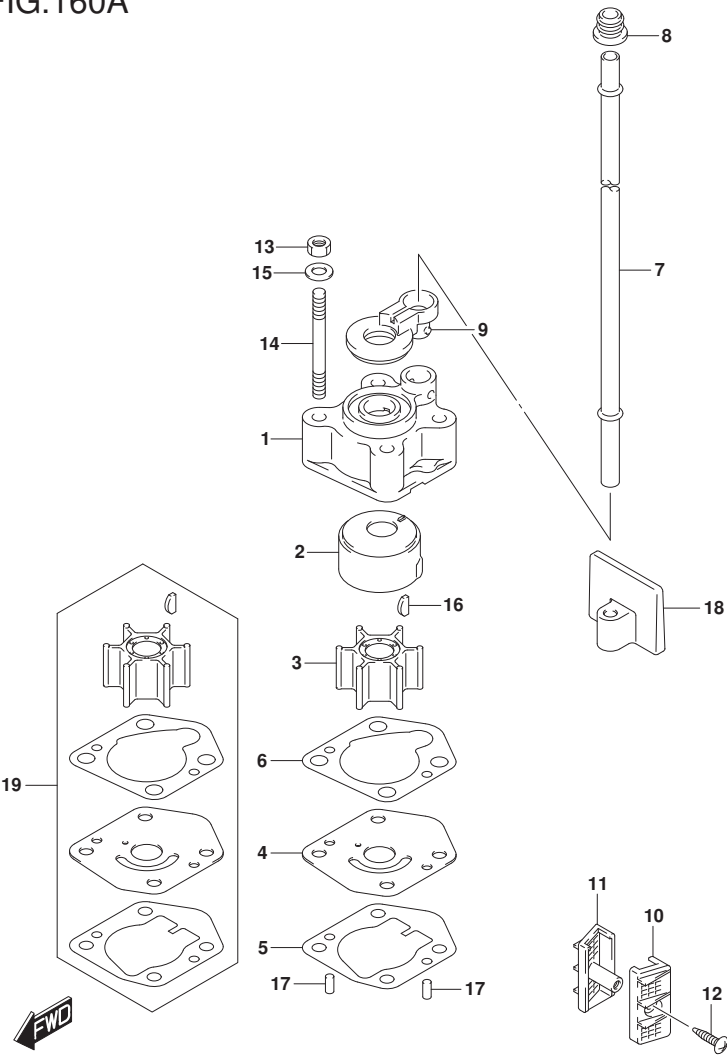


FIG.160A (1-C-4) WATER PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17411-94J00	CASE, WATER PUMP	1	
2	17413-94J00	SLEEVE, WATER PUMP CASE	1	
3	17461-939M0	IMPELLER, WATER PUMP	1	
4	17471-99J00	PANEL, PUMP CASE UNDER	1	
5	17472-99J00	GASKET, PUMP CASE PANEL	1	
6	17473-94J00	GASKET, WATER PUMP CASE	1	
7-1	17561-99J00	TUBE, WATER (S)	1	W/TRANSOM(S)
7-2	17561-99J10	TUBE, WATER (L)	1	W/TRANSOM(L)
8	17563-94J00	GROMMET, WATER TUBE	1	
9	17564-99J00	BUSH, WATER PUMP CASE	1	
10	17631-99J20	FILTER, WATER PORT SIDE	1	
11	17632-99J30	FILTER, WATER STBD SIDE	1	
12	03141-0416A	SCREW	1	
13	29141-93J00	NUT, WATER PUMP CASE	4	
14	09108-06141	STUD BOLT	4	
15	09160-06082	WASHER (6.5X13X1.0)	4	
16	09420-03009	KEY	1	
17	09202-04008	PIN (4X9)	2	
18	17565-99J00	GUIDE, WATER TUBE	1	
19	17400-99J01	KIT, WATER PUMP REPAIR	1	OPT

FIG.162A

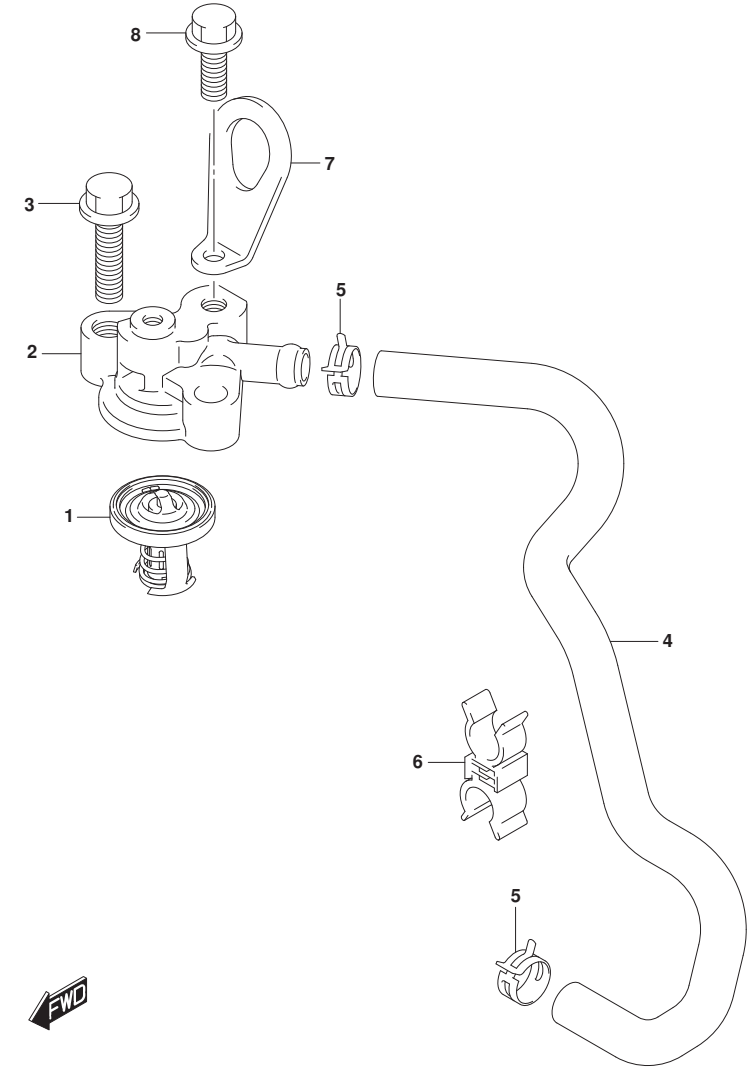


FIG.162A (1-C-5) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17670-94J00	THERMOSTAT (60DEG)	1	
2	17681-99J10	COVER, THERMOSTAT	1	
3	01550-08307	BOLT	2	
4	11197-99J00	HOSE, WATER RETURN	1	
5	09401-12413	CLIP	2	
6	09408-00173	CLAMP	1	
7	11291-91B50	HOOK, ENGINE	1	OPT
8	01550-08207	BOLT	1	OPT

FIG.166A

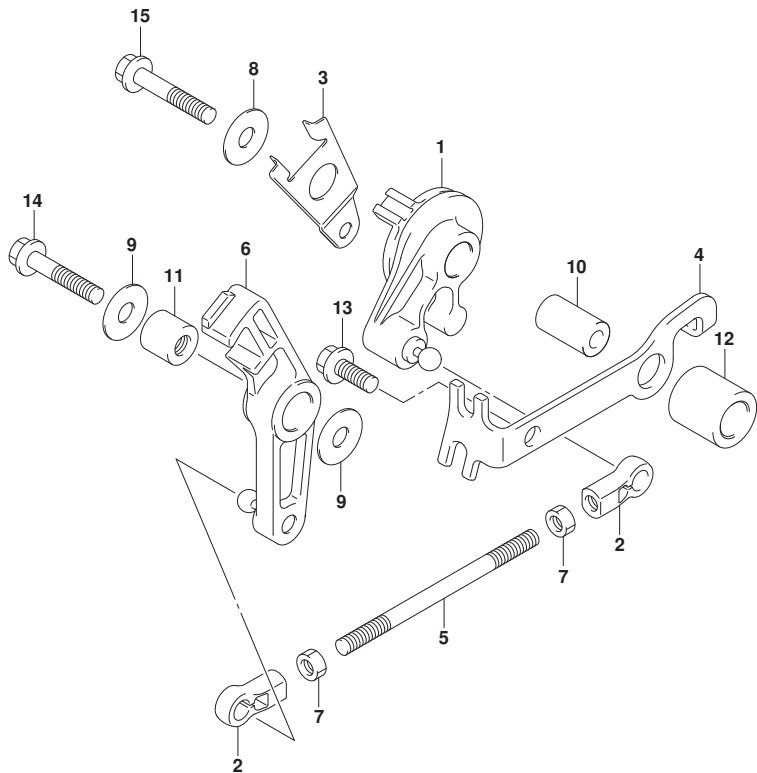


FIG.166A (1-C-6) THROTTLE CONTROL (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19120-99J00	DRUM, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR, THROTTLE ROD	2	
3	19148-99J00	LEVER, INTERLINK THROTTLE NO.1	1	
4	19184-99J00	BRACKET, THROTTLE CABLE	1	
5	19656-99J00	ROD, THROTTLE	1	
6	19810-99J00	STOPPER, THROTTLE	1	
7	09140-05005	NUT	2	
8	09160-06046	WASHER (6.5X20X1.5)	1	
9	09160-06046	WASHER (6.5X20X1.5)	2	
10	09180-06186	SPACER (6.2X12.6X21)	1	
11	09180-06230	SPACER (6.2X12.6X12.5)	1	
12	09180-12158	SPACER (12.2X20X19.9)	1	
13	01550-0616C	BOLT	1	
14	01550-0630C	BOLT	1	
15	01550-06357	BOLT	1	

DF8A P01
DF9.9A P01



FIG.166B

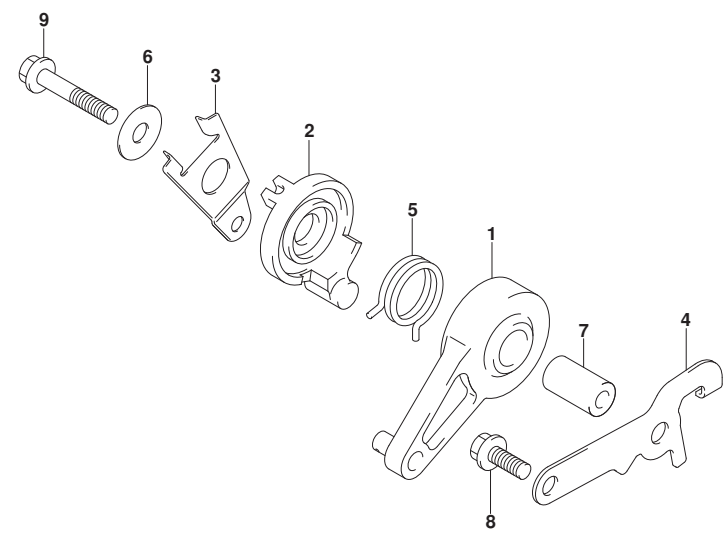


FIG.166B (1-C-7) THROTTLE CONTROL (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19120-99J11	LEVER, THROTTLE CONTROL	1	
2	19122-99J00	LEVER, INTERLINK THROTTLE NO.2	1	
3	19148-99J10	LEVER, INTERLINK THROTTLE NO.1	1	
4	19184-99J10	PLATE, THROTTLE LINK	1	
5	19185-99J00	SPRING, THROTTLE LEVER	1	
6	09160-06046	WASHER (6.5X20X1.5)	1	
7	09180-06186	SPACER (6.2X12.6X21)	1	
8	01550-0616C	BOLT	1	
9	01550-06357	BOLT	1	

DF8AR P01
DF9.9AR P01



FIG.167A

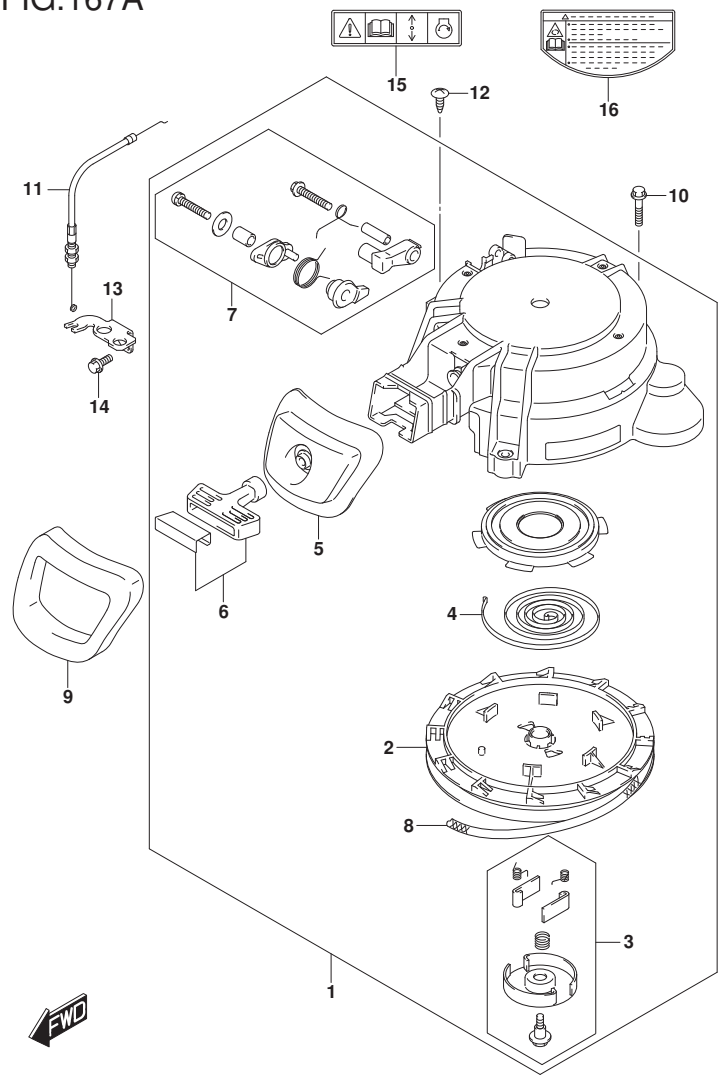


FIG.167A (1-C-8) RECOIL STARTER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	18100-99J00	STARTER ASSY, RECOIL	1	
2	18120-99J00	.REEL	1	
3	18130-99J00	.RATCHET SET	1	
4	18142-98600	.SPRING, SPIRAL	1	
5	18181-99J00	.GUIDE, ROPE	1	
6	18210-99J00	.GRIP ASSY	1	
7	18280-99J00	.NSI SET	1	
8	99000-81158-50M	ROPE	1	OPT L:50000->1380
9	18193-99J00	SEAL, RECOIL STARTER	1	
10	01550-0630C	BOLT	3	
11	18290-99J02	CABLE ASSY, NSI	1	
12	03542-06129	SCREW	2	
13	37726-99J01	BRACKET, NSI CABLE	1	
14	01550-0616C	BOLT	2	
15	69711-93E10	LABEL (S.I.G.P.)	1	
16	61472-97J00	LABEL, RECOIL STARTER	1	

FIG.175A

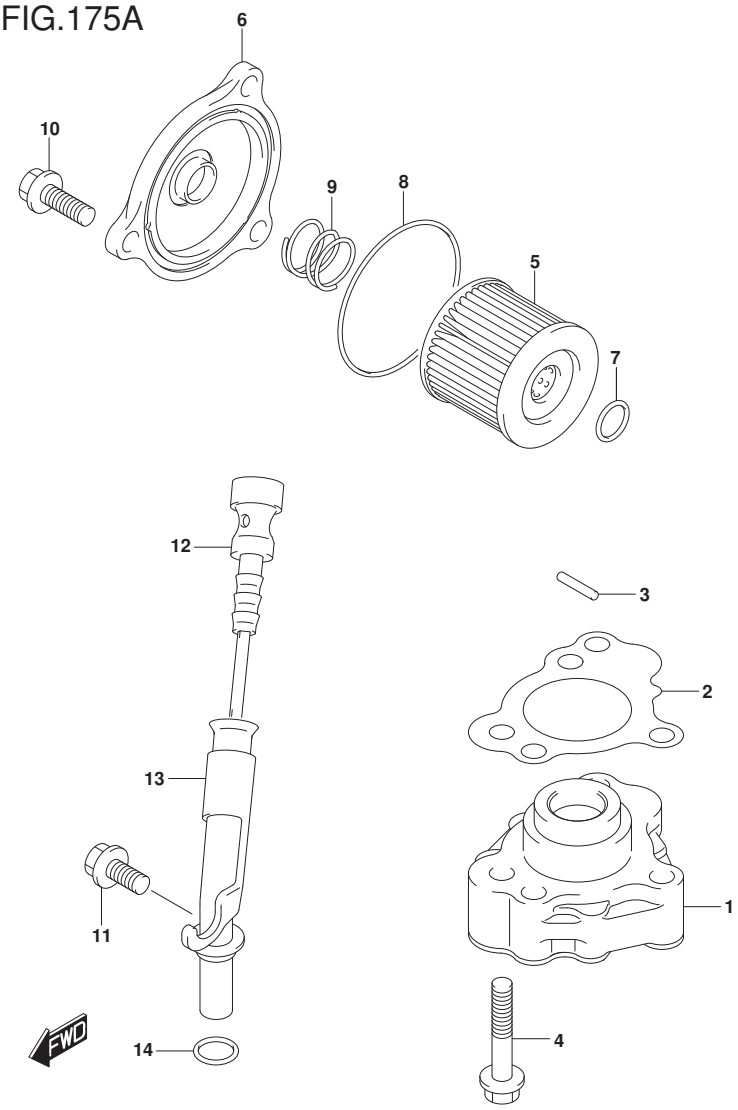


FIG.175A (1-C-9) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	16400-99JL0	PUMP ASSY, OIL	1	
2	16542-99J00	GASKET, OIL PUMP	1	
3	09261-03009	ROLLER (3X15.8)	1	
4	01550-06357	BOLT	3	
5	16510-45H10	FILTER, ENGINE OIL	1	
6	16512-99J00	CAP, OIL FILTER	1	
7	09280-13004	O RING (D:1.9,ID:13)	1	
8	09280-54001	O RING (D:2.4,ID:52.6)	1	
9	09440-18002	SPRING	1	
10	01550-0620C	BOLT	3	
11	01550-0612C	BOLT	1	
12	16910-99J01	GAUGE, OIL LEVEL	1	
13	16930-99JL0	GUIDE, OIL LEVEL GAUGE	1	
14	09280-10016	O RING (D:1.9,ID:9.8)	1	

FIG.206A

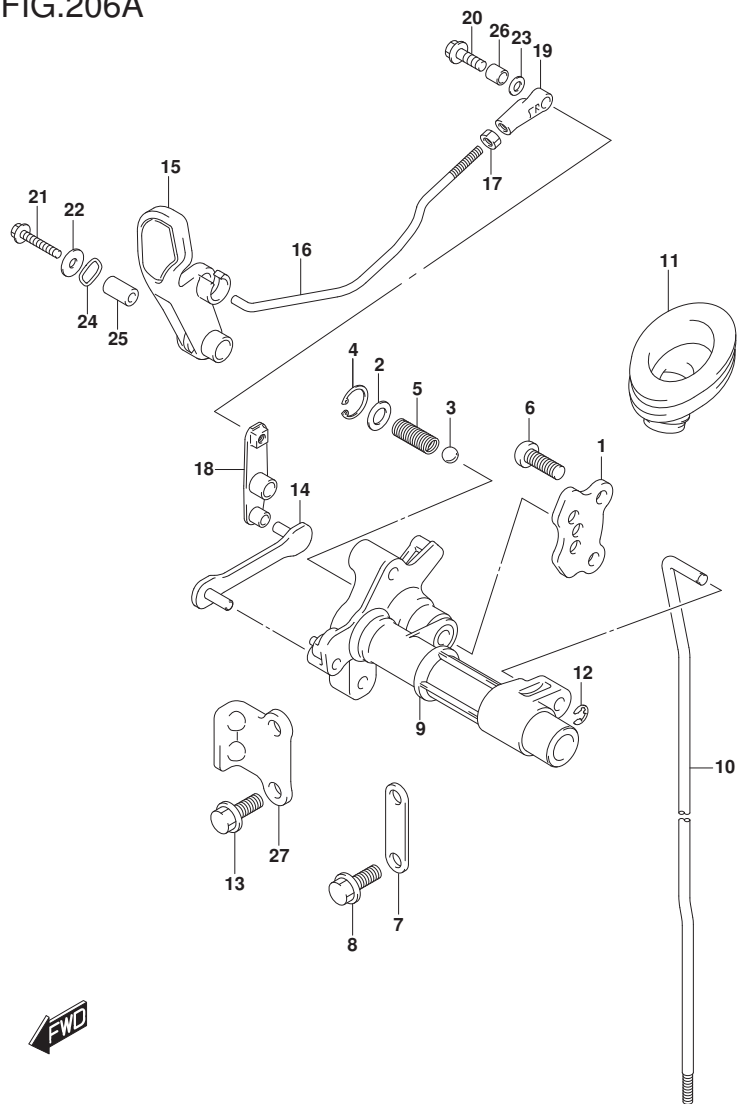


FIG.206A (1-C-10) CLUTCH ROD (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21122-99J10	PLATE, CLUTCH NOTCH	1	
2	09160-06082	WASHER (6.5X13X1.0)	1	
3	09260-10006	BALL	1	
4	09381-14004	CIRCLIP	1	
5	09440-07079	SPRING	1	
6	02112-06127	SCREW	2	
7	21126-99J00	HOLDER, CLUTCH SHAFT	1	
8	01550-0616C	BOLT	2	
9	21210-99J00	SHAFT, CLUTCH LEVER	1	
10-1	23111-99J00	ROD, CLUTCH (S)	1	W/TRANSOM(S)
10-2	23111-99J10	ROD, CLUTCH (L)	1	W/TRANSOM(L)
11	23131-99J00	BOOT, CLUTCH ROD	1	
12	09383-04002	E RING	1	
13	01550-0616C	BOLT	2	
14	23115-99J01	LINK, SHIFT DRUM	1	
15	21111-89L00	LEVER, CLUTCH	1	
16	23115-99J10	LINK, CLUTCH LEVER	1	
17	29141-93J00	NUT	1	
18	23210-99J11	LEVER, CLUTCH CONTROL	1	
19	23312-94JL0	CONNECTOR, CLUTCH LINK	1	
20	01550-0620C	BOLT	1	
21	09116-06234	BOLT (6X35)	1	
22	09160-06046	WASHER (6.5X20X1.5)	1	
23	09160-06168	WASHER (6X14X1)	1	
24	09164-14008	WASHER	2	
25	09180-06186	SPACER (6.2X12.6X21)	1	
26	09180-06370	SPACER (6.1X8X10)	1	
27	21126-99J10	HOLDER, CLUTCH SHAFT	1	

DF8A P01
DF9.9A P01

FIG.206B

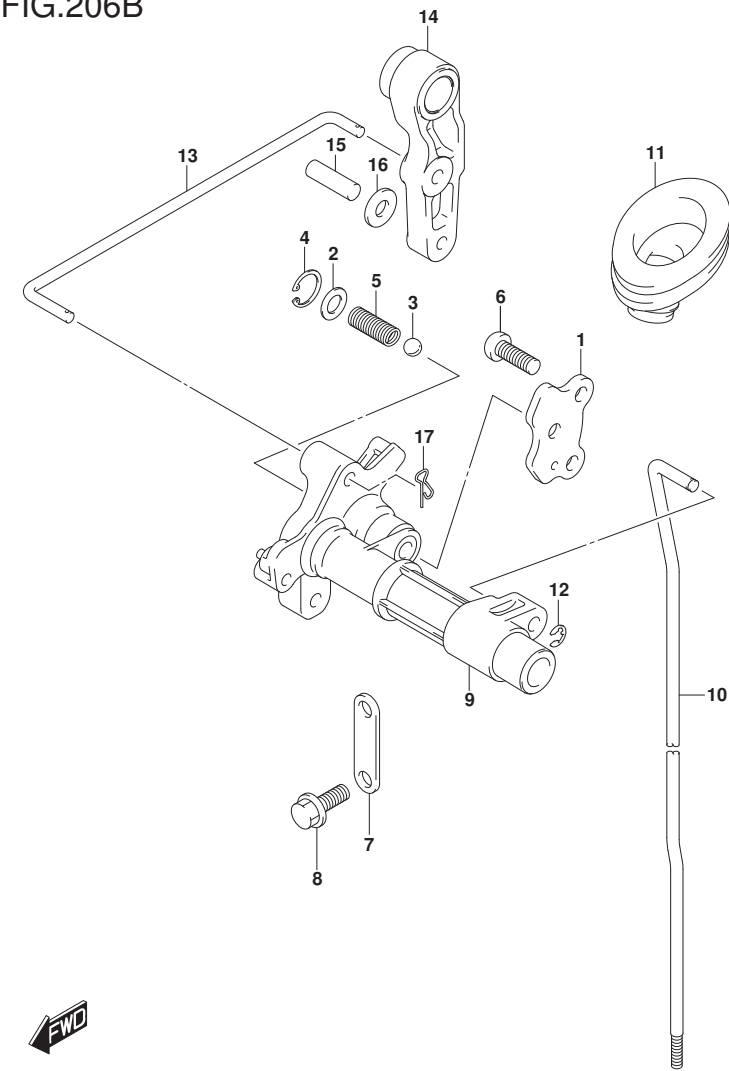


FIG.206B (1-C-11) CLUTCH ROD (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21122-99J00	PLATE, CLUTCH NOTCH	1	
2	09160-06082	WASHER (6.5X13X1.0)	1	
3	09260-10006	BALL	1	
4	09381-14004	CIRCLIP	1	
5	09440-07079	SPRING	1	
6	02112-06127	SCREW	2	
7	21126-99J00	HOLDER, CLUTCH SHAFT	1	
8	01550-0616C	BOLT	2	
9	21210-99J00	SHAFT, CLUTCH LEVER	1	
10-1	23111-99J00	ROD, CLUTCH (S)	1	W/TRANSOM(S)
10-2	23111-99J10	ROD, CLUTCH (L)	1	W/TRANSOM(L)
11	23131-99J00	BOOT, CLUTCH ROD	1	
12	09383-04002	E RING	1	
13	21241-99J00	LINK, CLUTCH LEVER	1	
14	23210-99J00	LEVER, CLUTCH CONTROL	1	
15	09204-01002	PIN	1	
16	09160-05029	WASHER (5.5X12X0.8)	2	
17	09385-04003	CLIP	1	

DF8AR P01
DF9.9AR P01



FIG.210A

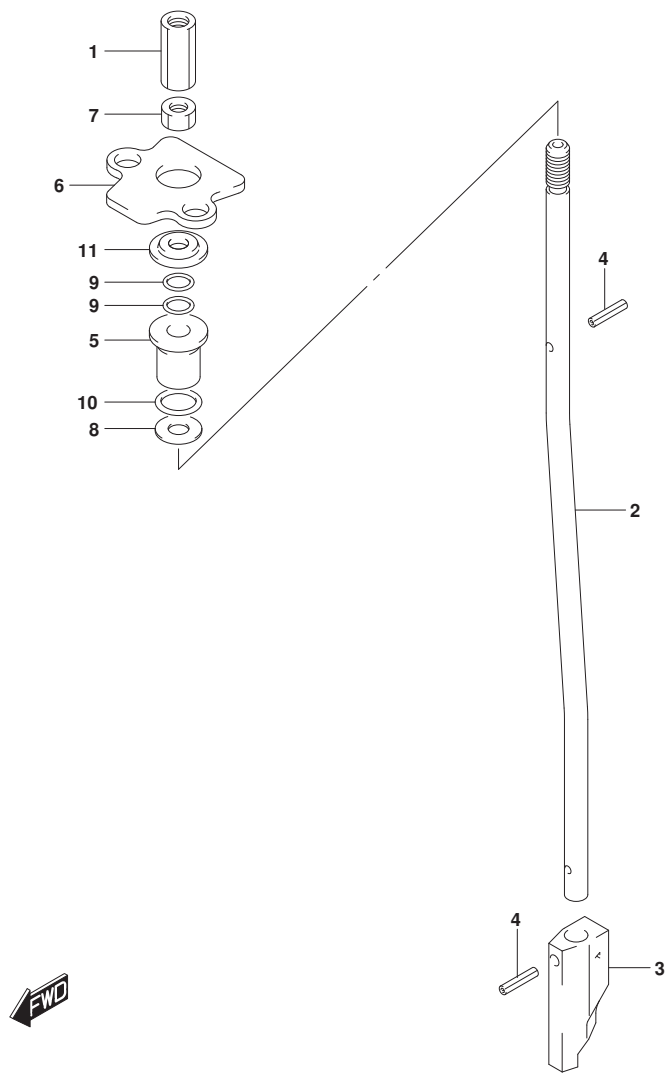


FIG.210A (1-C-12) SHIFT ROD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23311-95J00	CONNECTOR, CLUTCH ROD	1	
2	25111-99J01	ROD, SHIFT	1	
3	25311-99J00	CAM, SHIFT	1	
4	09205-02004	SPRING PIN (2.5X12)	2	
5	25211-99JL0	GUIDE, SHIFT ROD	1	
6	25215-99J00	STOPPER, SHIFT ROD GUIDE	1	
7	29141-93J00	NUT, CLUTCH ROD (M6)	1	
8	09160-06082	WASHER (6.5X13X1.0)	1	
9	09280-06012	O RING (D:1.7,ID:5.8)	2	
10	09280-09012	O RING (D:2.3,ID:9)	1	
11	09289-06L02	DUST SEAL (5X17X3.5)	1	

FIG. 220A

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22


23

24

FWD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57100-99JN0	SHAFT ASSY, DRIVE (S)	1	W/TRANSOM(S)
1-2	57100-99JP0	SHAFT ASSY, DRIVE (L)	1	W/TRANSOM(L)
2	08110-60020	.BEARING	1	
3	09380-15001	.SNAP RING	1	
4	09160-20027	WASHER (20X35X2.75)	1	
5-1	09181-20251	SHIM (T:1.0)	1	
5-2	09160-20042	SHIM (T:1.1)	1	
5-3	09160-20043	SHIM (T:1.2)	1	
5-4	09160-20044	SHIM (T:1.3)	1	
5-5	09181-20244	SHIM (T:0.7)	1	
5-6	09181-20246	SHIM (T:0.8)	1	
5-7	09181-20248	SHIM (T:0.9)	1	
6	09160-21009	WASHER (21X35X2.75)	1	
7	09263-20024	BEARING (20X35X4.5)	1	
8	57311-99J10	PINION (NT:12)	1	
9	57510-99J11	GEAR, FORWARD (NT:25)	1	
10	57521-99J10	GEAR, REVERSE (NT:25)	1	
11-1	09160-17024	WASHER (T:1.1)	1	
11-2	09160-17039	WASHER (T:1.2)	1	
11-3	09160-17025	WASHER (T:1.3)	1	
11-4	09160-17040	WASHER (T:1.4)	1	
11-5	09160-17026	WASHER (T:1.5)	1	
11-6	09160-17041	WASHER (T:1.6)	1	
11-7	09160-17027	WASHER (T:1.7)	1	
11-8	09160-17042	WASHER (T:1.8)	1	
11-9	09160-17028	WASHER (T:1.9)	1	
12-1	09181-25160	SHIM (T:0.7)	2	
12-2	09181-25162	SHIM (T:0.8)	2	
12-3	09181-25164	SHIM (T:0.9)	2	
12-4	09160-25040	WASHER (T:1.0)	2	
12-5	09160-25041	WASHER (T:1.1)	2	
12-6	09160-25042	WASHER (T:1.2)	2	
12-7	09181-25181	SHIM (T:1.3)	2	
13	09181-15241	SHIM (15X22X2)	1	

FIG.220A

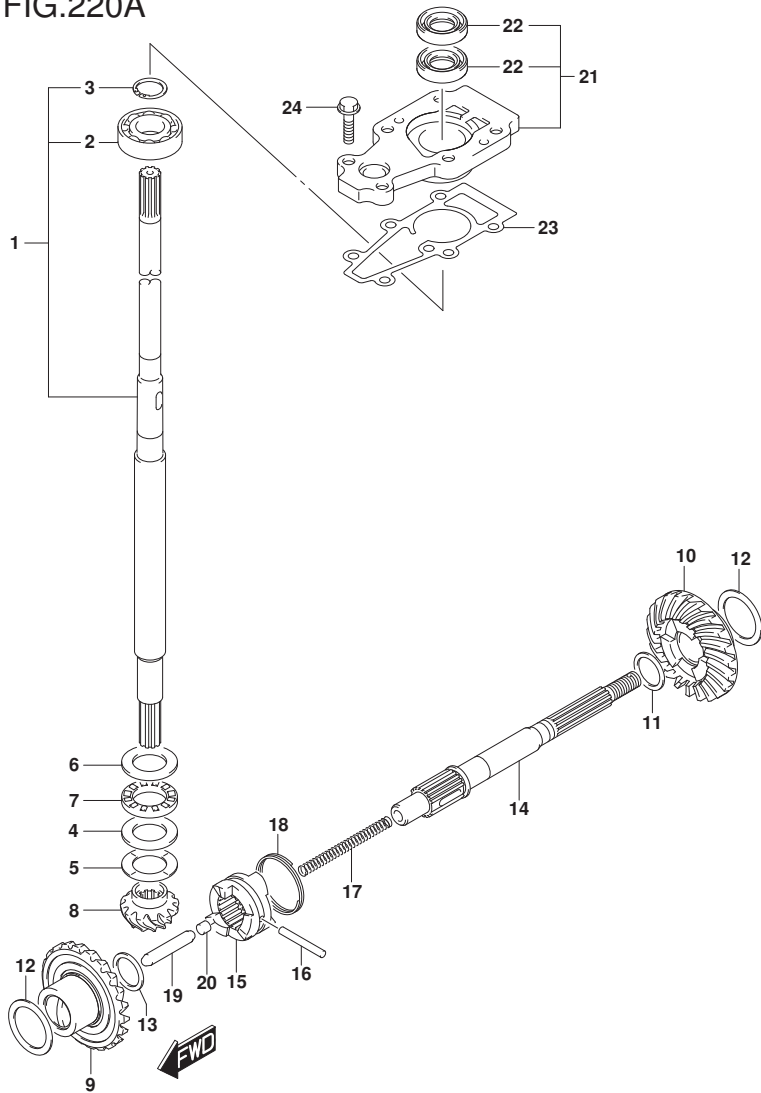

DF8A_P01_018_220A
TRANSMISSION

FIG.220A (1-C-14) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14	57610-99JL0	SHAFT, PROPELLER	1	
15	57621-99J11	SHIFTER, CLUTCH DOG	1	
16	09202-04025	PIN (4X31)	1	
17	59441-94J00	SPRING, RETURN	1	
18	59441-99J00	SPRING, DOG	1	
19	57631-93901	ROD, PUSH	1	
20	57632-98501	PIN (6X6)	1	
21	56130-99J30	HOUSING, DRIVE SHAFT	1	
22	09282-13L01	.OIL SEAL (12.5X25X7)	2	
23	56132-99J10	GASKET, DRIVE SHAFT BRG HSG	1	
24	09116-06229	BOLT (6X25)	2	

DF8A_P01_018

FIG.301A

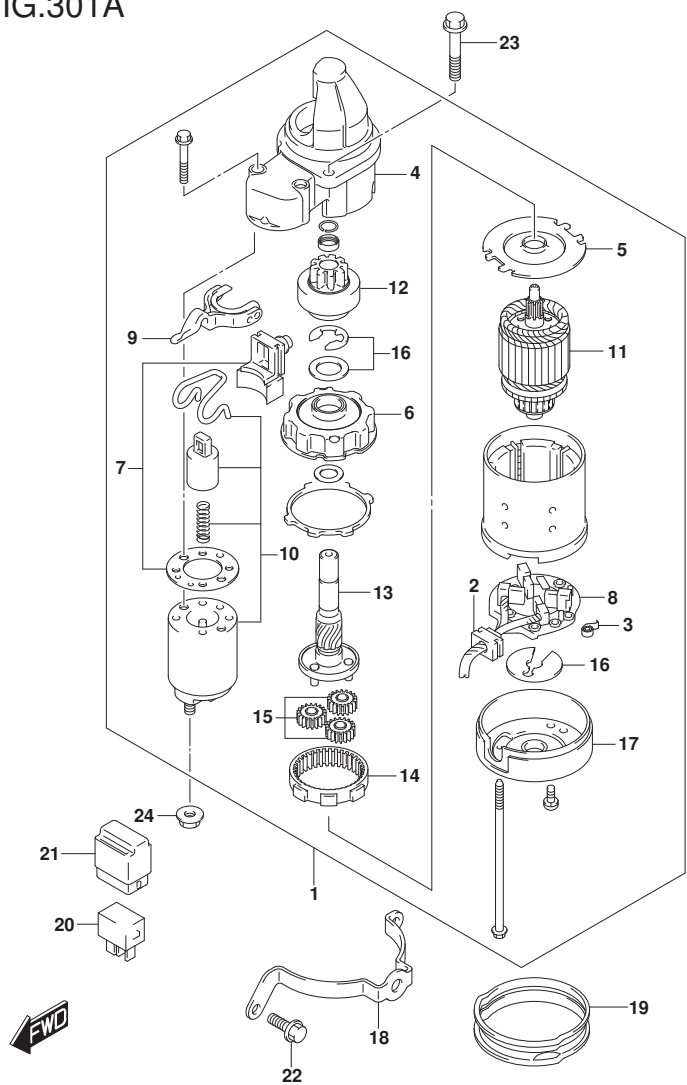


FIG.301A (1-C-15) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94J22	STARTING MOTOR	1	
2	31131-94J00	.BRUSH SET, PLUS	1	
3	31135-90J00	.SPRING	4	
4	31151-94J01	.CASE, GEAR	1	
5	31152-90J00	.PLATE, CENTER	1	
6	31153-90J00	.BRACKET, PLANET GEAR	1	
7	31171-96J00	.COVER KIT, DUST	1	
8	31173-94J01	.HOLDER ASSY, BRUSH	1	
9	31191-96J00	.LEVER, SHIFT	1	
10	31220-94J00	.SWITCH, MAGNET	1	
11	31310-90J00	.ARMATURE	1	
12	31320-94J00	.PINION	1	
13	31341-94J00	.SHAFT, PINION	1	
14	31343-90J00	.INTERNAL GEAR	1	
15	31344-90J00	.GEAR, PLANETARY	3	
16	31360-93J01	.WASHER SET	1	
17	31170-94J00	.COVER ASSY, STARTER MOTOR REAR	1	
18	31912-99J00	BAND, STARTING MOTOR	1	
19	31918-94J00	DAMPER, LOWER	1	
20	38860-76F01	RELAY, STARTING MOTOR	1	
21	38915-90J00	HOLDER, RELAY	1	
22	01550-06167	BOLT	2	LOWER
23	01550-08257	BOLT	2	UPPER
24	08316-10087	NUT	1	

FIG.303A

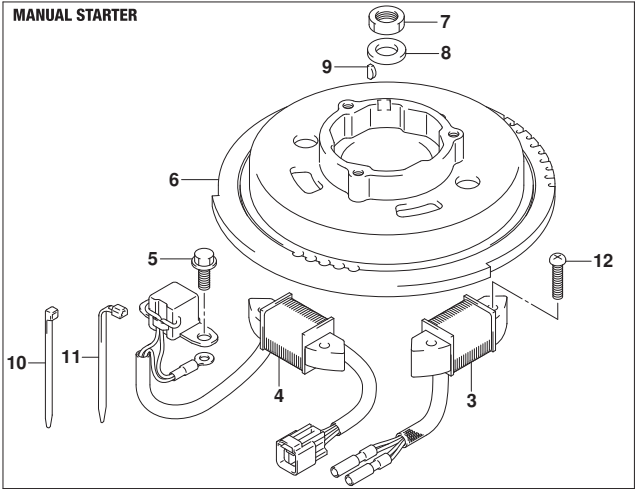
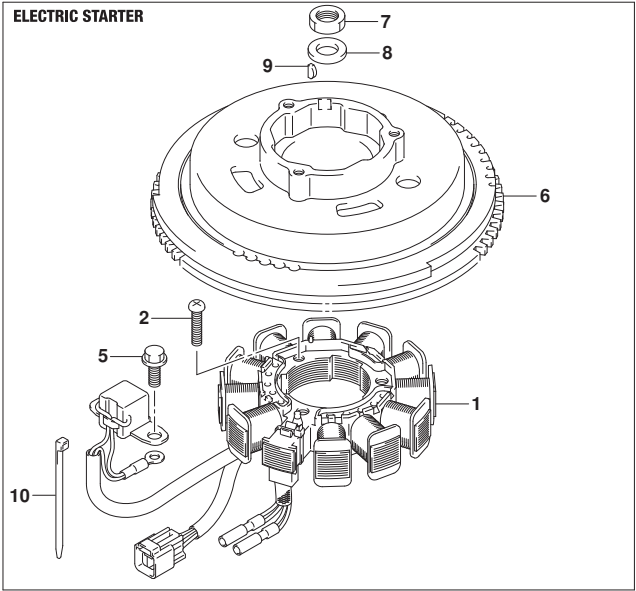


FIG.303A (1-D-2) MAGNETO (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32120-99J00	COIL, STATOR & PULSER	1	W/ELECTRIC SATRTER
2	09125-06035	SCREW (6X25)	3	W/ELECTRIC SATRTER
3	32120-99J10	COIL, BATTERY CHARGING	1	W/MANUAL STARTER
4	32140-99J11	COIL, EXITER / PULSER	1	W/MANUAL STARTER
5	01550-05127	BOLT	2	
6-1	32102-99J00	FLYWHEEL	1	W/ELECTRIC SATRTER
6-2	32102-99J10	FLYWHEEL	1	W/MANUAL STARTER
7	09140-14008	NUT	1	
8	09160-15057	WASHER (15X27X4)	1	
9	08341-31039	KEY	1	
10	09407-14407	CLAMP (L:145)	1	
11	09407-14403	CLAMP (L:125)	1	W/MANUAL STARTER
12	02112-06307	SCREW	4	W/MANUAL STARTER

DF8A P01
DF9.9A P01

FIG.303B

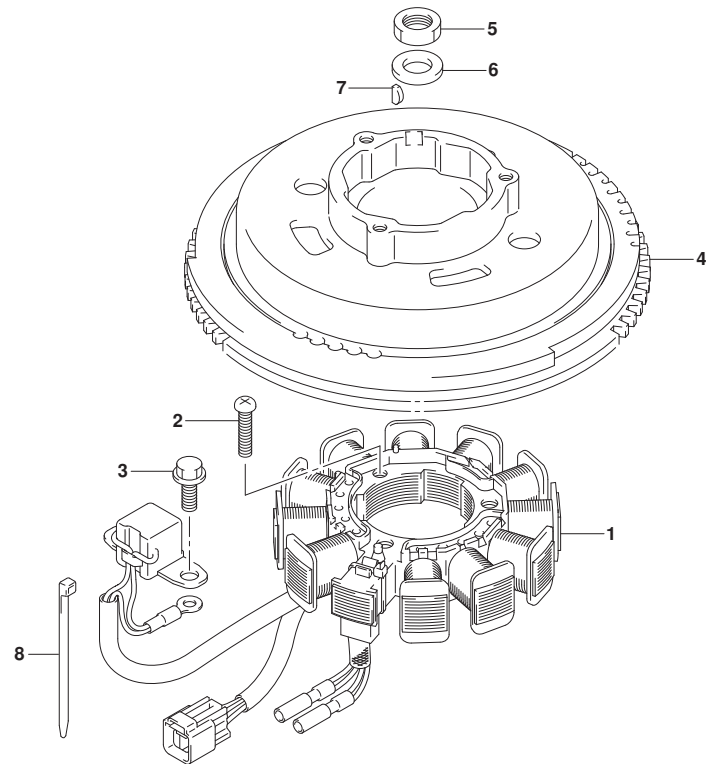


FIG.303B (1-D-3) MAGNETO (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32120-99J00	COIL, STATOR & PULSER	1	
2	09125-06035	SCREW (6X25)	3	
3	01550-05127	BOLT	2	
4	32102-99J00	FLYWHEEL	1	
5	09140-14008	NUT	1	
6	09160-15057	WASHER (15X27X4)	1	
7	08341-31039	KEY	1	
8	09407-14407	CLAMP (L:145)	1	

DF8AR P01
DF9.9AR P01



FIG.310A


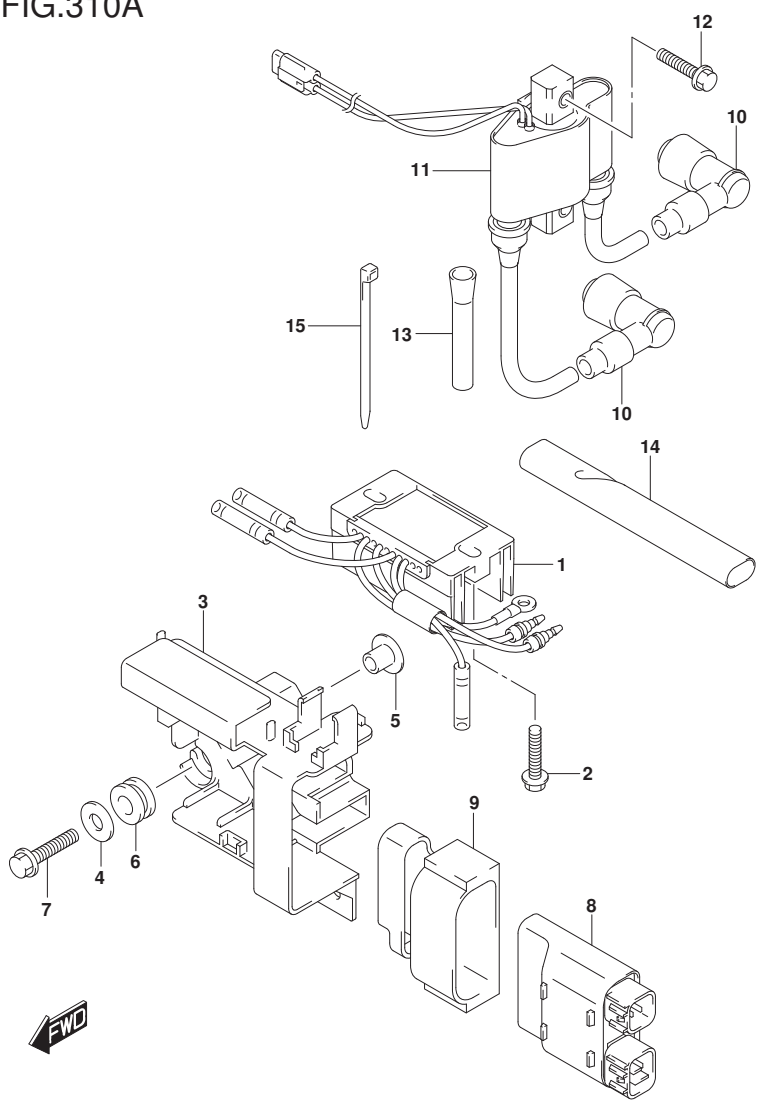


FIG.310A (1-D-4) RECTIFIER/IGNITION COIL (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-99J00	RECTIFIER/REGULATOR ASSY	1	W/ELECTRIC STARTER
2	01550-06257	BOLT	2	W/ELECTRIC STARTER
3	32890-99J00	HOLDER, ELECTRIC PARTS	1	
4	09160-06084	WASHER (6.5X18X1.6)	2	
5	09169-06062	WASHER	2	
6	09320-09016	CUSHION	2	
7	01550-06257	BOLT	2	
8-1	32900-99J00	CDI UNIT	1	W/ELECTRIC STARTER
8-2	32900-99J10	CDI UNIT	1	W/MANUAL STARTER
9	32980-99J00	CUSHION, CDI	1	
10	33500-07H00	CAP, SPARK PLUG	2	
11	33410-99J00	COIL, IGNITION	1	
12	01550-0625C	BOLT	2	
13	33833-94JL0	TUBE, IGN COIL LEAD (L:120)	1	
14	33833-94J10	PROTECTOR, HIGH TENSION (L:50)	1	W/ELECTRIC STARTER
15	09407-14407	CLAMP (L:145)	1	W/ELECTRIC STARTER

DF8A P01
DF9.9A P01

FIG.310B

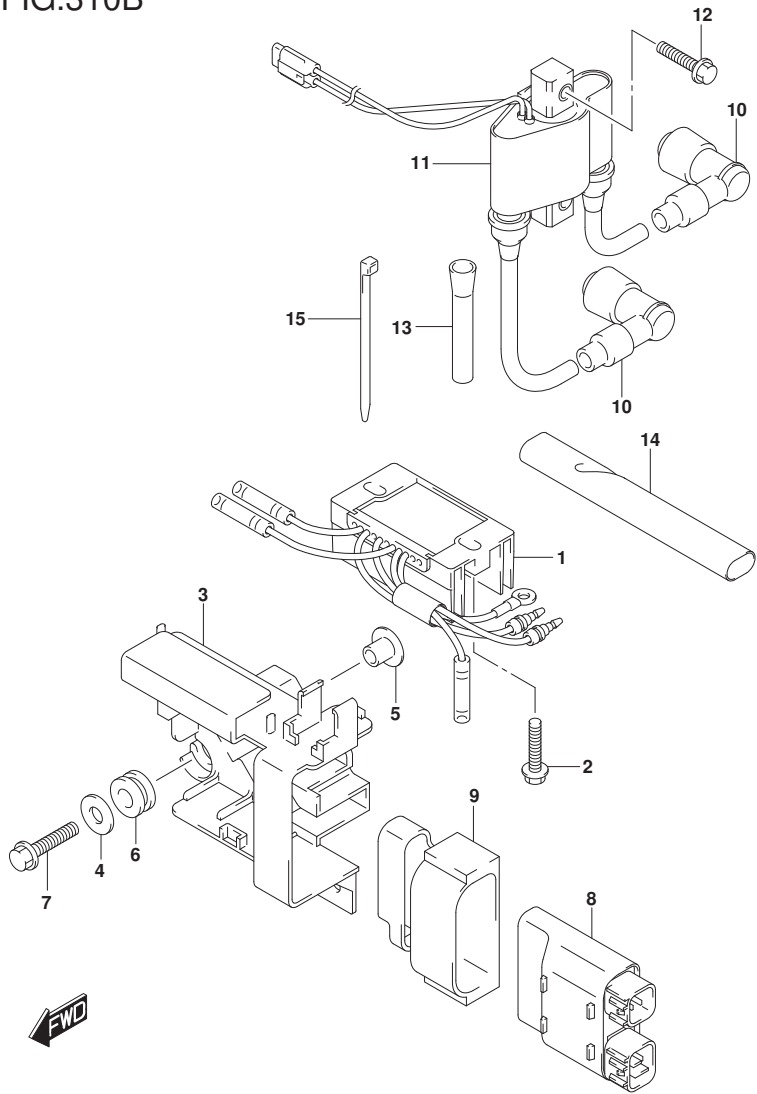

DF8A_P01_018_310B
RECTIFIER/IGNITION COIL

FIG.310B (1-D-5) RECTIFIER/IGNITION COIL (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-99J00	RECTIFIER/REGULATOR ASSY	1	
2	01550-06257	BOLT	2	
3	32890-99J00	HOLDER, ELECTRIC PARTS	1	
4	09160-06084	WASHER (6.5X18X1.6)	2	
5	09169-06062	WASHER	2	
6	09320-09016	CUSHION	2	
7	01550-06257	BOLT	2	
8	32900-99J00	CDI UNIT	1	
9	32980-99J00	CUSHION, CDI	1	
10	33500-07H00	CAP, SPARK PLUG	2	
11	33410-99J00	COIL, IGNITION	1	
12	01550-0625C	BOLT	2	
13	33833-94JL0	TUBE, IGN COIL LEAD (L:120)	1	
14	33833-94J10	PROTECTOR, HIGH TENSION (L:50)	1	
15	09407-14407	CLAMP (L:145)	1	

DF8AR P01
DF9.9AR P01

FIG.322A

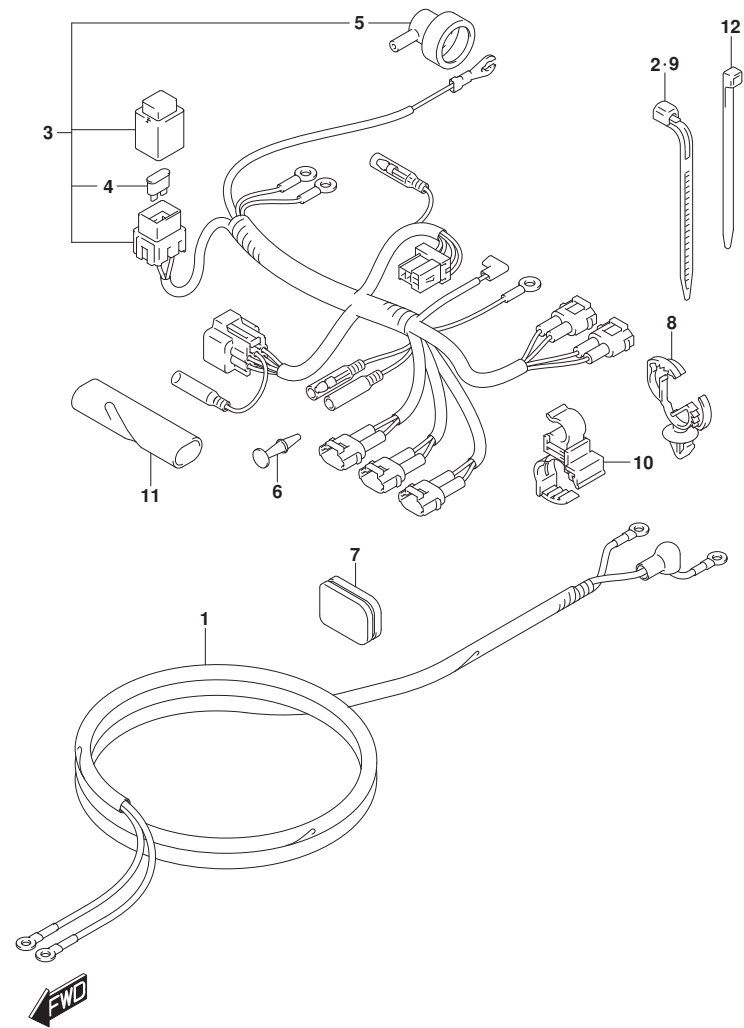


FIG.322A (1-D-6) HARNESS (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-99J00	CABLE, STARTER	1	W/ELECTRIC STARTER
2	09407-14403	CLAMP (L:125)	1	W/ELECTRIC STARTER
3-1	36610-99J00	HARNESS ASSY, WIRING	1	W/ELECTRIC STARTER
3-2	36610-99J10	HARNESS ASSY, WIRING	1	W/MANUAL STARTER
4	09481-20501	.FUSE (20A)	1	
5	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
6-1	36615-96300	TERMINAL, RESIN	1	W/ELECTRIC SATRTER
6-2	36615-96300	TERMINAL, RESIN	3	W/MANUAL STARTER
7	36656-99J00	GROMMET, CABLE (PORT)	1	
8	09403-13311	CLAMP	1	
9	09407-14403	CLAMP (L:125)	1	
10	09408-00265	CLAMP	1	
11	33833-99J10	TUBE, HARNESS LEAD	1	W/ELECTRIC STARTER
12	09407-14407	CLAMP (L:145)	1	

DF8A P01
DF9.9A P01

FIG.322B


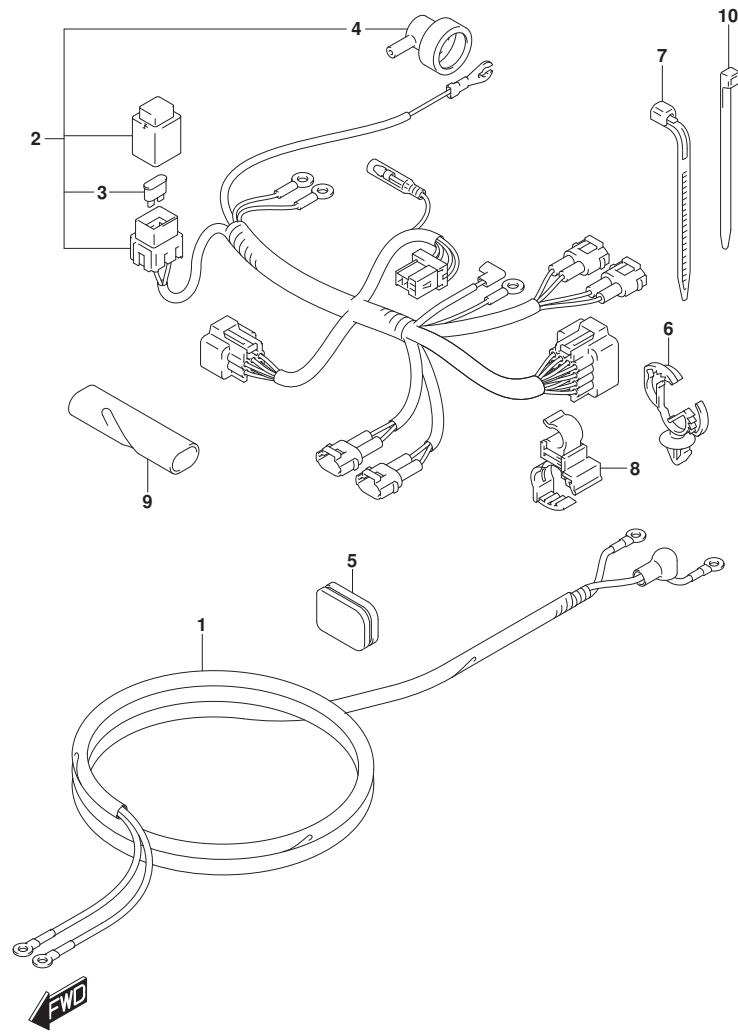


FIG.322B (1-D-7) HARNESS (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-99J00	CABLE, STARTER	1	
2	36610-99J20	HARNESS ASSY, WIRING	1	
3	09481-20501	.FUSE (20A)	1	
4	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
5	36656-99J10	GROMMET, CABLE (PORT)	1	
6	09403-13311	CLAMP	1	
7	09407-14403	CLAMP (L:125)	1	
8	09408-00265	CLAMP	1	
9	33833-99J10	TUBE, HARNESS LEAD	1	
10	09407-14407	CLAMP (L:145)	1	

DF8AR P01
DF9.9AR P01

FIG.334A

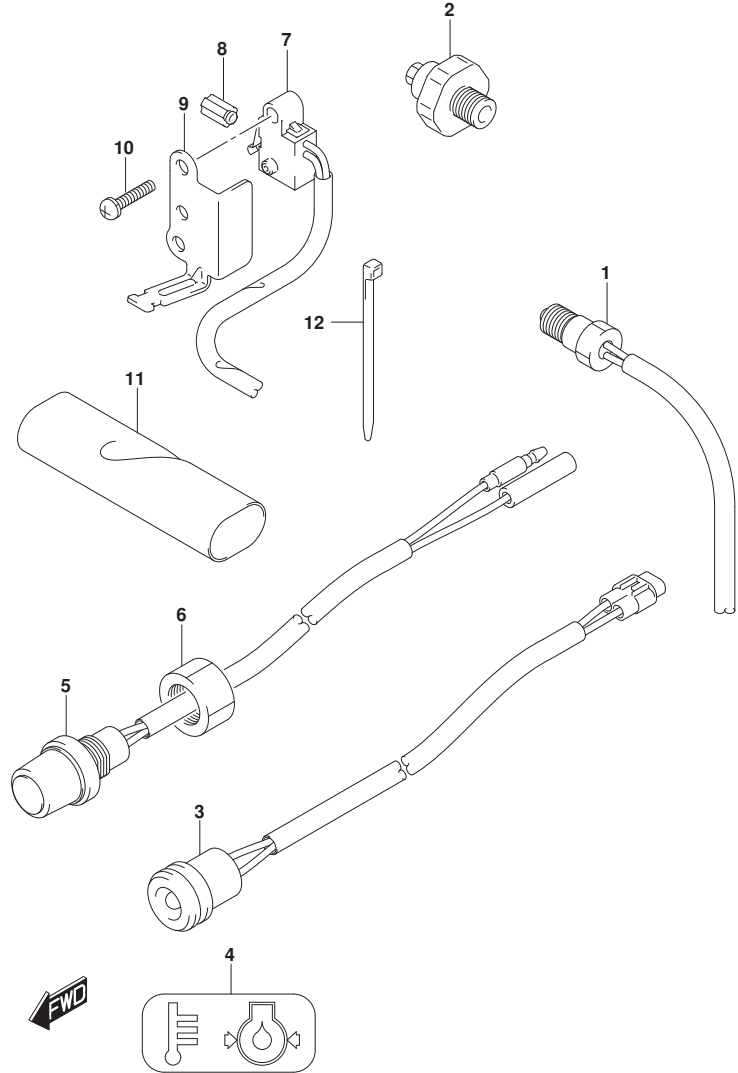

DF8A_P01_018_334A
SENSOR/SWITCH

FIG.334A (1-D-8) SENSOR/SWITCH (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34830-87J20	SENSOR ASSY, TEMP	1	
2	37820-93E11	SWITCH ASSY, OIL PRESSURE	1	
3	36360-99J00	INDICATOR, OIL PRESSURE	1	
4	36367-99J00	LABEL, WARNING	1	
5	37161-89E13	SWITCH ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
6	09159-14032	NUT	1	W/ELECTRIC STARTER
7	37721-99J10	SWITCH ASSY, NEUTRAL	1	W/ELECTRIC STARTER
8	37724-99J00	ROD, SW PUSH	1	W/ELECTRIC STARTER
9	37726-99J10	BRACKET, NEUTRAL SW	1	W/ELECTRIC STARTER
10	09137-04004	SCREW (4X16)	2	W/ELECTRIC STARTER
11	33833-99J00	TUBE, SW LEAD (L:80)	1	
12	09407-14407	CLAMP (L:145)	1	

DF8A P01
DF9.9A P01

FIG.334B

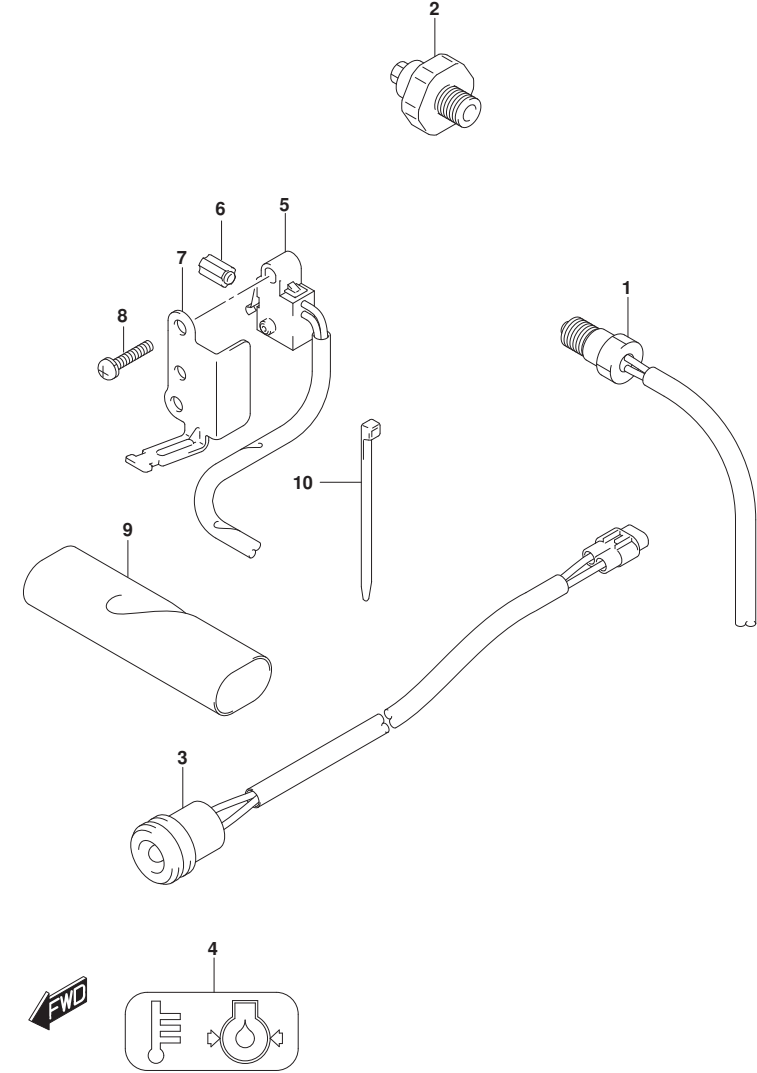


FIG.334B (1-D-9) SENSOR/SWITCH (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34830-87J20	SENSOR ASSY, TEMP	1	
2	37820-93E11	SWITCH ASSY, OIL PRESSURE	1	
3	36360-99J10	INDICATOR, OIL PRESSURE	1	
4	36367-99J00	LABEL, WARNING	1	
5	37721-99J10	SWITCH ASSY, NEUTRAL	1	
6	37724-99J00	ROD, SW PUSH	1	
7	37726-99J10	BRACKET, NEUTRAL SW	1	
8	09137-04004	SCREW (4X16)	2	
9	33833-99J00	TUBE, SW LEAD (L:80)	1	
10	09407-14407	CLAMP (L:145)	1	

DF8AR P01
DF9.9AR P01

FIG.335A

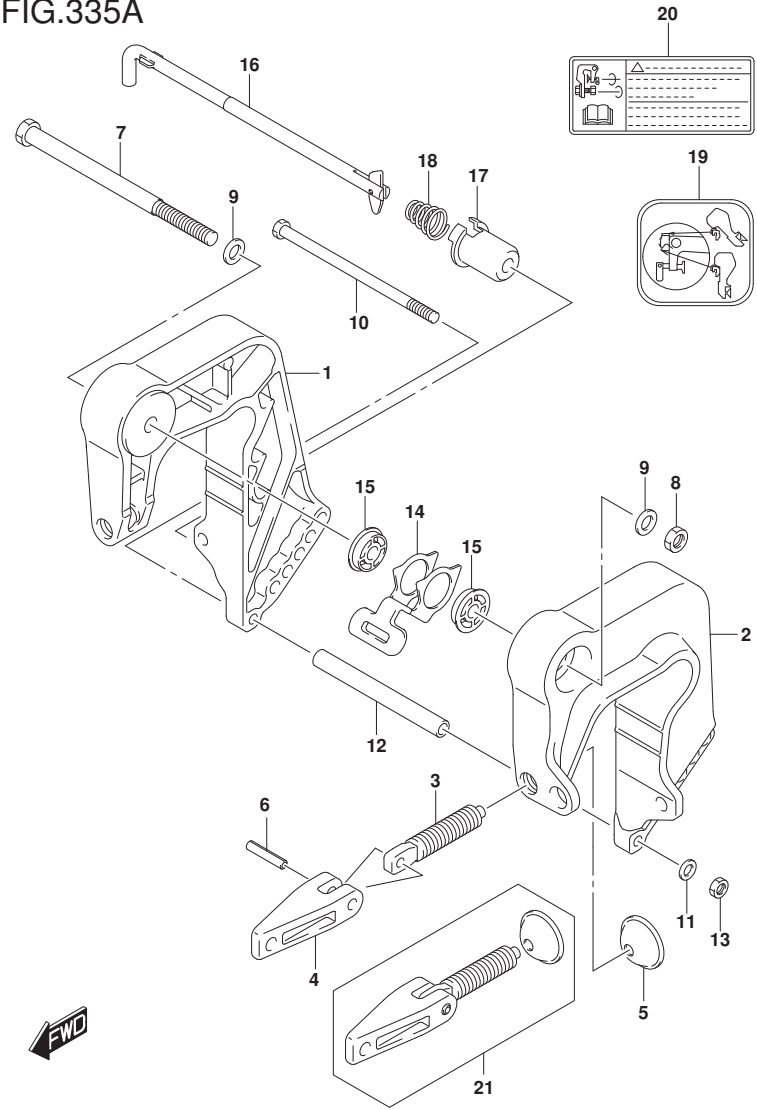


FIG.335A (1-D-10) CLAMP BRACKET (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-99J00-YAY	BRACKET, CLAMP STBD (BLACK)	1	
2	41121-99J00-YAY	BRACKET, CLAMP PORT (BLACK)	1	
3	41211-99JL0	SCREW, CLAMP	2	
4	41212-91J00	HANDLE, CLAMP	2	
5	41213-94J01	PLATE, CLAMP	2	
6	09205-06021	SPRING PIN (6X25)	2	
7	09100-10320	BOLT (10X145)	1	
8	09159-10050	NUT	1	
9	09160-10082	WASHER (10.5X19X2)	2	
10	09100-06177	BOLT (6X140)	1	
11	09160-06082	WASHER (6.5X13X1.0)	1	
12	09180-06357	SPACER (6.5X10.5X104)	1	
13	29141-93J00	NUT, CLAMP BRKT LOWER (M6)	1	
14	45261-94J00	LEVER, RELEASE	1	
15	09306-10023	BUSH	2	
16	45420-99JM1	PIN, TILT LOCK	1	
17	45425-94J01	STOPPER, TILT LOCK PIN	1	
18	09441-17001	SPRING	1	
19	45269-94J20	MARK, REVERSE LOCK	1	
20	69911-91J50	MARK, CLAMP BRACKET	1	
21	41210-99JL1	SCREW SET, CLAMP	1	OPT

DF8A P01
DF9.9A P01

FIG.335B


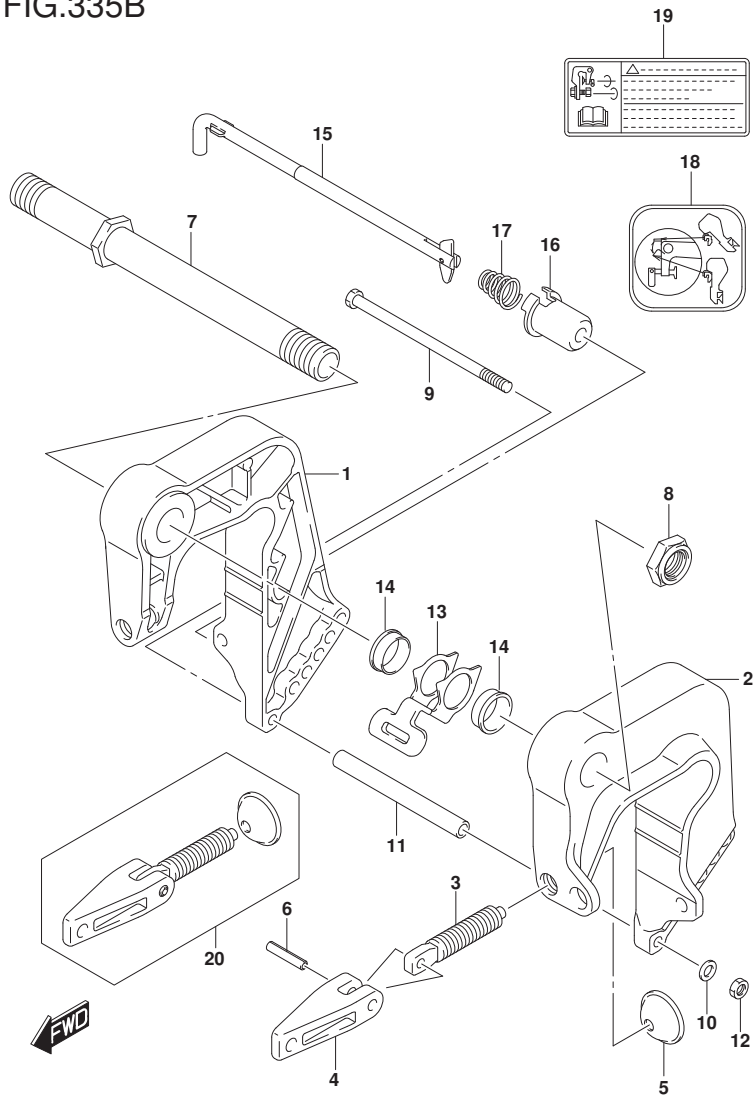


FIG.335B (1-D-11) CLAMP BRACKET (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-94J20-YAY	BRACKET, CLAMP STBD (BLACK)	1	
2	41121-94J20-YAY	BRACKET, CLAMP PORT (BLACK)	1	
3	41211-99JL0	SCREW, CLAMP	2	
4	41212-91J00	HANDLE, CLAMP	2	
5	41213-94J01	PLATE, CLAMP	2	
6	09205-06021	SPRING PIN (6X25)	2	
7	41130-93E03	SHAFT, CLAMP BRACKET	1	
8	09159-22006	NUT	1	
9	09100-06177	BOLT (6X140)	1	
10	09160-06082	WASHER (6.5X13X1.0)	1	
11	09180-06357	SPACER (6.5X10.5X104)	1	
12	29141-93J00	NUT, CLAMP BRKT LOWER (M6)	1	
13	45261-94J00	LEVER, RELEASE	1	
14	09306-22006	BUSH (22.6X27X8)	2	
15	45420-99JM1	PIN, TILT LOCK	1	
16	45425-94J01	STOPPER, TILT LOCK PIN	1	
17	09441-17001	SPRING	1	
18	45269-94J20	MARK, REVERSE LOCK	1	
19	69911-91J50	MARK, CLAMP BRACKET	1	
20	41210-99JL1	SCREW SET, CLAMP	1	OPT

DF8AR P01
DF9.9AR P01

FIG.336A

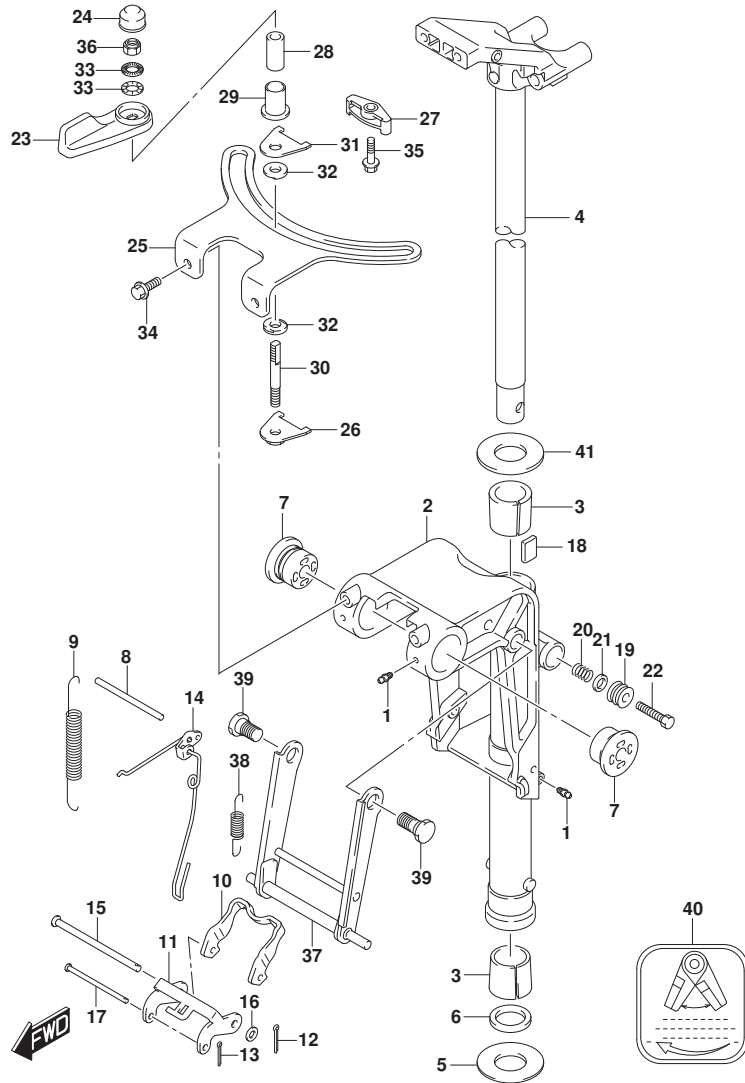

DF8A_P01_018_336A
SWIVEL BRACKET

FIG.336A (1-D-12) SWIVEL BRACKET (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE	3	
2-1	43111-99J40-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
2-2	43111-99J50-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
3	43711-99J00	BUSH, STEERING	2	
4-1	43750-99J60-YAY	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
4-2	43750-99J70-YAY	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	OIL SEAL (26X39X5)	1	
7	43211-99J00	BUSH, SWIVEL BRACKET	2	
8	41225-89L00	PIN, RELEASE ARM	1	
9	45212-95L00	SPRING, REVERSE LOCK ARM	2	
10	45231-89L00	ARM, REVERSE LOCK	1	
11	45241-89L00	LINK, REVERSE LOCK ARM	1	
12	09204-01002	PIN	1	
13	45247-99J00	PIN, REV LOCK ARM COTTER	1	
14	45250-89L03	LINK, RELEASE	1	
15	09200-06061	PIN	1	
16	09160-06082	WASHER (6.5X13X1.0)	1	
17	09200-05014	PIN	1	
18	43411-939L0	PLATE, STEERING ADJUSTER	1	
19	43412-93900	COVER, STRG ADJUSTER	1	
20	29440-93J00	SPRING, STEERING ADJUSTER	1	
21	09160-08082	WASHER (8.5X16X1.2)	1	
22	09100-08232	BOLT (8X30)	1	
23	43410-99J00	LEVER, STEERING ADJUSTER	1	
24	43412-99J00	COVER, STEERING ADJUSTER	1	
25	43415-99J00	PLATE, STEERING ADJUSTER	1	
26	43420-99J10	PLATE, ADJ FRICTION	1	
27	43424-99J00	HOLDER, ADJ NUT	1	

DF8A_P01_018

FIG.336A


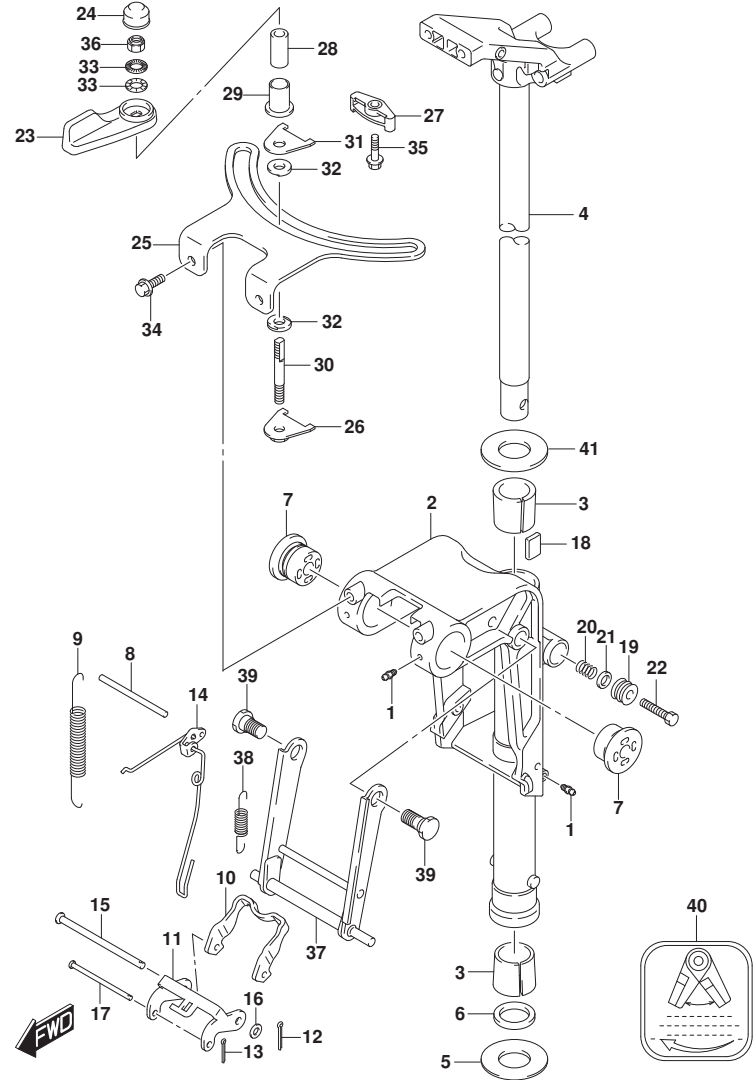


FIG.336A (1-D-13) SWIVEL BRACKET (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	43427-99J00	SPACER, ADJ NUT	1	
29	43428-99J00	BUSH, ADJ NUT	1	
30	43512-99J00	SHAFT, ADJ THREAD	1	
31	43514-94J00	PLATE, ADJ FRICTION	1	
32	43514-99J00	WASHER, ADJ FRICTION PLATE	2	
33	43516-89J00	WASHER, STRG ADJ	2	
34	09116-06225	BOLT (6X15)	2	
35	09116-06229	BOLT (6X25)	1	
36	09159-08059	NUT	1	
37	45710-99JL1	ARM, SHALLOW DRIVE	1	
38	45722-94J11	SPRING, ARM	1	
39	09111-10067	BOLT (10X20.5)	2	
40	45269-99J00	MARK, STRG ADJ	1	
41	09160-27012	WASHER (27.5X47X1)	1	

DF8A P01
DF9.9A P01

FIG.336B

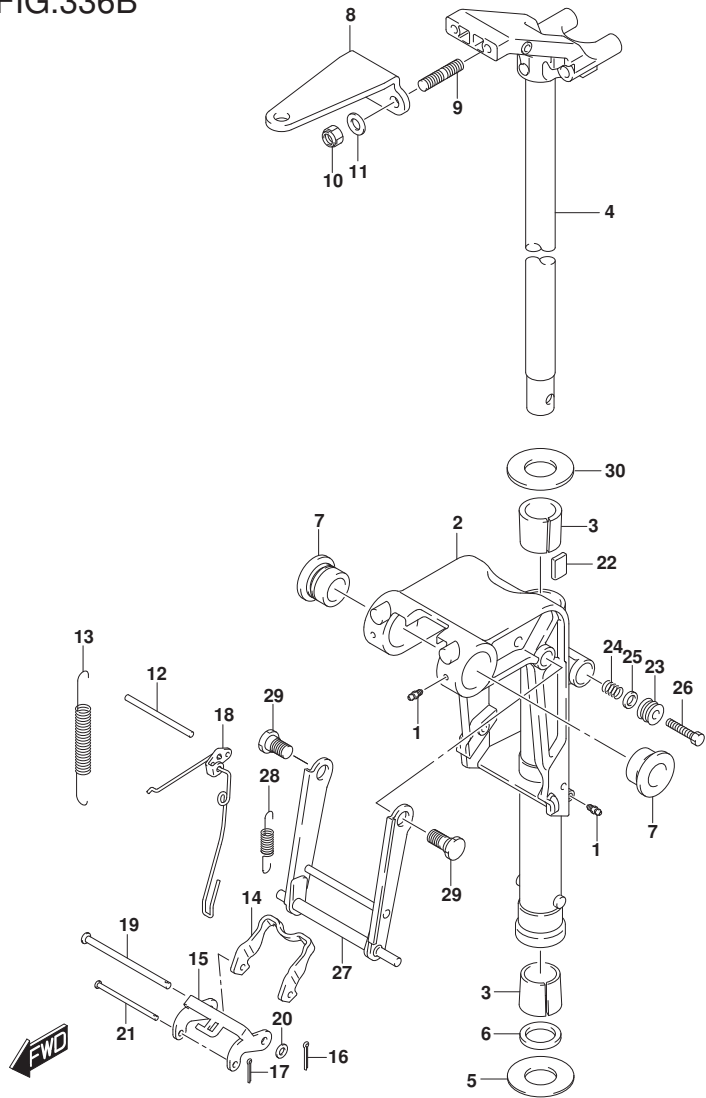


DF8A_P01_018_336B
SWIVEL BRACKET

FIG.336B (1-D-14) SWIVEL BRACKET (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE	3	
2-1	43111-99J60-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
2-2	43111-99J70-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
3	43711-99J00	BUSH, STEERING	2	
4-1	43750-99J60-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(S)
4-2	43750-99J70-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(L)
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	OIL SEAL (26X39X5)	1	
7	43211-87JL0	BUSH, SWIVEL BRACKET	2	
8	43755-99J00	ATTACHMENT, STRG BRKT	1	
9	09108-08286	STUD BOLT	2	
10	09159-08059	NUT	2	
11	09160-08082	WASHER (8.5X16X1.2)	2	
12	41225-89L00	PIN, RELEASE ARM	1	
13	45212-95L00	SPRING, REVERSE LOCK ARM	2	
14	45231-89L00	ARM, REVERSE LOCK	1	
15	45241-89L00	LINK, REVERSE LOCK ARM	1	
16	09204-01002	PIN	1	
17	45247-99J00	PIN, REV LOCK ARM COTTER	1	
18	45250-89L03	LINK, RELEASE	1	
19	09200-06061	PIN	1	
20	09160-06082	WASHER (6.5X13X1.0)	1	
21	09200-05014	PIN	1	
22	43411-939L0	PLATE, STRG ADJUSTER	1	
23	43412-93900	COVER, STRG ADJUSTER	1	
24	29440-93J00	SPRING, STRG ADJUSTER	1	
25	09160-08082	WASHER (8.5X16X1.2)	1	
26	09100-08232	BOLT (8X30)	1	

DF8A_P01_018

FIG.336B

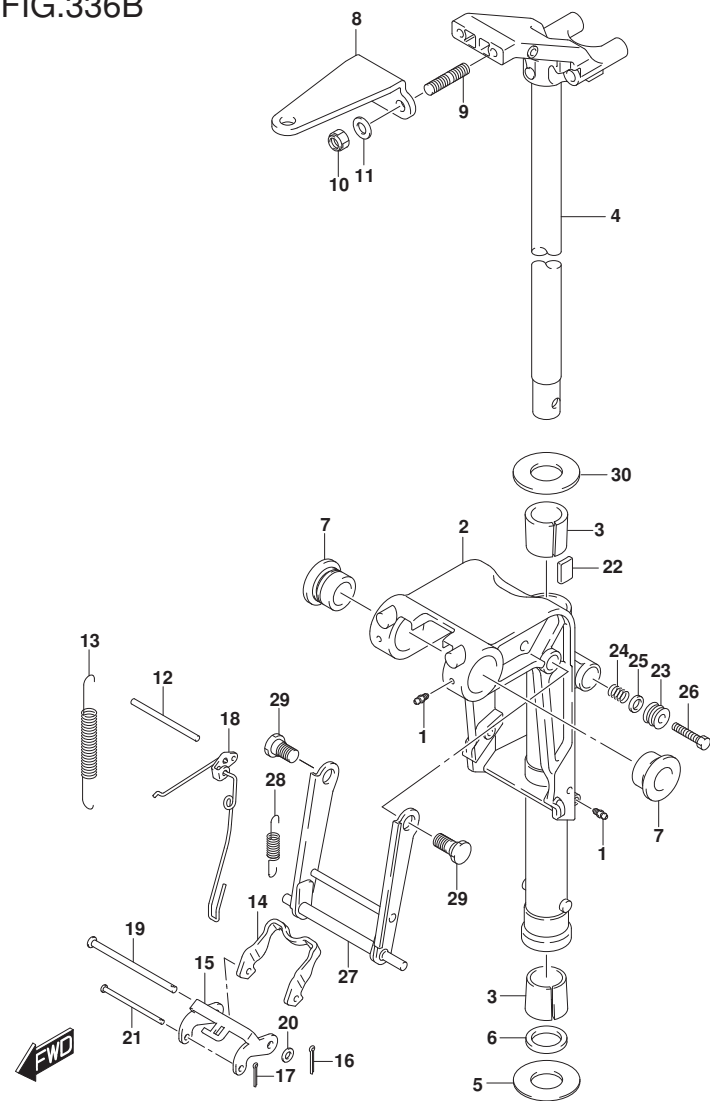

DF8A_P01_018_336B
SWIVEL BRACKET

FIG.336B (1-D-15) SWIVEL BRACKET (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	45710-99JL1	ARM, SHALLOW DRIVE	1	
28	45722-94J11	SPRING, ARM	1	
29	09111-10067	BOLT (10X20.5)	2	
30	09160-27012	WASHER (27.5X47X1)	1	

DF8AR P01
DF9.9AR P01

FIG.401A

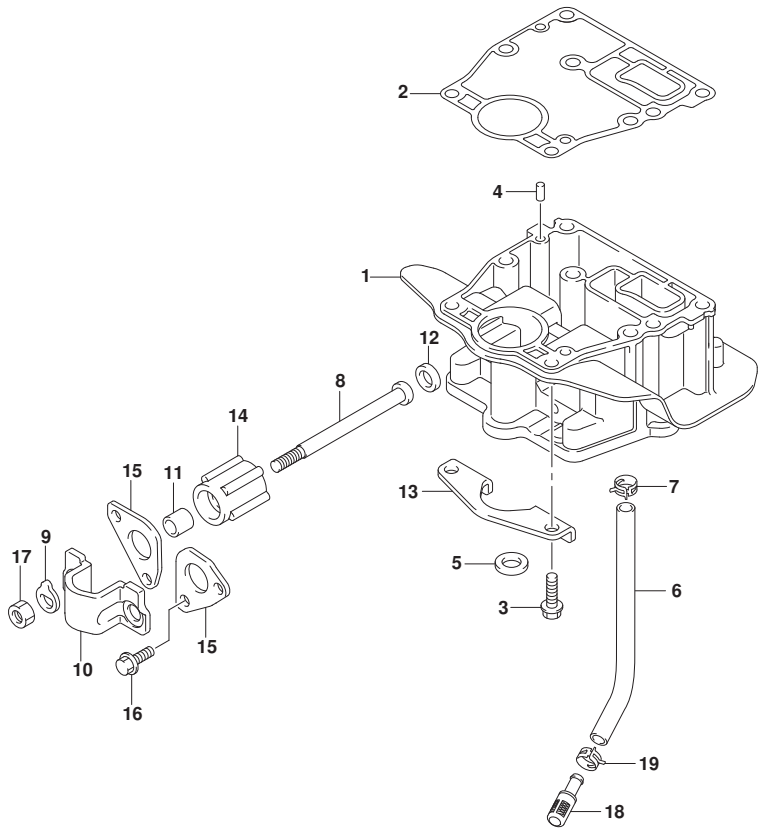


FIG.401A (1-E-2) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	51110-99J00	HOLDER, ENGINE	1	
2	51211-99J00	GASKET, ENGINE HOLDER	1	
3	09116-08151	BOLT (8X30)	2	
4	09202-06023	PIN (6X10)	2	
5	09282-12017	OIL SEAL (11X24X4.5)	1	
6	16515-99J10	HOSE, OIL	1	
7	09401-12413	CLIP	1	
8	54112-99J01	BOLT, UPR MOUNT (L:125.5)	2	
9	54113-99JM0	WASHER, UPR MOUNT BOLT	2	
10	54120-99JL0	MOUNT, UPR THRUST	1	
11	54122-99J00	SPACER, UPR MOUNT (10.2X16X15)	2	
12	54125-99J00	STOPPER, UPR REVERSE THRUST	2	
13	54126-99JL0	STOPPER, UPR THRUST	1	
14	54130-99J00	MOUNT, UPPER	2	
15	54148-99J00	COVER, UPR MOUNT	2	
16	09116-08137	BOLT (8X22)	4	
17	09140-10031	NUT	2	
18	16520-99J00	STRAINER, OIL	1	
19	09401-13424	CLIP	1	

FIG.405A


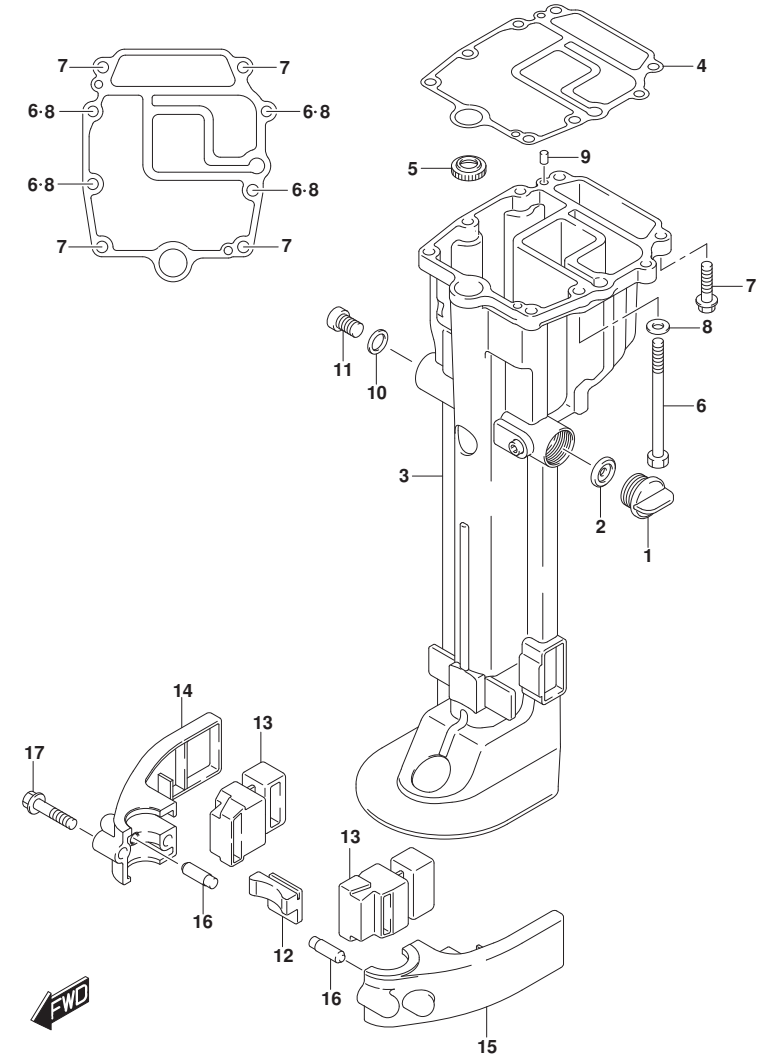


FIG.405A (1-E-3) DRIVE SHAFT HOUSING

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG, WATER	1	
2	17914-93J00	GASKET, WATER PLUG	1	
3-1	52110-99J00-YAY	HOUSING, DRIVE SHAFT (S) (BLACK)	1	W/TRANSOM(S)
3-2	52110-99J10-YAY	HOUSING, DRIVE SHAFT (L) (BLACK)	1	W/TRANSOM(L)
4	52113-99J00	GASKET, DRIVE SHAFT HSG	1	
5	57135-99J00	GUIDE, DRIVE SHAFT	1	
6	09100-08312	BOLT (8X105)	4	
7	09116-08151	BOLT (8X30)	4	
8	09160-08082	WASHER (8.5X16X1.2)	4	
9	09202-06023	PIN (6X10)	2	
10	09168-12017	GASKET (12X17X1)	1	
11	09248-12009	PLUG (12X18.65)	1	
12	54151-99J00	MOUNT, LOWER THRUST	1	
13	54167-99J01	MOUNT, LOWER SIDE	2	
14	54211-99J01-YAY	COVER, LWR MOUNT STBD (BLACK)	1	
15	54221-99J01-YAY	COVER, LWR MOUNT PORT (BLACK)	1	
16	54213-93901	PIN, KNOCK	2	
17	09116-08154	BOLT (8X40)	2	

FIG.407A

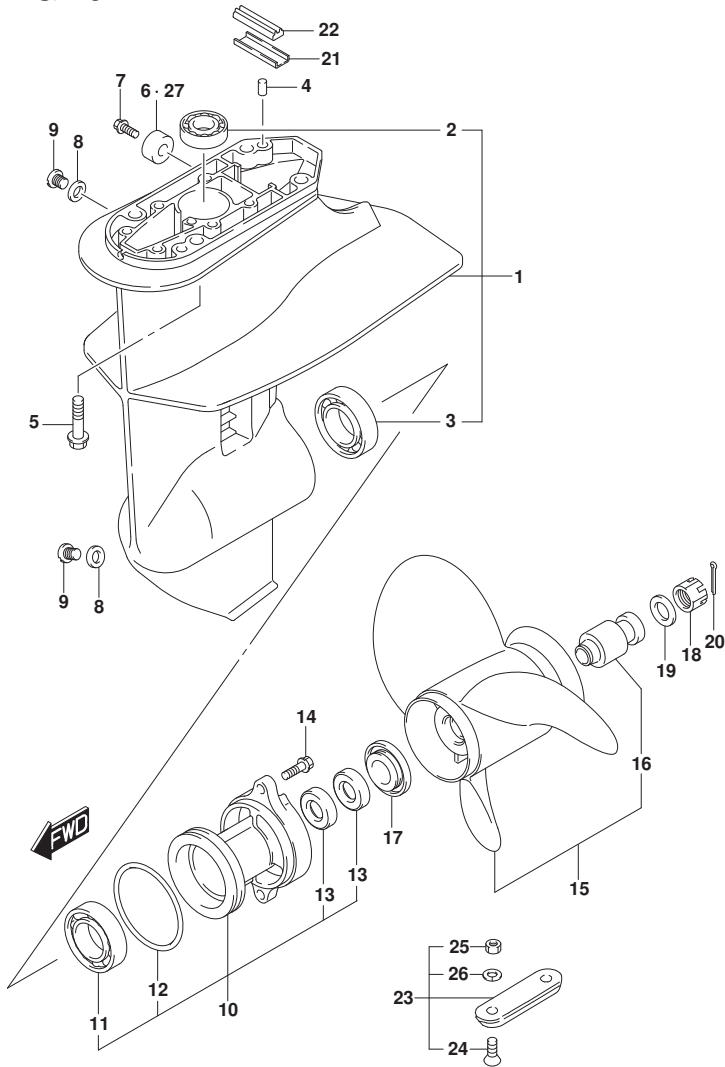


DF8A_P01_018_407A
GEAR CASE

FIG.407A (1-E-4) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-99J40-YAY	CASE, GEAR (BLACK)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10	56120-99J41-YAY	HOUSING, PROPELLER SHAFT (BLACK)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15-1	58100-89L00-019	PROPELLER, 3X9-1/4X7 (M701) (BLACK)	1	
15-2	58100-89L20-019	PROPELLER, 3X9-1/4X9 (M930) (BLACK)	1	
15-3	58100-89L70-019	PROPELLER, 3X9-1/4X11 (M1101) (BLACK)	1	
15-4	58100-89L60-019	PROPELLER, 3X9-1/4X10 (M1001) (BLACK)	1	
15-5	58100-90L41-019	PROPELLER, 3X9-1/4X8 (M821) (BLACK)	1	
15-6	58100-90L50-019	PROPELLER, 3X9-1/4X9 (M911) (BLACK)	1	
15-7	58100-90L60-019	PROPELLER, 3X9-1/4X10 (M1011) (BLACK)	1	
16	58120-89L00	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	

DF8A_P01_018

FIG.407A

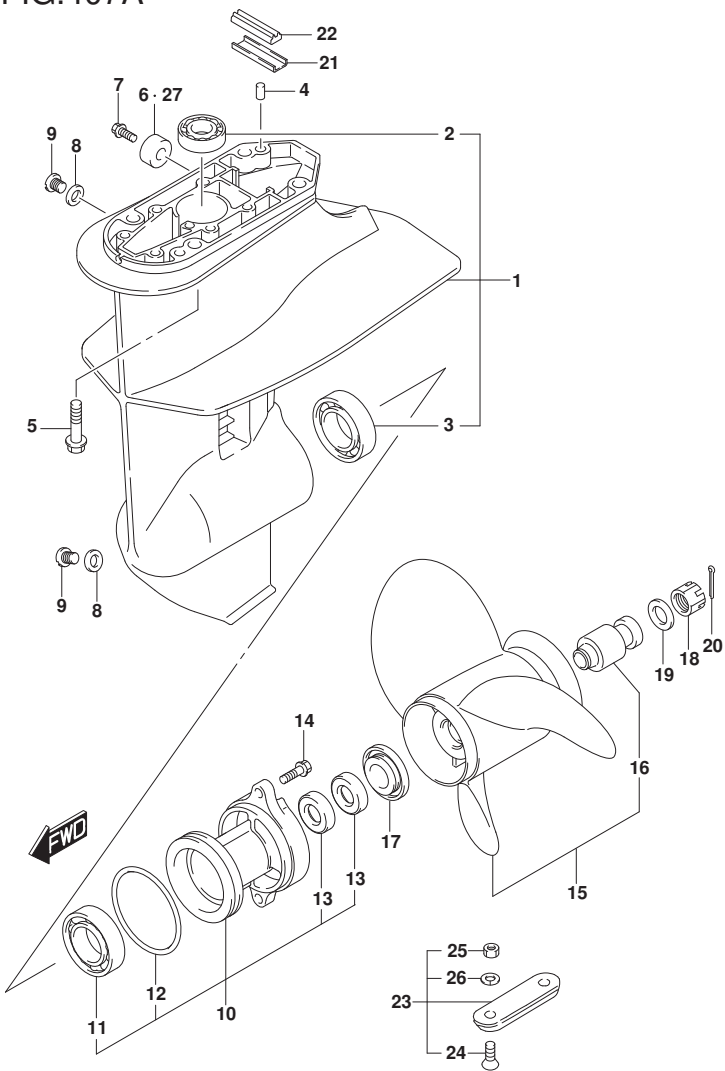

DF8A_P01_018_407A
GEAR CASE

FIG.407A (1-E-5) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
23	55300-95500	ZINC ASSY, PROTECTION	1	OPT	
24	09126-06006	.SCREW (6X20)	2	OPT	
25	29141-93J00	.NUT	2	OPT	
26	29162-93J00	.WASHER	2	OPT	
27	55321-87J11	ANODE (MAGNESIUM)	1	OPT	

FIG.410A

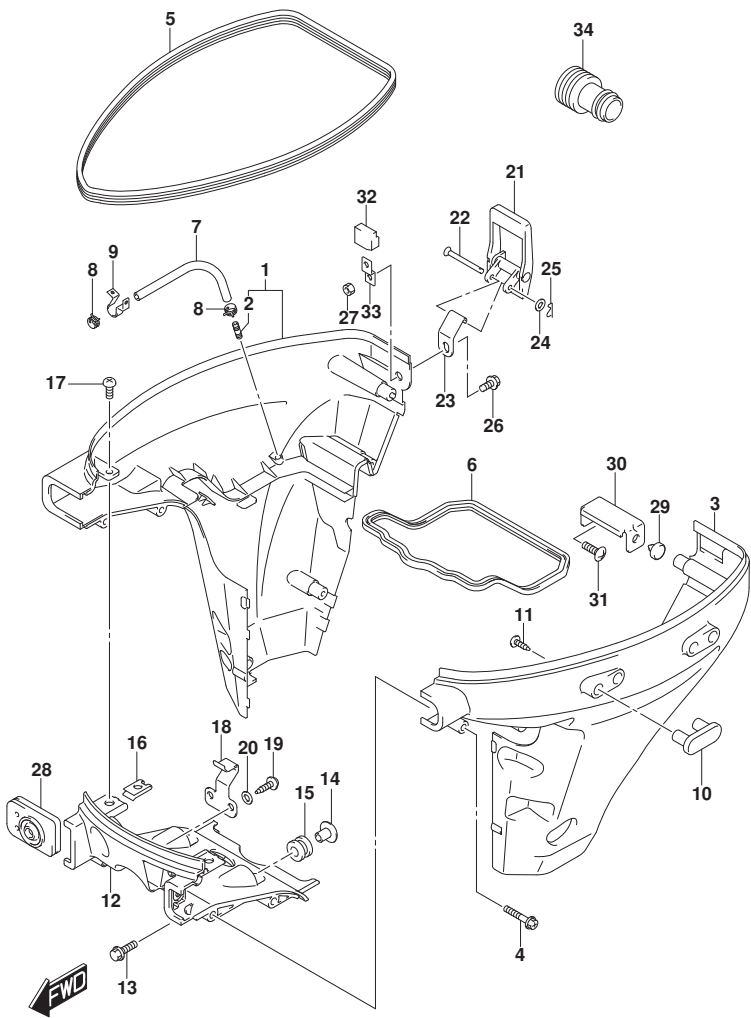


FIG.410A (1-E-6) SIDE COVER (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61810-99J02-YAY	COVER, SIDE STBD (BLACK)	1	
2	61155-94500	.TUBE, WATER INSP	1	
3	61820-99J01-YAY	COVER, SIDE PORT (BLACK)	1	
4	09136-06169	SCREW (6X35)	8	
5	61112-99J00	RUBBER, SIDE COVER	1	
6	61134-99JL0	SEAL, SIDE COVER	1	
7	61157-99J00	HOSE, WATER INSPECTION	1	
8	09401-08413	CLIP	2	
9	09403-12316	CLAMP	1	
10	61851-93E10	PROTECTOR, SIDE COVER	2	
11	03542-05169	SCREW	4	
12	61831-99J00-YAY	PANEL, INSTRUMENT (BLACK)	1	
13	09116-06230	BOLT (6X25)	2	
14	09169-06075	WASHER	2	
15	09320-09039	CUSHION	2	
16	09148-06017	NUT	2	
17	02142-0616C	SCREW	2	
18	61412-99J00	HOOK, FRONT PANEL	1	
19	61643-99J00	SCREW, HOOK	2	
20	09160-05029	WASHER (5.5X12X0.8)	2	
21	61610-90L00	FASTENER	1	
22	61616-93EL0	PIN, LEVER	1	
23	61642-99J00	HOLDER, FASTENER LEVER	1	
24	09161-04012	WASHER (4.2X11X1)	1	
25	09385-04003	CLIP	1	
26	09116-06223	BOLT (6X12)	1	
27	08310-00067	NUT	1	

FIG.410A

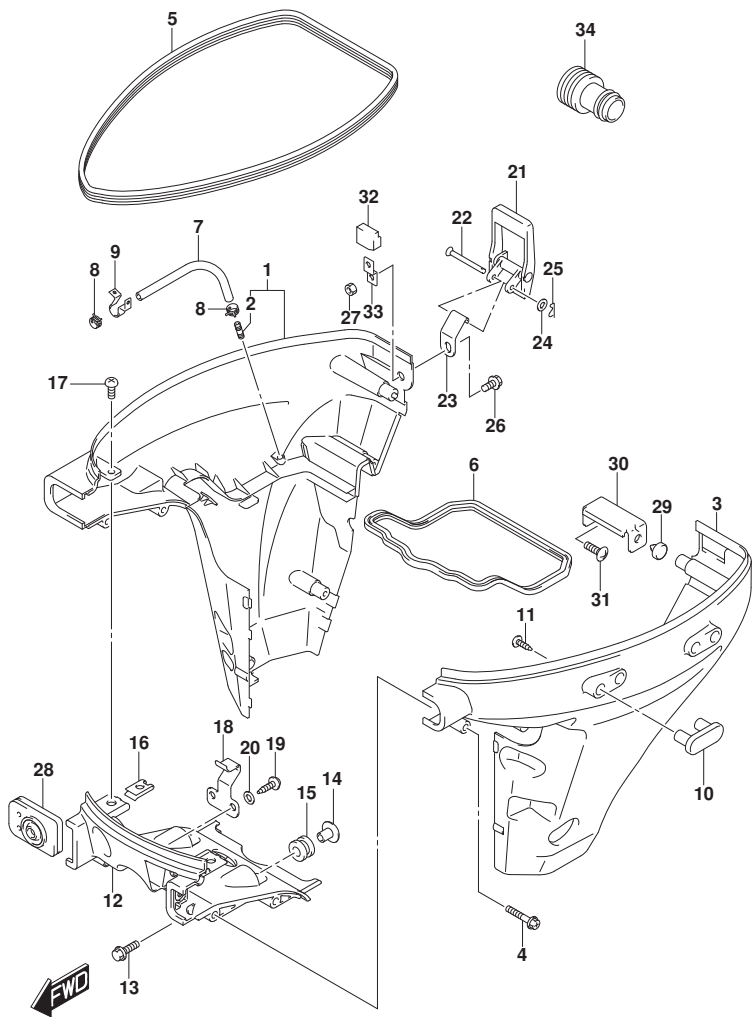


FIG.410A (1-E-7) SIDE COVER (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	61124-99J21	GROMMET, CABLE (STBD)	1	
29	61151-99J00	CUSHION, SIDE COVER HOLDER	1	
30	61827-99J00	HOLDER, SIDE COVER	1	W/MANUAL STARTER
31	02142-0616C	SCREW	1	W/MANUAL STARTER
32	61813-99J01	CUSION, SIDE COVER	1	
33	36617-93J10	BRACKET, HARNESS	1	
34	17917-87LL0	CONNECTOR, FLUSH WATER	1	OPT

DF8A P01
DF9.9A P01

FIG.410B


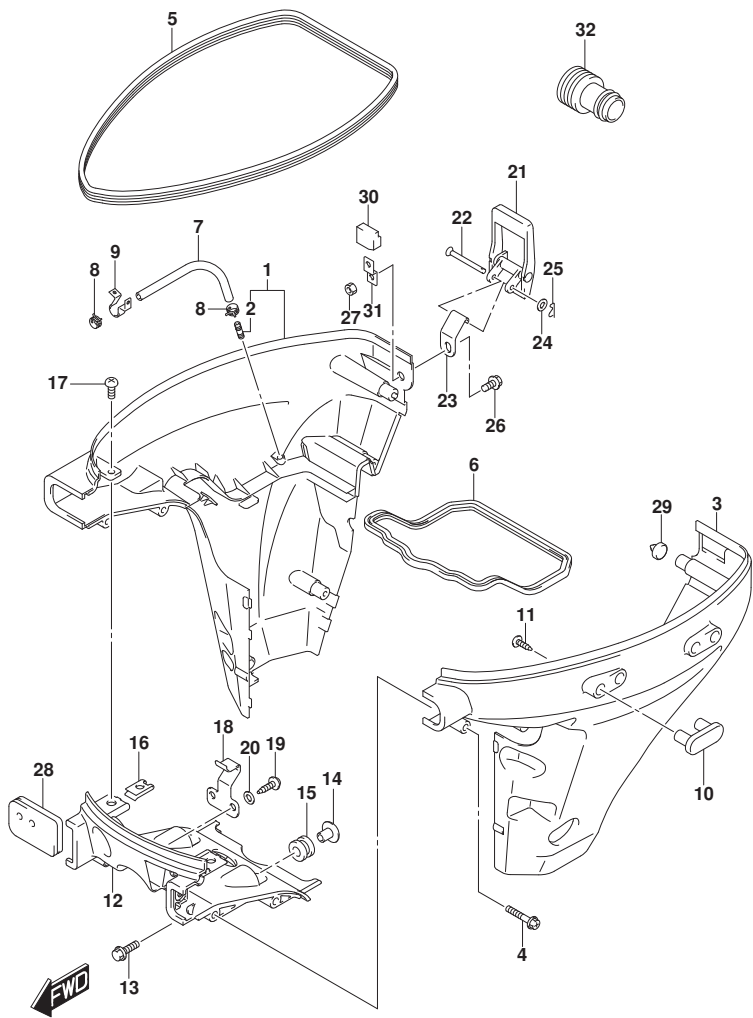


FIG.410B (1-E-8) SIDE COVER (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61810-99J02-YAY	COVER, SIDE STBD (BLACK)	1	
2	61155-94500	.TUBE, WATER INSP	1	
3	61820-99J01-YAY	COVER, SIDE PORT (BLACK)	1	
4	09136-06169	SCREW (6X35)	8	
5	61112-99J00	RUBBER, SIDE COVER	1	
6	61134-99JL0	SEAL, SIDE COVER	1	
7	61157-99J00	HOSE, WATER INSPECTION	1	
8	09401-08413	CLIP	2	
9	09403-12316	CLAMP	1	
10	61851-93E10	PROTECTOR, SIDE COVER	2	
11	03542-05169	SCREW	4	
12	61831-99J00-YAY	PANEL, INSTRUMENT (BLACK)	1	
13	09116-06230	BOLT (6X25)	2	
14	09169-06075	WASHER	2	
15	09320-09039	CUSHION	2	
16	09148-06017	NUT	2	
17	02142-0616C	SCREW	2	
18	61412-99J00	HOOK, FRONT PANEL	1	
19	61643-99J00	SCREW, HOOK	2	
20	09160-05029	WASHER (5.5X12X0.8)	2	
21	61610-90L00	FASTENER	1	
22	61616-93EL0	PIN, LEVER	1	
23	61642-99J00	HOLDER, FASTENER LEVER	1	
24	09161-04012	WASHER (4.2X11X1)	1	
25	09385-04003	CLIP	1	
26	09116-06223	BOLT (6X12)	1	
27	08310-00067	NUT	1	

FIG.410B

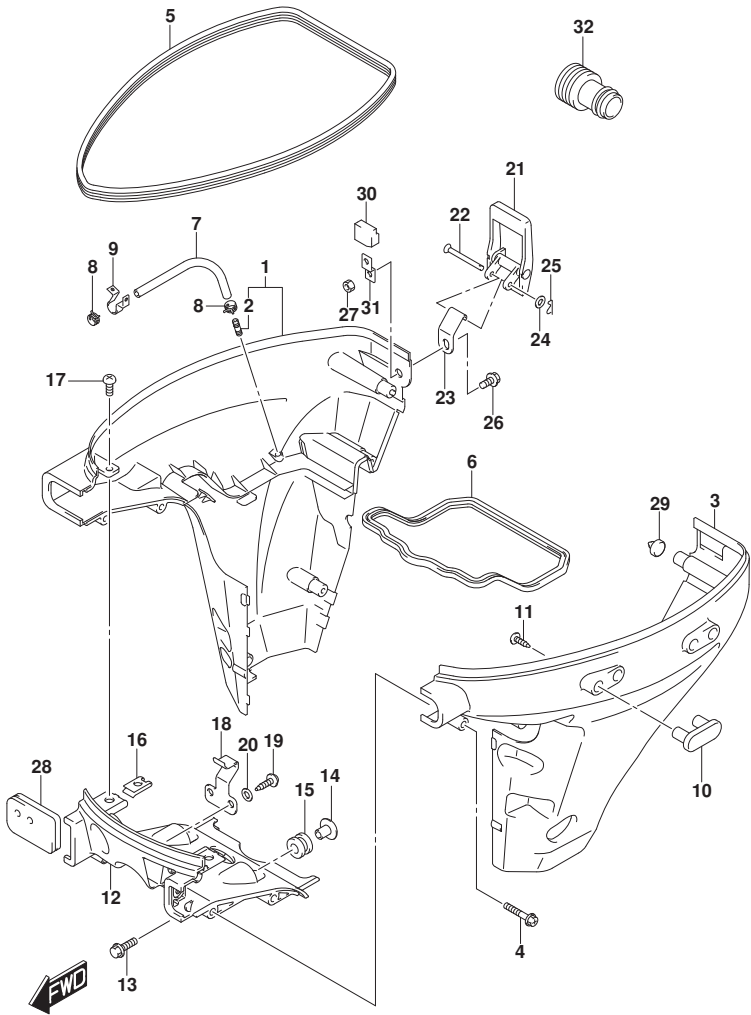

DF8A_P01_018_410B
SIDE COVER

FIG.410B (1-E-9) SIDE COVER (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	61124-99J10	GROMMET, R/CON CABLE (STBD)	1	
29	61151-99J00	CUSHION, SIDE COVER HOLDER	1	
30	61813-99J01	CUSION, SIDE COVER	1	
31	36617-93J10	BRACKET, HARNESS	1	
32	17917-87LL0	CONNECTOR, FLUSH WATER	1	OPT

DF8AR P01
DF9.9AR P01

FIG.420A

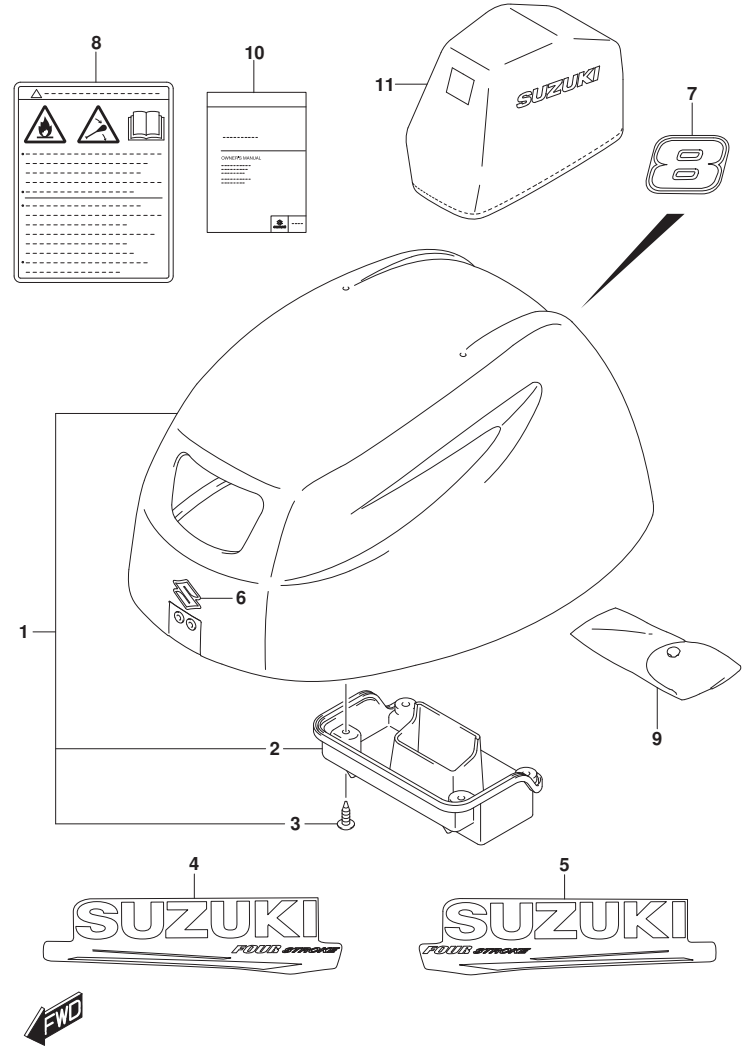


FIG.420A (1-E-10) ENGINE COVER (DF8A)(DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-99J01-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-99J00	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61443-97L00	STRIPE, ENGINE COVER STBD	1	
5	61453-97L00	STRIPE, ENGINE COVER PORT	1	
6	68111-99J00	EMBLEM (S)	1	
7	61435-99J20	MARK, EMBLEM REAR (8)	1	
8	61458-89L30	LABEL, ENGINE COVER	1	
9	59800-99J10	TOOL ASSY	1	
10	99011-99J70-055	MANUAL, OWNER'S	1	
11	68110-89L01	COVER, WEATHER	1	OPT

DF8A P01
DF8AR P01

FIG.420B

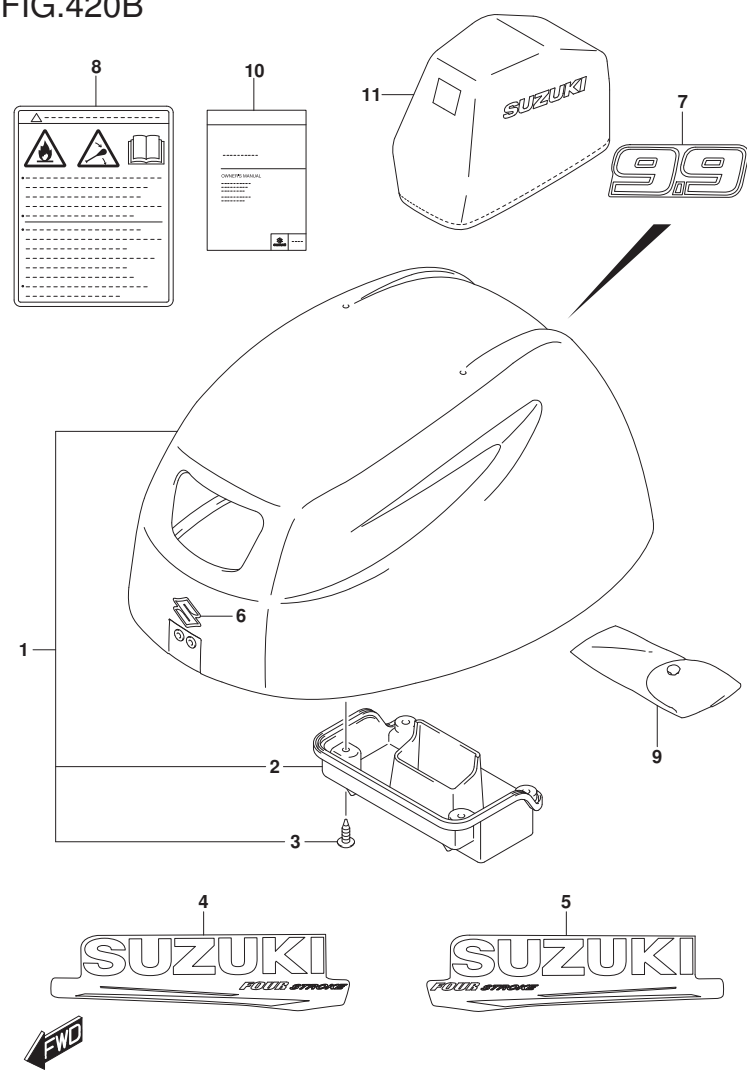


FIG.420B (1-E-11) ENGINE COVER (DF9.9A)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-99J01-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-99J00	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61443-97L00	STRIPE, ENGINE COVER STBD	1	
5	61453-97L00	STRIPE, ENGINE COVER PORT	1	
6	68111-99J00	EMBLEM (S)	1	
7	61435-89L10	MARK, EMBLEM REAR (9.9)	1	
8	61458-89L30	LABEL, ENGINE COVER	1	
9	59800-99J10	TOOL ASSY	1	
10	99011-99J70-055	MANUAL, OWNER'S	1	
11	68110-89L01	COVER, WEATHER	1	OPT

DF9.9A P01
DF9.9AR P01

FIG.432A

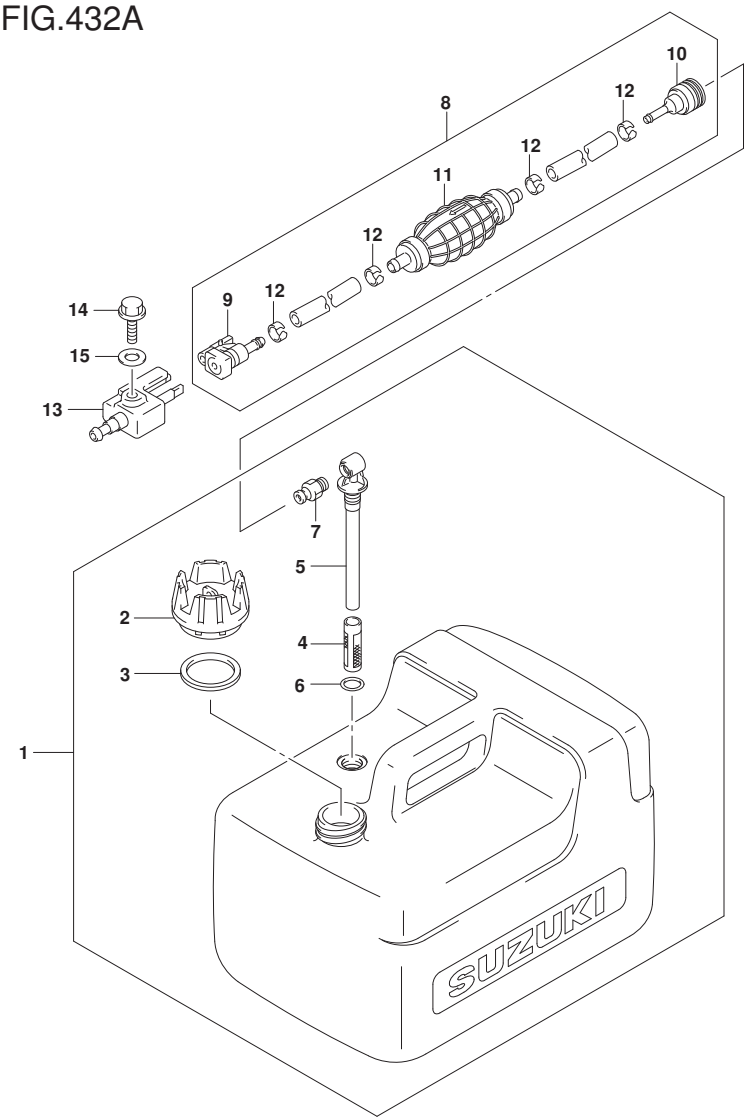


FIG.432A (1-E-12) FUEL TANK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-89L10	TANK ASSY, FUEL (12L)	1	
2	65520-99100	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-99100	.OUTLET	1	
6	65892-95D00	.O RING	1	
7	65740-95D01	.PLUG, FUEL CONNECTOR	1	
8	65700-89L30	HOSE, FUEL	1	
9	65750-87J11	.SOCKET, FUEL HOSE	1	
10	65750-95500	.SOCKET, FUEL HOSE	1	
11	65770-89L00	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-986L0	PLUG, FUEL CONNECTOR	1	
14	09103-06237	BOLT (6X12.5)	1	
15	09160-06085	WASHER (6.5X15X1)	1	

FIG.442A

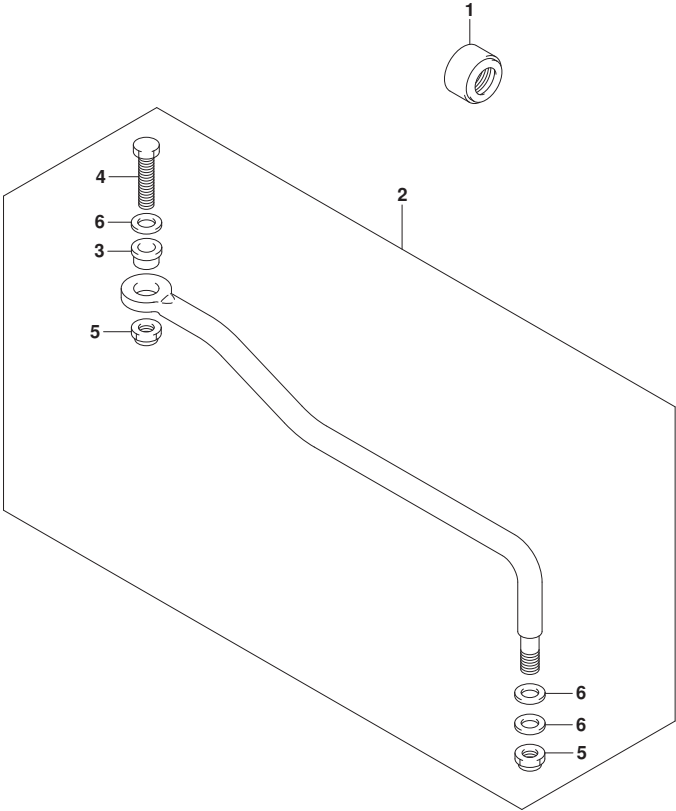


FIG.442A (1-E-13) DRAG LINK (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41161-94400	SEAL, STEERING CABLE	1	
2	67701-99J02	LINK ASSY, DRAG	1	
3	67721-93E10	.SPACER	1	
4	67725-96J00	.BOLT	1	
5	67726-99E00	.NUT	2	
6	67728-99E00	.WASHER	4	

DF8AR P01
DF9.9AR P01



FIG.444A

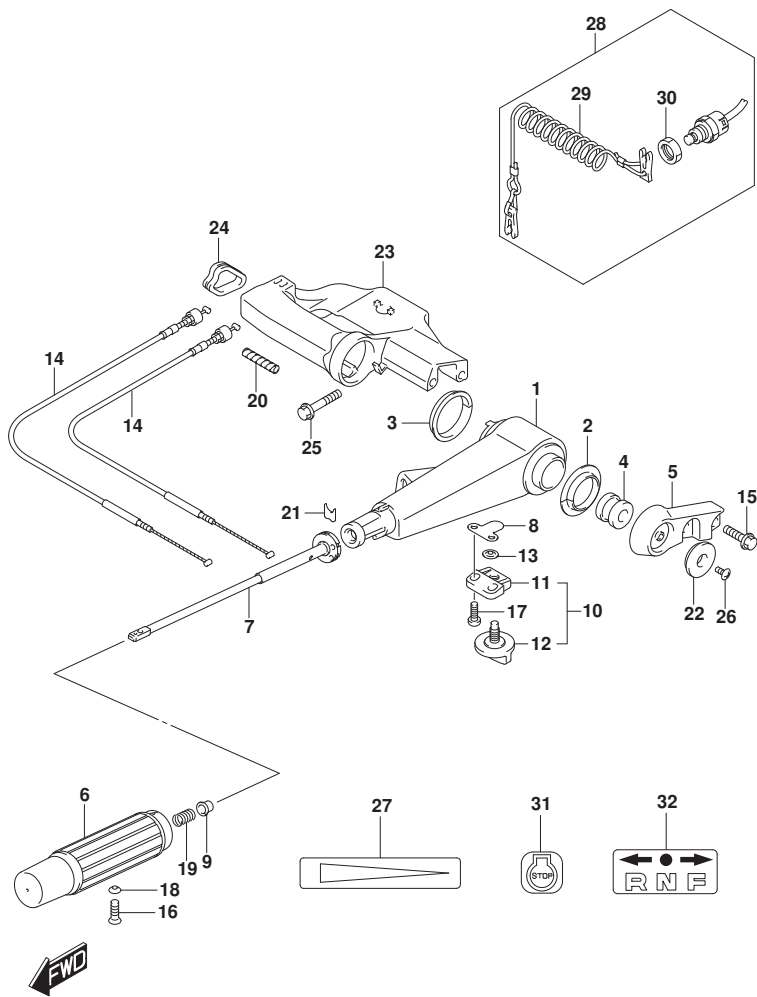


FIG.444A (1-E-14) TILLER HANDLE (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63111-89L01-YAY	HANDLE, TILLER (BLACK)	1	
2	63115-99J10	BUSH, TILLER HANDLE NO.1	1	
3	63115-99J00	BUSH, TILLER HANDLE NO.2	1	
4	63116-99J00	RUBBER, FRICTION	1	
5	63121-99J00-YAY	COVER, TILLER HANDLE (BLACK)	1	
6	63210-89L11	GRIP, HANDLE	1	
7	63220-94J00	ROD, HANDLE	1	
8	63225-98601	PLATE, HANDLE ROD ADJUSTER	1	
9	63225-93200	BUSH, HANDLE ROD	1	
10	63240-94J10	ADJUSTER SET, HANDLE	1	
11	63241-986B0	.SUPPORT, ROD	1	
12	63244-94J00	.KNOB, ADJUSTER	1	
13	09148-06008	NUT	1	
14	63610-99J00	CABLE ASSY, THROTTLE	2	
15	09116-08151	BOLT (8X30)	2	
16	09126-06026	SCREW (6X23)	1	
17	09136-05041	SCREW (5X20)	2	
18	09163-06001	LOCK WASHER	1	
19	09440-12027	SPRING	1	
20	33833-91J00	TUBE, THROTTLE CABLE	1	L:250->150
21	63114-99J01	PLATE, WARNING INDICATOR	1	
22	63122-99J00	PROTECTOR, HANDLE COVER	1	
23	63131-99J11-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
24	63133-89L00	GROMMET, TILLER HANDLE BRACKET	1	
25	09116-08155	BOLT (8X45)	2	
26	09125-05042	SCREW (5X10)	1	
27	63215-93110	MARK, HANDLE GRIP	1	

FIG.444A


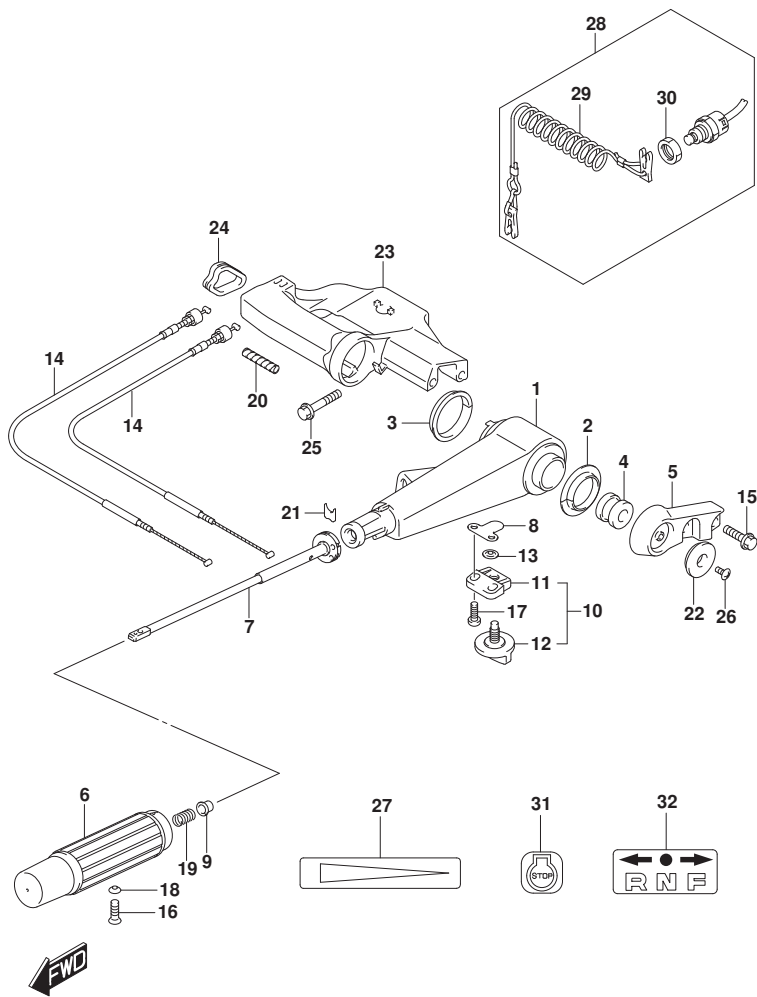


FIG.444A (1-E-15) TILLER HANDLE (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	37830-99J11	SWITCH ASSY, EMERGENCY	1	
29	37823-97J00	.PLATE, LOCK	1	
30	37826-97J00	.NUT	1	
31	37835-91J00-YAY	LABEL, STOP (BLACK)	1	
32	21131-94J00-YAY	MARK, CLUTCH SHIFT (BLACK)	1	

DF8A P01
DF9.9A P01

FIG.450A

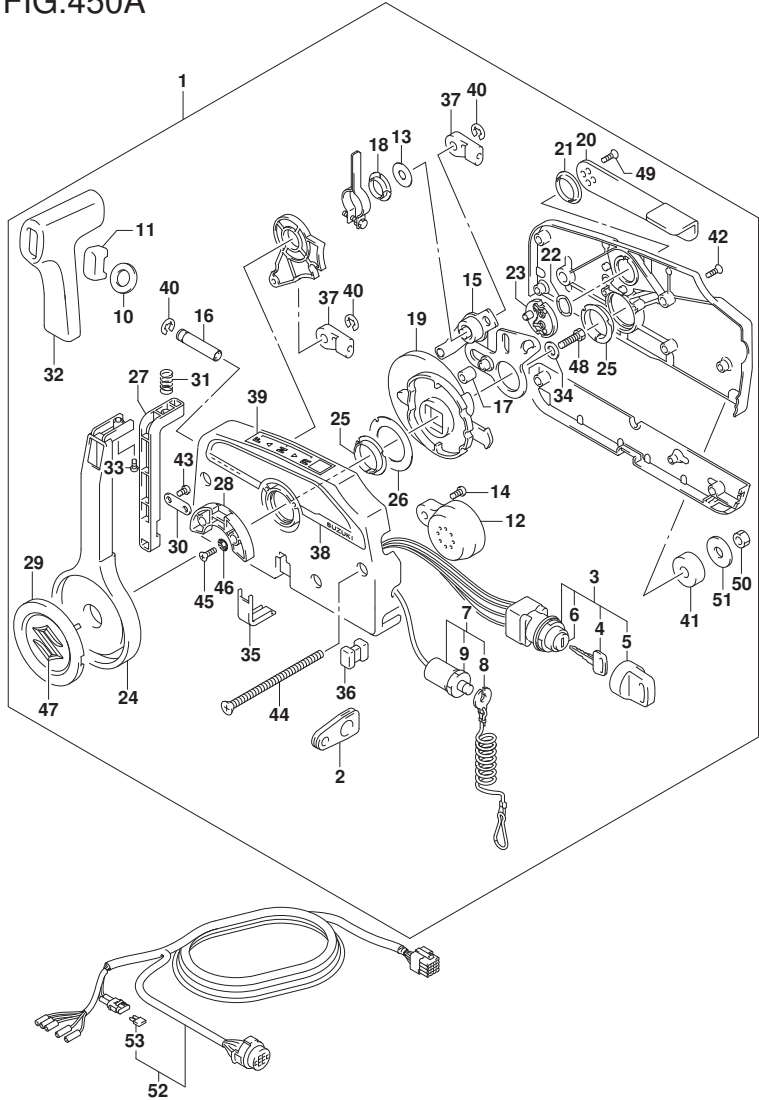


DF8A_P01_018_450A
REMOTE CONTROL

FIG.450A (1-F-2) REMOTE CONTROL (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J20	REMOTE CONTROL ASSY	1	
2	36628-92E00	..GROMMET, WIRING HARNESS	1	
3	37110-94J02	..SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E00	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37820-93J04	..SWITCH ASSY, EMERGENCY	1	
8	37823-92E01	..PLATE ASSY, EMERGENCY SWITCH LOCK	1	
9	37826-92J00	..NUT	1	
10	37859-90J00	..SPACER	1	
11	37864-94J10	..CAP, PTT SW	1	
12	38500-93J00	..BUZZER ASSY, WARNING	1	
13	67212-95600	..WASHER	1	
14	67214-92E00	..SCREW (5X20)	1	
15	67220-95630	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	
17	67229-95600	..ROLLER	1	

DF8A_P01_018

FIG.450A

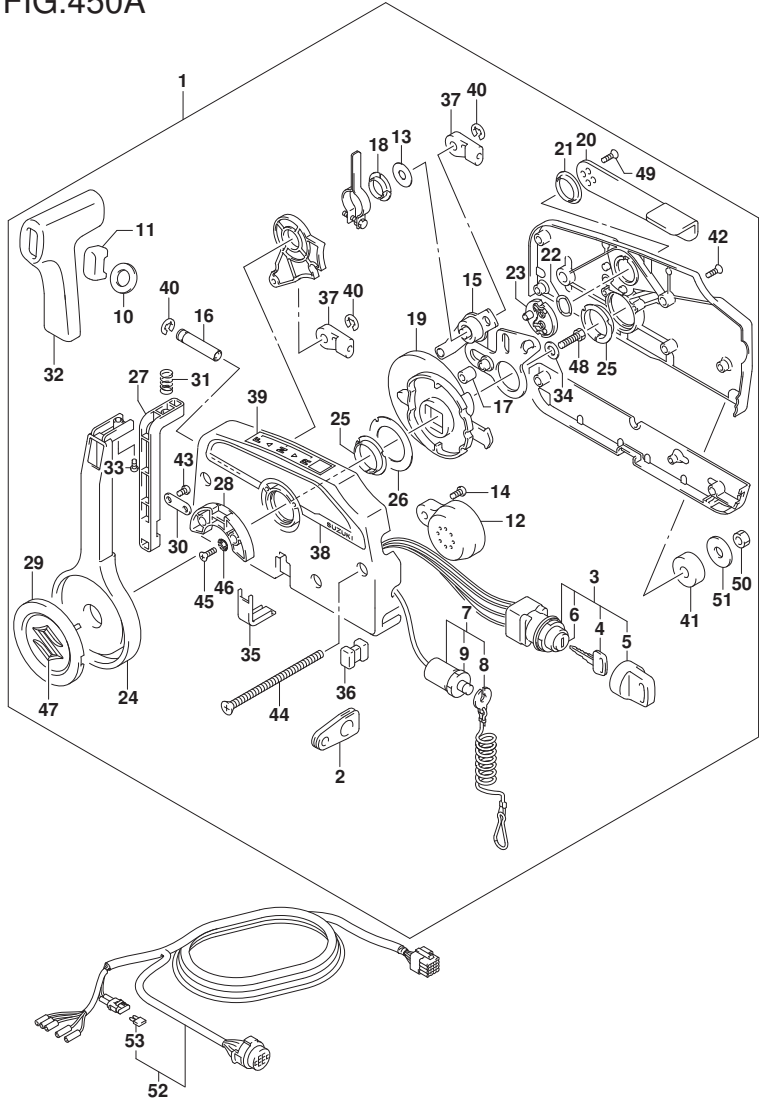

DF8A_P01_018_450A
REMOTE CONTROL

FIG.450A (1-F-3) REMOTE CONTROL (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	67232-95600	.BUSH	1	
19	67238-87D00	.GEAR, DRIVE	1	
20	67241-99E10	.LEVER, FREE THROTTLE	1	
21	67243-95600	.BUSH	1	
22	67244-95600	.WAVE WASHER	1	
23	67245-95600	.DRUM, FREE THROTTLE	1	
24	67251-99E20	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-99E10	.ARM, LOCK	1	
28	67256-95600	.HOLDER, NEUTRAL LOCK	1	
29	67257-99E10	.CAP, LEVER	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-99E10	.GRIP	1	
33	67296-94310	.SCREW	1	
34	67264-95600	.WASHER	1	
35	67267-93J00	.COVER, WIRE	1	
36	67273-95600	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67282-94L00	.DECAL, REMOCON SIDE	1	
39	67284-94L00	.MARK, HANDLE LEVER	1	
40	67292-94300	.E RING	3	
41	67294-95600	.SPACER	3	
42	67296-90J10	.SCREW, REAR COVER	5	
43	67296-94300	.SCREW (4X10)	2	
44	67296-95600	.SCREW	3	
45	67296-95610	.SCREW	2	
46	67297-95600	.WASHER	2	

DF8A_P01_018

FIG.450A

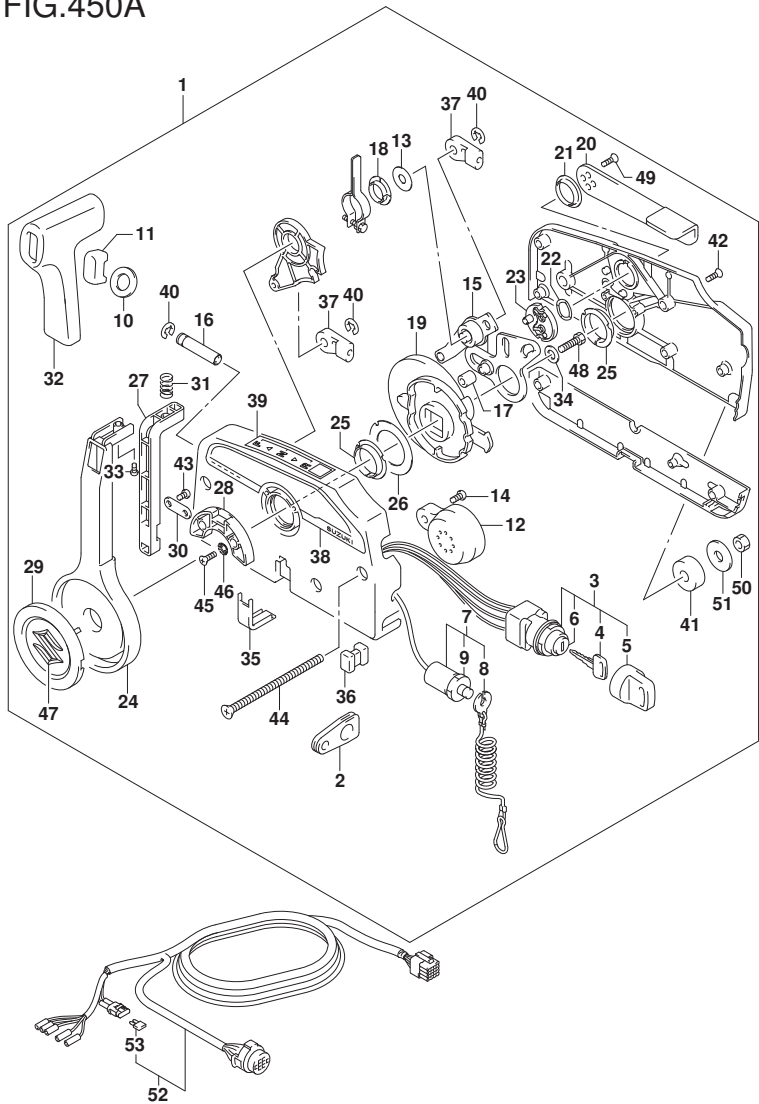


FIG.450A (1-F-4) REMOTE CONTROL (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
47	77811-54GB0-0PG	.EMBLEM, REAR MARK S (CHROME)	1	
48	09100-08232	.BOLT (8X30)	1	
49	09126-05003	.SCREW (5X12)	2	
50	09140-06020	.NUT	3	
51	09160-06104	.WASHER (6.5X24X2)	3	
52	36620-94J01	WIRE ASSY, REMOTE CONTROL	1	
53	09481-10501	.FUSE (10A)	1	

DF8AR P01
DF9.9AR P01

FIG.454A

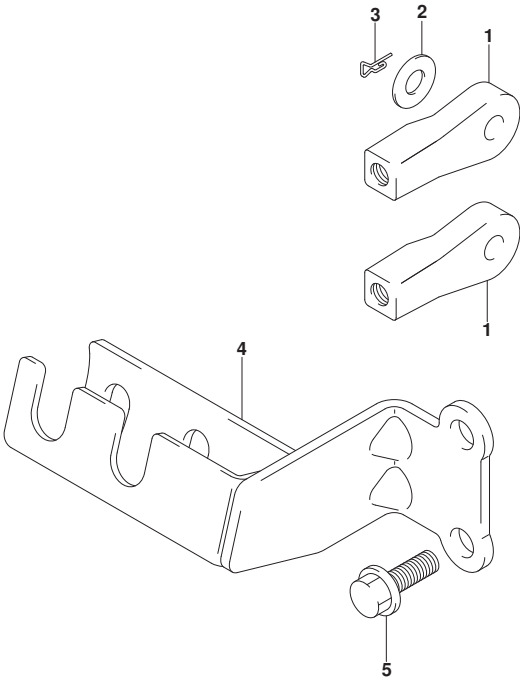


FIG.454A (1-F-5) REMOCON CABLE HOLDER (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67467-89J01	CONNECTOR, R/CON CABLE	2	
2	09160-06055	WASHER (7X12X1)	2	
3	09385-06012	CLIP	2	
4	67340-99J00	HOLDER, REMOCON CABLE	1	
5	01550-0616C	BOLT	2	

DF8AR P01
DF9.9AR P01



FIG.501A

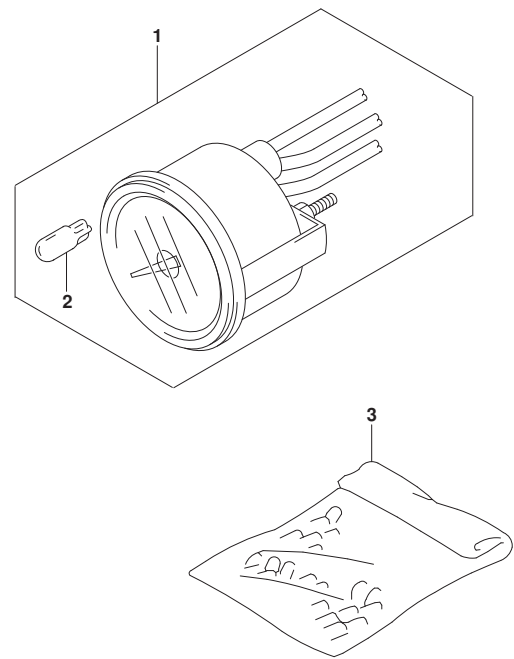


FIG.501A (1-F-6) OPT:METER (DF8AR)(DF9.9AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34200-93J20	TACHOMETER ASSY	1	BLACK
1-2	34200-93J32	TACHOMETER ASSY	1	WHITE
2	09471-12028	.BULB (12V3.4W,T10)	1	
3	36990-87D00	TERMINAL & SLEEVE SET	1	

DF8AR P01
DF9.9AR P01

FIG.513A

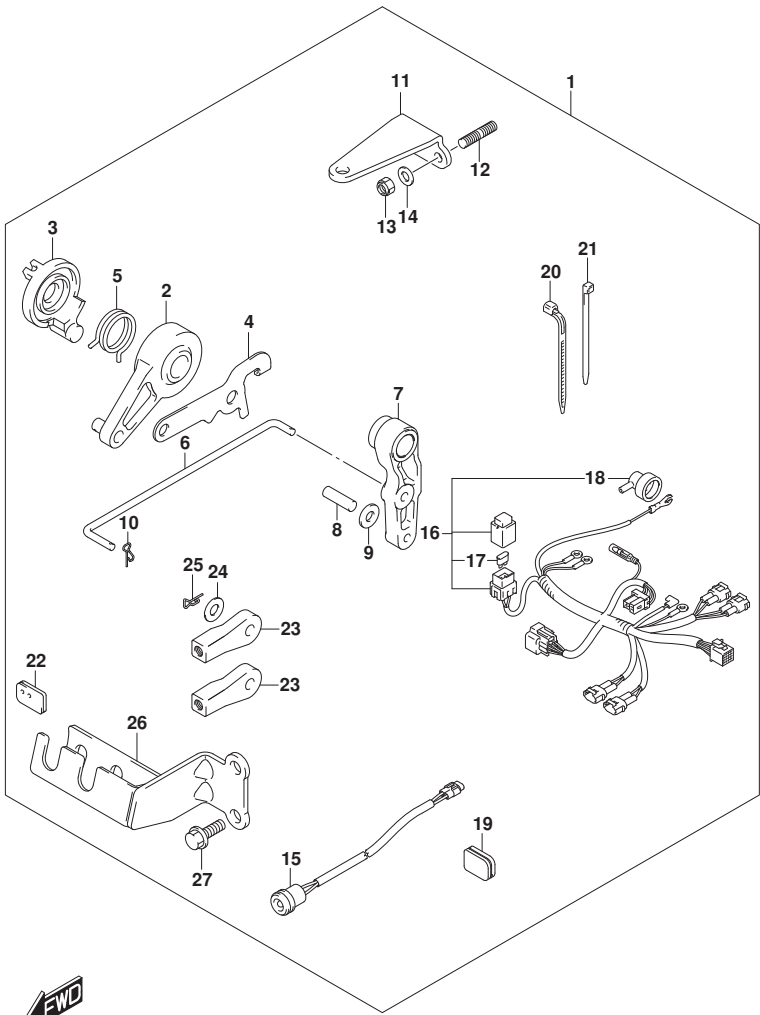


FIG.513A (1-F-7) OPT:REMOTE CONTROL PARTS (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-99J01	PARTS SET, REMOTE CONTROL	1	
2	19120-99J11	.DRUM, THROTTLE CONTROL	1	
3	19122-99J00	.LEVER, INTERLINK THROTTLE NO.2	1	
4	19184-99J10	.PLATE, THROTTLE LINK	1	
5	19185-99J00	.SPRING, THROTTLE LEVER	1	
6	21241-99J00	.LINK, CLUTCH LEVER	1	
7	23210-99J00	.LEVER, CLUTCH CONTROL	1	
8	09204-01002	.PIN	1	
9	09160-05029	.WASHER (5.5X12X0.8)	2	
10	09385-04003	.CLIP	1	
11	43755-99J00	.ATTACHMENT, STRG BRKT	1	
12	09108-08286	.STUD BOLT	2	
13	09159-08059	.NUT	2	
14	09160-08082	.WASHER (8.5X16X1.2)	2	
15	36360-99J10	.INDICATOR, OIL PRESSURE	1	
16	36610-99J20	.HARNESS ASSY, WIRING	1	
17	09481-20501	..FUSE (20A)	1	
18	36618-43410	..CAP, OIL PRESSURE SWITCH	1	
19	36656-99J10	.GROMMET, CABLE (PORT)	1	
20	09407-14403	.CLAMP (L:125)	1	
21	09407-14407	.CLAMP (L:145)	1	
22	61124-99J10	.GROMMET, R/CON CABLE (STBD)	1	
23	67467-89J01	.CONNECTOR, R/CON CABLE	2	
24	09160-06055	.WASHER (7X12X1)	2	
25	09385-06012	.CLIP	2	
26	67340-99J00	.HOLDER, REMOCON CABLE	1	
27	01550-06167	.BOLT	2	

DF8A P01
DF9.9A P01

FIG.515A


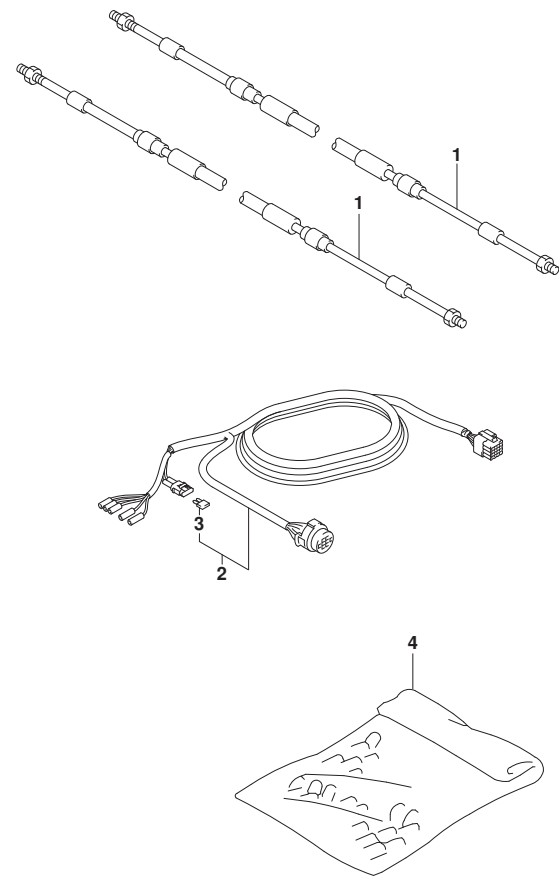


FIG.515A (1-F-8) OPT:REMOCON CABLE (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
1-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
1-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
1-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
1-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
1-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
1-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
1-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
1-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	
2	36620-94J01	WIRE ASSY, REMOTE CONTROL	1	W/ELECTRIC STARTER
3	09481-10501	.FUSE (10A)	1	W/ELECTRIC STARTER
4	36990-87D00	TERMINAL & SLEEVE SET	1	W/ELECTRIC STARTER

DF8A P01
DF9.9A P01

FIG.515B

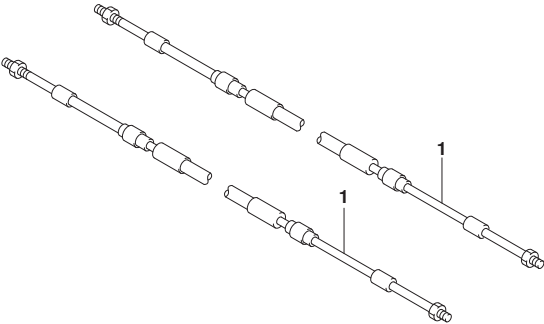

DF8AR P01
DF9.9AR P01

FIG.515B (1-F-9) OPT:REMOCON CABLE (DF8AR)(DF9.9AR)				
REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
1-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
1-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
1-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
1-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
1-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
1-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
1-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
1-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.544A

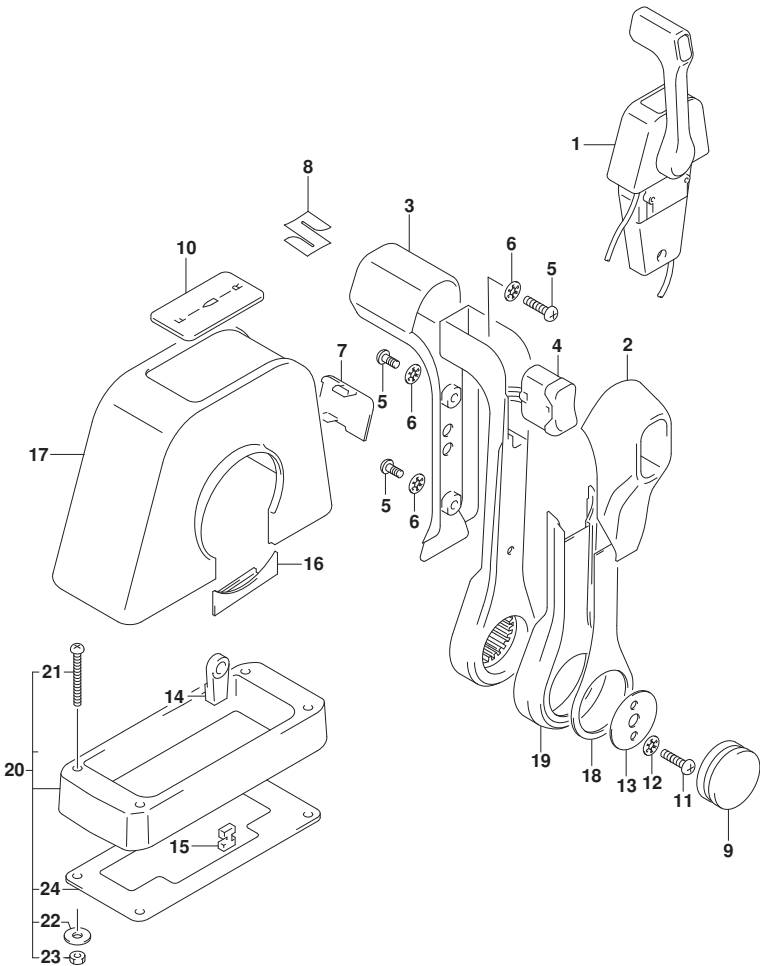


FIG.544A (1-F-10) OPT:REMOTE CONTROL ASSY SINGLE (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L00	REMOTE CONTROL ASSY, SINGLE	1	
2	67261-88L10	.GRIP, REMOCON NO.2	1	
3	67261-88L00	.GRIP, REMOCON NO.1	1	
4	37850-88L00	.SWITCH ASSY, PTT	1	
5	67296-88L00	.SCREW	3	
6	67288-92E20	.WASHER	3	
7	67212-88L00	.COVER, PLUG (SINGLE)	1	
8	68111-88L00	.EMBLEM, MARK (S)	1	
9	67257-88L00	.CAP, LEVER	1	
10	67281-88L00	.DECAL (SINGLE)	1	
11	67296-92E60	.SCREW	2	
12	67288-92E60	.WASHER	2	
13	67253-92E00	.WASHER	1	
14	67275-95600	.END, CABLE	2	
15	67273-95600	.SPACER	1	
16	67271-88L10	.COVER, REMOCON LEVER LOWER	1	
17	67211-88L00	.COVER (SINGLE)	1	
18	67264-88L00	.COVER, LEVER DESIGN	1	
19	67264-88L10	.COVER, LEVER PLATING	1	
20	67500-88L00	KIT, REMOCON SPACER SINGLE	1	
21	09125-05135	.SCREW (5X65)	4	
22	09160-05029	.WASHER (5.5X12X0.8)	4	
23	09140-05005	.NUT	4	
24	67273-88L00	.GROMMET, R/CON SINGLE	1	

FIG.545A

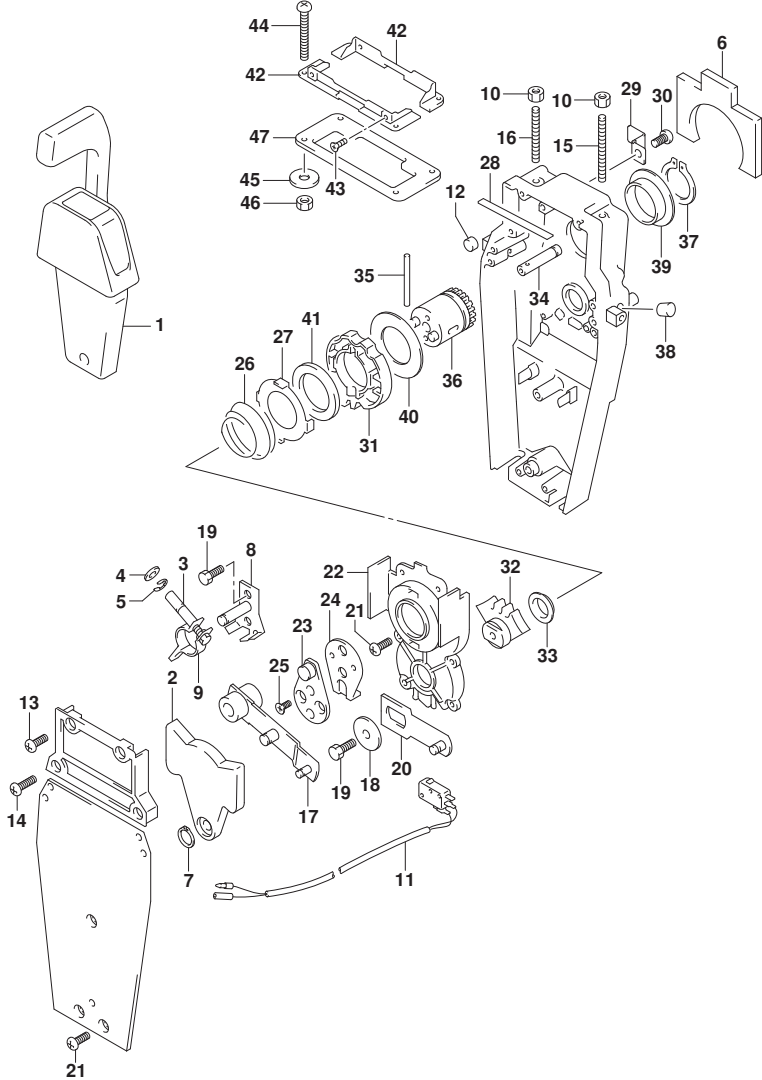


FIG.545A (1-F-11) OPT:REMOTE CONTROL ASSY SINGLE (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L00	REMOTE CONTROL ASSY	1	
2	67222-92E00	.DUAL PLATE	1	
3	67223-92E00	.BRAKE ADJUST	1	
4	67288-92E00	.WASHER	1	
5	67292-94300	.E RING	4	
6	67272-88L00	.GOM SEAL, WATERPROOF	1	
7	67291-92E00	.SNAP RING	1	
8	67221-92E00	.SHIFT ASSY	1	
9	67224-92E00	.BRAKE ARM ASSY	1	
10	09140-06020	.NUT	2	
11	37721-88L00	.SWITCH ASSY, NEUTRAL	1	
12	67236-92E00	.ROLLER	1	
13	67296-88D10	.SCREW (5X16)	2	
14	67296-92E20	.SCREW	2	
15	67226-92E00	.BOLT, STOPPER FRONT	1	
16	67226-92E10	.BOLT, STOPPER REAR	1	
17	67240-92E00	.ARM ASSY, THROTTLE	1	
18	67228-92E00	.WASHER	1	
19	67286-92E00	.BOLT	3	
20	67230-88L00	.ARM ASSY, SHIFT	1	
21	09125-05042	.SCREW (5X10)	10	
22	67234-88L00	.CASE, GEAR	1	
23	67245-92E00	.LEVER ASSY, THROTTLE	1	
24	67227-92E00	.STOPPER	1	
25	09126-06006	.SCREW (6X20)	2	
26	67233-92E00	.SPRING	1	
27	67235-92E00	.PLATE, SHIFT LOCK	1	
28	67237-92E01	.SPRING	5	
29	67269-92E00	.BRACKET	1	
30	67296-88D10	.SCREW	1	
31	67238-88L00	.GEAR, DRIVE	1	
32	67231-88L00	.GEAR, SHIFT	1	
33	67232-88L00	.BUSH, SHIFT GEAR	1	
34	67241-88L00	.ROD, FREE ACCEL	1	

FIG.545A

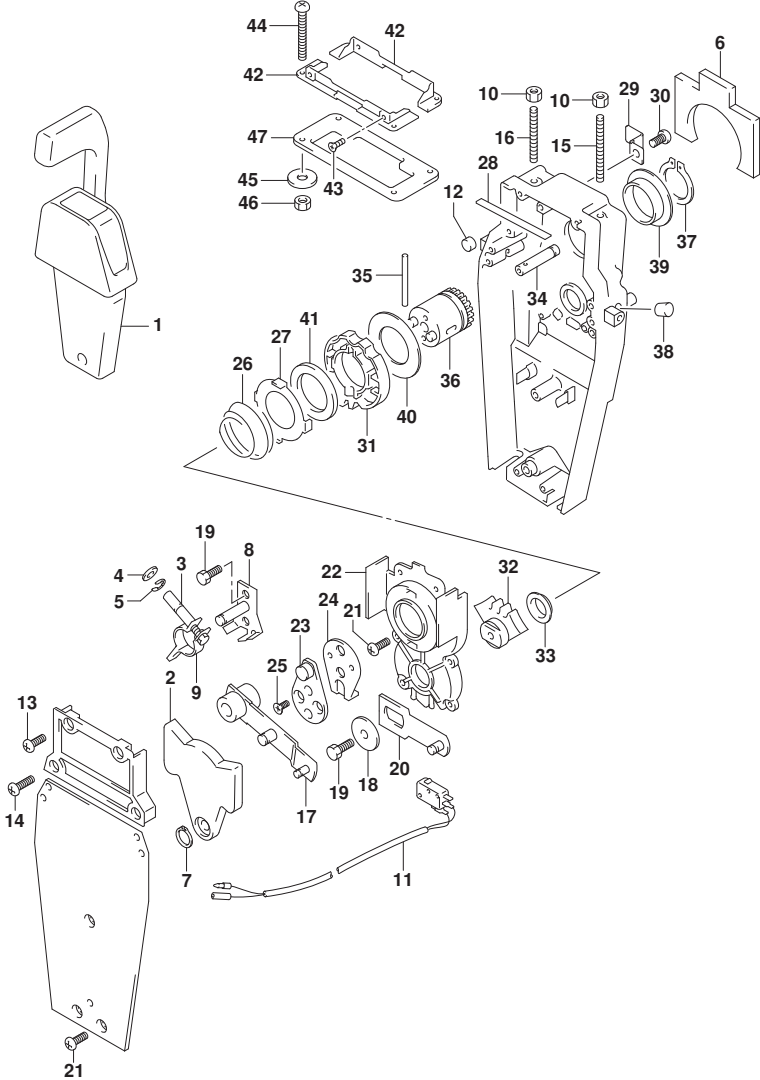


FIG.545A (1-F-12) OPT:REMOTE CONTROL ASSY SINGLE (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67239-92E00	.PIN	1	
36	67246-88L00	.SHIFT, REMOCON DRIVE	1	
37	67291-92E10	.SNAP RING	1	
38	67243-92E00	.CAP, HOLE	1	
39	67252-88L00	.BUSH, REMOCON DRIVE SHAFT	1	
40	67253-88L00	.WASHER, REMOCON DRIVE SHAFT	1	
41	67239-92E10	.PLATE, SHIFT PIN	1	
42	67274-88L00	.FLANGE, COVER BASE (SINGLE)	2	
43	67296-95610	.SCREW	4	
44	67296-92E30	.SCREW	4	
45	09160-05024	.WASHER (5.5X16X1.5)	4	
46	67287-92E00	.NUT	4	
47	67273-88L00	.GROMMET, REMOCON (SINGLE)	1	

FIG.553A

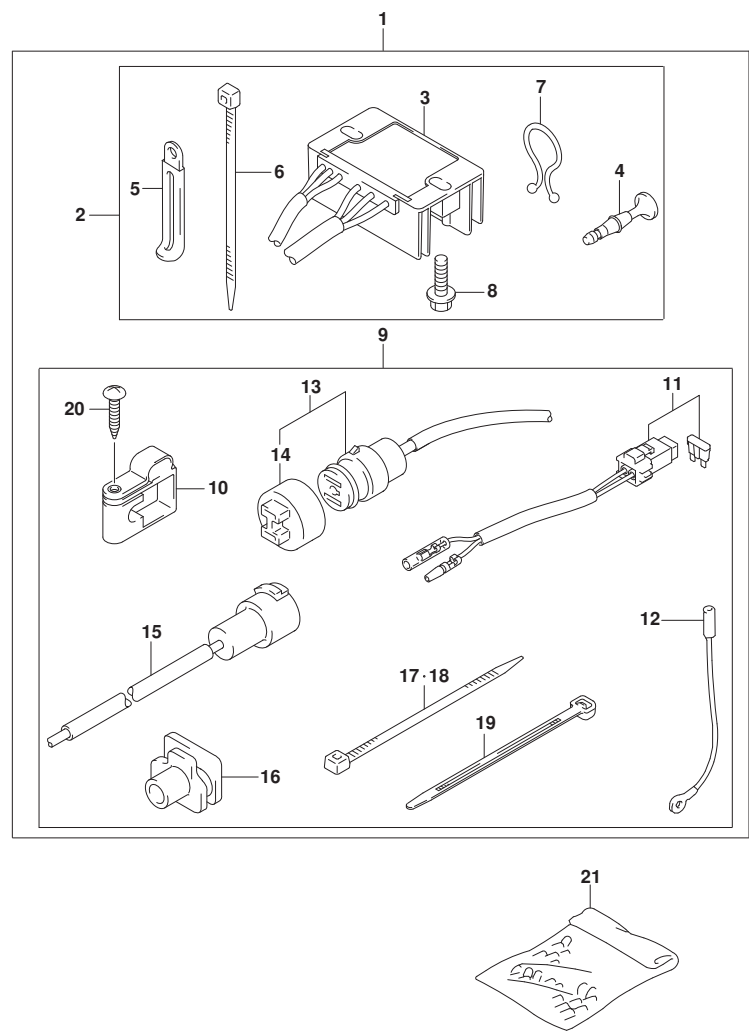


FIG.553A (1-F-13) OPT:ELECTRICAL (MANUAL STARTER) (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32000-99J00	KIT, BATTERY CHARGING	1	
2	32801-95J01	..RECTIFIER/REGULATOR SET	1	
3	32800-95J01	..RECTIFIER/REGULATOR ASSY	1	
4	36615-96300	..TERMINAL, RESIN	2	
5	29404-93J10	..CLAMP, RECT/RGLTR LEAD	1	
6	09407-10404	..CLAMP (L:100)	1	
7	09408-00024	..CLIP (ID:23)	1	
8	01550-06257	..BOLT	2	
9	39600-94J01	..RECEPTACLE SET	1	
10	33816-94J01	..CLAMP, CABLE	1	
11	36740-94J00	..CASE ASSY, FUSE	1	
12	37801-98300	..LEAD RECEPTACLE GROUND	1	
13	39601-95D00	..RECEPTACLE ASSY, LIGHTING	1	
14	36634-93910	...CAP	1	
15	39602-93900	..PLUG, RECEPTACLE	1	
16	39603-94400	..GROMMET, RECEPTACLE	1	
17	09407-10404	..CLAMP (L:100)	1	
18	09407-25402	..CLAMP (L:250)	1	
19	09407-14403	..CLAMP (L:125)	2	
20	03241-0625A	..SCREW	1	
21	36990-87D00	TERMINAL & SLEEVE SET	1	

DF8A P01
DF9.9A P01

FIG.561A

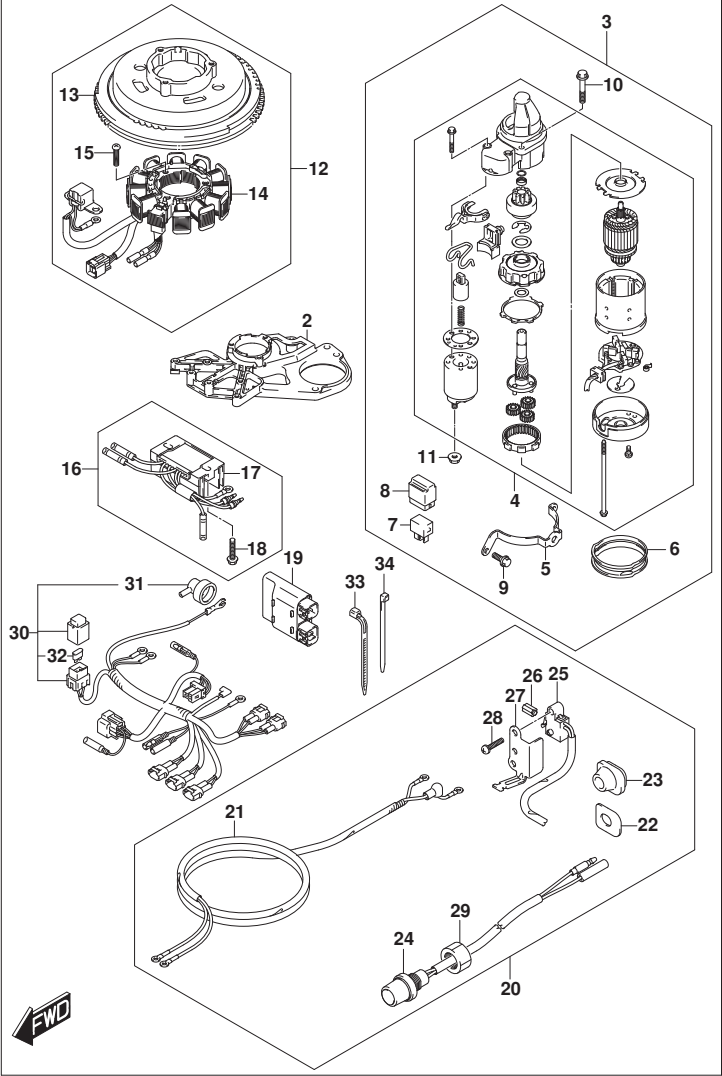


FIG.561A (1-F-14) OPT:STARTING MOTOR (MANUAL STARTER) (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31000-99J01	STARTER SET, ELECTRIC	1	
2	12625-99J00	..BASE, STATOR	1	
3	31101-99J00	..MOTOR SET, STARTING	1	
4	31100-94J22	..MOTOR ASSY, STARTING	1	
5	31912-99J00	..BAND	1	
6	31918-94J00	..DAMPER	1	
7	38860-76F01	..RELAY ASSY	1	
8	38915-90J00	..HOLDER	1	
9	01550-06167	..BOLT	2	
10	01550-08257	..BOLT	2	
11	08316-10087	..NUT	1	
12	32104-99J00	..MAGNETO SET	1	
13	32102-99J00	..FLYWHEEL, MAGNETO	1	
14	32120-99J00	..COIL, STATOR & PULSER	1	
15	09125-06035	..SCREW (6X25)	3	
16	32801-99J00	..RECTIFIER/REGULATOR SET	1	
17	32800-99J00	..RECTIFIER/REGULATOR ASSY	1	
18	01550-06257	..BOLT	2	
19	32900-99J00	..UNIT, CDI	1	
20	33800-99J01	..CABLE SET, STARTING	1	
21	33810-99J00	..CABLE, STARTER	1	
22	36655-99J00	..PLATE, CABLE GROMMET	1	
23	36656-99J20	..GROMMET, CABLE (PORT)	1	
24	37161-89E13	..SWITCH ASSY, STARTER	1	
25	37721-99J10	..SWITCH ASSY, NEUTRAL	1	
26	37724-99J00	..ROD, SWITCH PUSH	1	
27	37726-99J10	..BRACKET, NEUTRAL SW	1	
28	09137-04004	..SCREW (4X16)	2	
29	09159-14032	..NUT	1	

FIG.561A


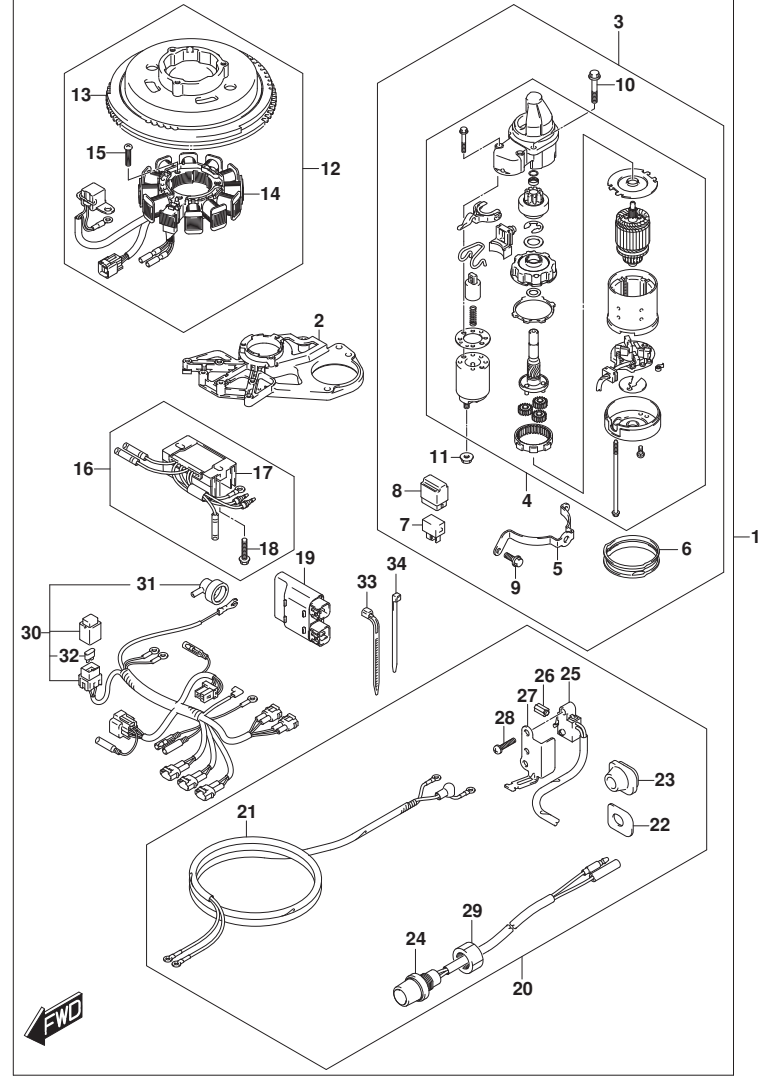


FIG.561A (1-F-15) OPT:STARTING MOTOR (MANUAL STARTER) (DF8A)(DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	36610-99J00	.HARNESS ASSY, WIRING	1	
31	36618-43410	..CAP, OIL PRESSURE SWITCH	1	
32	09481-20501	..FUSE (20A)	1	
33	09407-14403	..CLAMP (L:125)	2	
34	09407-14407	..CLAMP (L:145)	4	

DF8A P01
DF9.9A P01

FIG.583A (1-G-2) OPT:FUEL TANK

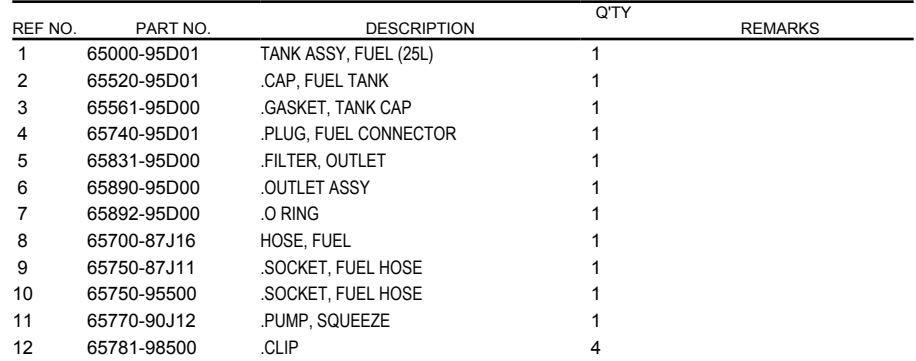

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		120B-16	13240-99J10	128A-14-2	
		12840-99J00	121A-3	128B-14	
			121B-3	128C-14-1	
		12842-49201	121A-4	128C-14-2	
		121B-4		128D-14	
11110-99J00	111A-1	12843-27A00	121A-5	128A-8	
11115-09G00-001	111A-23		121B-5	128B-8	
11118-99JL0	111A-3	12843-99J00	121A-6	128C-8	
11119-99JL0	111A-4		121B-6	128D-8	
11141-99J00	111A-2	12861-99JL0	121A-7	128A-6	
11170-99J00	111A-16		121B-7	128B-6	
11173-99J00	111A-20	12891-99J00	121A-8	128C-6	
11178-99J00	111A-17		121B-8	128D-6	
11196-99J00	111A-19	12911-99J10	121A-10	128A-15	
11197-99J00	162A-4		121B-10	128B-15	
11216-90J00	111A-6	12915-99J10	121A-11	128C-15	
11261-93J00	111A-8		121B-11	128D-15	
11291-91B50	162A-7	12921-99J00	121A-12	128A-10	
11301-99J10	113A-1		121B-12	128B-10	
11382-93E00	111A-13	12931-78G00	121A-13	128C-10	
12100-99JL0-050	116A-10		121B-13	128D-10	
12111-99JL0-0B0	116A-1	12932-50MA0	121A-14	128A-13	
12140-99J00	116A-2		121B-14	128B-13	
12151-99JL0	116A-3	12933-71C00	121A-15	128C-13	
12160-99JL1	116A-5		121B-15	128D-13	
12163-99JL1	116A-6	13111-99J00	126A-1	128A-17	
12220-99JL0	116A-7	13119-99J00	126A-2	128B-17	
12341-99J00	116A-8	13124-99J00	128A-32	128C-17	
12625-99J00	120A-11-1		128B-26	128D-17	
	120B-11		128C-39	128A-16	
	561A-2		128D-33	128B-16	
12625-99J10	120A-11-2	13125-99J00	128A-31	128C-16	
12631-99JM0	120A-1		128B-25	128D-16	
	120B-1		128C-38	128A-29	
12635-99J00	120A-2		128D-32	128B-23	
	120B-2	13200-99J00	128A-1-1	128C-36	
12636-99J00	120A-3	13200-99J10	128A-1-2	128D-30	
	120B-3		128B-1	128A-19	
12637-99J00	120A-4	13200-99J20	128C-1-1	128B-19	
	120B-4	13200-99J30	128C-1-2	128C-22	
12638-99J00	120A-5		128D-1	128D-22	
	120B-5	13236-99J00	128A-2	128A-18	
12700-99JL1	121A-1-1		128B-2	128B-18	
12711-99JM1	121A-1-2	13236-99J20	128C-2	128C-21	
	121B-1		128D-2	128D-21	
12741-99JL0	120A-6	13239-94J00	128A-5	128A-26	
	120B-6		128B-5	128C-29	
12761-99J00	120A-16		128C-5	13361-99J00	
	120B-15		128D-5	128C-24	
12764-99J00	120A-17	13240-99J00	128A-14-1	13362-94J00	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
13363-94J00	128C-25		128B-12	18120-99J00	167A-2
	128A-23		128C-12	18130-99J00	167A-3
	128C-26		128D-12	18142-98600	167A-4
13364-94J00	128A-24	13640-99JL0	128A-35	18181-99J00	167A-5
	128C-27		128C-42	18193-99J00	167A-9
13365-94J00	128A-25	13710-99J00	126A-6	18210-99J00	167A-6
13367-94J00	128C-28	13802-94J00	128A-11	18280-99J00	167A-7
	128A-20		128B-11	18290-99J02	167A-11
	128A-27		128C-11	18498-99J00	146A-16
	128B-20		128D-11	19120-99J00	166A-1
	128B-21	13810-99J00	126A-5	19120-99J11	166B-1
	128C-23	13832-94J00	126A-8		513A-2
	128C-31	15100-94J02	146A-10	19122-99J00	166B-2
	128D-23	15131-99J00	146A-13		513A-3
13368-99J00	128D-25	15170-94J02	146A-11	19131-95502	166A-2
	128A-28	15191-99J11	146A-6	19148-99J00	166A-3
	128B-22	15192-99JL0	146A-4	19148-99J10	166B-3
13370-94J00	128C-32	15193-99JL0	146A-5	19184-99J00	166A-4
	128D-26	15251-93E01	146A-12	19184-99J10	166B-4
	128A-7	15410-98500	146A-1		513A-4
13375-26E00	128B-7	16400-99JL0	175A-1	19185-99J00	166B-5
	128C-7	16440-11D00	113A-4		513A-5
	128D-7	16510-45H10	175A-5	19656-99J00	166A-5
	128A-9	16512-99J00	175A-6	19810-99J00	166A-6
	128B-9	16515-99J10	401A-6		
	128C-9	16520-99J00	401A-18		
13428-06F30	128D-9	16542-99J00	175A-2	20000	
	128C-30	16910-99J01	175A-12		
	128D-24	16930-99JL0	175A-13		
13436-91J00	128A-33	17400-99J01	160A-19		
13441-99J00	128B-27	17411-94J00	160A-1	21111-89L00	206A-15
	128C-40	17413-94J00	160A-2	21122-99J00	206B-1
	128D-34	17461-939M0	160A-3	21122-99J10	206A-1
	128C-18	17471-99J00	160A-4	21126-99J00	206A-7
	128D-18	17472-99J00	160A-5		206B-7
13443-99J00	128C-19	17473-94J00	160A-6	21126-99J10	206A-27
13493-99J00	128D-19	17561-99J00	160A-7-1	21131-94J00-YAY	444A-32
	128C-20	17561-99J10	160A-7-2	21210-99J00	206A-9
	128D-20	17563-94J00	160A-8		206B-9
13494-94J00	128C-33	17564-99J00	160A-9	21241-99J00	206B-13
	128D-27	17565-99J00	160A-18		513A-6
13495-94J00	128C-34	17631-99J20	160A-10	22511-99011	336A-1
13496-99J00	128D-28	17632-99J30	160A-11		336B-1
	128C-35	17670-94J00	162A-1	23111-99J00	206A-10-1
	128D-29	17681-99J10	162A-2		206B-10-1
13513-99J00	128A-34	17913-93J00	405A-1	23111-99J10	206A-10-2
	128B-28	17914-93J00	405A-2		206B-10-2
	128C-41	17917-87LL0	410A-34	23115-99J01	206A-14
13534-94J00	128D-35		410B-32	23115-99J10	206A-16
	128A-12	18100-99J00	167A-1	23131-99J00	206A-11

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
23210-99J00	206B-11 206B-14 513A-7	32102-99J00	303A-6-1 303B-4 561A-13	36610-99J00	334B-4 322A-3-1 561A-30
23210-99J11	206A-18	32102-99J10	303A-6-2	36610-99J10	322A-3-2
23311-95J00	210A-1	32104-99J00	561A-12	36610-99J20	322B-2
23312-94JL0	206A-19	32120-99J00	303A-1		513A-16
25111-99J01	210A-2		303B-1	36615-96300	322A-6-1
25211-99JL0	210A-5		561A-14		322A-6-2
25215-99J00	210A-6	32120-99J10	303A-3		553A-4
25311-99J00	210A-3	32140-99J11	303A-4	36617-93J10	410A-33
29141-93J00	160A-13	32800-95J01	553A-3		410B-31
	206A-17	32800-99J00	310A-1	36618-43410	322A-5
	210A-7		310B-1		322B-4
	335A-13		561A-17		513A-18
	335B-12	32801-95J01	553A-2		561A-31
	407A-25	32801-99J00	561A-16	36620-94J01	450A-52
29162-93J00	407A-26	32890-99J00	310A-3		515A-2
29404-93J10	553A-5		310B-3	36628-92E00	450A-2
29440-93J00	336A-20	32900-99J00	310A-8-1	36634-93910	553A-14
	336B-24		310B-8	36655-99J00	561A-22
			561A-19	36656-99J00	322A-7
		32900-99J10	310A-8-2	36656-99J10	322B-5
		32980-99J00	310A-9		513A-19
			310B-9	36656-99J20	561A-23
		33410-99J00	310A-11	36740-94J00	553A-11
			310B-11	36990-87D00	501A-3
31000-99J01	561A-1		310A-10		515A-4
31100-94J22	301A-1 561A-4	33500-07H00	310B-10		553A-21
31101-99J00	561A-3	33800-99J01	561A-20	37110-94J02	450A-3
31131-94J00	301A-2	33810-99J00	322A-1	37141-99E00	450A-4-1
31135-90J00	301A-3		322B-1	37141-99E10	450A-4-2
31151-94J01	301A-4		561A-21	37141-99E20	450A-4-3
31152-90J00	301A-5	33816-94J01	553A-10	37141-99E30	450A-4-4
31153-90J00	301A-6	33833-91J00	444A-20	37141-99E40	450A-4-5
31170-94J00	301A-17	33833-94J10	310A-14	37141-99E50	450A-4-6
31171-96J00	301A-7		310B-14	37141-99E60	450A-4-7
31173-94J01	301A-8	33833-94JL0	310A-13	37141-99E70	450A-4-8
31191-96J00	301A-9		310B-13	37141-99E80	450A-4-9
31220-94J00	301A-10	33833-99J00	334A-11	37141-99E90	450A-4-10
31310-90J00	301A-11		334B-9	37141-99EA0	450A-4-11
31320-94J00	301A-12	33833-99J10	322A-11	37141-99EB0	450A-4-12
31341-94J00	301A-13		322B-9	37143-99E00	450A-5
31343-90J00	301A-14	34200-93J20	501A-1-1	37149-93J00	450A-6
31344-90J00	301A-15	34200-93J32	501A-1-2	37161-89E13	334A-5
31360-93J01	301A-16	34830-87J20	334A-1		561A-24
31912-99J00	301A-18		334B-1	37721-88L00	545A-11
	561A-5	36360-99J00	334A-3	37721-99J10	334A-7
31918-94J00	301A-19	36360-99J10	334B-3		334B-5
	561A-6		513A-15		561A-25
32000-99J00	553A-1	36367-99J00	334A-4	37724-99J00	334A-8

30000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	334B-6		336B-12		336B-27
	561A-26	43111-99J40-YAY	336A-2-1	45722-94J11	336A-38
37726-99J01	167A-13	43111-99J50-YAY	336A-2-2		336B-28
37726-99J10	334A-9	43111-99J60-YAY	336B-2-1		
	334B-7	43111-99J70-YAY	336B-2-2		
	561A-27	43211-87JL0	336B-7		
37801-98300	553A-12	43211-99J00	336A-7		
37820-93E11	334A-2	43410-99J00	336A-23		
	334B-2	43411-939L0	336A-18		
37820-93J04	450A-7		336B-22		
37823-92E01	450A-8	43412-93900	336A-19	51110-99J00	401A-1
37823-97J00	444A-29		336B-23	51211-99J00	401A-2
37826-92J00	450A-9	43412-99J00	336A-24	52110-99J00-YAY	405A-3-1
37826-97J00	444A-30	43415-99J00	336A-25	52110-99J10-YAY	405A-3-2
37830-99J11	444A-28	43420-99J10	336A-26	52113-99J00	405A-4
37835-91J00-YAY	444A-31	43424-99J00	336A-27	54112-99J01	401A-8
37850-88L00	544A-4	43427-99J00	336A-28	54113-99J00	401A-9
37859-90J00	450A-10	43428-99J00	336A-29	54120-99JL0	401A-10
37864-94J10	450A-11	43512-99J00	336A-30	54122-99J00	401A-11
38500-93J00	450A-12	43514-94J00	336A-31	54125-99J00	401A-12
38860-76F01	301A-20	43514-99J00	336A-32	54126-99JL0	401A-13
	561A-7	43516-89J00	336A-33	54130-99J00	401A-14
38915-90J00	301A-21	43711-99J00	336A-3	54148-99J00	401A-15
	561A-8		336B-3	54151-99J00	405A-12
39600-94J01	553A-9	43750-99J60-YAY	336A-4-1	54167-99J01	405A-13
39601-95D00	553A-13		336B-4-1	54211-99J01-YAY	405A-14
39602-93900	553A-15	43750-99J70-YAY	336A-4-2	54213-93901	405A-16
39603-94400	553A-16		336B-4-2	54221-99J01-YAY	405A-15
		43755-99J00	336B-8	55100-99J40-YAY	407A-1
			513A-11	55300-95500	407A-23
		45212-95L00	336A-9	55321-87J01	111A-10
			336B-13		407A-6
		45231-89L00	336A-10	55321-87J11	407A-27
			336B-14	55331-99J10	407A-21
		45241-89L00	336A-11	55332-99J10	407A-22
41111-94J20-YAY	335B-1		336B-15	56120-99J41-YAY	407A-10
41111-99J00-YAY	335A-1	45247-99J00	336A-13	56130-99J30	220A-21
41121-94J20-YAY	335B-2		336B-17	56132-99J10	220A-23
41121-99J00-YAY	335A-2	45250-89L03	336A-14	57100-99JN0	220A-1-1
41130-93E03	335B-7		336B-18	57100-99JP0	220A-1-2
41161-94400	442A-1	45261-94J00	335A-14	57135-99J00	405A-5
41210-99JL1	335A-21		335B-13	57311-99J10	220A-8
	335B-20	45269-94J20	335A-19	57510-99J11	220A-9
41211-99JL0	335A-3		335B-18	57521-99J10	220A-10
	335B-3	45269-99J00	336A-40	57610-99JL0	220A-14
41212-91J00	335A-4	45420-99JM1	335A-16	57621-99J11	220A-15
	335B-4		335B-15	57631-93901	220A-19
41213-94J01	335A-5	45425-94J01	335A-17	57632-94J00	407A-17
	335B-5		335B-16	57632-98501	220A-20
41225-89L00	336A-8	45710-99JL1	336A-37	58100-89L00-019	407A-15-1

50000

40000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
58100-89L20-019	407A-15-2	61610-90L00	410A-21	65750-95500	432A-10	67245-92E00	545A-23	67296-92E30	545A-44	77811-54GB0-0PG	450A-47
58100-89L60-019	407A-15-4		410B-21		583A-10	67245-95600	450A-23	67296-92E60	544A-11		
58100-89L70-019	407A-15-3	61616-93EL0	410A-22	65770-89L00	432A-11	67246-88L00	545A-36	67296-94300	450A-43		
58100-90L41-019	407A-15-5		410B-22	65770-90J12	583A-11	67251-99E20	450A-24	67296-94310	450A-33		
58100-90L50-019	407A-15-6	61642-99J00	410A-23	65781-98500	432A-12	67252-88L00	545A-39	67296-95600	450A-44		
58100-90L60-019	407A-15-7		410B-23		583A-12	67252-95600	450A-25	67296-95610	450A-45		
58120-89L00	407A-16	61643-99J00	410A-19	65831-95D00	432A-4	67253-88L00	545A-40		545A-43		
59178-97J00	407A-8		410B-19		583A-5	67253-92E00	544A-13	67297-95600	450A-46		
59441-94J00	220A-17	61810-99J02-YAY	410A-1	65890-95D00	583A-6	67253-95600	450A-26	67320-93J00	515A-1-1	90000	
59441-99J00	220A-18		410B-1	65890-99100	432A-5	67255-99E10	450A-27		515B-1-1		
59800-99J10	420A-9	61813-99J01	410A-32	65892-95D00	432A-6	67256-95600	450A-28	67320-93J10	515A-1-2	99000-81158-50M	167A-8
	420B-9		410B-30		583A-7	67257-88L00	544A-9		515B-1-2	99011-99J70-055	420A-10
		61820-99J01-YAY	410A-3	67130-99J01	513A-1	67257-99E10	450A-29	67320-93J20	515A-1-3		420B-10
			410B-3	67200-88L00	544A-1	67258-99E00	450A-30		515B-1-3		
		61827-99J00	410A-30		545A-1	67259-87D00	450A-31	67320-93J30	515A-1-4		
		61831-99J00-YAY	410A-12	67200-94J20	450A-1	67261-88L00	544A-3		515B-1-4		
			410B-12	67211-88L00	544A-17	67261-88L10	544A-2	67320-93J40	515A-1-5		
		61851-93E10	410A-10	67212-88L00	544A-7	67261-99E10	450A-32		515B-1-5		
			410B-10	67212-95600	450A-13	67264-88L00	544A-18	67320-93J50	515A-1-6	00000	
		63111-89L01-YAY	444A-1	67214-92E00	450A-14	67264-88L10	544A-19		515B-1-6		
61112-99J00	410A-5	63114-99J01	444A-21	67220-95630	450A-15	67264-95600	450A-34	67320-93J60	515A-1-7	01550-05127	303A-5
	410B-5	63115-99J00	444A-3	67221-92E00	545A-8	67267-93J00	450A-35		515B-1-7		303B-3
61124-99J10	410B-28	63115-99J10	444A-2	67222-92E00	545A-2	67269-92E00	545A-29	67320-93J70	515A-1-8	01550-0612A	111A-21
	513A-22	63116-99J00	444A-4	67223-92E00	545A-3	67271-88L10	544A-16		515B-1-8	01550-0612C	113A-6
61124-99J21	410A-28	63121-99J00-YAY	444A-5	67223-99E10	450A-16	67272-88L00	545A-6	67320-93J80	515A-1-9		120A-15
61134-99JL0	410A-6	63122-99J00	444A-22	67224-92E00	545A-9	67273-88L00	544A-24		515B-1-9		146A-15
	410B-6	63131-99J11-YAY	444A-23	67226-92E00	545A-15		545A-47	67340-99J00	454A-4		175A-11
61151-99J00	410A-29	63133-89L00	444A-24	67226-92E10	545A-16		450A-36		513A-26	01550-06167	301A-22
	410B-29	63210-89L11	444A-6	67227-92E00	545A-24	67273-95600	544A-15	67467-89J01	454A-1		513A-27
61155-94500	410A-2	63215-93110	444A-27	67228-92E00	545A-18	67274-88L00	545A-42		513A-23		561A-9
	410B-2	63220-94J00	444A-7	67229-95600	450A-17	67275-95600	450A-37	67500-88L00	544A-20	01550-0616C	126A-10
61157-99J00	410A-7	63225-93200	444A-9	67230-88L00	545A-20		544A-14	67701-99J02	442A-2		166A-13
	410B-7	63225-98601	444A-8	67231-88L00	545A-32	67281-88L00	544A-10	67721-93E10	442A-3		166B-8
61400-99J01-YAY	420A-1	63240-94J10	444A-10	67232-88L00	545A-33	67282-94L00	450A-38	67725-96J00	442A-4		167A-14
	420B-1	63241-986B0	444A-11	67232-95600	450A-18	67284-94L00	450A-39	67726-99E00	442A-5		206A-8
61412-99J00	410A-18	63244-94J00	444A-12	67233-92E00	545A-26	67286-92E00	545A-19	67728-99E00	442A-6		206A-13
	410B-18	63610-99J00	444A-14	67234-88L00	545A-22	67287-92E00	545A-46	68110-89L01	420A-11		206B-8
61433-99J00	420A-2	65000-89L10	432A-1	67235-92E00	545A-27	67288-92E00	545A-4		420B-11		454A-5
	420B-2	65000-95D01	583A-1	67236-92E00	545A-12	67288-92E20	544A-6	68111-88L00	544A-8	01550-0620C	111A-18
61435-89L10	420B-7	65520-95D01	583A-2	67237-92E01	545A-28	67288-92E60	544A-12	68111-99J00	420A-6		175A-10
61435-99J20	420A-7	65520-99100	432A-2	67238-87D00	450A-19	67291-92E00	545A-7		420B-6		206A-20
61443-97L00	420A-4	65561-95D00	432A-3	67238-88L00	545A-31	67291-92E10	545A-37	69711-93E10	167A-15	01550-06257	310A-2
	420B-4		583A-3	67239-92E00	545A-35	67292-94300	450A-40	69911-91J50	335A-20		310A-7
61453-97L00	420A-5	65700-87J16	583A-8	67239-92E10	545A-41		545A-5		335B-19		310B-2
	420B-5	65700-89L30	432A-8	67240-92E00	545A-17	67294-95600	450A-41				310B-7
61458-89L30	420A-8	65720-986L0	432A-13	67241-88L00	545A-34	67296-88D10	545A-13				553A-8
	420B-8	65740-95D01	432A-7	67241-99E10	450A-20		545A-30				561A-18
61472-97J00	167A-16		583A-4	67243-92E00	545A-38	67296-88L00	544A-5	70000		01550-0625C	111A-5
61494-99J01	120A-19	65750-87J11	432A-9	67243-95600	450A-21	67296-90J10	450A-42				146A-2
	120B-18		583A-9	67244-95600	450A-22	67296-92E20	545A-14				310A-12

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01550-0630C	310B-12		336B-26	09140-05005	166A-7
	120A-13		450A-48		544A-23
	120B-13	09100-08312	405A-6	09140-06020	450A-50
	166A-14	09100-10320	335A-7		545A-10
01550-06357	167A-10	09103-06237	432A-14	09140-10031	401A-17
	166A-15	09103-06267	120A-7	09140-14008	303A-7
	166B-9		120B-7		303B-5
	175A-4	09103-06276	128A-30	09141-12005	407A-18
01550-08207	162A-8		128B-24	09148-06008	444A-13
01550-0820C	111A-12		128C-37	09148-06017	410A-16
01550-08257	301A-23		128D-31		410B-16
01550-08307	561A-10	09103-06281	111A-11	09159-08059	336A-36
	120A-14		407A-7		336B-10
	120B-14	09108-06141	160A-14		513A-13
	162A-3	09108-08286	336B-9	09159-10050	335A-8
01560-06457	126A-3		513A-12	09159-14032	128A-36
01560-08557	113A-2	09111-10067	336A-39		128C-43
02112-06127	206A-6		336B-29		334A-6
	206B-6	09116-06223	410A-26		561A-29
02112-06307	303A-12		410B-26	09159-22006	335B-8
02142-0616C	410A-17	09116-06225	336A-34	09160-05024	545A-45
	410A-31	09116-06227	407A-14	09160-05029	206B-16
	410B-17	09116-06229	220A-24		410A-20
	160A-12		336A-35		410B-20
03241-0625A	553A-20	09116-06230	410A-13		513A-9
03542-05169	410A-11		410B-13		544A-22
	410B-11	09116-06234	206A-21	09160-06046	166A-8
	420A-3	09116-08137	401A-16		166A-9
	420B-3	09116-08151	401A-3		166B-6
03542-06129	167A-12		405A-7		206A-22
	111A-15		407A-5	09160-06055	454A-2
04211-09109	113A-3		444A-15		513A-24
04211-09149	120A-12	09116-08154	405A-17	09160-06082	160A-15
	120B-12	09116-08155	444A-25		206A-2
04221-05109	126A-4	09125-05042	444A-26		206B-2
	220A-2		545A-21		210A-8
08110-60020	407A-11	09125-05135	544A-21		335A-11
08310-00067	410A-27	09125-06035	303A-2		335B-10
	410B-27		303B-2		336A-16
08316-10087	301A-24		561A-15		336B-20
	561A-11	09126-05003	450A-49	09160-06084	310A-4
08341-31039	120A-9	09126-06006	407A-24		310B-4
	120A-10		545A-25	09160-06085	432A-15
	120B-9	09126-06026	444A-16	09160-06104	450A-51
	120B-10	09136-05041	444A-17	09160-06168	206A-23
09100-06177	303A-9	09136-06169	410A-4	09160-06171	120A-8
	303B-7		410B-4		120B-8
	335A-10	09137-04004	334A-10	09160-08082	336A-21
	335B-9		334B-8		336B-11
09100-08232	336A-22		561A-28		336B-25

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	405A-8	09181-20246	220A-5-6		121B-16
	513A-14	09181-20248	220A-5-7	09289-06L02	210A-11
09160-10082	335A-9	09181-20251	220A-5-1	09289-17L02	407A-13
09160-12066	407A-19	09181-25160	220A-12-1	09306-10023	335A-15
09160-15057	303A-8	09181-25162	220A-12-2	09306-22006	335B-14
	303B-6	09181-25164	220A-12-3	09308-08011	120A-18
09160-17024	220A-11-1	09181-25181	220A-12-7		120B-17
	220A-11-3	09200-05014	336A-17	09320-09016	310A-6
09160-17026	220A-11-5		336B-21		310B-6
09160-17027	220A-11-7	09200-06061	336A-15	09320-09039	410A-15
09160-17028	220A-11-9		336B-19		410B-15
09160-17039	220A-11-2	09202-04008	160A-17	09320-10501	128A-37
09160-17040	220A-11-4	09202-04025	220A-16		128C-44
09160-17041	220A-11-6	09202-06023	401A-4	09380-15001	220A-3
09160-17042	220A-11-8		405A-9	09381-14001	116A-4
09160-20027	220A-4		407A-4	09381-14004	206A-4
09160-20042	220A-5-2	09204-01002	206B-15		206B-4
09160-20043	220A-5-3		336A-12	09383-04002	206A-12
09160-20044	220A-5-4		336B-16		206B-12
09160-21009	220A-6		513A-8	09385-04003	206B-17
09160-25040	220A-12-4	09204-02004	407A-20		410A-25
09160-25041	220A-12-5	09205-02004	210A-4		410B-25
09160-25042	220A-12-6	09205-06021	335A-6		513A-10
09160-27012	336A-5		335B-6	09385-06012	454A-3
	336A-41	09248-08001	407A-9		513A-25
	336B-5	09248-12009	405A-11	09401-08413	410A-8
	336B-30	09248-22002	111A-7		410B-8
09161-04012	410A-24	09260-10006	206A-3	09401-09404	146A-7
	410B-24		206B-3	09401-11422	146A-8
09163-06001	444A-18	09261-03009	175A-3	09401-12413	162A-5
09164-13008	121A-9	09262-25003	407A-3		401A-7
	121B-9	09263-17048	407A-2	09401-13424	401A-19
09164-14008	206A-24	09263-20024	220A-7	09403-12316	410A-9
09168-12017	405A-10	09280-06012	210A-9		410B-9
09169-06062	310A-5	09280-09012	210A-10	09403-12406	113A-5
	310B-5	09280-10016	175A-14		146A-14
09169-06075	410A-14	09280-13004	175A-7	09403-13311	322A-8
	410B-14	09280-17003	111A-14		322B-6
09169-06082	126A-9	09280-22019	111A-9	09407-10404	553A-6
	166A-10	09280-26005	146A-3		553A-17
09180-06186	166B-7	09280-54001	175A-8	09407-14403	303A-11
	206A-25	09280-57002	407A-12		322A-2
09180-06230	166A-11	09282-12017	401A-5		322A-9
	126A-7	09282-13L01	220A-22		322B-7
09180-06357	335A-12	09282-27002	336A-6		513A-20
	335B-11		336B-6		553A-19
09180-06370	206A-26	09283-21009	121A-2		561A-33
09180-12158	166A-12		121B-2	09407-14407	303A-10
09181-15241	220A-13	09283-30075	116A-9		303B-8
09181-20244	220A-5-5	09289-05008	121A-16		310A-15

[illegible]

SUZUKI **DF8A/9.9A** PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material & Training Group, Service Material In-house Production Department
300 Takatsuka, Minami, Hamamatsu, Japan

Copyright © SUZUKI MOTOR CORPORATION 2017 All Rights Reserved

SUZUKI MOTOR CORPORATION