

SUZUKI

PARTS CATALOGUE

DF25A/30A

DF25A/AR

DF25AT/ATH

DF30A/AR

DF30AT/ATH/AQ



OUTBOARD MOTOR

P01/P40

2017-10

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF25A/30A production start 2017.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: with
LH(PORT)	: Left hand side	S, L	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 02504F-123456		
123456~	: From E. NO. 02504F-123456		

12 x 34 x 5.6..... Figures in the description column

| | | show the dimensions of parts.

ID OD T(or W, L)

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec.:

spec. code :	DF25A	: P1	DF25AR	: P1
	DF25AT	: P1	DF25ATH	: P1
	DF30A	: P40	DF30AR	: P1
	DF30AT	: P1	DF30ATH	: P1
	DF30AQH	: P1		

7. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE NO.
DF25A	P01	02504F	S, L	YAY	02504F-810001~
DF25AR	P01	02504F	S, L	YAY	02504F-810001~
DF25AT	P01	02504F	S, L	YAY, Y5S	02504F-810001~
DF25ATH	P01	02504F	S, L	YAY, Y5S	02504F-810001~
DF30A	P40	03003F	S, L	YAY, Y5S	03003F-810001~
DF30AR	P01	03003F	S, L	YAY	03003F-810001~
DF30AT	P01	03003F	S, L	YAY, Y5S	03003F-810001~
DF30ATH	P01	03003F	S, L	YAY, Y5S	03003F-810001~
DF30AQH	P01	03003F	S, L	YAY	03003F-810001~

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.111A

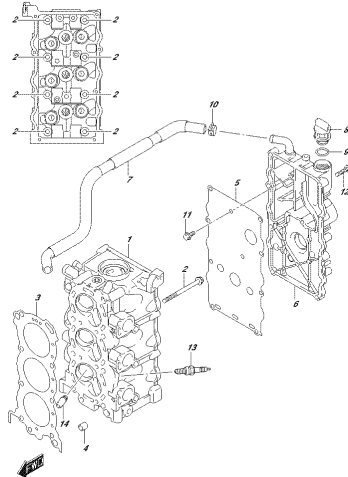


DC304_S&A_P&L_010_111A
CYLINDER HEAD

FIG.113A

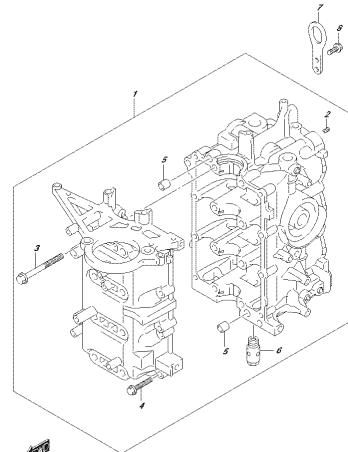


DC304_S&A_P&L_010_113A
CYLINDER BLOCK

FIG.116A

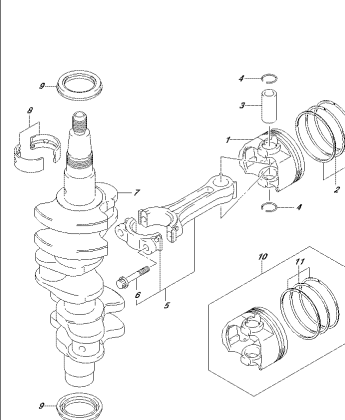


DC304_S&A_P&L_010_116A
CRANKSHAFT

FIG.120A

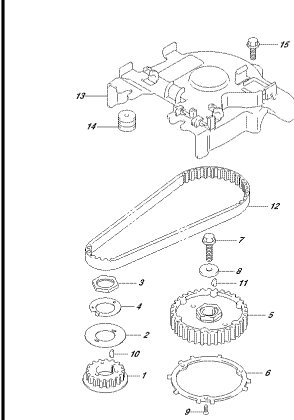


DC304_S&A_P&L_010_120A
TIMING BELT

FIG.121A

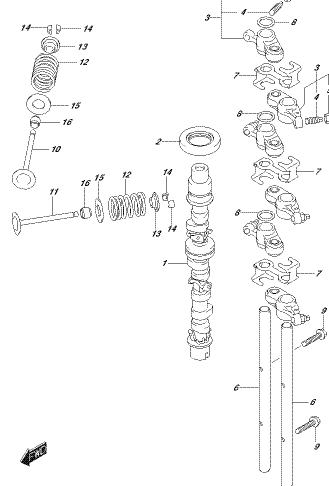


DC304_S&A_P&L_010_121A
CRANKSHAFT

FIG.122A

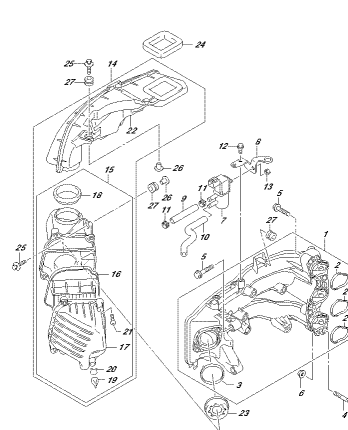


DC304_S&A_P&L_010_122A
PISTON AND CONNECTING ROD

FIG.122B

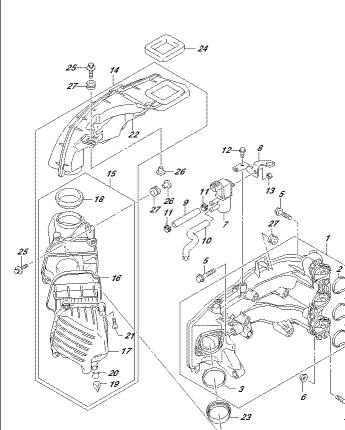

DC304_S&A_P&L_010_122B
PISTON AND CONNECTING ROD

FIG.139A

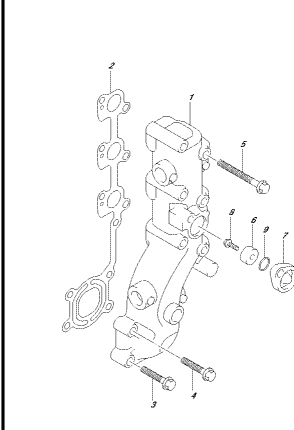

DC304_S&A_P&L_010_139A
PISTON AND CONNECTING ROD

FIG.144A

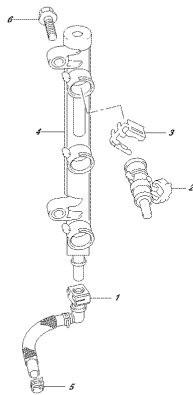


FIG.144A
FUEL INJECTOR

FIG.146A

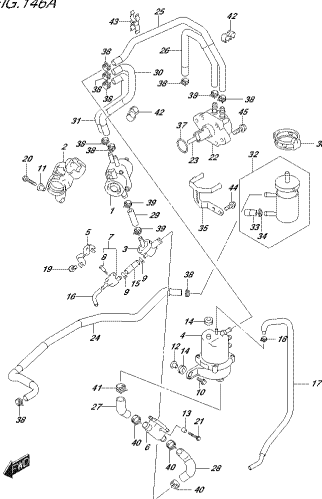


FIG.146A
FUEL INJECTOR

FIG.146B

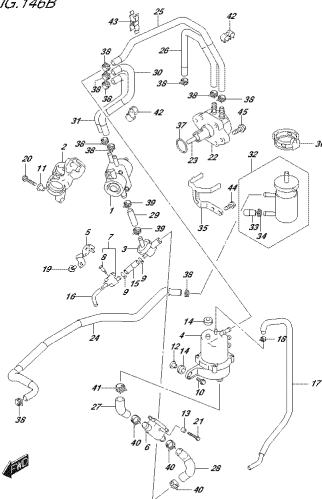


FIG.146B
FUEL INJECTOR

FIG.160A

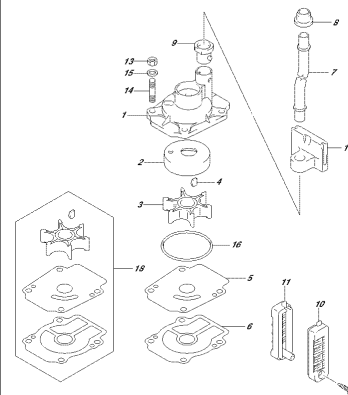


FIG.160A
FUEL INJECTOR

FIG.160B

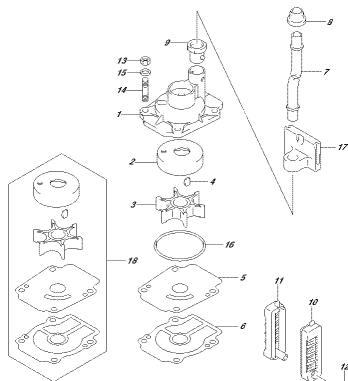


FIG.160B
FUEL INJECTOR

FIG.162A

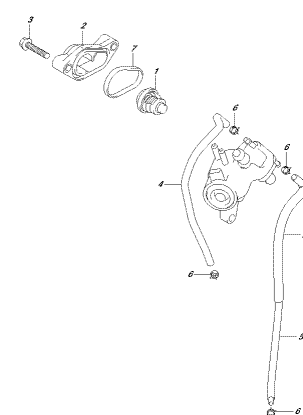


FIG.162A
THERMOSTAT

FIG.163A

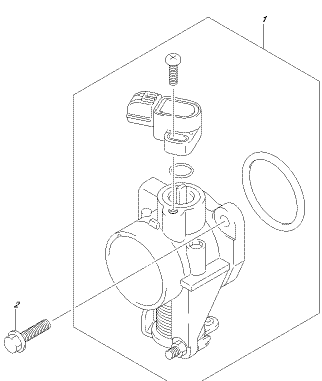


FIG.163A
THERMOSTAT

FIG.166A


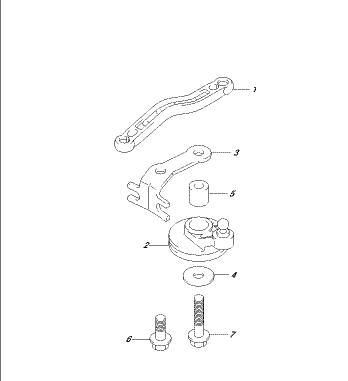



FIG.166A
THERMOSTAT

FIG.166B

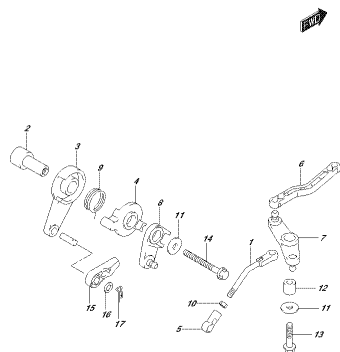


DC308L_S&L_PRL_010_166B
THROTTLE CONTROL

FIG.167A

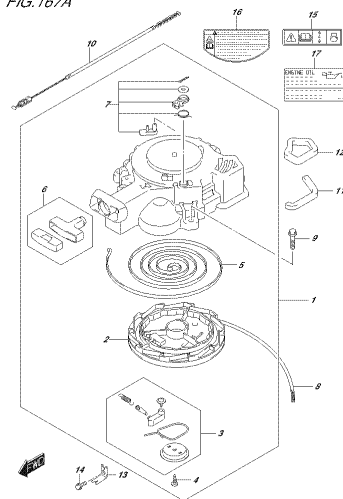


DC308L_S&L_PRL_010_167A
RECOIL STARTER

FIG.175A

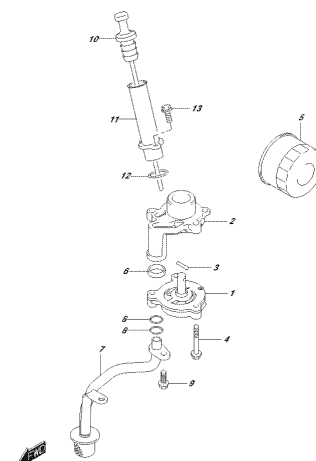


DC308L_S&L_PRL_010_175A
OIL PUMP

FIG.206A

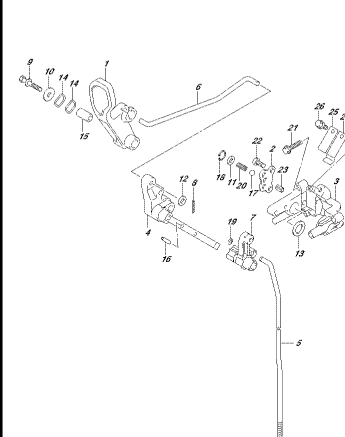


DC308L_S&L_PRL_010_206A
CLUTCH ROD

FIG.206B

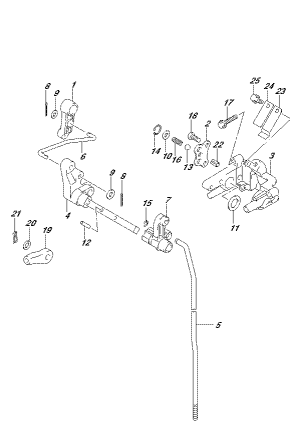


DC308L_S&L_PRL_010_206B
CLUTCH ROD

FIG.210A

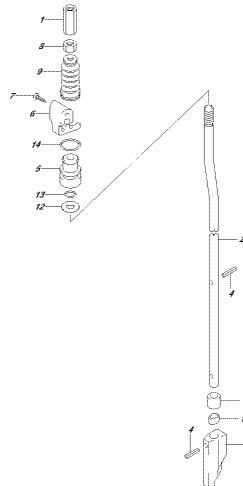


DC308L_S&L_PRL_010_210A
SHIFT ROD

FIG.220A

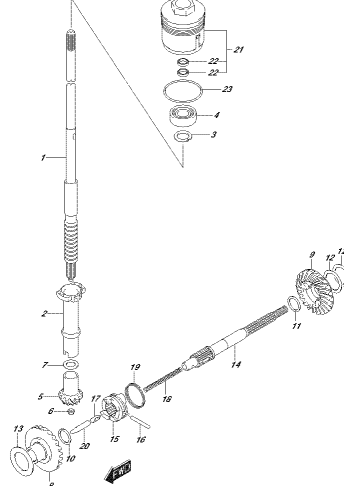


DC308L_S&L_PRL_010_220A
TRANSMISSION

FIG.301A

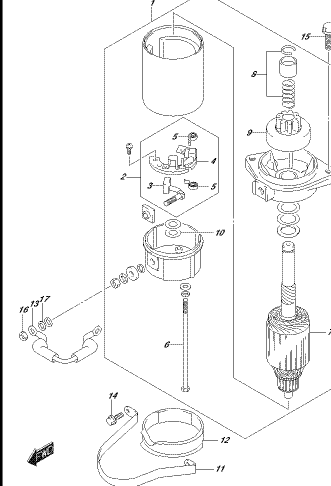


DC308L_S&L_PRL_010_301A
STARTING MOTOR

FIG.301B

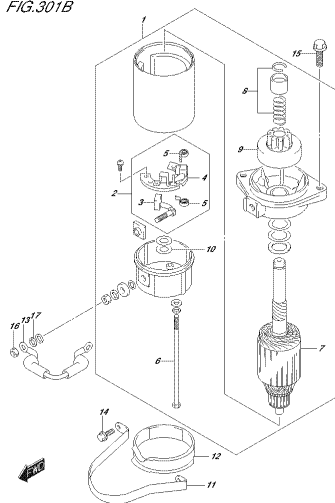


DC308A_S&A_PRL_610L_2019
RECTORREVISION.COM

FIG.301C

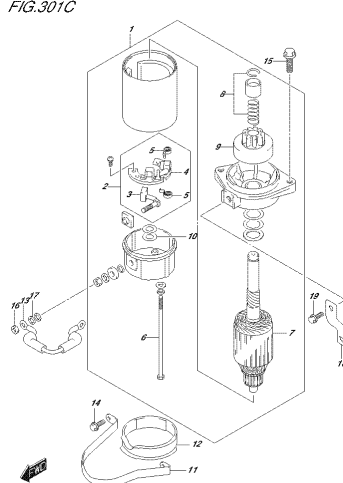


DC308A_S&A_PRL_610L_201C
RECTORREVISION.COM

FIG.303A

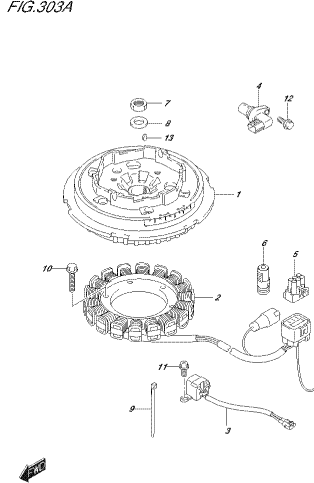


DC308A_S&A_PRL_610L_203A
MAGNETO

FIG.303B

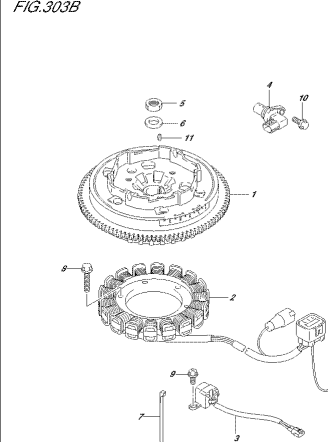


DC308A_S&A_PRL_610L_203B
MAGNETO

FIG.310A

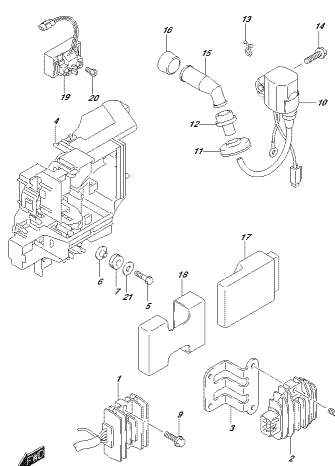


DC308A_S&A_PRL_610L_310A
RECTORREVISION.COM

FIG.310B

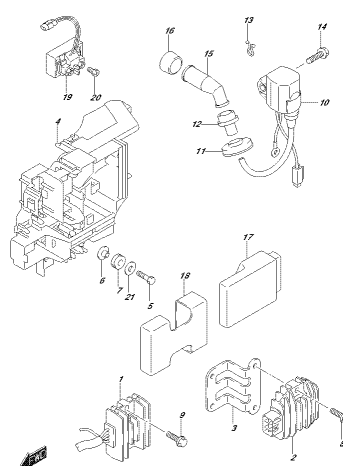


DC308A_S&A_PRL_610L_310B
RECTORREVISION.COM

FIG.310C

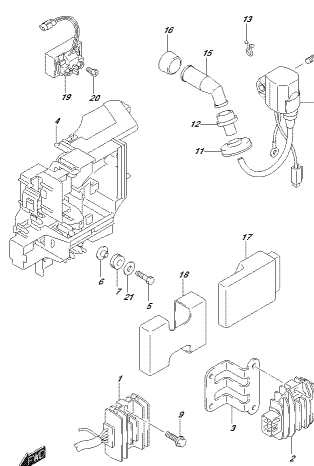


DC308A_S&A_PRL_610L_310C
RECTORREVISION.COM

FIG.310D

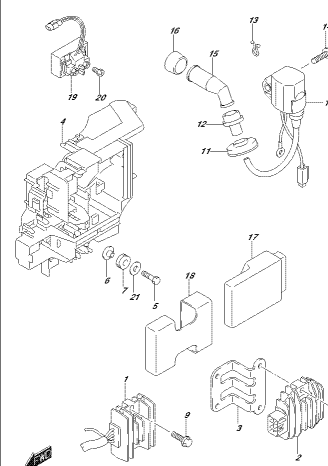


DC308A_S&A_PRL_610L_310D
RECTORREVISION.COM

FIG.310E

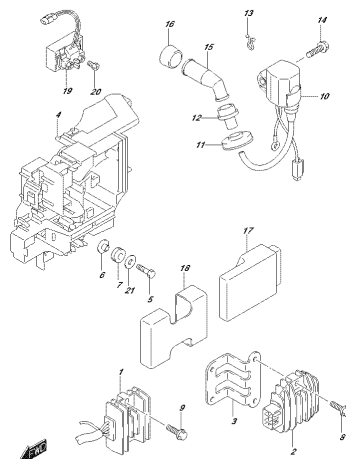


DC304_304_P01_010_010E
BREVET DÉPOSÉ

FIG.322A

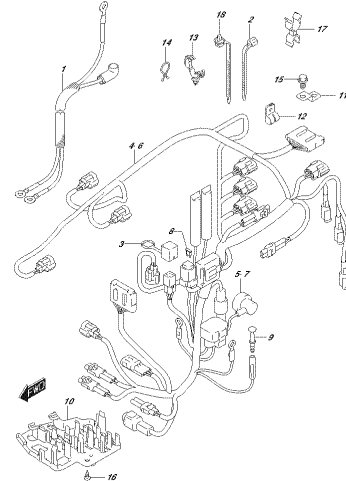


DC304_304_P01_010_020A
HARNESS

FIG.322B

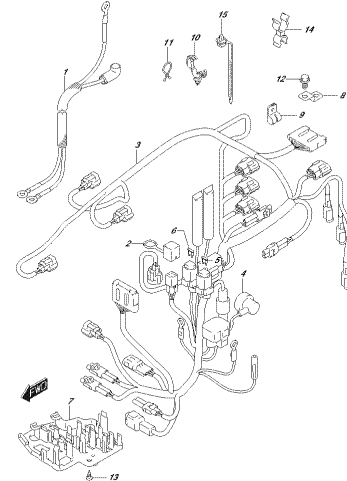


DC304_304_P01_010_020B
HARNESS

FIG.322C

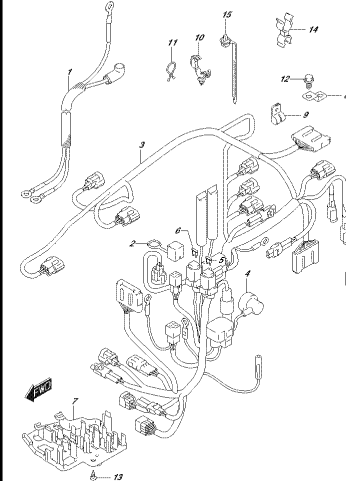


DC304_304_P01_010_020C
HARNESS

FIG.322D

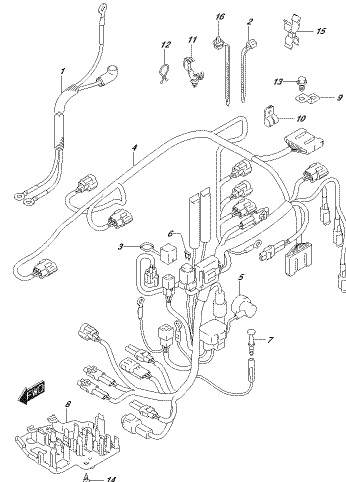


DC304_304_P01_010_020D
HARNESS

FIG.327A

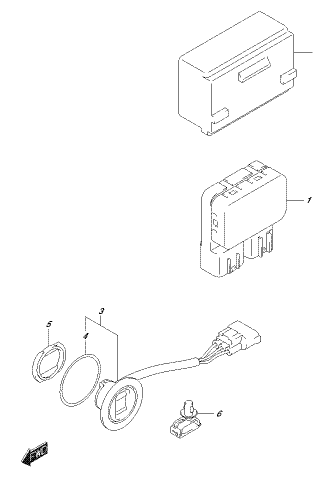


DC304_304_P01_010_027A
PIT SWITCH

FIG.327B

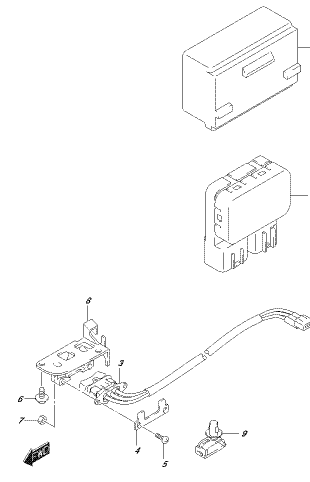


DC304_304_P01_010_027B
PIT SWITCH

FIG.334A

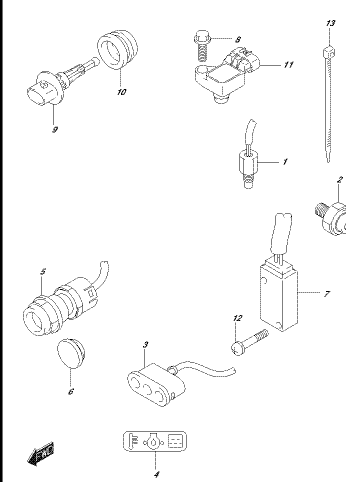


DC304_304_P01_010_034A
SEASON SWITCH

FIG.334B

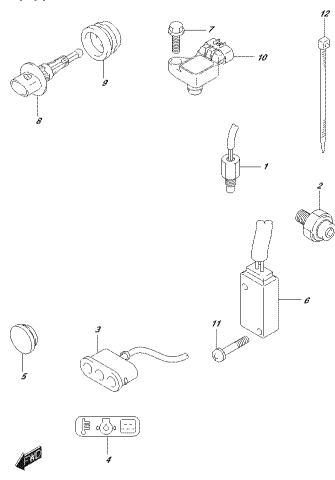


DC304_S&L_P&L_610_334B
©2000305050700

FIG.334C

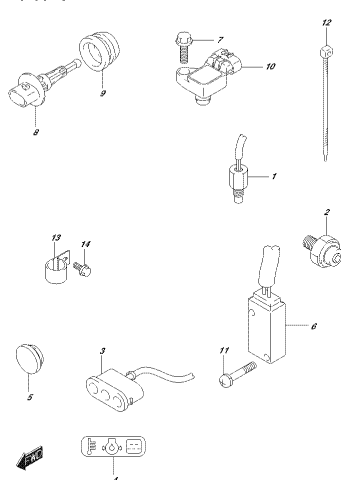


DC304_S&L_P&L_610_334C
©2000305050700

FIG.334D

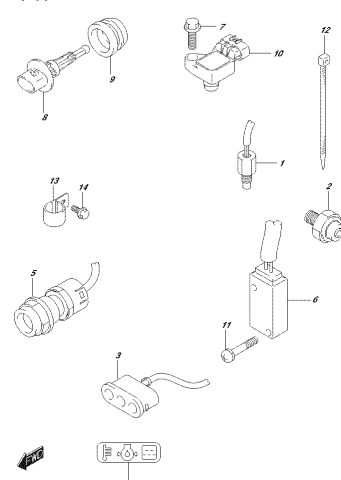


DC304_S&L_P&L_610_334D
©2000305050700

FIG.334E

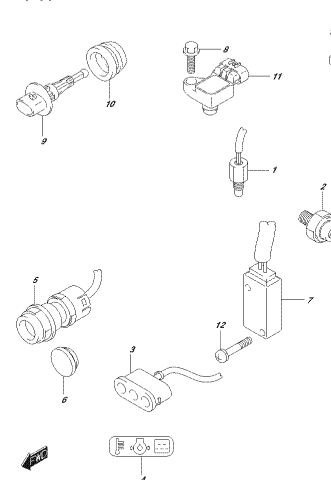


DC304_S&L_P&L_610_334E
©2000305050700

FIG.335A

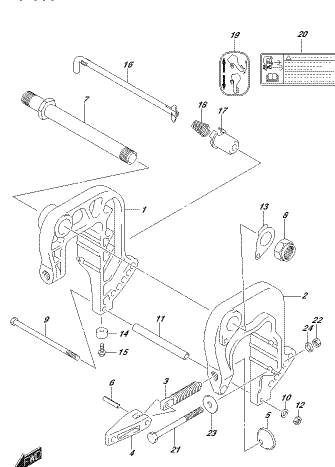


DC304_S&L_P&L_610_335A
CLAMP BRACKET

FIG.335B

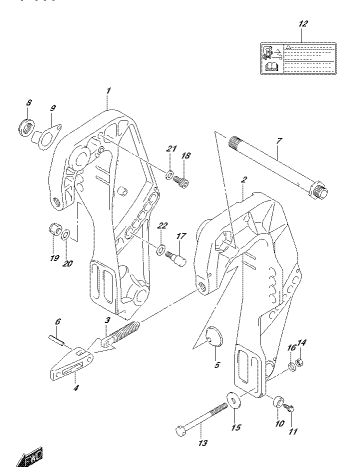


DC304_S&L_P&L_610_335B
CLAMP BRACKET

FIG.335C

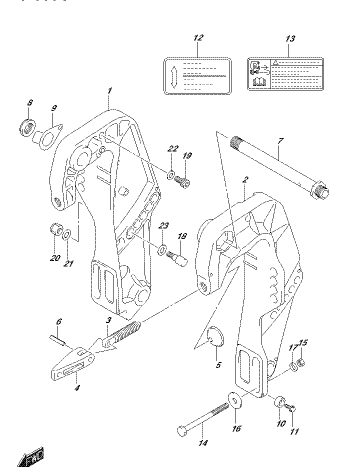


DC304_S&L_P&L_610_335C
CLAMP BRACKET

FIG.335D

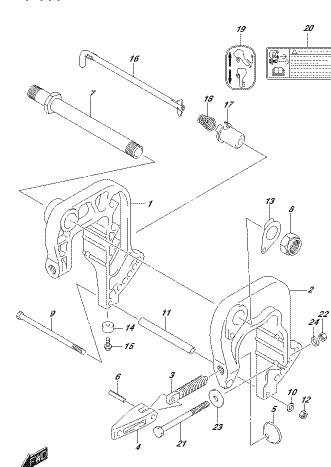


DC304_S&L_P&L_610_335D
CLAMP BRACKET

FIG.336A

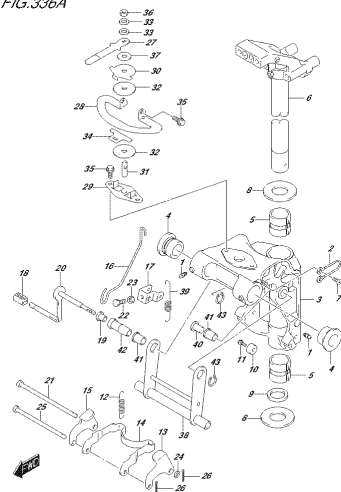


DK304_S&A_P01_010_0384
SHIMBEL BRACKET

FIG.336B

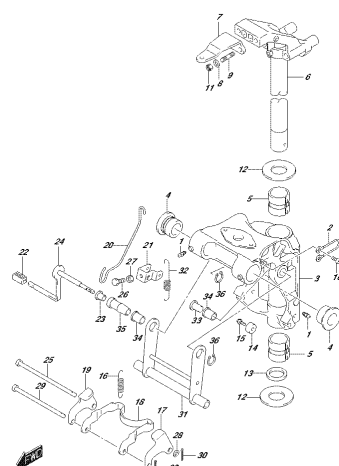


DK304_S&A_P01_010_0385
SHIMBEL BRACKET

FIG.336C

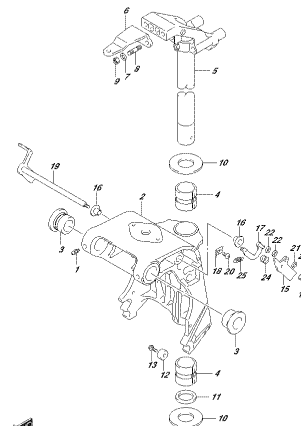


DK304_S&A_P01_010_0387
SHIMBEL BRACKET

FIG.336D

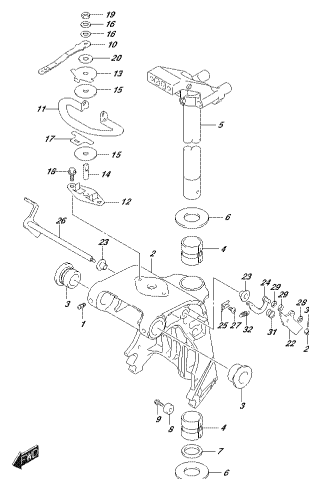


DK304_S&A_P01_010_0389
SHIMBEL BRACKET

FIG.336E

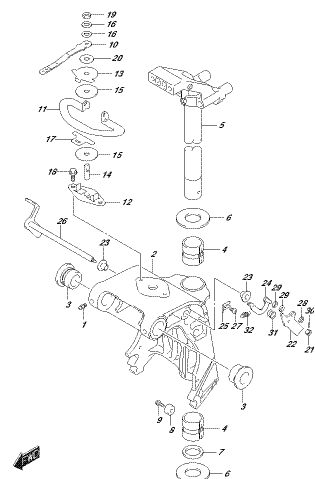


DK304_S&A_P01_010_0385
SHIMBEL BRACKET

FIG.336F

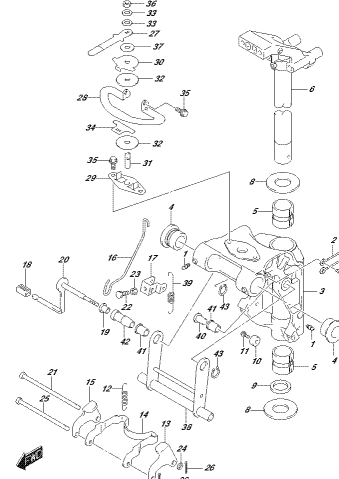


DK304_S&A_P01_010_0387
SHIMBEL BRACKET

FIG.338A

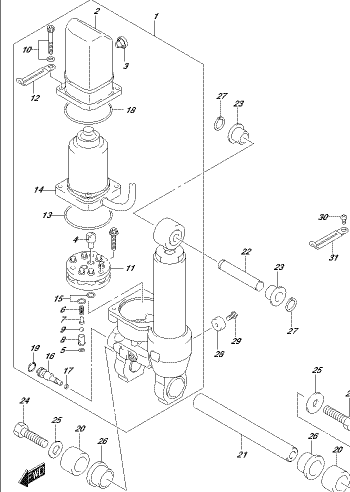


DK304_S&A_P01_010_0384
TILT CYLINDER

FIG.339A

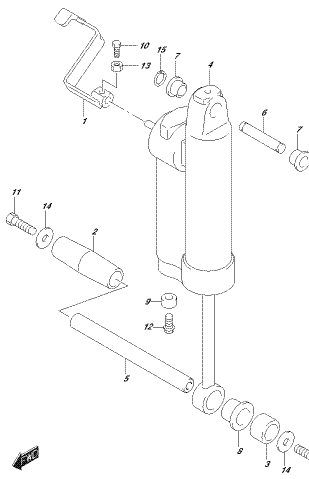


DK304_S&A_P01_010_0384
GAS CYLINDER

FIG.340A

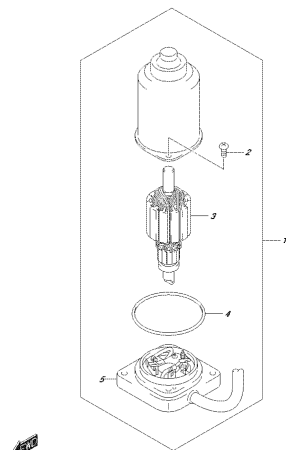


DF304_S&A_P01_010_4034
PTT 403202

FIG.401A

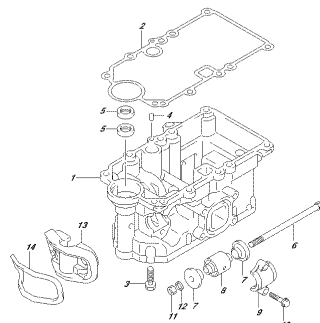


DF304_S&A_P01_010_4014
ENGINE 401002

FIG.405A

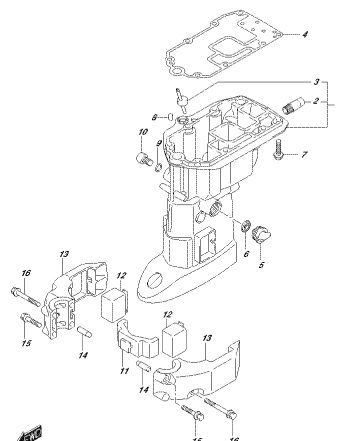


DF304_S&A_P01_010_4054
ORIG SHAF 403392

FIG.405B

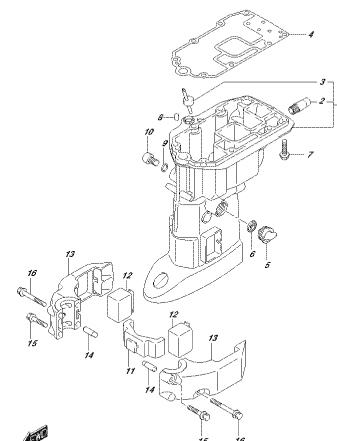


DF304_S&A_P01_010_405B
ORIG SHAF 403392

FIG.407A

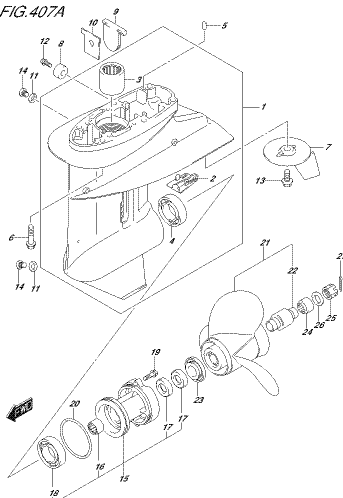


DF304_S&A_P01_010_4074
GEAR CASE

FIG.407B

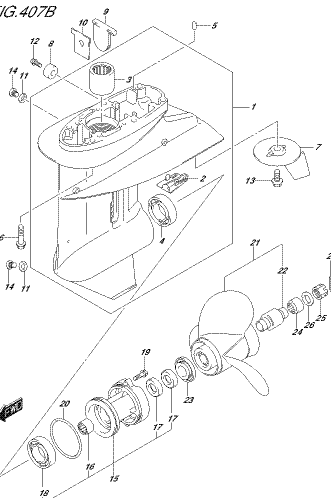


DF304_S&A_P01_010_407B
GEAR CASE

FIG.410A

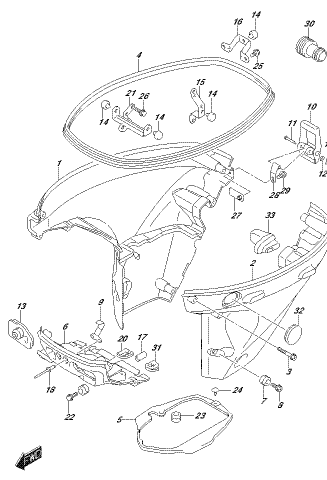


DF304_S&A_P01_010_4104
SEE COVER

FIG.410B

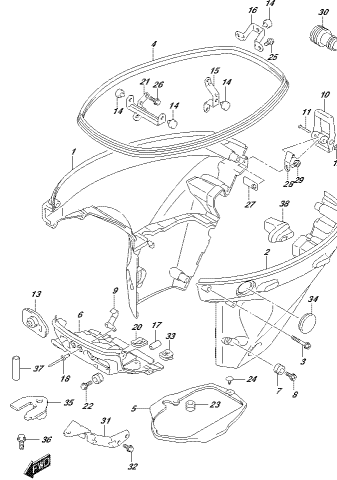


DF304_S&A_P01_010_410B
SEE COVER

FIG.410C

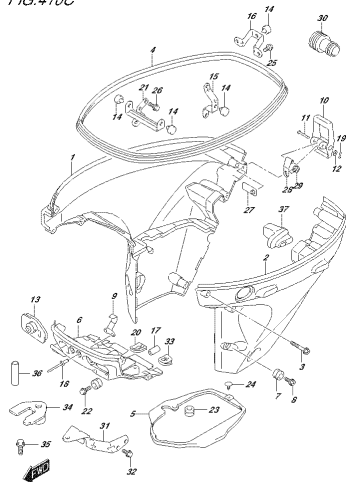


DF300A_S&A_P&L_010_410C
SEE CODES

FIG.410D

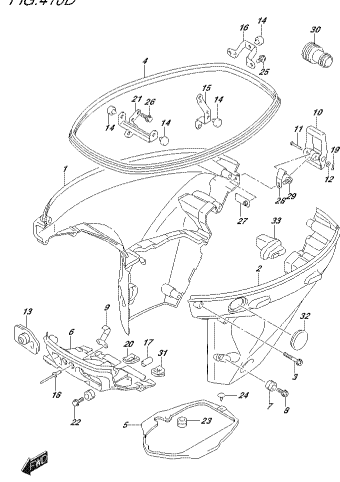


DF300A_S&A_P&L_010_410D
SEE CODES

FIG.410E

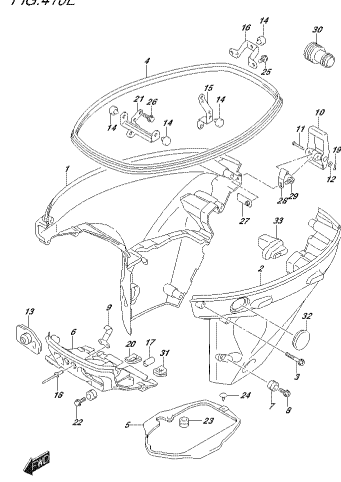


DF300A_S&A_P&L_010_410E
SEE CODES

FIG.420A

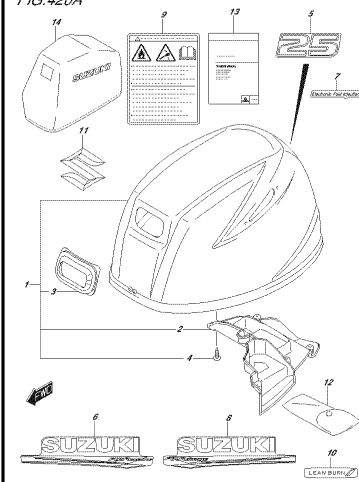


DF300A_S&A_P&L_010_420A
ENGINE COVER

FIG.420B

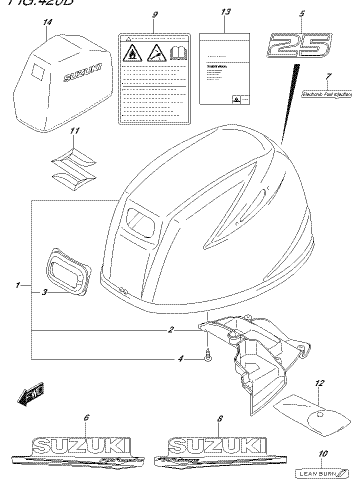


DF300A_S&A_P&L_010_420B
ENGINE COVER

FIG.420C

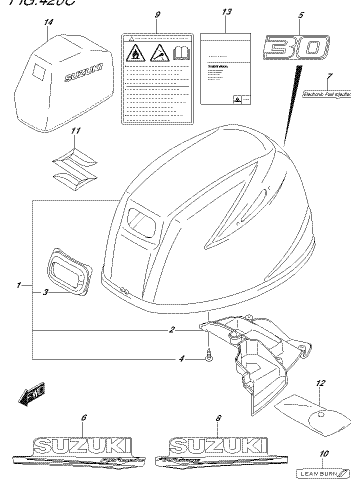


DF300A_S&A_P&L_010_420C
ENGINE COVER

FIG.420D

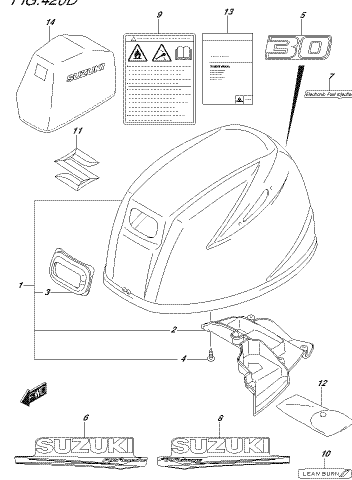


DF300A_S&A_P&L_010_420D
ENGINE COVER

FIG.420E

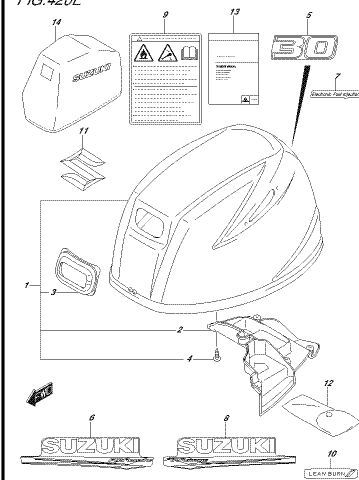


DF300A_S&A_P&L_010_420E
ENGINE COVER

FIG.432A

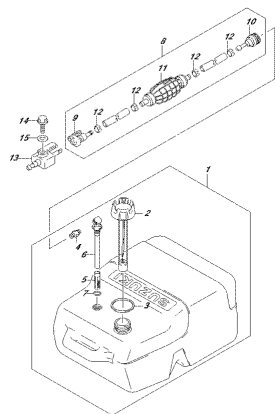


DK304_S&A_P01_010_4034
FILE: 74WV

FIG.442A

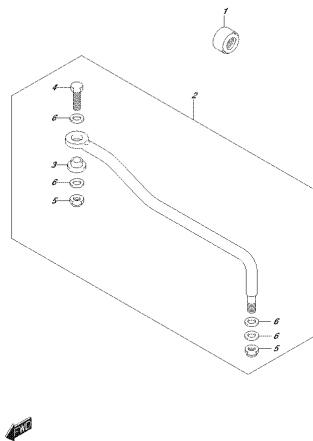


DK304_S&A_P01_010_4034
ORAGLUN

FIG.444A

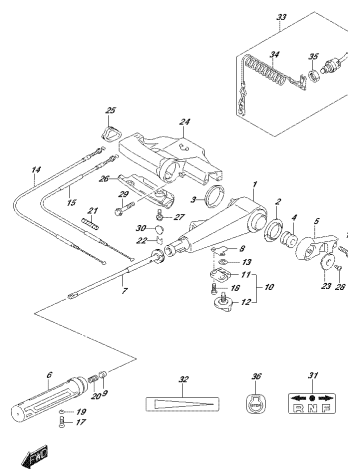


DK304_S&A_P01_010_4444
FILE:G7H40LE

FIG.444B

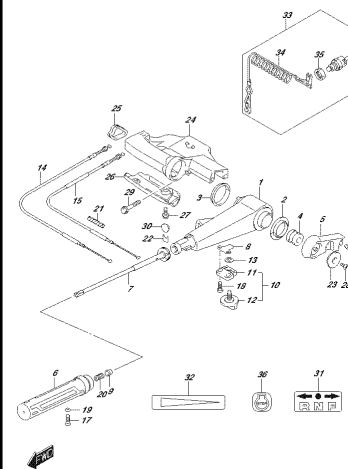


DK304_S&A_P01_010_444B
FILE:G7H40LE

FIG.450A

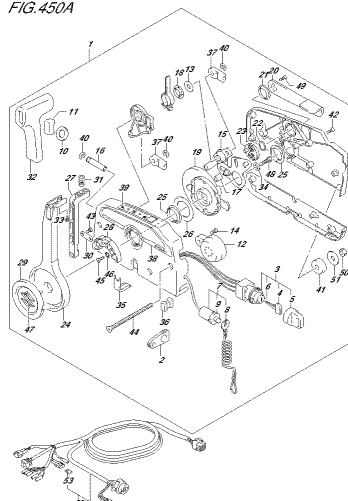


DK304_S&A_P01_010_4034
REMOTE CONTROL

FIG.450B

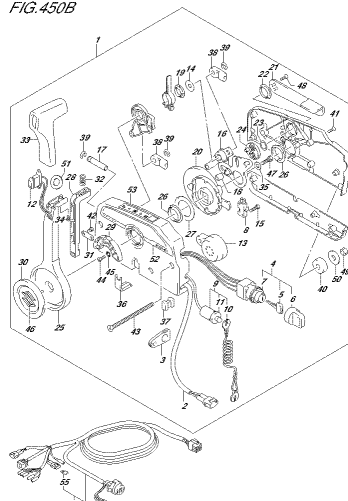


DK304_S&A_P01_010_403B
REMOTE CONTROL

FIG.501A

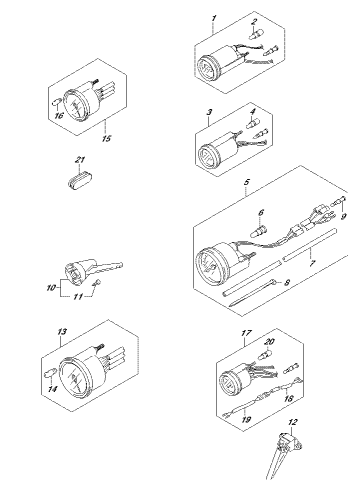


DK304_S&A_P01_010_501A
OPT:14677H

FIG.501B

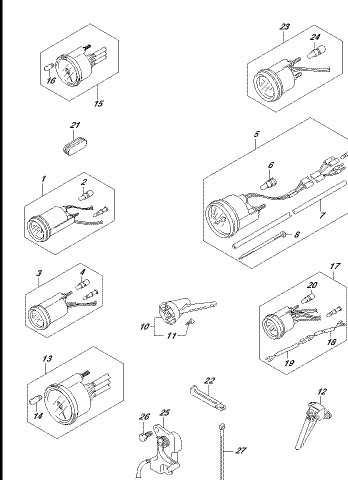

DK304_S&A_P01_010_501B
OPT:14677H


FIG.508A

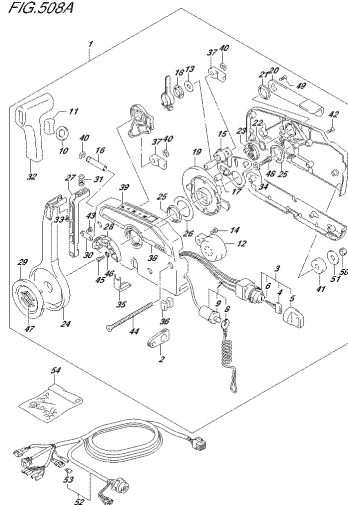

DC50A, PA1, 510, 510A

OPT.REMOTE CONTROL


FIG.508B

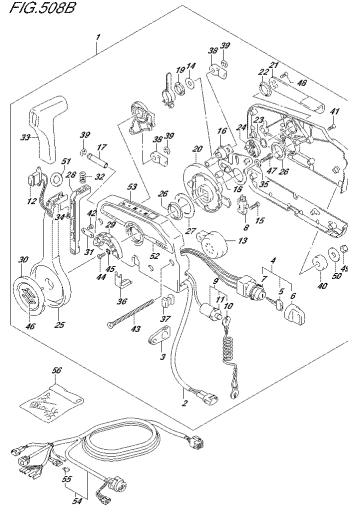

DC50A, PA1, 510, 510B

OPT.REMOTE CONTROL


FIG.513A

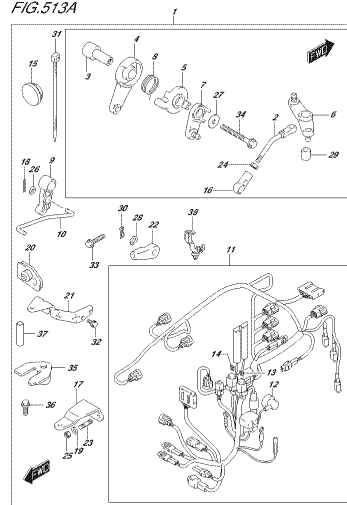

DC50A, PA1, 510, 511A

OPT.REMOTE CONTROL PARTS


FIG.513B

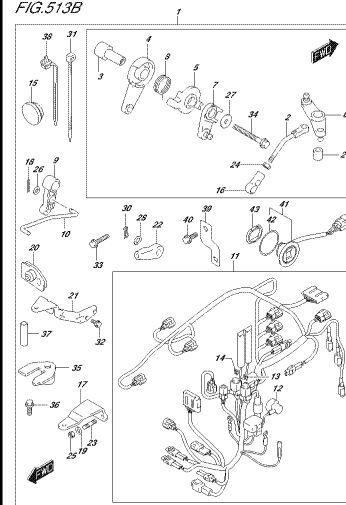

DC50A, PA1, 510, 511B

OPT.REMOTE CONTROL PARTS


FIG.515A

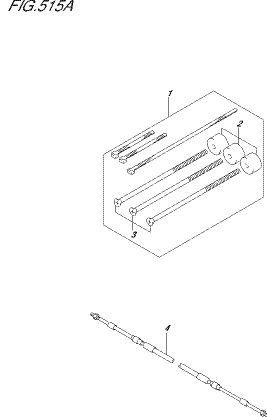

DC50A, PA1, 510, 511A

OPT.FABRICATED CABLE


FIG.517A

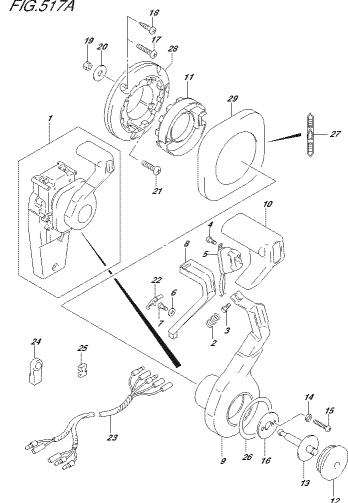

DC50A, PA1, 510, 517A

OPT.CUSTOMER REMOCON (1)


FIG.518A

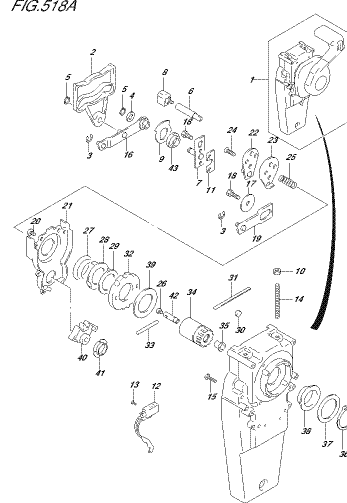

DC50A, PA1, 510, 518A

OPT.CUSTOMER REMOCON (2)


FIG.519A

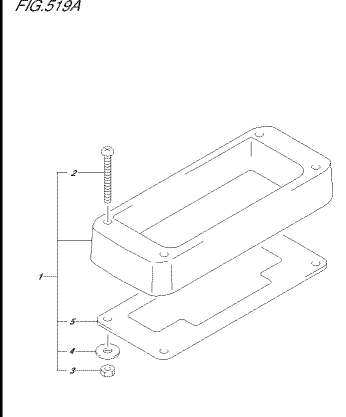

DC50A, PA1, 510, 519A


OPT.REMOTE CONTROL SPACER

FIG.521A

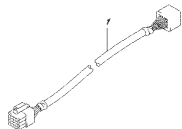


DC30A_S&A_P01_010_0014
OPT:WIRELESS

FIG.530A

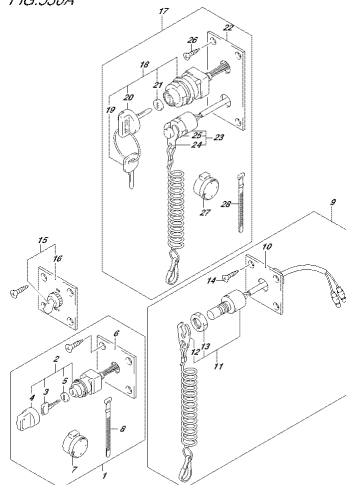


DC30A_S&A_P01_010_0004
OPT:2000000

FIG.544A

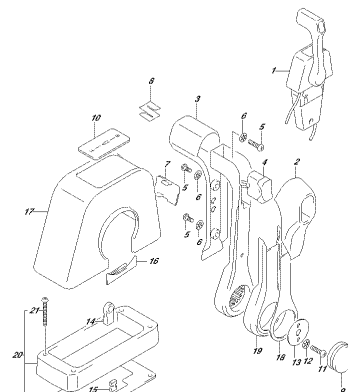


DC30A_S&A_P01_010_0014
OPT:REMOTE CONTROL ANDY SINGLE(1)

FIG.545A

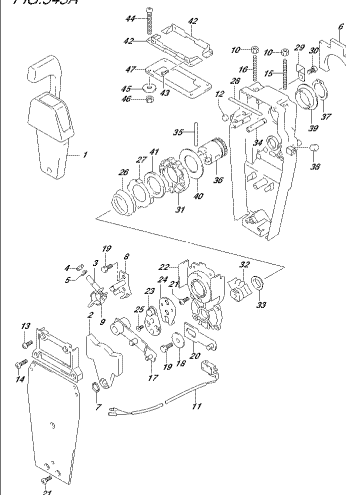


DC30A_S&A_P01_010_0014
OPT:REMOTE CONTROL ANDY SINGLE(2)

FIG.553A

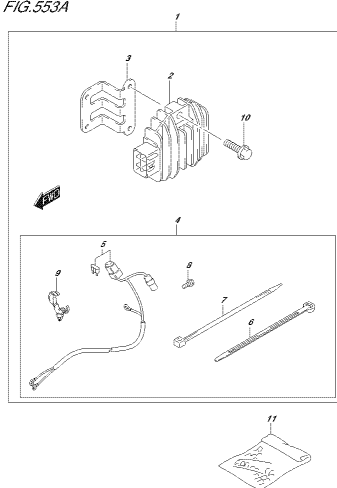


DC30A_S&A_P01_010_0004
OPT:ELECTRICAL (ANALOG: STARTER)

FIG.561A

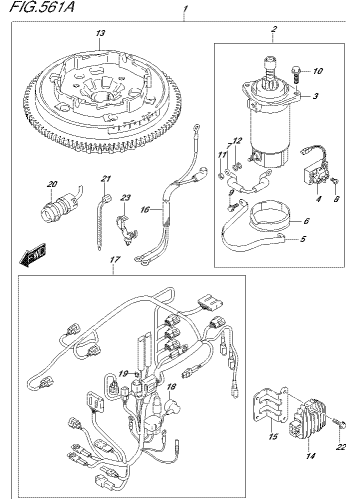


DC30A_S&A_P01_010_0014
OPT:STARTING INCH(ANALOG: STARTER)

FIG.575A

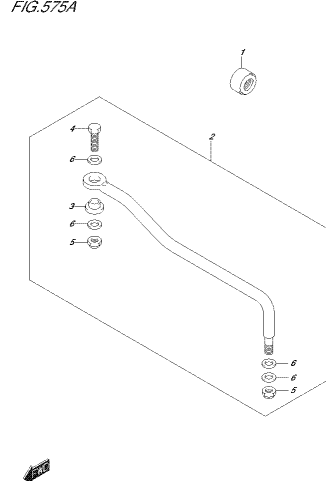

DC30A_S&A_P01_010_0004
OPT:3000000

FIG.600A

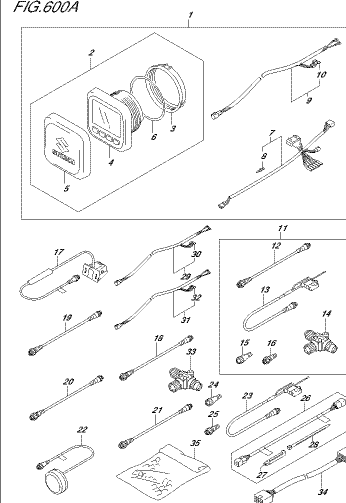

DC30A_S&A_P01_010_0004
OPT:ALL TV FUNCTION GAUGE

FIG.111A

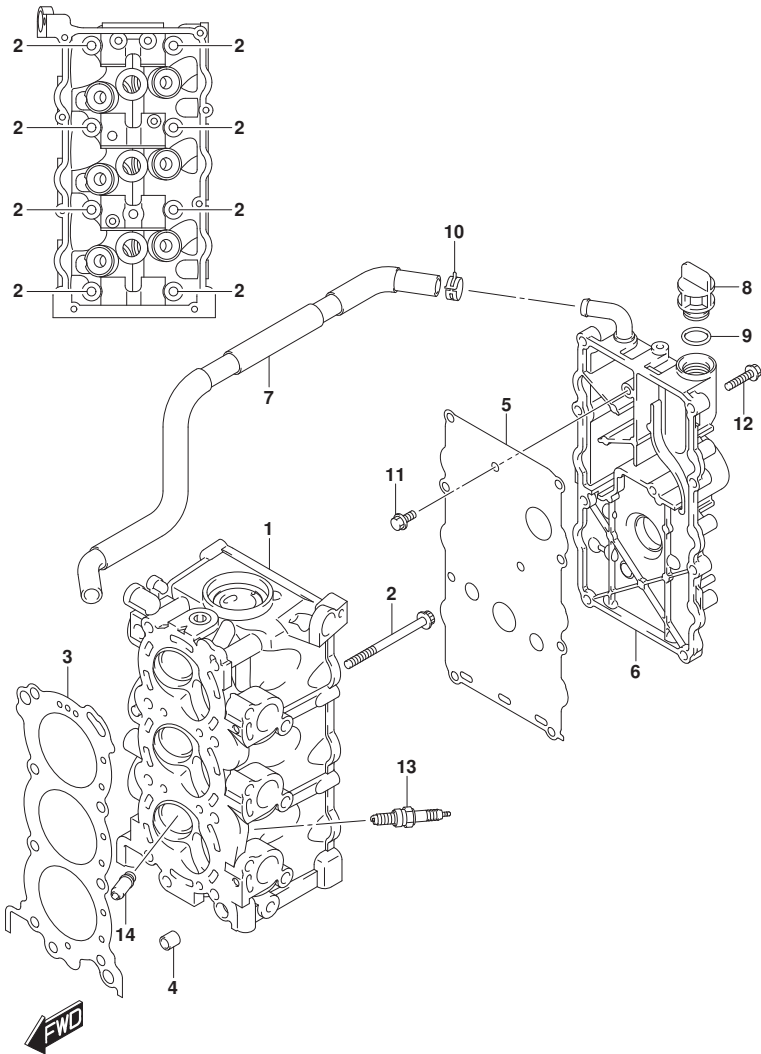


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11110-94L00	HEAD, CYLINDER	1	
2	11119-94L00	BOLT, CYLINDER HEAD NO.1	8	
3	11141-94L00	GASKET, CYLINDER HEAD	1	
4	04211-11129	PIN	2	
5	11162-94L00	GASKET, CYLINDER HEAD COVER	1	
6	11170-94L00	COVER, CYLINDER HEAD	1	
7	11174-94L00	HOSE, BREATHER	1	
8	11382-93E00	CAP, OIL FILLER	1	
9	09280-17003	O RING (D:3.1,ID:16.8)	1	
10	09401-15414	CLIP	1	
11	01547-0612A	BOLT	2	
12	01550-0625C	BOLT	8	
13	09482-00L04	SPARK PLUG (CPR6EA-9)	3	NGK CPR6EA-9
14	11115-30D70	GUIDE, VALVE (OS:0.3)	6	OPT

FIG.113A

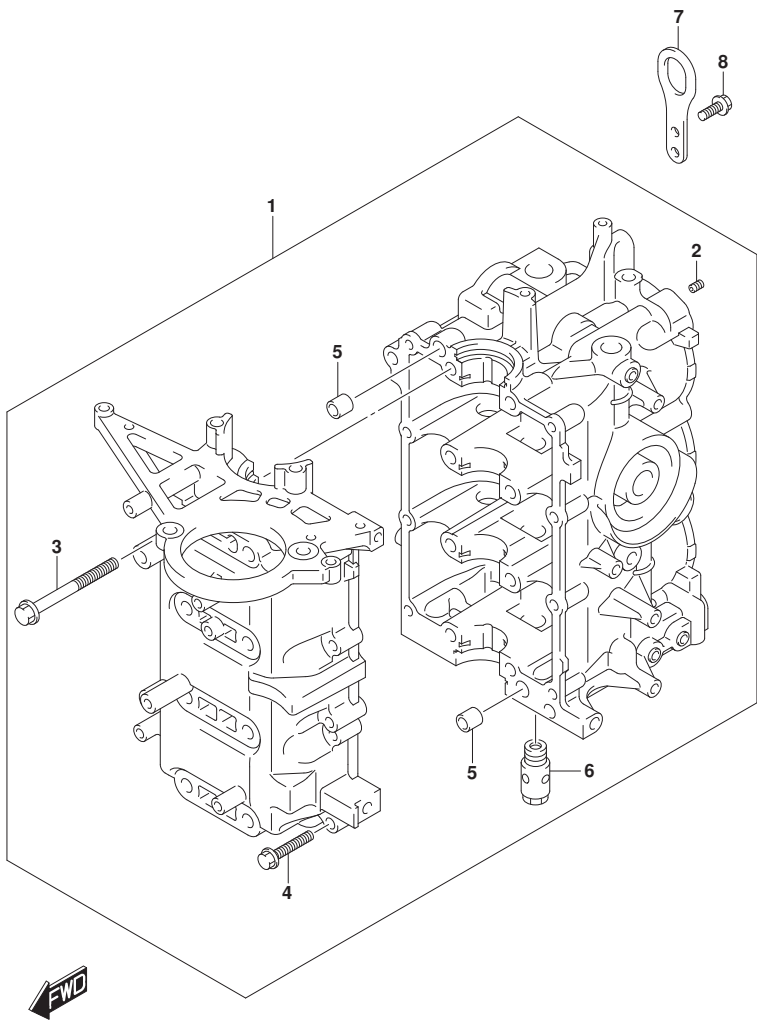


FIG.113A (1-B-3) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11301-94L00	BLOCK SET, CYLINDER	1	
2	11112-84400	.PLUG, OIL VENTURI	1	
3	09119-08L01	.BOLT (8X77)	8	
4	01550-06357	.BOLT	8	
5	04211-11129	.PIN	2	
6	16440-11D00	.REGULATOR, ENGINE OIL (6.5K)	1	
7	11291-94L00	HOOK, ENGINE	1	
8	01550-0820C	BOLT	2	

FIG.116A

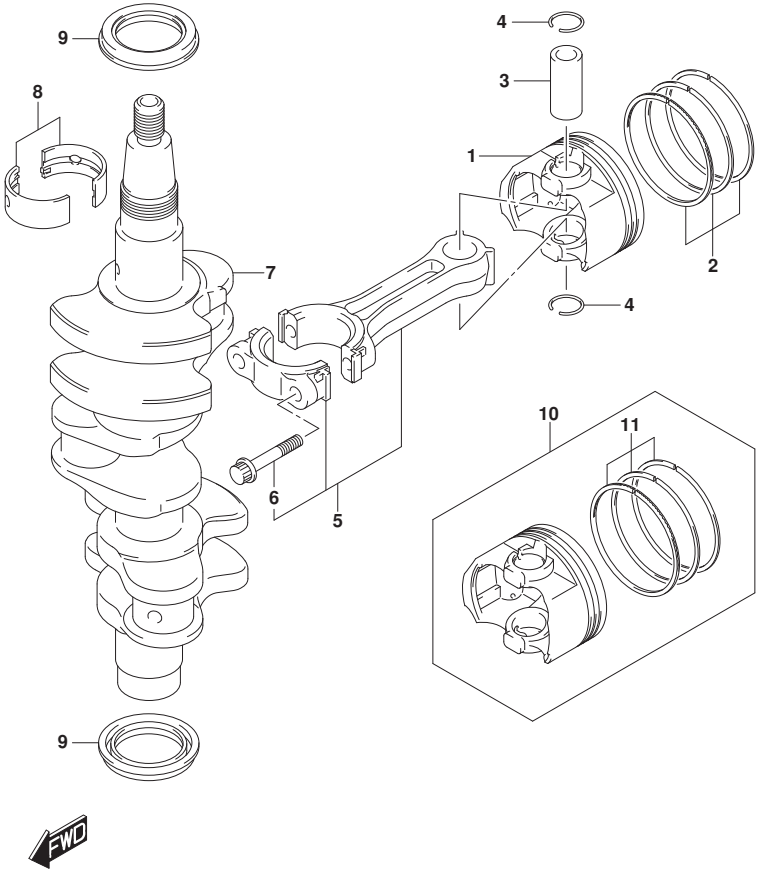


FIG.116A (1-B-4) CRANKSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-89L00-0B0	PISTON (NONE)	3	
2	12140-89L00	RING SET, PISTON	3	
3	12151-89L00	PIN, PISTON	3	
4	09381-16001	SNAP RING	6	
5	12160-89L11	CONNROD ASSY	3	
6	12163-89L02	.BOLT, CONNECTING ROD	6	
7	12220-94L00	CRANKSHAFT	1	
8	12341-89L10	BEARING, CRANKSHAFT	8	
9	09283-32048	OIL SEAL (32X44X6.5)	2	
10	12100-89L00-050	PISTON SET (OS:0.50)	3	OPT
11	12140-89L00-050	.RING SET, PISTON (OS:0.50)	3	OPT

FIG.120A

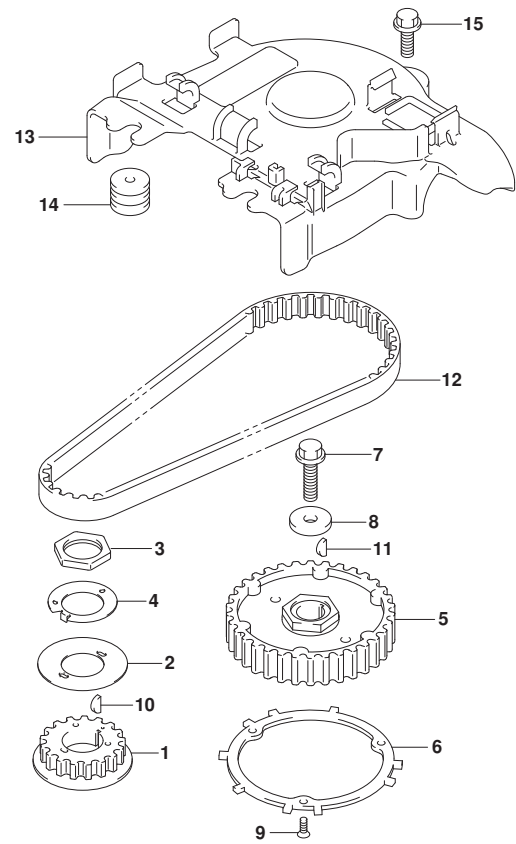


FIG.120A (1-B-5) TIMING BELT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12631-94L00	PULLEY, CRANKSHAFT	1	
2	12635-89L00	GUIDE, TIMING BELT	1	
3	12637-89L00	NUT, TIMING PULLEY	1	
4	12638-89L00	WASHER, PULLEY NUT LOCK	1	
5	12741-94L00	PULLEY, CAMSHAFT	1	
6	12744-94L00	PLATE, SENSING	1	
7	09103-08458	BOLT (8X30)	1	
8	09160-09020	WASHER (9X26X4)	1	
9	02122-04127	SCREW	3	
10	08341-31039	KEY	1	
11	08341-31039	KEY	1	
12	12761-94L00	BELT, TIMING	1	
13	12764-94L00	COVER, TIMING BELT	1	
14	09320-05019	CUSHION	2	
15	01550-0620C	BOLT	1	



FIG.121A

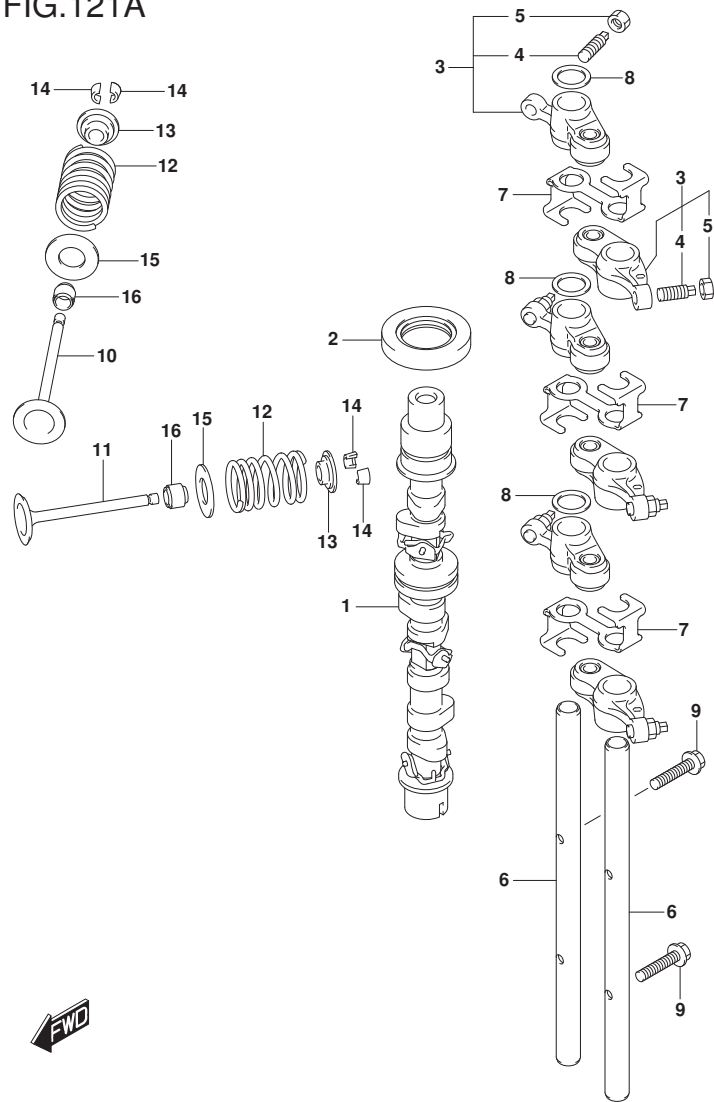


FIG.121A (1-B-6) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12700-94L01	CAMSHAFT ASSY	1	
2	09283-27022	OIL SEAL (27X46X6)	1	
3	12840-94L00	ARM COMP, ROCKER	6	
4	12842-09J00	.SCREW, TAPPET ADJUSTING	6	
5	12843-27A00	.NUT, TAPPET ADJUSTING	6	
6	12861-94L00	SHAFT, ROCKER ARM	2	
7	12862-94L00	RETAINER, ROCKER ARM	3	
8	09164-12021	WASHER	3	
9	01547-0625A	BOLT	2	
10	12911-94L10	VALVE, INTKE	3	
11	12915-94L60	VALVE, EXHAUST	3	
12	12921-94L00	SPRING, VALVE	6	
13	12931-78G00	RETAINER, VALVE SPRING	6	
14	12932-50MA0	COTTER VALVE	12	
15	12933-71C00	SEAT, VALVE SPRING	6	
16	09289-05008	OIL SEAL (5X10.5X8.4)	6	

FIG.122A


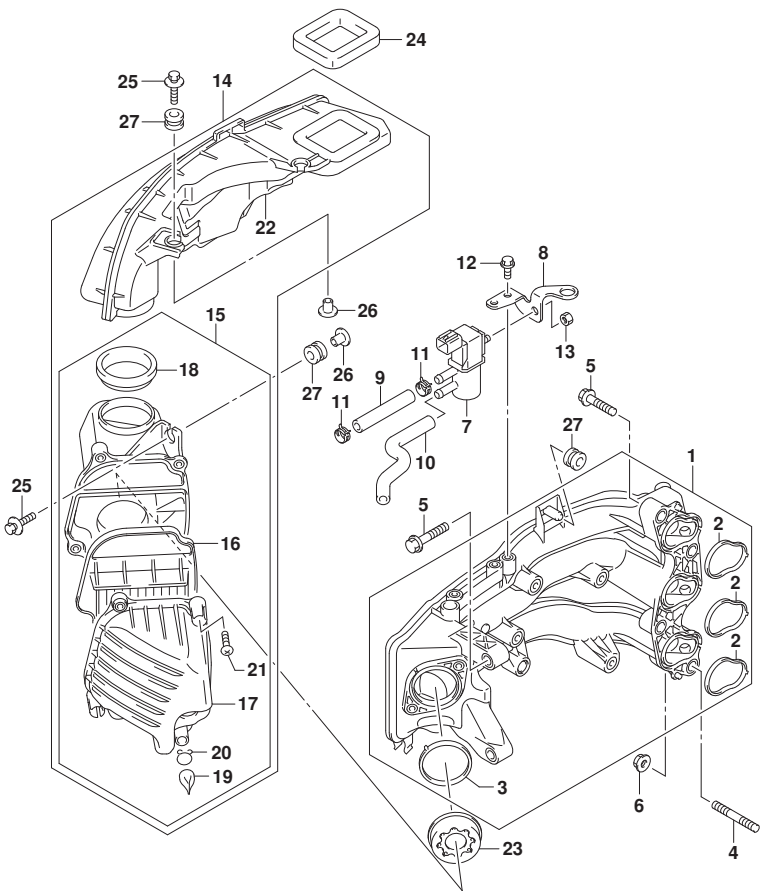


FIG.122A (1-B-7) INTAKE MANIFOLD (DF25A)(DF25AR)(DF25AT)(DF25ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-94L00	MANIFOLD, INTAKE	1	
2	13119-94L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-94L00	.GASKET, THROTTLE BODY	1	
4	01421-08357	STUD BOLT	2	
5	01550-0835C	BOLT	4	
6	08316-10087	NUT	2	
7	18117-78K00	VALVE, EVAP CSTR PURGE	1	
8	18119-94L00	BRACKET, IAC VALVE	1	
9	09355-70125-600	HOSE (7X12X600)	1	L:600->70
10	18173-94L00	HOSE, IAC VALVE NO.2	1	
11	09401-11423	CLIP	2	
12	01550-0612C	BOLT	2	
13	08316-10067	NUT	1	
14	13800-94L01	SILENCER ASSY	1	
15	13810-94L01	.CLEANER, SILENCER	1	
16	13711-94L00	..ELEMENT ASSY, AIR CLEANER	1	
17	13812-94L01	..CAP, AIR CLEANER	1	
18	13813-94L00	..SEAL, AIR CLEANER	1	
19	13815-94L00	..CAP, DRAIN	2	
20	13816-94L00	..CLIP, CAP	2	
21	13817-94L00	..SCREW	4	
22	13841-94L00	.DUCT, SILENCER	1	
23	13820-94L00	HOLDER, RESTRICTOR	1	
24	13851-94L00	SEAL, AIR INTAKE	1	
25	09116-06215	BOLT (6X30)	4	
26	09169-06075	WASHER	4	
27	09320-09039	CUSHION	5	

DF25A P01
DF25AR P01
DF25AT P01
DF25ATH P01

FIG.122B

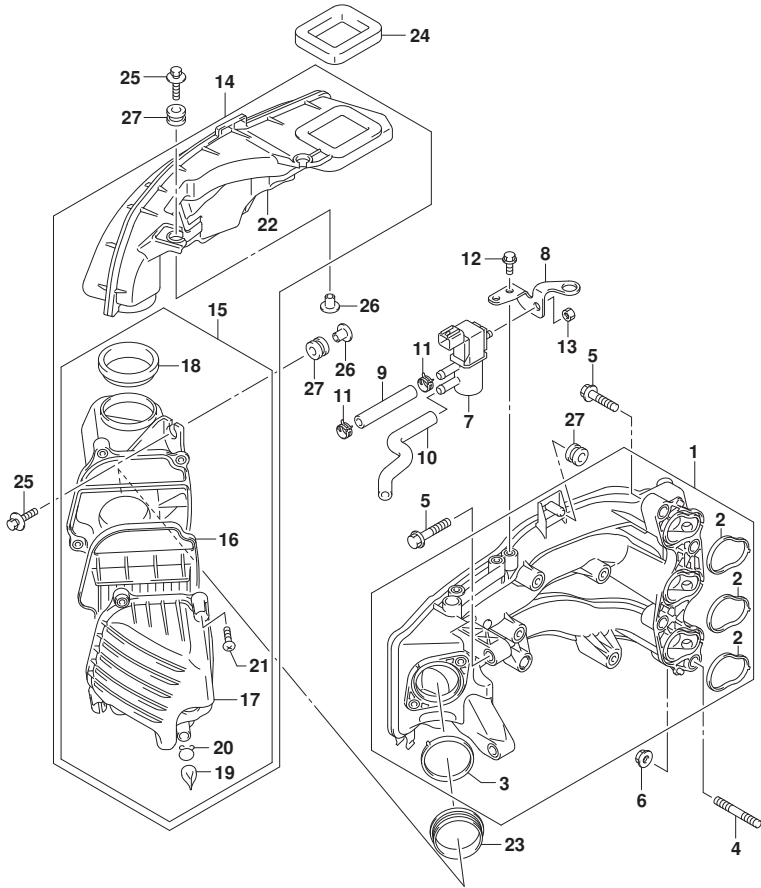

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-94L00	MANIFOLD, INTAKE	1	
2	13119-94L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-94L00	.GASKET, THROTTLE BODY	1	
4	01421-08357	STUD BOLT	2	
5	01550-0835C	BOLT	4	
6	08316-10087	NUT	2	
7	18117-78K00	VALVE, EVAP CSTR PURGE	1	
8	18119-94L00	BRACKET, IAC VALVE	1	
9	09355-70125-600	HOSE (7X12X600)	1	L:600->70
10	18173-94L00	HOSE, IAC VALVE NO.2	1	
11	09401-11423	CLIP	2	
12	01550-0612C	BOLT	2	
13	08316-10067	NUT	1	
14	13800-94L01	SILENCER ASSY	1	
15	13810-94L01	.CLEANER, SILENCER	1	
16	13711-94L00	..ELEMENT ASSY, AIR CLEANER	1	
17	13812-94L01	..CAP, AIR CLEANER	1	
18	13813-94L00	..SEAL, AIR CLEANER	1	
19	13815-94L00	..CAP, DRAIN	2	
20	13816-94L00	..CLIP, CAP	2	
21	13817-94L00	..SCREW	4	
22	13841-94L00	.DUCT, SILENCER	1	
23	13832-94L00	SEAL, SILENCER	1	
24	13851-94L00	SEAL, AIR INTAKE	1	
25	09116-06215	BOLT (6X30)	4	
26	09169-06075	WASHER	4	
27	09320-09039	CUSHION	5	

DF30A P40
DF30AR P01
DF30AT P01
DF30ATH P01
DF30AQ P01

FIG.139A

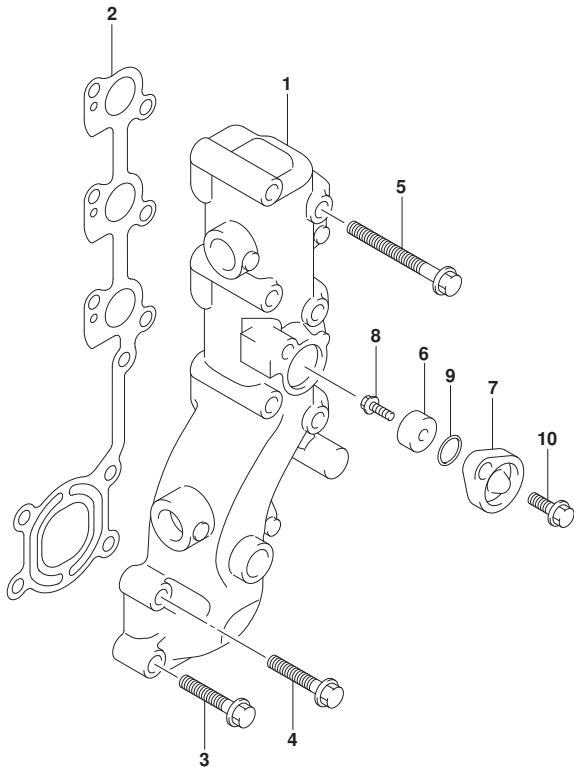


FIG.139A (1-B-9) EXHAUST MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	14110-94L00	MANIFOLD, EXHAUST	1	
2	14151-94L00	GASKET, EXHAUST MANIFOLD	1	
3	01550-08407	BOLT	2	
4	09116-08152	BOLT (8X35)	2	
5	01550-08707	BOLT	6	
6	55321-87J01	ANODE, PROTECTION	1	
7	11261-93J00	COVER, PROTECTION ANODE	1	
8	09103-06281	BOLT (6X14)	1	
9	09280-22019	O RING (D:1.9,ID:21.8)	1	
10	01550-0820C	BOLT	1	

FIG.144A

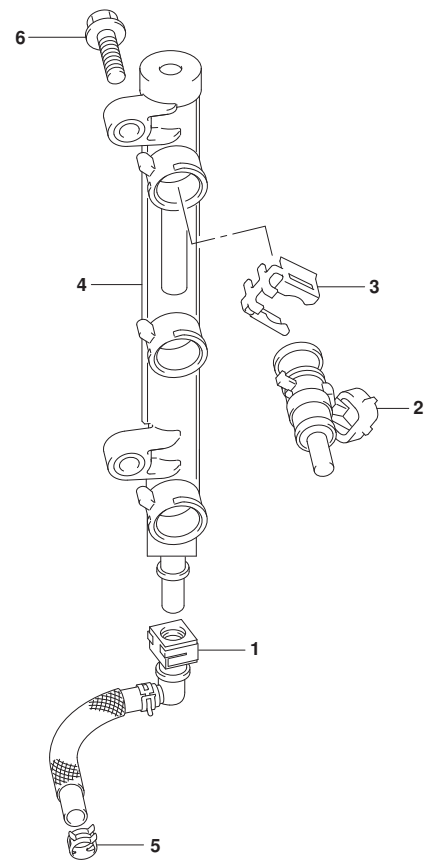


FIG.144A (1-B-10) FUEL INJECTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-94L00	HOSE, FUEL (PUMP TO DLVY)	1	
2	15710-82M00	INJECTOR ASSY, FUEL	3	
3	15715-82M00	CLIP, FUEL INJECTOR	3	
4	15750-94L00	PIPE, DELIVERY	1	
5	09401-11425	CLIP	1	
6	01550-0625C	BOLT	2	



FIG.146A

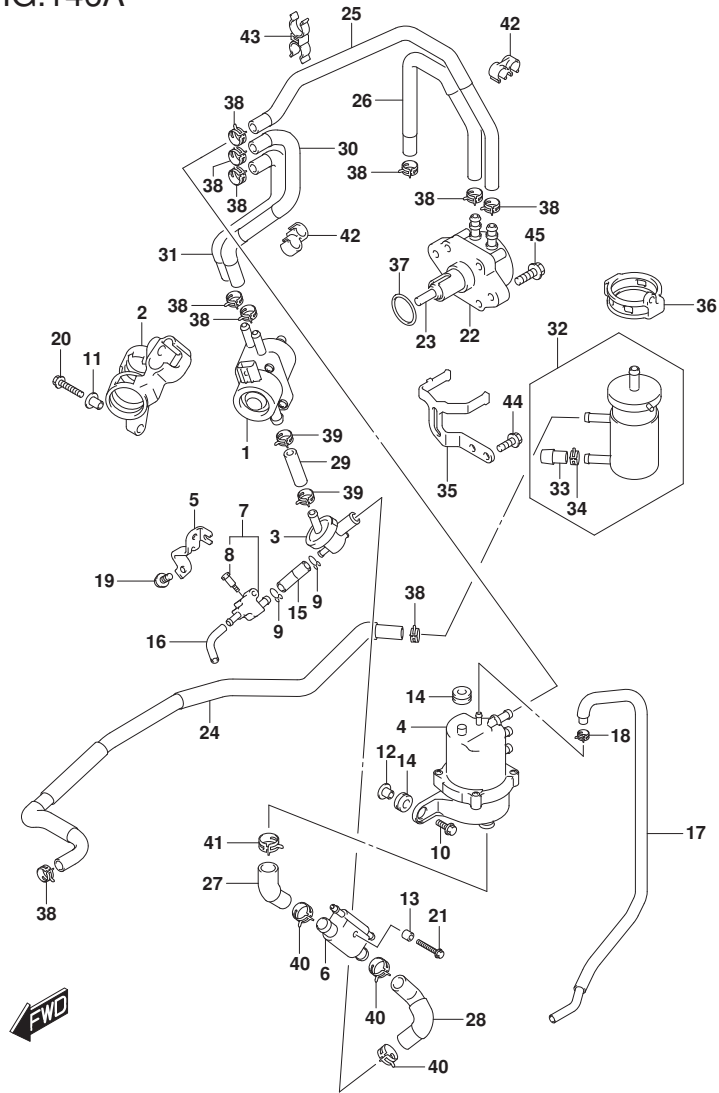


FIG.146A (1-B-11) FUEL PUMP (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15200-94L10	PUMP ASSY, FUEL (H)	1	
2	15217-94L00	CUSHION, FUEL PUMP (H)	1	
3	15410-94L00	FILTER, FUEL	1	
4	15600-94L00	SEPARATOR ASSY, FUEL VAPOR	1	
5	15674-94L00	BRACKET, FUEL DRAIN	1	
6	15770-94L00	COOLER, FUEL	1	
7	15820-94L00	BODY, DRAIN	1	
8	15629-89L00	.SCREW, FUEL DRAIN	1	
9	59412-91J00	CLIP, FUEL HOSE	2	
10	09116-06517	BOLT (6X25)	2	
11	09169-06075	WASHER	1	
12	09169-06062	WASHER	2	
13	09180-06230	SPACER (6.2X12.6X12.5)	1	
14	09320-09052	CUSHION	3	
15	09343-50L01-040	HOSE	1	
16	09344-55001-070	HOSE (5.5X9X70)	1	
17	15662-94L10	HOSE, EVAPORATION	1	
18	09401-08412	CLIP	1	
19	01550-0616C	BOLT	1	
20	01550-0630C	BOLT	1	
21	01550-0645C	BOLT	1	
22	15100-94L00	PUMP ASSY, FUEL (L)	1	
23	15131-94L00	ROD, FUEL PUMP	1	

FIG.146A

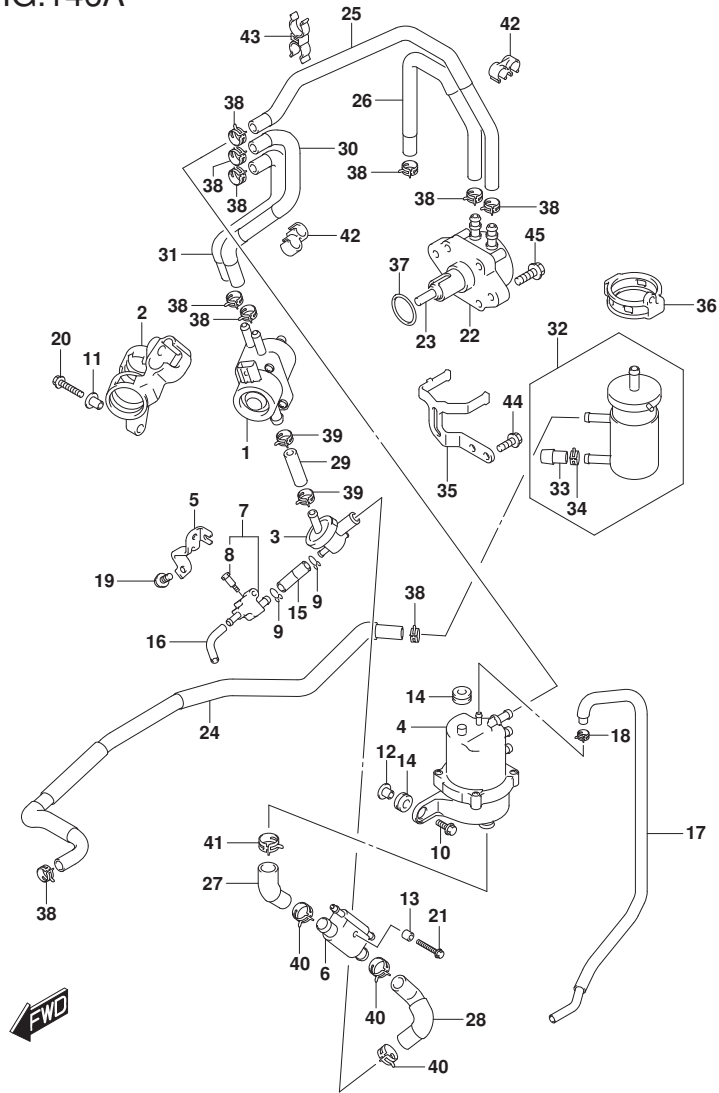


FIG.146A (1-B-12) FUEL PUMP (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	15191-94L00	HOSE, FUEL (CONN TO FILTER)	1	
25	15192-94L00	HOSE, FUEL (PUMP TO SEPARATOR)	1	
26	15193-94L00	HOSE, FUEL (FILTER TO PUMP)	1	
27	15194-94L00	HOSE, FUEL (SEPARATOR TO COOLER)	1	
28	15194-94L10	HOSE, FUEL (COOLER TO 3WAY)	1	
29	15194-94L20	HOSE, FUEL (3WAY TO PUMP)	1	
30	15194-94L30	HOSE, FUEL (PUMP(H) TO SEP1)	1	
31	15194-94L40	HOSE, FUEL (PUMP(H) TO SEP2)	1	
32	15410-87L00	FILTER, FUEL	1	
33	15419-87J00	.CAP, FUEL FILTER	1	
34	09401-11423	.CLIP	1	
35	15421-94L00	BRACKET, FUEL FILTER	1	
36	15422-94L00	CLAMP, FUEL FILTER	1	
37	09280-26005	O RING (D:2.4,ID:26.2)	1	
38	09401-11423	CLIP	10	
39	09401-13423	CLIP	2	
40	09401-18414	CLIP	3	
41	09401-20410	CLIP	1	
42	09408-00043	CLAMP	2	
43	09408-00233	CLAMP	1	
44	01550-0616C	BOLT	2	
45	01550-0625C	BOLT	2	

- DF25A P01
- DF25AR P01
- DF25AT P01
- DF25ATH P01
- DF30AR P01
- DF30AT P01
- DF30ATH P01
- DF30AQ P01

FIG.146B

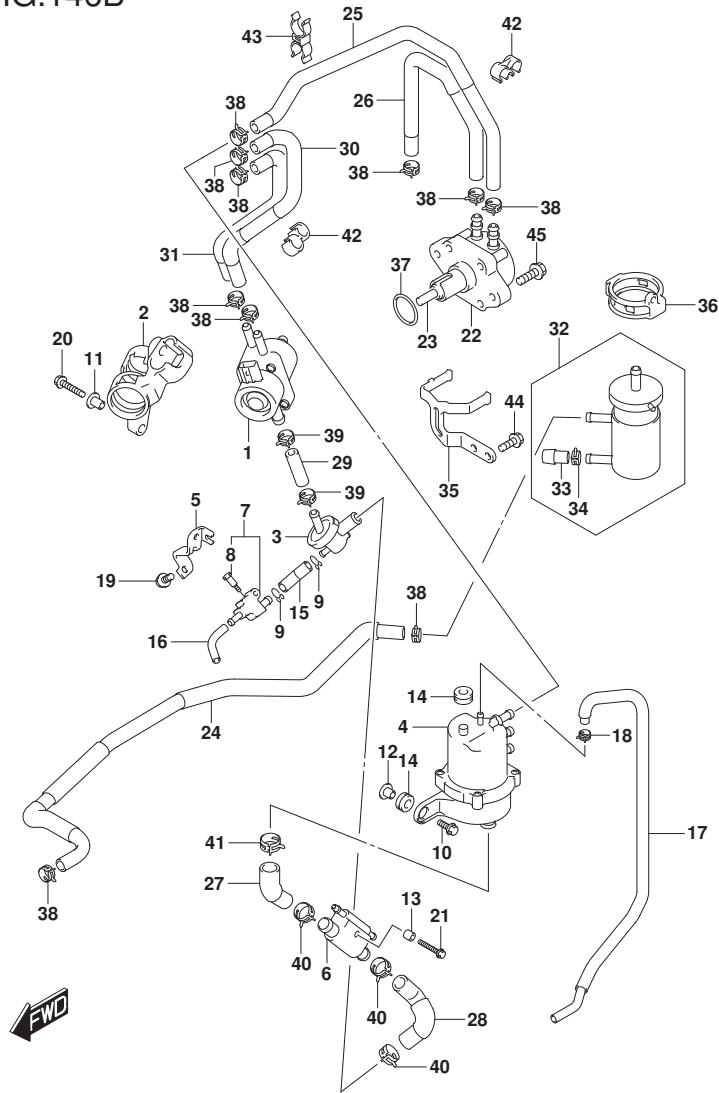


FIG.146B (1-B-13) FUEL PUMP (P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15200-94L10	PUMP ASSY, FUEL (H)	1	
2	15217-94L00	CUSHION, FUEL PUMP (H)	1	
3	15410-94L00	FILTER, FUEL	1	
4	15600-94L00	SEPARATOR ASSY, FUEL VAPOR	1	
5	15674-94L00	BRACKET, FUEL DRAIN	1	
6	15770-94L00	COOLER, FUEL	1	
7	15820-94L00	BODY, DRAIN	1	
8	15629-89L00	.SCREW, FUEL DRAIN	1	
9	59412-91J00	CLIP, FUEL HOSE	2	
10	09116-06517	BOLT (6X25)	2	
11	09169-06075	WASHER	1	
12	09169-06062	WASHER	2	
13	09180-06230	SPACER (6.2X12.6X12.5)	1	
14	09320-09052	CUSHION	3	
15	09343-50L01-040	HOSE	1	
16	09344-55001-070	HOSE (5.5X9X70)	1	
17	15662-94L10	HOSE, EVAPORATION	1	
18	09401-08412	CLIP	1	
19	01550-0616C	BOLT	1	
20	01550-0630C	BOLT	1	
21	01550-0645C	BOLT	1	
22	15100-94L10	PUMP ASSY, FUEL (L)	1	
23	15131-94L00	ROD, FUEL PUMP	1	
24	15191-94L00	HOSE, FUEL (CONN TO FILTER)	1	
25	15192-94L00	HOSE, FUEL (PUMP TO SEPARATOR)	1	
26	15193-94L00	HOSE, FUEL (FILTER TO PUMP)	1	
27	15194-94L00	HOSE, FUEL (SEPARATOR TO COOLER)	1	
28	15194-94L10	HOSE, FUEL (COOLER TO 3WAY)	1	
29	15194-94L20	HOSE, FUEL (3WAY TO PUMP)	1	

FIG.146B

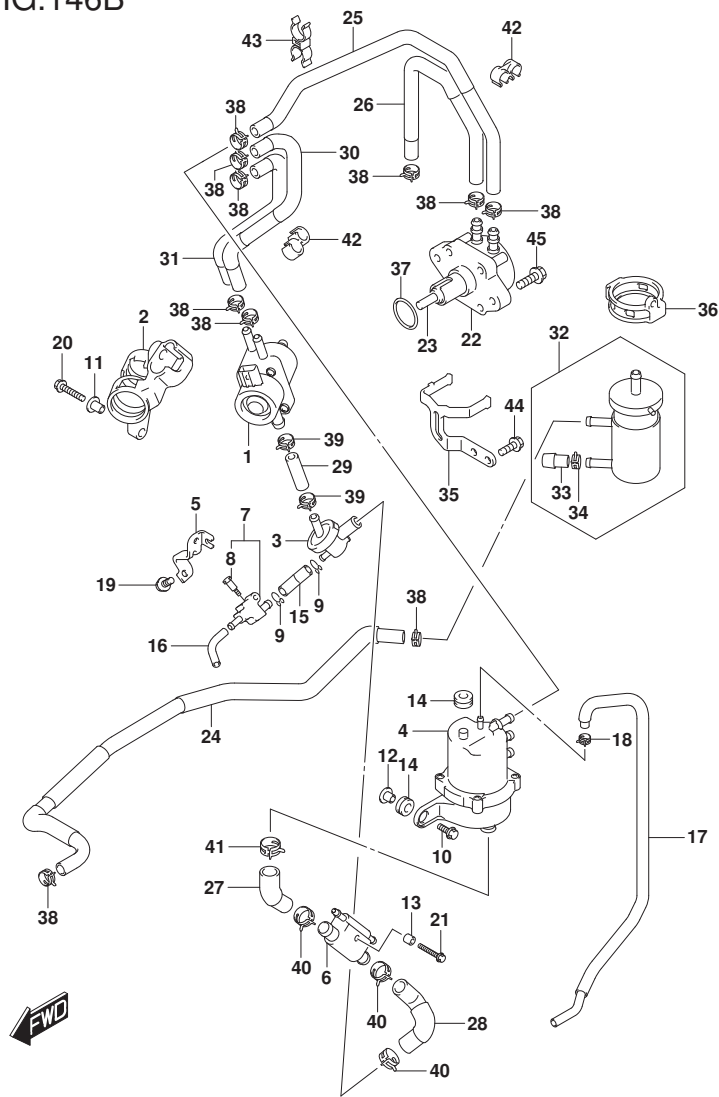


FIG.146B (1-B-14) FUEL PUMP (P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	15194-94L30	HOSE, FUEL (PUMP(H) TO SEP1)	1	
31	15194-94L40	HOSE, FUEL (PUMP(H) TO SEP2)	1	
32	15410-87L00	FILTER, FUEL	1	
33	15419-87J00	.CAP, FUEL FILTER	1	
34	09401-11423	.CLIP	1	
35	15421-94L00	BRACKET, FUEL FILTER	1	
36	15422-94L00	CLAMP, FUEL FILTER	1	
37	09280-26005	O RING (D:2.4,ID:26.2)	1	
38	09401-11423	CLIP	10	
39	09401-13423	CLIP	2	
40	09401-18414	CLIP	3	
41	09401-20410	CLIP	1	
42	09408-00043	CLAMP	2	
43	09408-00233	CLAMP	1	
44	01550-0616C	BOLT	2	
45	01550-0625C	BOLT	2	

DF30A P40

FIG.160A

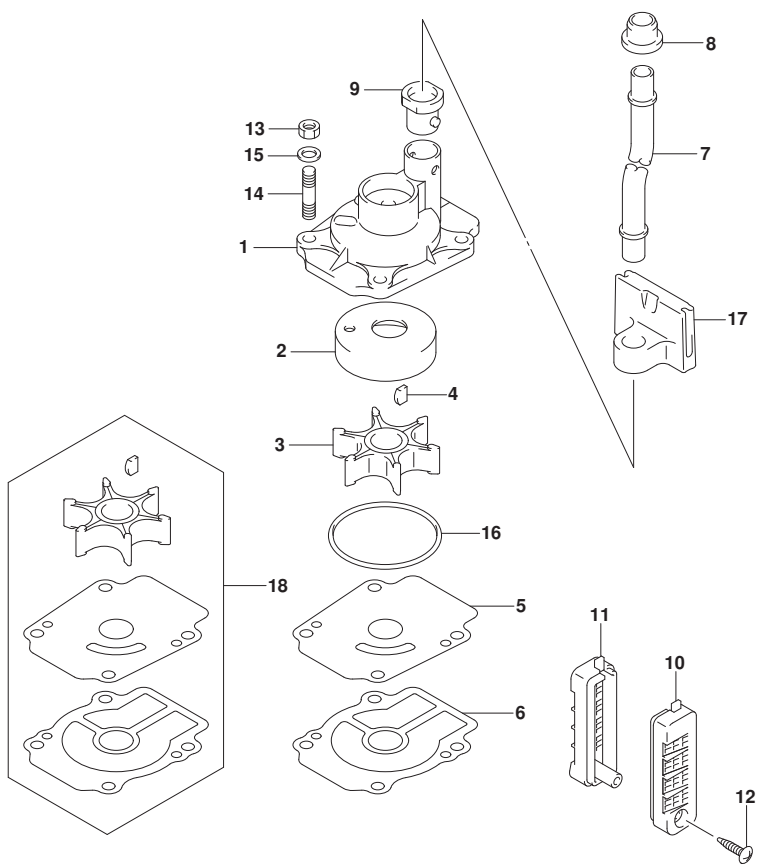


FIG.160A (1-B-15) WATER PUMP (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17411-94L00	CASE, WATER PUMP	1	
2	17413-94L00	SLEEVE, WATER PUMP CASE	1	
3	17461-94L00	IMPELLER, WATER PUMP	1	
4	17462-94L00	KEY, WATER PUMP IMPELLER	1	
5	17471-94L00	PANEL, PUMP CASE UNDER	1	
6	17472-94L00	GASKET, PUMP CASE UNDER	1	
7-1	17561-94L00	TUBE, WATER (S)	1	W/TRANSOM(S)
7-2	17561-94L10	TUBE, WATER (L)	1	W/TRANSOM(L)
8	17562-94L00	GROMMET, WATER TUBE UPPER	1	
9	17564-94L00	GROMMET, WATER TUBE LOWER	1	
10	17631-94L00	FILTER, WATER PORT SIDE	1	
11	17632-94L00	FILTER, WATER STBD SIDE	1	
12	03142-04259	SCREW	1	
13	29141-93J00	NUT	4	
14	09108-06149	STUD BOLD	4	
15	09160-06082	WASHER (6.5X13X1.0)	4	
16	09280-54004	O RING (D:2.8,ID:53.4)	1	
17	17565-94L00	GUIDE, WATER TUBE	1	
18	17400-94L00	KIT, WATER PUMP REPAIR	1	OPT

DF25A P01
DF25AR P01
DF25AT P01
DF25ATH P01
DF30AR P01
DF30AT P01
DF30ATH P01
DF30AQ P01



FIG.160B

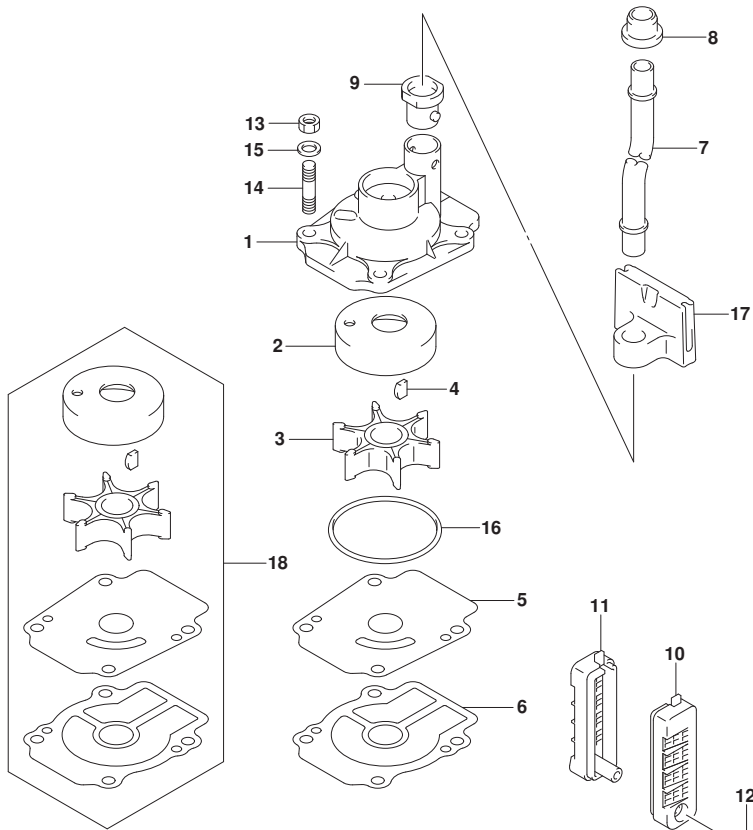


FIG.160B (1-C-2) WATER PUMP (P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17411-94L00	CASE, WATER PUMP	1	
2	17413-94L10	SLEEVE, WATER PUMP CASE	1	
3	17461-94L00	IMPELLER, WATER PUMP	1	
4	17462-94L00	KEY, WATER PUMP IMPELLER	1	
5	17471-94L10	PANEL, PUMP CASE UNDER	1	
6	17472-94L00	GASKET, PUMP CASE UNDER	1	
7-1	17561-94L00	TUBE, WATER (S)	1	W/TRANSOM(S)
7-2	17561-94L10	TUBE, WATER (L)	1	W/TRANSOM(L)
8	17562-94L00	GROMMET, WATER TUBE UPPER	1	
9	17564-94L00	GROMMET, WATER TUBE LOWER	1	
10	17631-94L00	FILTER, WATER PORT SIDE	1	
11	17632-94L00	FILTER, WATER STBD SIDE	1	
12	03142-04259	SCREW	1	
13	29141-93J00	NUT	4	
14	09108-06149	STUD BOLD	4	
15	09160-06082	WASHER (6.5X13X1.0)	4	
16	09280-54004	O RING (D:2.8,ID:53.4)	1	
17	17565-94L00	GUIDE, WATER TUBE	1	
18	17400-94L10	KIT, WATER PUMP REPAIR	1	OPT

DF30A P40

FIG.162A

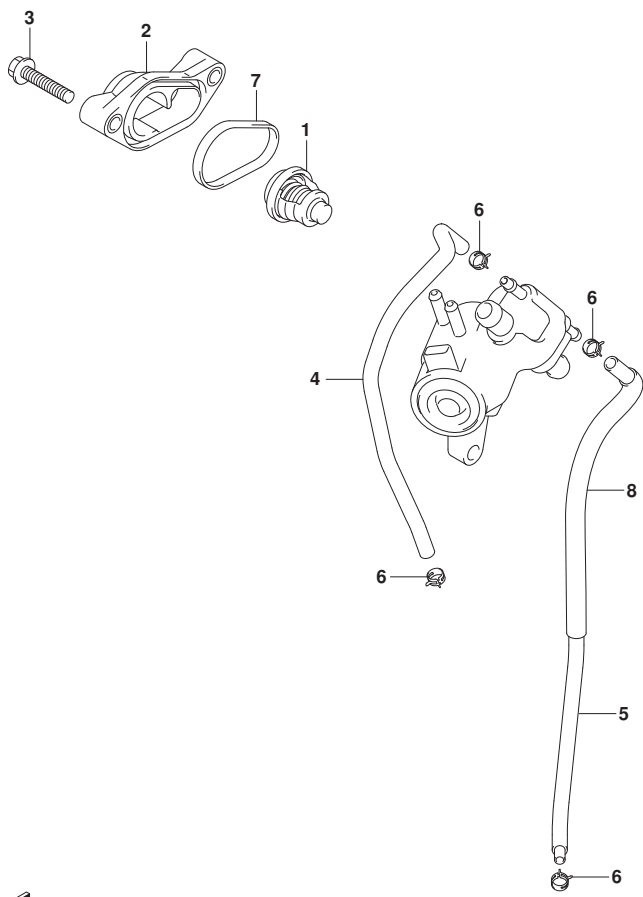


FIG.162A (1-C-3) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17670-94J01	THERMOSTAT, WATER (60C)	1	
2	17680-94L00	COVER, THERMOSTAT	1	
3	01550-0630C	BOLT	2	
4	17712-94L00	HOSE, WATER (COOLER TO IND)	1	
5	15211-91J00-350	HOSE, WATER (HOUSING TO COOLER)	1	
6	09401-08413	CLIP	4	
7	17685-94L00	SEAL, THERMOSTAT COVER	1	
8	18498-94JL0-160	PROTECTOR, WATER HOSE (ID:12,OD:15,L:160)	1	



FIG.163A

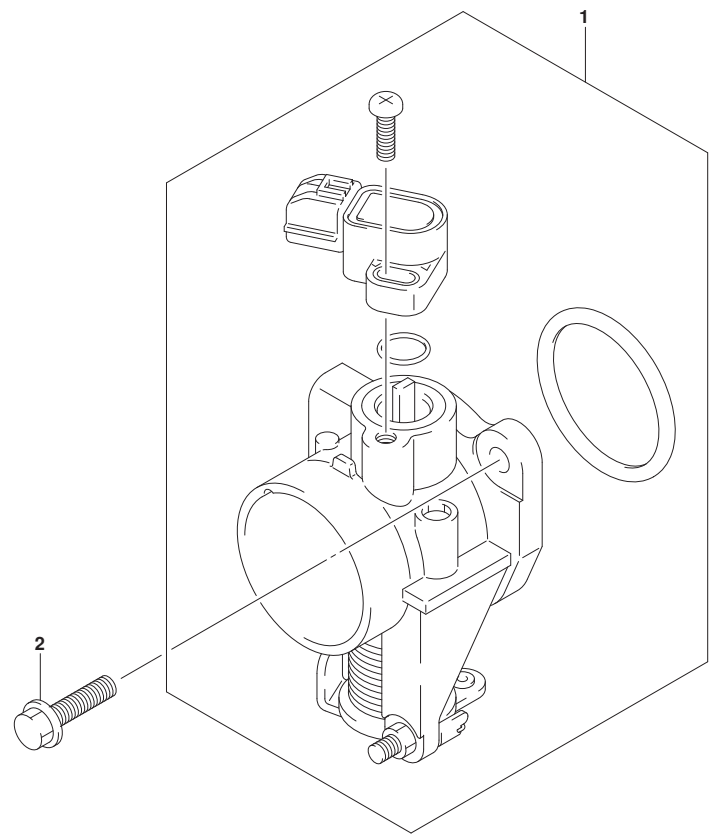


FIG.163A (1-C-4) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13300-94L00	BODY ASSY, THROTTLE	1	
2	01550-0620C	BOLT	2	

FIG.166A

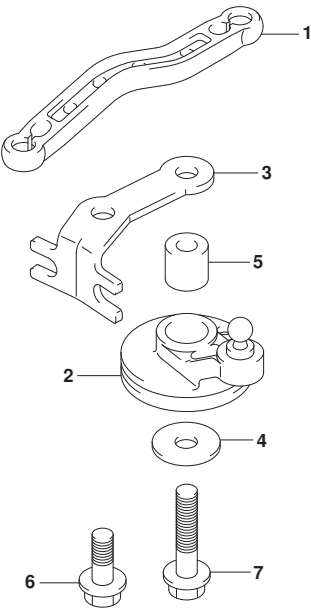


FIG.166A (1-C-5) THROTTLE CONTROL (DF25A)(DF25ATH)(DF30A)(DF30ATH)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19137-94L00	ROD, THROTTLE NO.2	1	
2	19140-94L11	DRUM, THROTTLE CONTROL	1	
3	19184-94L00	HOLDER, THROTTLE CABLE	1	
4	09160-06046	WASHER (6.5X20X1.5)	1	
5	09180-06230	SPACER (6.2X12.6X12.5)	1	
6	01550-0616C	BOLT	1	
7	01550-0630C	BOLT	1	

DF25A P01
DF25ATH P01
DF30A P40
DF30ATH P01
DF30AQ P01



FIG.166B

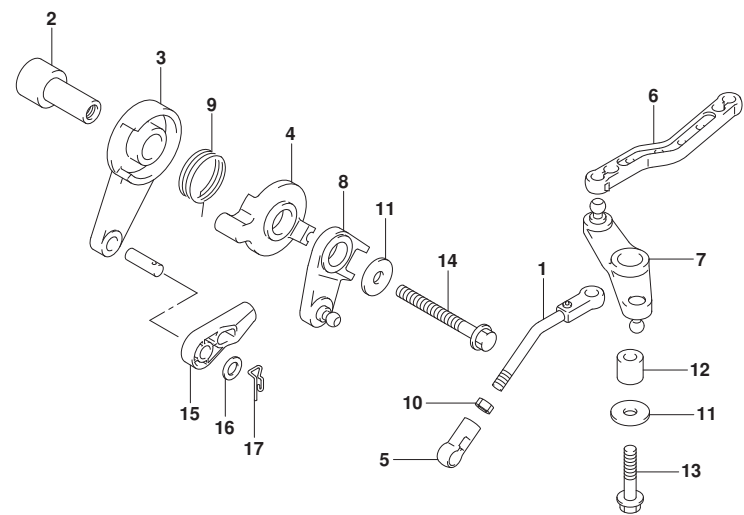


FIG.166B (1-C-6) THROTTLE CONTROL (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13510-94L00	ROD, THROTTLE NO.1	1	
2	19116-94L00	HOLDER, THROTTLE LEVER	1	
3	19120-99J11	LEVER, THROTTLE CONTROL	1	
4	19122-99J00	LEVER, INTERLINK THROTTLE NO.2	1	
5	19131-95502	CONNECTOR	1	
6	19137-94L00	ROD, THROTTLE NO.2	1	
7	19140-94L01	LEVER, THROTTLE NO.2	1	
8	19140-94L20	LEVER, THROTTLE CONTROL NO.2	1	
9	19185-99J00	SPRING, THROTTLE LEVER	1	
10	09140-05005	NUT	1	
11	09160-06046	WASHER (6.5X20X1.5)	2	
12	09180-06230	SPACER (6.2X12.6X12.5)	1	
13	01550-0625C	BOLT	1	
14	01550-06557	BOLT	1	
15	67467-89J01	CONNECTOR	1	
16	09160-06055	WASHER (7X12X1)	1	
17	09385-06012	CLIP	1	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	18100-94L00	STARTER ASSY, RECOIL	1	
2	18121-94JL0	.REEL	1	
3	18130-93E01	.RATCHET SET	1	
4	18132-89L00	.SCREW	1	
5	18142-93E00	.SPRING, SPIRAL	1	
6	18210-95L00	.GRIP ASSY	1	
7	18280-93E00	.NSI SET	1	
8	99000-81158-50M	STARTER ROPE 5MMDIA, 50M ROLE	1	OPT L:50000->1500
9	01550-0630C	BOLT	3	
10	18290-94L00	CABLE ASSY, NSI	1	
11	18193-94L00	SEAL, AIR RECOIL LOWER	1	
12	18194-94L00	SEAL, AIR RECOIL UPPER	1	
13	18295-94L00	BRACKET, NSI CABLE	1	
14	01550-0616C	BOLT	1	
15	69711-93E10	LABEL, S.I.G.P.	1	
16	61472-97J00	LABEL, RECOIL, STARTER	1	
17	61494-94L01	LABEL, OIL / CLEARANCE	1	

DF25A_30A_P01_018

FIG.175A

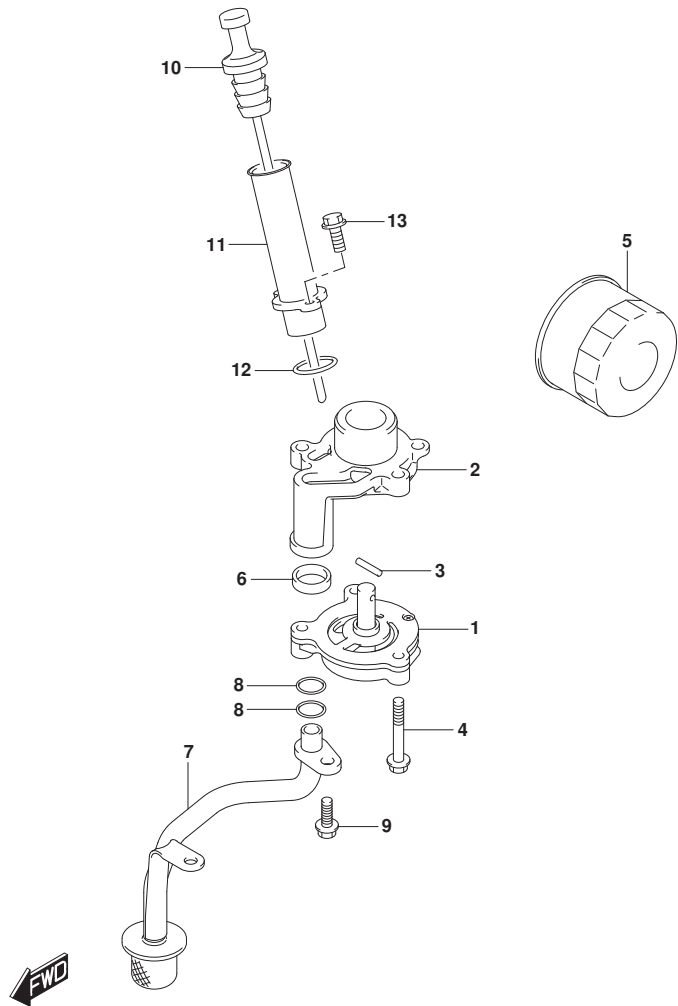


FIG.175A (1-C-8) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	16400-94L00	PUMP ASSY, OIL	1	
2	16431-94L00	BLOCK, OIL GALLERY	1	
3	59262-94J00	PIN, OIL PUMP	1	
4	01547-0640A	BOLT	3	
5	16510-87J00	FILTER ASSY, OIL	1	
6	16519-94L00	SEAL, ENGINE HOLDER	1	
7	16520-94L00	STRAINER, OIL	1	
8	09280-12012	O RING (D:2.4,ID:11.8)	2	
9	01550-0616A	BOLT	2	
10	16910-94L01	GAUGE, OIL LEVEL	1	
11	16930-94L00	GUIDE, OIL LEVEL GAUGE	1	
12	09280-21008	O RING (D:2.5,ID:21)	1	
13	01550-0616C	BOLT	2	

FIG.206A

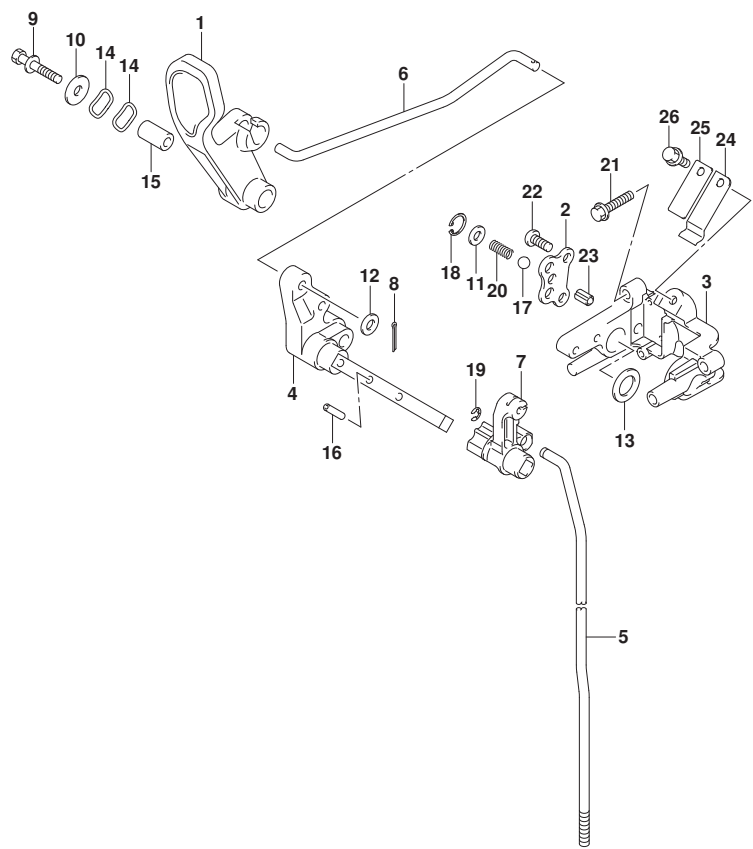


FIG.206A (1-C-9) CLUTCH ROD (DF25A)(DF25ATH)(DF30A)(DF30ATH)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21111-89L00	LEVER, CLUTCH	1	
2	21122-94L00	PLATE, CLUTCH NOTCH	1	
3	21151-94L10	HOLDER, CLUTCH SHAFT	1	
4	21210-94L00	SHAFT, CLUTCH LEVER	1	
5-1	23111-94L00	ROD, CLUTCH (S)	1	W/TRANSOM(S)
5-2	23111-94L10	ROD, CLUTCH (L)	1	W/TRANSOM(L)
6	23115-94L00	LINK, CLUTCH LEVER	1	
7	23211-94L10	ARM, CLUTCH ROD	1	
8	09204-01002	PIN	1	
9	09116-06234	BOLT (6X35)	1	
10	09160-06046	WASHER (6.5X20X1.5)	1	
11	09160-06082	WASHER (6.5X13X1.0)	1	
12	09160-06094	WASHER (6.5X15X1.0)	1	
13	09160-14071	WASHER (13.3X23X1)	1	
14	09164-14008	WASHER	2	
15	09180-06186	SPACER (6.2X12.6X21)	1	
16	09205-04002	SPRING PIN (4X20)	1	
17	09260-10006	BALL	1	
18	09381-14004	CIRCLIP	1	
19	09383-04002	E RING	1	
20	09440-07080	SPRING	1	
21	01550-0625C	BOLT	2	
22	02112-06127	SCREW	2	
23	37724-99J00	ROD, SWITCH PUSH	1	
24	23213-94400	SPRING, CLUTCH NOTCH	1	
25	23214-89J00	SPRING, NOTCH PLATE NO.2	1	
26	09116-06225	BOLT (6X15)	1	

DF25A P01
DF25ATH P01
DF30A P40
DF30ATH P01
DF30AQ P01



FIG.206B

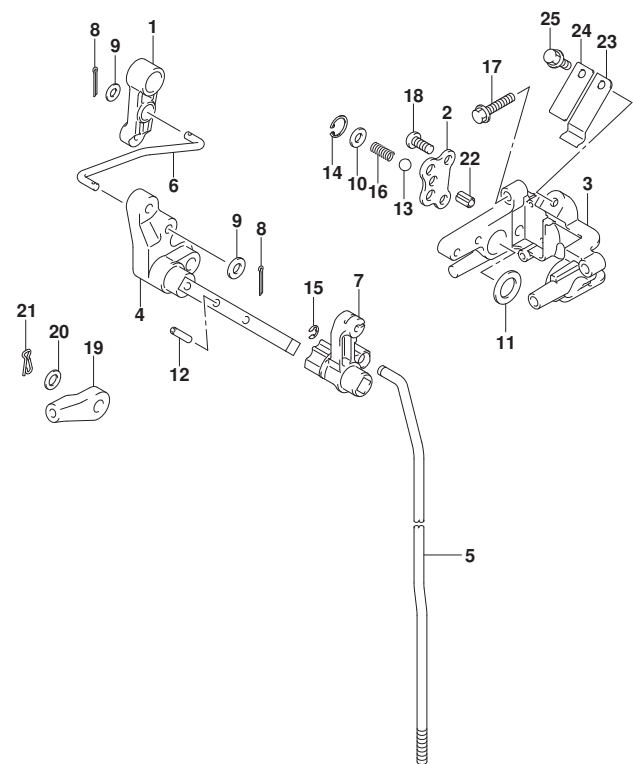


FIG.206B (1-C-10) CLUTCH ROD (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21110-94L00	LEVER, CLUTCH CONTROL	1	
2	21122-94L00	PLATE, CLUTCH NOTCH	1	
3	21151-94L10	HOLDER, CLUTCH SHAFT	1	
4	21210-94L00	SHAFT, CLUTCH LEVER	1	
5-1	23111-94L00	ROD, CLUTCH (S)	1	W/TRANSOM(S)
5-2	23111-94L10	ROD, CLUTCH (L)	1	W/TRANSOM(L)
6	23115-94L10	LINK, CLUTCH LEVER	1	
7	23211-94L10	ARM, CLUTCH ROD	1	
8	09204-01002	PIN	2	
9	09160-05029	WASHER (5.5X12X0.8)	2	
10	09160-06082	WASHER (6.5X13X1.0)	1	
11	09160-14071	WASHER (13.3X23X1)	1	
12	09205-04002	SPRING PIN (4X20)	1	
13	09260-10006	BALL	1	
14	09381-14004	CIRCLIP	1	
15	09383-04002	E RING	1	
16	09440-07080	SPRING	1	
17	01550-0625C	BOLT	2	
18	02112-06127	SCREW	2	
19	67467-89J01	CONNECTOR	1	
20	09160-06055	WASHER (7X12X1)	1	
21	09385-06012	CLIP	1	
22	37724-99J00	ROD, SWITCH PUSH	1	
23	23213-94400	SPRING, CLUTCH NOTCH	1	
24	23214-89J00	SPRING, NOTCH PLATE	1	
25	09116-06225	BOLT (6X15)	1	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01



FIG.210A (1-C-11) SHIFT ROD (P01)



DF25A P01
DF25AR P01
DF25AT P01
DF25ATH P01
DF30AR P01
DF30AT P01
DF30ATH P01
DF30AQ P01

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-94L01	SHAFT, DRIVE (S) (NT:10)	1	W/TRANSOM(S)
1-2	57110-94L11	SHAFT, DRIVE (L) (NT:10)	1	W/TRANSOM(L)
2	57133-94L00	COLLAR, DRIVE SHAFT	1	
3	09166-17005	WASHER	1	
4	09265-17002	BEARING (17X40X17.25)	1	
5	57311-91L00	PINION (NT:11)	1	
6	09159-08046	NUT	1	
7-1	09160-15030	WASHER (T:1.7)	1	
7-2	09160-15031	WASHER (T:1.8)	1	
7-3	09160-15032	WASHER (T:1.9)	1	
7-4	08211-15203	WASHER (T:2.0)	1	
7-5	09160-15033	WASHER (T:2.1)	1	
7-6	08211-15204	WASHER (T:2.2)	1	
7-7	09160-15053	WASHER (T:2.3)	1	
7-8	09160-15054	WASHER (T:2.4)	1	
8	57510-94L00	GEAR, FORWARD (NT:23)	1	
9	57521-94L00	GEAR, REVERSE (NT:23)	1	
10	09181-16008	SHIM (16X24X2)	1	FWD
11-1	09160-20068	WASHER (T:1.6)	1	REV
11-2	09160-20069	WASHER (T:1.8)	1	REV
11-3	09160-20070	WASHER (T:2.0)	1	REV
11-4	09160-20071	WASHER (T:2.2)	1	REV
11-5	09160-20072	WASHER (T:2.4)	1	REV

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
11-6	09160-20073	WASHER (T:2.6)	1	REV
12-1	08221-30404	SHIM (T:0.2)	2	REV
12-2	09181-30158	SHIM (T:0.5)	1	REV
12-3	09181-30162	SHIM (T:0.8)	1	REV
13-1	09181-25190	SHIM (T:0.8)	1	FWD
13-2	09181-25248	SHIM (T:0.9)	1	FWD
13-3	09181-25251	SHIM (T:1.0)	1	FWD
13-4	09160-25032	WASHER (T:1.1)	1	FWD
13-5	09160-25033	WASHER (T:1.2)	1	FWD
13-6	09160-25034	WASHER (T:1.3)	1	FWD
13-7	09160-25035	WASHER (T:1.4)	1	FWD
13-8	09181-25268	SHIM (T:1.5)	1	FWD
14	57610-96311	SHAFT, PROPELLER	1	
15	57621-91L21	SHIFTER, CLUTCH DOG	1	
16	09202-05021	PIN (5X34)	1	
17	09209-08016	PIN	1	
18	09440-07074	SPRING	1	
19	09440-35004	SPRING	1	
20	57631-95JL0	ROD, PUSH	1	
21	56130-94L00	HOUSING, DRIVE SHAFT OIL SEAL	1	
22	09282-17006	.OIL SEAL (17X30X4.5)	2	
23	09280-50009	O RING (D:3.1,ID:48.7)	1	

DF25A_30A_P01_018

FIG.301A

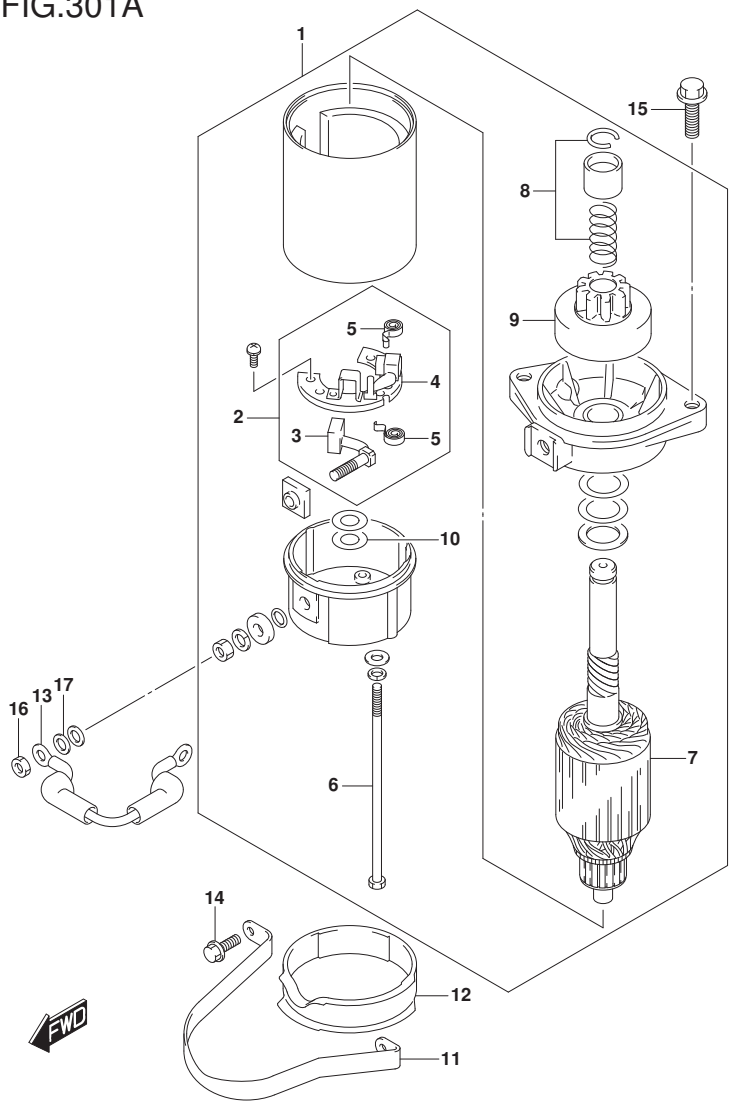


FIG.301A (1-C-14) STARTING MOTOR (DF25A)(DF25AR)(DF25ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31173-89J00	.HOLDER ASSY, BRUSH	1	
3	31131-96300	..BRUSH (+)	1	
4	31132-96300	..BRUSH (-)	1	
5	31135-89J00	..SPRING	2	
6	31281-93340	.BOLT, THROUGH	2	
7	31310-96300	ARMATURE	1	
8	31312-96300	.STOPPER SET, PINION	1	
9	31320-94400	.PINION ASSY	1	
10	31360-96300	.WASHER SET	1	
11	31912-94L00	BAND, STARTER MOTOR	1	
12	31918-94401	DAMPER, LOWER	1	
13	33820-89E01	CABLE, PLUS TERM TO RELAY	1	
14	01550-06167	BOLT	2	
15	01550-08257	BOLT	2	
16	08310-00067	NUT	1	
17	08321-01067	WASHER, LOCK	1	

DF25A P01
DF25AR P01
DF25ATH P01

FIG.301B

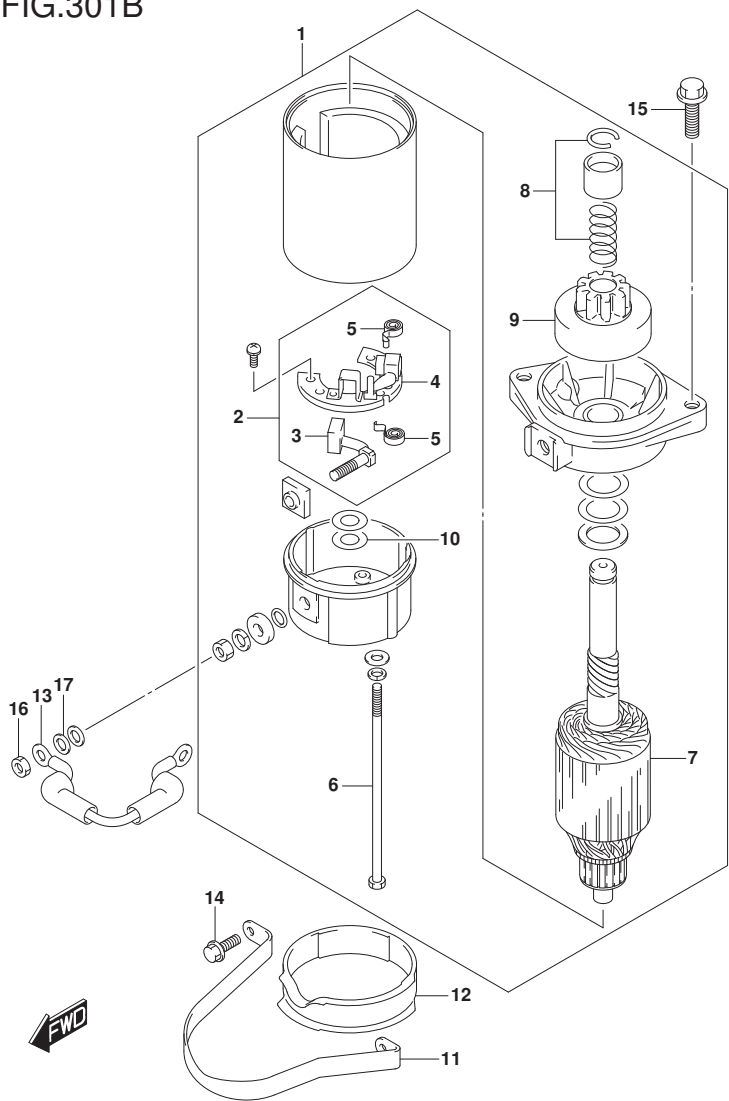


FIG.301B (1-C-15) STARTING MOTOR (DF30A)(DF30AR)(DF30ATH)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31173-89J00	.HOLDER ASSY, BRUSH	1	
3	31131-96300	..BRUSH (+)	1	
4	31132-96300	..BRUSH (-)	1	
5	31135-89J00	..SPRING	2	
6	31281-93340	.BOLT, THROUGH	2	
7	31310-96300	ARMATURE	1	
8	31312-96300	.STOPPER SET, PINION	1	
9	31320-94400	.PINION ASSY	1	
10	31360-96300	.WASHER SET	1	
11	31912-94L00	BAND, STARTER MOTOR	1	
12	31918-94401	DAMPER, LOWER	1	
13	33820-89E01	CABLE, PLUS TERM TO RELAY	1	
14	01550-06167	BOLT	2	
15	01550-08257	BOLT	2	
16	08310-00067	NUT	1	
17	08321-01067	WASHER, LOCK	1	

DF30A P40
DF30AR P01
DF30ATH P01
DF30AQ P01

FIG.301C

FIG.301C (1-D-2) STARTING MOTOR (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31173-89J00	.HOLDER ASSY, BRUSH	1	
3	31131-96300	..BRUSH (+)	1	
4	31132-96300	..BRUSH (-)	1	
5	31135-89J00	..SPRING	2	
6	31281-93340	.BOLT, THROUGH	2	
7	31310-96300	ARMATURE	1	
8	31312-96300	.STOPPER SET, PINION	1	
9	31320-94400	.PINION ASSY	1	
10	31360-96300	.WASHER SET	1	
11	31912-94L00	BAND, STARTER MOTOR	1	
12	31918-94401	DAMPER, LOWER	1	
13	33820-89E01	CABLE, PLUS TERM TO RELAY	1	
14	01550-06167	BOLT	2	
15	01550-08257	BOLT	2	
16	08310-00067	NUT	1	
17	08321-01067	WASHER, LOCK	1	
18	36617-94L00	BRACKET, HARNESS	1	
19	01550-0616C	BOLT	1	

DF25AT P01
DF30AT P01

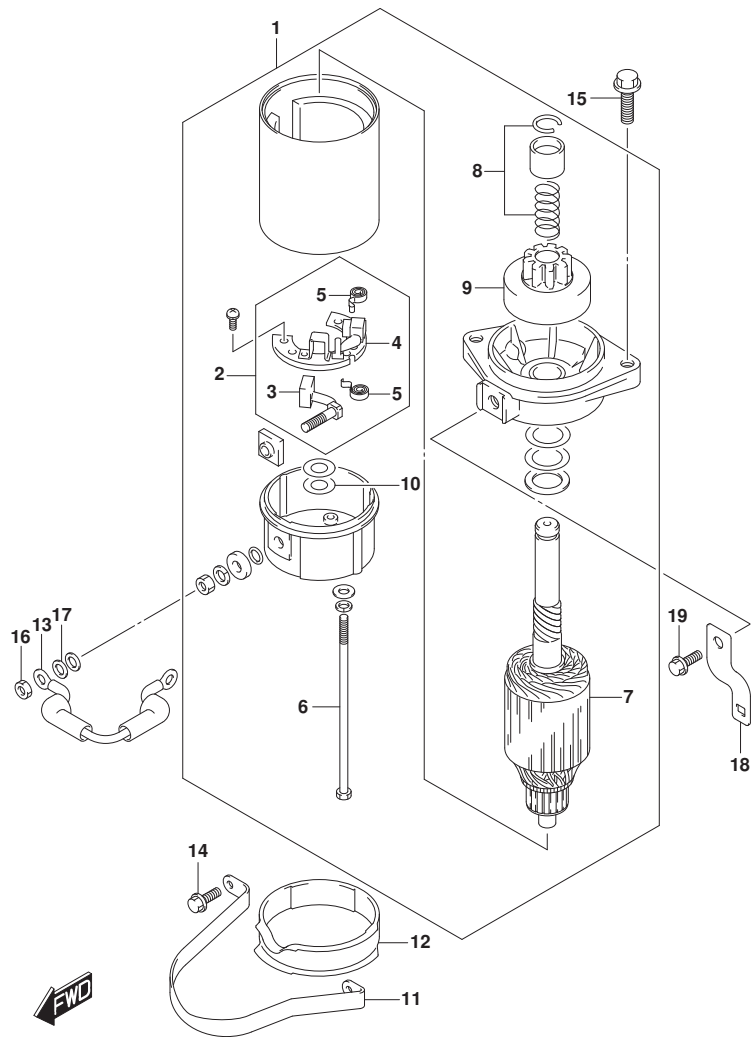


FIG.303A

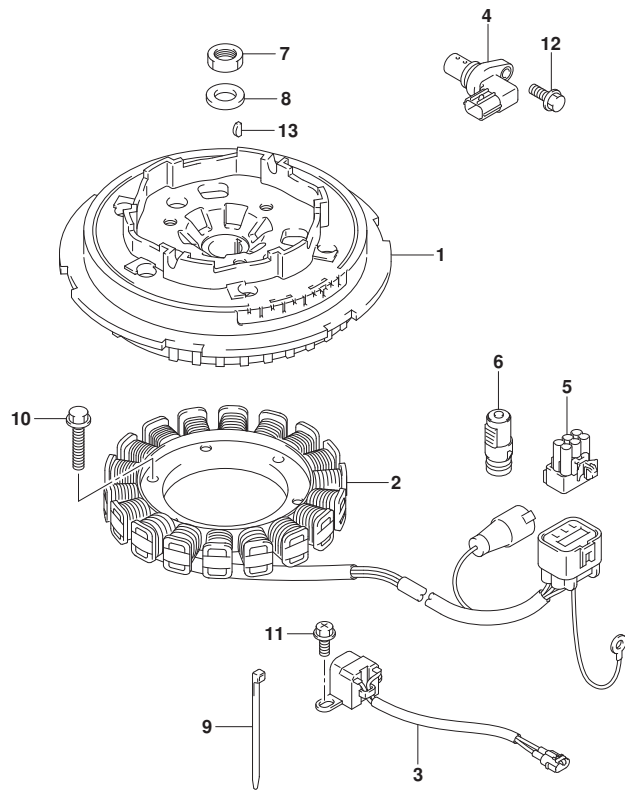


FIG.303A (1-D-3) MAGNETO (MANUAL STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32102-94L00	FLYWHEEL, MAGNETO	1	
2	32120-94L00	COIL, STATOR	1	
3	32160-94L00	COIL, IGNITION TIMING	1	
4	33220-64L00	SENSOR ASSY, POSITION	1	
5	36690-94L00	CONNECTOR ASSY, DUMMY	1	
6	36690-94L10	CONNECTOR ASSY, DUMMY	1	
7	09140-14008	NUT	1	
8	09160-15057	WASHER (15X27X4)	1	
9	09407-14407	CLAMP (L:145)	1	
10	01547-0625A	BOLT	3	
11	01550-0512C	BOLT	2	
12	01550-0616C	BOLT	1	
13	08341-31039	KEY	1	

DF25A P01
DF30A P40
DF30AQ P01



FIG.303B

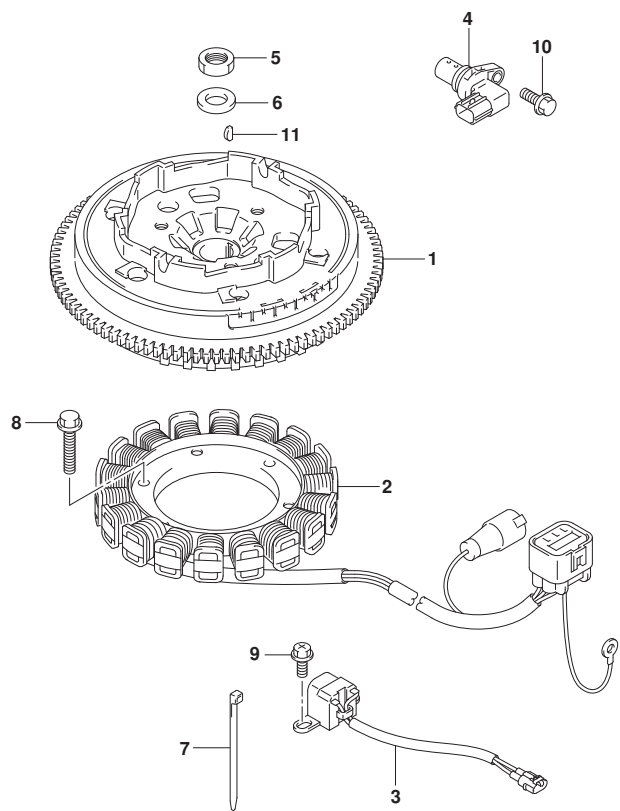


FIG.303B (1-D-4) MAGNETO (ELECTRIC STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32102-94L10	FLYWHEEL, MAGNETO	1	
2	32120-94L00	COIL, STATOR	1	
3	32160-94L00	COIL, IGNITION TIMING	1	
4	33220-64L00	SENSOR ASSY, POSITION	1	
5	09140-14008	NUT	1	
6	09160-15057	WASHER (15X27X4)	1	
7	09407-14407	CLAMP (L:145)	1	
8	01547-0625A	BOLT	3	
9	01550-0512C	BOLT	2	
10	01550-0616C	BOLT	1	
11	08341-31039	KEY	1	

- DF25A P01
- DF25AR P01
- DF25AT P01
- DF25ATH P01
- DF30A P40
- DF30AR P01
- DF30AT P01
- DF30ATH P01
- DF30AQ P01



FIG.310A

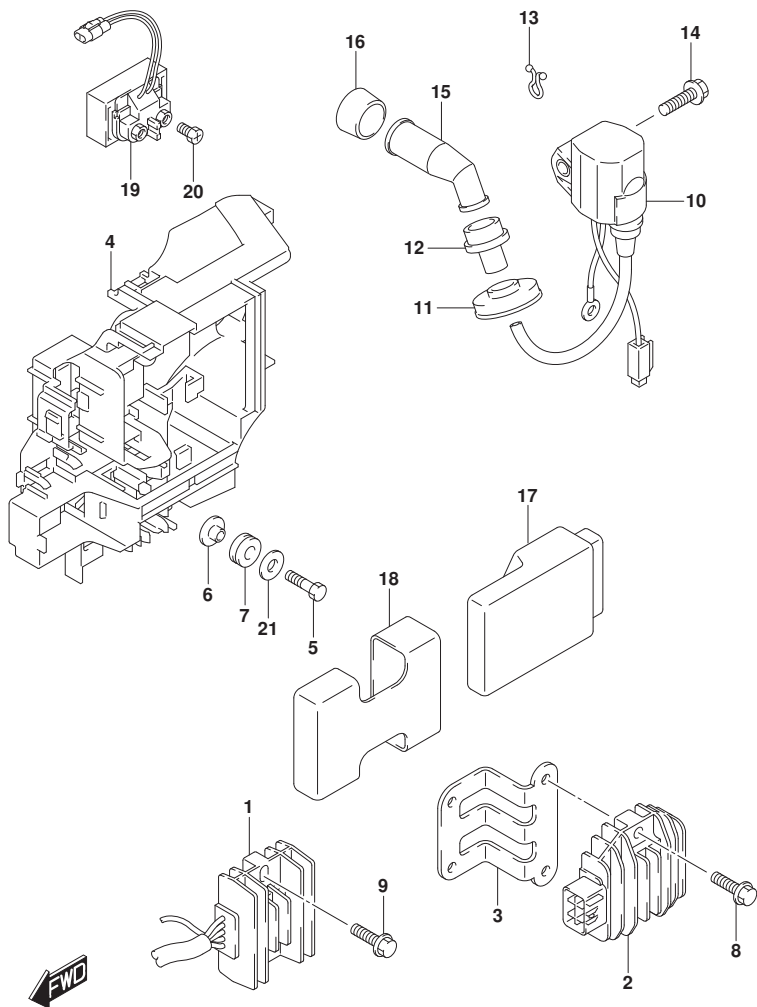


FIG.310A (1-D-5) RECTIFIER/IGNITION COIL (DF25A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-94L00	RECTIFIER & REGULATOR ASSY	1	
2	32800-88L01	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
3	32815-94L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
4	32890-94L00	HOLDER, ELECTRIC PARTS	1	
5	01550-06207	BOLT	3	
6	09169-06063	WASHER	3	
7	09320-08051	CUSHION	3	
8	01550-0620C	BOLT	2	W/ELECTRIC STARTER
9	01550-06257	BOLT	2	
10	33410-94L00	COIL, IGNITION	3	
11	33446-94L00	PROTECTOR, HIGH TENSION CORD	3	
12	33542-16H00	SEAL, HIGH TENSION CORD	3	
13	09408-00020	CLIP	2	
14	01550-06207	BOLT	3	
15	33510-16H10	CAP ASSY, SPARK PLUG	3	
16	33541-16H00	SEAL, SPARK PLUG	3	
17	33920-94L60	UNIT, ENGINE CONTROL	1	
18	33925-94L00	CUSHION, ENGINE CONTROL UNIT	1	
19	31800-94L00	RELAY ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
20	09128-06013	SCREW (6X8)	2	W/ELECTRIC STARTER
21	08322-01067	WASHER	3	

DF25A P01

FIG.310B

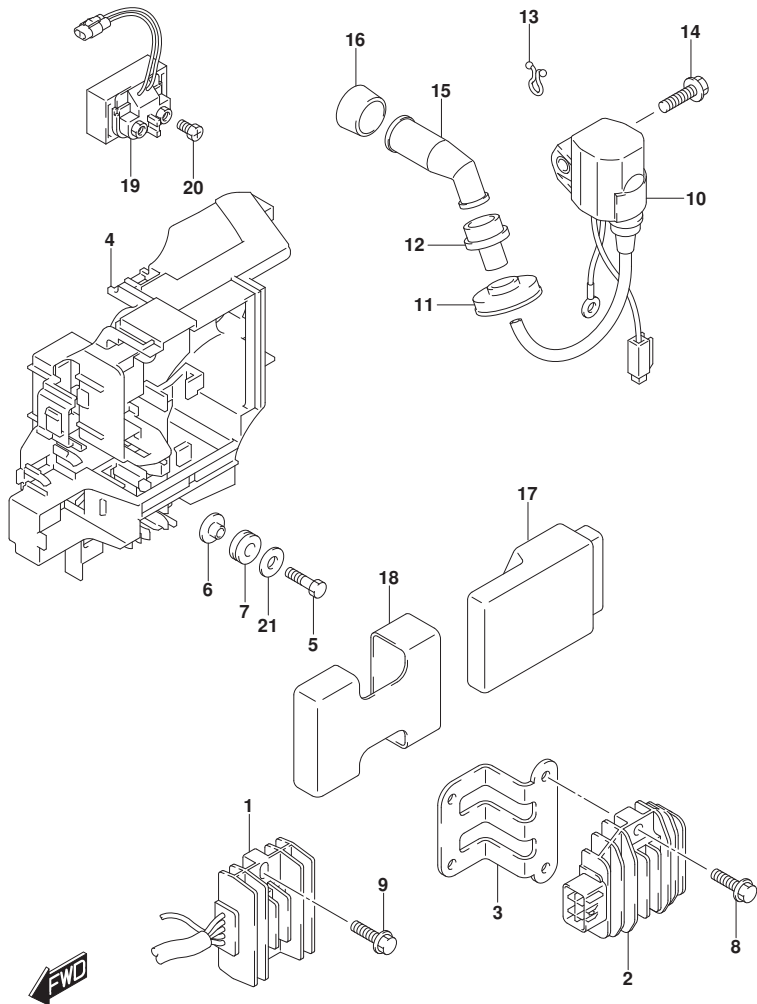


FIG.310B (1-D-6) RECTIFIER/IGNITION COIL (DF25AR)(DF25AT)(DF25ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-94L00	RECTIFIER & REGULATOR ASSY	1	
2	32800-88L01	RECTIFIER & REGULATOR ASSY	1	
3	32815-94L00	BRACKET, RECTIFIER	1	
4	32890-94L00	HOLDER, ELECTRIC PARTS	1	
5	01550-06207	BOLT	3	
6	09169-06063	WASHER	3	
7	09320-08051	CUSHION	3	
8	01550-0620C	BOLT	2	
9	01550-06257	BOLT	2	
10	33410-94L00	COIL, IGNITION	3	
11	33446-94L00	PROTECTOR, HIGH TENSION CORD	3	
12	33542-16H00	SEAL, HIGH TENSION CORD	3	
13	09408-00020	CLIP	2	
14	01550-06207	BOLT	3	
15	33510-16H10	CAP ASSY, SPARK PLUG	3	
16	33541-16H00	SEAL, SPARK PLUG	3	
17	33920-94L60	UNIT, ENGINE CONTROL	1	
18	33925-94L00	CUSHION, ENGINE CONTROL UNIT	1	
19	31800-94L00	RELAY ASSY, STARTER MOTOR	1	
20	09128-06013	SCREW (6X8)	2	
21	08322-01067	WASHER	3	

DF25AR P01
DF25AT P01
DF25ATH P01

FIG.310C

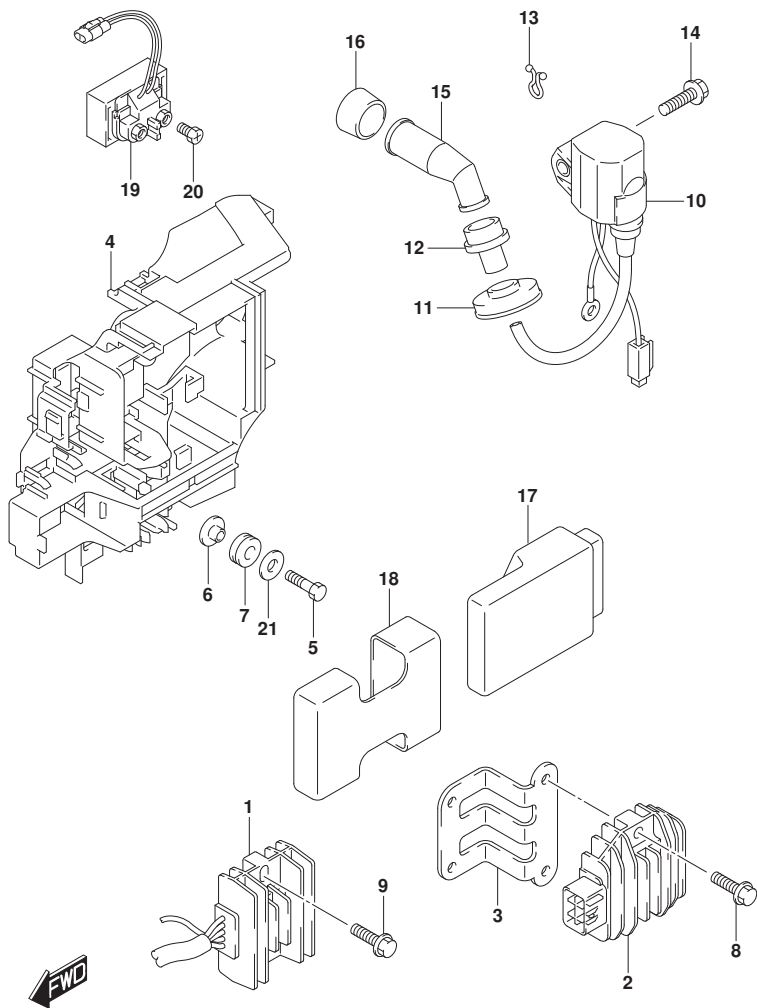


FIG.310C (1-D-7) RECTIFIER/IGNITION COIL (DF30A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-94L00	RECTIFIER & REGULATOR ASSY	1	
2	32800-88L01	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
3	32815-94L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
4	32890-94L00	HOLDER, ELECTRIC PARTS	1	
5	01550-06207	BOLT	3	
6	09169-06063	WASHER	3	
7	09320-08051	CUSHION	3	
8	01550-0620C	BOLT	2	W/ELECTRIC STARTER
9	01550-06257	BOLT	2	
10	33410-94L00	COIL, IGNITION	3	
11	33446-94L00	PROTECTOR, HIGH TENSION CORD	3	
12	33542-16H00	SEAL, HIGH TENSION CORD	3	
13	09408-00020	CLIP	2	
14	01550-06207	BOLT	3	
15	33510-16H10	CAP ASSY, SPARK PLUG	3	
16	33541-16H00	SEAL, SPARK PLUG	3	
17	33920-94L80	UNIT, ENGINE CONTROL	1	
18	33925-94L00	CUSHION, ENGINE CONTROL UNIT	1	
19	31800-94L00	RELAY ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
20	09128-06013	SCREW (6X8)	2	W/ELECTRIC STARTER
21	08322-01067	WASHER	3	

DF30A P40

FIG.310D

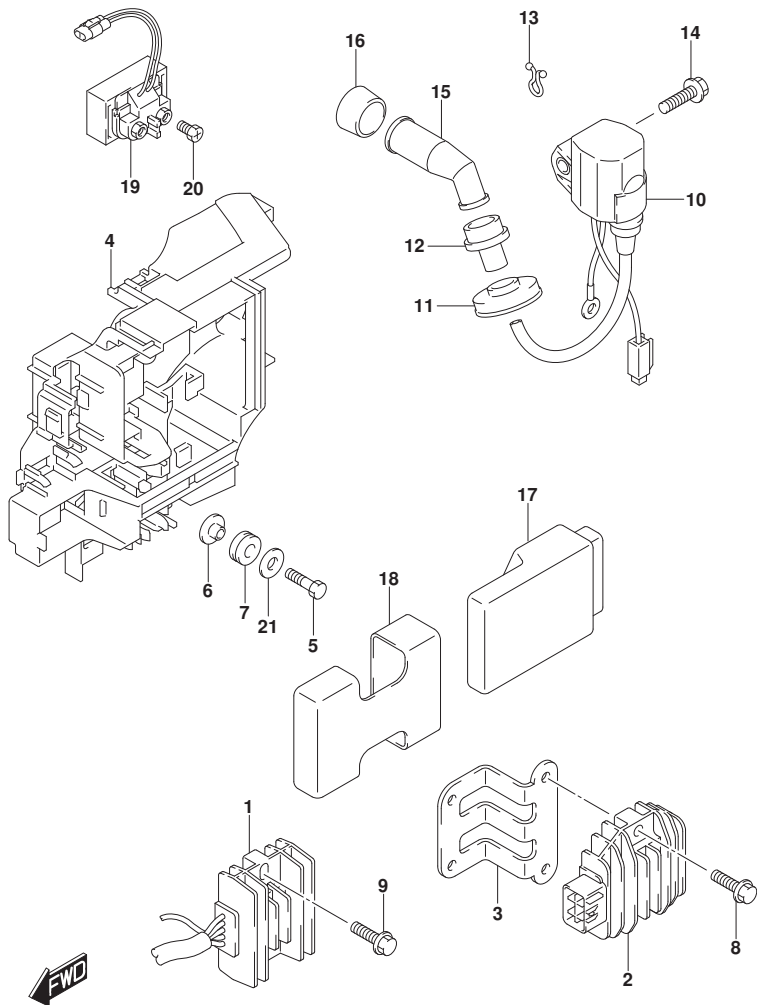


FIG.310D (1-D-8) RECTIFIER/IGNITION COIL (DF30AR)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-94L00	RECTIFIER & REGULATOR ASSY	1	
2	32800-88L01	RECTIFIER & REGULATOR ASSY	1	
3	32815-94L00	BRACKET, RECTIFIER	1	
4	32890-94L00	HOLDER, ELECTRIC PARTS	1	
5	01550-06207	BOLT	3	
6	09169-06063	WASHER	3	
7	09320-08051	CUSHION	3	
8	01550-0620C	BOLT	2	
9	01550-06257	BOLT	2	
10	33410-94L00	COIL, IGNITION	3	
11	33446-94L00	PROTECTOR, HIGH TENSION CORD	3	
12	33542-16H00	SEAL, HIGH TENSION CORD	3	
13	09408-00020	CLIP	2	
14	01550-06207	BOLT	3	
15	33510-16H10	CAP ASSY, SPARK PLUG	3	
16	33541-16H00	SEAL, SPARK PLUG	3	
17	33920-94L70	UNIT, ENGINE CONTROL	1	
18	33925-94L00	CUSHION, ENGINE CONTROL UNIT	1	
19	31800-94L00	RELAY ASSY, STARTER MOTOR	1	
20	09128-06013	SCREW (6X8)	2	
21	08322-01067	WASHER	3	

DF30AR P01
DF30AT P01
DF30ATH P01

FIG.310E

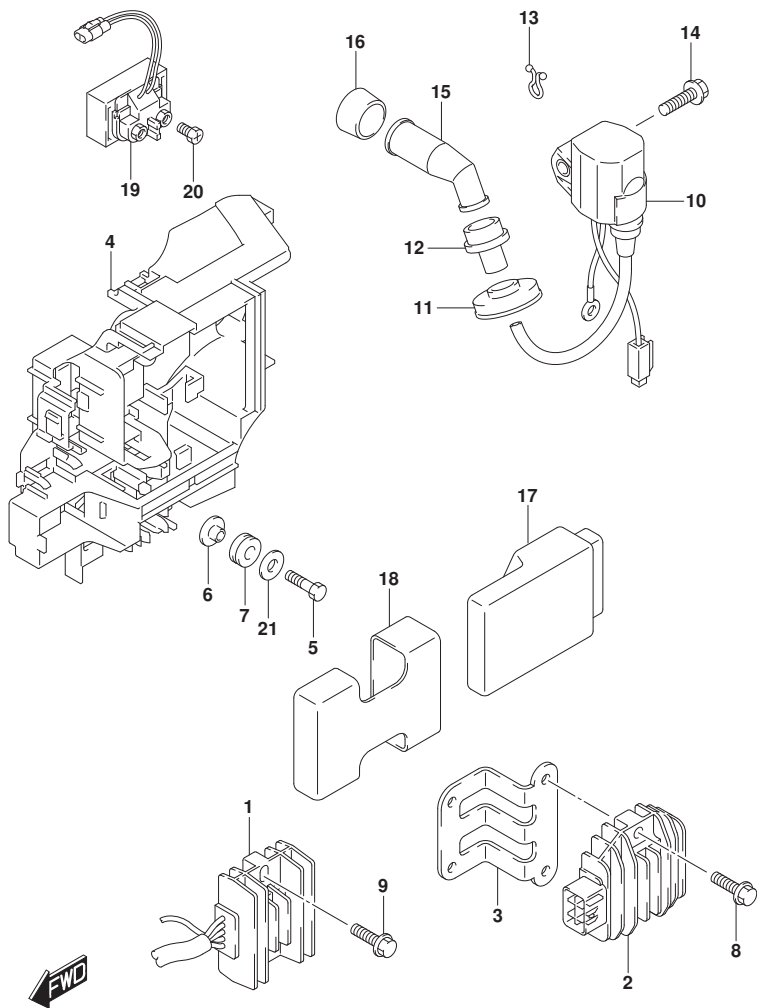


FIG.310E (1-D-9) RECTIFIER/IGNITION COIL (DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-94L00	RECTIFIER & REGULATOR ASSY	1	
2	32800-88L01	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
3	32815-94L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
4	32890-94L00	HOLDER, ELECTRIC PARTS	1	
5	01550-06207	BOLT	3	
6	09169-06063	WASHER	3	
7	09320-08051	CUSHION	3	
8	01550-0620C	BOLT	2	W/ELECTRIC STARTER
9	01550-06257	BOLT	2	
10	33410-94L00	COIL, IGNITION	3	
11	33446-94L00	PROTECTOR, HIGH TENSION CORD	3	
12	33542-16H00	SEAL, HIGH TENSION CORD	3	
13	09408-00020	CLIP	2	
14	01550-06207	BOLT	3	
15	33510-16H10	CAP ASSY, SPARK PLUG	3	
16	33541-16H00	SEAL, SPARK PLUG	3	
17	33920-94L70	UNIT, ENGINE CONTROL	1	
18	33925-94L00	CUSHION, ENGINE CONTROL UNIT	1	
19	31800-94L00	RELAY ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
20	09128-06013	SCREW (6X8)	2	W/ELECTRIC STARTER
21	08322-01067	WASHER	3	

DF30AQ P01

FIG.322A


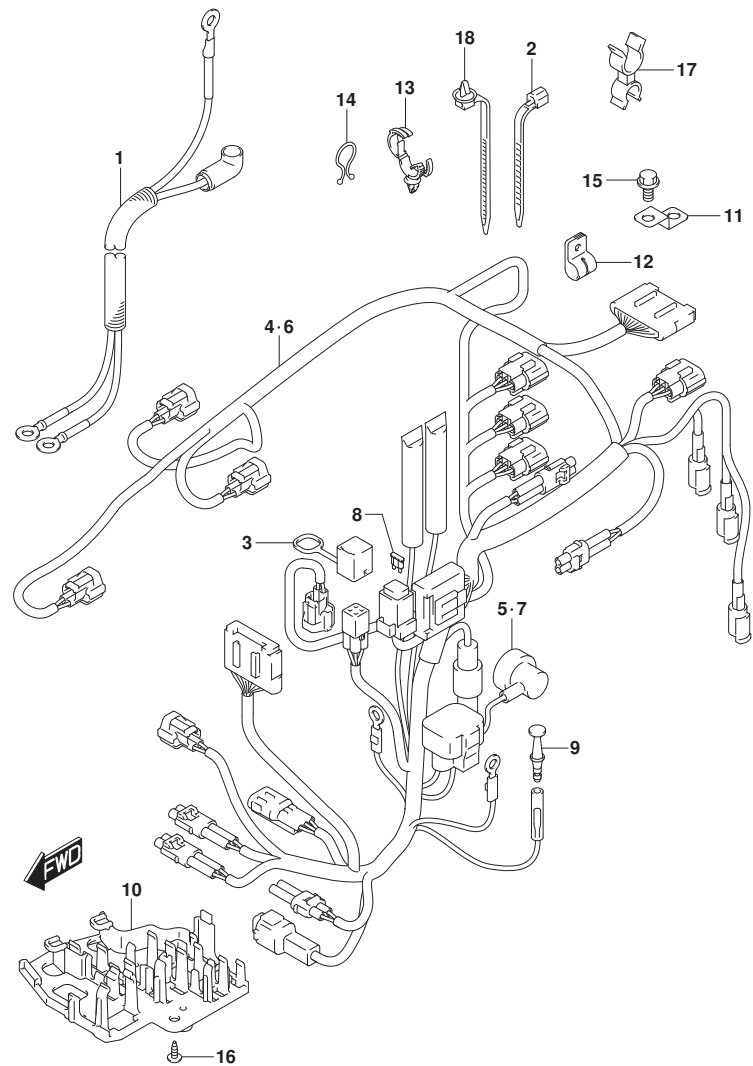


FIG.322A (1-D-10) HARNESS (DF25A)(DF30A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-94L01	CABLE, STARTER	1	W/ELECTRIC STARTER
2	09407-18402	CLAMP (L:165)	1	W/ELECTRIC STARTER
3	33634-94L00	CAP, SERVICE CONNECTOR	1	
4	36610-94L01	HARNESS ASSY, WIRING	1	W/MANUAL STARTER
5	36618-43410	.CAP, OIL PRESSURE SWITCH	1	W/MANUAL STARTER
6	36610-94L11	HARNESS ASSY, WIRING	1	W/ELECTRIC STARTER
7	36618-43410	.CAP, OIL PRESSURE SWITCH	1	W/ELECTRIC STARTER
8	09481-30501	.FUSE (30A)	1	W/ELECTRIC STARTER
9	36615-96300	TERMINAL	1	
10	36616-94L00	HOLDER, CONNECTOR	1	
11	36617-93J10	BRACKET, HARNESS	1	
12	09403-08404	CLAMP	1	
13	09403-20308	CLAMP	1	
14	09408-00008	CLIP (ID:20)	3	
15	01550-0612C	BOLT	1	
16	03542-05169	SCREW	2	
17	09408-00054	CLAMP	1	
18	36991-94L00	CLAMP, HARNESS	1	

DF25A P01
DF30A P40
DF30AQ P01

FIG.322B

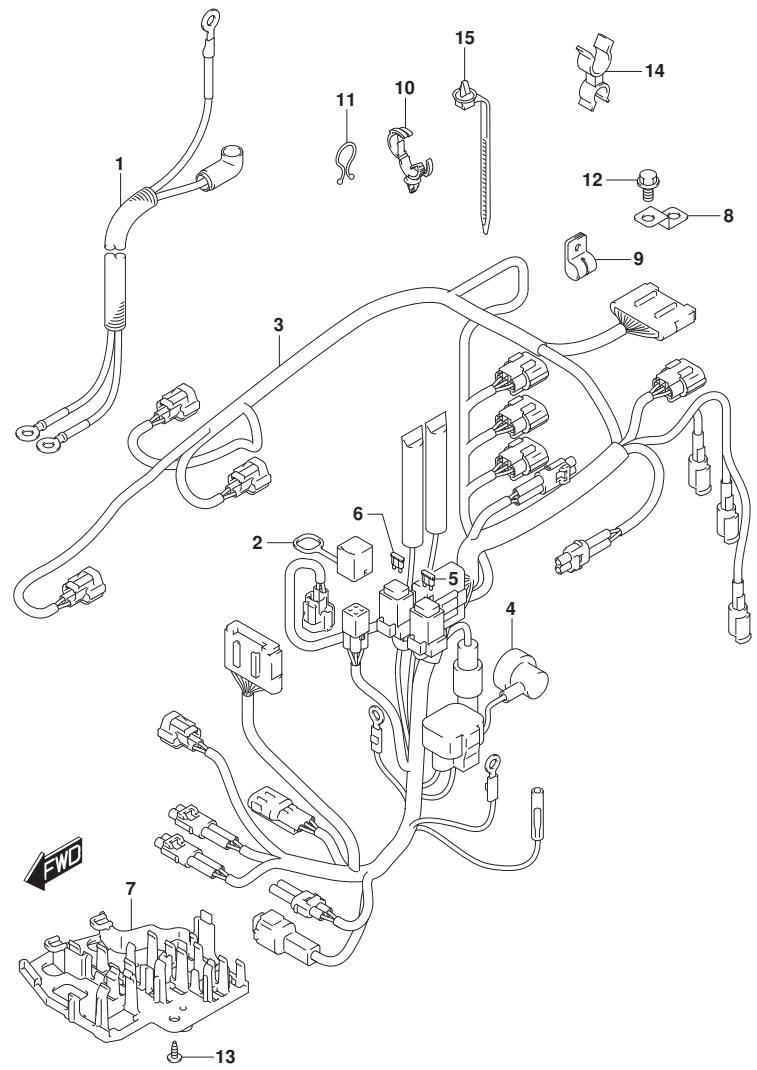


DF25A_30A_P01_018_322B
HARNESS

FIG.322B (1-D-11) HARNESS (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-94L01	CABLE, STARTER	1	
2	33634-94L00	CAP, SERVICE CONNECTOR	1	
3	36610-94L21	HARNESS ASSY, WIRING	1	
4	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
5	09481-10501	.FUSE (10A)	1	
6	09481-30501	.FUSE (30A)	1	
7	36616-94L00	HOLDER, CONNECTOR	1	
8	36617-93J10	BRACKET, HARNESS	1	
9	09403-08404	CLAMP	1	
10	09403-20308	CLAMP	1	
11	09408-00008	CLIP (ID:20)	3	
12	01550-0612C	BOLT	1	
13	03542-05169	SCREW	2	
14	09408-00054	CLAMP	1	
15	36991-94L00	CLAMP, HARNESS	1	

DF25AR P01
DF30AR P01

FIG.322C

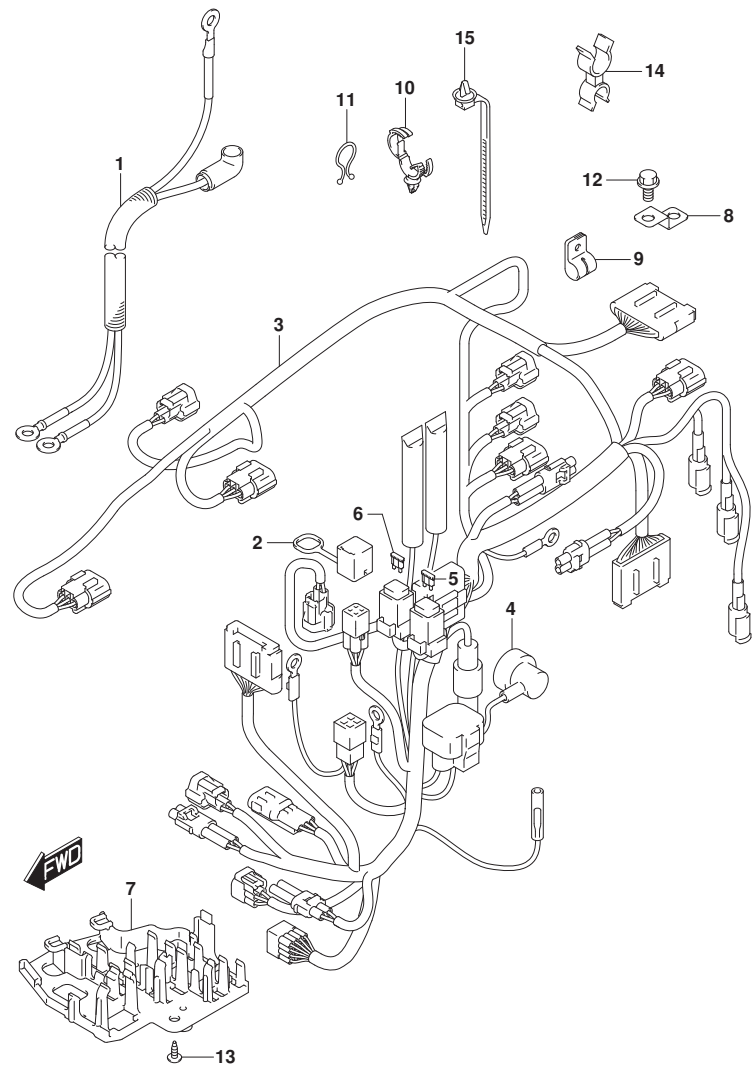


DF25A_30A_P01_018_322C
HARNESS

FIG.322C (1-D-12) HARNESS (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-94L01	CABLE, STARTER	1	
2	33634-94L00	CAP, SERVICE CONNECTOR	1	
3	36610-94L42	HARNESS ASSY, WIRING	1	
4	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
5	09481-10501	.FUSE (10A)	1	
6	09481-30501	.FUSE (30A)	1	
7	36616-94L00	HOLDER, CONNECTOR	1	
8	36617-93J10	BRACKET, HARNESS	1	
9	09403-08404	CLAMP	1	
10	09403-20308	CLAMP	1	
11	09408-00008	CLIP (ID:20)	3	
12	01550-0612C	BOLT	1	
13	03542-05169	SCREW	2	
14	09408-00054	CLAMP	1	
15	36991-94L00	CLAMP, HARNESS	1	

DF25AT P01
DF30AT P01

FIG.322D

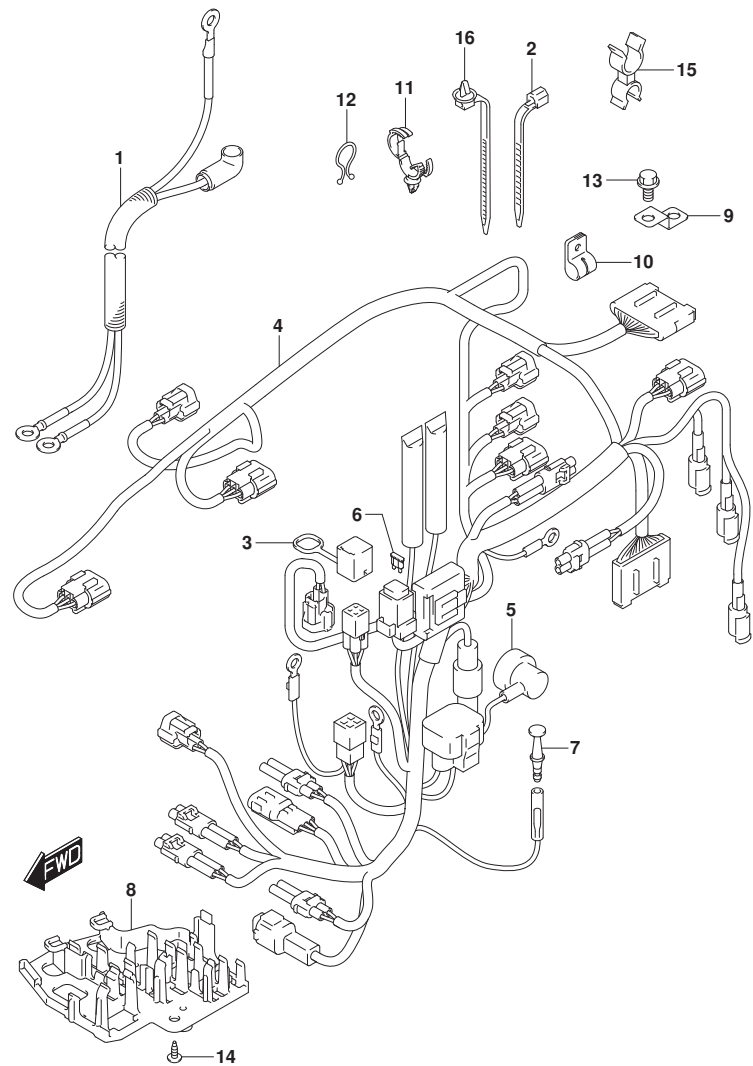

DF25A_30A_P01_018_322D
HARNESS

FIG.322D (1-D-13) HARNESS (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-94L01	CABLE, STARTER	1	
2	09407-18402	CLAMP (L:165)	1	
3	33634-94L00	CAP, SERVICE CONNECTOR	1	
4	36610-94L32	HARNESS ASSY, WIRING	1	
5	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
6	09481-30501	.FUSE (30A)	1	
7	36615-96300	TERMINAL	1	
8	36616-94L00	HOLDER, CONNECTOR	1	
9	36617-93J10	BRACKET, HARNESS	1	
10	09403-08404	CLAMP	1	
11	09403-20308	CLAMP	1	
12	09408-00008	CLIP (ID:20)	3	
13	01550-0612C	BOLT	1	
14	03542-05169	SCREW	2	
15	09408-00054	CLAMP	1	
16	36991-94L00	CLAMP, HARNESS	1	

DF25ATH P01
DF30ATH P01

FIG.327A

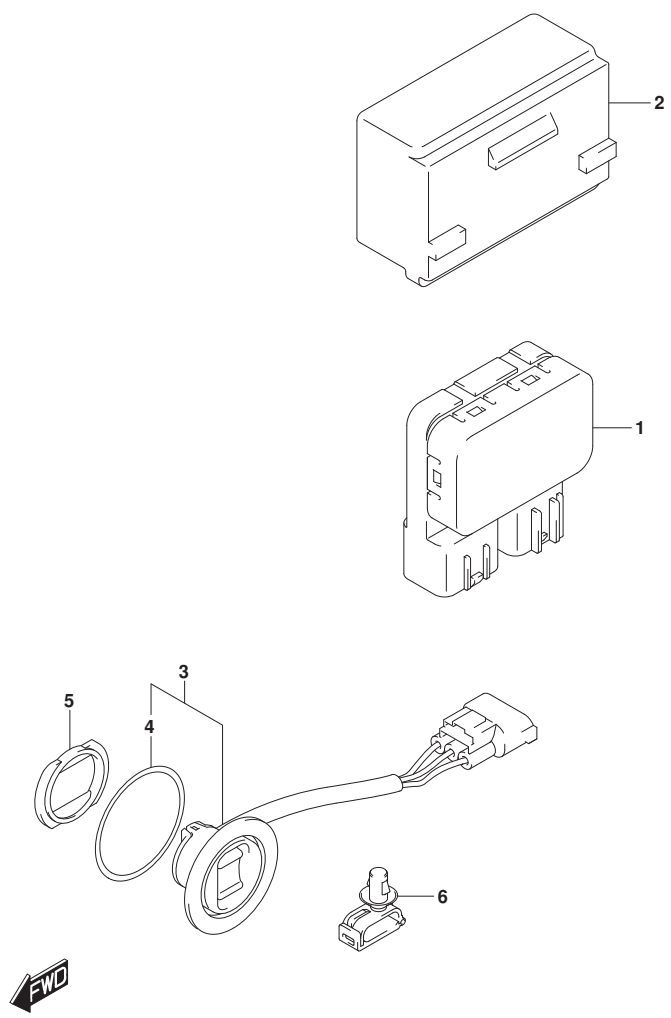


FIG.327A (1-D-14) PTT SWITCH (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38410-93J21	RELAY ASSY, PTT	1	
2	38415-94L00	HOLDER, PTT RELAY	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-07340	CLAMP	1	

DF25AT P01
DF30AT P01

FIG.327B

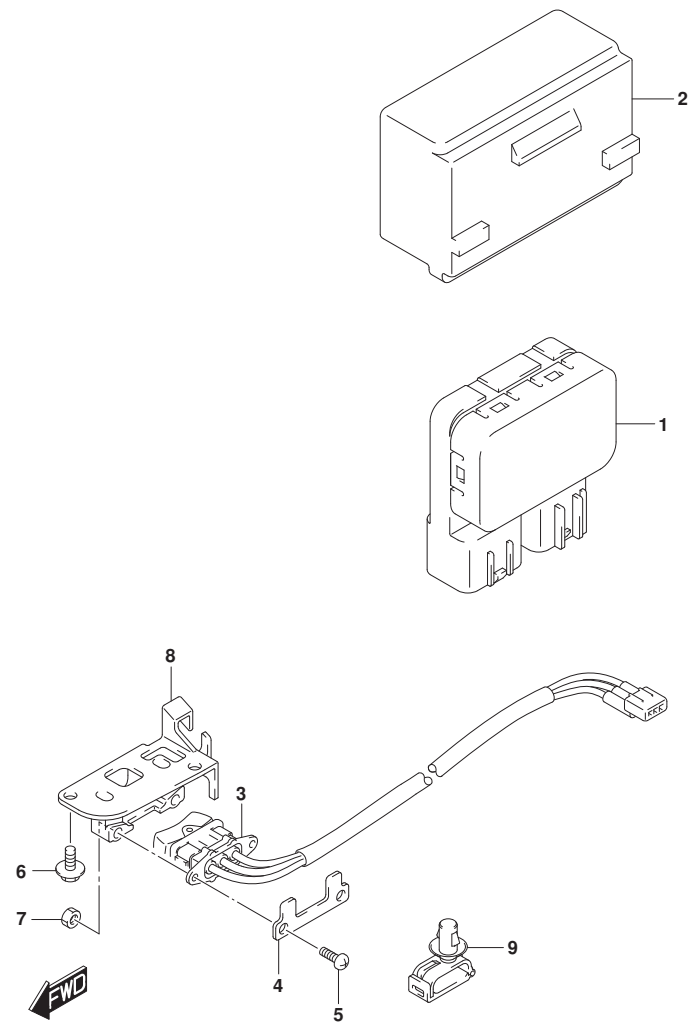


FIG.327B (1-D-15) PTT SWITCH (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38410-93J21	RELAY ASSY, PTT	1	
2	38415-94L00	HOLDER, PTT RELAY	1	
3	37850-94L01	SWITCH ASSY, PTT	1	
4	37852-94JA0	PLATE, PTT SWITCH	1	
5	09125-05046	SCREW (5X12)	2	
6	29103-93J00	BOLT, PTT SW BRACKET (6X12)	2	
7	09140-05005	NUT	2	
8	37851-89L00	HOLDER, PTT SWITCH	1	
9	09403-07340	CLAMP	1	

DF25ATH P01
DF30ATH P01

FIG.334A

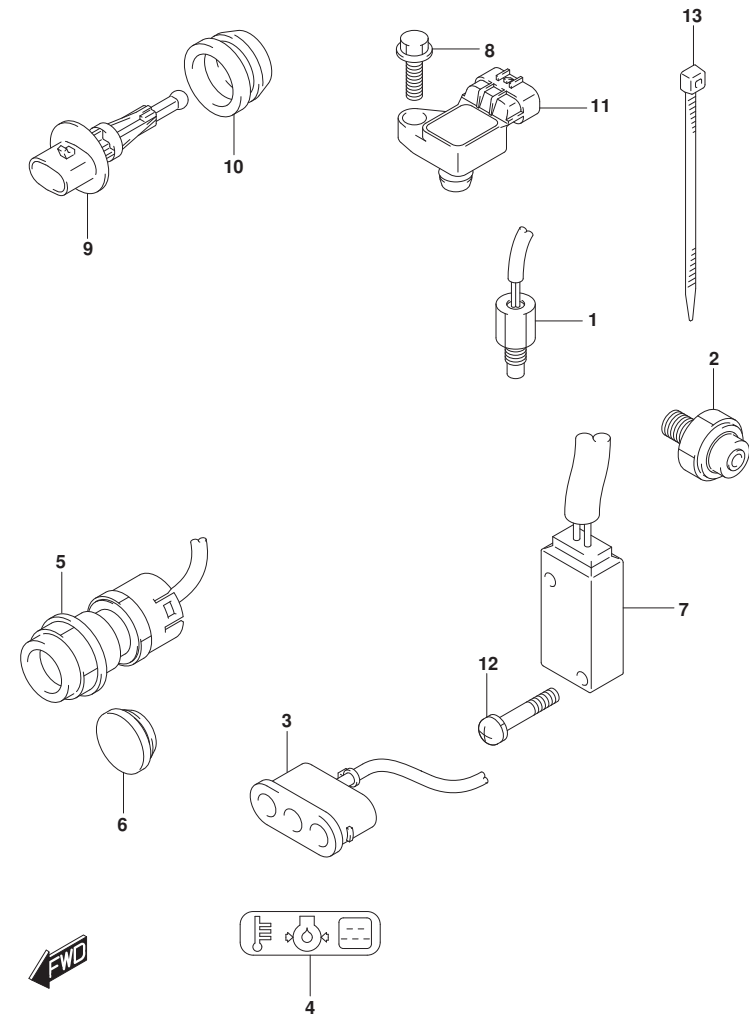


FIG.334A (1-E-2) SENSOR/SWITCH (DF25A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-94L00	INDICATOR, WARNING	1	
4	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
5	37161-89L02	SWITCH ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
6	37163-89L00	PLUG, STARTING SWITCH HOLE	1	W/MANUAL STARTER
7	37721-94L00	SWITCH ASSY, NEUTRAL	1	
8	01550-0620C	BOLT	1	
9	13650-52G00	SENSOR, INLET AIR TEMP	1	
10	13655-87J00	GROMMET, AIR TEMP SENSOR	1	
11	18590-58M00	SENSOR, PRESSURE	1	
12	09137-03008	SCREW (3X18)	2	
13	09407-14407	CLAMP (L:145)	1	

DF25A P01
DF30AQ P01

FIG.334B

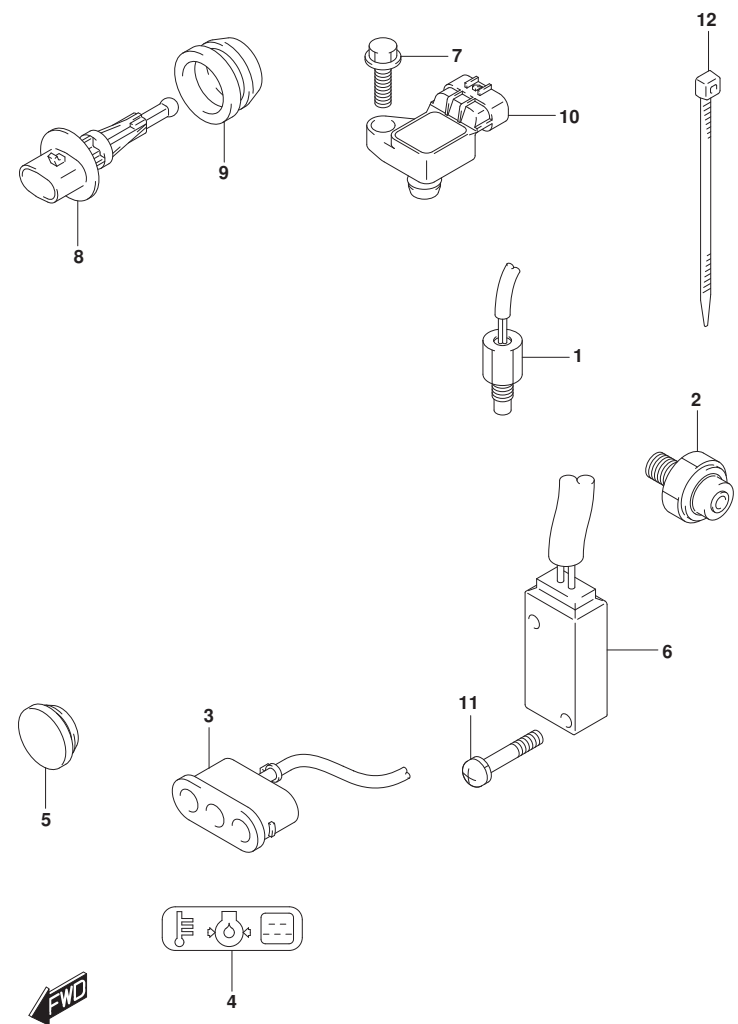


FIG.334B (1-E-3) SENSOR/SWITCH (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-94L00	INDICATOR, WARNING	1	
4	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
5	37163-89L00	PLUG, STARTING SWITCH HOLE	1	
6	37721-94L00	SWITCH ASSY, NEUTRAL	1	
7	01550-0620C	BOLT	1	
8	13650-52G00	SENSOR, INLET AIR TEMP	1	
9	13655-87J00	GROMMET, AIR TEMP SENSOR	1	
10	18590-58M00	SENSOR, PRESSURE	1	
11	09137-03008	SCREW (3X18)	2	
12	09407-14407	CLAMP (L:145)	1	

DF25AR P01
DF30AR P01

FIG.334C


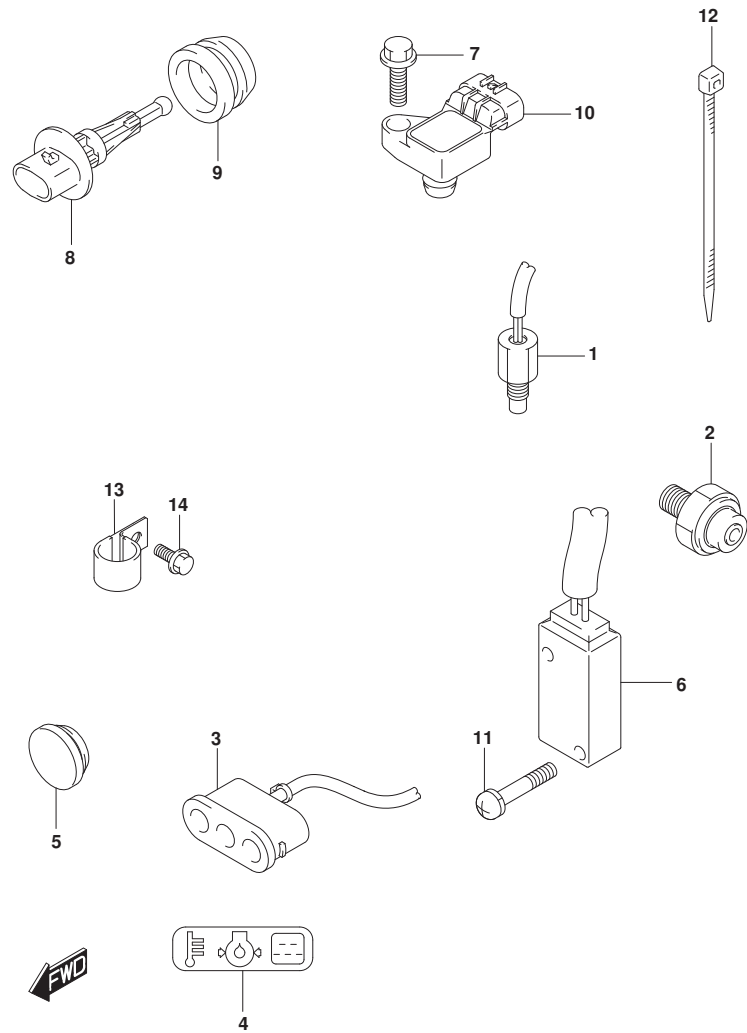


FIG.334C (1-E-4) SENSOR/SWITCH (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-94L00	INDICATOR, WARNING	1	
4-1	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
4-2	36367-89L00-Y5S	LABEL, WARNING (WHITE)	1	
5	37163-89L00	PLUG, STARTING SWITCH HOLE	1	
6	37721-94L00	SWITCH ASSY, NEUTRAL	1	
7	01550-0620C	BOLT	1	
8	13650-52G00	SENSOR, INLET AIR TEMP	1	
9	13655-87J00	GROMMET, AIR TEMP SENSOR	1	
10	18590-58M00	SENSOR, PRESSURE	1	
11	09137-03008	SCREW (3X18)	2	
12	09407-14407	CLAMP (L:145)	1	
13	29103-93J00	BOLT (6X12)	1	
14	09403-13408	CLAMP	1	

DF25AT P01
DF30AT P01

FIG.334D (1-E-5) SENSOR/SWITCH (DF25ATH)(DF30ATH)

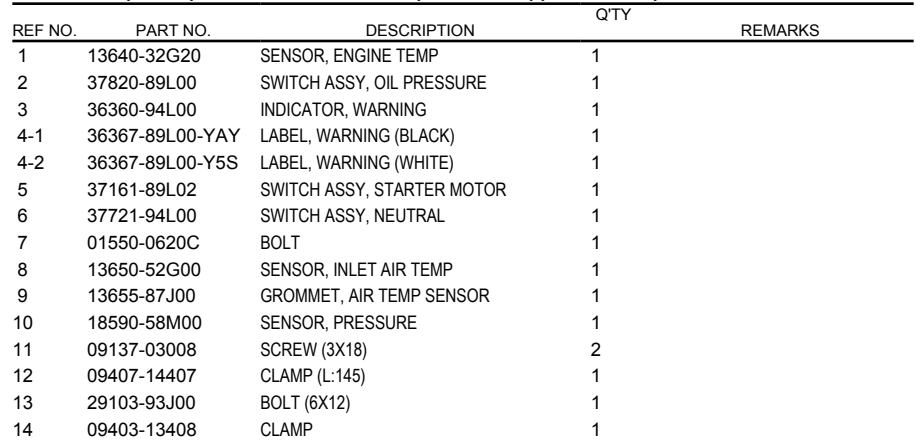

DF25A_30A_P01_018

FIG.334E

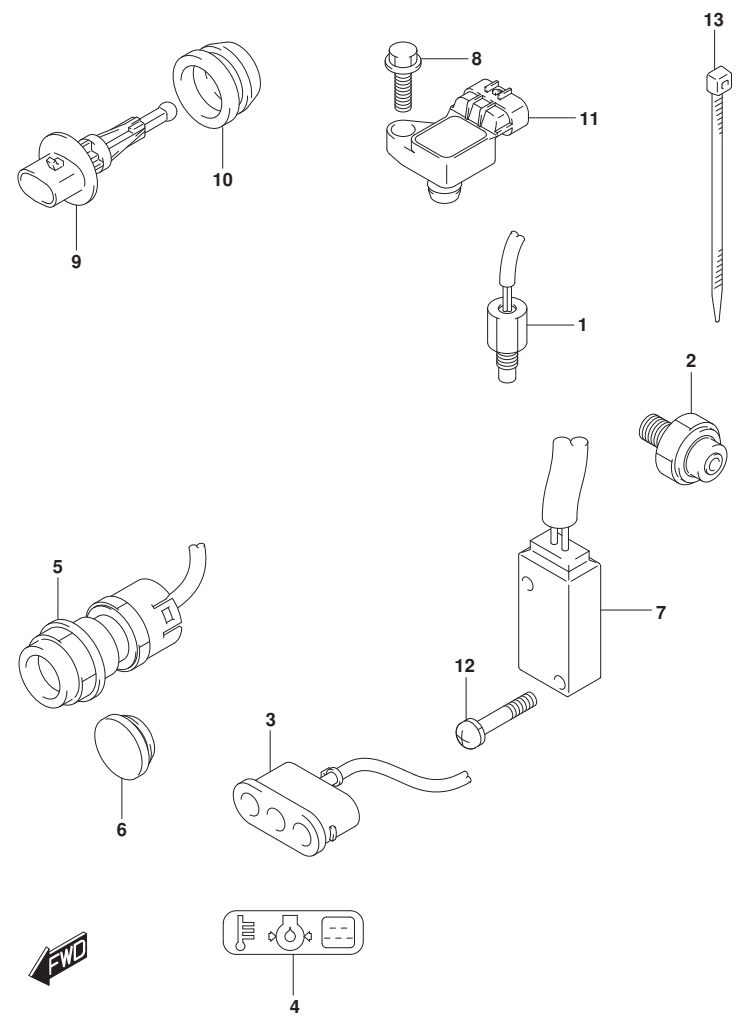


FIG.334E (1-E-6) SENSOR/SWITCH (DF30A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-94L00	INDICATOR, WARNING	1	
4-1	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
4-2	36367-89L00-Y5S	LABEL, WARNING (WHITE)	1	
5	37161-89L02	SWITCH ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
6	37163-89L00	PLUG, STARTING SWITCH HOLE	1	W/MANUAL STARTER
7	37721-94L00	SWITCH ASSY, NEUTRAL	1	
8	01550-0620C	BOLT	1	
9	13650-52G00	SENSOR, INLET AIR TEMP	1	
10	13655-87J00	GROMMET, AIR TEMP SENSOR	1	
11	18590-58M00	SENSOR, PRESSURE	1	
12	09137-03008	SCREW (3X18)	2	
13	09407-14407	CLAMP (L:145)	1	

DF30A P40

FIG.335A

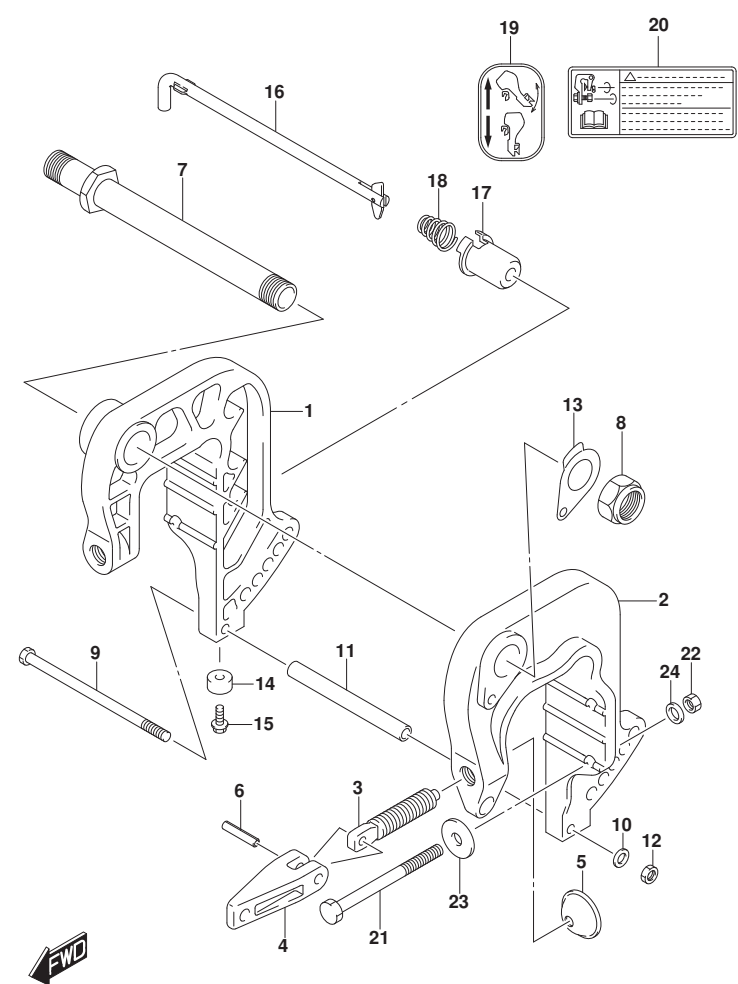


FIG.335A (1-E-7) CLAMP BRACKET (DF25A)(DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-94L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	
2	41121-94L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	
3	41211-94L00	SCREW, CLAMP	2	
4	41212-91J00	HANDLE, CLAMP	2	
5	41213-94J01	PLATE, CLAMP	2	
6	09205-06021	PIN, SPRING (6X25)	2	
7	41130-91L01	SHAFT, CLAMP BRACKET	1	
8	09159-22006	NUT	1	
9	09100-06165	BOLT (6X180)	1	
10	09160-06082	WASHER (6.5X13X1.0)	1	
11	09180-06342	SPACER (6.1X9X138)	1	
12	29141-93J00	NUT	1	
13	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
14-1	55321-87J01	ANODE, PROTECTION	2	
14-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
15	09103-06281	BOLT (6X14)	2	
16	45420-94L00	PIN, TILT LOCK	1	
17	45425-94J01	STOPPER, TILT LOCK PIN	1	
18	59442-94L00	SPRING	1	
19	45269-89L00	MARK, REVERSE LOCK	1	
20	69911-91J50	MARK, CLAMP BRACKET	1	
21	09100-10309	BOLT (10X110)	2	
22	09159-10050	NUT	2	
23	09160-10139	WASHER (10.5X35X3)	2	
24	09160-10140	WASHER (10.5X18X3)	2	

DF25A P01
DF25AR P01
DF30AR P01

FIG.335B

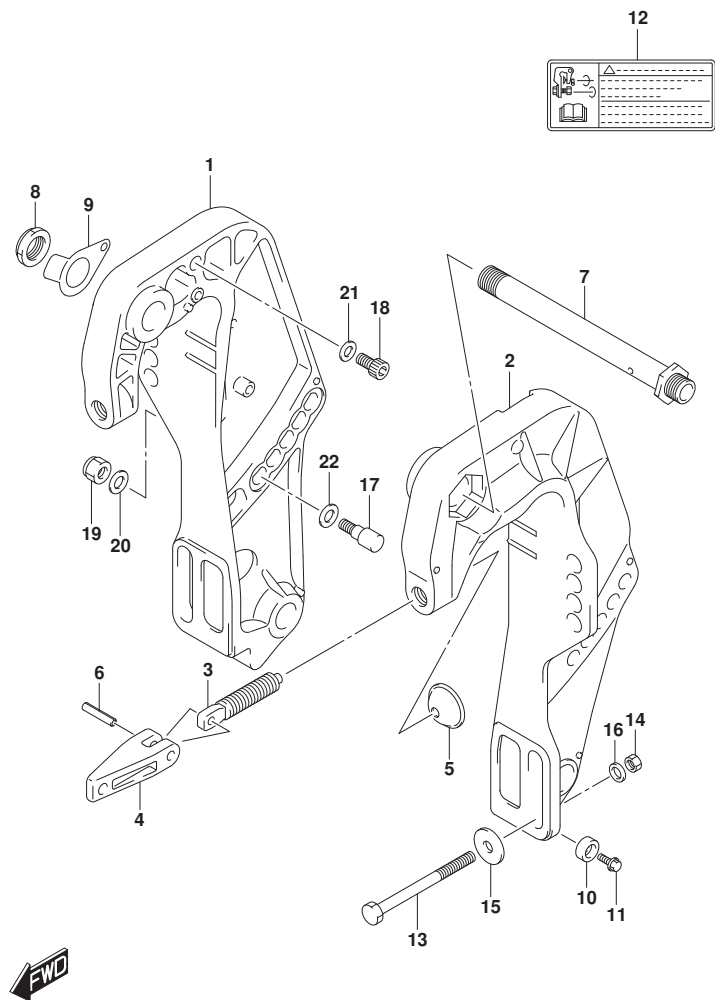


FIG.335B (1-E-8) CLAMP BRACKET (DF25AT)(DF25ATH)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-94LA0-YAY	BRACKET, CLAMP STBD (BLACK)	1	
1-2	41111-94LA0-Y5S	BRACKET, CLAMP STBD (WHITE)	1	
2-1	41121-94LA1-YAY	BRACKET, CLAMP PORT (BLACK)	1	
2-2	41121-94LA1-Y5S	BRACKET, CLAMP PORT (WHITE)	1	
3	41211-94LA0	SCREW, CLAMP	2	
4	41212-91J00	HANDLE, CLAMP	2	
5	41213-94J01	PLATE, CLAMP	2	
6	09205-06021	PIN, SPRING (6X25)	2	
7	41130-94LA0	SHAFT, CLAMP BRACKET	1	
8	09159-22006	NUT	1	
9	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
10-1	55321-87J01	ANODE, PROTECTION	2	
10-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
11	09103-06281	BOLT (6X14)	2	
12	69911-91J50	MARK, CLAMP BRACKET	1	
13	09100-12093	BOLT (12X100)	4	
14	09159-12014	NUT	4	
15	09160-12128	WASHER (12.5X35X3)	4	
16	09160-12126	WASHER (12.5X22X3)	4	
17	45421-94LA0	PIN, TILT LOCK	2	
18	09106-10065	BOLT (10X20)	2	
19	09159-10050	NUT	2	
20	09160-10082	WASHER (10.5X19X2)	2	
21	09160-10082	WASHER (10.5X19X2)	2	
22	09160-12066	WASHER (12.5X22X2.5)	2	

DF25AT P01
DF25ATH P01
DF30AT P01
DF30ATH P01

FIG.335C

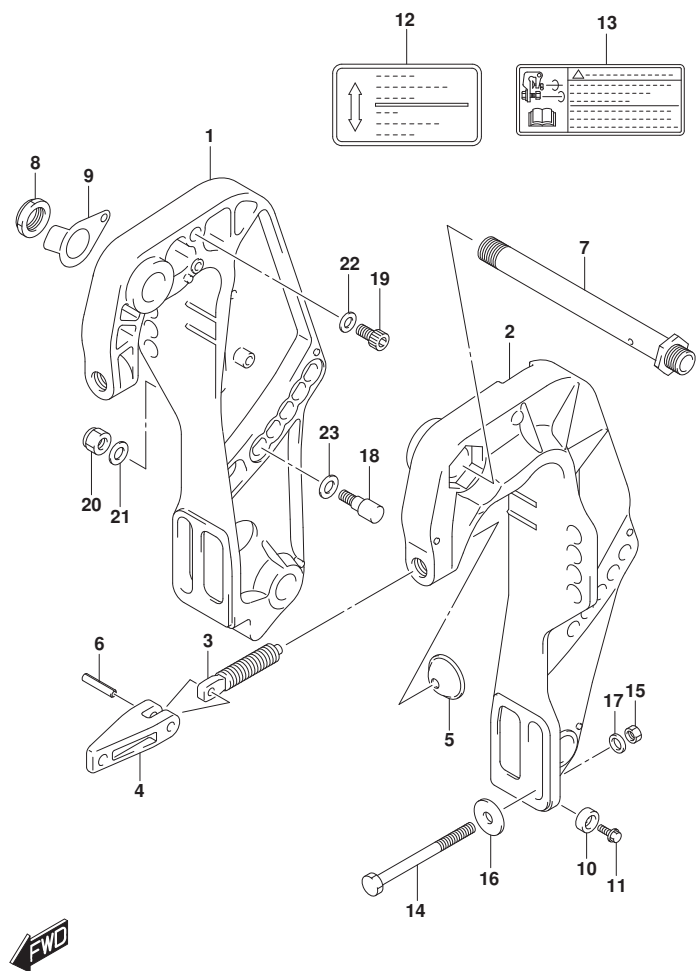


FIG.335C (1-E-9) CLAMP BRACKET (DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-94LA0-YAY	BRACKET, CLAMP STBD (BLACK)	1	
2	41121-94LA1-YAY	BRACKET, CLAMP PORT (BLACK)	1	
3	41211-94LA0	SCREW, CLAMP	2	
4	41212-91J00	HANDLE, CLAMP	2	
5	41213-94J01	PLATE, CLAMP	2	
6	09205-06021	PIN, SPRING (6X25)	2	
7	41130-94LA0	SHAFT, CLAMP BRACKET	1	
8	09159-22006	NUT	1	
9	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
10-1	55321-87J01	ANODE, PROTECTION	2	
10-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
11	09103-06281	BOLT (6X14)	2	
12	43241-87J00	MARK, RELEASE LEVER	1	
13	69911-91J50	MARK, CLAMP BRACKET	1	
14	09100-12093	BOLT (12X100)	4	
15	09159-12014	NUT	4	
16	09160-12128	WASHER (12.5X35X3)	4	
17	09160-12126	WASHER (12.5X22X3)	4	
18	45421-94LA0	PIN, TILT LOCK	2	
19	09106-10065	BOLT (10X20)	2	
20	09159-10050	NUT	2	
21	09160-10082	WASHER (10.5X19X2)	2	
22	09160-10082	WASHER (10.5X19X2)	2	
23	09160-12066	WASHER (12.5X22X2.5)	2	

DF30AQ P01

FIG.335D

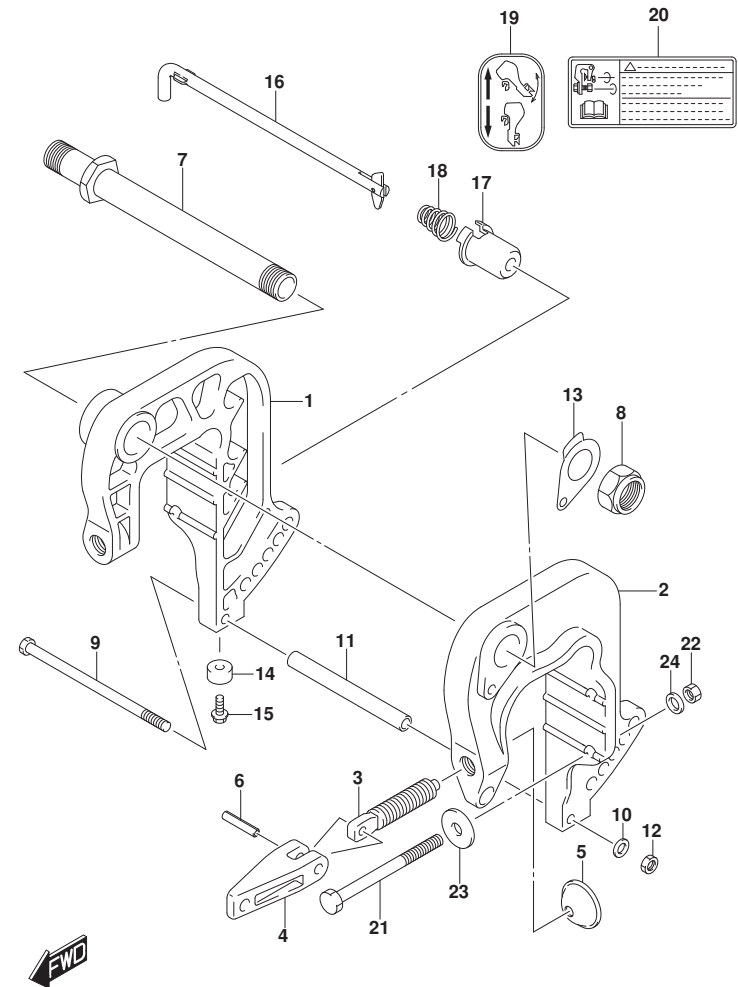


FIG.335D (1-E-10) CLAMP BRACKET (DF30A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-94L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	
1-2	41111-94L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	
2-1	41121-94L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	
2-2	41121-94L00-Y5S	BRACKET, CLAMP PORT (WHITE)	1	
3	41211-94L00	SCREW, CLAMP	2	
4	41212-91J00	HANDLE, CLAMP	2	
5	41213-94J01	PLATE, CLAMP	2	
6	09205-06021	PIN, SPRING (6X25)	2	
7	41130-91L01	SHAFT, CLAMP BRACKET	1	
8	09159-22006	NUT	1	
9	09100-06165	BOLT (6X180)	1	
10	09160-06082	WASHER (6.5X13X1.0)	1	
11	09180-06342	SPACER (6.1X9X138)	1	
12	29141-93J00	NUT	1	
13	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
14-1	55321-87J01	ANODE, PROTECTION	2	
14-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
15	09103-06281	BOLT (6X14)	2	
16	45420-94L00	PIN, TILT LOCK	1	
17	45425-94J01	STOPPER, TILT LOCK PIN	1	
18	59442-94L00	SPRING	1	
19	45269-89L00	MARK, REVERSE LOCK	1	
20	69911-91J50	MARK, CLAMP BRACKET	1	
21	09100-10309	BOLT (10X110)	2	
22	09159-10050	NUT	2	
23	09160-10139	WASHER (10.5X35X3)	2	
24	09160-10140	WASHER (10.5X18X3)	2	

DF30A P40

FIG.336A

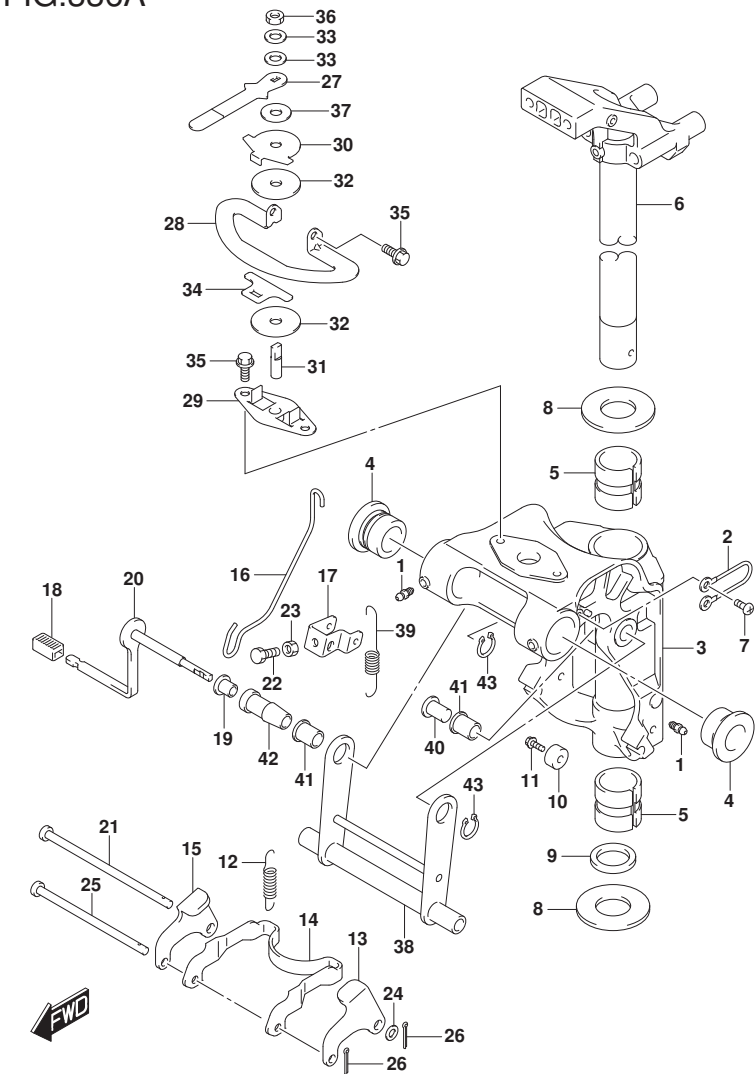


FIG.336A (1-E-11) SWIVEL BRACKET (DF25A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	4	
2	36894-87D00	LEAD (L:165)	1	
3-1	43111-94L00-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
3-2	43111-94L10-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
4	43211-87JL0	BUSH, SWIVEL BRACKET	2	
5	43711-94L00	BUSH, STEERING	2	
6-1	43750-94L00-YAY	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
6-2	43750-94L10-YAY	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
7	09125-06063	SCREW (6X10)	2	
8	09160-30057	WASHER (30.9X50X1.5)	2	
9	09282-30008	SEAL (30.6X43X5)	1	
10-1	55321-87J01	ANODE, PROTECTION	1	W/TRANSOM(L)
10-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
11	09103-06281	BOLT (6X14)	1	W/TRANSOM(L)
12	45211-94L00	SPRING, REVERSE LOCK ARM	2	
13	45221-94L00	LINK, REVERSE LOCK ARM PORT	1	
14	45231-94L00	ARM, REVERSE LOCK	1	
15	45241-94L00	LINK, REVERSE LOCK ARM STBD	1	
16	45252-94L00	LINK, RELEASE LEVER	1	
17	45253-94L00	ARM, RELEASE	1	
18	45255-94L00	RUBBER, RELEASE LEVER	1	
19	45257-94L00	BUSH, RELEASE LEVER	1	
20	45260-94L00	LEVER, RELEASE	1	
21	59211-94L00	PIN, REVERSE LOCK ARM LINK	1	
22	09100-06113	BOLT (6X16)	1	
23	09140-06020	NUT	1	
24	09160-06082	WASHER (6.5X13X1.0)	1	
25	09200-06072	PIN (6X105.5)	1	
26	09204-01002	PIN	2	

FIG.336A

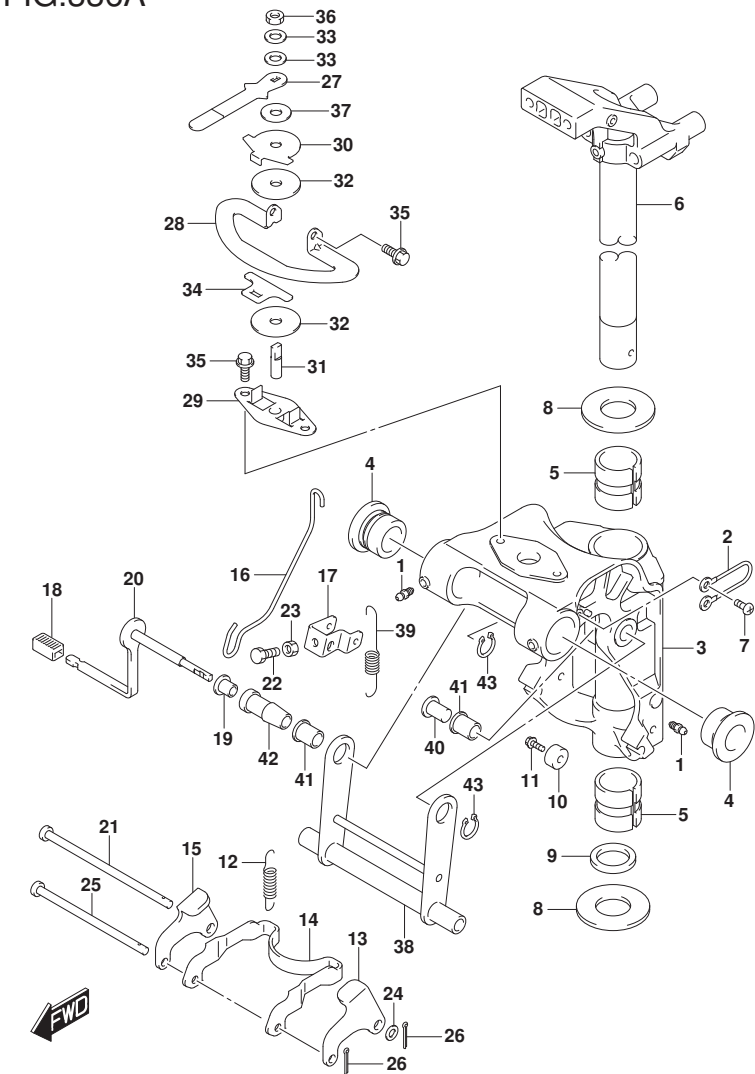


FIG.336A (1-E-12) SWIVEL BRACKET (DF25A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	43411-89L00	LEVER, STEERING ADJUSTER	1	
28	43415-94L01	PLATE, STRG ADJ (H)	1	
29	43420-89L00	PLATE, STRG ADJUSTER FRICTION	1	
30	43425-89L00	PLATE, STRG ADJUSTER UPR	1	
31	43512-89L00	SHAFT, STRG ADJUSTER THREAD	1	
32	43515-88L00	WASHER, STRG ADJ FRICTION PLATE	2	
33	43516-89J00	WASHER, STEERING ADJUSTER	2	
34	43517-89L00	SPACER, STEERING ADJUSTER	1	
35	09116-06225	BOLT (6X15)	4	
36	09159-08L02	NUT	1	
37	09161-08019	WASHER (8.2X18X1.2)	1	
38	45710-94L00	ARM, SHALLOW WATER DRIVE	1	
39	45722-94L00	SPRING, SHALLOW WATER DRIVE ARM	1	
40	45741-94L00	PIN, SHALLOW DRIVE WATER ARM	1	
41	45751-94L00	BUSH, SHALLOW WATER DRIVE ARM	2	
42	45761-94L00	SPACER, SHALLOW WATER DRIVE ARM	1	
43	09380-12002	SNAP RING	2	

DF25A P01

FIG.336B


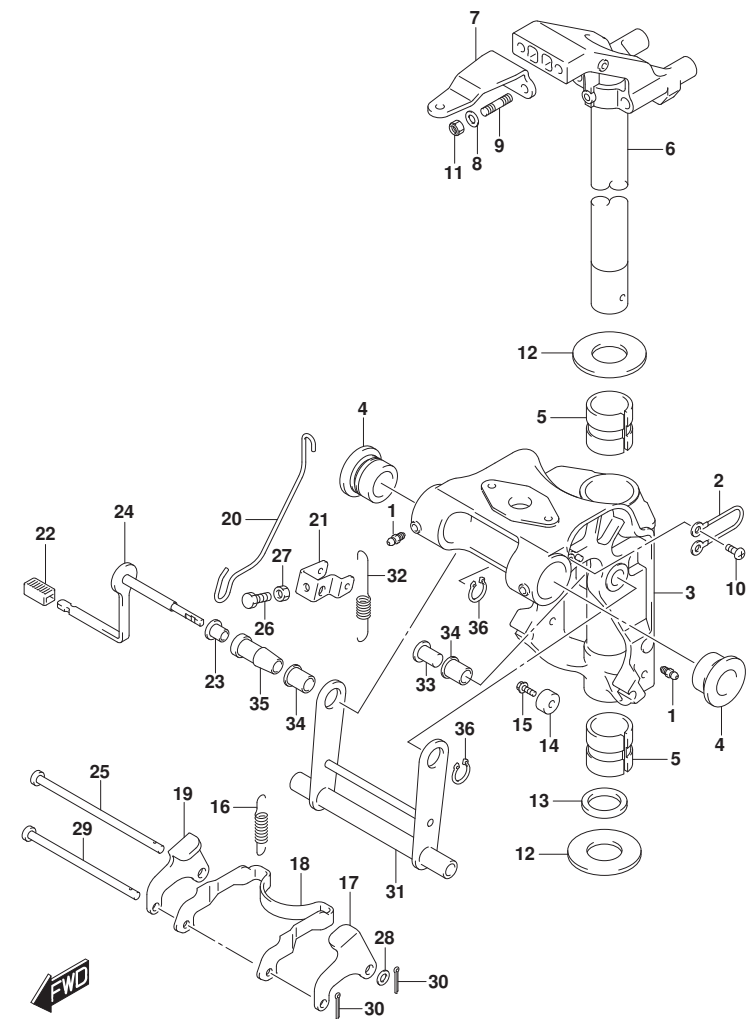


FIG.336B (1-E-13) SWIVEL BRACKET (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	4	
2	36894-87D00	LEAD (L:165)	1	
3-1	43111-94L00-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
3-2	43111-94L10-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
4	43211-87JL0	BUSH, SWIVEL BRACKET	2	
5	43711-94L00	BUSH, STEERING	2	
6-1	43750-94L00-YAY	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
6-2	43750-94L10-YAY	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
7	43755-94L00	ATTACHMENT, STEERING BRACKET	1	
8	09160-08082	WASHER (8.5X16X1.2)	2	
9	09108-08286	STUD BOLT	2	
10	09125-06063	SCREW (6X10)	2	
11	09159-08059	NUT	2	
12	09160-30057	WASHER (30.9X50X1.5)	2	
13	09282-30008	SEAL (30.6X43X5)	1	
14-1	55321-87J01	ANODE, PROTECTION	1	W/TRANSOM(L)
14-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
15	09103-06281	BOLT (6X14)	1	W/TRANSOM(L)
16	45211-94L00	SPRING, REVERSE LOCK ARM	2	
17	45221-94L00	LINK, REVERSE LOCK ARM PORT	1	
18	45231-94L00	ARM, REVERSE LOCK	1	
19	45241-94L00	LINK, REVERSE LOCK ARM STBD	1	
20	45252-94L00	LINK, RELEASE LEVER	1	
21	45253-94L00	ARM, RELEASE	1	
22	45255-94L00	RUBBER, RELEASE LEVER	1	
23	45257-94L00	BUSH, RELEASE LEVER	1	

FIG.336B

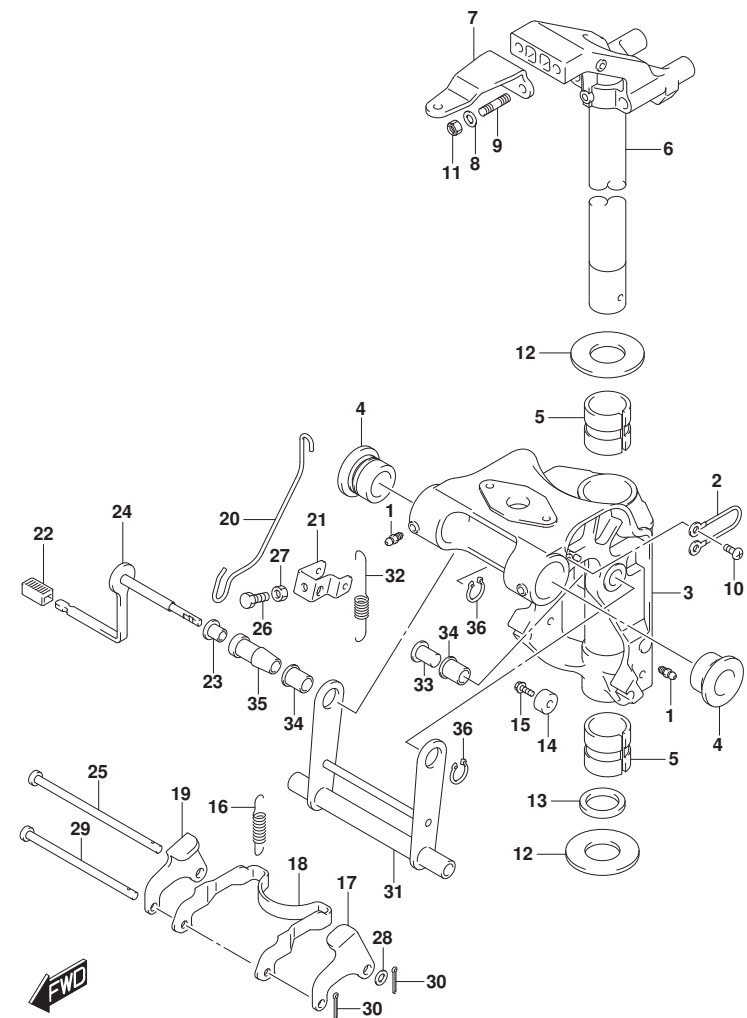

DF25A_30A_P01_018_336B
SWIVEL BRACKET

FIG.336B (1-E-14) SWIVEL BRACKET (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	45260-94L00	LEVER, RELEASE	1	
25	59211-94L00	PIN, REVERSE LOCK ARM LINK	1	
26	09100-06113	BOLT (6X16)	1	
27	09140-06020	NUT	1	
28	09160-06082	WASHER (6.5X13X1.0)	1	
29	09200-06072	PIN (6X105.5)	1	
30	09204-01002	PIN	2	
31	45710-94L00	ARM, SHALLOW WATER DRIVE	1	
32	45722-94L00	SPRING, SHALLOW WATER DRIVE ARM	1	
33	45741-94L00	PIN, SHALLOW DRIVE WATER ARM	1	
34	45751-94L00	BUSH, SHALLOW WATER DRIVE ARM	2	
35	45761-94L00	SPACER, SHALLOW WATER DRIVE ARM	1	
36	09380-12002	SNAP RING	2	

DF25AR P01
DF30AR P01

FIG.336C

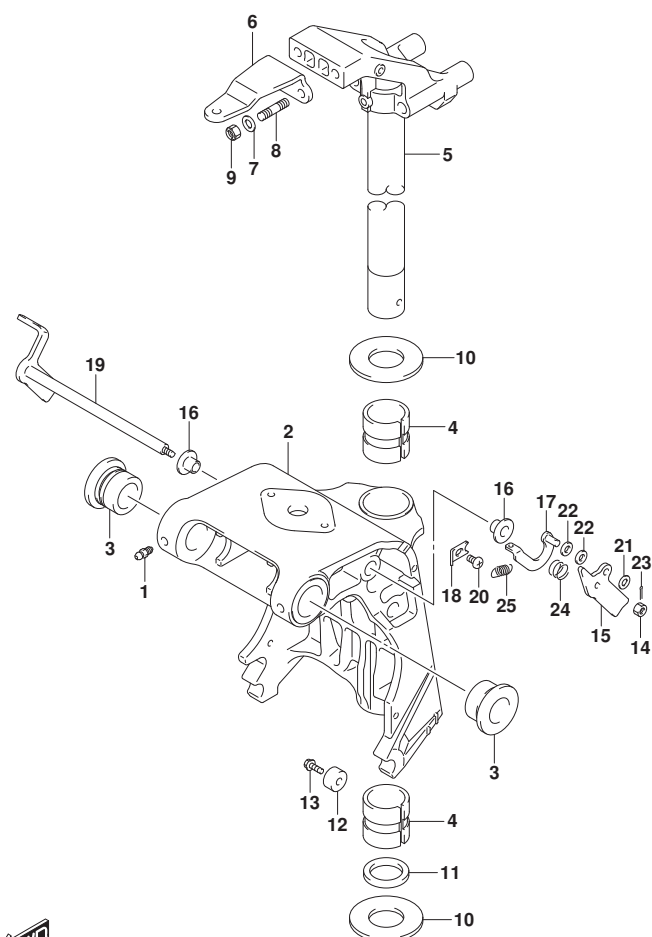


FIG.336C (1-E-15) SWIVEL BRACKET (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	4	
2-1	43111-94LA0-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
2-2	43111-94LA0-Y5S	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
2-3	43111-94LB0-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
2-4	43111-94LB0-Y5S	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-94L00	BUSH, STEERING	2	
5-1	43750-94L00-YAY	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
5-2	43750-94L00-Y5S	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
5-3	43750-94L10-YAY	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
5-4	43750-94L10-Y5S	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
6	43755-94L00	ATTACHMENT, STEERING BRACKET	1	
7	09160-08082	WASHER (8.5X16X1.2)	2	
8	09108-08286	STUD BOLT	2	
9	09159-08059	NUT	2	
10	09160-30057	WASHER (30.9X50X1.5)	2	
11	09282-30008	SEAL (30.6X43X5)	1	
12-1	55321-87J01	ANODE, PROTECTION	1	
12-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
13	09103-06281	BOLT (6X14)	1	
14	29141-93J00	NUT	1	

FIG.336C (1-F-2) SWIVEL BRACKET (DF25AT)(DF30AT)



DF25AT P01
DF30AT P01

FIG.336D

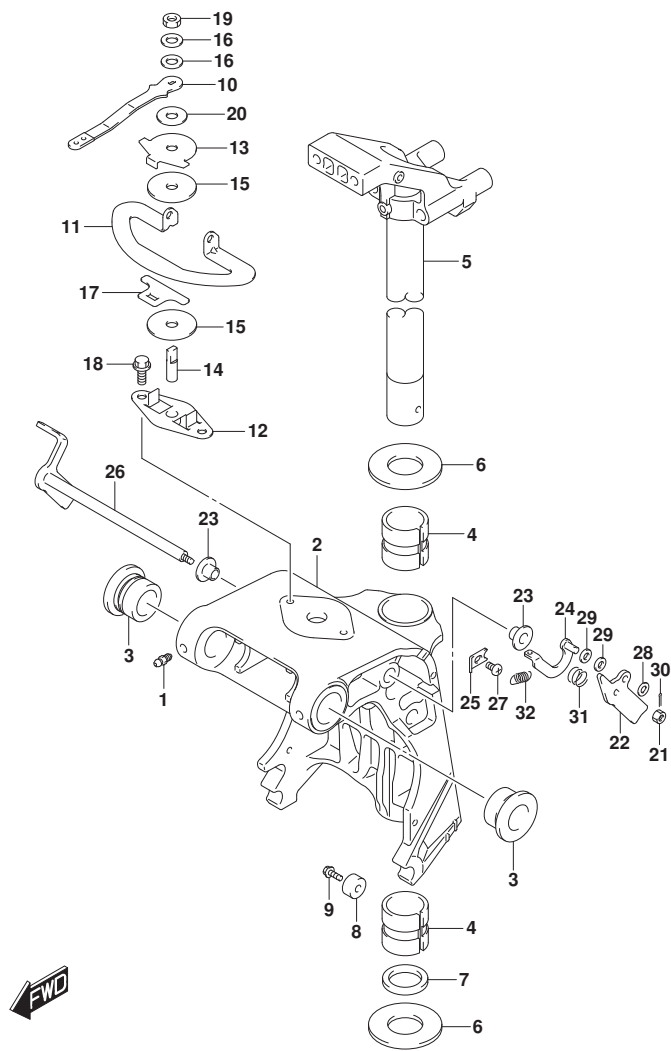


FIG.336D (1-F-3) SWIVEL BRACKET (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	4	
2-1	43111-94LA0-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
2-2	43111-94LA0-Y5S	BRACKET, SWIVEL (S) (WHITE)	1	W/TRANSOM(S)
2-3	43111-94LB0-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
2-4	43111-94LB0-Y5S	BRACKET, SWIVEL (L) (WHITE)	1	W/TRANSOM(L)
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-94L00	BUSH, STEERING	2	
5-1	43750-94L00-YAY	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
5-2	43750-94L00-Y5S	BRACKET, STEERING (S) (WHITE)	1	W/TRANSOM(S)
5-3	43750-94L10-YAY	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
5-4	43750-94L10-Y5S	BRACKET, STEERING (L) (WHITE)	1	W/TRANSOM(L)
6	09160-30057	WASHER (30.9X50X1.5)	2	
7	09282-30008	SEAL (30.6X43X5)	1	
8-1	55321-87J01	ANODE, PROTECTION	1	
8-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
9	09103-06281	BOLT (6X14)	1	
10	43411-89LA0	LEVER, STEERING ADJUSTER	1	
11	43415-94L01	PLATE, STRG ADJ (H)	1	
12	43420-89L00	PLATE, STRG ADJUSTER FRICTION	1	
13	43425-89L00	PLATE, STRG ADJUSTER UPR	1	
14	43512-89L00	SHAFT, STRG ADJUSTER THREAD	1	
15	43515-88L00	WASHER, STRG ADJ FRICTION	2	
		PLATE		
16	43516-89J00	WASHER, STEERING ADJUSTER	2	
17	43517-89L00	SPACER, STEERING ADJUSTER	1	
18	09116-06225	BOLT (6X15)	4	
19	09159-08L02	NUT	1	
20	09161-08019	WASHER (8.2X18X1.2)	1	
21	29141-93J00	NUT	1	

FIG.336D

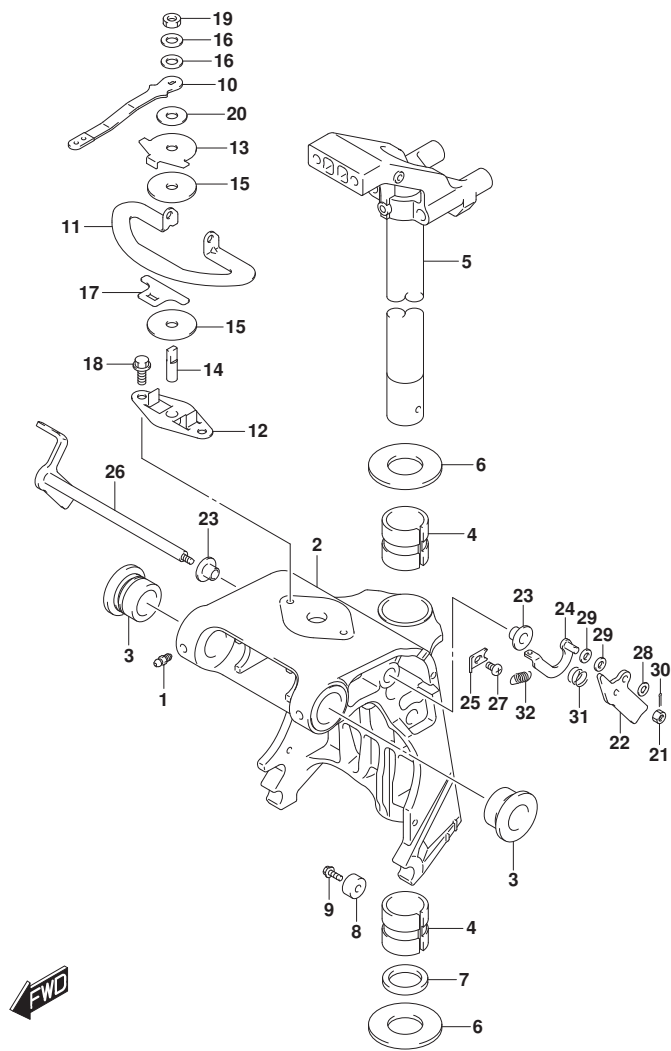


FIG.336D (1-F-4) SWIVEL BRACKET (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	41221-94LA0	LEVER, TILT LOCK PORT	1	
23	41224-94LA0	BUSH, TILT STOPPER ROD	2	
24	41230-94LA0	LINK, TILT LOCK LEVER	1	
25	41233-94LA0	BRACKET, TILT LOCK SPRING	1	
26	41280-94LA0	LEVER, TILT LOCK	1	
27	09125-06063	SCREW (6X10)	1	
28	09160-06082	WASHER (6.5X13X1.0)	1	
29	09160-06170	WASHER (6.5X13X2)	2	
30	09204-01006	PIN	1	
31	09440-13057	SPRING	1	
32	09443-10043	SPRING	1	

DF25ATH P01
DF30ATH P01

FIG.336E

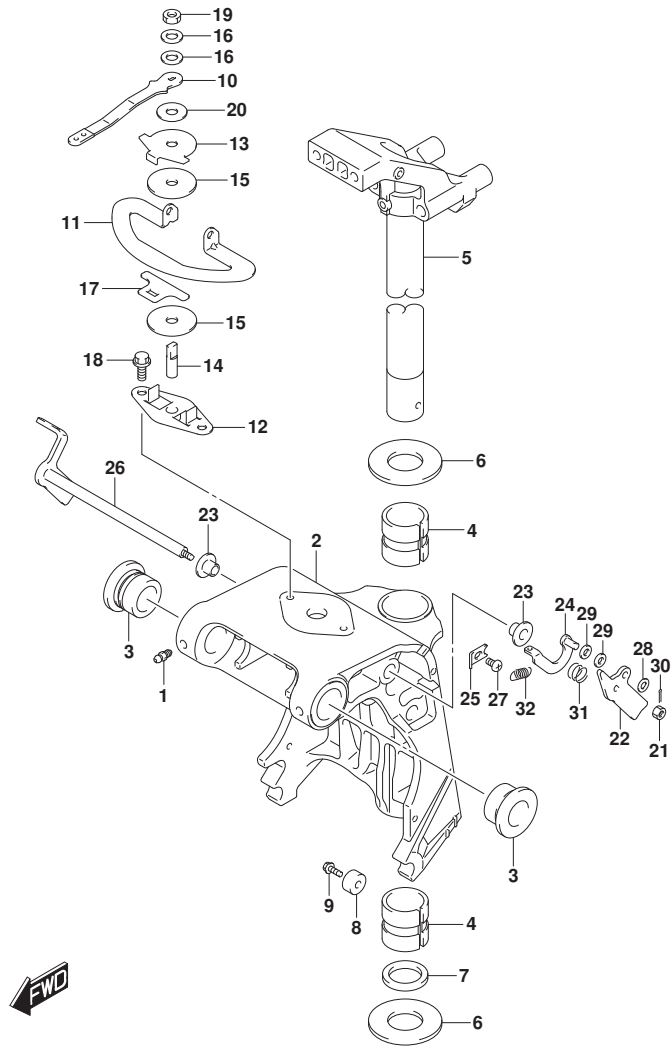


FIG.336E (1-F-5) SWIVEL BRACKET (DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	4	
2-1	43111-94LA0-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
2-2	43111-94LB0-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-94L00	BUSH, STEERING	2	
5-1	43750-94L00-YAY	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
5-2	43750-94L10-YAY	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
6	09160-30057	WASHER (30.9X50X1.5)	2	
7	09282-30008	SEAL (30.6X43X5)	1	
8-1	55321-87J01	ANODE, PROTECTION	1	
8-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
9	09103-06281	BOLT (6X14)	1	
10	43411-89LA0	LEVER, STEERING ADJUSTER	1	
11	43415-94L01	PLATE, STRG ADJ (H)	1	
12	43420-89L00	PLATE, STRG ADJUSTER FRICTION	1	
13	43425-89L00	PLATE, STRG ADJUSTER UPR	1	
14	43512-89L00	SHAFT, STRG ADJUSTER THREAD	1	
15	43515-88L00	WASHER, STRG ADJ FRICTION PLATE	2	
16	43516-89J00	WASHER, STEERING ADJUSTER	2	
17	43517-89L00	SPACER, STEERING ADJUSTER	1	
18	09116-06225	BOLT (6X15)	4	
19	09159-08L02	NUT	1	
20	09161-08019	WASHER (8.2X18X1.2)	1	
21	29141-93J00	NUT	1	

FIG.336E (1-F-6) SWIVEL BRACKET (DF30AQ)

DF30AQ P01

FIG.336F

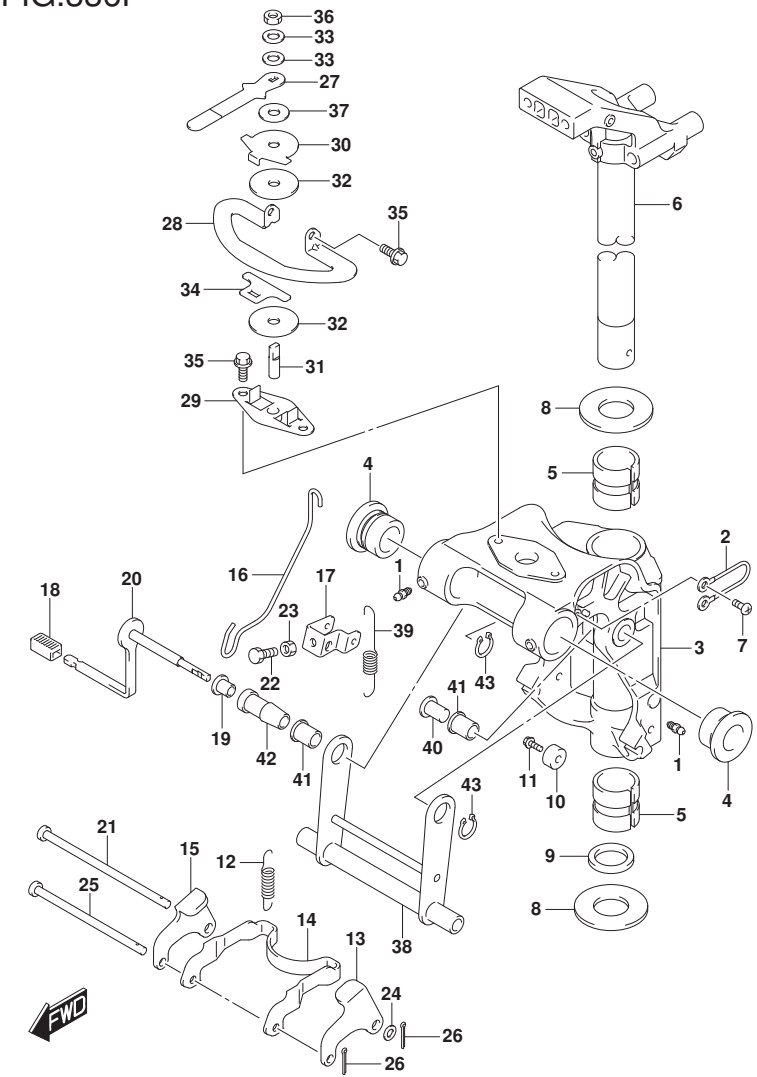


FIG.336F (1-F-7) SWIVEL BRACKET (DF30A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	4	
2	36894-87D00	LEAD (L:165)	1	
3-1	43111-94L00-YAY	BRACKET, SWIVEL (S) (BLACK)	1	W/TRANSOM(S)
3-2	43111-94L00-Y5S	BRACKET, SWIVEL (S) (WHITE)	1	W/TRANSOM(S)
3-3	43111-94L10-YAY	BRACKET, SWIVEL (L) (BLACK)	1	W/TRANSOM(L)
3-4	43111-94L10-Y5S	BRACKET, SWIVEL (L) (WHITE)	1	W/TRANSOM(L)
4	43211-87JL0	BUSH, SWIVEL BRACKET	2	
5	43711-94L00	BUSH, STEERING	2	
6-1	43750-94L00-YAY	BRACKET, STEERING (S) (BLACK)	1	W/TRANSOM(S)
6-2	43750-94L00-Y5S	BRACKET, STEERING (S) (WHITE)	1	W/TRANSOM(S)
6-3	43750-94L10-YAY	BRACKET, STEERING (L) (BLACK)	1	W/TRANSOM(L)
6-4	43750-94L10-Y5S	BRACKET, STEERING (L) (WHITE)	1	W/TRANSOM(L)
7	09125-06063	SCREW (6X10)	2	
8	09160-30057	WASHER (30.9X50X1.5)	2	
9	09282-30008	SEAL (30.6X43X5)	1	
10-1	55321-87J01	ANODE, PROTECTION	1	W/TRANSOM(L)
10-2	55321-87J11	ANODE, MAGNESIUM	1	OPT
11	09103-06281	BOLT (6X14)	1	W/TRANSOM(L)
12	45211-94L00	SPRING, REVERSE LOCK ARM	2	
13	45221-94L00	LINK, REVERSE LOCK ARM PORT	1	
14	45231-94L00	ARM, REVERSE LOCK	1	
15	45241-94L00	LINK, REVERSE LOCK ARM STBD	1	
16	45252-94L00	LINK, RELEASE LEVER	1	
17	45253-94L00	ARM, RELEASE	1	
18	45255-94L00	RUBBER, RELEASE LEVER	1	
19	45257-94L00	BUSH, RELEASE LEVER	1	

FIG.336F

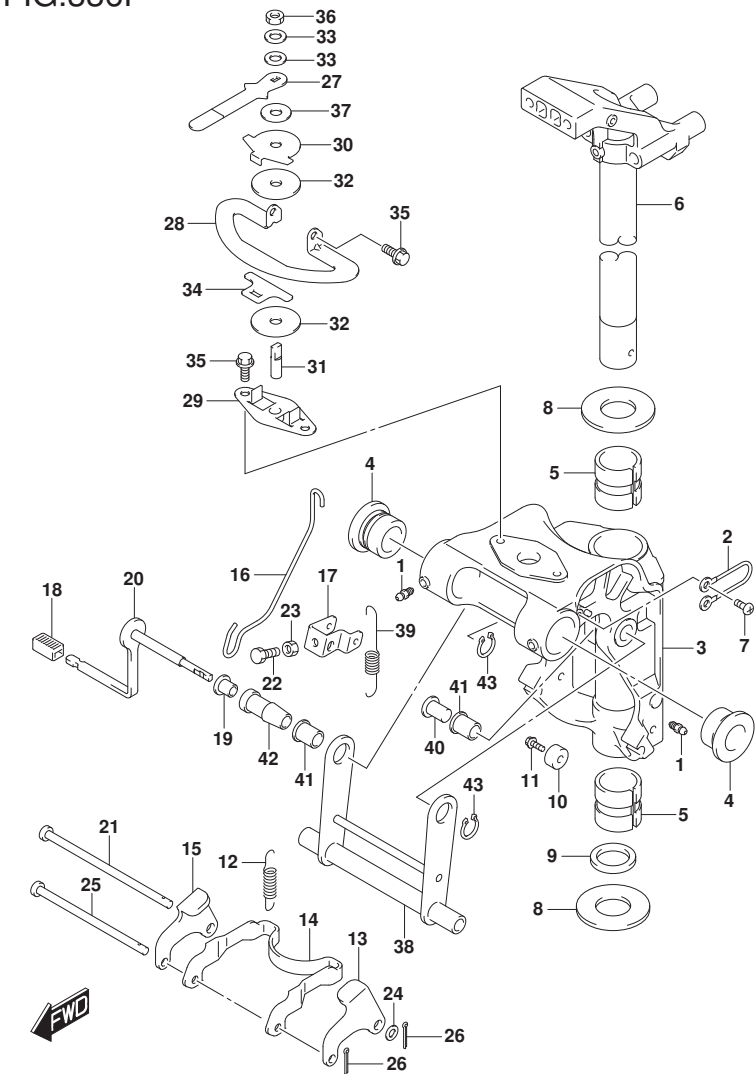


FIG.336F (1-F-8) SWIVEL BRACKET (DF30A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	45260-94L00	LEVER, RELEASE	1	
21	59211-94L00	PIN, REVERSE LOCK ARM LINK	1	
22	09100-06113	BOLT (6X16)	1	
23	09140-06020	NUT	1	
24	09160-06082	WASHER (6.5X13X1.0)	1	
25	09200-06072	PIN (6X105.5)	1	
26	09204-01002	PIN	2	
27	43411-89L00	LEVER, STEERING ADJUSTER	1	
28	43415-94L01	PLATE, STRG ADJ (H)	1	
29	43420-89L00	PLATE, STRG ADJUSTER FRICTION	1	
30	43425-89L00	PLATE, STRG ADJUSTER UPR	1	
31	43512-89L00	SHAFT, STRG ADJUSTER THREAD	1	
32	43515-88L00	WASHER, STRG ADJ FRICTION PLATE	2	
33	43516-89J00	WASHER, STEERING ADJUSTER	2	
34	43517-89L00	SPACER, STEERING ADJUSTER	1	
35	09116-06225	BOLT (6X15)	4	
36	09159-08L02	NUT	1	
37	09161-08019	WASHER (8.2X18X1.2)	1	
38	45710-94L00	ARM, SHALLOW WATER DRIVE	1	
39	45722-94L00	SPRING, SHALLOW WATER DRIVE ARM	1	
40	45741-94L00	PIN, SHALLOW DRIVE WATER ARM	1	
41	45751-94L00	BUSH, SHALLOW WATER DRIVE ARM	2	
42	45761-94L00	SPACER, SHALLOW WATER DRIVE ARM	1	
43	09380-12002	SNAP RING	2	

DF30A P40

FIG.338A

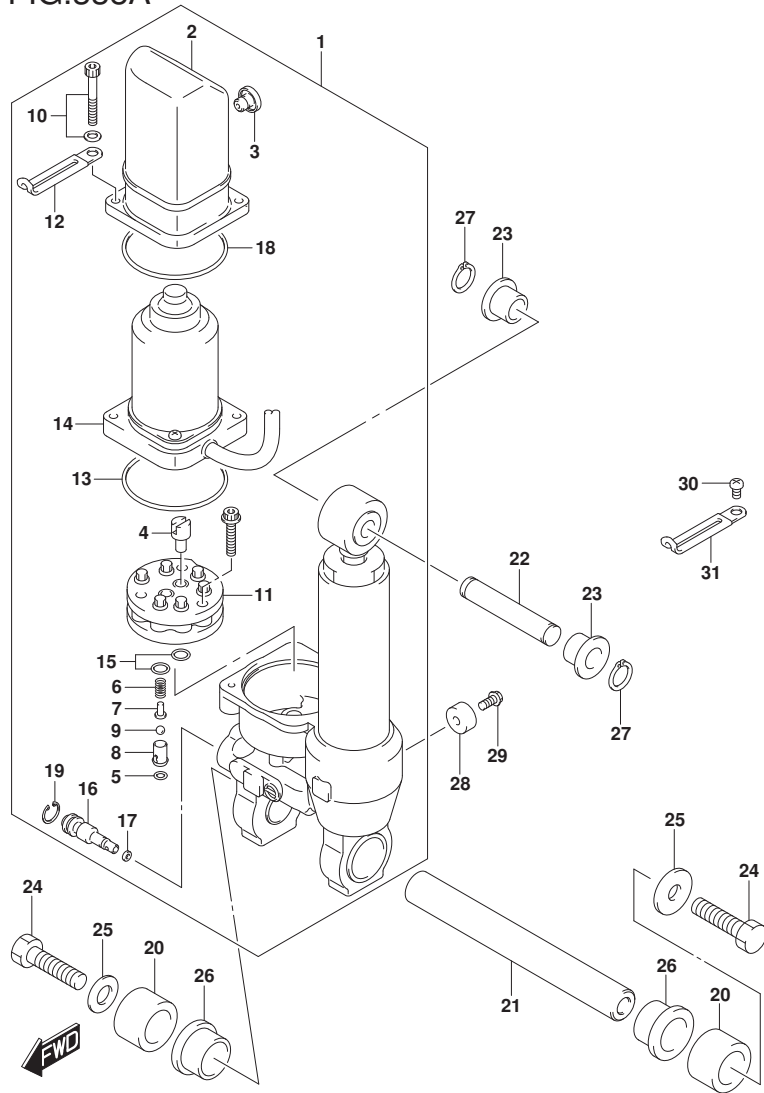


FIG.338A (1-F-9) TILT CYLINDER (DF25AT)(DF25ATH)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-94L03	POWER TRIM ASSY	1	
2	48571-89J01	.RESERVOIR	1	
3	48572-89J01	.PLUG	1	
4	48583-95E00	.JOINT, DRIVE	1	
5	48818-97E00	.O RING	1	
6	48823-89J00	.SPRING, PRESSURE VALVE	1	
7	48832-89J00	.VALVE, PRESSURE	1	
8	48834-89J00	.SHEET, VALVE	1	
9	48842-89J00	.BALL, PRESSURE VALVE	1	
10	48861-89J01	.BOLT, RESERVOIR	2	
11	48510-89J00	.PUMP ASSY	1	
12	29404-93J10	.CLAMP	1	
13	31123-89J10	.O RING	1	
14	38100-94L02	.MOTOR ASSY, PTT	1	
15	48518-87D00	.O RING	1	
16	48551-89J00	.VALVE, MANUAL	1	
17	48553-97E00	.SEAL, WASHER	1	
18	48585-89J00	.O RING, RESERVOIR	1	
19	48681-87J11	.CIRCLIP	1	
20	47226-94L00	COLLAR, TILT CYL LOWER	2	
21	48121-94LA0	SHAFT, TILT CYL LOWER	1	
22	48321-94L00	SHAFT, TILT CYL UPPER	1	
23	48325-94L00	BUSH, TILT CYL UPPER	2	
24	09100-10323	BOLT (10X35)	2	
25	09160-10158	WASHER (10.5X30X3)	2	
26	48326-94L00	BUSH	2	
27	09380-12002	SNAP RING	2	

FIG.338A

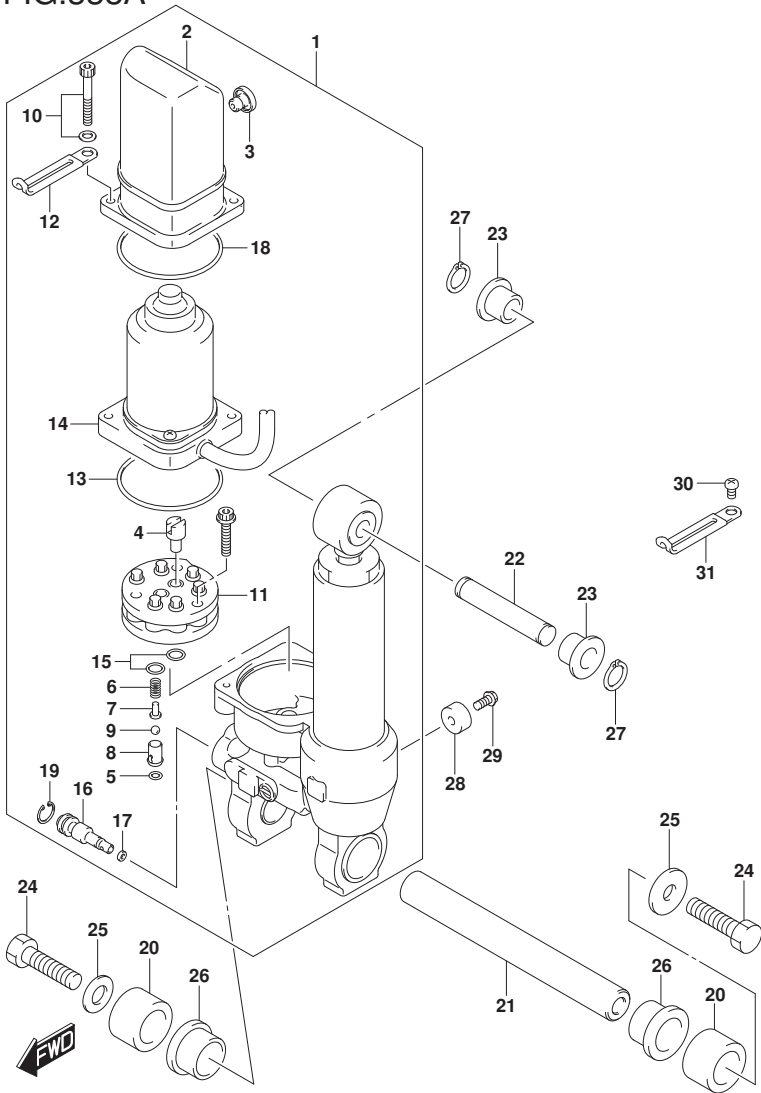


FIG.338A (1-F-10) TILT CYLINDER (DF25AT)(DF25ATH)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	55321-87J01	ANODE, PROTECTION	1	
29	09103-06281	BOLT (6X14)	1	
30	09125-06063	SCREW (6X10)	1	
31	09404-06207	CLAMP (L:65)	1	

DF25AT P01
DF25ATH P01
DF30AT P01
DF30ATH P01

FIG.339A (1-F-11) GAS CYLINDER (DF30AQ)

DF30AQ P01

FIG.340A

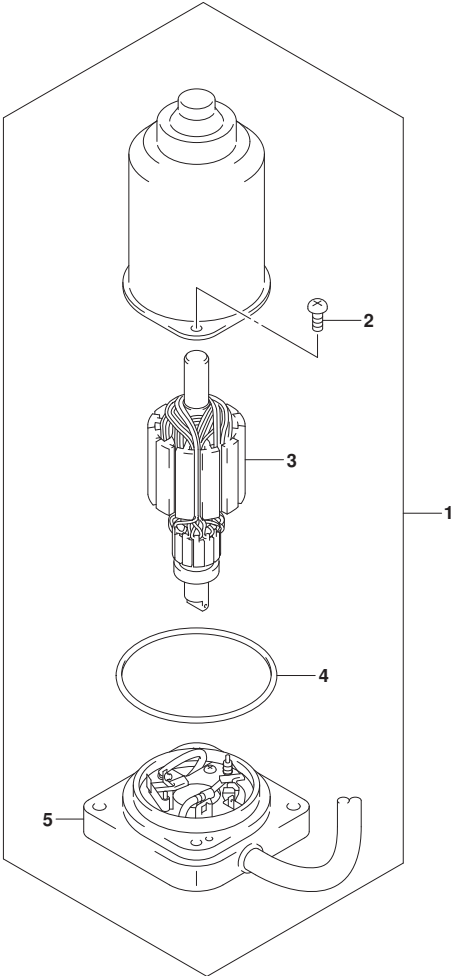


FIG.340A (1-F-12) PTT MOTOR (DF25AT)(DF25ATH)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38100-94L02	MOTOR ASSY, PTT	1	
2	31111-89J00	.SCREW	2	
3	31311-89J00	.ARMATURE	1	
4	31123-89J00	.O RING	1	
5	31173-94L02	.HOLDER, BRUSH	1	

DF25AT P01
DF25ATH P01
DF30AT P01
DF30ATH P01



FIG.401A

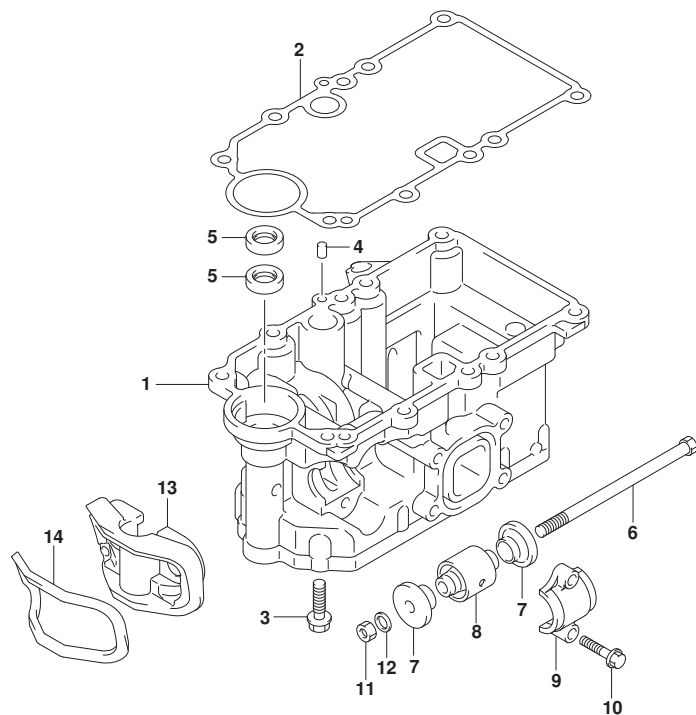


FIG.401A (1-F-13) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	51110-94L00	HOLDER, ENGINE	1	
2	51211-94L00	GASKET, ENGINE HOLDER	1	
3	09116-08150	BOLT (8X27)	10	
4	09202-06023	PIN (6X10)	2	
5	09282-15009	OIL SEAL (14.7X25X6.5)	2	
6	54112-94L00	BOLT, UPPER MOUNT	2	
7	54125-94L00	STOPPER, UPPER MOUNT THRUST	4	
8	54130-94L00	MOUNT, UPPER	2	
9	54137-94L00	COVER, UPPER MOUNT	2	
10	09116-08152	BOLT (8X35)	4	
11	09140-10031	NUT	2	
12	09160-10156	WASHER (10.3X16.5X2.5)	2	
13	54144-94L00	SEAL, UPPER MOUNT	1	
14	54145-94L00	SEAL, UPPER MOUNT NO.2	1	



FIG.405A

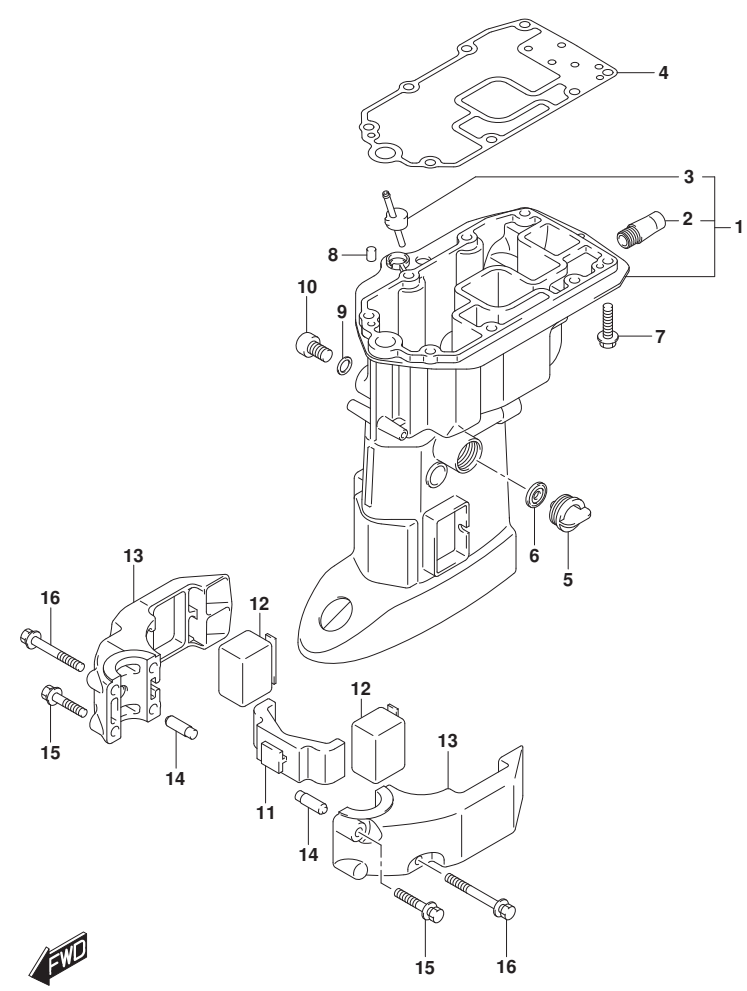


FIG.405A (1-F-14) DRIVE SHAFT HOUSING (DF25A)(DF25AR)(DF30AR)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52110-94L00-YAY	HOUSING, DRIVE SHAFT (S) (BLACK)	1	W/TRANSOM(S)
1-2	52110-94L10-YAY	HOUSING, DRIVE SHAFT (L) (BLACK)	1	W/TRANSOM(L)
2	43112-94L01	.PIPE, EXHAUST	1	
3	61155-94L00	.TUBE, WATER INSP	1	
4	52113-94L00	GASKET, DRIVE SHAFT HOUSING	1	
5	17913-93J00	PLUG, WATER	1	
6	17914-93J00	GASKET, WATER PLUG	1	
7	09116-08151	BOLT (8X30)	8	
8	09202-06023	PIN (6X10)	2	
9	09168-12017	GASKET (12X17X1)	1	
10	09248-12009	PLUG, DRAIN (12X18.65)	1	
11	54151-94L00	MOUNT, LOWER THRUST	1	
12	54167-94L00	MOUNT, LOWER SIDE	2	
13	54211-94L00-YAY	COVER, LOWER MOUNT (BLACK)	2	
14	54213-93901	PIN, LWR MOUNT COVER KNOCK	2	
15	09116-08154	BOLT (8X40)	2	
16	09116-08162	BOLT (8X65)	2	

DF25A P01
DF25AR P01
DF30AR P01
DF30AQ P01

FIG.405B


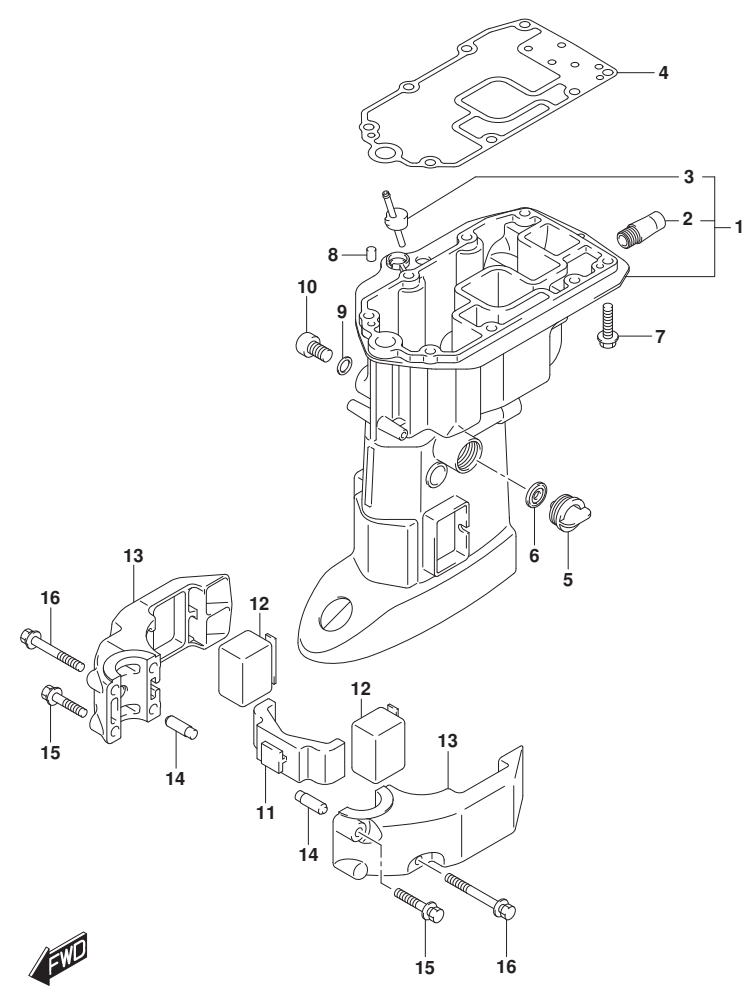


FIG.405B (1-F-15) DRIVE SHAFT HOUSING (DF25AT)(DF25ATH)(DF30A)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52110-94L00-YAY	HOUSING, DRIVE SHAFT (S) (BLACK)	1	W/TRANSOM(S)
1-2	52110-94L00-Y5S	HOUSING, DRIVE SHAFT (S) (WHITE)	1	W/TRANSOM(S)
1-3	52110-94L10-YAY	HOUSING, DRIVE SHAFT (L) (BLACK)	1	W/TRANSOM(L)
1-4	52110-94L10-Y5S	HOUSING, DRIVE SHAFT (L) (WHITE)	1	W/TRANSOM(L)
2	43112-94L01	.PIPE, EXHAUST	1	
3	61155-94L00	.TUBE, WATER INSP	1	
4	52113-94L00	GASKET, DRIVE SHAFT HOUSING	1	
5	17913-93J00	PLUG, WATER	1	
6	17914-93J00	GASKET, WATER PLUG	1	
7	09116-08151	BOLT (8X30)	8	
8	09202-06023	PIN (6X10)	2	
9	09168-12017	GASKET (12X17X1)	1	
10	09248-12009	PLUG, DRAIN (12X18.65)	1	
11	54151-94L00	MOUNT, LOWER THRUST	1	
12	54167-94L00	MOUNT, LOWER SIDE	2	
13-1	54211-94L00-YAY	COVER, LOWER MOUNT (BLACK)	2	
13-2	54211-94L00-Y5S	COVER, LOWER MOUNT (WHITE)	2	
14	54213-93901	PIN, LWR MOUNT COVER KNOCK	2	
15	09116-08154	BOLT (8X40)	2	
16	09116-08162	BOLT (8X65)	2	

DF25AT P01
DF25ATH P01
DF30A P40
DF30AT P01
DF30ATH P01

FIG.407A

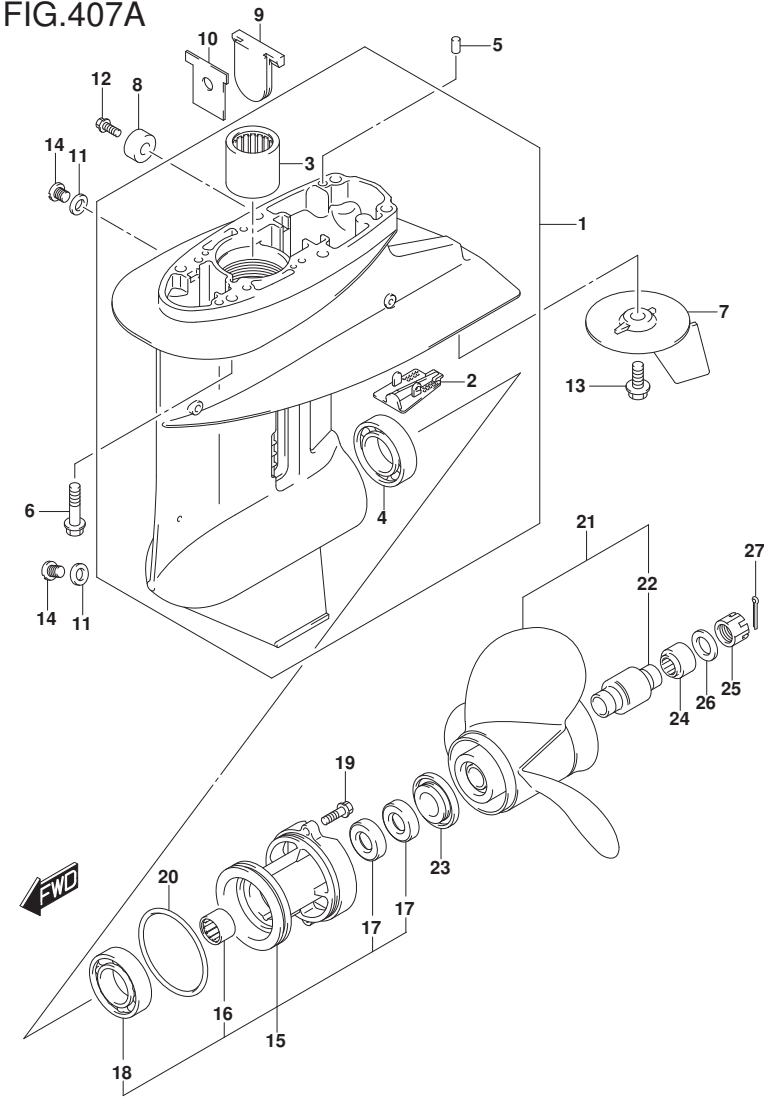

DF25A_30A_P01_018_407A
GEAR CASE


FIG.407A (1-G-2) GEAR CASE (DF25A)(DF25AR)(DF30AR)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-94L00-YAY	CASE ASSY, GEAR (BLACK)	1	
2	55114-963L0	.COVER, GEAR CASE UNDER	1	
3	09263-20046	.BEARING (20.6X27X25.4)	1	
4	09265-25047	.BEARING (25X52X16.25)	1	
5	09202-06023	PIN (6X10)	2	
6	09116-08154	BOLT (8X40)	6	
7	55125-96310	TRIM, TAB	1	
8	55321-87J01	ANODE, PROTECTION	1	
9	55332-94L00	RUBBER, EXHAUST SEAL	1	
10	55333-94L00	PLATE, EXHAUST SEAL	1	
11	59178-97J00	GASKET, DRAIN PLUG	2	
12	09103-06281	BOLT (6X14)	1	
13	09116-08147	BOLT (8X16)	1	
14	09248-08001	PLUG (8X7.5)	2	
15	56120-91L11-YAY	HOUSING, PROPELLER SHAFT BEARING (BLACK)	1	
16	09263-20047	.BEARING (20X26X20)	1	
17	09289-20L01	.OIL SEAL (20X34X6.5)	2	
18	08113-60060	.BEARING	1	
19	09116-06229	BOLT (6X25)	2	
20	09280-75002	O RING (D:3.5,ID:68.6)	1	
21-1	58100-91L40-019	PROPELLER (3X10-1/4X10) (BLACK)	1	
21-2	58100-91L50-019	PROPELLER (3X10-1/4X11) (BLACK)	1	
21-3	58100-91L20-019	PROPELLER (3X10-1/4X12) (BLACK)	1	
21-4	58100-91L30-019	PROPELLER (3X10-1/4X13) (BLACK)	1	

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21-5	58100-95D01-019	PROPELLER (3X10-1/4X14) (BLACK)	1	
21-6	58100-96372-019	PROPELLER (3X10-1/4X9) (BLACK)	1	
21-7	58100-96472-019	PROPELLER (3X10-1/4X10) (BLACK)	1	
21-8	58100-96482-019	PROPELLER (3X10-1/4X12) (BLACK)	1	
21-9	58100-96492-019	PROPELLER (3X10-1/4X13) (BLACK)	1	OPT
21-10	58100-96462-019	PROPELLER (3X10-1/4X15) (BLACK)	1	OPT
22	58120-96401	.BUSH, PROPELLER	1	
23	57632-91L00	STOPPER, PROPELLER BUSH	1	
24	57633-96300	SPACER, PROPELLER NUT	1	
25	09141-14008	NUT	1	
26	09160-14028	WASHER (14.5X30X2.5)	1	
27	09204-03003	PIN	1	



FIG.407B

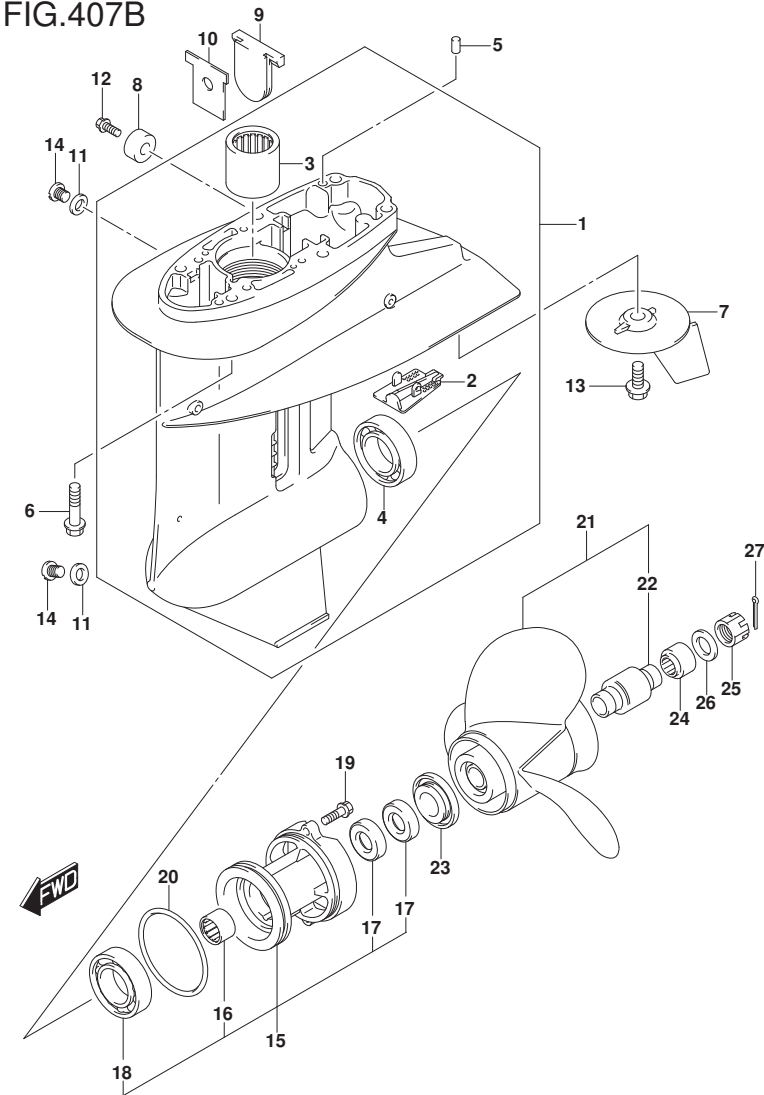


DF25A_30A_P01_018_407B
GEAR CASE

FIG.407B (1-G-4) GEAR CASE (DF25AT)(DF25ATH)(DF30A)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-94L00-YAY	CASE ASSY, GEAR (BLACK)	1	
1-2	55100-94L00-Y5S	CASE ASSY, GEAR (WHITE)	1	
2	55114-963L0	.COVER, GEAR CASE UNDER	1	
3	09263-20046	.BEARING (20.6X27X25.4)	1	
4	09265-25047	.BEARING (25X52X16.25)	1	
5	09202-06023	PIN (6X10)	2	
6	09116-08154	BOLT (8X40)	6	
7	55125-96310	TRIM, TAB	1	
8	55321-87J01	ANODE, PROTECTION	1	
9	55332-94L00	RUBBER, EXHAUST SEAL	1	
10	55333-94L00	PLATE, EXHAUST SEAL	1	
11	59178-97J00	GASKET, DRAIN PLUG	2	
12	09103-06281	BOLT (6X14)	1	
13	09116-08147	BOLT (8X16)	1	
14	09248-08001	PLUG (8X7.5)	2	
15-1	56120-91L11-YAY	HOUSING, PROPELLER SHAFT BEARING (BLACK)	1	
15-2	56120-91L11-Y5S	HOUSING, PROPELLER SHAFT BEARING (WHITE)	1	
16	09263-20047	.BEARING (20X26X20)	1	
17	09289-20L01	.OIL SEAL (20X34X6.5)	2	
18	08113-60060	.BEARING	1	
19	09116-06229	BOLT (6X25)	2	
20	09280-75002	O RING (D:3.5,ID:68.6)	1	
21-1	58100-91L40-019	PROPELLER (3X10-1/4X10) (BLACK)	1	
21-2	58100-91L50-019	PROPELLER (3X10-1/4X11) (BLACK)	1	

FIG.407B

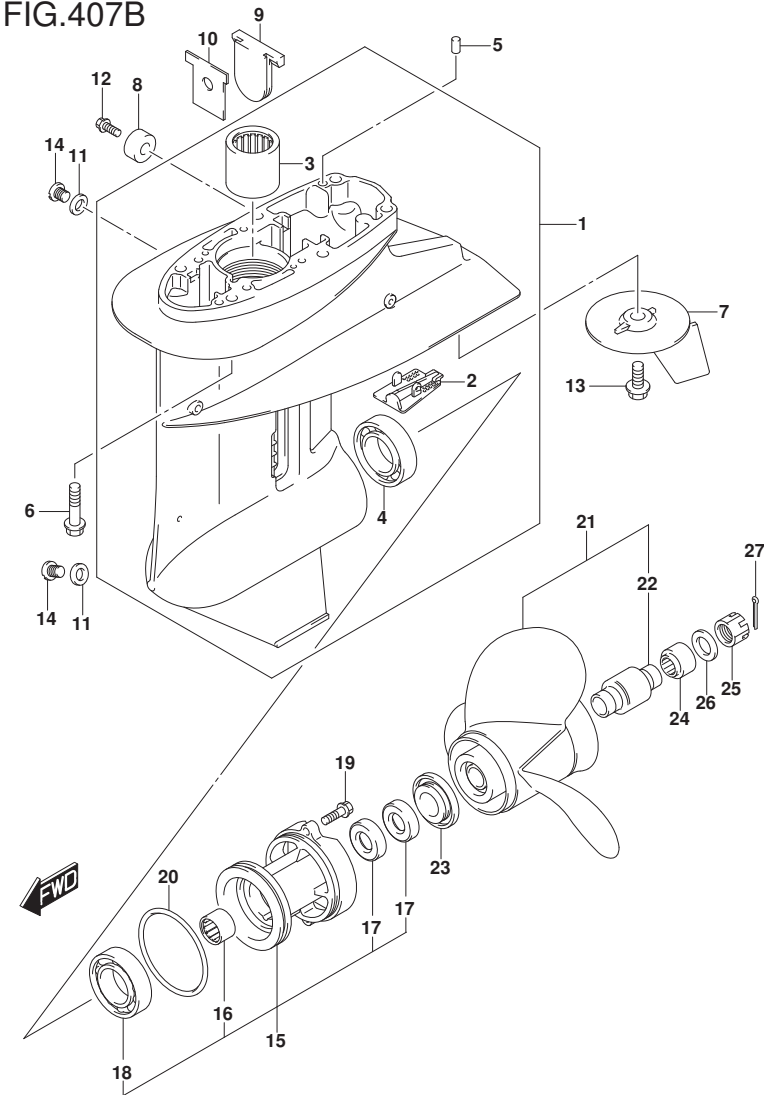

DF25A_30A_P01_018_407B
GEAR CASE

FIG.407B (1-G-5) GEAR CASE (DF25AT)(DF25ATH)(DF30A)(DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21-3	58100-91L20-019	PROPELLER (3X10-1/4X12) (BLACK)	1	
21-4	58100-91L30-019	PROPELLER (3X10-1/4X13) (BLACK)	1	
21-5	58100-95D01-019	PROPELLER (3X10-1/4X14) (BLACK)	1	
21-6	58100-96372-019	PROPELLER (3X10-1/4X9) (BLACK)	1	
21-7	58100-96472-019	PROPELLER (3X10-1/4X10) (BLACK)	1	
21-8	58100-96482-019	PROPELLER (3X10-1/4X12) (BLACK)	1	
21-9	58100-96492-019	PROPELLER (3X10-1/4X13) (BLACK)	1	OPT
21-10	58100-96462-019	PROPELLER (3X10-1/4X15) (BLACK)	1	OPT
22	58120-96401	.BUSH, PROPELLER	1	
23	57632-91L00	STOPPER, PROPELLER BUSH	1	
24	57633-96300	SPACER, PROPELLER NUT	1	
25	09141-14008	NUT	1	
26	09160-14028	WASHER (14.5X30X2.5)	1	
27	09204-03003	PIN	1	

DF25AT P01
DF25ATH P01
DF30A P40
DF30AT P01
DF30ATH P01

FIG.410A


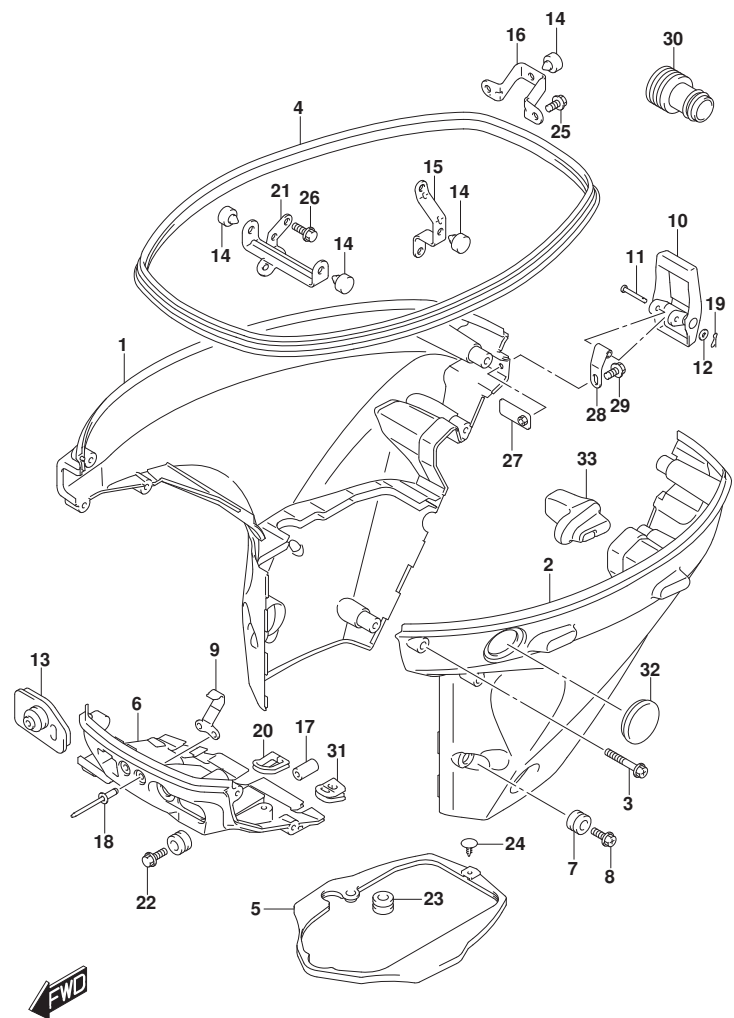


FIG.410A (1-G-6) SIDE COVER (DF25A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61810-94L00-YAY	COVER, SIDE STBD (BLACK)	1	
2	61820-94L00-YAY	COVER, SIDE PORT (BLACK)	1	
3	09136-06169	SCREW (6X35)	8	
4	61112-94L10	RUBBER, SIDE COVER	1	
5	61134-94L00	SEAL, SIDE COVER	1	
6	61830-94L00-YAY	PANEL, FRONT (BLACK)	1	
7	09320-11017	CUSHION	2	
8	09136-06168	SCREW (6X17)	2	
9	61412-89L00	HOOK, FRONT PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13-1	61124-94L00	GROMMET, CABLE	1	W/MANUAL STARTER
13-2	61124-94L20	GROMMET, CABLE	1	W/ELECTRIC STARTER
14	61151-91J11	CUSHION, LOWER COVER HOLDER	4	
15	61827-94L00	HOLDER, SIDE COVER	1	
16	61829-94L00	HOLDER, SIDE COVER REAR	1	
17	09251-09007	CUSHION	1	
18	09229-04005	RIVET	2	
19	09385-04003	CLIP	1	
20	23131-94L00	BOOT, CLUTCH ROD	1	
21	61841-94L00	HOLDER, SIDE COVER	1	
22	09136-06168	SCREW (6X17)	1	
23	09320-11017	CUSHION	1	
24	09409-05302-5PK	CLIP (BLACK)	1	
25	01550-0616C	BOLT	2	
26	01550-0820C	BOLT	1	
27	61620-94L00	PLATE, FASTENER HOLDER	1	
28	61642-90L00	HOLDER, FASTENER LEVER	1	

FIG.410A (1-G-7) SIDE COVER (DF25A)(DF30AQ)

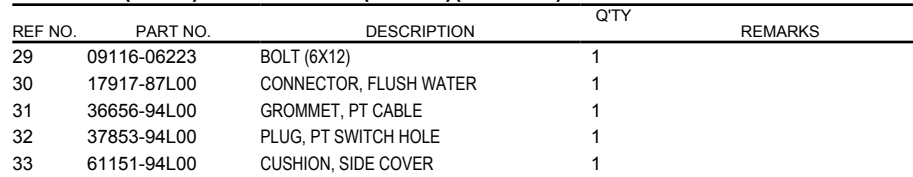

DF25A_30A_P01_018

FIG.410B

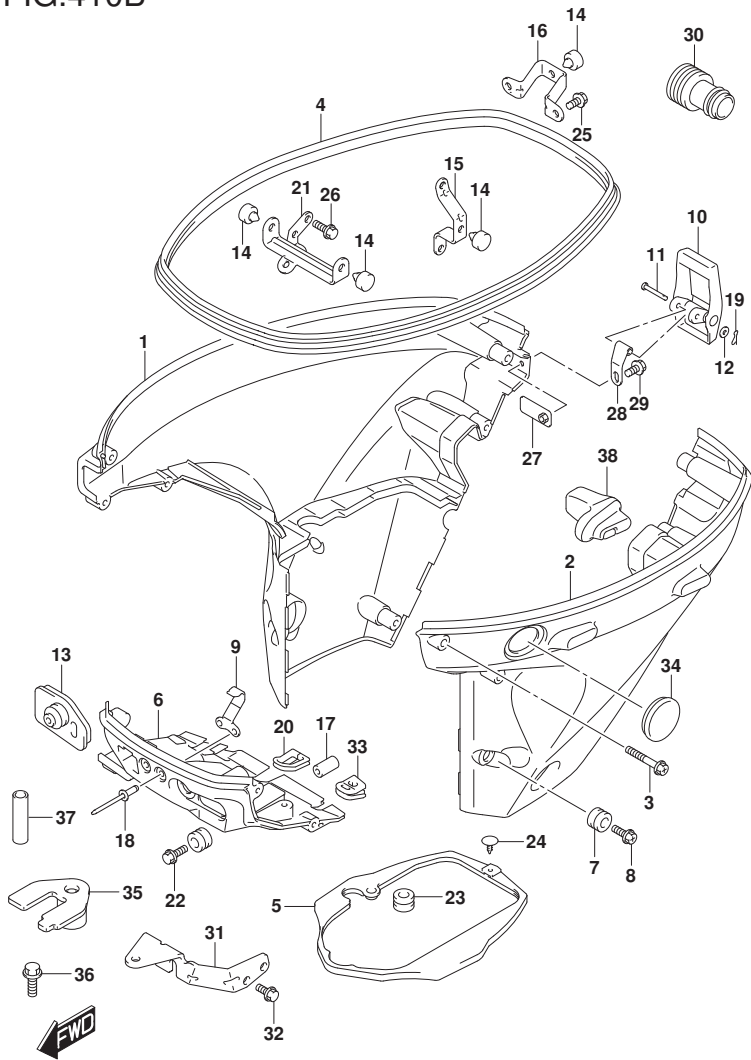


FIG.410B (1-G-8) SIDE COVER (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61810-94L00-YAY	COVER, SIDE STBD (BLACK)	1	
2	61820-94L00-YAY	COVER, SIDE PORT (BLACK)	1	
3	09136-06169	SCREW (6X35)	8	
4	61112-94L10	RUBBER, SIDE COVER	1	
5	61134-94L00	SEAL, SIDE COVER	1	
6	61830-94L00-YAY	PANEL, FRONT (BLACK)	1	
7	09320-11017	CUSHION	2	
8	09136-06168	SCREW (6X17)	2	
9	61412-89L00	HOOK, FRONT PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-94L10	GROMMET, CABLE R/CON	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	4	
15	61827-94L00	HOLDER, SIDE COVER	1	
16	61829-94L00	HOLDER, SIDE COVER REAR	1	
17	09251-09007	CUSHION	1	
18	09229-04005	RIVET	2	
19	09385-04003	CLIP	1	
20	23131-94L00	BOOT, CLUTCH ROD	1	
21	61841-94L00	HOLDER, SIDE COVER	1	
22	09136-06168	SCREW (6X17)	1	
23	09320-11017	CUSHION	1	
24	09409-05302-5PK	CLIP (BLACK)	1	
25	01550-0616C	BOLT	2	
26	01550-0820C	BOLT	1	
27	61620-94L00	PLATE, FASTENER HOLDER	1	
28	61642-90L00	HOLDER, FASTENER LEVER	1	
29	09116-06223	BOLT (6X12)	1	

FIG.410B

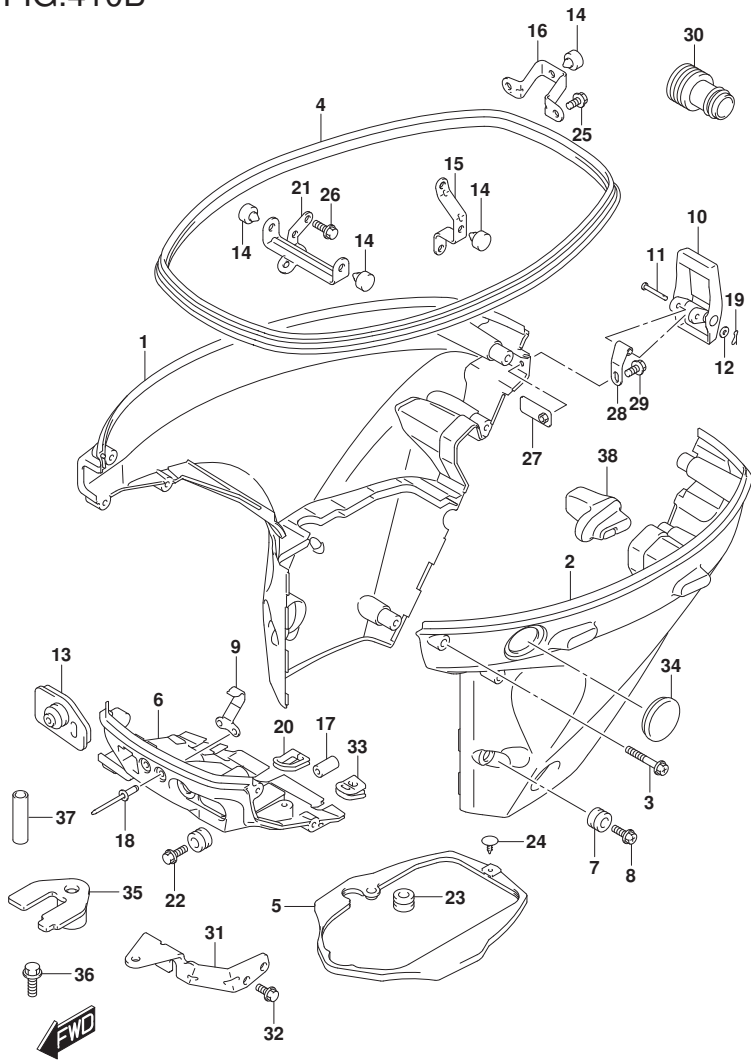


FIG.410B (1-G-9) SIDE COVER (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	17917-87L00	CONNECTOR, FLUSH WATER	1	
31	67341-94L00	HOLDER, R/CON CABLE	1	
32	01547-0616C	BOLT	2	
33	36656-94L00	GROMMET, PT CABLE	1	
34	37853-94L00	PLUG, PT SWITCH HOLE	1	
35	67343-94L00	STOPPER, R/CON CABLE	1	
36	09116-06225	BOLT (6X15)	1	
37	09352-70103-600	HOSE (7X10.2X600)	2	L:600->14
38	61151-94L00	CUSHION, SIDE COVER	1	

DF25AR P01
DF30AR P01

FIG.410C

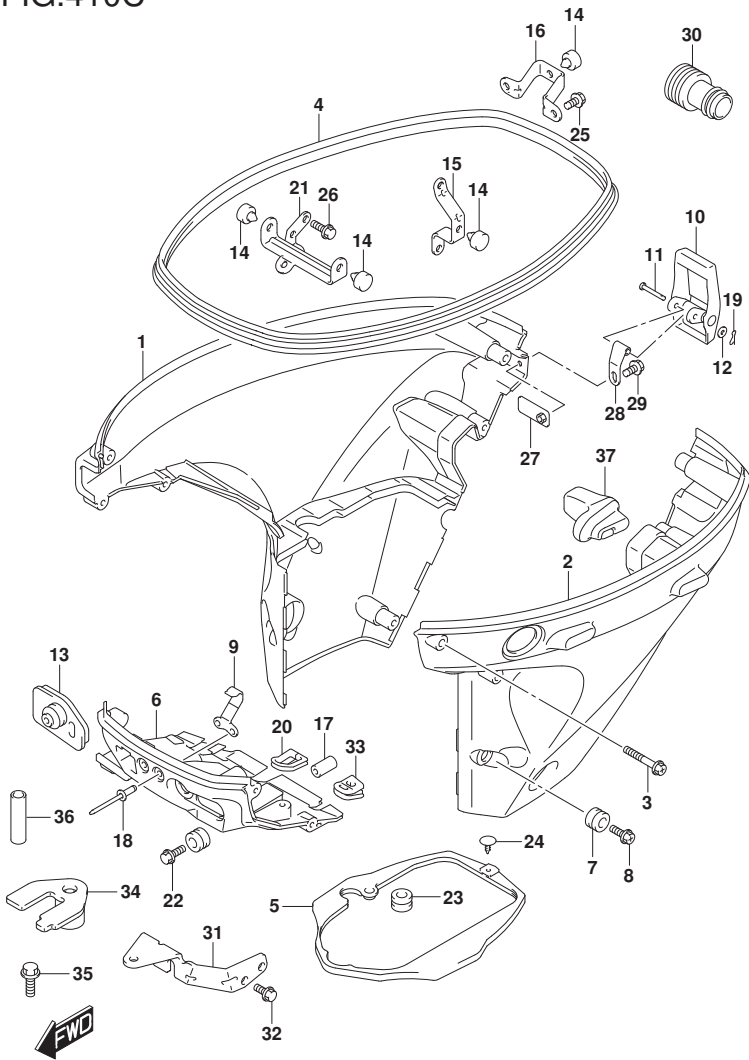


FIG.410C (1-G-10) SIDE COVER (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61810-94L00-YAY	COVER, SIDE STBD (BLACK)	1	
1-2	61810-94L00-Y5S	COVER, SIDE STBD (WHITE)	1	
2-1	61820-94L20-YAY	COVER, SIDE PORT (BLACK)	1	
2-2	61820-94L20-Y5S	COVER, SIDE PORT (WHITE)	1	
3	09136-06169	SCREW (6X35)	8	
4	61112-94L10	RUBBER, SIDE COVER	1	
5	61134-94L00	SEAL, SIDE COVER	1	
6-1	61830-94L00-YAY	PANEL, FRONT (BLACK)	1	
6-2	61830-94L00-Y5S	PANEL, FRONT (WHITE)	1	
7	09320-11017	CUSHION	2	
8	09136-06168	SCREW (6X17)	2	
9	61412-89L00	HOOK, FRONT PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-94L10	GROMMET, CABLE R/CON	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	4	
15	61827-94L00	HOLDER, SIDE COVER	1	
16	61829-94L00	HOLDER, SIDE COVER REAR	1	
17	09251-09007	CUSHION	1	
18	09229-04005	RIVET	2	
19	09385-04003	CLIP	1	
20	23131-94L00	BOOT, CLUTCH ROD	1	
21	61841-94L00	HOLDER, SIDE COVER	1	
22	09136-06168	SCREW (6X17)	1	
23	09320-11017	CUSHION	1	
24	09409-05302-5PK	CLIP (BLACK)	1	
25	01550-0616C	BOLT	2	
26	01550-0820C	BOLT	1	

FIG.410C

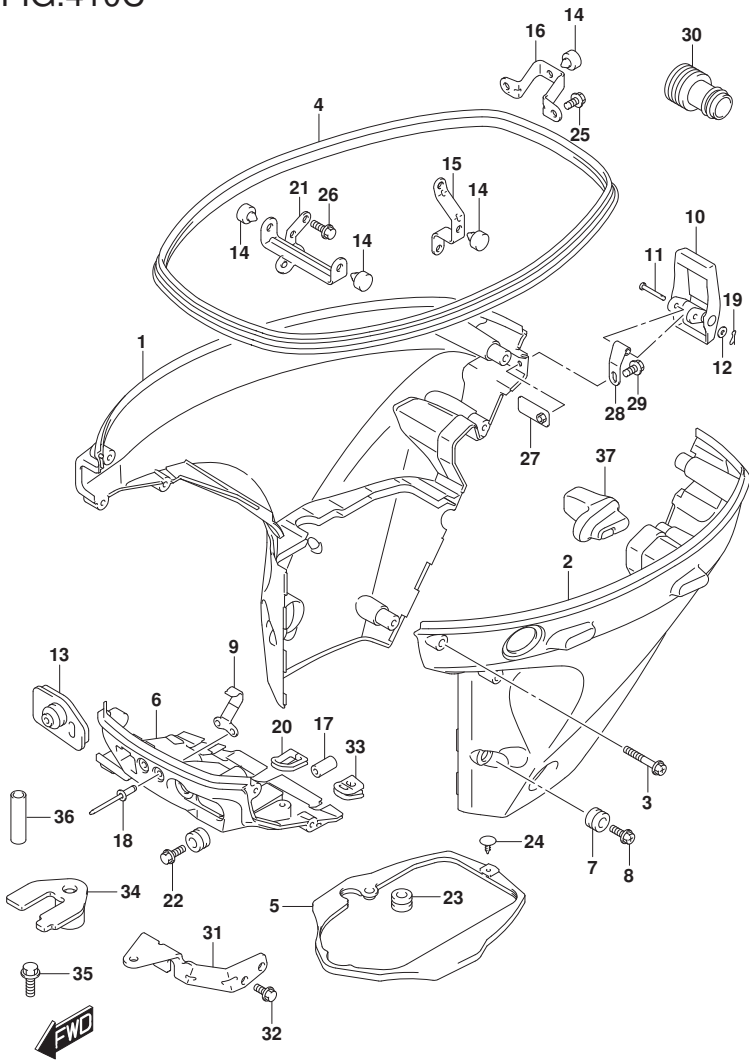


FIG.410C (1-G-11) SIDE COVER (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	61620-94L00	PLATE, FASTENER HOLDER	1	
28	61642-90L00	HOLDER, FASTENER LEVER	1	
29	09116-06223	BOLT (6X12)	1	
30	17917-87L00	CONNECTOR, FLUSH WATER	1	
31	67341-94L00	HOLDER, R/CON CABLE	1	
32	01547-0616C	BOLT	2	
33	36656-94L00	GROMMET, PT CABLE	1	
34	67343-94L00	STOPPER, R/CON CABLE	1	
35	09116-06225	BOLT (6X15)	1	
36	09352-70103-600	HOSE (7X10.2X600)	2	L:600->14
37	61151-94L00	CUSHION, SIDE COVER	1	

DF25AT P01
DF30AT P01

FIG.410D

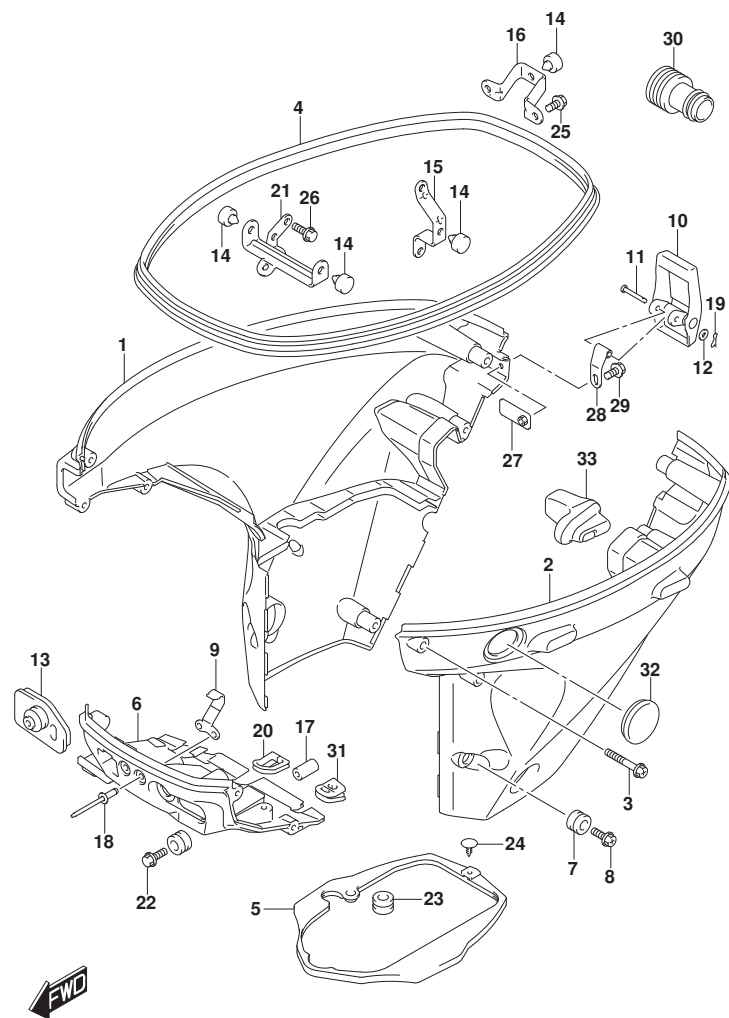


FIG.410D (1-G-12) SIDE COVER (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61810-94L00-YAY	COVER, SIDE STBD (BLACK)	1	
1-2	61810-94L00-Y5S	COVER, SIDE STBD (WHITE)	1	
2-1	61820-94L20-YAY	COVER, SIDE PORT (BLACK)	1	
2-2	61820-94L20-Y5S	COVER, SIDE PORT (WHITE)	1	
3	09136-06169	SCREW (6X35)	8	
4	61112-94L10	RUBBER, SIDE COVER	1	
5	61134-94L00	SEAL, SIDE COVER	1	
6-1	61830-94L00-YAY	PANEL, FRONT (BLACK)	1	
6-2	61830-94L00-Y5S	PANEL, FRONT (WHITE)	1	
7	09320-11017	CUSHION	2	
8	09136-06168	SCREW (6X17)	2	
9	61412-89L00	HOOK, FRONT PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-94L20	GROMMET, CABLE	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	4	
15	61827-94L00	HOLDER, SIDE COVER	1	
16	61829-94L00	HOLDER, SIDE COVER REAR	1	
17	09251-09007	CUSHION	1	
18	09229-04005	RIVET	2	
19	09385-04003	CLIP	1	
20	23131-94L00	BOOT, CLUTCH ROD	1	
21	61841-94L00	HOLDER, SIDE COVER	1	
22	09136-06168	SCREW (6X17)	1	
23	09320-11017	CUSHION	1	
24	09409-05302-5PK	CLIP (BLACK)	1	
25	01550-0616C	BOLT	2	
26	01550-0820C	BOLT	1	

FIG.410D

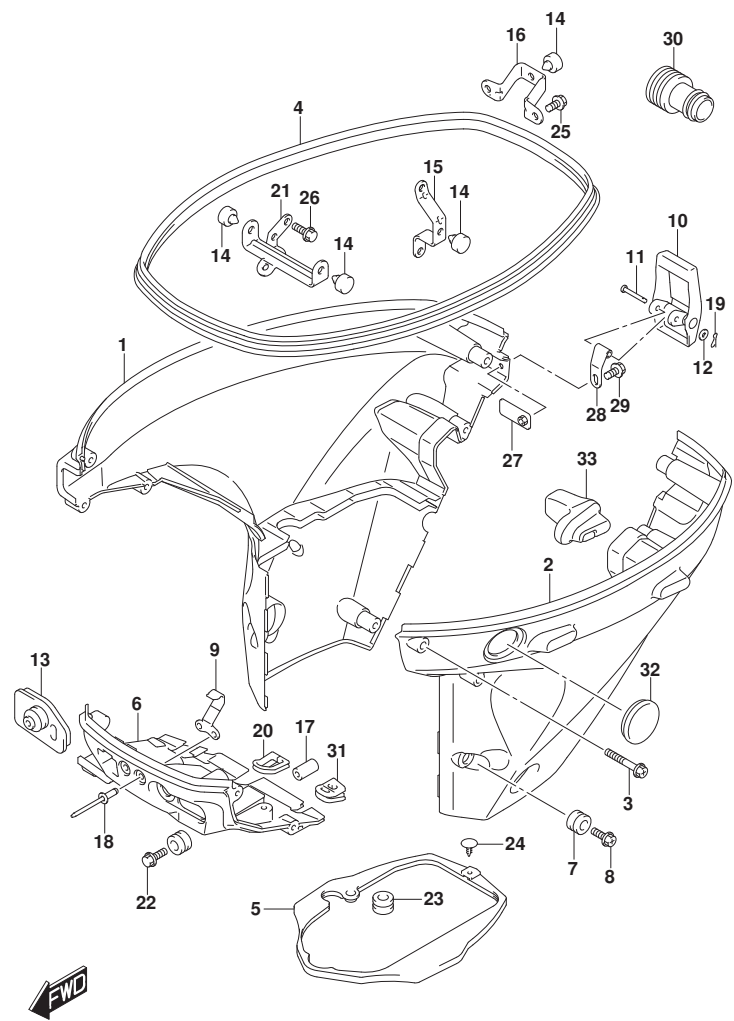


FIG.410D (1-G-13) SIDE COVER (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	61620-94L00	PLATE, FASTENER HOLDER	1	
28	61642-90L00	HOLDER, FASTENER LEVER	1	
29	09116-06223	BOLT (6X12)	1	
30	17917-87L00	CONNECTOR, FLUSH WATER	1	
31	36656-94L00	GROMMET, PT CABLE	1	
32	37853-94L00	PLUG, PT SWITCH HOLE	1	
33	61151-94L00	CUSHION, SIDE COVER	1	

DF25ATH P01
DF30ATH P01

FIG.410E

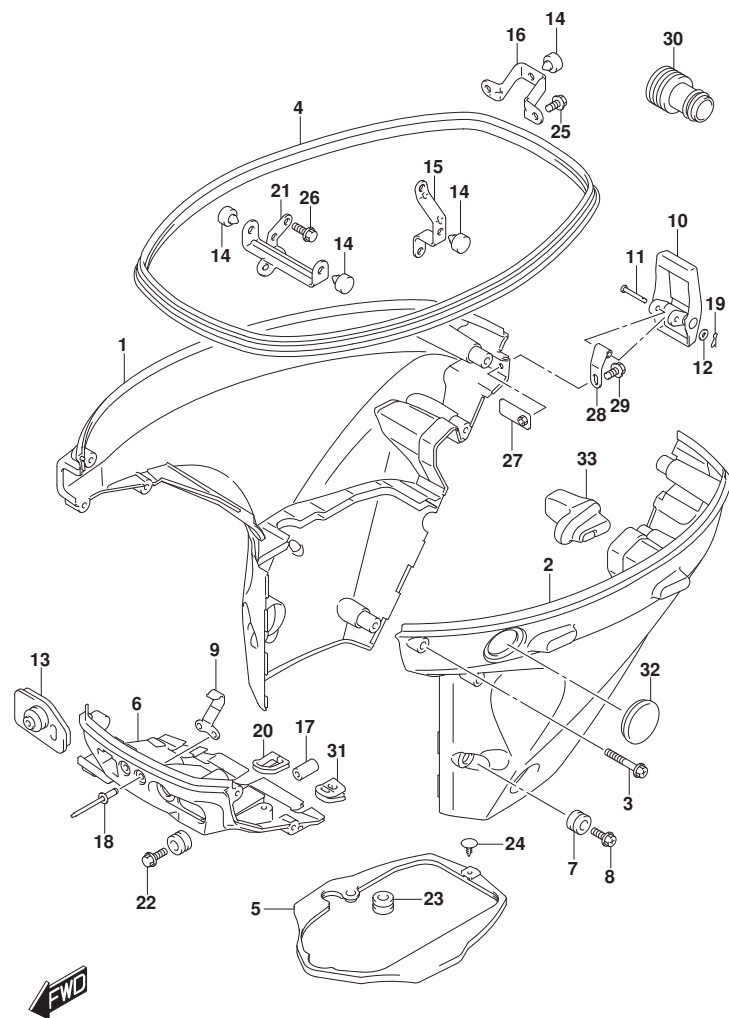


FIG.410E (1-G-14) SIDE COVER (DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61810-94L00-YAY	COVER, SIDE STBD (BLACK)	1	
1-2	61810-94L00-Y5S	COVER, SIDE STBD (WHITE)	1	
2-1	61820-94L00-YAY	COVER, SIDE PORT (BLACK)	1	
2-2	61820-94L00-Y5S	COVER, SIDE PORT (WHITE)	1	
3	09136-06169	SCREW (6X35)	8	
4	61112-94L10	RUBBER, SIDE COVER	1	
5	61134-94L00	SEAL, SIDE COVER	1	
6-1	61830-94L00-YAY	PANEL, FRONT (BLACK)	1	
6-2	61830-94L00-Y5S	PANEL, FRONT (WHITE)	1	
7	09320-11017	CUSHION	2	
8	09136-06168	SCREW (6X17)	2	
9	61412-89L00	HOOK, FRONT PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13-1	61124-94L00	GROMMET, CABLE	1	W/MANUAL STARTER
13-2	61124-94L20	GROMMET, CABLE	1	W/ELECTRIC STARTER
14	61151-91J11	CUSHION, LOWER COVER HOLDER	4	
15	61827-94L00	HOLDER, SIDE COVER	1	
16	61829-94L00	HOLDER, SIDE COVER REAR	1	
17	09251-09007	CUSHION	1	
18	09229-04005	RIVET	2	
19	09385-04003	CLIP	1	
20	23131-94L00	BOOT, CLUTCH ROD	1	
21	61841-94L00	HOLDER, SIDE COVER	1	
22	09136-06168	SCREW (6X17)	1	
23	09320-11017	CUSHION	1	
24	09409-05302-5PK	CLIP (BLACK)	1	
25	01550-0616C	BOLT	2	
26	01550-0820C	BOLT	1	

FIG.410E

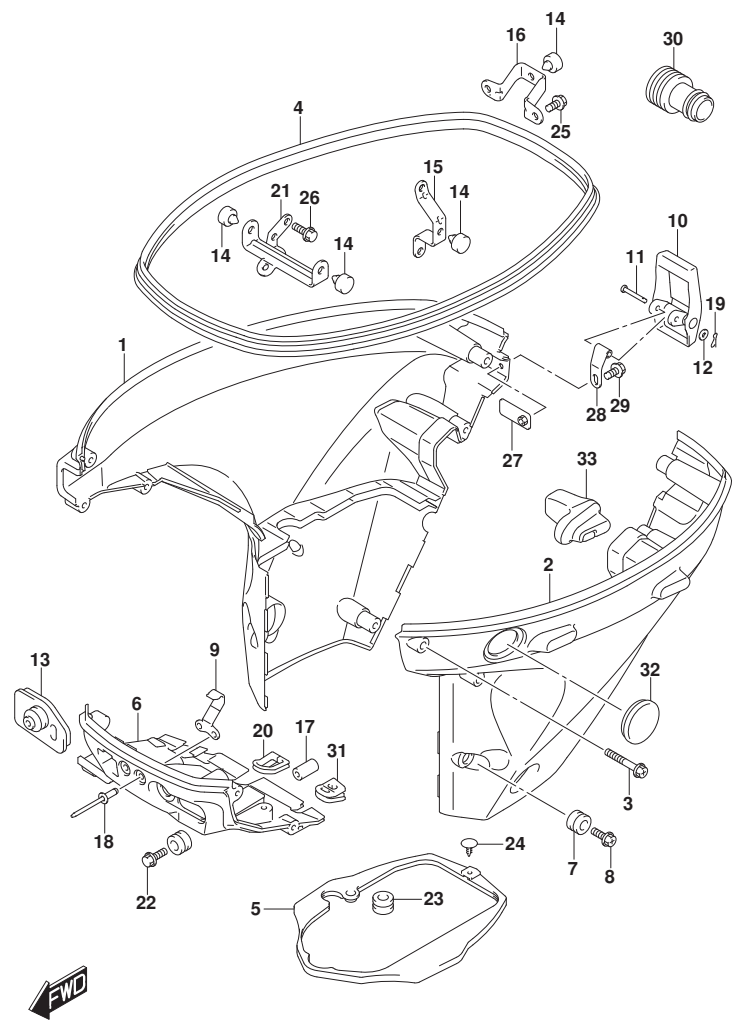


FIG.410E (1-G-15) SIDE COVER (DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	61620-94L00	PLATE, FASTENER HOLDER	1	
28	61642-90L00	HOLDER, FASTENER LEVER	1	
29	09116-06223	BOLT (6X12)	1	
30	17917-87L00	CONNECTOR, FLUSH WATER	1	
31	36656-94L00	GROMMET, PT CABLE	1	
32	37853-94L00	PLUG, PT SWITCH HOLE	1	
33	61151-94L00	CUSHION, SIDE COVER	1	

DF30A P40

FIG.420A

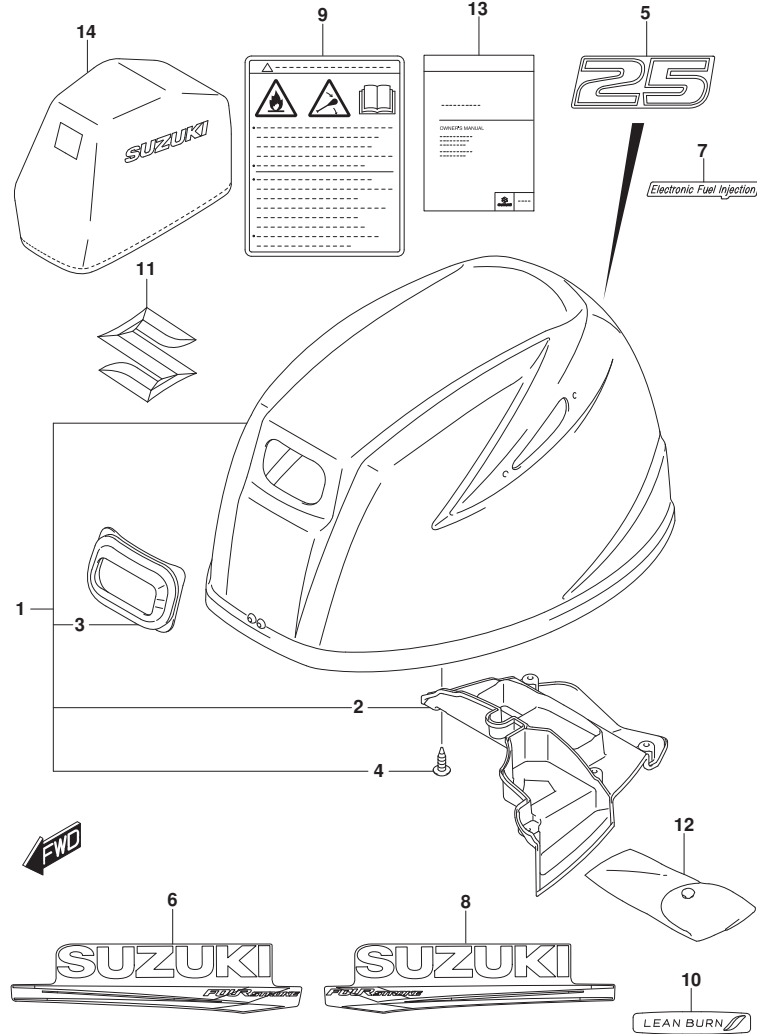


FIG.420A (1-H-2) ENGINE COVER (DF25A)(DF25AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-94L00-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-94L00	.COVER, AIR INTAKE INNER	1	
3	61622-90L00	.SEAL, RECOIL STARTER	1	
4	03542-05169	.SCREW	6	
5	61435-94L20-YAY	MARK, EMBLEM REAR (25) (BLACK)	1	
6	61443-94L10-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	
7	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
8	61453-94L10-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	
9	61458-89L30	LABEL, ENGINE COVER	1	
10	61471-89L00	DECAL, LEAN BURN	1	
11	77811-58J10-0PG	EMBLEM, S (CHROME)	1	
12	59800-94L10	TOOL ASSY	1	
13	99011-94L40-055	MANUAL, OWNER'S	1	
14	68110-88L01	COVER, WEATHER	1	OPT

DF25A P01
DF25AR P01

FIG.420B

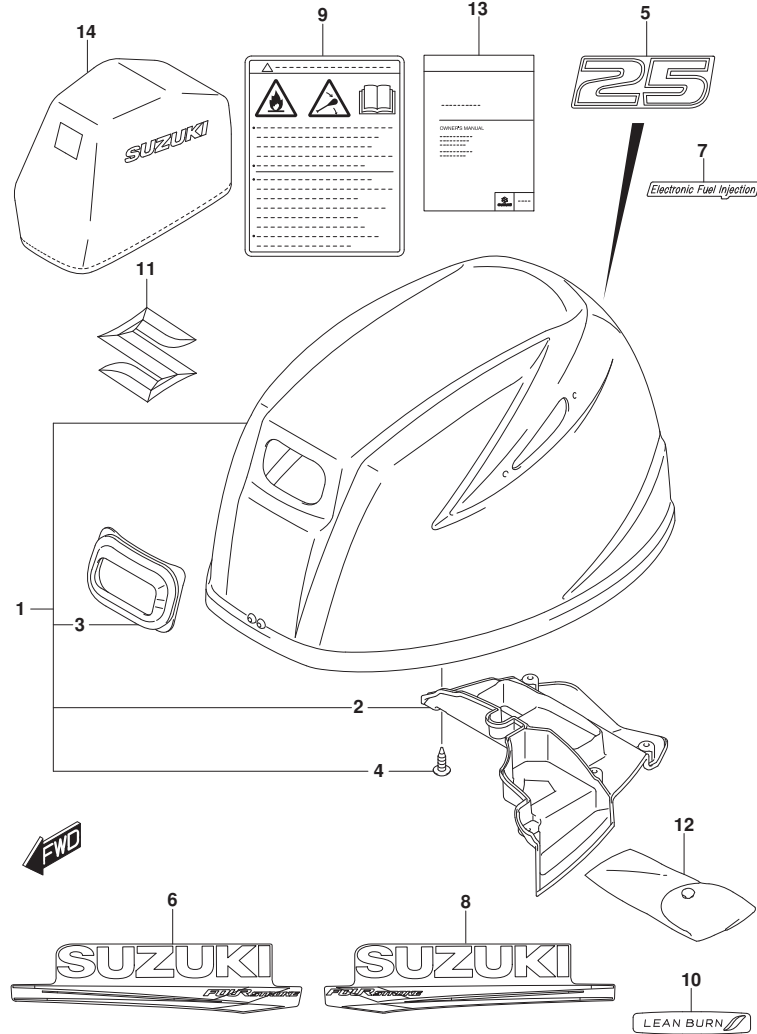


FIG.420B (1-H-3) ENGINE COVER (DF25AT)(DF25ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-94L00-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-94L00-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-94L00	.COVER, AIR INTAKE INNER	1	
3	61622-90L00	.SEAL, RECOIL STARTER	1	
4	03542-05169	.SCREW	6	
5-1	61435-94L20-YAY	MARK, EMBLEM REAR (25) (BLACK)	1	
5-2	61435-94L20-Y5S	MARK, EMBLEM REAR (25) (WHITE)	1	
6-1	61443-94L10-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	
6-2	61443-94L10-Y5S	STRIPE, ENGINE COVER STBD (WHITE)	1	
7-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
7-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
8-1	61453-94L10-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	
8-2	61453-94L10-Y5S	STRIPE, ENGINE COVER PORT (WHITE)	1	
9	61458-89L30	LABEL, ENGINE COVER	1	
10	61471-89L00	DECAL, LEAN BURN	1	
11	77811-58J10-0PG	EMBLEM, S (CHROME)	1	
12	59800-94L10	TOOL ASSY	1	
13	99011-94L40-055	MANUAL, OWNER'S	1	
14	68110-88L01	COVER, WEATHER	1	OPT

DF25AT P01
DF25ATH P01

FIG.420C

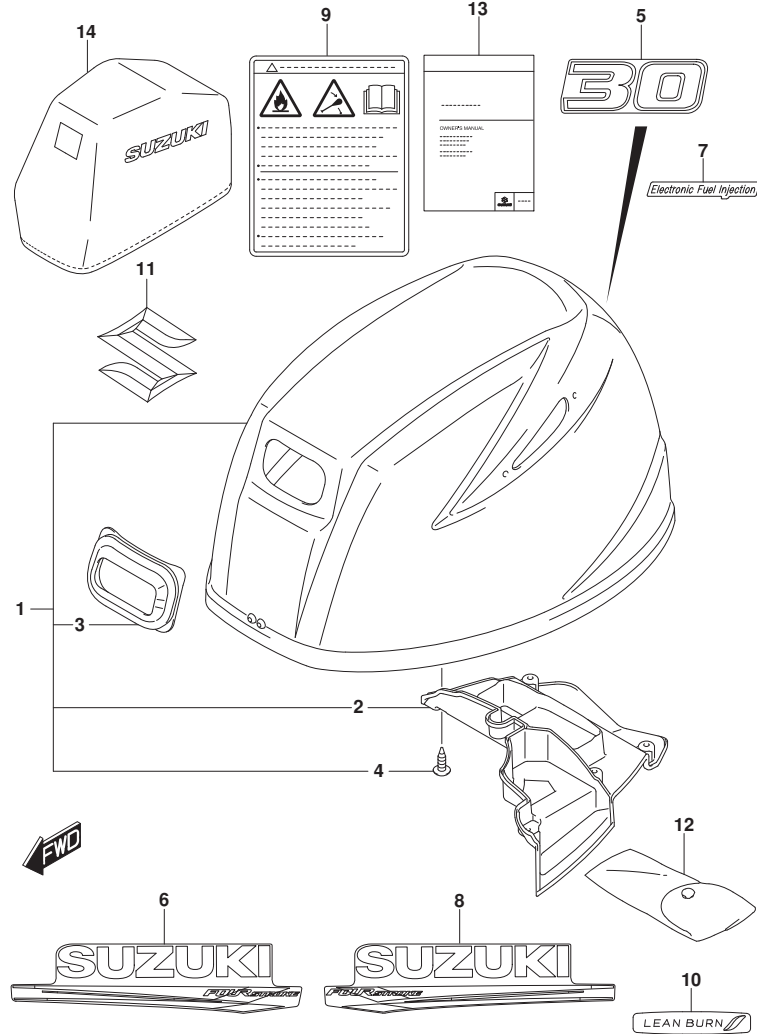


FIG.420C (1-H-4) ENGINE COVER (DF30A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-94L00-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-94L00-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-94L00	.COVER, AIR INTAKE INNER	1	
3	61622-90L00	.SEAL, RECOIL STARTER	1	
4	03542-05169	.SCREW	6	
5-1	61435-94L30-YAY	MARK, EMBLEM REAR (30) (BLACK)	1	
5-2	61435-94L30-Y5S	MARK, EMBLEM REAR (30) (WHITE)	1	
6-1	61443-94L10-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	
6-2	61443-94L10-Y5S	STRIPE, ENGINE COVER STBD (WHITE)	1	
7-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
7-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
8-1	61453-94L10-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	
8-2	61453-94L10-Y5S	STRIPE, ENGINE COVER PORT (WHITE)	1	
9	61458-89L30	LABEL, ENGINE COVER	1	
10	61471-89L00	DECAL, LEAN BURN	1	
11	77811-58J10-0PG	EMBLEM, S (CHROME)	1	
12	59800-94L10	TOOL ASSY	1	
13	99011-94L40-055	MANUAL, OWNER'S	1	
14	68110-88L01	COVER, WEATHER	1	OPT

DF30A P40

FIG.420D

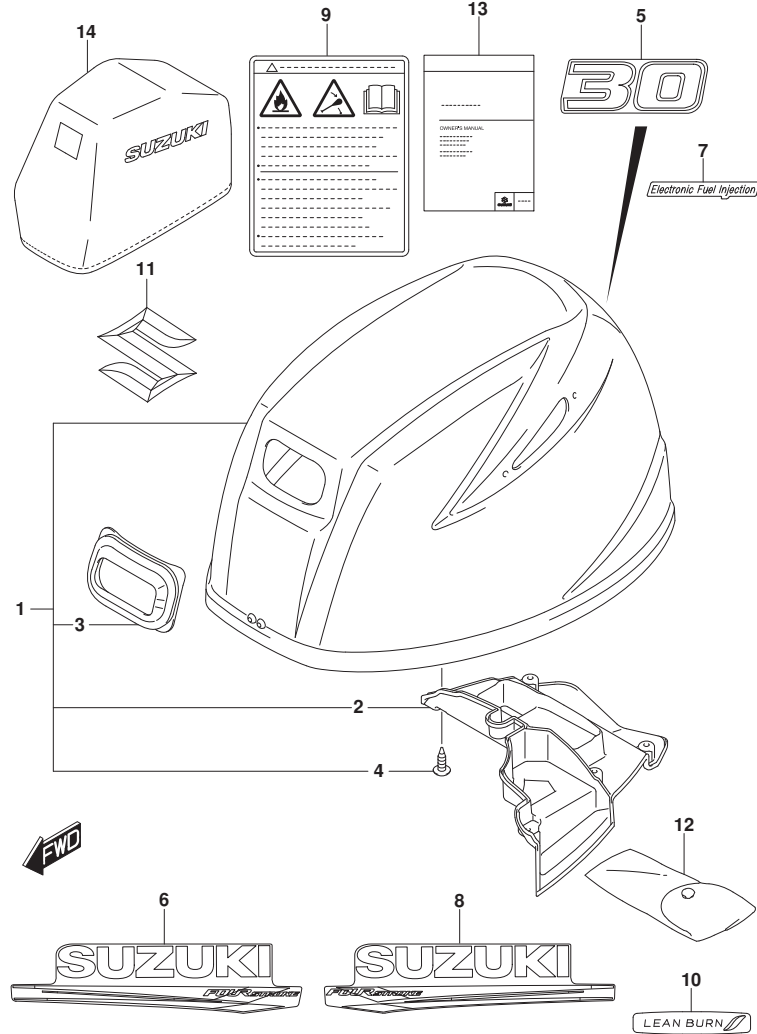


FIG.420D (1-H-5) ENGINE COVER (DF30AR)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-94L00-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-94L00	.COVER, AIR INTAKE INNER	1	
3	61622-90L00	.SEAL, RECOIL STARTER	1	
4	03542-05169	.SCREW	6	
5	61435-94L30-YAY	MARK, EMBLEM REAR (30) (BLACK)	1	
6	61443-94L10-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	
7	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
8	61453-94L10-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	
9	61458-89L30	LABEL, ENGINE COVER	1	
10	61471-89L00	DECAL, LEAN BURN	1	
11	77811-58J10-0PG	EMBLEM, S (CHROME)	1	
12	59800-94L10	TOOL ASSY	1	
13	99011-94L40-055	MANUAL, OWNER'S	1	
14	68110-88L01	COVER, WEATHER	1	OPT

DF30AR P01
DF30AQ P01

FIG.420E

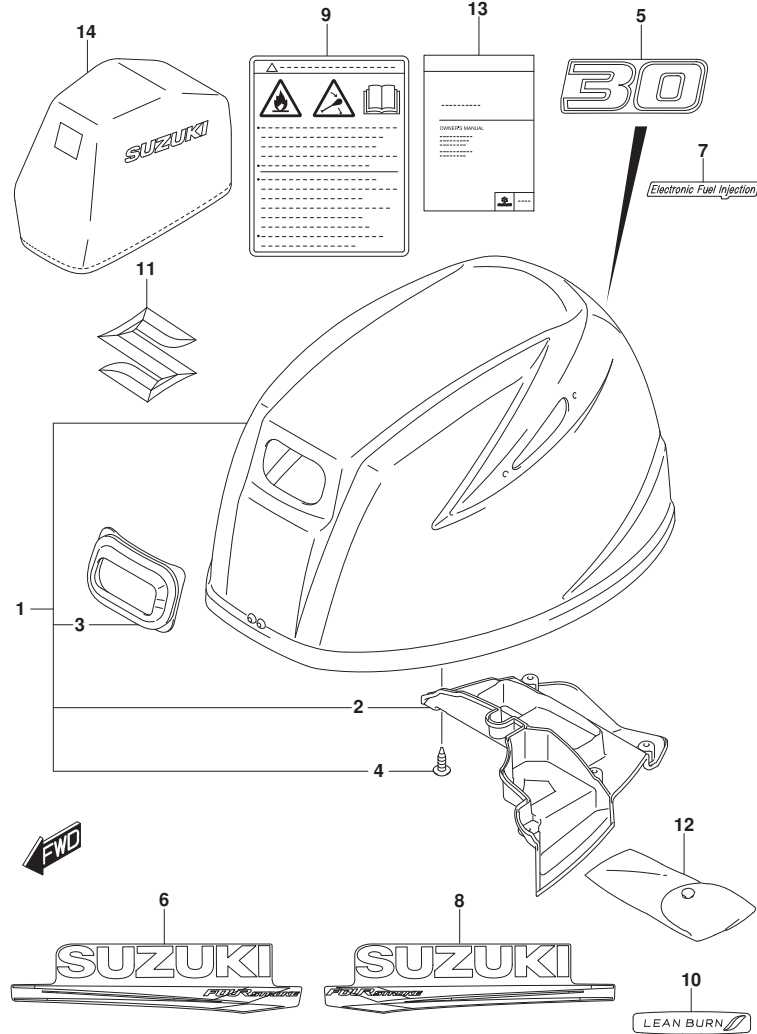


FIG.420E (1-H-6) ENGINE COVER (DF30AT)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-94L00-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-94L00-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-94L00	.COVER, AIR INTAKE INNER	1	
3	61622-90L00	.SEAL, RECOIL STARTER	1	
4	03542-05169	.SCREW	6	
5-1	61435-94L30-YAY	MARK, EMBLEM REAR (30) (BLACK)	1	
5-2	61435-94L30-Y5S	MARK, EMBLEM REAR (30) (WHITE)	1	
6-1	61443-94L10-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	
6-2	61443-94L10-Y5S	STRIPE, ENGINE COVER STBD (WHITE)	1	
7-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
7-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
8-1	61453-94L10-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	
8-2	61453-94L10-Y5S	STRIPE, ENGINE COVER PORT (WHITE)	1	
9	61458-89L30	LABEL, ENGINE COVER	1	
10	61471-89L00	DECAL, LEAN BURN	1	
11	77811-58J10-0PG	EMBLEM, S (CHROME)	1	
12	59800-94L10	TOOL ASSY	1	
13	99011-94L40-055	MANUAL, OWNER'S	1	
14	68110-88L01	COVER, WEATHER	1	OPT

DF30AT P01
DF30ATH P01

FIG.432A

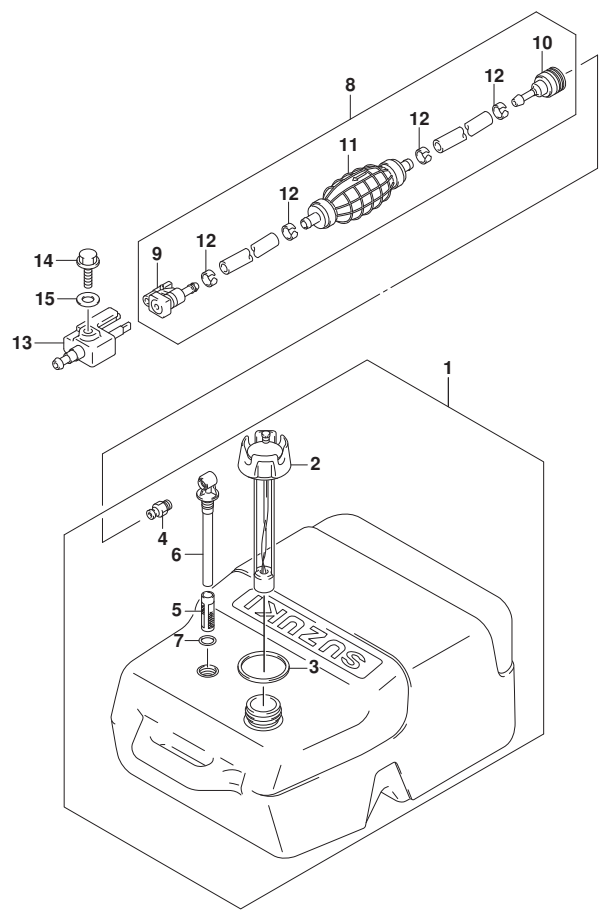


FIG.432A (1-H-7) FUEL TANK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-89L30	HOSE, FUEL (TANK TO CONN)	1	
9	65750-87J11	.SOCKET, FUEL HOSE	1	
10	65750-95500	.SOCKET, FUEL HOSE	1	
11	65770-89L00	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP, FUEL HOSE	4	
13	65720-986L0	PLUG, FUEL CONNECTOR	1	
14	09103-06237	BOLT (6X12.5)	1	
15	09160-06085	WASHER (6.5X15X1)	1	

FIG.442A

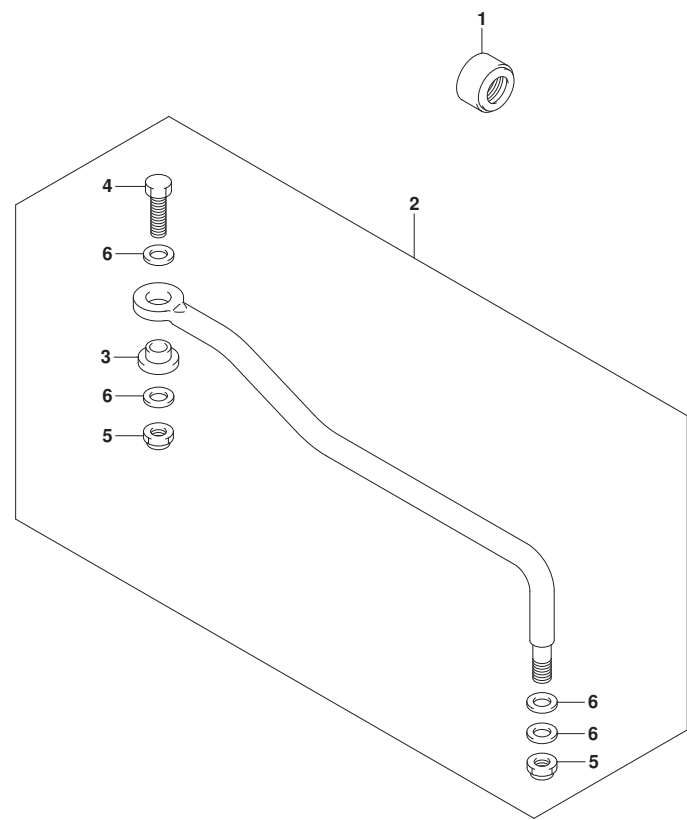


FIG.442A (1-H-8) DRAG LINK (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41161-94400	SEAL, STEERING CABLE	1	
2	67701-94L00	LINK ASSY, DRAG	1	
3	67721-94L00	.SPACER	1	
4	67725-96J00	.BOLT, DRAG LINK	1	
5	67726-99E00	.NUT, LOCK	2	
6	67728-99E00	.WASHER	4	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01



FIG.444A

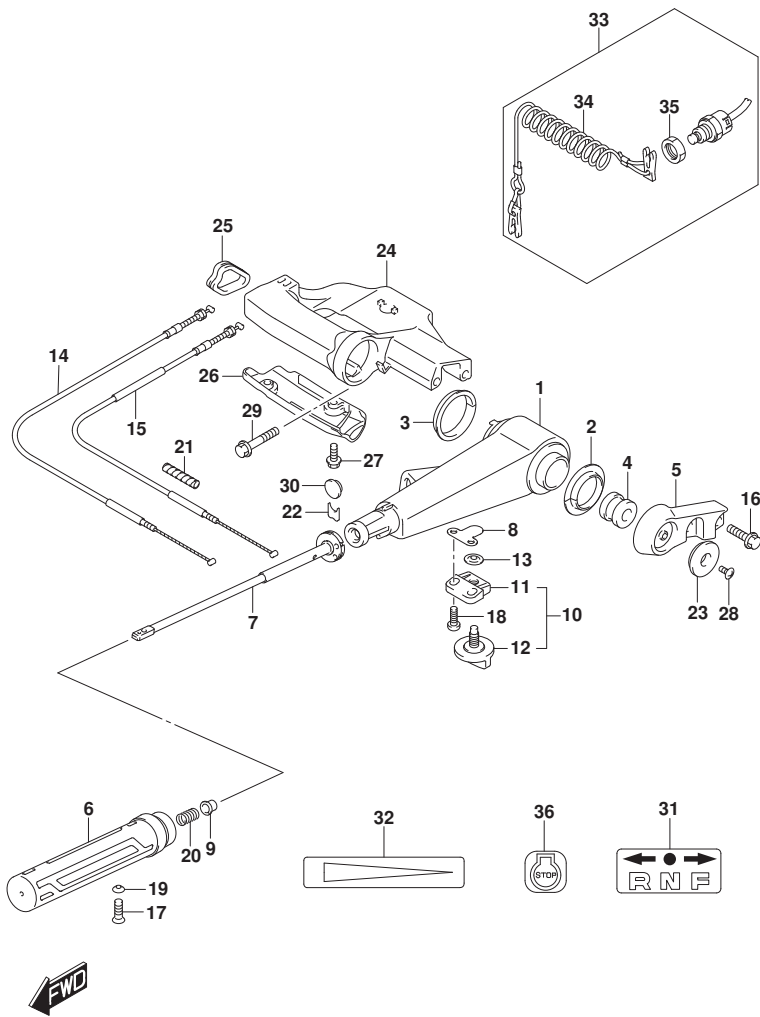


FIG.444A (1-H-9) TILLER HANDLE (DF25A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63111-89L01-YAY	HANDLE, TILLER (BLACK)	1	
2	63115-99J10	BUSH, TILLER HANDLE NO.1	1	
3	63115-99J00	BUSH, TILLER HANDLE NO.2	1	
4	63116-99J00	RUBBER, TILLER HANDLE FRICTION	1	
5	63121-99J00-YAY	COVER, TILLER HANDLE (BLACK)	1	
6	63210-94L01	GRIP, HANDLE	1	
7	63220-94L00	ROD, HANDLE	1	
8	63225-98601	PLATE, HANDLE ROD ADJUSTER	1	
9	63225-93200	BUSH, HANDLE ROD	1	
10	63240-94J10	ADJUSTER SET, HANDLE ROD	1	
11	63241-986B0	.SUPPORT, HANDLE ROD	1	
12	63244-94J00	.KNOB, THROTTLE ADJ	1	
13	09148-06008	NUT	1	
14	63610-94L00	CABLE ASSY, THROTTLE NO.1	1	
15	63650-94L00	CABLE ASSY, THROTTLE NO.2	1	
16	09116-08151	BOLT (8X30)	2	
17	09126-06015	SCREW (6X23)	1	
18	09136-05041	SCREW (5X20)	2	
19	09163-06001	LOCK WASHER	1	
20	09440-12027	SPRING	1	
21	33833-91J00	TUBE, SWITCH LEAD (L:250)	1	
22	63114-99J01	PLATE, WARNING INDICATOR	1	
23	63122-99J00	PROTECTOR, HANDLE COVER	1	

FIG.444A

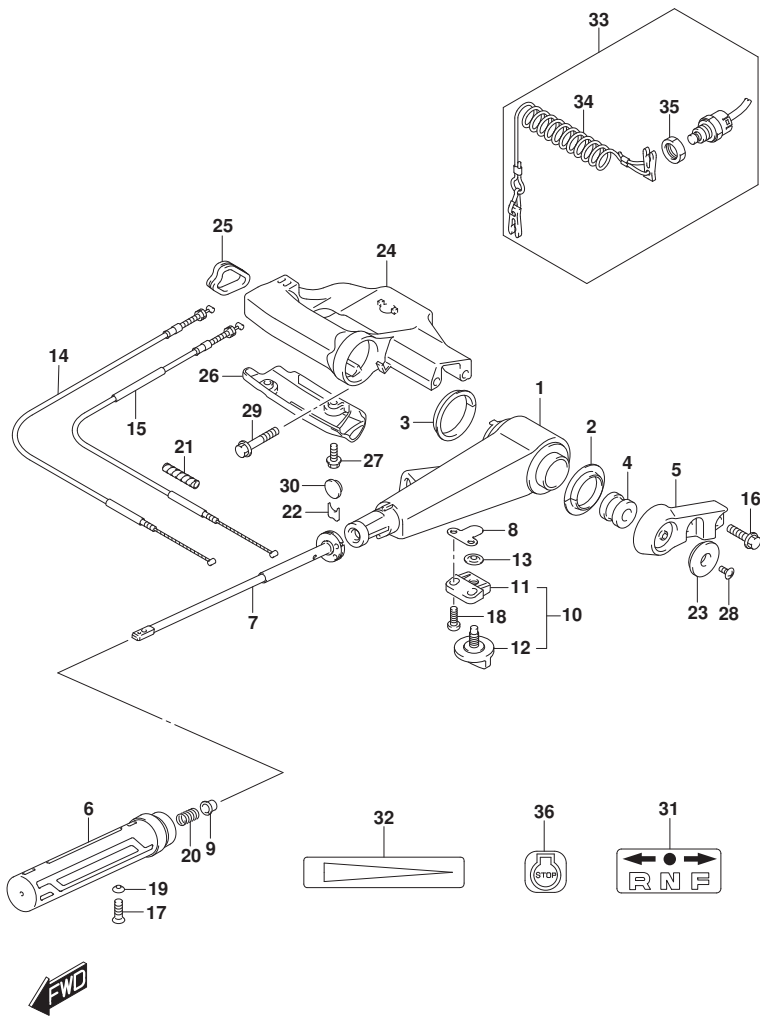


FIG.444A (1-H-10) TILLER HANDLE (DF25A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	63131-94L00-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
25	63133-89L00	GROMMET, TILLER HANDLE BRACKET	1	
26	63134-94L00	COVER, TILLER HANDLE BRACKET	1	
27	09136-05041	SCREW (5X20)	2	
28	09125-05042	SCREW (5X10)	1	
29	09116-08155	BOLT (8X45)	2	
30	09250-12006	CAP (OD:20)	1	
31	21131-94J00-YAY	MARK, CLUTCH SHIFT (BLACK)	1	
32	63215-93110	MARK, HANDLE GRIP	1	
33	37830-94J11	SWITCH ASSY, EMERGENCY & STOP	1	
34	37823-97J00	.PLATE, LOCK	1	
35	37826-97J01	.NUT	1	
36	37835-91J00-YAY	LABEL, STOP (BLACK)	1	

DF25A P01
DF30AQ P01

FIG.444B

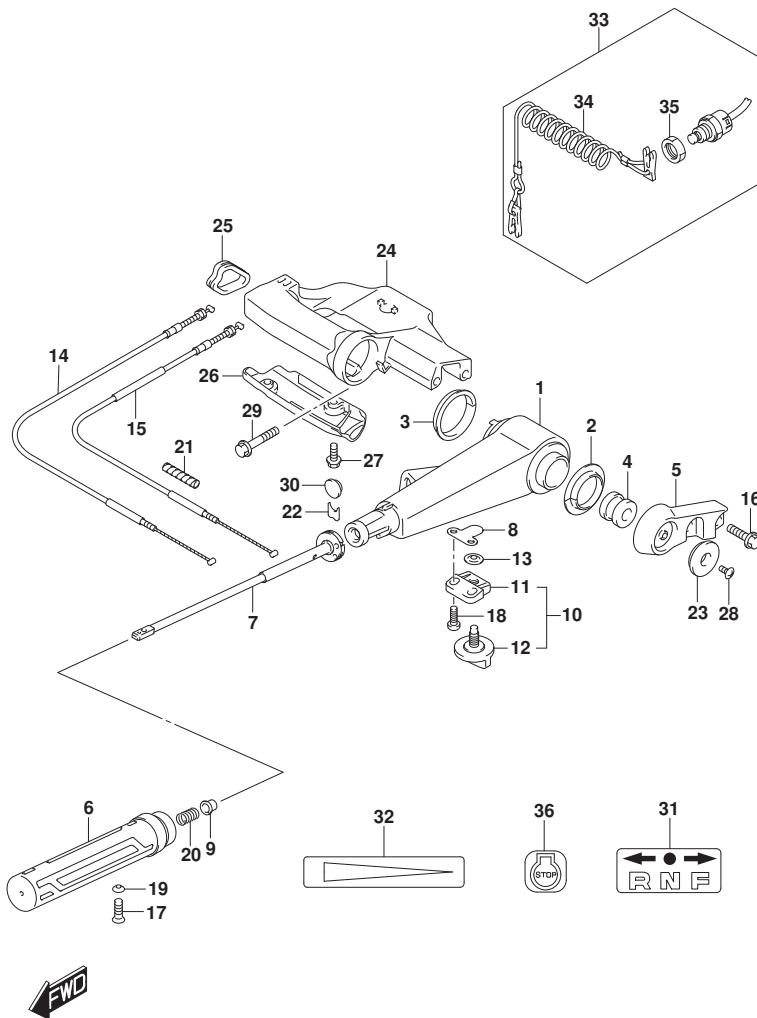


FIG.444B (1-H-11) TILLER HANDLE (DF25ATH)(DF30A)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	63111-89L01-YAY	HANDLE, TILLER (BLACK)	1	
1-2	63111-89L01-Y5S	HANDLE, TILLER (WHITE)	1	
2	63115-99J10	BUSH, TILLER HANDLE NO.1	1	
3	63115-99J00	BUSH, TILLER HANDLE NO.2	1	
4	63116-99J00	RUBBER, TILLER HANDLE FRICTION	1	
5-1	63121-99J00-YAY	COVER, TILLER HANDLE (BLACK)	1	
5-2	63121-99J00-Y5S	COVER, TILLER HANDLE (WHITE)	1	
6	63210-94L01	GRIP, HANDLE	1	
7	63220-94L00	ROD, HANDLE	1	
8	63225-98601	PLATE, HANDLE ROD ADJUSTER	1	
9	63225-93200	BUSH, HANDLE ROD	1	
10	63240-94J10	ADJUSTER SET, HANDLE ROD	1	
11	63241-986B0	.SUPPORT, HANDLE ROD	1	
12	63244-94J00	.KNOB, THROTTLE ADJ	1	
13	09148-06008	NUT	1	
14	63610-94L00	CABLE ASSY, THROTTLE NO.1	1	
15	63650-94L00	CABLE ASSY, THROTTLE NO.2	1	
16	09116-08151	BOLT (8X30)	2	
17	09126-06015	SCREW (6X23)	1	
18	09136-05041	SCREW (5X20)	2	
19	09163-06001	LOCK WASHER	1	
20	09440-12027	SPRING	1	
21	33833-91J00	TUBE, SWITCH LEAD (L:250)	1	
22	63114-99J01	PLATE, WARNING INDICATOR	1	
23	63122-99J00	PROTECTOR, HANDLE COVER	1	

FIG.444B

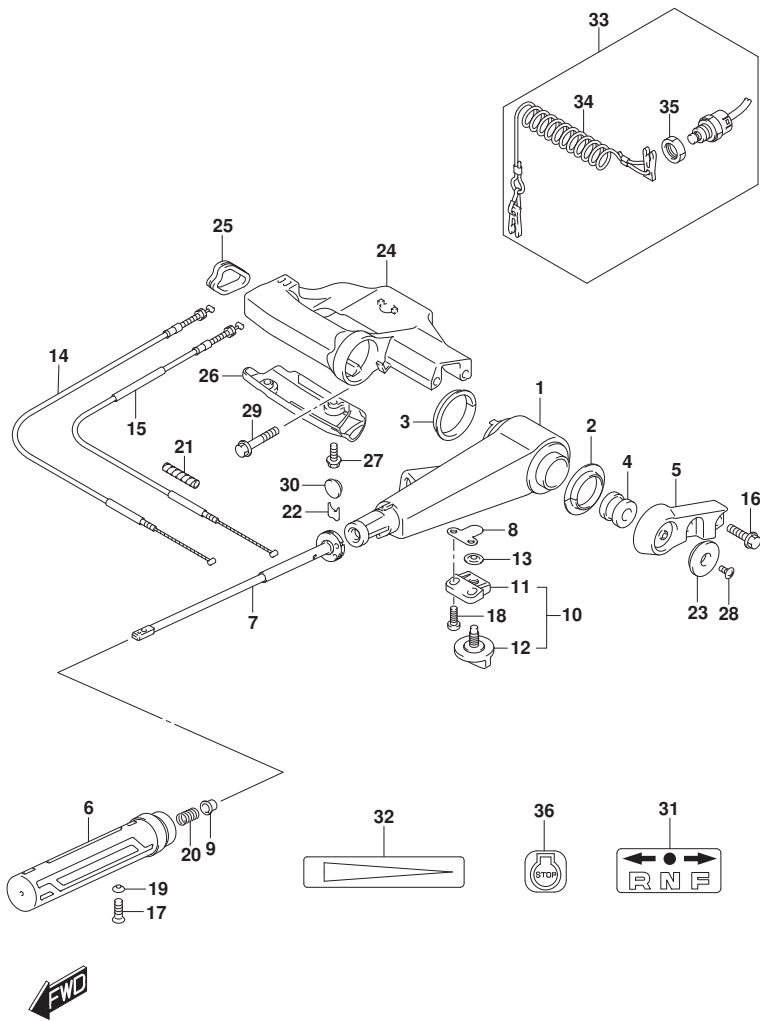


FIG.444B (1-H-12) TILLER HANDLE (DF25ATH)(DF30A)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24-1	63131-94L00-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
24-2	63131-94L00-Y5S	BRACKET, TILLER HANDLE (WHITE)	1	
25	63133-89L00	GROMMET, TILLER HANDLE BRACKET	1	
26	63134-94L00	COVER, TILLER HANDLE BRACKET	1	
27	09136-05041	SCREW (5X20)	2	
28	09125-05042	SCREW (5X10)	1	
29	09116-08155	BOLT (8X45)	2	
30	09250-12006	CAP (OD:20)	1	
31-1	21131-94J00-YAY	MARK, CLUTCH SHIFT (BLACK)	1	
31-2	21131-94J00-Y5S	MARK, CLUTCH SHIFT (WHITE)	1	
32	63215-93110	MARK, HANDLE GRIP	1	
33	37830-94J11	SWITCH ASSY, EMERGENCY & STOP	1	
34	37823-97J00	.PLATE, LOCK	1	
35	37826-97J00	.NUT	1	
36-1	37835-91J00-YAY	LABEL, STOP (BLACK)	1	
36-2	37835-91J00-Y5S	LABEL, STOP (WHITE)	1	

DF25ATH P01
DF30A P40
DF30ATH P01

FIG.450A


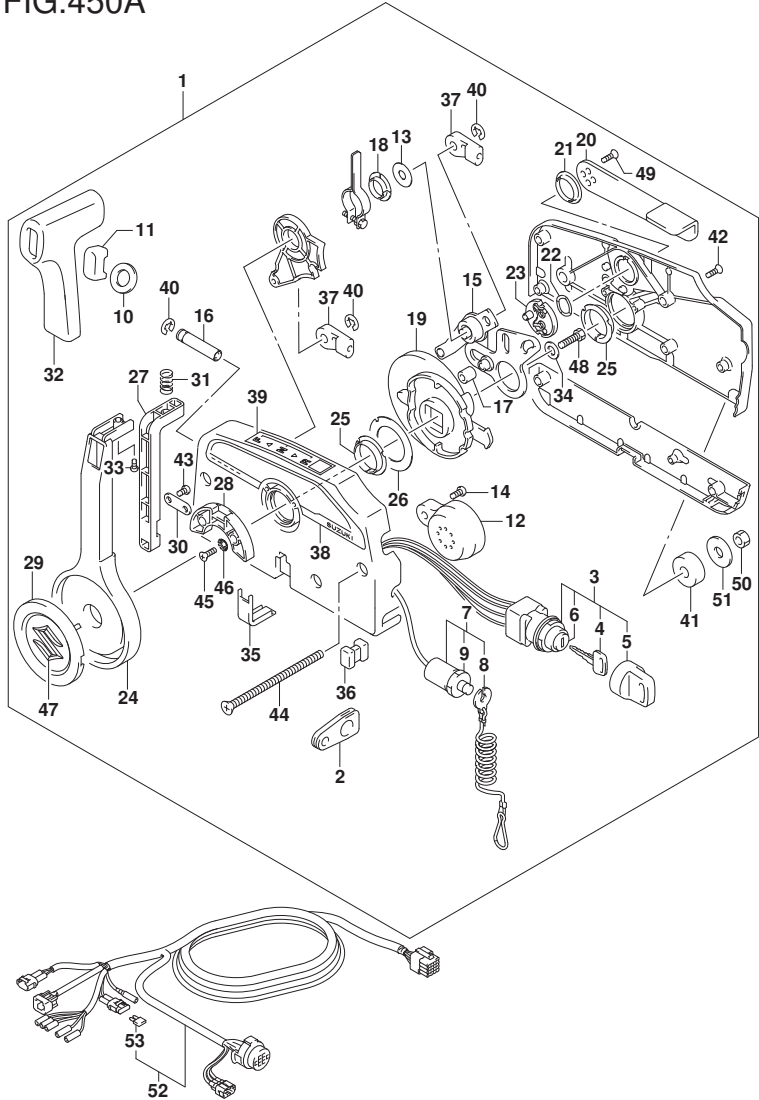


FIG.450A (1-H-13) REMOTE CONTROL (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J20	REMOTE CONTROL ASSY	1	
2	36628-92E00	..GROMMET, WIRING HARNESS	1	
3	37110-94J02	..SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E00	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37820-93J04	..SWITCH ASSY, EMERGENCY	1	
8	37823-92E01	..PLATE ASSY, EMERGENCY SWITCH LOCK	1	
9	37826-92J00	..NUT	1	
10	37859-90J00	..SPACER	1	
11	37864-94J10	..CAP, PTT SW	1	
12	38500-93J00	..BUZZER ASSY, WARNING	1	
13	67212-95600	..WASHER	1	
14	67214-92E00	..SCREW (5X20)	1	
15	67220-95630	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	
17	67229-95600	..ROLLER	1	

FIG.450A

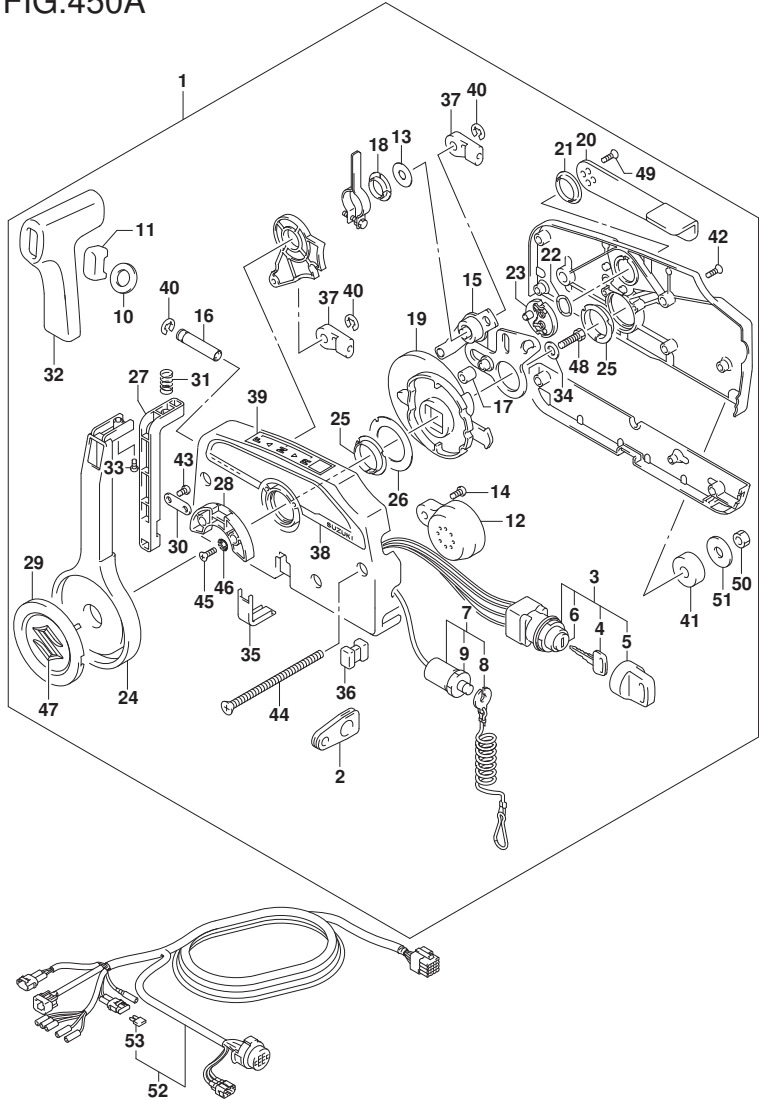

DF25A_30A_P01_018_450A
REMOTE CONTROL

FIG.450A (1-H-14) REMOTE CONTROL (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	67232-95600	.BUSH	1	
19	67238-87D00	.GEAR, DRIVE	1	
20	67241-99E10	.LEVER, FREE THROTTLE	1	
21	67243-95600	.BUSH	1	
22	67244-95600	.WAVE WASHER	1	
23	67245-95600	.DRUM, FREE THROTTLE	1	
24	67251-99E20	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-99E10	.ARM, LOCK	1	
28	67256-95600	.HOLDER, NEUTRAL LOCK	1	
29	67257-99E10	.CAP, LEVER	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-99E10	.GRIP	1	
33	67296-94310	.SCREW	1	
34	67264-95600	.WASHER	1	
35	67267-93J00	.COVER, WIRE	1	
36	67273-95600	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67282-94L00	.DECAL, REMOCON SIDE	1	
39	67284-94L00	.MARK, HANDLE LEVER	1	
40	67292-94300	.E RING	3	
41	67294-95600	.SPACER	3	
42	67296-90J10	.SCREW, REAR COVER	5	
43	67296-94300	.SCREW (4X10)	2	
44	67296-95600	.SCREW	3	
45	67296-95610	.SCREW	2	
46	67297-95600	.WASHER	2	

DF25A_30A_P01_018

This exploded view diagram illustrates the assembly of a vehicle interior component, possibly a center console or door panel. The main housing (1) is shown with various internal and external components. Key parts include:

- 1**: Main housing or frame.
- 2**: A small metal bracket or clip.
- 3**: A small rectangular component, possibly a switch or indicator.
- 4**: A small screw or fastener.
- 5**: A small rectangular component, possibly a switch or indicator.
- 6**: A small rectangular component, possibly a switch or indicator.
- 7**: A small rectangular component, possibly a switch or indicator.
- 8**: A small rectangular component, possibly a switch or indicator.
- 9**: A small rectangular component, possibly a switch or indicator.
- 10**: A small circular component, possibly a button or cap.
- 11**: A small rectangular component, possibly a switch or indicator.
- 12**: A small rectangular component, possibly a switch or indicator.
- 13**: A small circular component, possibly a button or cap.
- 14**: A small rectangular component, possibly a switch or indicator.
- 15**: A small rectangular component, possibly a switch or indicator.
- 16**: A small rectangular component, possibly a switch or indicator.
- 17**: A small rectangular component, possibly a switch or indicator.
- 18**: A small circular component, possibly a button or cap.
- 19**: A small rectangular component, possibly a switch or indicator.
- 20**: A small rectangular component, possibly a switch or indicator.
- 21**: A small rectangular component, possibly a switch or indicator.
- 22**: A small rectangular component, possibly a switch or indicator.
- 23**: A small rectangular component, possibly a switch or indicator.
- 24**: A small rectangular component, possibly a switch or indicator.
- 25**: A small rectangular component, possibly a switch or indicator.
- 26**: A small rectangular component, possibly a switch or indicator.
- 27**: A small rectangular component, possibly a switch or indicator.
- 28**: A small rectangular component, possibly a switch or indicator.
- 29**: A small rectangular component, possibly a switch or indicator.
- 30**: A small rectangular component, possibly a switch or indicator.
- 31**: A small rectangular component, possibly a switch or indicator.
- 32**: A small rectangular component, possibly a switch or indicator.
- 33**: A small rectangular component, possibly a switch or indicator.
- 34**: A small rectangular component, possibly a switch or indicator.
- 35**: A small rectangular component, possibly a switch or indicator.
- 36**: A small rectangular component, possibly a switch or indicator.
- 37**: A small rectangular component, possibly a switch or indicator.
- 38**: A small rectangular component, possibly a switch or indicator.
- 39**: A small rectangular component, possibly a switch or indicator.
- 40**: A small rectangular component, possibly a switch or indicator.
- 41**: A small rectangular component, possibly a switch or indicator.
- 42**: A small rectangular component, possibly a switch or indicator.
- 43**: A small rectangular component, possibly a switch or indicator.
- 44**: A small rectangular component, possibly a switch or indicator.
- 45**: A small rectangular component, possibly a switch or indicator.
- 46**: A small rectangular component, possibly a switch or indicator.
- 47**: A small rectangular component, possibly a switch or indicator.
- 48**: A small rectangular component, possibly a switch or indicator.
- 49**: A small rectangular component, possibly a switch or indicator.
- 50**: A small rectangular component, possibly a switch or indicator.
- 51**: A small rectangular component, possibly a switch or indicator.
- 52**: A small rectangular component, possibly a switch or indicator.
- 53**: A small rectangular component, possibly a switch or indicator.

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
47	77811-54GB0-0PG	.EMBLEM, REAR MARK S (CHROME)	1	
48	09100-08232	.BOLT (8X30)	1	
49	09126-05003	.SCREW (5X12)	2	
50	09140-06020	.NUT	3	
51	09160-06104	.WASHER (6.5X24X2)	3	
52	36620-94L00	WIRE ASSY, REMOTE CONTROL	1	
53	09481-10501	.FUSE (10A)	1	

DF25AR P01
DF30AR P01

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J51	REMOTE CONTROL ASSY	1	
2	36646-93J01	..WIRE ASSY, PTT SW ADAPTER	1	
3	36628-92E00	..GROMMET, WIRE HARNESS	1	
4	37110-93J11	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	2	
5-2	37141-99E10	..KEY (932)	2	
5-3	37141-99E20	..KEY (933)	2	
5-4	37141-99E30	..KEY (934)	2	
5-5	37141-99E40	..KEY (935)	2	
5-6	37141-99E50	..KEY (936)	2	
5-7	37141-99E60	..KEY (937)	2	
5-8	37141-99E70	..KEY (938)	2	
5-9	37141-99E80	..KEY (939)	2	
5-10	37141-99E90	..KEY (940)	2	
5-11	37141-99EA0	..KEY (941)	2	
5-12	37141-99EB0	..KEY (942)	2	
6	37143-99E00	..CAP, KEY	2	
7	37149-93J00	..CAP CYLINDER BODY	1	
8	37721-93J91	..SWITCH, NEUTRAL	1	
9	37820-93J04	..SWITCH ASSY, EMERGENCY	1	
10	37823-92E01	..PLATE	1	
11	37826-92J00	..NUT	1	
12	37850-90J06	..SWITCH ASSY, PTT	1	
13	38500-93J90	..BUZZER	1	
14	67212-95600	..WASHER	1	
15	67296-92E11	..SCREW, NEUTRAL SWITCH	2	
16	67220-95630	..PLATE ASSY	1	
17	67223-99E10	..KNOB, BRAKE ADJ	1	
18	67229-95600	..ROLLER	1	

FIG.450B

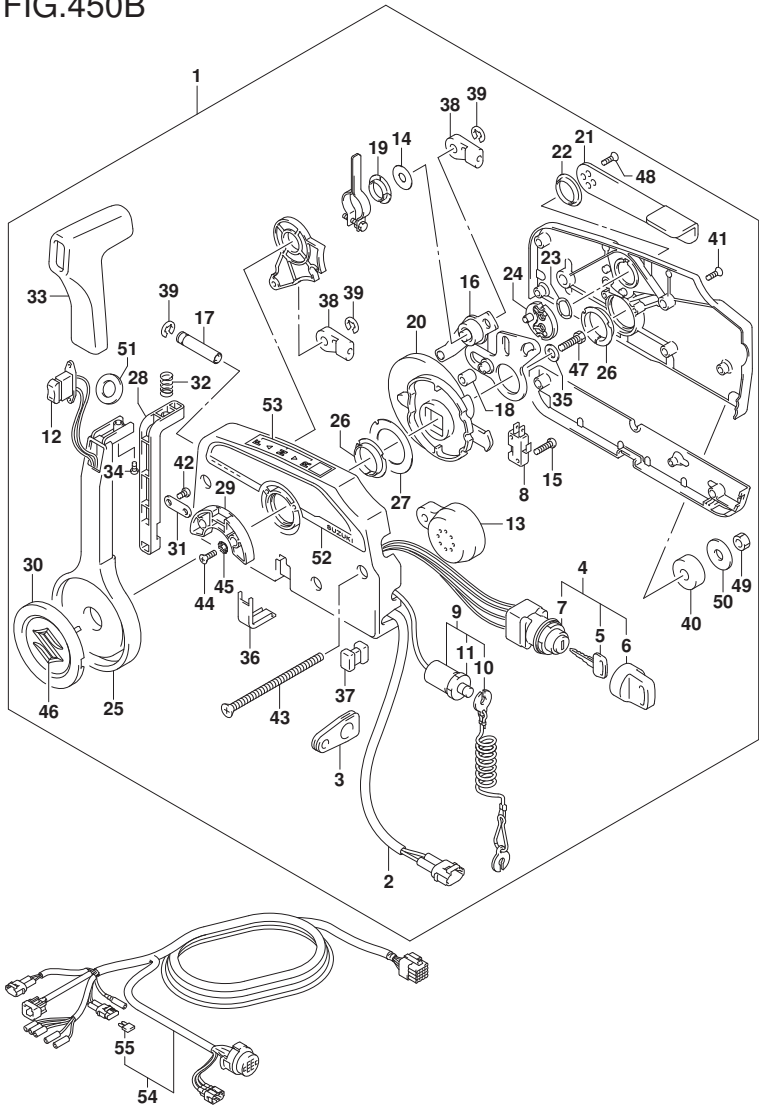


FIG.450B (1-1-3) REMOTE CONTROL (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19	67232-95600	.BUSH	1	
20	67238-87D00	.GEAR, DRIVE	1	
21	67241-99E10	.LEVER, FREE THROTTLE	1	
22	67243-95600	.BUSH	1	
23	67244-95600	.WASHER, WAVE	1	
24	67245-95600	.DRUM, FREE THROTTLE	1	
25	67251-99E20	.LEVER, HANDLE	1	
26	67252-95600	.BUSH	2	
27	67253-95600	.WASHER	1	
28	67255-99E10	.ARM, LOCK	1	
29	67256-95600	.HOLDER, NEUT LOCK	1	
30	67257-99E10	.CAP, LEVER	1	
31	67258-99E00	.BRACKET, LOCK ARM	1	
32	67259-87D00	.SPRING, NEUTRAL ARM	1	
33	67261-99E10	.GRIP	1	
34	67296-94310	.SCREW	1	
35	67264-95600	.WASHER	1	
36	67267-93J00	.COVER, WIRE	1	
37	67273-95600	.SPACER	1	
38	67275-95600	.END, CABLE	2	
39	67292-94300	.E RING	3	
40	67294-95600	.SPACER	3	
41	67296-90J10	.SCREW	5	
42	67296-94300	.SCREW	2	
43	67296-95600	.SCREW	3	
44	67296-95610	.SCREW	2	
45	67297-95600	.WASHER	2	
46	77811-54GB0-0PG	.EMBLEM, REAR MARK S (CHROME)	1	
47	09100-08232	.BOLT (8X30)	1	

FIG.450B

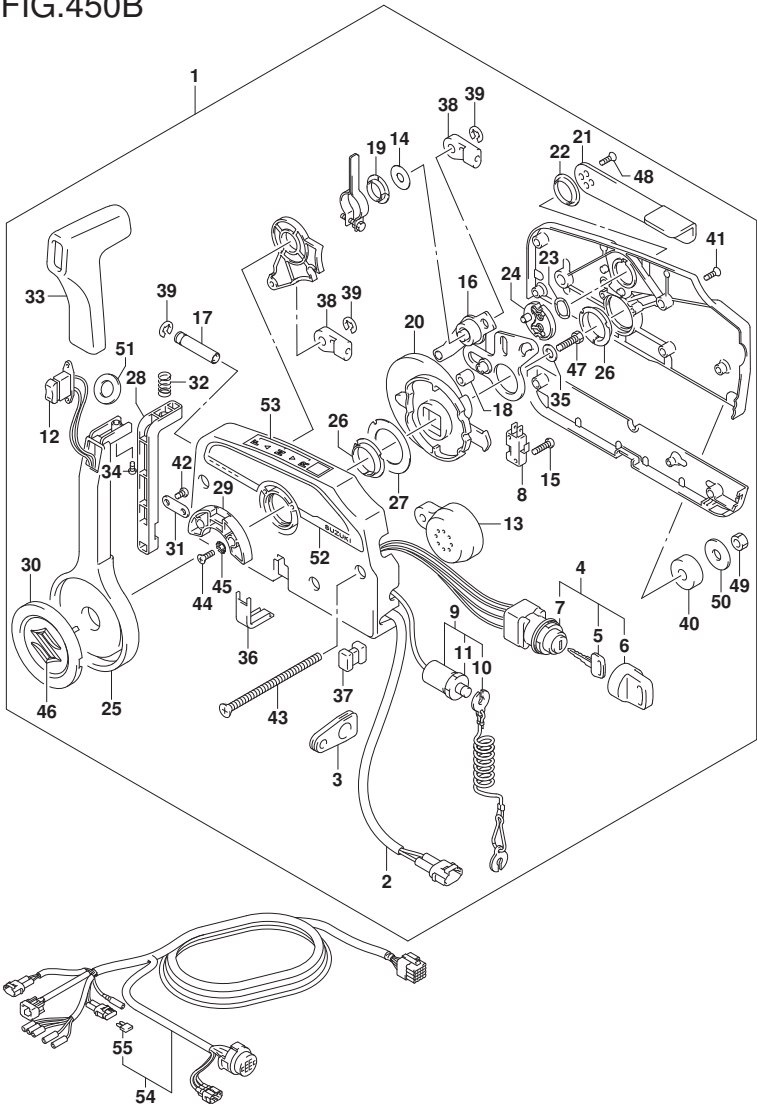


FIG.450B (1-I-4) REMOTE CONTROL (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
48	09126-05003	.SCREW (5X12)	2	
49	09140-06020	.NUT	3	
50	09160-06104	.WASHER (6.5X24X2)	3	
51	37859-90J00	.SPACER	1	
52	67282-94L00	.DECAL, REMOCON SIDE	1	
53	67284-94L00	.MARK, HANDLE LEVER	1	
54	36620-94L10	WIRE ASSY, REMOTE CONTROL	1	
55	09481-10501	.FUSE (10A)	1	

DF25AT P01
DF30AT P01

FIG.501A

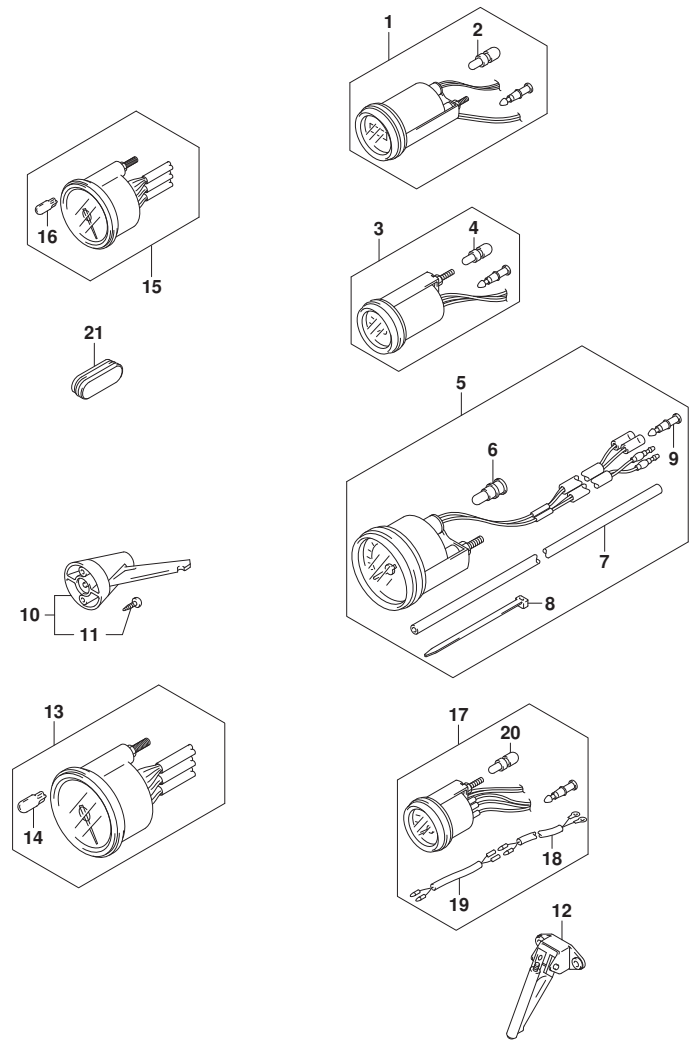


FIG.501A (1-I-5) OPT:METER (DF25AR)(DF30AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34500-93J00	METER ASSY, HOUR	1	BLACK
1-2	34500-93J11	METER ASSY, HOUR	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34600-93J00	METER ASSY, VOLTAGE	1	BLACK
3-2	34600-93J11	METER ASSY, VOLTAGE	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J20	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J31	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J40	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J51	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J20	TACHOMETER ASSY	1	BLACK
13-2	34200-93J32	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34200-93J00	TACHOMETER ASSY, WITH MONITOR	1	BLACK
15-2	34200-93J12	TACHOMETER ASSY, WITH MONITOR	1	WHITE
16	09471-12077	.BULB (12V1.7W,T10,WB121)	1	
17-1	34300-93J00	GAUGE ASSY, FUEL	1	BLACK
17-2	34300-93J11	GAUGE ASSY, FUEL	1	WHITE
18	34310-92E00	.LEAD, FUEL GAUGE	1	
19	34360-92E00	.ADAPTER, FUEL GAUGE	1	
20	09471-12103	.BULB (12V,3W,T6.5)	1	
21	39669-94L00	PLUG, LOWER COVER	1	

DF25AR P01
DF30AR P01

FIG.501B

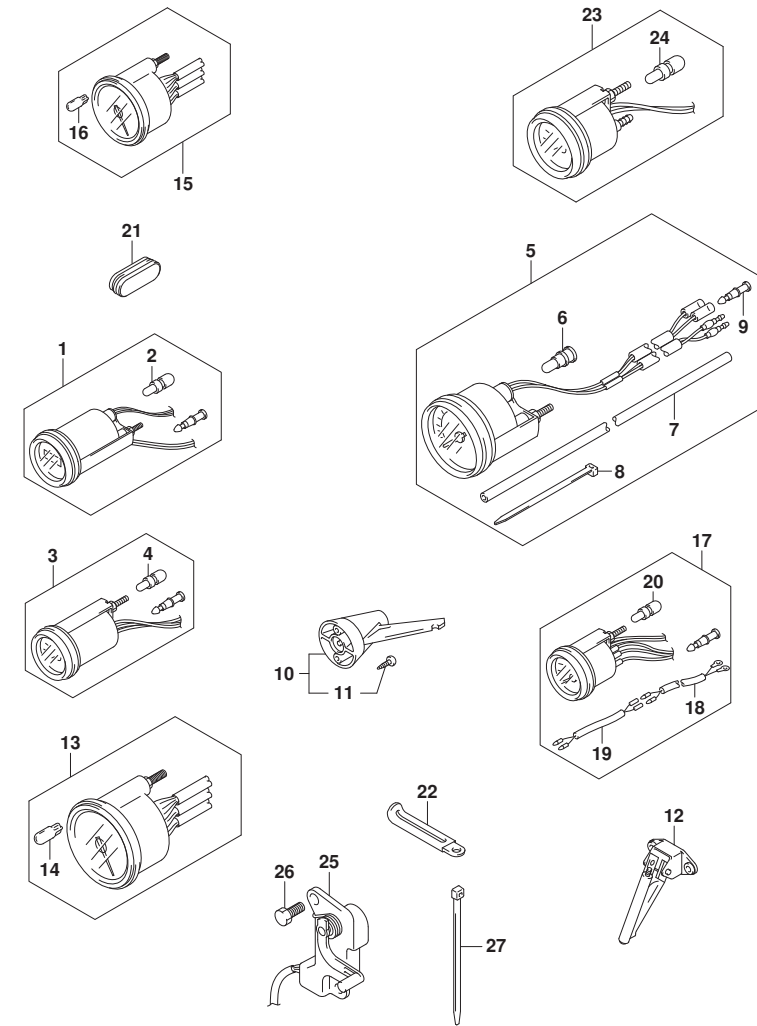


FIG.501B (1-I-6) OPT:METER (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34500-93J00	METER ASSY, HOUR	1	BLACK
1-2	34500-93J11	METER ASSY, HOUR	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34600-93J00	METER ASSY, VOLTAGE	1	BLACK
3-2	34600-93J11	METER ASSY, VOLTAGE	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J20	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J31	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J40	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J51	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J20	TACHOMETER ASSY	1	BLACK
13-2	34200-93J32	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34200-93J00	TACHOMETER ASSY, WITH MONITOR	1	BLACK
15-2	34200-93J12	TACHOMETER ASSY, WITH MONITOR	1	WHITE
16	09471-12077	.BULB (12V1.7W,T10,WB121)	1	
17-1	34300-93J00	GAUGE ASSY, FUEL	1	BLACK
17-2	34300-93J11	GAUGE ASSY, FUEL	1	WHITE
18	34310-92E00	.LEAD, FUEL GAUGE	1	
19	34360-92E00	.ADAPTER, FUEL GAUGE	1	
20	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.501B


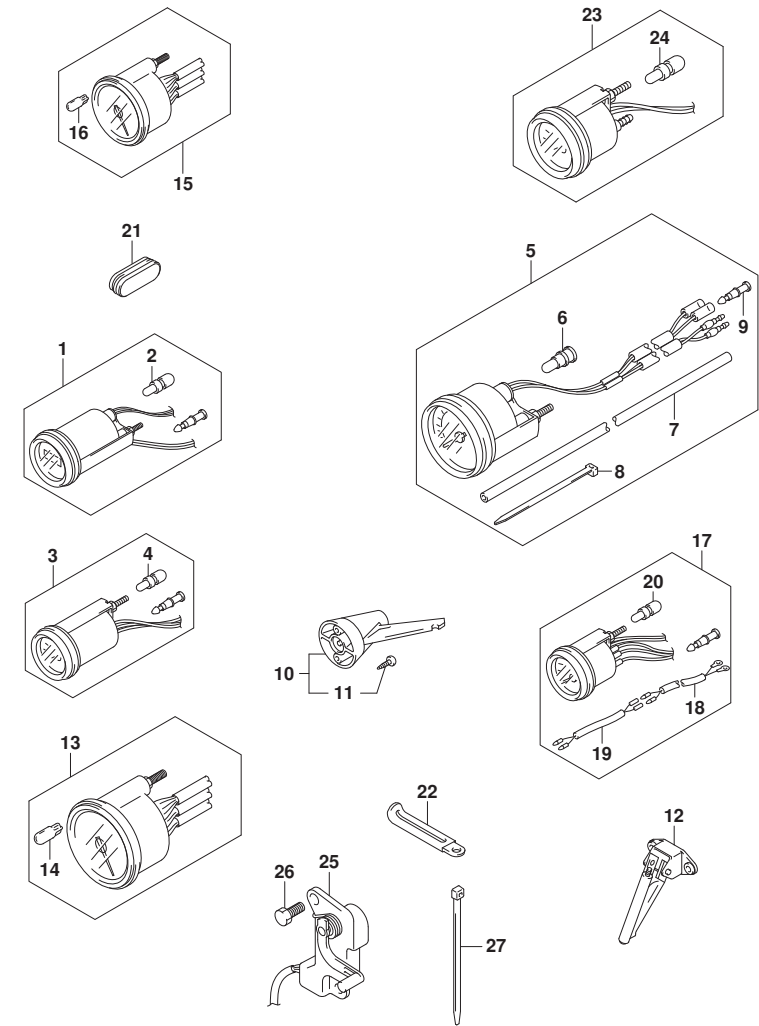


FIG.501B (1-I-7) OPT:METER (DF25AT)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	39669-94L00	PLUG, LOWER COVER	1	
22	29404-93J10	CLAMP, TRIM SENDER LEAD	1	
23-1	34800-93J00	METER ASSY, TRIM	1	BLACK
23-2	34800-93J11	METER ASSY, TRIM	1	WHITE
24	09471-12108	.BULB (12V1.7W,T6.5)	1	
25	34801-99E04	SENDER ASSY, TRIM	1	
26	09100-06113	BOLT (6X16)	2	
27	09407-14407	CLAMP (L:145)	2	

DF25AT P01
DF30AT P01

FIG.508A

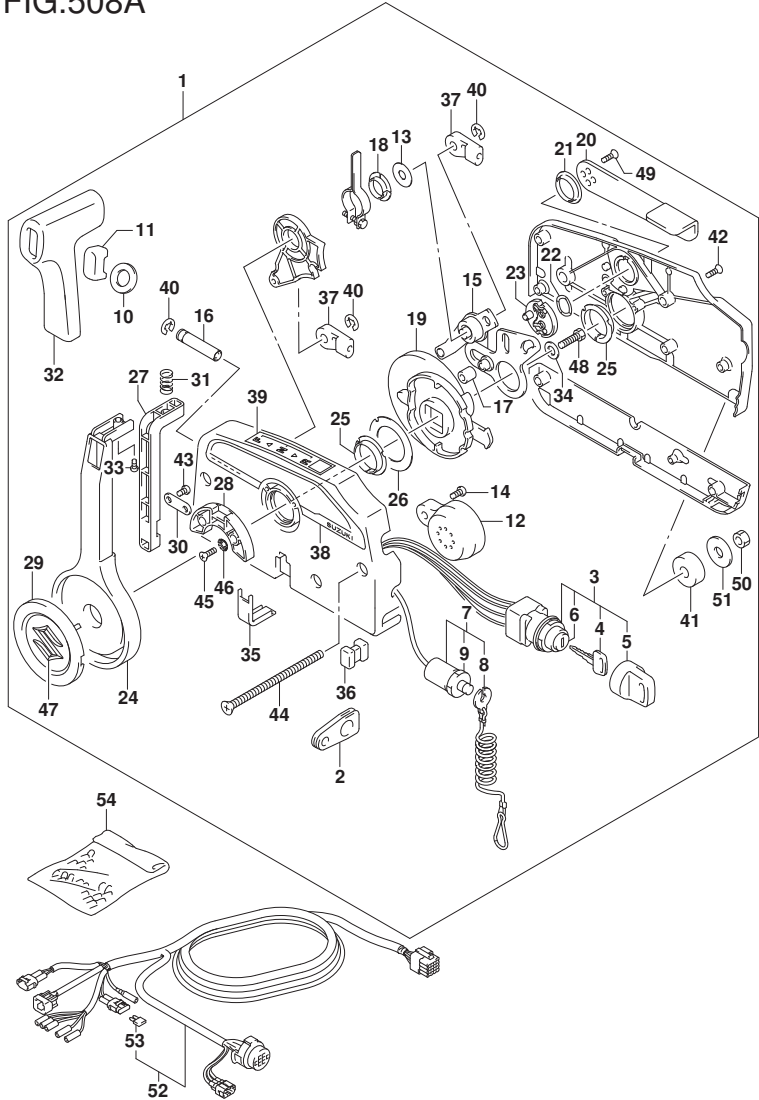

DF25A_30A_P01_018_508A
OPT:REMOTE CONTROL

FIG.508A (1-I-8) OPT:REMOTE CONTROL (DF25A)(DF30A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J20	REMOTE CONTROL ASSY	1	
2	36628-92E00	..GROMMET, WIRING HARNESS	1	
3	37110-94J02	..SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E00	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37820-93J04	..SWITCH ASSY, EMERGENCY	1	
8	37823-92E01	..PLATE ASSY, EMERGENCY SWITCH LOCK	1	
9	37826-92J00	..NUT	1	
10	37859-90J00	..SPACER	1	
11	37864-94J10	..CAP, PTT SW	1	
12	38500-93J00	..BUZZER ASSY, WARNING	1	
13	67212-95600	..WASHER	1	
14	67214-92E00	..SCREW (5X20)	1	
15	67220-95630	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	

This diagram shows an exploded view of a device assembly, likely a handheld electronic device or a small robot. The main body is labeled 1. Various components are shown in their relative positions, with callouts for each part:

- 1**: Main body/chassis
- 2**: Small rectangular component, possibly a battery or sensor module.
- 3**: Cable or connector component.
- 4**: Small pin or connector.
- 5**: Small component, possibly a switch or sensor.
- 6**: Small component, possibly a switch or sensor.
- 7**: Cable or connector component.
- 8**: Coiled cable or spring.
- 9**: Small component, possibly a switch or sensor.
- 10**: Small circular component, possibly a lens or sensor.
- 11**: Small rectangular component, possibly a battery or sensor module.
- 12**: Cable or connector component.
- 13**: Small circular component, possibly a lens or sensor.
- 14**: Cable or connector component.
- 15**: Small component, possibly a switch or sensor.
- 16**: Small component, possibly a switch or sensor.
- 17**: Small component, possibly a switch or sensor.
- 18**: Small circular component, possibly a lens or sensor.
- 19**: Small component, possibly a switch or sensor.
- 20**: Small component, possibly a switch or sensor.
- 21**: Small component, possibly a switch or sensor.
- 22**: Small component, possibly a switch or sensor.
- 23**: Small component, possibly a switch or sensor.
- 24**: Small component, possibly a switch or sensor.
- 25**: Small component, possibly a switch or sensor.
- 26**: Small component, possibly a switch or sensor.
- 27**: Small component, possibly a switch or sensor.
- 28**: Small component, possibly a switch or sensor.
- 29**: Small component, possibly a switch or sensor.
- 30**: Small component, possibly a switch or sensor.
- 31**: Small component, possibly a switch or sensor.
- 32**: Small component, possibly a switch or sensor.
- 33**: Small component, possibly a switch or sensor.
- 34**: Small component, possibly a switch or sensor.
- 35**: Small component, possibly a switch or sensor.
- 36**: Small component, possibly a switch or sensor.
- 37**: Small component, possibly a switch or sensor.
- 38**: Small component, possibly a switch or sensor.
- 39**: Small component, possibly a switch or sensor.
- 40**: Small component, possibly a switch or sensor.
- 41**: Small component, possibly a switch or sensor.
- 42**: Small component, possibly a switch or sensor.
- 43**: Small component, possibly a switch or sensor.
- 44**: Small component, possibly a switch or sensor.
- 45**: Small component, possibly a switch or sensor.
- 46**: Small component, possibly a switch or sensor.
- 47**: Small component, possibly a switch or sensor.
- 48**: Small component, possibly a switch or sensor.
- 49**: Small component, possibly a switch or sensor.
- 50**: Small component, possibly a switch or sensor.
- 51**: Small component, possibly a switch or sensor.
- 52**: Small component, possibly a switch or sensor.
- 53**: Small component, possibly a switch or sensor.
- 54**: Small component, possibly a switch or sensor.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
17	67229-95600	.ROLLER	1	
18	67232-95600	.BUSH	1	
19	67238-87D00	.GEAR, DRIVE	1	
20	67241-99E10	.LEVER, FREE THROTTLE	1	
21	67243-95600	.BUSH	1	
22	67244-95600	.WAVE WASHER	1	
23	67245-95600	.DRUM, FREE THROTTLE	1	
24	67251-99E20	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-99E10	.ARM, LOCK	1	
28	67256-95600	.HOLDER, NEUTRAL LOCK	1	
29	67257-99E10	.CAP, LEVER	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-99E10	.GRIP	1	
33	67296-94310	.SCREW	1	
34	67264-95600	.WASHER	1	
35	67267-93J00	.COVER, WIRE	1	
36	67273-95600	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67282-94L00	.DECAL, REMOCON SIDE	1	
39	67284-94L00	.MARK, HANDLE LEVER	1	
40	67292-94300	.E RING	3	
41	67294-95600	.SPACER	3	
42	67296-90J10	.SCREW, REAR COVER	5	
43	67296-94300	.SCREW (4X10)	2	
44	67296-95600	.SCREW	3	

FIG.508A

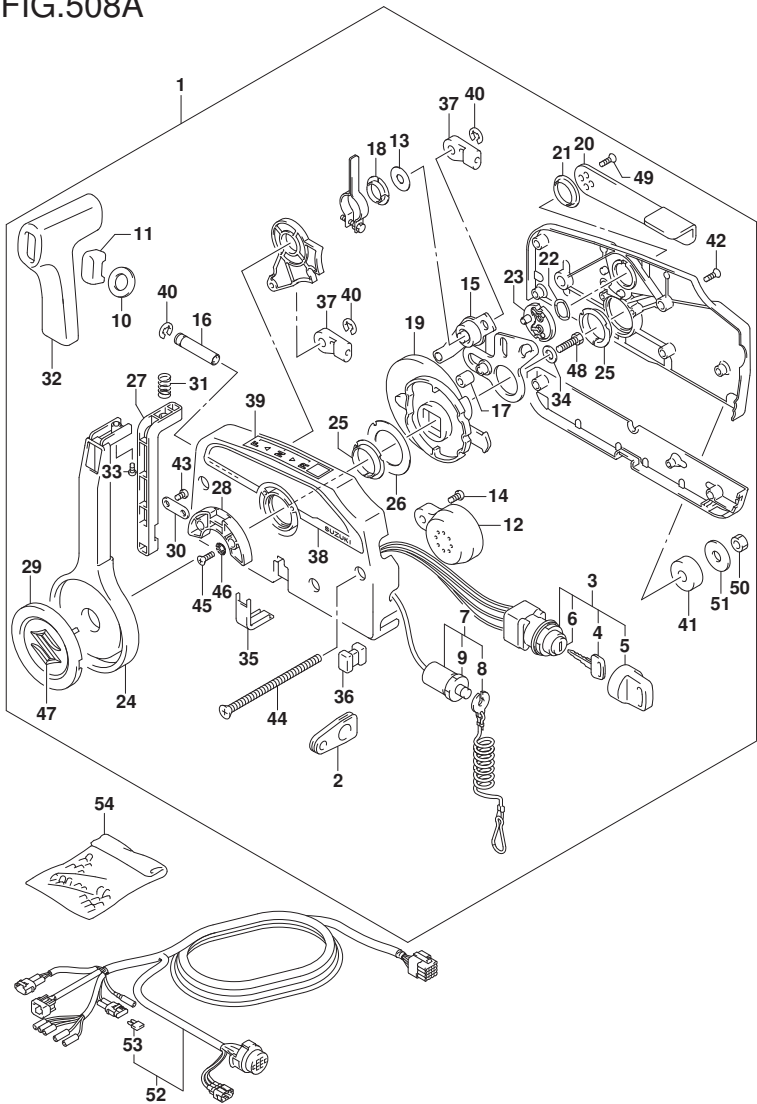


FIG.508A (1-I-10) OPT:REMOTE CONTROL (DF25A)(DF30A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
45	67296-95610	.SCREW	2	
46	67297-95600	.WASHER	2	
47	77811-54GB0-0PG	.EMBLEM, REAR MARK S (CHROME)	1	
48	09100-08232	.BOLT (8X30)	1	
49	09126-05003	.SCREW (5X12)	2	
50	09140-06020	.NUT	3	
51	09160-06104	.WASHER (6.5X24X2)	3	
52	36620-94L00	WIRE ASSY, REMOTE CONTROL	1	
53	09481-10501	.FUSE (10A)	1	
54	36990-87D00	TERMINAL & SLEEVE SET	1	

DF25A P01
DF30A P40
DF30AQ P01

FIG.508B

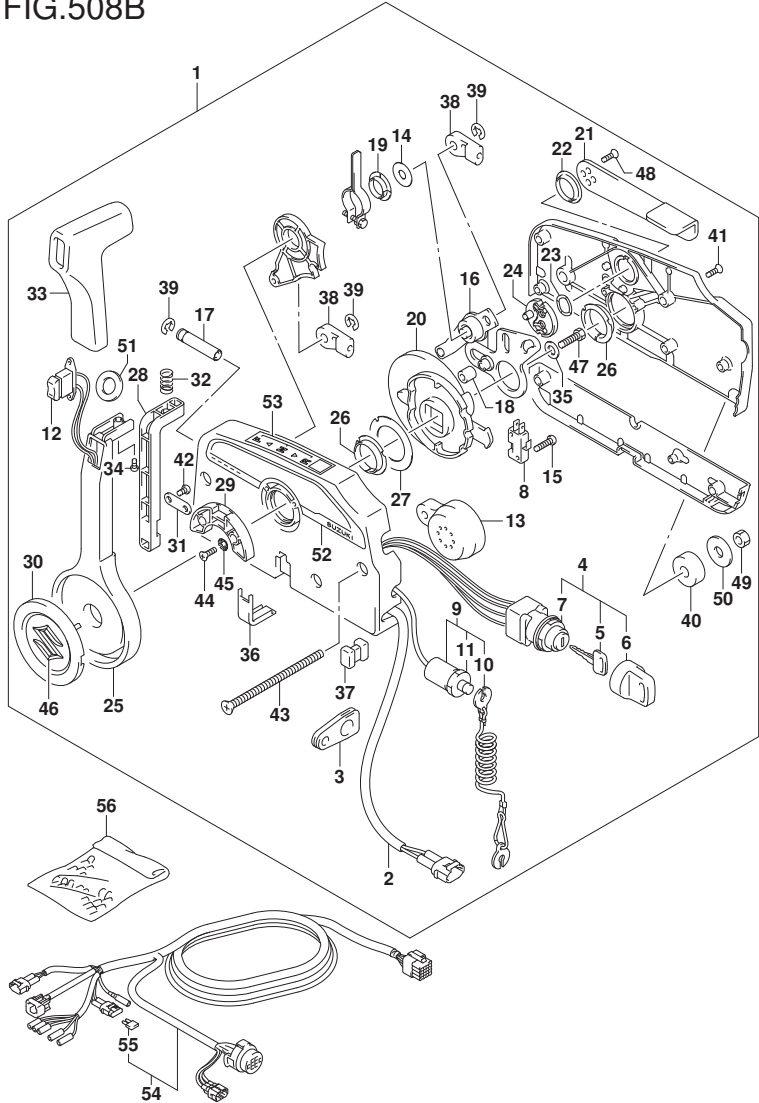


FIG.508B (1-I-11) OPT:REMOTE CONTROL (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J51	REMOTE CONTROL ASSY	1	
2	36646-93J01	..WIRE ASSY, PTT SW ADAPTER	1	
3	36628-92E00	..GROMMET, WIRE HARNESS	1	
4	37110-93J11	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	2	
5-2	37141-99E10	..KEY (932)	2	
5-3	37141-99E20	..KEY (933)	2	
5-4	37141-99E30	..KEY (934)	2	
5-5	37141-99E40	..KEY (935)	2	
5-6	37141-99E50	..KEY (936)	2	
5-7	37141-99E60	..KEY (937)	2	
5-8	37141-99E70	..KEY (938)	2	
5-9	37141-99E80	..KEY (939)	2	
5-10	37141-99E90	..KEY (940)	2	
5-11	37141-99EA0	..KEY (941)	2	
5-12	37141-99EB0	..KEY (942)	2	
6	37143-99E00	..CAP, KEY	2	
7	37149-93J00	..CAP CYLINDER BODY	1	
8	37721-93J91	..SWITCH, NEUTRAL	1	
9	37820-93J04	..SWITCH ASSY, EMERGENCY	1	
10	37823-92E01	..PLATE	1	
11	37826-92J00	..NUT	1	
12	37850-90J06	..SWITCH ASSY, PTT	1	
13	38500-93J90	..BUZZER	1	
14	67212-95600	..WASHER	1	
15	67296-92E11	..SCREW, NEUTRAL SWITCH	2	
16	67220-95630	..PLATE ASSY	1	
17	67223-99E10	..KNOB, BRAKE ADJ	1	
18	67229-95600	..ROLLER	1	

FIG.508B

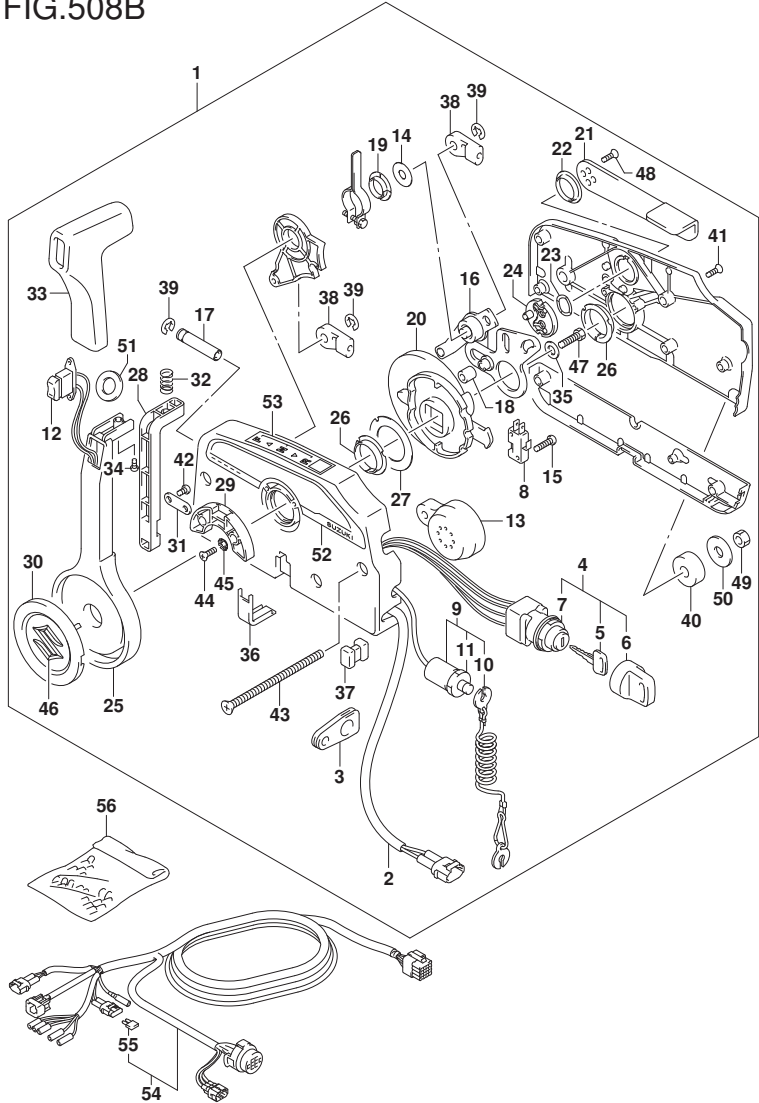


FIG.508B (1-I-12) OPT:REMOTE CONTROL (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19	67232-95600	.BUSH	1	
20	67238-87D00	.GEAR, DRIVE	1	
21	67241-99E10	.LEVER, FREE THROTTLE	1	
22	67243-95600	.BUSH	1	
23	67244-95600	.WASHER, WAVE	1	
24	67245-95600	.DRUM, FREE THROTTLE	1	
25	67251-99E20	.LEVER, HANDLE	1	
26	67252-95600	.BUSH	2	
27	67253-95600	.WASHER	1	
28	67255-99E10	.ARM, LOCK	1	
29	67256-95600	.HOLDER, NEUT LOCK	1	
30	67257-99E10	.CAP, LEVER	1	
31	67258-99E00	.BRACKET, LOCK ARM	1	
32	67259-87D00	.SPRING, NEUTRAL ARM	1	
33	67261-99E10	.GRIP	1	
34	67296-94310	.SCREW	1	
35	67264-95600	.WASHER	1	
36	67267-93J00	.COVER, WIRE	1	
37	67273-95600	.SPACER	1	
38	67275-95600	.END, CABLE	2	
39	67292-94300	.E RING	3	
40	67294-95600	.SPACER	3	
41	67296-90J10	.SCREW	5	
42	67296-94300	.SCREW	2	
43	67296-95600	.SCREW	3	
44	67296-95610	.SCREW	2	
45	67297-95600	.WASHER	2	
46	77811-54GB0-0PG	.EMBLEM, REAR MARK S (CHROME)	1	
47	09100-08232	.BOLT (8X30)	1	

FIG.508B

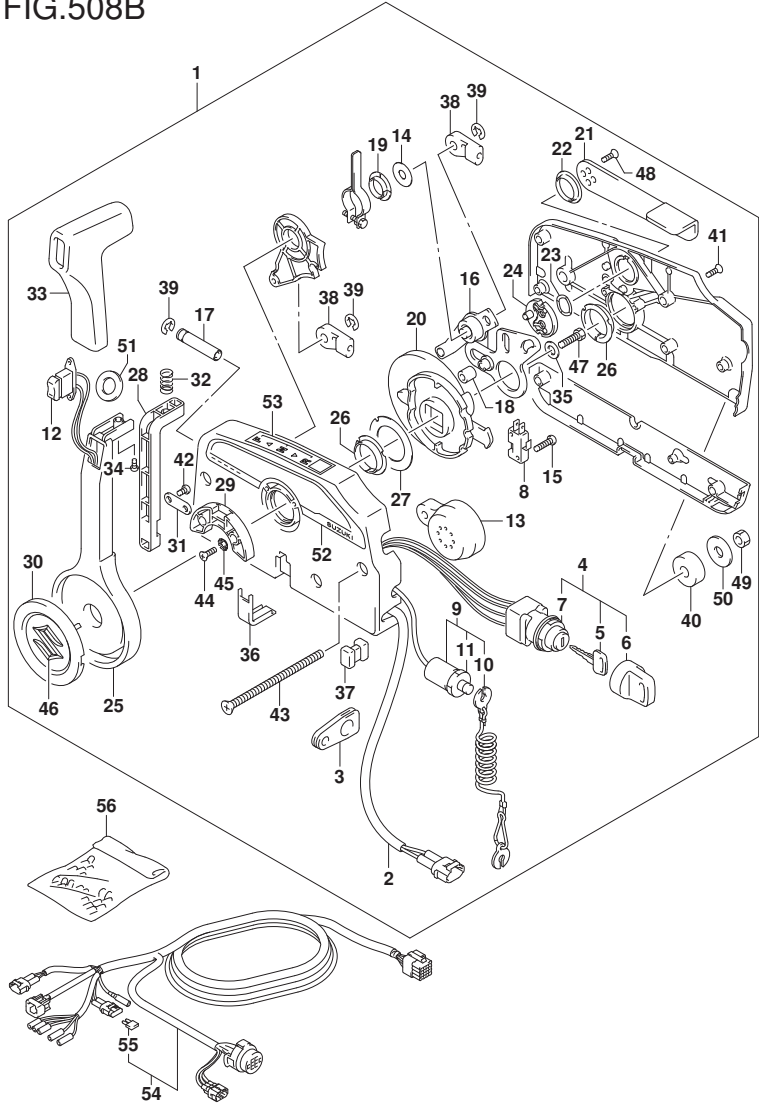


FIG.508B (1-1-13) OPT:REMOTE CONTROL (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
48	09126-05003	.SCREW (5X12)	2	
49	09140-06020	.NUT	3	
50	09160-06104	.WASHER (6.5X24X2)	3	
51	37859-90J00	.SPACER	1	
52	67282-94L00	.DECAL, REMOCON SIDE	1	
53	67284-94L00	.MARK, HANDLE LEVER	1	
54	36620-94L00	WIRE ASSY, REMOTE CONTROL	1	
55	09481-10501	.FUSE (10A)	1	
56	36990-87D00	TERMINAL & SLEEVE SET	1	

DF25ATH P01
DF30ATH P01

FIG.513A

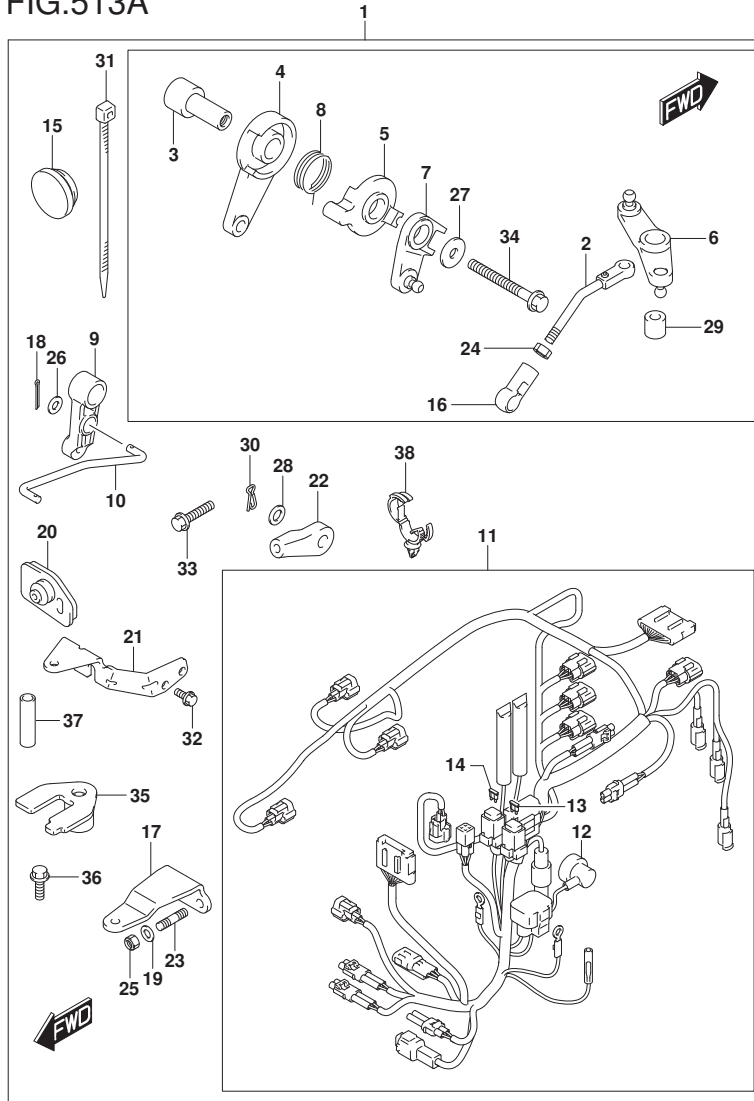


FIG.513A (1-I-14) OPT:REMOTE CONTROL PARTS (DF25A)(DF30A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94L02	PARTS SET, R/CON	1	
2	13510-94L00	.ROD, THROTTLE NO.1	1	
3	19116-94L00	.BRACKET, THROTTLE LEVER	1	
4	19120-99J11	.LEVER, THROTTLE CONTROL	1	
5	19122-99J00	.LEVER, INTERLINK THROTTLE NO.2	1	
6	19140-94L01	.LEVER, THROTTLE NO.2	1	
7	19140-94L20	.LEVER, THROTTLE CONTROL NO.2	1	
8	19185-99J00	.SPRING, THROTTLE LEVER	1	
9	21110-94L00	.LEVER, CLUTCH CONTROL	1	
10	23115-94L10	.LINK, CLUTCH LEVER	1	
11	36610-94L21	.HARNESS ASSY, WIRING	1	
12	36618-43410	..CAP, OIL PRESSURE SWITCH	1	
13	09481-10501	..FUSE (10A)	1	
14	09481-30501	..FUSE (30A)	1	
15	37163-89L00	.PLUG, STARTING SWITCH HOLE	1	
16	19131-95502	.CONNECTOR	1	
17	43755-94L00	.ATTACHMENT, STEERING BRACKET	1	
18	09204-01002	.PIN	2	
19	09160-08082	.WASHER (8.5X16X1.2)	2	
20	61124-94L10	.GROMMET, R/CON CABLE	1	
21	67341-94L00	.HOLDER, R/CON CABLE	1	
22	67467-89J01	.CONNECTOR	2	
23	09108-08286	.STUD BOLT	2	
24	09140-05005	.NUT	1	
25	09159-08059	.NUT	2	
26	09160-05029	.WASHER (5.5X12X0.8)	2	
27	09160-06046	.WASHER (6.5X20X1.5)	2	

FIG.513A

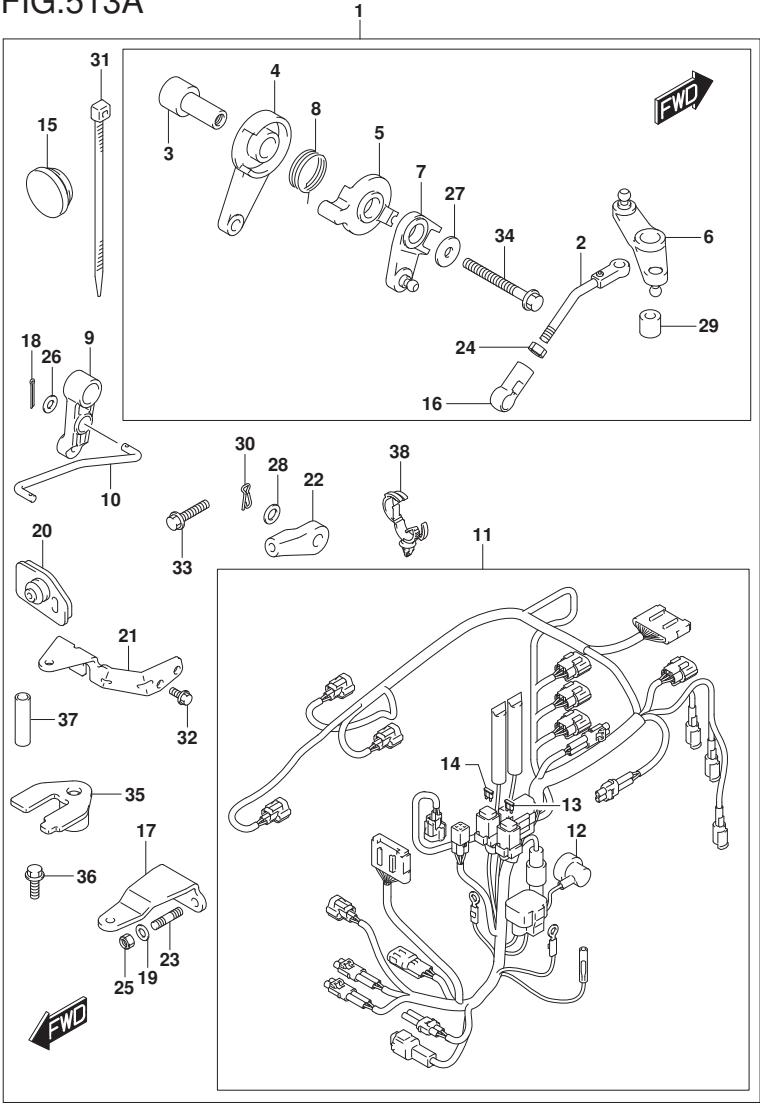


FIG.513A (1-1-15) OPT:REMOTE CONTROL PARTS (DF25A)(DF30A)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	09160-06055	.WASHER (7X12X1)	2	
29	09180-06230	.SPACER (6.2X12.6X12.5)	1	
30	09385-06012	.CLIP	2	
31	09407-14407	.CLAMP (L:145)	2	
32	01547-06167	.BOLT	2	
33	01550-06257	.BOLT	1	
34	01550-06557	.BOLT	1	
35	67343-94L00	.STOPPER, R/CON CABLE	1	
36	09116-06225	.BOLT (6X15)	1	
37	09352-70103-600	.HOSE (7X10.2X600)	2	L:600->14
38	09403-20308	.CLAMP	1	

DF25A P01
DF30A P40
DF30AQ P01

FIG.513B

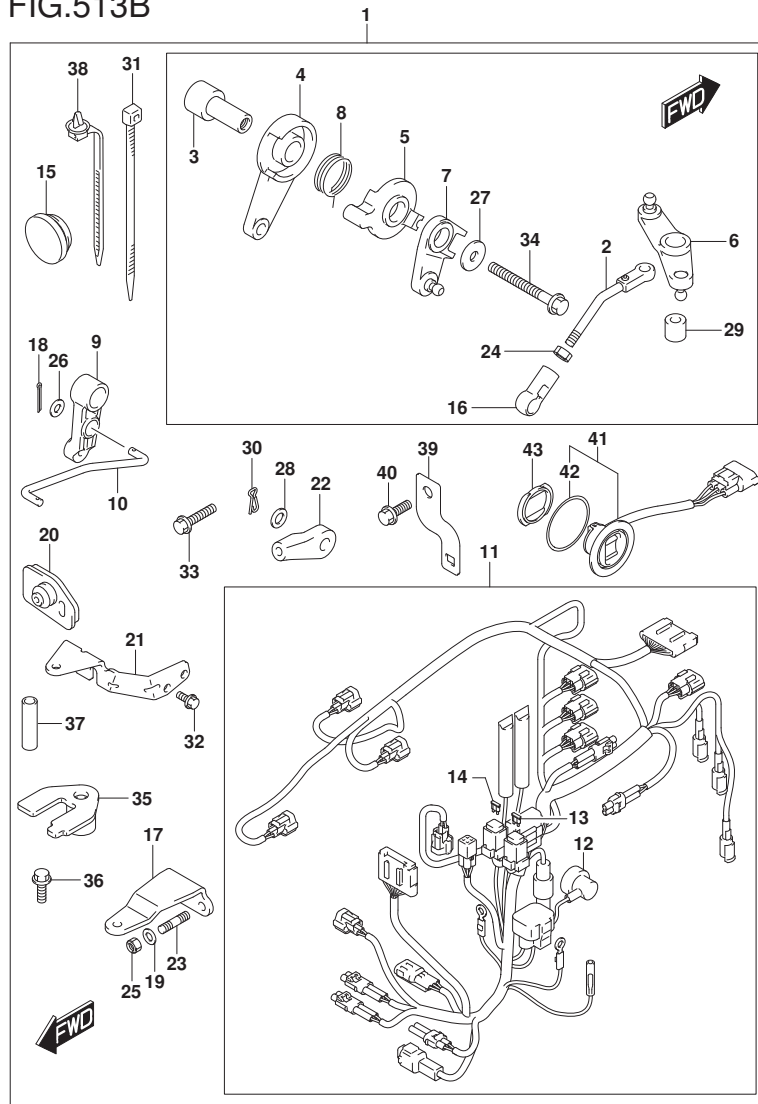


FIG.513B (1-J-2) OPT:REMOTE CONTROL PARTS (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94L12	PARTS SET, R/CON	1	
2	13510-94L00	.ROD, THROTTLE NO.1	1	
3	19116-94L00	.BRACKET, THROTTLE LEVER	1	
4	19120-99J11	.LEVER, THROTTLE CONTROL	1	
5	19122-99J00	.LEVER, INTERLINK THROTTLE NO.2	1	
6	19140-94L01	.LEVER, THROTTLE NO.2	1	
7	19140-94L20	.LEVER, THROTTLE CONTROL NO.2	1	
8	19185-99J00	.SPRING, THROTTLE LEVER	1	
9	21110-94L00	.LEVER, CLUTCH CONTROL	1	
10	23115-94L10	.LINK, CLUTCH LEVER	1	
11	36610-94L42	.HARNESS ASSY, WIRING	1	
12	36618-43410	..CAP, OIL PRESSURE SWITCH	1	
13	09481-10501	..FUSE (10A)	1	
14	09481-30501	..FUSE (30A)	1	
15	37163-89L00	.PLUG, STARTING SWITCH HOLE	1	
16	19131-95502	.CONNECTOR	1	
17	43755-94L00	.ATTACHMENT, STEERING BRACKET	1	
18	09204-01002	.PIN	2	
19	09160-08082	.WASHER (8.5X16X1.2)	2	
20	61124-94L10	.GROMMET, R/CON CABLE	1	
21	67341-94L00	.HOLDER, R/CON CABLE	1	
22	67467-89J01	.CONNECTOR	2	
23	09108-08286	.STUD BOLT	2	
24	09140-05005	.NUT	1	
25	09159-08059	.NUT	2	
26	09160-05029	.WASHER (5.5X12X0.8)	2	
27	09160-06046	.WASHER (6.5X20X1.5)	2	
28	09160-06055	.WASHER (7X12X1)	2	

FIG.513B

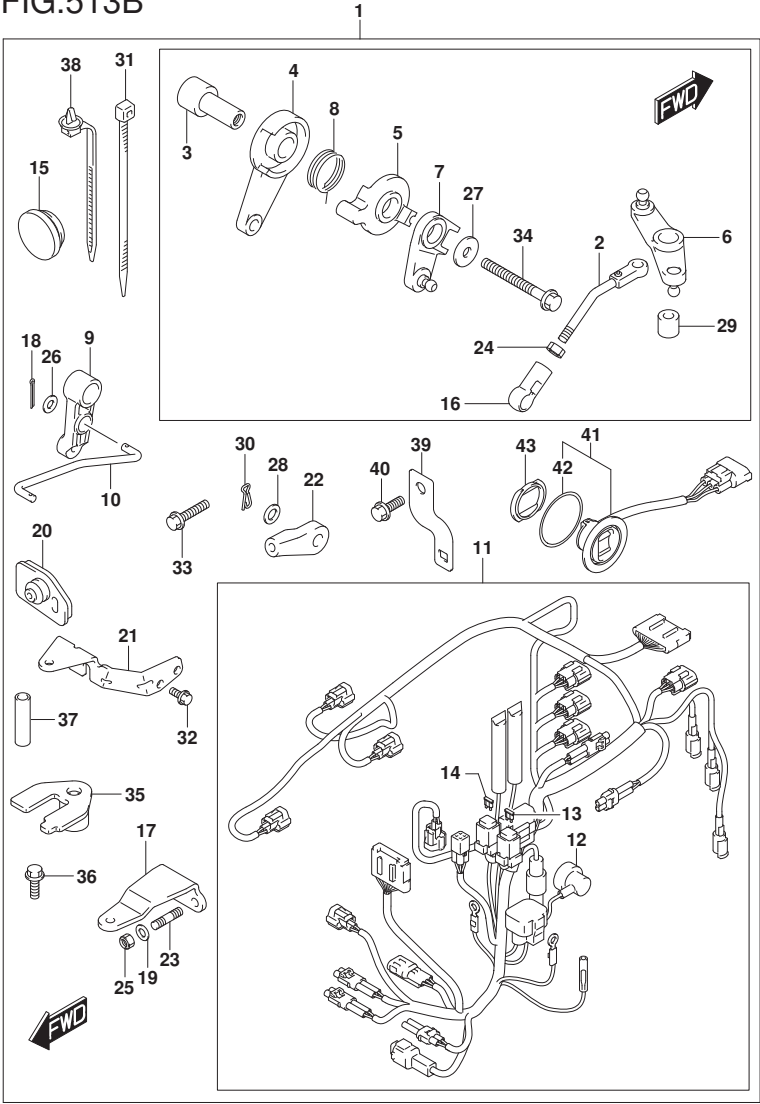


FIG.513B (1-J-3) OPT:REMOTE CONTROL PARTS (DF25ATH)(DF30ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	09180-06230	.SPACER (6.2X12.6X12.5)	1	
30	09385-06012	.CLIP	2	
31	09407-14407	.CLAMP (L:145)	2	
32	01547-06167	.BOLT	2	
33	01550-06257	.BOLT	1	
34	01550-06557	.BOLT	1	
35	67343-94L00	.STOPPER, R/CON CABLE	1	
36	09116-06225	.BOLT (6X15)	1	
37	09352-70103-600	.HOSE (7X10.2X600)	2	L:600->14
38	36991-94L00	.CLAMP, HARNESS	1	
39	36617-94L00	.BRACKET, HARNESS	1	
40	01550-06167	.BOLT	1	
41	37850-92J00	.SWITCH ASSY, PTT	1	
42	37856-92J00	..TAPE, PTT SWITCH	1	
43	37857-92J00	.BUSH, PTT SWITCH	1	

DF25ATH P01
DF30ATH P01

FIG.515A

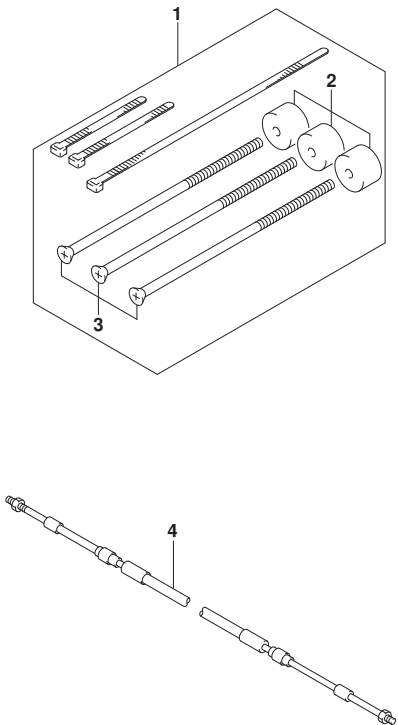


FIG.515A (1-J-4) OPT:REMOCON CABLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67140-95600	ATTACHMENT, TWIN REMOCON KIT	1	
2	67294-95600	.SPACER	3	
3	67296-95621	.SCREW (L:165)	3	
4-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	1	
4-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	1	
4-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	1	
4-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	1	
4-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	1	
4-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	1	
4-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	1	
4-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	1	
4-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	1	

FIG.517A

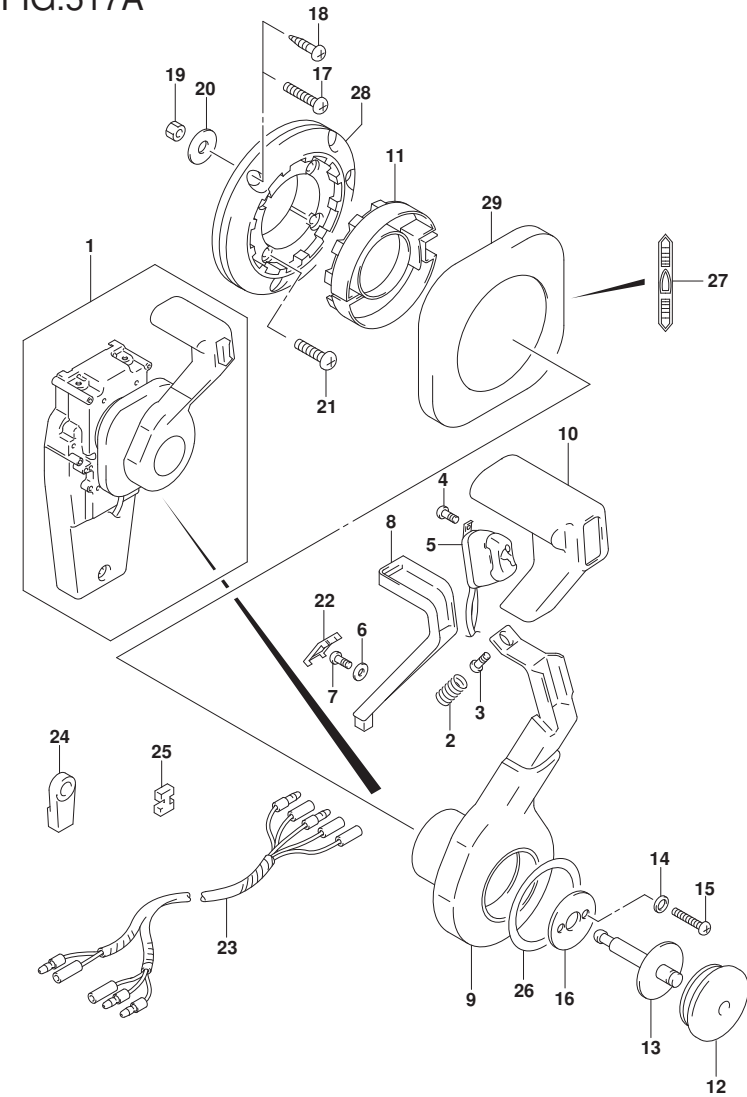


FIG.517A (1-J-5) OPT:CONCEALED REMOCON (1) (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J33	REMOTE CONTROL ASSY	1	
2	67298-92E50	.SPRING	1	
3	67296-94310	.SCREW	1	
4	67295-92E10	.SCREW	2	
5	37850-92E27	.SWITCH ASSY, PTT	1	
6	67288-92E60	.WASHER	1	
7	09125-04021	.SCREW (4X20)	1	
8	67255-92E50	.ARM, NEUTRAL LOCK	1	
9	67251-92E50	.LEVER	1	
10	67261-92E50	.GRIP	1	
11	67256-92E50	.HOLDER, NEUTRAL LOCK	1	
12	67257-92E00	.CAP, LEVER	1	
13	67242-92E50	.SHAFT, FREE ACC	1	
14	67288-92E20	.WASHER	6	
15	67296-88D10	.SCREW (5X16)	4	
16	67288-92E70	.WASHER	1	
17	67296-88D20	.SCREW	3	
18	67295-92E50	.SCREW	3	
19	67287-92E50	.NUT	3	
20	09160-06104	.WASHER (6.5X24X2)	3	
21	67296-88D30	.SCREW	4	
22	67254-92E50	.COVER, LOCK ARM	1	
23	36890-93J00	.WIRING ASSY	1	
24	67275-95600	.END CABLE	2	
25	67273-95600	.SPACER	1	
26	67283-92E50	.DECAL, LEVER	1	
27	67284-92E50	.DECAL, CLUTCH	1	
28	67274-92E50	.BASE	1	
29	67211-92E50	.COVER	1	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01

FIG.518A

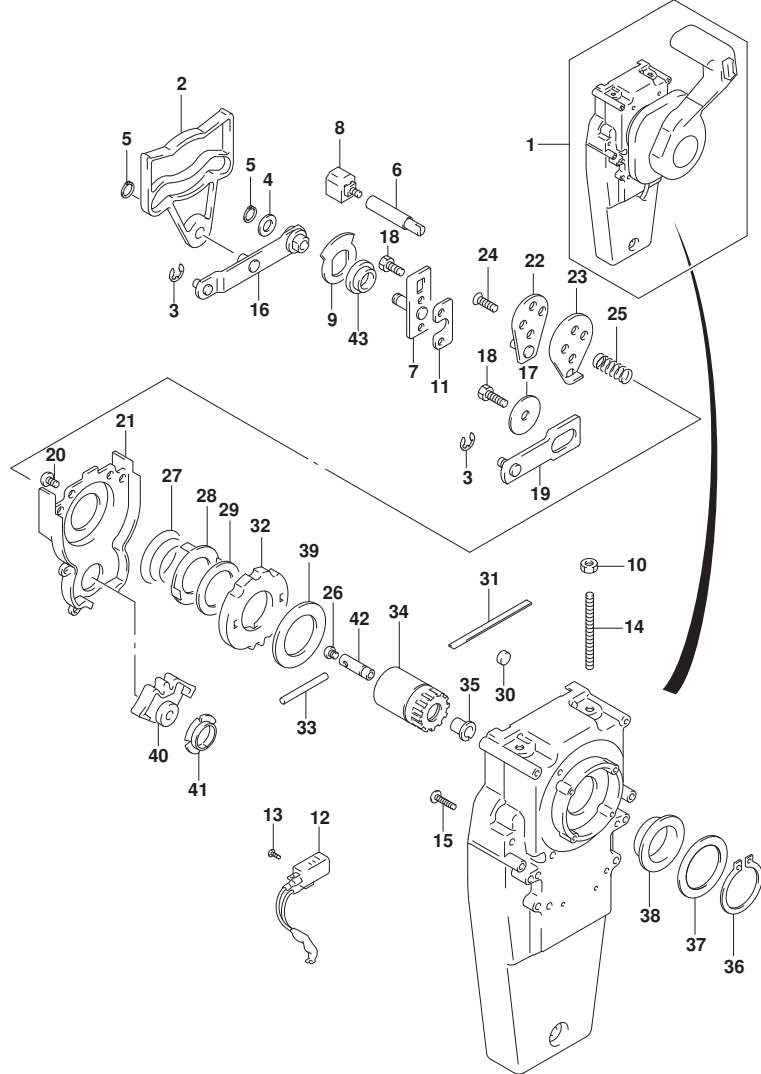


FIG.518A (1-J-6) OPT:CONCEALED REMOCON (2) (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J33	REMOTE CONTROL ASSY	1	
2	67222-92E50	.DUEL PLATE	1	
3	67292-94300	.E RING	3	
4	67288-92E10	.WASHER	1	
5	67291-92E00	.SNAP RING	2	
6	67223-92E50	.BRAKE ADJUST	1	
7	67221-92E50	.HOLDER ASSY	1	
8	67224-92E50	.BRAKE SHOE ASSY	1	
9	67225-92E50	.DISK, BRAKE	1	
10	09140-06020	.NUT	2	
11	67294-92E00	.SPACER	1	
12	37721-95500	.SWITCH ASSY, NEUTRAL	1	
13	67296-92E11	.SCREW, NEUTRAL SWITCH	2	
14	67226-92E10	.BOLT, STOPPER (REAR)	2	
15	67296-92E20	.SCREW (5X25)	2	
16	67240-92E50	.ARM ASSY, THROTTLE	1	
17	67228-92E00	.WASHER	1	
18	67286-92E00	.BOLT (6X18)	3	
19	67230-92E00	.ARM ASSY, SHIFT	1	
20	09125-05042	.SCREW (5X10)	11	
21	67234-92E00	.GEAR CASE	1	
22	67245-92E00	.LEVER ASSY, THROTTLE	1	
23	67227-92E00	.STOPPER	1	
24	67296-88D10	.SCREW (5X16)	2	
25	67225-92E00	.SPRING	1	
26	09125-04004	.SCREW (4X6)	1	
27	67233-92E00	.SPRING	1	

FIG.518A

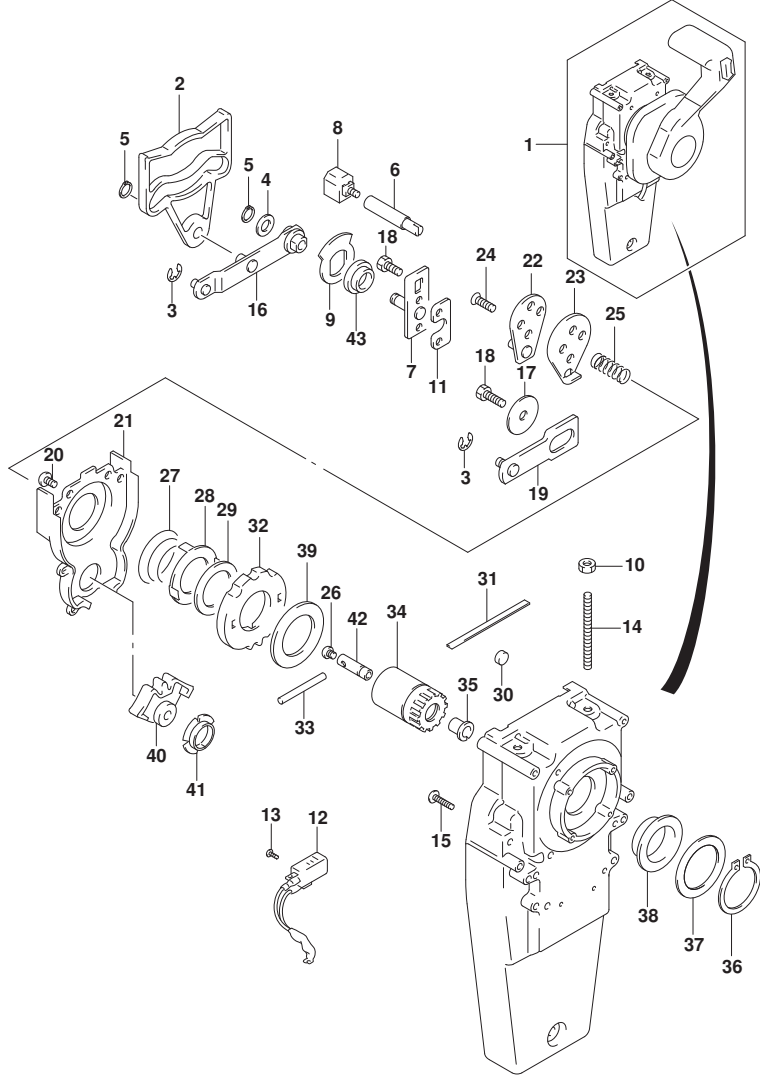


FIG.518A (1-J-7) OPT:CONCEALED REMOCON (2) (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	67235-92E00	.PLATE, SHIFT LOCK	1	
29	67239-92E10	.PLATE, SHIFT PIN	1	
30	67236-92E00	.ROLLER	1	
31	67237-92E01	.SPRING	5	
32	67238-92E50	.GEAR, DRIVE	1	
33	67239-92E00	.PIN	1	
34	67246-92E50	.SHAFT, DRIVE	1	
35	67252-92E00	.BUSH	1	
36	67291-92E10	.SNAP RING	1	
37	67253-92E10	.WASHER	1	
38	67252-92E10	.BUSH	1	
39	67253-95600	.WASHER	1	
40	67231-92E00	.GEAR, SHIFT	1	
41	67232-95600	.BUSH	1	
42	67241-92E50	.ROD, FREE ACC	1	
43	67232-92E50	.BUSH	1	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01

FIG.519A

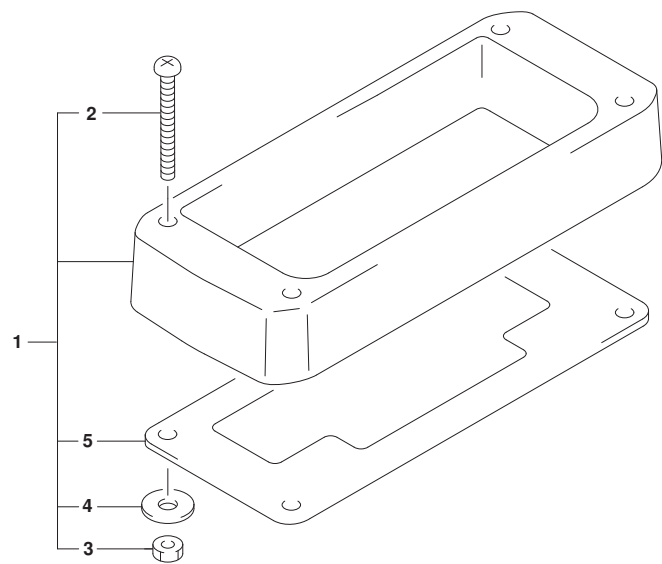


FIG.519A (1-J-8) OPT:REMOTE CONTROL SPACER (DF25A)(DF25ATH)(DF30A)(DF30AT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67500-88L00	KIT, R/CON SPACER SINGLE	1	
2	09125-05135	.SCREW (5X65)	4	
3	09140-05005	.NUT	4	
4	09160-05029	.WASHER (5.5X12X0.8)	4	
5	67273-88L00	.GROMMET, R/CON SINGLE	1	

DF25A P01
DF25ATH P01
DF30A P40
DF30ATH P01
DF30AQ P01

FIG.521A

FIG.521A (1-J-9) OPT:HARNESS (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	36620-93J10	WIRE ASSY, REMOCON EXTENSION	1	L:2000	
1-2	36620-93J40	WIRE ASSY, REMOCON EXTENSION	1	L:3000	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01

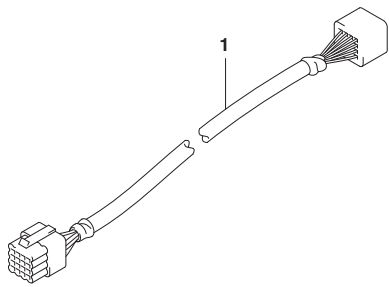


FIG.530A

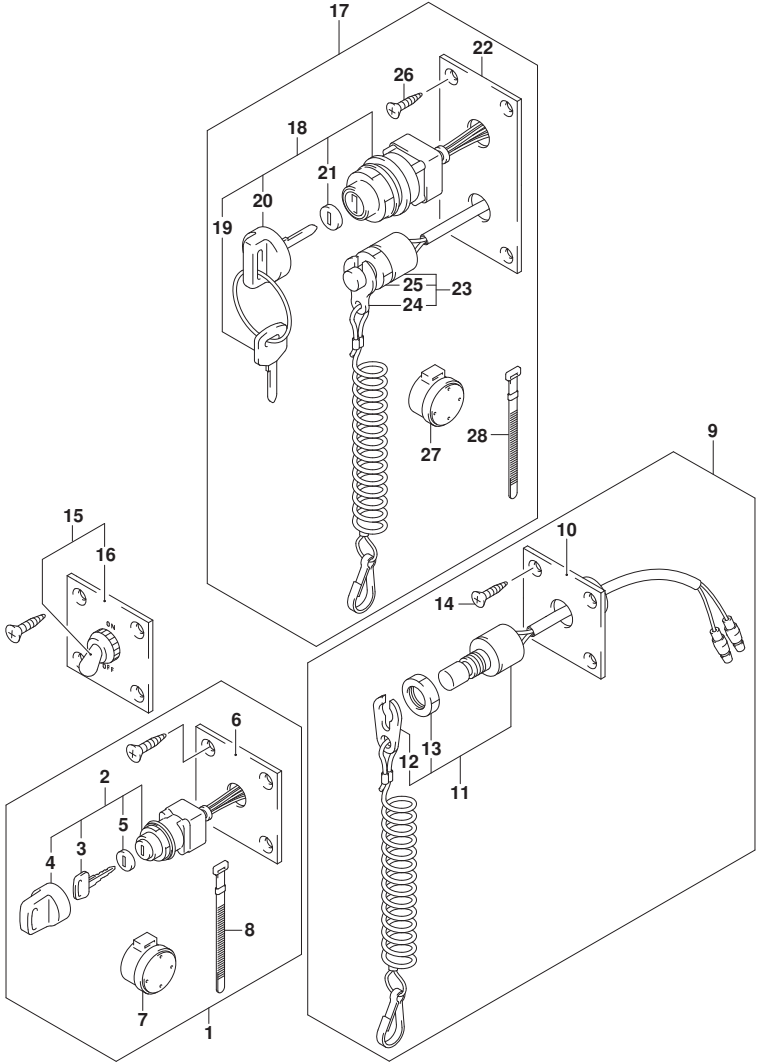


FIG.530A (1-J-10) OPT:SWITCH (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-96J00	PANEL ASSY, IGNITION SW	1	
2	37110-93J01	..SWITCH ASSY, IGNITION	1	
3-1	37141-99E00	..KEY (931)	2	
3-2	37141-99E10	..KEY (932)	2	
3-3	37141-99E20	..KEY (933)	2	
3-4	37141-99E30	..KEY (934)	2	
3-5	37141-99E40	..KEY (935)	2	
3-6	37141-99E50	..KEY (936)	2	
3-7	37141-99E60	..KEY (937)	2	
3-8	37141-99E70	..KEY (938)	2	
3-9	37141-99E80	..KEY (939)	2	
3-10	37141-99E90	..KEY (940)	2	
3-11	37141-99EA0	..KEY (941)	2	
3-12	37141-99EB0	..KEY (942)	2	
4	37143-99E00	..CAP, KEY	1	
5	37149-93J00	..CAP, CYLINDER BODY	1	
6	37139-99E00	..PANEL, IGNITION SW	1	
7	38500-93J90	..BUZZER ASSY, WARNING	1	
8	09407-08401	..CLAMP (L:80)	1	
9	37803-93J05	PANEL ASSY, EMERGENCY SW	1	
10	37825-99E10	..PANEL, EMERGENCY SW	1	
11	37820-93J10	..SWITCH ASSY, EMERGENCY STOP	1	
12	37823-92E01	..PLATE ASSY, EMERGENCY SWITCH LOCK	1	
13	37826-92J10	..NUT	1	
14	03122-05165	..SCREW	4	

FIG.530A

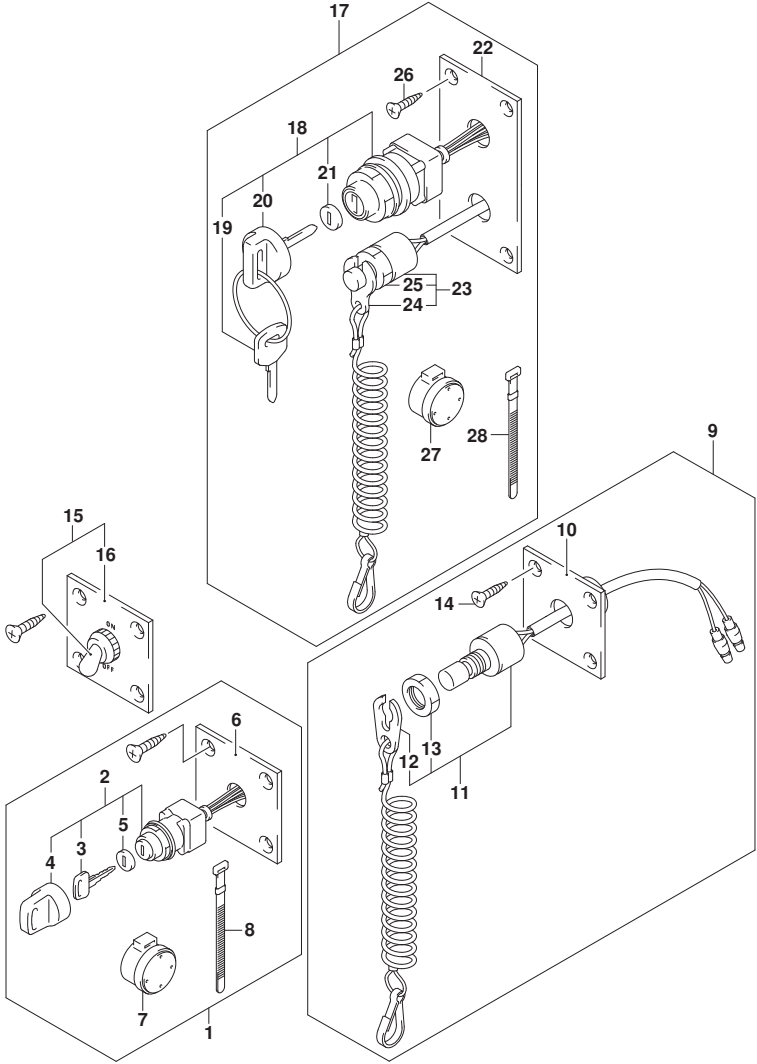


FIG.530A (1-J-11) OPT:SWITCH (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15	37210-93J00	PANEL ASSY, LIGHTING SW	1	
16	37212-93J00	.PANEL, LIGHTING SW	1	
17	37100-96J25	PANEL ASSY, ENGINE SW	1	
18	37110-93J01	.SWITCH ASSY, IGNITION	1	
19-1	37141-99E00	..KEY (931)	2	
19-2	37141-99E10	..KEY (932)	2	
19-3	37141-99E20	..KEY (933)	2	
19-4	37141-99E30	..KEY (934)	2	
19-5	37141-99E40	..KEY (935)	2	
19-6	37141-99E50	..KEY (936)	2	
19-7	37141-99E60	..KEY (937)	2	
19-8	37141-99E70	..KEY (938)	2	
19-9	37141-99E80	..KEY (939)	2	
19-10	37141-99E90	..KEY (940)	2	
19-11	37141-99EA0	..KEY (941)	2	
19-12	37141-99EB0	..KEY (942)	2	
20	37143-99E00	..CAP, KEY	1	
21	37149-93J00	..CAP, CYLINDER BODY	1	
22	37139-99E40	.PANEL, IGNITION SWITCH	1	
23	37820-93J10	.SWITCH ASSY, EMERGENCY	1	
24	37823-92E01	..PLATE ASSY, EMERGENCY	1	
25	37826-92J10	..NUT	1	
26	03121-0516A	.SCREW	4	
27	38500-93J90	.BUZZER ASSY, WARNING	1	
28	09407-08401	.CLAMP (L:80)	1	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01

FIG.544A

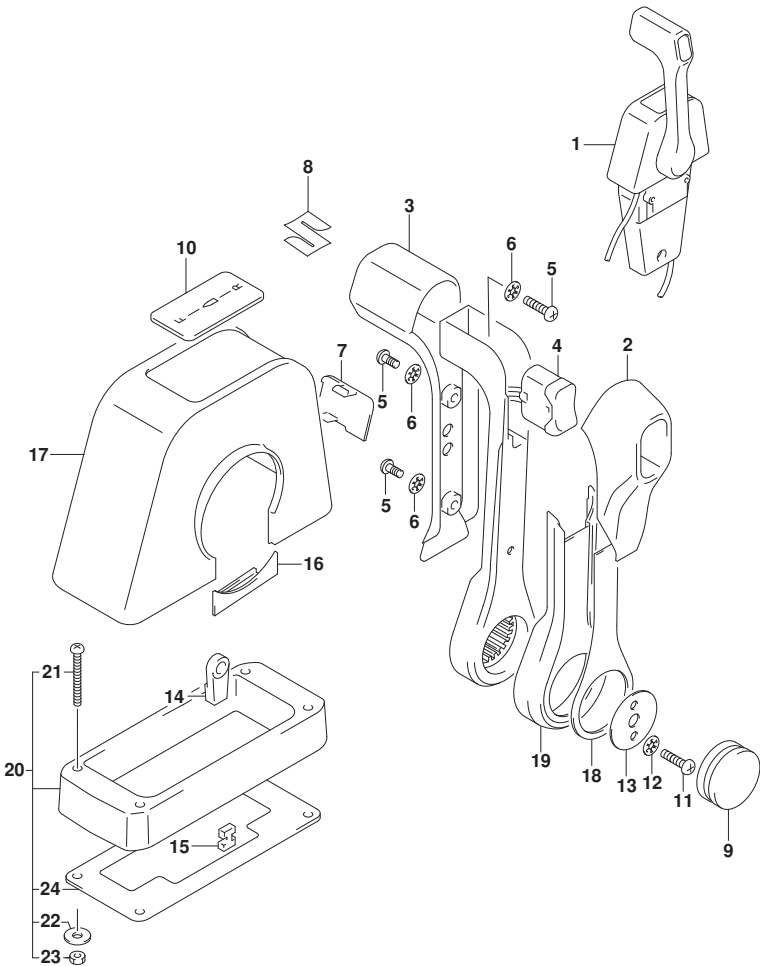


FIG.544A (1-J-12) OPT:REMOTE CONTROL ASSY SINGLE (1) (DF25AR)(DF25AT)(DF30A

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	67200-88L00	REMOTE CONTROL ASSY, SINGLE	1	
2	67261-88L10	.GRIP, REMOCON NO.2	1	
3	67261-88L00	.GRIP, REMOCON NO.1	1	
4	37850-88L00	.SWITCH ASSY, PTT	1	
5	67296-88L00	.SCREW	3	
6	67288-92E20	.WASHER	3	
7	67212-88L00	.COVER, PLUG (SINGLE)	1	
8	68111-88L00	.EMBLEM, MARK (S)	1	
9	67257-88L00	.CAP, LEVER	1	
10	67281-88L00	.DECAL (SINGLE)	1	
11	67296-92E60	.SCREW	2	
12	67288-92E60	.WASHER	2	
13	67253-92E00	.WASHER	1	
14	67275-95600	.END, CABLE	2	
15	67273-95600	.SPACER	1	
16	67271-88L10	.COVER, REMOCON LEVER LOWER	1	
17	67211-88L00	.COVER (SINGLE)	1	
18	67264-88L00	.COVER, LEVER DESIGN	1	
19	67264-88L10	.COVER, LEVER PLATING	1	
20	67500-88L00	KIT, REMOCON SPACER SINGLE	1	
21	09125-05135	.SCREW (5X65)	4	
22	09160-05029	.WASHER (5.5X12X0.8)	4	
23	09140-05005	.NUT	4	
24	67273-88L00	.GROMMET, R/CON SINGLE	1	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01

FIG.545A

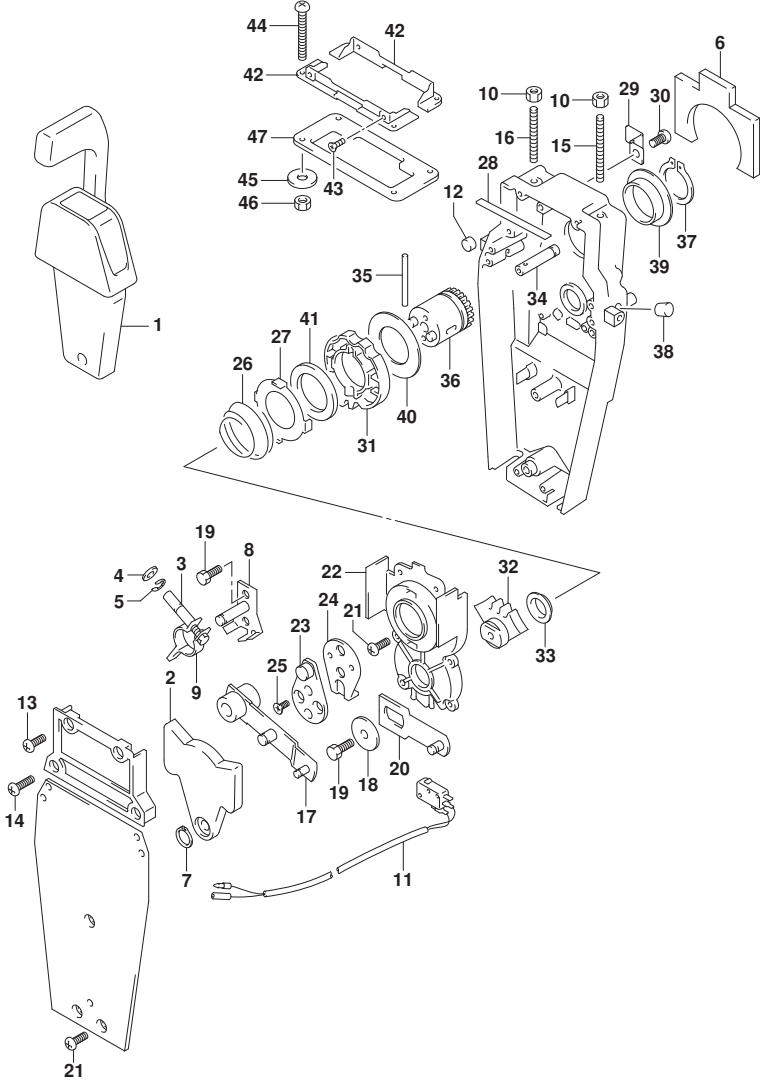


FIG.545A (1-J-13) OPT:REMOTE CONTROL ASSY SINGLE (2) (DF25AR)(DF25AT)(DF30A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L00	REMOTE CONTROL ASSY	1	
2	67222-92E00	.DUAL PLATE	1	
3	67223-92E00	.BRAKE ADJUST	1	
4	67288-92E00	.WASHER	1	
5	67292-94300	.E RING	4	
6	67272-88L00	.GOM SEAL, WATERPROOF	1	
7	67291-92E00	.SNAP RING	1	
8	67221-92E00	.SHIFT ASSY	1	
9	67224-92E00	.BRAKE ARM ASSY	1	
10	09140-06020	.NUT	2	
11	37721-88L00	.SWITCH ASSY, NEUTRAL	1	
12	67236-92E00	.ROLLER	1	
13	67296-88D10	.SCREW (5X16)	2	
14	67296-92E20	.SCREW	2	
15	67226-92E00	.BOLT, STOPPER FRONT	1	
16	67226-92E10	.BOLT, STOPPER REAR	1	
17	67240-92E00	.ARM ASSY, THROTTLE	1	
18	67228-92E00	.WASHER	1	
19	67286-92E00	.BOLT	3	
20	67230-88L00	.ARM ASSY, SHIFT	1	
21	09125-05042	.SCREW (5X10)	10	
22	67234-88L00	.CASE, GEAR	1	
23	67245-92E00	.LEVER ASSY, THROTTLE	1	
24	67227-92E00	.STOPPER	1	
25	09126-06006	.SCREW (6X20)	2	
26	67233-92E00	.SPRING	1	
27	67235-92E00	.PLATE, SHIFT LOCK	1	

This exploded view diagram illustrates the assembly of a car stereo unit. The components are numbered 1 through 47, indicating their assembly sequence. The main body of the unit is shown in the center, with various internal and external parts being attached. Key components include:

- 1**: The main stereo unit housing.
- 2**: A mounting bracket or plate.
- 3**: A screw for mounting the unit.
- 4**: A small pin or clip.
- 5**: A small screw or pin.
- 6**: A small screw or pin.
- 7**: A cable or wire.
- 8**: A small component, possibly a switch or button.
- 9**: A small component, possibly a switch or button.
- 10**: A small component, possibly a switch or button.
- 11**: A cable or wire.
- 12**: A small component, possibly a switch or button.
- 13**: A small screw or pin.
- 14**: A small screw or pin.
- 15**: A small screw or pin.
- 16**: A small screw or pin.
- 17**: A small component, possibly a switch or button.
- 18**: A small component, possibly a switch or button.
- 19**: A small component, possibly a switch or button.
- 20**: A small component, possibly a switch or button.
- 21**: A small component, possibly a switch or button.
- 22**: A small component, possibly a switch or button.
- 23**: A small component, possibly a switch or button.
- 24**: A small component, possibly a switch or button.
- 25**: A small component, possibly a switch or button.
- 26**: A small component, possibly a switch or button.
- 27**: A small component, possibly a switch or button.
- 28**: A small component, possibly a switch or button.
- 29**: A small component, possibly a switch or button.
- 30**: A small component, possibly a switch or button.
- 31**: A small component, possibly a switch or button.
- 32**: A small component, possibly a switch or button.
- 33**: A small component, possibly a switch or button.
- 34**: A small component, possibly a switch or button.
- 35**: A small component, possibly a switch or button.
- 36**: A small component, possibly a switch or button.
- 37**: A small component, possibly a switch or button.
- 38**: A small component, possibly a switch or button.
- 39**: A small component, possibly a switch or button.
- 40**: A small component, possibly a switch or button.
- 41**: A small component, possibly a switch or button.
- 42**: A small component, possibly a switch or button.
- 43**: A small component, possibly a switch or button.
- 44**: A small component, possibly a switch or button.
- 45**: A small component, possibly a switch or button.
- 46**: A small component, possibly a switch or button.
- 47**: A small component, possibly a switch or button.

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
28	67237-92E01	.SPRING	5	
29	67269-92E00	.BRACKET	1	
30	67296-88D10	.SCREW	1	
31	67238-88L00	.GEAR, DRIVE	1	
32	67231-88L00	.GEAR, SHIFT	1	
33	67232-88L00	.BUSH, SHIFT GEAR	1	
34	67241-88L00	.ROD, FREE ACCEL	1	
35	67239-92E00	.PIN	1	
36	67246-88L00	.SHIFT, REMOCON DRIVE	1	
37	67291-92E10	.SNAP RING	1	
38	67243-92E00	.CAP, HOLE	1	
39	67252-88L00	.BUSH, REMOCON DRIVE SHAFT	1	
40	67253-88L00	.WASHER, REMOCON DRIVE SHAFT	1	
41	67239-92E10	.PLATE, SHIFT PIN	1	
42	67274-88L00	.FLANGE, COVER BASE (SINGLE)	2	
43	67296-95610	.SCREW	4	
44	67296-92E30	.SCREW	4	
45	09160-05024	.WASHER (5.5X16X1.5)	4	
46	67287-92E00	.NUT	4	
47	67273-88L00	.GROMMET, REMOCON (SINGLE)	1	

DF25A_30A_P01_018_545A
OPT:REMOTE CONTROL ASSY SINGLE (2)

DF25A_30A_P01_018

FIG.553A

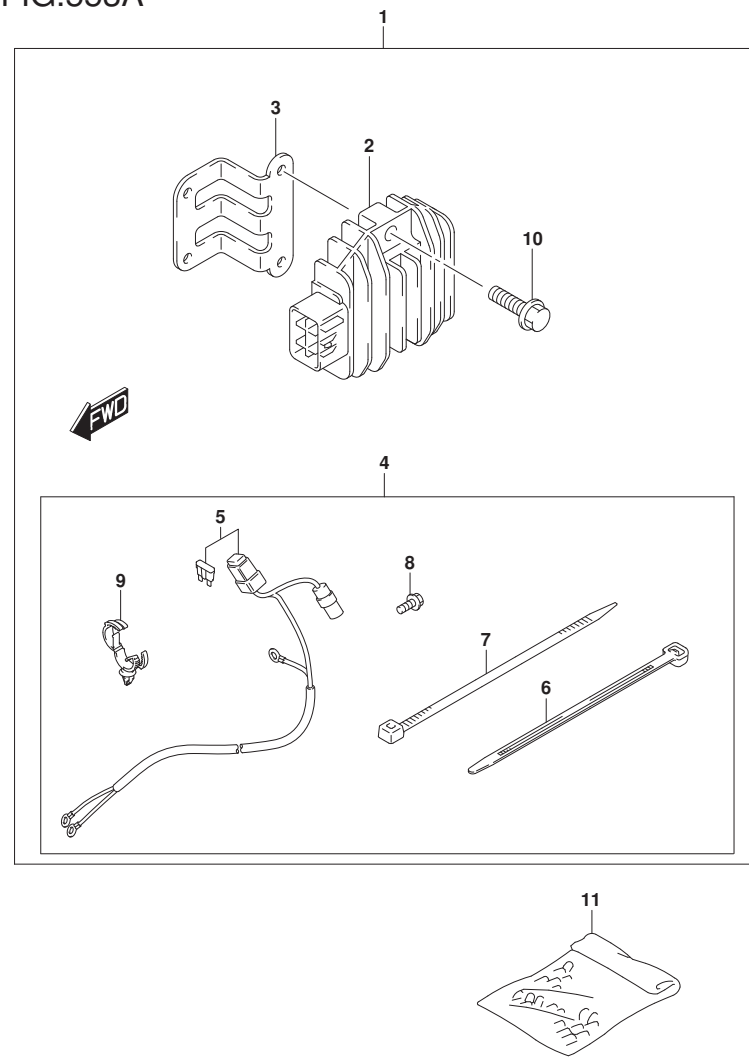


FIG.553A (1-J-15) OPT:ELECTRICAL (MANUAL STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32000-94L01	KIT, BATTERY CHARGING	1	
2	32800-88L01	.RECTIFIER & REGULATOR ASSY	1	
3	32815-94L00	.BRACKET, RECTIFIER	1	
4	39600-94L00	.RECEPTACLE SET	1	
5	36740-94L00	..CASE ASSY, FUSE	1	
6	09407-14403	..CLAMP (L:125)	2	
7	09407-14407	..CLAMP (L:145)	3	
8	01550-06127	..BOLT	1	
9	09403-20308	..CLAMP	1	
10	01550-06207	.BOLT	2	
11	36990-87D00	TERMINAL & SLEEVE SET	1	

DF25A P01
DF30A P40
DF30AQ P01

1



REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31000-94L04	STARTER SET, ELECTRIC	1	
2	31101-94L00	..MOTOR SET, STARTER	1	
3	31100-94401	..MOTOR ASSY, STARTING	1	
4	31800-94L00	..RELAY ASSY, STARTER MOTOR	1	
5	31912-94L00	..BAND, STARTER MOTOR	1	
6	31918-94401	..DAMPER, LOWER	1	
7	33820-89E01	..CABLE, PLUS TERM TO RELAY	1	
8	09128-06013	..SCREW (6X8)	2	
9	01550-06167	..BOLT	2	
10	01550-08257	..BOLT	2	
11	08310-00067	..NUT	1	
12	08321-01067	..WASHER, LOCK	1	
13	32102-94L10	..FLYWHEEL, MAGNETO	1	
14	32800-88L01	..RECTIFIER & REGULATOR ASSY	1	
15	32815-94L00	..BRACKET, RECTIFIER	1	
16	33810-94L01	..CABLE, STARTER	1	
17	36610-94L11	..HARNESS ASSY, WIRING (ME)	1	
18	36618-43410	..CAP, OIL PRESSURE SWITCH	1	
19	09481-30501	..FUSE (30A)	1	
20	37161-89L02	..SWITCH ASSY, STARTER MOTOR	1	
21	09407-18402	..CLAMP (L:165)	1	
22	01550-06207	..BOLT	2	
23	09403-20308	..CLAMP	1	

DF25A P01
DF30A P40
DF30AQ P01

FIG.575A

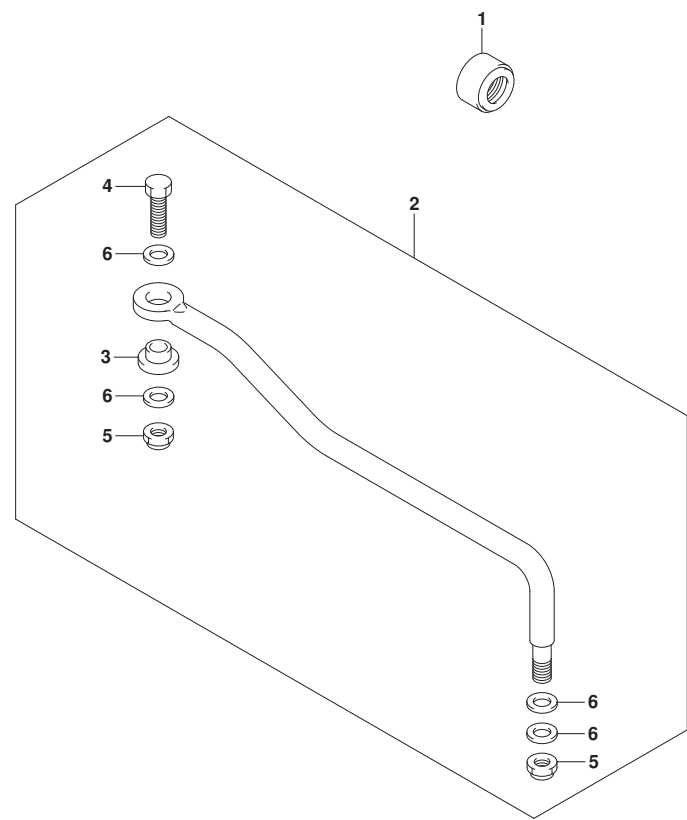


FIG.575A (1-K-3) OPT:DRAG LINK (DF25A)(DF25ATH)(DF30A)(DF30ATH)(DF30AQ)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41161-94400	SEAL, STEERING CABLE	1	
2	67701-94L00	LINK ASSY, DRAG	1	
3	67721-94L00	.SPACER	1	
4	67725-96J00	.BOLT	1	
5	67726-99E00	.NUT	2	
6	67728-99E00	.WASHER	4	

DF25A P01
DF25ATH P01
DF30A P40
DF30ATH P01
DF30AQ P01



FIG.600A

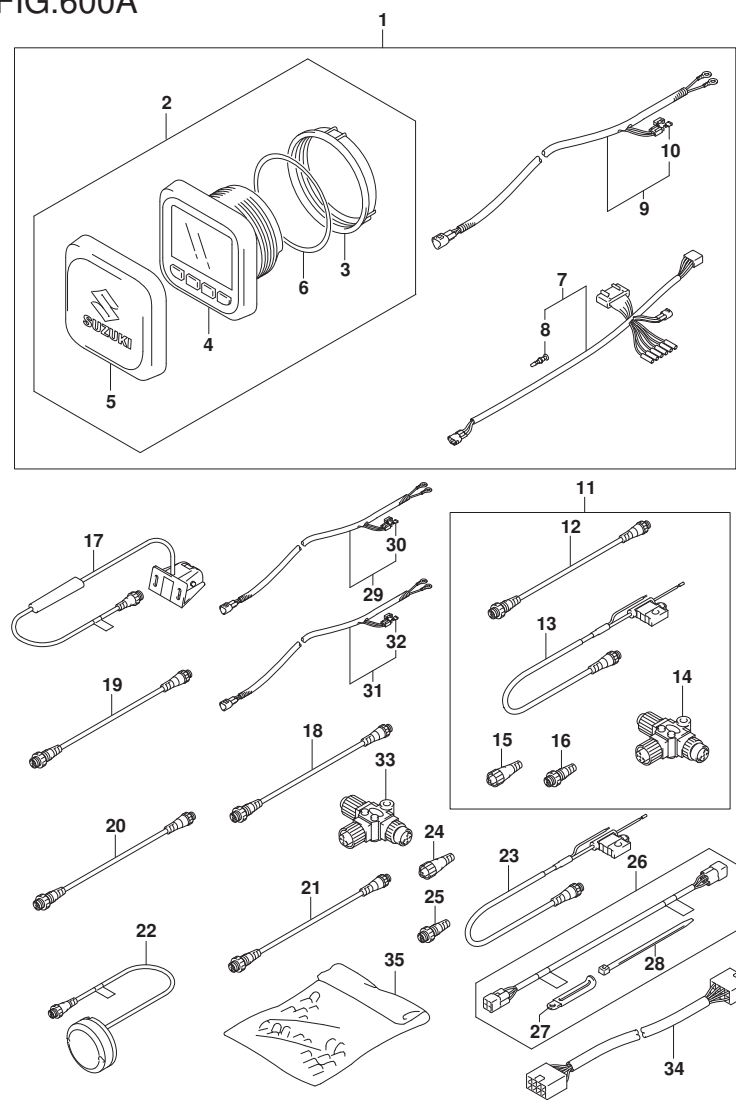


FIG.600A (1-K-4) OPT:MULTI FUNCTION GAUGE (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	34000-96L42	KIT, SINGLE GAUGE MECH	1	
2	34011-96L12	.SET, MULTI GAUGE	1	
3	34112-96L00	..NUT, GAUGE	1	
4	34193-96L00	..BEZEL, GAUGE	1	
5	34211-96L00	..COVER, GAUGE	1	
6	34825-96L00	..PACKING, GAUGE	1	
7	36661-96L10	ADAPTER, GAUGE	1	
8	36615-96300	..TERMINAL	5	
9	36663-98J10	..WIRE, GAUGE POWER (6M)	1	
10	09481-05501	..FUSE (5A)	1	
11	36001-88L00	SET, WIRE	1	
12	36662-88L10	..WIRE, 2 EXTENSION	1	
13	36663-88L00	..HARNESS ASSY, NETWORK POWER	1	
14	36664-88L00	..CONNECTOR, BRANCH	1	
15	36665-88L00	..UNIT, RESISTOR FEMALE	1	
16	36665-88L10	..UNIT, RESISTOR MALE	1	
17	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
18	36662-88L10	WIRE, 2 EXTENSION	1	
19	36662-88L20	WIRE, 6 EXTENSION	1	
20	36662-88L30	WIRE, 15 EXTENSION	1	
21	36662-88L00	WIRE, 25 EXTENSION	1	
22	39950-88L02	MODULE ASSY, GPS RECEIVER	1	
23	36663-88L00	HARNESS ASSY, NETWORK POWER	1	
24	36665-88L00	UNIT, RESISTOR FEMALE	1	
25	36665-88L10	UNIT, RESISTOR MALE	1	

FIG.600A

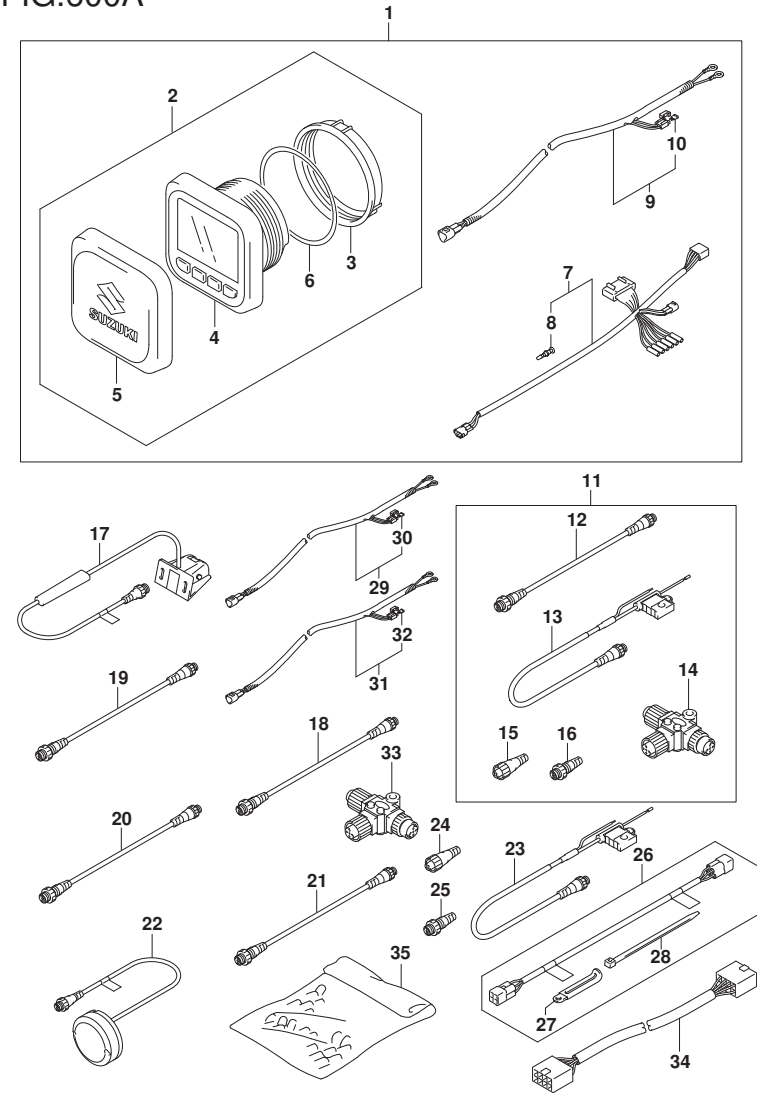


FIG.600A (1-K-5) OPT:MULTI FUNCTION GAUGE (DF25AR)(DF25AT)(DF30AR)(DF30AT)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
26	36660-89L02	SET, ENG TO INTERFACE WIRE	1	
27	29404-93J10	.CLAMP	1	
28	09407-14407	.CLAMP (L:145)	4	
29	36663-98J00	WIRE, GAUGE POWER (2.5M)	1	
30	09481-05501	.FUSE (5A)	1	
31	36663-98J10	WIRE, GAUGE POWER (6M)	1	
32	09481-05501	.FUSE (5A)	1	
33	36664-88L00	CONNECTOR, BRANCH	1	
34	36667-96L20	WIRE, GAUGE EXT	1	
35	36990-87D00	TERMINAL & SLEEVE SET	1	

DF25AR P01
DF25AT P01
DF30AR P01
DF30AT P01

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		13125-94L00	122A-3		146B-24
			122B-3	15192-94L00	146A-25
		13300-94L00	163A-1		146B-25
		13510-94L00	166B-1	15193-94L00	146A-26
			513A-2		146B-26
11110-94L00	111A-1		513B-2	15194-94L00	146A-27
11112-84400	113A-2	13640-32G20	334A-1		146B-27
11115-30D70	111A-14		334B-1	15194-94L10	146A-28
11119-94L00	111A-2		334C-1		146B-28
11141-94L00	111A-3		334D-1	15194-94L20	146A-29
11162-94L00	111A-5		334E-1		146B-29
11170-94L00	111A-6	13650-52G00	334A-9	15194-94L30	146A-30
11174-94L00	111A-7		334B-8		146B-30
11261-93J00	139A-7		334C-8	15194-94L40	146A-31
11291-94L00	113A-7		334D-8		146B-31
11301-94L00	113A-1		334E-9	15200-94L10	146A-1
11382-93E00	111A-8	13655-87J00	334A-10		146B-1
12100-89L00-050	116A-10		334B-9	15211-91J00-350	162A-5
12111-89L00-0B0	116A-1		334C-9	15217-94L00	146A-2
12140-89L00	116A-2		334D-9		146B-2
12140-89L00-050	116A-11		334E-10	15410-87L00	146A-32
12151-89L00	116A-3	13711-94L00	122A-16		146B-32
12160-89L11	116A-5		122B-16	15410-94L00	146A-3
12163-89L02	116A-6	13800-94L01	122A-14		146B-3
12220-94L00	116A-7		122B-14	15419-87J00	146A-33
12341-89L10	116A-8	13810-94L01	122A-15		146B-33
12631-94L00	120A-1		122B-15	15421-94L00	146A-35
12635-89L00	120A-2	13812-94L01	122A-17		146B-35
12637-89L00	120A-3		122B-17	15422-94L00	146A-36
12638-89L00	120A-4	13813-94L00	122A-18		146B-36
12700-94L01	121A-1		122B-18	15600-94L00	146A-4
12741-94L00	120A-5	13815-94L00	122A-19		146B-4
12744-94L00	120A-6		122B-19	15629-89L00	146A-8
12761-94L00	120A-12	13816-94L00	122A-20		146B-8
12764-94L00	120A-13		122B-20	15662-94L10	146A-17
12840-94L00	121A-3	13817-94L00	122A-21		146B-17
12842-09J00	121A-4		122B-21	15674-94L00	146A-5
12843-27A00	121A-5	13820-94L00	122A-23		146B-5
12861-94L00	121A-6	13832-94L00	122B-23	15681-94L00	144A-1
12862-94L00	121A-7	13841-94L00	122A-22	15710-82M00	144A-2
12911-94L10	121A-10		122B-22	15715-82M00	144A-3
12915-94L60	121A-11	13851-94L00	122A-24	15750-94L00	144A-4
12921-94L00	121A-12		122B-24	15770-94L00	146A-6
12931-78G00	121A-13	14110-94L00	139A-1		146B-6
12932-50MA0	121A-14	14151-94L00	139A-2	15820-94L00	146A-7
12933-71C00	121A-15	15100-94L00	146A-22		146B-7
13110-94L00	122A-1	15100-94L10	146B-22	16400-94L00	175A-1
	122B-1	15131-94L00	146A-23	16431-94L00	175A-2
13119-94L00	122A-2		146B-23	16440-11D00	113A-6
	122B-2	15191-94L00	146A-24	16510-87J00	175A-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
16519-94L00	175A-6	18121-94JL0	167A-2	21110-94L00	206B-1
16520-94L00	175A-7	18130-93E01	167A-3		513A-9
16910-94L01	175A-10	18132-89L00	167A-4		513B-9
16930-94L00	175A-11	18142-93E00	167A-5	21111-89L00	206A-1
17400-94L00	160A-18	18173-94L00	122A-10	21122-94L00	206A-2
17400-94L10	160B-18		122B-10		206B-2
17411-94L00	160A-1	18193-94L00	167A-11	21131-94J00-Y5S	444B-31-2
	160B-1	18194-94L00	167A-12	21131-94J00-YAY	444A-31
17413-94L00	160A-2	18210-95L00	167A-6		444B-31-1
17413-94L10	160B-2	18280-93E00	167A-7	21151-94L10	206A-3
17461-94L00	160A-3	18290-94L00	167A-10		206B-3
	160B-3	18295-94L00	167A-13	21210-94L00	206A-4
17462-94L00	160A-4	18498-94JL0-160	162A-8		206B-4
	160B-4	18590-58M00	334A-11	22511-99011	336A-1
17471-94L00	160A-5		334B-10		336B-1
17471-94L10	160B-5		334C-10		336C-1
17472-94L00	160A-6		334D-10		336D-1
	160B-6		334E-11		336E-1
17561-94L00	160A-7-1	19116-94L00	166B-2		336F-1
	160B-7-1		513A-3	23111-94L00	206A-5-1
17561-94L10	160A-7-2		513B-3		206B-5-1
	160B-7-2	19120-99J11	166B-3	23111-94L10	206A-5-2
17562-94L00	160A-8		513A-4		206B-5-2
	160B-8		513B-4	23115-94L00	206A-6
17564-94L00	160A-9	19122-99J00	166B-4	23115-94L10	206B-6
	160B-9		513A-5		513A-10
17565-94L00	160A-17		513B-5		513B-10
	160B-17	19131-95502	166B-5	23131-94L00	410A-20
17631-94L00	160A-10		513A-16		410B-20
	160B-10		513B-16		410C-20
17632-94L00	160A-11	19137-94L00	166A-1		410D-20
	160B-11		166B-6		410E-20
17670-94J01	162A-1	19140-94L01	166B-7	23211-94L10	206A-7
17680-94L00	162A-2		513A-6		206B-7
17685-94L00	162A-7		513B-6	23213-94400	206A-24
17712-94L00	162A-4	19140-94L11	166A-2		206B-23
17913-93J00	405A-5	19140-94L20	166B-8	23214-89J00	206A-25
	405B-5		513A-7		206B-24
17914-93J00	405A-6		513B-7	23311-95J00	210A-1
	405B-6	19184-94L00	166A-3	25111-94L00	210A-2
17917-87L00	410A-30	19185-99J00	166B-9	25211-94L00	210A-5
	410B-30		513A-8	25215-94L00	210A-6
	410C-30		513B-8	25222-94L00	210A-9
	410D-30			25231-96301	210A-10
	410E-30			25232-96302	210A-11
18100-94L00	167A-1			25311-94L00	210A-3
18117-78K00	122A-7			29103-93J00	327B-6
	122B-7	20000			334C-13
18119-94L00	122A-8				334D-13
	122B-8			29141-93J00	160A-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	160B-13 210A-8 335A-12 335D-12 336C-14 336D-21 336E-21 338A-12 501B-22 600A-27	31360-96300 31800-94L00 31912-94L00 31918-94401	301A-10 301B-10 301C-10 310A-19 310B-19 310C-19 310D-19 310E-19 561A-4 301A-11 301B-11 301C-11 561A-5 301A-12 301B-12 301C-12	33410-94L00 33446-94L00 33510-16H10 33541-16H00 33542-16H00 33634-94L00 33810-94L01 33820-89E01 33833-91J00 33920-94L60 33920-94L70 33920-94L80 33925-94L00	303B-4 310A-10 310B-10 310C-10 310D-10 310E-10 310A-11 310B-11 310C-11 310D-11 310E-11 310A-15 310B-15 310C-15 310D-15 310E-15 310A-16 310B-16 310C-16 310D-16 310E-16 310A-12 310B-12 310C-12 310D-12 310E-12 322A-3 322B-2 322C-2 322D-3 322A-1 322B-1 322C-1 322D-1 561A-16 301A-13 301B-13 301C-13 561A-7 444A-21 444B-21 310A-17 310B-17 310D-17 310E-17 310C-17 310A-18 310B-18 310C-18 310D-18
29404-93J10					
30000					
31000-94L04 31100-94401	561A-1 301A-1 301B-1 301C-1 561A-3				
31101-94L00 31111-89J00 31123-89J00 31123-89J10 31131-96300	561A-2 340A-2 340A-4 338A-13 301A-3	32000-94L01 32102-94L00 32102-94L10	561A-6 553A-1 303A-1 303B-1		
31132-96300	301B-3 301C-3 301A-4 301B-4 301C-4	32120-94L00 32160-94L00 32800-88L01	561A-13 303A-2 303B-2 303A-3 303B-3 310A-2 310B-2 310C-2 310D-2 310E-2		
31135-89J00	301A-5 301B-5 301C-5	32800-94L00	553A-2 561A-14 310A-1		
31173-89J00	301A-2 301B-2 301C-2		310B-1 310C-1 310D-1		
31173-94L02 31281-93340	340A-5 301A-6 301B-6 301C-6	32815-94L00	310A-3 310B-3 310C-3 310D-3		
31310-96300	301A-7 301B-7 301C-7		553A-3 561A-15		
31311-89J00 31312-96300	340A-3 301A-8	32890-94L00	310A-4 310B-4 310C-4		
31320-94400	301B-8 301C-8 301A-9 301B-9 301C-9	33220-64L00	303A-4		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	310E-18 600A-1 600A-2 501A-5-1 501B-5-1 501A-5-2 501B-5-2 501A-5-3 501B-5-3 501A-5-4 501B-5-4 600A-3 501A-12 501B-12 600A-17 501A-10 501B-10 501A-7 501B-7 600A-4 501A-15-1 501B-15-1 501A-15-2 501A-13-1 501B-13-1 501A-13-2 501B-13-2 600A-5 501A-17-1 501B-17-1 501A-17-2 501B-17-2 501A-18 501B-18 501A-19 501B-19 501A-1-1 501B-1-1 501A-1-2 501B-1-2 501A-3-1 501B-3-1 501A-3-2 501B-3-2 501B-23-1 501B-23-2 501B-25 600A-6 600A-11	36360-94L00 36367-89L00-Y5S 36367-89L00-YAY 36610-94L01 36610-94L11 36610-94L21 36610-94L32 36610-94L42 36615-96300 36616-94L00 34211-96L00 34300-93J00 34300-93J11 34310-92E00 34360-92E00 34500-93J00 34500-93J11 34600-93J00 34600-93J11 36620-93J10 36620-93J40 36620-94L00 36620-94L10	334A-3 334B-3 334C-3 334D-3 334E-3 334C-4-2 334D-4-2 334E-4-2 334A-4 334B-4 334C-4-1 334D-4-1 334E-4-1 322A-4 322A-6 561A-17 322B-3 513A-11 322D-4 322C-3 513B-11 322A-9 322D-7 501A-9 501B-9 600A-8 322A-10 322B-7 322C-7 322D-8 322A-11 322B-8 322C-8 322D-9 301C-18 513B-39 322A-5 322A-7 322B-4 322C-4 322D-5 513A-12 513B-12 561A-18 521A-1-1 521A-1-2 450A-52 508A-52 508B-54 450B-54	36628-92E00 36646-93J01 36656-94L00 36660-89L02 36661-96L10 36662-88L00 36662-88L10 36662-88L20 36662-88L30 36663-88L00 36663-98J00 36663-98J10 36664-88L00 36665-88L00 36665-88L10 36667-96L20 36690-94L00 36690-94L10 36740-94L00 36890-93J00 36894-87D00 36618-43410 36990-87D00 36991-94L00 37100-96J00 37100-96J25 37110-93J01	450A-2 450B-3 508A-2 508B-3 450B-2 508B-2 410A-31 410B-33 410C-33 410D-31 410E-31 600A-26 600A-7 600A-21 600A-12 600A-18 600A-19 600A-20 600A-13 600A-29 600A-9 600A-31 600A-14 600A-33 600A-15 600A-24 600A-16 600A-25 600A-34 303A-5 303A-6 553A-5 517A-23 336A-2 336B-2 336F-2 508A-54 508B-56 553A-11 600A-35 322A-18 322B-15 322C-15 322D-16 513B-38 530A-1 530A-17 530A-2 530A-18

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37110-93J11	450B-4		508A-4-8	37210-93J00	530A-15
	508B-4		508B-5-8	37212-93J00	530A-16
37110-94J02	450A-3		530A-3-8	37721-88L00	545A-11
	508A-3		530A-19-8	37721-93J91	450B-8
37139-99E00	530A-6	37141-99E80	450A-4-9		508B-8
37139-99E40	530A-22		450B-5-9	37721-94L00	334A-7
37141-99E00	450A-4-1		508A-4-9		334B-6
	450B-5-1		508B-5-9		334C-6
	508A-4-1		530A-3-9		334D-6
	508B-5-1		530A-19-9		334E-7
	530A-3-1	37141-99E90	450A-4-10	37721-95500	518A-12
37141-99E10	530A-19-1		450B-5-10	37724-99J00	206A-23
	450A-4-2		508A-4-10		206B-22
	450B-5-2		508B-5-10	37803-93J05	530A-9
	508A-4-2		530A-3-10	37820-89L00	334A-2
	508B-5-2		530A-19-10		334B-2
	530A-3-2	37141-99EA0	450A-4-11		334C-2
	530A-19-2		450B-5-11		334D-2
37141-99E20	450A-4-3		508A-4-11		334E-2
	450B-5-3		508B-5-11	37820-93J04	450A-7
	508A-4-3		530A-3-11		450B-9
	508B-5-3		530A-19-11		508A-7
	530A-3-3	37141-99EB0	450A-4-12		508B-9
	530A-19-3		450B-5-12	37820-93J10	530A-11
37141-99E30	450A-4-4		508A-4-12		530A-23
	450B-5-4		508B-5-12	37823-92E01	450A-8
	508A-4-4		530A-3-12		450B-10
	508B-5-4		530A-19-12		508A-8
	530A-3-4	37143-99E00	450A-5		508B-10
	530A-19-4		450B-6		530A-12
37141-99E40	450A-4-5		508A-5		530A-24
	450B-5-5		508B-6	37823-97J00	444A-34
	508A-4-5		530A-4		444B-34
	508B-5-5		530A-20	37825-99E10	530A-10
	530A-3-5	37149-93J00	450A-6	37826-92J00	450A-9
	530A-19-5		450B-7		450B-11
37141-99E50	450A-4-6		508A-6		508A-9
	450B-5-6		508B-7		508B-11
	508A-4-6		530A-5	37826-92J10	530A-13
	508B-5-6		530A-21		530A-25
	530A-3-6	37161-89L02	334A-5	37826-97J00	444B-35
	530A-19-6		334D-5	37826-97J01	444A-35
37141-99E60	450A-4-7		334E-5	37830-94J11	444A-33
	450B-5-7		561A-20		444B-33
	508A-4-7	37163-89L00	334A-6	37835-91J00-Y5S	444B-36-2
	508B-5-7		334B-5	37835-91J00-YAY	444A-36
	530A-3-7		334C-5		444B-36-1
	530A-19-7		334E-6	37850-88L00	544A-4
37141-99E70	450A-4-8		513A-15	37850-90J06	450B-12
	450B-5-8		513B-15		508B-12

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37850-92E27	517A-5		335C-1		336B-3-2
37850-92J00	327A-3	41121-94L00-Y5S	335D-2-2		336F-3-3
	513B-41	41121-94L00-YAY	335A-2	43111-94LA0-Y5S	336C-2-2
37850-94L01	327B-3		335D-2-1		336D-2-2
37851-89L00	327B-8	41121-94LA1-Y5S	335B-2-2	43111-94LA0-YAY	336C-2-1
37852-94JA0	327B-4	41121-94LA1-YAY	335B-2-1		336D-2-1
37853-94L00	410A-32		335C-2		336E-2-1
	410B-34	41130-91L01	335A-7	43111-94LB0-Y5S	336C-2-4
	410D-32		335D-7		336D-2-4
	410E-32	41130-94LA0	335B-7	43111-94LB0-YAY	336C-2-3
37856-92J00	327A-4		335C-7		336D-2-3
	513B-42	41135-93J11	335A-13		336E-2-2
37857-92J00	327A-5		335B-9	43112-94L01	405A-2
	513B-43		335C-9		405B-2
37859-90J00	450A-10		335D-13	43211-87JL0	336A-4
	450B-51	41161-94400	442A-1		336B-4
	508A-10		575A-1		336C-3
37864-94J10	508B-51	41211-94L00	335A-3		336D-3
	450A-11		335D-3		336E-3
	508A-11	41211-94LA0	335B-3		336F-4
38100-94L02	338A-14		335C-3	43241-87J00	335C-12
	340A-1	41212-91J00	335A-4	43411-89L00	336A-27
38410-93J21	327A-1		335B-4		336F-27
	327B-1		335C-4	43411-89LA0	336D-10
38415-94L00	327A-2		335D-4		336E-10
	327B-2	41213-94J01	335A-5	43415-94L01	336A-28
38500-93J00	450A-12		335B-5		336D-11
	508A-12		335C-5		336E-11
38500-93J90	450B-13		335D-5		336F-28
	508B-13	41221-94LA0	336C-15	43420-89L00	336A-29
	530A-7		336D-22		336D-12
	530A-27		336E-22		336E-12
39600-94L00	553A-4	41224-94LA0	336C-16		336F-29
39669-94L00	501A-21		336D-23	43425-89L00	336A-30
	501B-21		336E-23		336D-13
39950-88L02	600A-22	41230-94LA0	336C-17		336E-13
			336D-24		336F-30
			336E-24	43512-89L00	336A-31
		41233-94LA0	336C-18		336D-14
			336D-25		336E-14
			336E-25		336F-31
		41280-94LA0	336C-19	43515-88L00	336A-32
			336D-26		336D-15
			336E-26		336E-15
		43111-94L00-Y5S	336F-3-2		336F-32
41111-94L00-Y5S	335D-1-2	43111-94L00-YAY	336A-3-1	43516-89J00	336A-33
41111-94L00-YAY	335A-1		336B-3-1		336D-16
	335D-1-1		336F-3-1		336E-16
41111-94LA0-Y5S	335B-1-2	43111-94L10-Y5S	336F-3-4		336F-33
41111-94LA0-YAY	335B-1-1	43111-94L10-YAY	336A-3-2	43517-89L00	336A-34

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
43711-94L00	336D-17	45257-94L00	336B-22	48572-89J01	338A-3
	336E-17		336F-18	48583-95E00	338A-4
	336F-34		336A-19	48585-89J00	338A-18
	336A-5		336B-23	48681-87J11	338A-19
	336B-5		336F-19	48818-97E00	338A-5
43750-94L00-Y5S	336C-4	45260-94L00	336A-20	48823-89J00	338A-6
	336D-4		336B-24	48832-89J00	338A-7
	336E-4		336F-20	48834-89J00	338A-8
	336F-5		339A-1	48842-89J00	338A-9
	336C-5-2		335A-19	48861-89J01	338A-10
43750-94L00-YAY	336D-5-2	45420-94L00	335D-19	50000	
	336F-6-2		335A-16		
	336A-6-1		335D-16		
	336B-6-1		335B-17		
	336C-5-1		335C-18		
43750-94L10-Y5S	336D-5-1	45425-94J01	335A-17		
	336E-5-1		335D-17		
	336F-6-1		336A-38		
	336C-5-4		336B-31		
	336D-5-4		336F-38		
43750-94L10-YAY	336F-6-4	45722-94L00	336A-39		
	336A-6-2		336B-32		
	336B-6-2		336F-39		
	336C-5-3		336A-40		
	336D-5-3		336B-33		
43755-94L00	336E-5-2	45751-94L00	336F-40		
	336F-6-3		336A-41		
	336B-7		336B-34		
	336C-6		336F-41		
	513A-17		336A-42		
45211-94L00	513B-17	45761-94L00	336B-35		
	336A-12		336F-42		
	336B-16		339A-2		
	336F-12		338A-20		
	336A-13		339A-3		
45221-94L00	336B-17	47400-95J02	339A-4		
	336F-13		338A-1		
	336A-14		338A-21		
	336B-18		339A-5		
	336F-14		338A-22		
45241-94L00	336A-15	48321-94L00	339A-6		
	336B-19		338A-23		
	336F-15		339A-7		
	336A-16		338A-26		
	336B-20		339A-8		
45253-94L00	336F-16	48510-89J00	338A-11		
	336A-17		338A-15		
	336B-21		338A-16		
	336F-17		338A-17		
	336A-18		338A-2		
45255-94L00		48571-89J01			

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	335C-10-1	58100-95D01-019	407B-21-2	61151-91J11	410B-5
	335D-14-1		407A-21-5		410C-5
	336A-10-1		407B-21-5		410D-5
	336B-14-1		407A-21-6		410E-5
	336C-12-1		407B-21-6		410A-14
	336D-8-1	58100-96462-019	407A-21-10	61151-94L00	410B-14
	336E-8-1		407B-21-10		410C-14
	336F-10-1		407A-21-7		410D-14
	338A-28		407B-21-7		410E-14
	339A-9		407A-21-8		410A-33
55321-87J11	407A-8	58100-96492-019	407B-21-8	61155-94L00	410B-38
	407B-8		407A-21-9		410C-37
	335A-14-2		407B-21-9		410D-33
	335B-10-2		407A-22		410E-33
	335C-10-2		407B-22		405A-3
	335D-14-2	59178-97J00	407A-11	61400-94L00-Y5S	405B-3
	336A-10-2		407B-11		420B-1-2
	336B-14-2		336A-21		420C-1-2
	336C-12-2		336B-25		420E-1-2
	336D-8-2		336F-21		420A-1
55332-94L00	336E-8-2	59262-94J00	175A-3	61400-94L00-YAY	420B-1-1
	336F-10-2		146A-9		420C-1-1
	407A-9		146B-9		420D-1
	407B-9		59442-94L00		420E-1-1
	407A-10		335D-18		410A-9
55333-94L00	407B-10	59800-94L10	420A-12	61412-89L00	410B-9
	407B-15-2		420B-12		410C-9
	407A-15		420C-12		410D-9
	407B-15-1		420D-12		410E-9
	220A-21		420E-12		420A-2
56120-91L11-Y5S	220A-1-1	60000		61433-94L00	420B-2
	220A-1-2				420C-2
	220A-2				420D-2
	220A-5				420E-2
	220A-8				420B-5-2
56120-91L11-YAY	220A-9	61112-94L10	410A-4	61435-94L20-Y5S	420A-5
	220A-14		410B-4		420B-5-1
	220A-15		410C-4		420C-5-2
	220A-20		410D-4		420E-5-2
	407A-23		410E-4		420C-5-1
57510-94L00	407B-23	61124-94L00	410A-13-1	61435-94L30-YAY	420D-5
	407A-24		410E-13-1		420E-5-1
	407B-24		410B-13		420B-6-2
	407A-21-3		410C-13		420C-6-2
	407B-21-3		513A-20		420E-6-2
57632-91L00	407A-21-4	61124-94L20	513B-20	61443-94L10-Y5S	420A-6
	407B-21-4		410A-13-2		420B-6-1
	407A-21-1		410D-13		420C-6-1
	407B-21-1		410E-13-2		420D-6
	407A-21-2		410A-5		420E-6-1
58100-91L50-019		61134-94L00			

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61446-89L10-Y5S	420B-7-2 420C-7-2 420E-7-2		410C-28 410D-28 410E-28	63116-99J00	444B-2 444A-4 444B-4			67140-95600	515A-1	67231-92E00	518A-40
61446-89L10-YAY	420A-7 420B-7-1 420C-7-1 420D-7 420E-7-1 420B-8-2 420C-8-2 420E-8-2	61810-94L00-Y5S	410C-1-2 410D-1-2 410E-1-2 410A-1 410B-1 410C-1-1 410D-1-1 410E-1-1	63121-99J00-Y5S 63121-99J00-YAY	444B-5-2 444A-5 444B-5-1	67200-88L00	544A-1 545A-1 517A-1 518A-1	67200-88L00	544A-1 545A-1 517A-1 518A-1	67232-88L00 67232-92E50 67232-95600	545A-33 545A-43 450A-18 450B-19
61453-94L10-Y5S	420B-8-2 420C-8-2 420E-8-2 420A-8 420B-8-1 420C-8-1 420D-8 420E-8-1	61810-94L00-YAY	410A-1 410B-1 410C-1-1 410D-1-1 410E-1-1	63122-99J00	444A-23 444B-23 444B-24-2 444A-24 444B-24-1	67200-93J51	450B-1 508B-1 450A-1 508A-1	67200-94J20	450A-1 508A-1	67233-92E00	518A-41 518A-27 545A-26
61453-94L10-YAY	420A-8 420B-8-1 420C-8-1 420D-8 420E-8-1	61820-94L00-Y5S	410E-2-2 410A-2 410B-2 410E-2-1 410C-2-2	63133-89L00	444A-25 444B-25 444A-26 444B-26	67211-88L00	544A-17 517A-29 544A-7 450A-13 450B-14 508A-13 508B-14	67211-92E50	517A-29 544A-7 450A-15 450B-16 508A-15 508B-16	67234-88L00 67234-92E00 67235-92E00	545A-22 518A-21 518A-28 545A-27 518A-30 545A-12
61458-89L30	420A-9 420B-9 420C-9 420D-9 420E-9	61820-94L20-YAY	410A-2 410B-2 410D-2-1 410A-15 410B-15	63134-94L00	444A-26 444B-26 444A-6 444B-6	67212-88L00	450A-14 508A-14 450A-15 450B-16 508A-15 508B-16	67214-92E00	450A-14 508A-14 450A-15 450B-16 508A-15 508B-16	67237-92E01	518A-31 545A-28 450A-19 450B-20 508A-19 508B-20
61471-89L00	420A-10 420B-10 420C-10 420D-10 420E-10	61827-94L00	410D-2-1 410A-15 410B-15 410C-15 410E-15	63220-94L00	444A-7 444B-7 444A-9 444B-9 444A-8 444B-8	67220-95630	450A-15 450B-16 508A-15 508B-16 545A-8 518A-7	67221-92E00	450A-15 450B-16 508A-15 508B-16 545A-8 518A-7	67238-87D00	518A-31 545A-28 450A-19 450B-20 508A-19 508B-20
61472-97J00	167A-16	61829-94L00	410D-2-1 410A-16 410B-16 410C-16 410E-16	63225-93200	444A-9 444B-9 444A-8 444B-8	67221-92E50	518A-7 545A-2 518A-2 545A-3 518A-6 450A-16 450B-17 508A-16 508B-17	67222-92E00	518A-7 545A-2 518A-2 545A-3 518A-6 450A-16 450B-17 508A-16 508B-17	67238-88L00 67238-92E50 67239-92E00	545A-31 518A-32 518A-33 545A-35 518A-29 545A-41 545A-17 518A-16 545A-34 518A-42
61494-94L01	167A-17	61830-94L00-Y5S	410C-6-2 410D-6-2 410E-6-2 410A-6 410B-6 410C-6-1	63241-986B0	444A-11 444B-11 444A-12 444B-12 444A-14 444B-14 444A-15 444B-15	67222-92E50	518A-6 450A-16 450B-17 508A-16 508B-17 545A-9 518A-8 518A-25 518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67223-92E00	518A-6 450A-16 450B-17 508A-16 508B-17 545A-9 518A-8 518A-25 518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67240-92E00 67240-92E50 67241-88L00 67241-92E50 67241-99E10	545A-17 518A-16 545A-34 518A-42 450A-20 450B-21 508A-20 508B-21 517A-13 545A-38 450A-21 450B-22 508A-21 508B-22 450A-22 450B-23 508A-22 508B-23 518A-22 545A-23 450A-23 450B-24
61610-90L00	410A-10 410B-10 410C-10 410D-10 410E-10 410A-11 410B-11	61830-94L00-YAY	410C-6-2 410D-6-2 410E-6-2 410A-6 410B-6 410C-6-1	63244-94J00	444A-12 444B-12 444A-14 444B-14 444A-15 444B-15	67223-92E50	518A-6 450A-16 450B-17 508A-16 508B-17 545A-9 518A-8 518A-25 518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67224-92E00	518A-6 450A-16 450B-17 508A-16 508B-17 545A-9 518A-8 518A-25 518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67253-88L00 67253-92E00 67253-92E10 67253-95600	545A-40 545A-33 545A-43 450A-18 450B-19 450A-24 450B-25 508A-24 508B-25 545A-39 518A-35 518A-38 450A-25 508B-26 545A-40 544A-13 518A-37 450A-26 450B-27 508A-26 508B-27 518A-39 517A-22 517A-8 450A-27 450B-28 508A-27 508B-28 517A-11 450A-28 450B-29 508A-28 508B-29 544A-9 517A-12 450A-29 450B-30 508A-29 508B-30 450A-30 450B-31 508A-30 508B-31 450A-31 450B-32 508A-31 508B-32 544A-3
61616-93EL0	410B-10 410C-10 410D-10 410E-10 410A-11 410B-11	61830-94L00-YAY	410C-6-2 410D-6-2 410E-6-2 410A-6 410B-6 410C-6-1	63610-94L00	444A-12 444B-12 444A-14 444B-14 444A-15 444B-15	67225-92E00	518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67225-92E50	518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67242-92E50 67243-92E00 67243-95600	517A-13 545A-38 450A-21 450B-22 508A-21 508B-22 450A-22 450B-23 508A-22 508B-23 518A-22 545A-23 450A-23 450B-24
61620-94L00	410C-11 410D-11 410E-11 410A-27 410B-27 410C-27 410D-27 410E-27	61841-94L00	410D-6-1 410E-6-1 410A-21 410B-21 410C-21 410D-21 410E-21	65000-95D01 65520-95D01 65561-95D00 65700-89L30 65720-986L0 65740-95D01 65750-87J11	432A-1 432A-2 432A-3 432A-8 432A-13 432A-4 432A-9 432A-10 432A-11 432A-12	67227-92E00	518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67227-92E50	518A-9 545A-15 518A-14 545A-16 518A-23 545A-24 518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67257-88L00 67257-92E00 67257-99E10	544A-9 517A-12 450A-29 450B-30 508A-29 508B-30 450A-30 450B-31 508A-30 508B-31 450A-31 450B-32 508A-31 508B-32 544A-3
61622-90L00	420A-3 420B-3 420C-3 420D-3 420E-3 410A-28 410B-28	63111-89L01-Y5S 63111-89L01-YAY	444B-1-2 444A-1 444B-1-1	65770-89L00 65781-98500	432A-10 432A-11 432A-12	67228-92E00	518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67228-92E50	518A-17 545A-18 450A-17 450B-18 508A-17 508B-18	67244-95600	518A-41 545A-17 508A-20 508B-21 517A-13 545A-38 450A-21 450B-22 508A-21 508B-22 450A-22 450B-23 508A-22 508B-23 518A-22 545A-23 450A-23 450B-24
61642-90L00		63114-99J01 63115-99J00 63115-99J10	444A-22 444B-22 444A-3 444B-3 444A-2	65831-95D00 65890-95D00 65892-95D00 67130-94L02 67130-94L12	432A-5 432A-6 432A-7 513A-1 513B-1	67230-88L00 67230-92E00 67231-88L00	545A-20 518A-19 545A-32	67230-88L00 67230-92E00 67231-88L00	545A-20 518A-19 545A-32	67245-92E00 67245-95600	545A-23 450A-23 450B-24

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67261-88L10	544A-2	67287-92E50	517A-19		508A-33
67261-92E50	517A-10	67288-92E00	545A-4		508B-34
67261-99E10	450A-32	67288-92E10	518A-4		517A-3
	450B-33	67288-92E20	517A-14	67296-95600	450A-44
	508A-32		544A-6		450B-43
	508B-33	67288-92E60	517A-6		508A-44
67264-88L00	544A-18		544A-12		508B-43
67264-88L10	544A-19	67288-92E70	517A-16	67296-95610	450A-45
67264-95600	450A-34	67291-92E00	518A-5		450B-44
	450B-35		545A-7		508A-45
	508A-34	67291-92E10	518A-36		508B-44
	508B-35		545A-37		545A-43
67267-93J00	450A-35	67292-94300	450A-40	67296-95621	515A-3
	450B-36		450B-39	67297-95600	450A-46
	508A-35		508A-40		450B-45
	508B-36		508B-39		508A-46
67269-92E00	545A-29		518A-3		508B-45
67271-88L10	544A-16		545A-5	67298-92E50	517A-2
67272-88L00	545A-6	67294-92E00	518A-11	67320-93J00	515A-4-1
67273-88L00	519A-5	67294-95600	450A-41	67320-93J10	515A-4-2
	544A-24		450B-40	67320-93J20	515A-4-3
	545A-47		508A-41	67320-93J30	515A-4-4
67273-95600	450A-36		508B-40	67320-93J40	515A-4-5
	450B-37		515A-2	67320-93J50	515A-4-6
	508A-36	67295-92E10	517A-4	67320-93J60	515A-4-7
	508B-37	67295-92E50	517A-18	67320-93J70	515A-4-8
	517A-25	67296-88D10	517A-15	67320-93J80	515A-4-9
	544A-15		518A-24	67341-94L00	410B-31
67274-88L00	545A-42		545A-13		410C-31
67274-92E50	517A-28		545A-30		513A-21
67275-95600	450A-37	67296-88D20	517A-17		513B-21
	450B-38	67296-88D30	517A-21	67343-94L00	410B-35
	508A-37	67296-88L00	544A-5		410C-34
	508B-38	67296-90J10	450A-42		513A-35
	517A-24		450B-41		513B-35
	544A-14		508A-42	67467-89J01	166B-15
67281-88L00	544A-10		508B-41		206B-19
67282-94L00	450A-38	67296-92E11	450B-15		513A-22
	450B-52		508B-15		513B-22
	508A-38		518A-13	67500-88L00	519A-1
	508B-52	67296-92E20	518A-15		544A-20
67283-92E50	517A-26		545A-14	67701-94L00	442A-2
67284-92E50	517A-27	67296-92E30	545A-44		575A-2
67284-94L00	450A-39	67296-92E60	544A-11	67721-94L00	442A-3
	450B-53	67296-94300	450A-43		575A-3
	508A-39		450B-42	67725-96J00	442A-4
	508B-53		508A-43		575A-4
67286-92E00	518A-18		508B-42	67726-99E00	442A-5
	545A-19	67296-94310	450A-33		575A-5
67287-92E00	545A-46		450B-34	67728-99E00	442A-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
68110-88L01	575A-6	01421-08357	122A-4		310E-14
	420A-14		122B-4		553A-10
	420B-14	01547-0612A	111A-11	01550-0620C	561A-22
	420C-14	01547-06167	513A-32		120A-15
	420D-14		513B-32		163A-2
	420E-14	01547-0616C	410B-32		310A-8
68111-88L00	544A-8		410C-32		310B-8
69711-93E10	167A-15	01547-0625A	121A-9		310C-8
69911-91J50	335A-20		303A-10		310D-8
	335B-12		303B-8		310E-8
	335C-13	01547-0640A	175A-4		334A-8
	335D-20	01550-0512C	303A-11		334B-7
			303B-9		334C-7
		01550-06127	553A-8		334D-7
		01550-0612C	122A-12		334E-8
			122B-12	01550-06257	310A-9
			322A-15		310B-9
			322B-12		310C-9
			322C-12		310D-9
			322D-13		310E-9
77811-54GB0-0PG	450A-47	01550-06167	301A-14		513A-33
	450B-46		301B-14		513B-33
	508A-47		301C-14	01550-0625C	111A-12
	508B-46		513B-40		144A-6
77811-58J10-0PG	420A-11		561A-9		146A-45
	420B-11	01550-0616A	175A-9		146B-45
	420C-11	01550-0616C	146A-19		166B-13
	420D-11		146A-44		206A-21
	420E-11		146B-19		206B-17
			146B-44	01550-0630C	146A-20
			166A-6		146B-20
			167A-14		162A-3
			175A-13		166A-7
			301C-19		167A-9
			303A-12	01550-06357	113A-4
99000-81158-50M	167A-8		303B-10	01550-0645C	146A-21
99011-94L40-055	420A-13		410A-25		146B-21
	420B-13		410B-25	01550-06557	166B-14
	420C-13		410C-25		513A-34
	420D-13		410D-25		513B-34
	420E-13		410E-25	01550-0820C	113A-8
		01550-06207	310A-5		139A-10
			310A-14		410A-26
			310B-5		410B-26
			310B-14		410C-26
			310C-5		410D-26
			310C-14		410E-26
			310D-5	01550-08257	301A-15
			310D-14		301B-15
			310E-5		301C-15

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01550-0835C	561A-10	09100-06113	303A-13	09116-06225	410E-29
	122A-5		303B-11		206A-26
	122B-5		336A-22		206B-25
01550-08407	139A-3	09100-06165	336B-26	09116-06234	336A-35
01550-08707	139A-5		336F-22		336D-18
02112-06127	206A-22		339A-10		336E-18
02122-04127	206B-18	09100-08232	501B-26	09116-06229	336F-35
	120A-9		335A-9		410B-36
	03112-0630B		335D-9		410C-35
03121-0516A	501B-11	09100-10309	450A-48	09116-08147	513A-36
	530A-26		450B-47		513B-36
	03122-05165		508A-48		407A-19
03142-0416C	210A-7	09100-12093	508B-47	09116-08150	407B-19
03142-04259	160A-12		335A-21		206A-9
	160B-12		335D-21	09116-08151	146A-10
03542-05169	322A-16	09100-10323	338A-24		146B-10
	322B-13		339A-11		407A-13
	322C-13	09100-12093	335B-13	09116-08152	407B-13
0420A-4	322D-14		335C-14		401A-3
	420A-4		432A-14	09116-08154	405A-7
	420B-4	09103-06237	139A-8		405B-7
0420C-4	420D-4		335A-15	09116-08155	444A-16
	420E-4		335B-11		444B-16
04211-11129	111A-4	09103-06281	335C-11		139A-4
	113A-5		335D-15	09116-08154	401A-10
	08113-60060		336A-11		405A-15
08211-15203	407A-18	09103-08458	336B-15	09116-08162	405B-15
	407B-18		336C-13		407A-6
	220A-7-4		336D-9	09116-08162	407B-6
08211-15204	220A-7-6	09106-10065	336E-9		444A-29
08221-30404	220A-12-1		336F-11		444B-29
08310-00067	301A-16	09108-06149	338A-29	09119-08L01	405A-16
	301B-16		339A-12		405B-16
	301C-16	09108-08286	407A-12	09125-04004	113A-3
08316-10067	561A-11		407B-12		518A-26
	122A-13		120A-7	09125-04021	517A-7
	122B-13	09106-10065	335B-18		444A-28
08316-10087	122A-6		335C-19	09125-05042	444B-28
	122B-6		160A-14		518A-20
08321-01067	301A-17	09108-06149	160B-14	09125-05046	545A-21
	301B-17		336B-9		327B-5
	301C-17		336C-8	09125-05135	519A-2
08322-01067	561A-12	09116-06215	513A-23		544A-21
	310A-21		513B-23	09125-06063	336A-7
	310B-21		122A-25		336B-10
08341-31039	310C-21	09116-06223	122B-25	09125-06063	336C-20
	310D-21		410A-29		336D-27
	310E-21		410B-29		336E-27
08341-31039	120A-10	09116-06223	410C-29	09125-06063	336F-7
	120A-11		410D-29		338A-30

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09126-05003	450A-49	09140-10031	508B-49	09140-14008	335D-10
	450B-48		518A-10		336A-24
	508A-49		545A-10		336B-28
09126-06006	508B-48	09140-14008	401A-11	09148-06008	336C-21
	545A-25		303A-7		336D-28
	444A-17		303B-5		336E-28
09128-06013	444B-17	09141-14008	407A-25	09160-06085	336F-24
	310A-20		407B-25		432A-15
	310B-20	09159-08046	444A-13	09160-06094	206A-12
09136-05041	310C-20		444B-13		450A-51
	310D-20		220A-6	09159-08059	450B-50
	310E-20	09159-08059	336B-11		508A-51
09136-06168	561A-8		336C-9		508B-50
	444A-18	09159-08L02	513A-25	09160-06170	517A-20
	444A-27		513B-25		336C-22
09136-06168	444B-18		336A-36		336D-29
	444B-27	09159-10050	336D-19	09160-08082	336E-29
	410A-8		336E-19		336B-8
09136-06169	410A-22		336F-36		336C-7
	410B-8	09159-12014	335A-22	09160-10139	513A-19
	410B-22		335B-19		513B-19
09136-06169	410C-8		335C-20	09160-10140	120A-8
	410C-22	09159-22006	335D-22		335B-20
	410D-8		335B-14	09160-10156	335B-21
09137-03008	410D-22		335C-15		335C-21
	410E-8	09160-05024	335A-8		335C-22
	410E-22		335B-8	09160-10158	335A-23
09140-05005	410A-3		335C-8		335D-23
	410B-3	09160-05029	335D-8		335A-24
	410C-3		545A-45	09160-12066	335D-24
09140-06020	410D-3		206B-9		401A-12
	410E-3	09160-06046	513A-26		338A-25
	334A-12		513B-26	09160-12066	339A-14
09140-06020	334B-11		519A-4		335B-22
	334C-11	09160-06055	544A-22		335C-23
09140-06020	334D-11		166A-4	09160-12126	335B-16
	334E-12		166B-11		335C-17
	166B-10	09160-06055	206A-10		335B-15
09140-06020	327B-7		513A-27	09160-14071	335C-16
	513A-24		513B-27		407A-26
	513B-24	09160-06082	166B-16		407B-26
09140-06020	519A-3		206B-20	09160-15030	206A-13
	544A-23		513A-28		206B-11
	336A-23	09160-15033	513B-28		220A-7-1
09140-06020	336B-27		160A-15	09160-15053	220A-7-2
	336F-23		160B-15		220A-7-3
	339A-13	09160-15057	206A-11		220A-7-5
09140-06020	450A-50		206B-10	09160-15054	220A-7-7
	450B-49		210A-12		220A-7-8
	508A-50		335A-10		303A-8

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	303B-6		513B-29	09251-09007	410A-17
09160-20068	220A-11-1	09180-06342	335A-11		410B-17
09160-20069	220A-11-2		335D-11		410C-17
09160-20070	220A-11-3	09181-16008	220A-10		410D-17
09160-20071	220A-11-4	09181-25190	220A-13-1		410E-17
09160-20072	220A-11-5	09181-25248	220A-13-2	09260-10006	206A-17
09160-20073	220A-11-6	09181-25251	220A-13-3		206B-13
09160-25032	220A-13-4	09181-25268	220A-13-8	09263-20046	407A-3
09160-25033	220A-13-5	09181-30158	220A-12-2		407B-3
09160-25034	220A-13-6	09181-30162	220A-12-3	09263-20047	407A-16
09160-25035	220A-13-7	09200-06072	336A-25		407B-16
09160-30057	336A-8		336B-29	09265-17002	220A-4
	336B-12		336F-25	09265-25047	407A-4
	336C-10	09202-05021	220A-16		407B-4
	336D-6	09202-06023	401A-4	09280-06012	210A-13
	336E-6		405A-8	09280-12012	175A-8
	336F-8		405B-8	09280-13005	210A-14
09161-04012	410A-12		407A-5	09280-17003	111A-9
	410B-12		407B-5	09280-21008	175A-12
	410C-12	09204-01002	206A-8	09280-22019	139A-9
	410D-12		206B-8	09280-26005	146A-37
	410E-12		336A-26		146B-37
09161-08019	336A-37		336B-30	09280-50009	220A-23
	336D-20		336F-26	09280-54004	160A-16
	336E-20		513A-18		160B-16
	336F-37		513B-18	09280-75002	407A-20
09163-06001	444A-19	09204-01006	336C-23		407B-20
	444B-19		336D-30	09282-15009	401A-5
09164-12021	121A-8		336E-30	09282-17006	220A-22
09164-14008	206A-14	09204-03003	407A-27	09282-30008	336A-9
09166-17005	220A-3		407B-27		336B-13
09168-12017	405A-9	09205-02004	210A-4		336C-11
	405B-9	09205-04002	206A-16		336D-7
09169-06062	146A-12		206B-12		336E-7
	146B-12	09205-06021	335A-6		336F-9
09169-06063	310A-6		335B-6	09283-27022	121A-2
	310B-6		335C-6	09283-32048	116A-9
	310C-6		335D-6	09289-05008	121A-16
	310D-6	09209-08016	220A-17	09289-20L01	407A-17
	310E-6	09229-04005	410A-18		407B-17
09169-06075	122A-26		410B-18	09320-05019	120A-14
	122B-26		410C-18	09320-08051	310A-7
	146A-11		410D-18		310B-7
	146B-11		410E-18		310C-7
09180-06186	206A-15	09248-08001	407A-14		310D-7
09180-06230	146A-13		407B-14		310E-7
	146B-13	09248-12009	405A-10	09320-09039	122A-27
	166A-5		405B-10		122B-27
	166B-12	09250-12006	444A-30	09320-09052	146A-14
	513A-29		444B-30		146B-14

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09320-11017	410A-7		146B-39		310E-13
	410A-23	09401-15414	111A-10	09408-00043	146A-42
	410B-7	09401-18414	146A-40		146B-42
	410B-23		146B-40	09408-00054	322A-17
	410C-7	09401-20410	146A-41		322B-14
	410C-23		146B-41		322C-14
	410D-7	09403-07340	327A-6		322D-15
	410D-23		327B-9	09408-00233	146A-43
	410E-7	09403-08404	322A-12		146B-43
	410E-23		322B-9	09409-05302-5PK	410A-24
09343-50L01-040	146A-15		322C-9		410B-24
	146B-15		322D-10		410C-24
09344-55001-070	146A-16	09403-13408	334C-14		410D-24
	146B-16		334D-14		410E-24
09352-70103-600	410B-37	09403-20308	322A-13	09440-07074	220A-18
	410C-36		322B-10	09440-07080	206A-20
	513A-37		322C-10		206B-16
	513B-37		322D-11	09440-12027	444A-20
09355-70125-600	122A-9		513A-38		444B-20
	122B-9		553A-9	09440-13057	336C-24
09380-12002	336A-43		561A-23		336D-31
	336B-36	09404-06207	338A-31		336E-31
	336F-43	09407-08401	530A-8	09440-35004	220A-19
	338A-27		530A-28	09443-10043	336C-25
	339A-15	09407-14403	553A-6		336D-32
09381-14004	206A-18	09407-14407	303A-9		336E-32
	206B-14		303B-7	09471-12028	501A-6
09381-16001	116A-4		334A-13		501A-14
09383-04002	206A-19		334B-12		501B-6
	206B-15		334C-12		501B-14
09385-04003	410A-19		334D-12	09471-12077	501A-16
	410B-19		334E-13		501B-16
	410C-19		501A-8	09471-12103	501A-2
	410D-19		501B-8		501A-4
	410E-19		501B-27		501A-20
09385-06012	166B-17		513A-31		501B-2
	206B-21		513B-31		501B-4
	513A-30		553A-7		501B-20
	513B-30		600A-28	09471-12108	501B-24
09401-08412	146A-18	09407-18402	322A-2	09481-05501	600A-10
	146B-18		322D-2		600A-30
09401-08413	162A-6		561A-21		600A-32
09401-11423	122A-11	09408-00008	322A-14	09481-10501	322B-5
	122B-11		322B-11		322C-5
	146A-34		322C-11		450A-53
	146A-38		322D-12		450B-55
	146B-34	09408-00020	310A-13		508A-53
	146B-38		310B-13		508B-55
09401-11425	144A-5		310C-13		513A-13
09401-13423	146A-39		310D-13		513B-13

SUZUKI **DF25A/30A** PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material Development Group, Service Engineering Department
300 Takatsuka, Minami, Hamamatsu, Japan

Copyright © SUZUKI MOTOR CORPORATION 2017 All Rights Reserved

SUZUKI MOTOR CORPORATION