

SUZUKI

PARTS CATALOGUE

DF8A/9.9A

DF8A(020,021,022)
DF8AR(020,021,022)
DF9.9A(020,021,022)



OUTBOARD MOTOR

P01

020 021 022

2021-6

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF8A/9. 9A production start from 2019 to 2021.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: with
LH(PORT)	: Left hand side	S, L	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 00994F-123456		
123456~	: From E. NO. 00994F-123456		

12 x 34 x 5.6..... Figures in the description column
| | | show the dimensions of parts.
ID OD T(or W, L)

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec. ;

spec. code : DF8A(R) : P1 DF9. 9A : P1

7. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSM	ENGINE NO.
DF8A_020	P01	00801F	S, L	00801F-040001~
DF8A_021	P01	00801F	S, L	00801F-140001~
DF8A_022	P01	00801F	S, L	00801F-240001~
DF8AR_020	P01	00801F	S, L	00801F-040001~
DF8AR_021	P01	00801F	S, L	00801F-140001~
DF8AR_022	P01	00801F	S, L	00801F-240001~
DF9. 9A_020	P01	00994F	S, L	00994F-040001~
DF9. 9A_021	P01	00994F	S, L	00994F-140001~
DF9. 9A_022	P01	00994F	S, L	00994F-240001~

[illegible][illegible]

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.111A

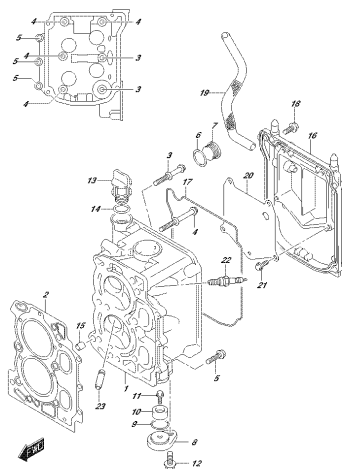


OPRA, PRT, 602, 111A
CULABET14620

FIG.113A

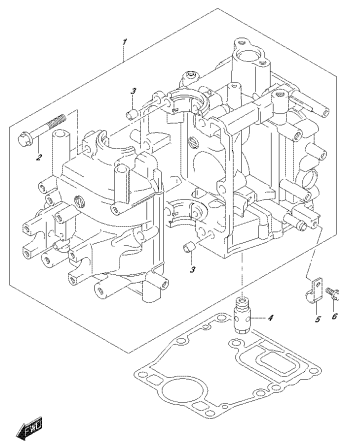


OPRA, PRT, 602, 113A
CULABET1300K

FIG.116A

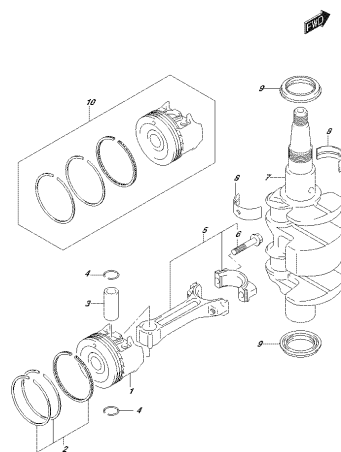


OPRA, PRT, 602, 116A
CULABET1164

FIG.120A

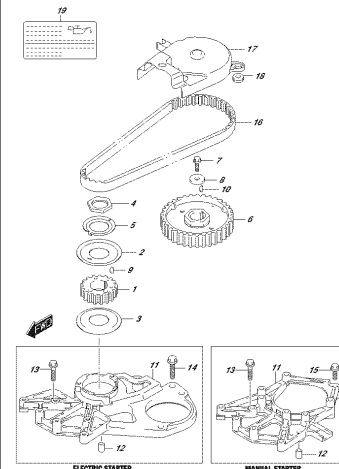


OPRA, PRT, 602, 120A
TRAF103B27

FIG.120B

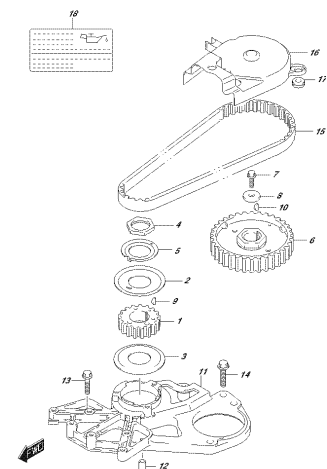


OPRA, PRT, 602, 120B
TRAF103B27

FIG.121A

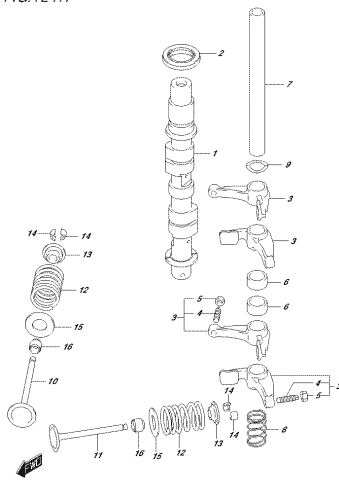


OPRA, PRT, 602, 121A
CARSHAF7

FIG.121B

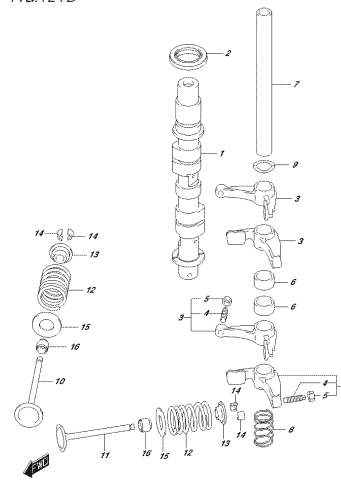


OPRA, PRT, 602, 121B
CARSHAF7

FIG.126A

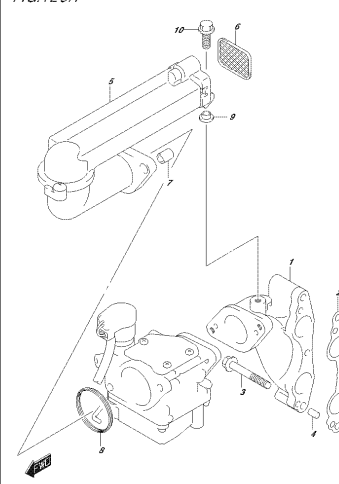


OPRA, PRT, 602, 126A
PILET1446B20

FIG.128A

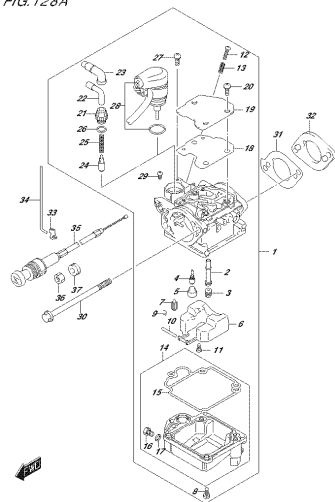


OPRA, PRT, 002, 004
CARBURETOR

FIG.128B

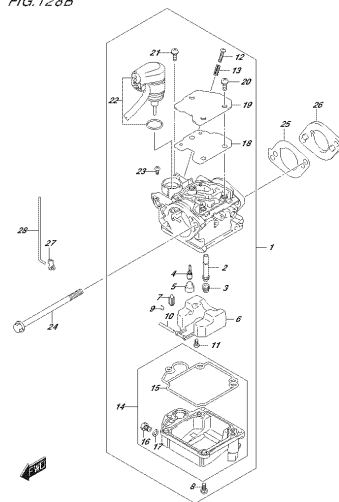


OPRA, PRT, 002, 006
CARBURETOR

FIG.128C

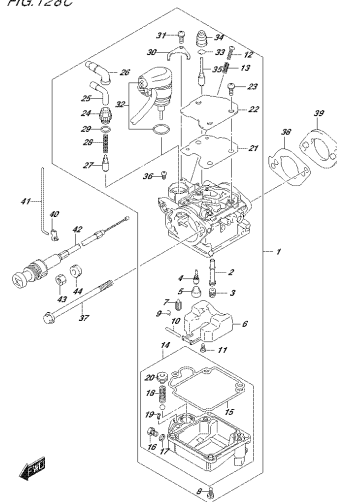


OPRA, PRT, 002, 007
CARBURETOR

FIG.146A

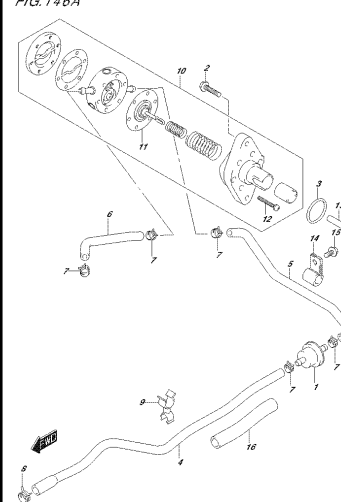


OPRA, PRT, 002, 146A
FUEL PUMP

FIG.160A

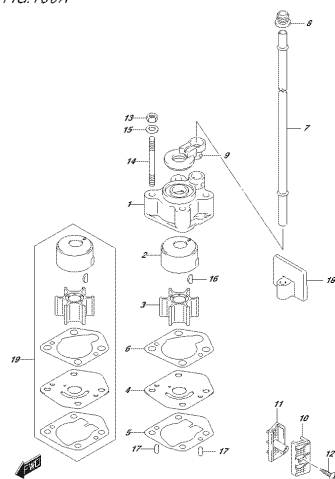


OPRA, PRT, 002, 160A
WATER PUMP

FIG.162A

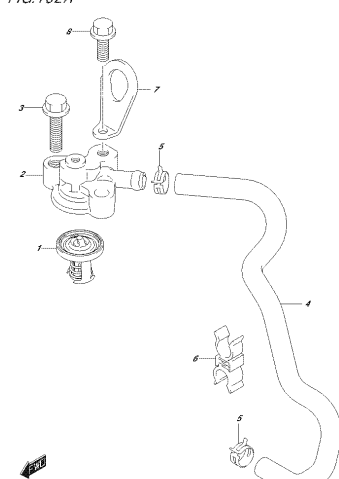


OPRA, PRT, 002, 162A
THERMOSTAT

FIG.166A

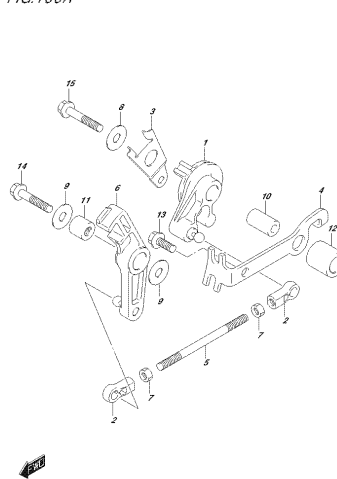


OPRA, PRT, 002, 166A
NOZZLE CONTROL

FIG.166B

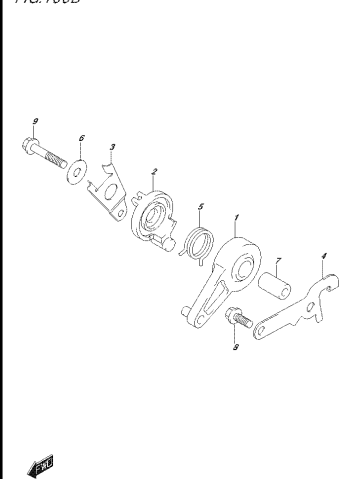


OPRA, PRT, 002, 166B
NOZZLE CONTROL

FIG.167A

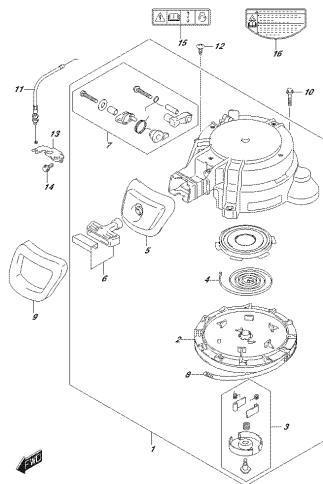


OPRA, PRT, 022, 167A
RECUL SWIRLER

FIG.175A

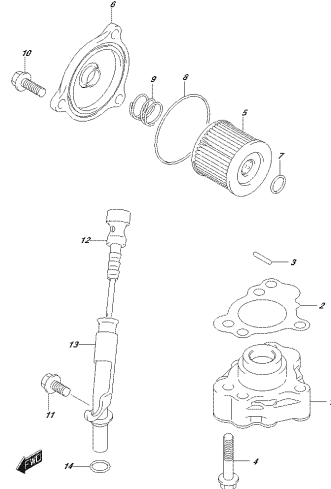


OPRA, PRT, 022, 175A
DE PLAF

FIG.206A

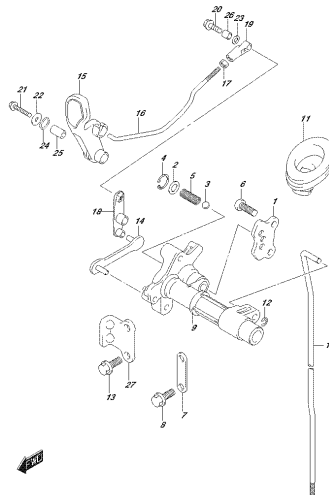


OPRA, PRT, 022, 206A
CLUTCH PIST

FIG.206B

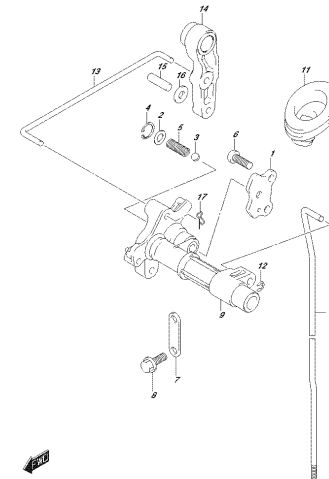


OPRA, PRT, 022, 206B
CLUTCH PIST

FIG.210A

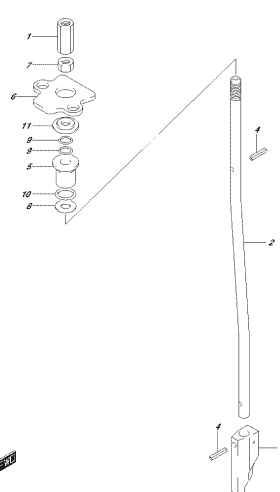


OPRA, PRT, 022, 210A
SHIF TIED

FIG.220A

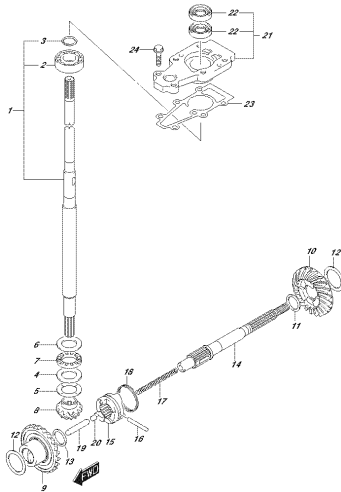


OPRA, PRT, 022, 220A
TRANSMISSIO

FIG.301A

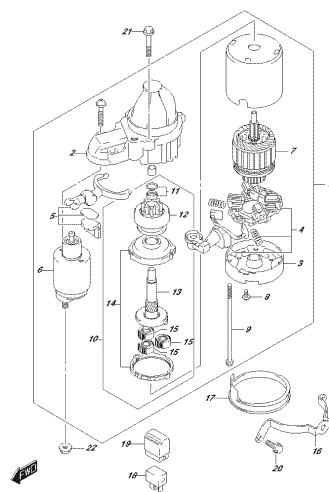


OPRA, PRT, 022, 301A
STARTING MOTOR

FIG.303A

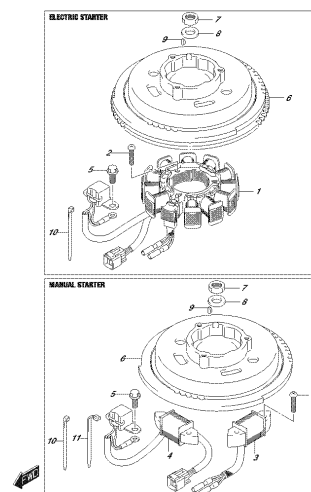


OPRA, PRT, 022, 303A
MAGNET

FIG.303B

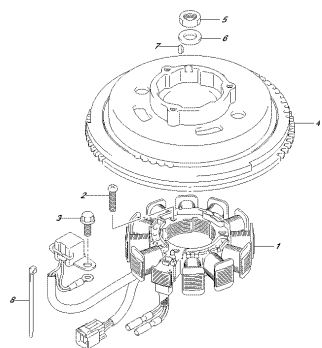


OPBA, PRT, 022, 0039
HARDWARE

FIG.310A

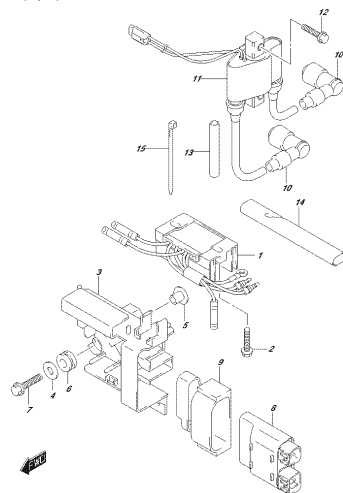


OPBA, PRT, 022, 0106
REC # REFERENCE CODE

FIG.310B

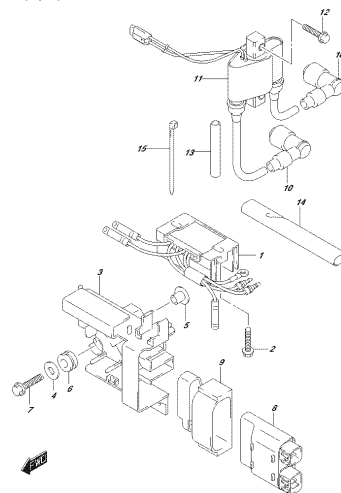


OPBA, PRT, 022, 0108
REC # REFERENCE CODE

FIG.322A

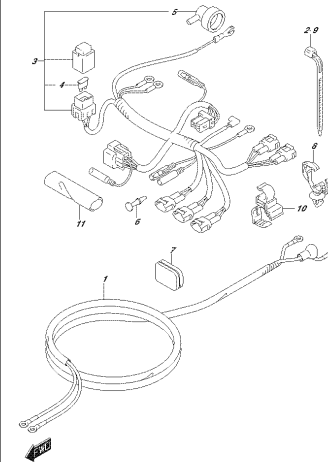


OPBA, PRT, 022, 0034
HARDWARE

FIG.322B

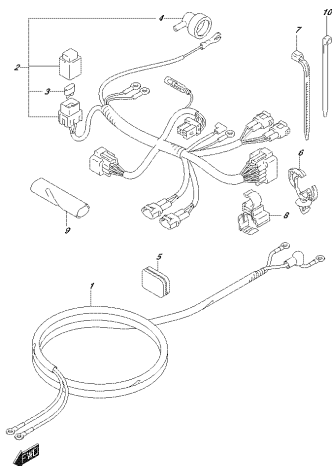


OPBA, PRT, 022, 0039
HARDWARE

FIG.334A

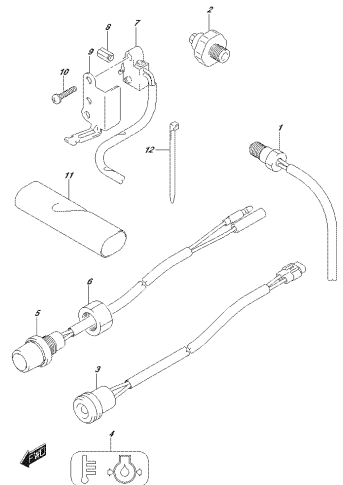


OPBA, PRT, 022, 0244
SERVON 3MEDI

FIG.334B

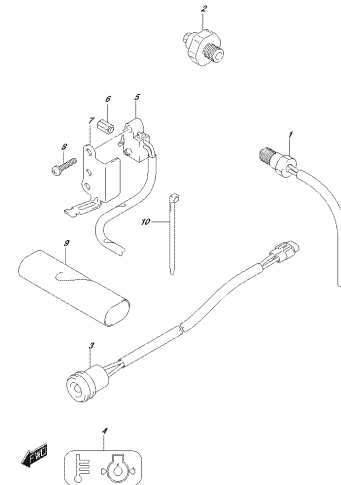


OPBA, PRT, 022, 0249
SERVON 3MEDI

FIG.335A

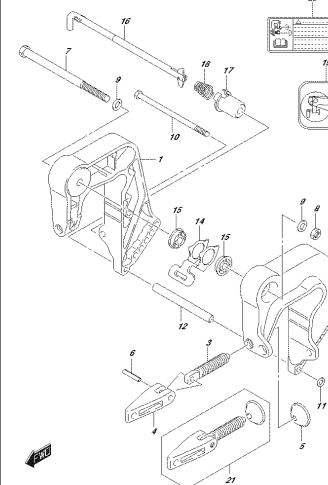


OPBA, PRT, 022, 0034
CLAMP BRACKET

FIG.335B

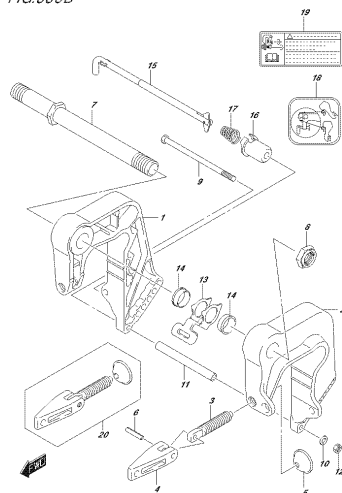


OPRA, PRT, 002, 035B
CLAMP BRACKET

FIG.336A

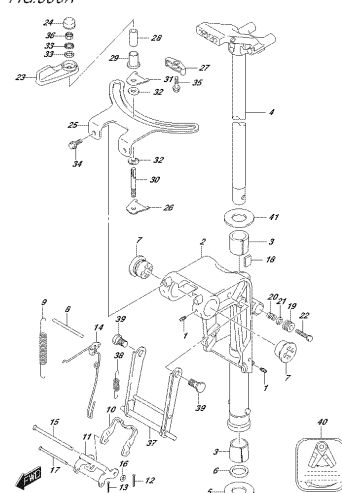


OPRA, PRT, 002, 036A
DRIVE BRACKET

FIG.336B

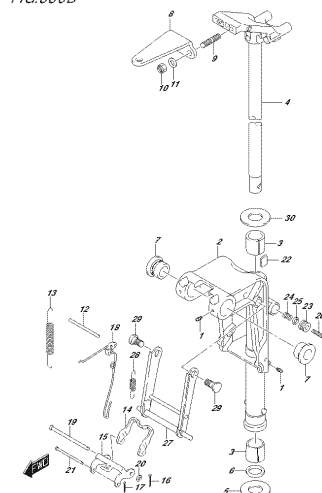


OPRA, PRT, 002, 036B
DRIVE BRACKET

FIG.401A

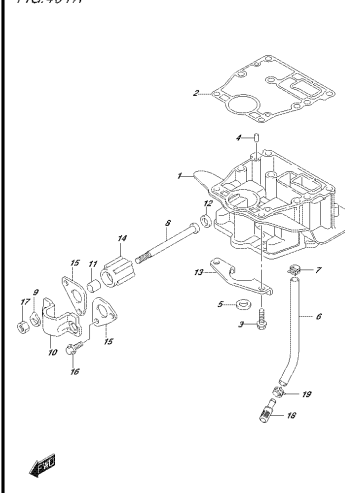


OPRA, PRT, 002, 401A
DRIVE KNUCKLE

FIG.405A

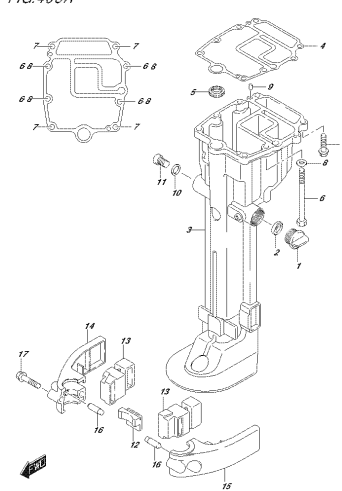


OPRA, PRT, 002, 405A
DRIVE SHAFT KNUCKLE

FIG.407A

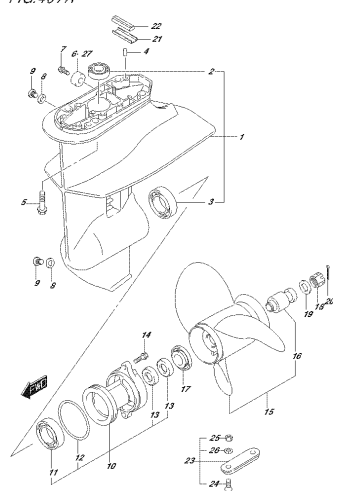


OPRA, PRT, 002, 407A
BEAR CASE

FIG.410A

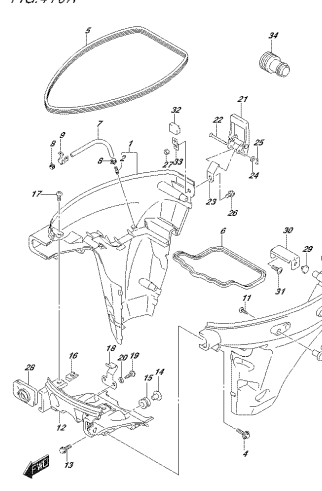


OPRA, PRT, 002, 410A
SIZE CLAMP

FIG.410B

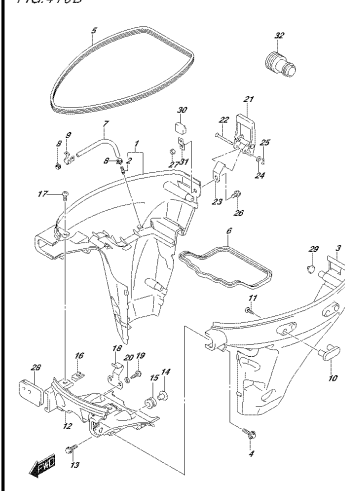


OPRA, PRT, 002, 410B
SIZE CLAMP

FIG.420A

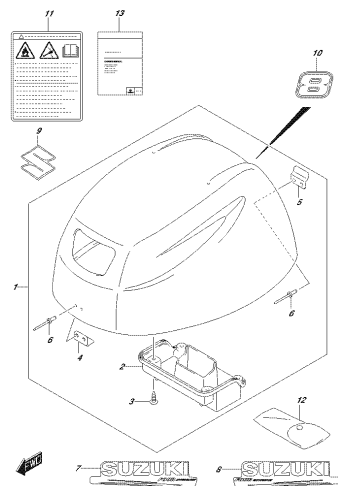


OPBA, PPT, BZZ, 403A
CHOPRE-CONSET

FIG.420B

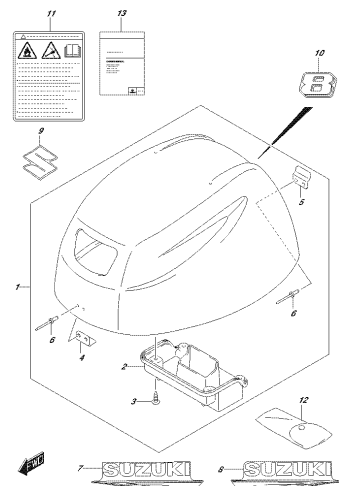


OPBA, PPT, BZZ, 403B
CHOPRE-CONSET

FIG.420C

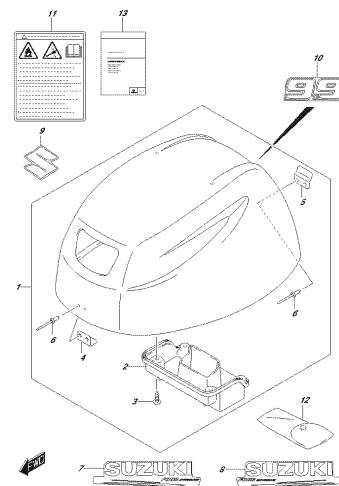


OPBA, PPT, BZZ, 403C
CHOPRE-CONSET

FIG.420D

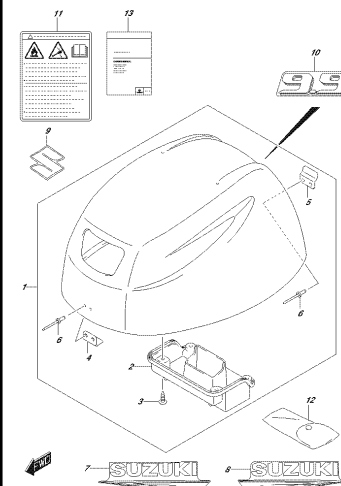


OPBA, PPT, BZZ, 403D
CHOPRE-CONSET

FIG.432A

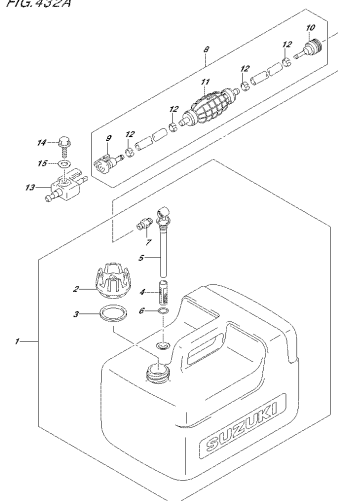


OPBA, PPT, BZZ, 403A
FUEL TANK

FIG.442A

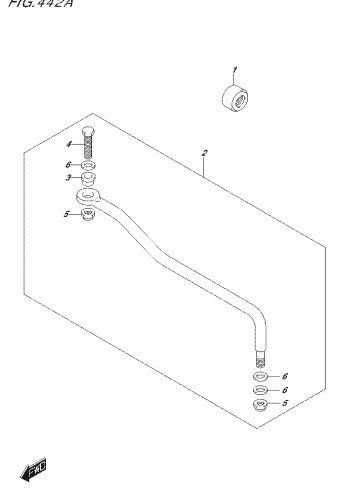


OPBA, PPT, BZZ, 403A
FUEL TANK

FIG.444A

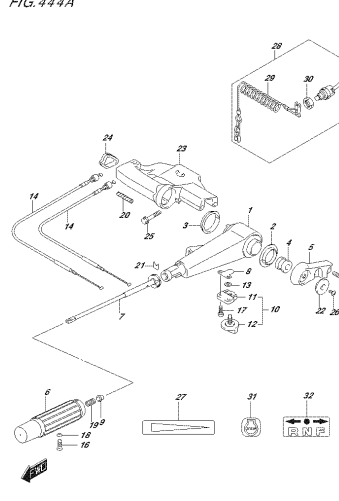


OPBA, PPT, BZZ, 444A
FUEL TANK

FIG.450A

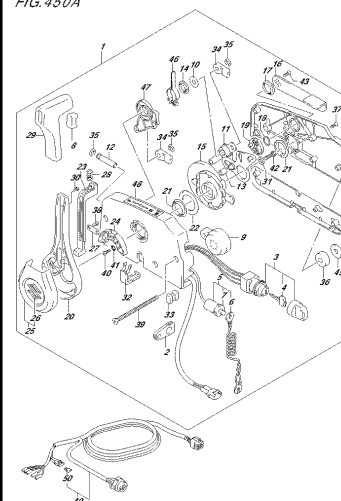


OPBA, PPT, BZZ, 450A
FUEL TANK

FIG.454A

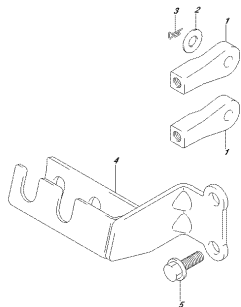


OPBA, PPT, 022, 454A
REHABOTY CABLES 022201

FIG.501A

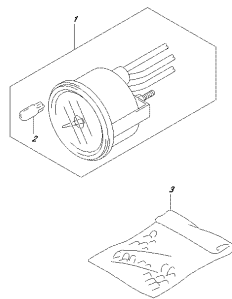


OPBA, PPT, 022, 501A
OPTIMIZER

FIG.513A

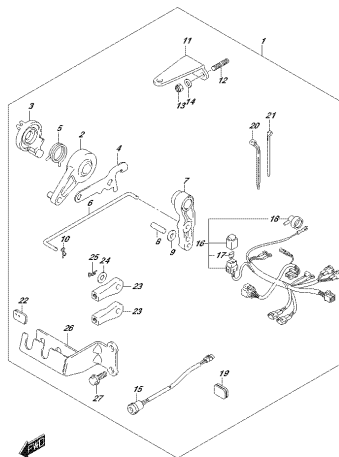


OPBA, PPT, 022, 513A
OPTIMIZER CONTROL PHOTO

FIG.515A

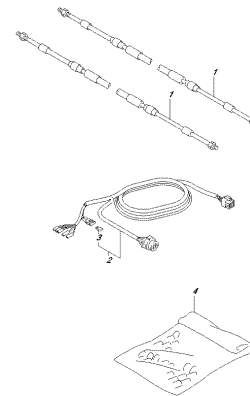


OPBA, PPT, 022, 515A
OPTIMIZER CABLE

FIG.515B

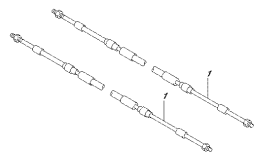


OPBA, PPT, 022, 515B
OPTIMIZER CABLE

FIG.544A

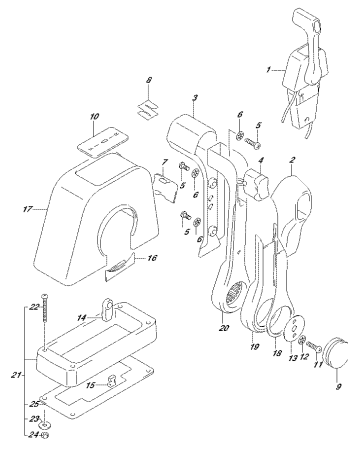


OPBA, PPT, 022, 544A
OPTIMIZER CONTROL ASS-SHIELD(1)

FIG.545A

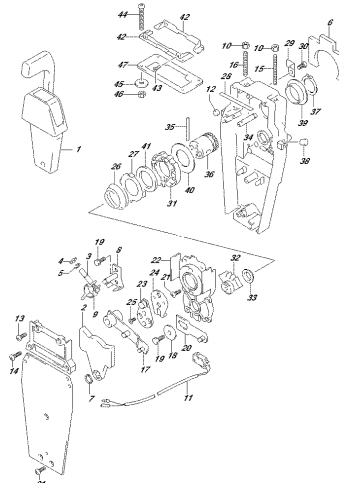

OPBA, PPT, 022, 545A
OPTIMIZER CONTROL ASS-SHIELD(2)

FIG.553A

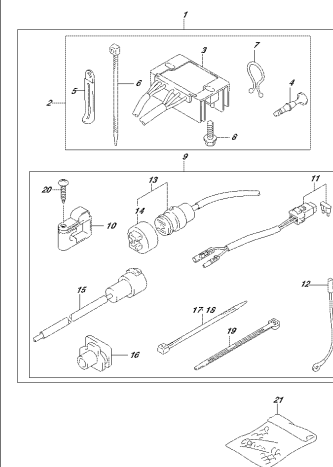

OPBA, PPT, 022, 553A
OPTIMIZER CONTROL ASS-SHIELD(3)

FIG.111A

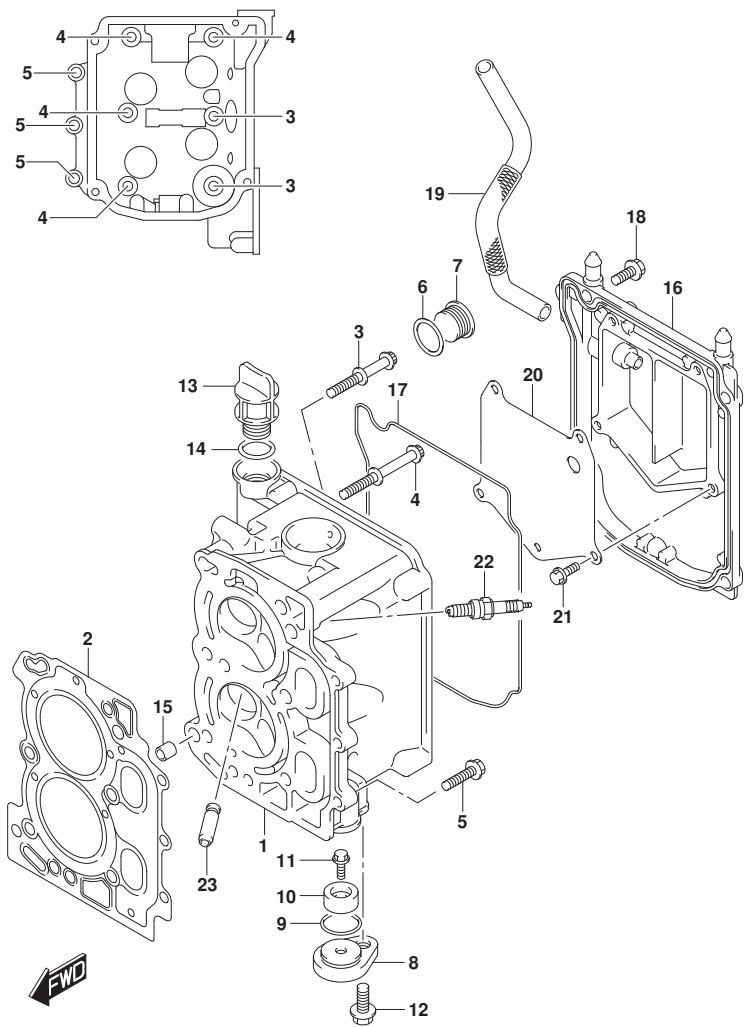


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11110-99J10	HEAD,CYLINDER	1	
2	11141-99J00	GASKET,CYLINDER HEAD	1	
3	11118-99JL0	BOLT,CYLINDER HEAD NO.1 (8X67)	2	
4	11119-99JL0	BOLT,CYLINDER HEAD NO.2 (8X77)	4	
5	01550-0625C	BOLT (6X25)	3	
6	11216-90J00	GASKET,PLUG	1	
7	09248-22002	PLUG (22X11)	1	
8	11261-93J00	COVER,PROTECTION ANODE	1	
9	09280-22019	O-RING (D:1.9,ID:21.8)	1	
10	55321-87J01	ANODE,PROTECTION	1	
11	09103-06281	BOLT (6X14)	1	
12	01550-0820C	BOLT (8X20)	1	
13	11382-93E00	CAP,OIL FILLER	1	
14	09280-17003	O RING (D:3.1,ID:16.8)	1	
15	04211-09109	PIN (H:10)	2	
16	11170-99J00	COVER,CYLINDER HEAD	1	
17	11178-99J00	O-RING,CYLINDER HEAD COVER	1	
18	01550-0620C	BOLT (6X20)	4	
19	11196-99J01	HOSE,BREATHER	1	
20	11173-99J00	PLATE,BREATHER	1	
21	01550-0612A	BOLT (6X12)	4	
22	09482-00528	SPARK PLUG (CR6E)	2	
23	11115-94L00-001	GUIDE,VALVE (OS)	4	OPT

FIG.113A

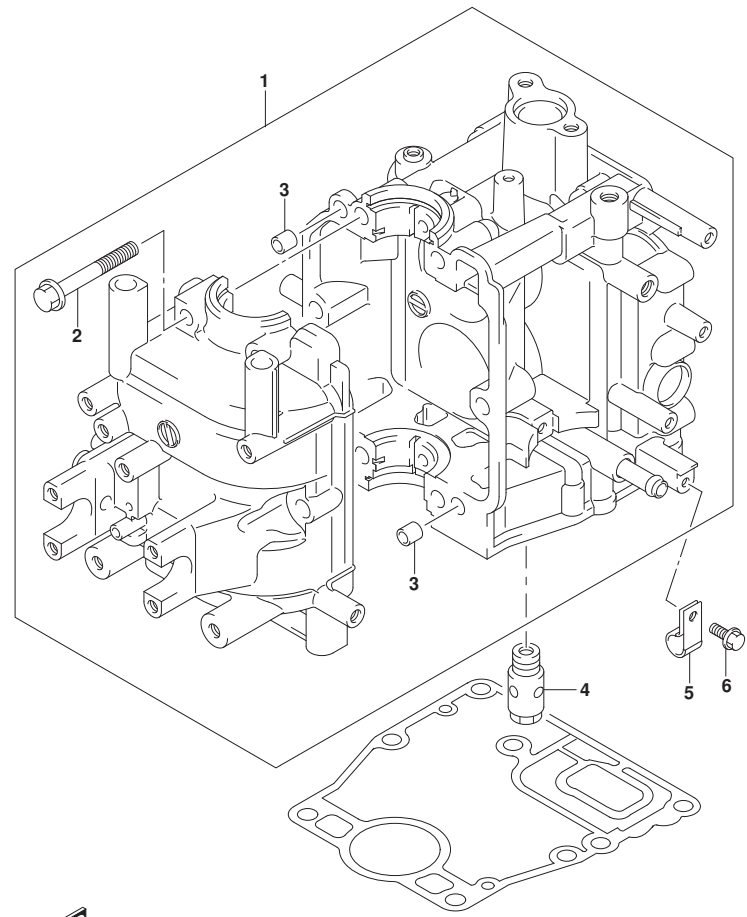


FIG.113A (1-B-3) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11301-99J20	BLOCK ASSY,CYLINDER	1	
2	01560-08557	.BOLT	6	
3	04211-09109	.PIN (H:10)	2	
4	16440-11D00	REGULATOR ASSY,ENGINE OIL (6.5 K)	1	
5	09403-12417	CLAMP	1	
6	01550-0612C	BOLT (6X12)	1	



This exploded view diagram illustrates the components of a front wheel hub assembly. The parts are numbered as follows:

- 1**: Hub assembly
- 2**: Wheel rim
- 3**: Axle pin
- 4**: Cotter pin
- 5**: Hub cap
- 6**: Hub cap screw
- 7**: Hub cap
- 8**: Hub cap
- 9**: Hub cap
- 10**: Hub cap

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-99JL0-0B0	PISTON (NONE)	2	
2	12140-99J00	RING SET,PISTON	2	
3	12151-99JL0	PIN,PISTON	2	
4	09381-14001	RING,SNAP	4	
5	12160-99JL1	CONNROD ASSY	2	
6	12163-99JL1	.BOLT,CONNROD	4	
7	12220-99JL0	CRANKSHAFT	1	
8	12341-99J00	BEARING,CRANKSHAFT	4	
9	09283-30075	SEAL,OIL (28.8X45.5X6.5)	2	
10	12100-99JL0-050	PISTON SET (OS:0.50)	2	OS,OPT

FIG.120A

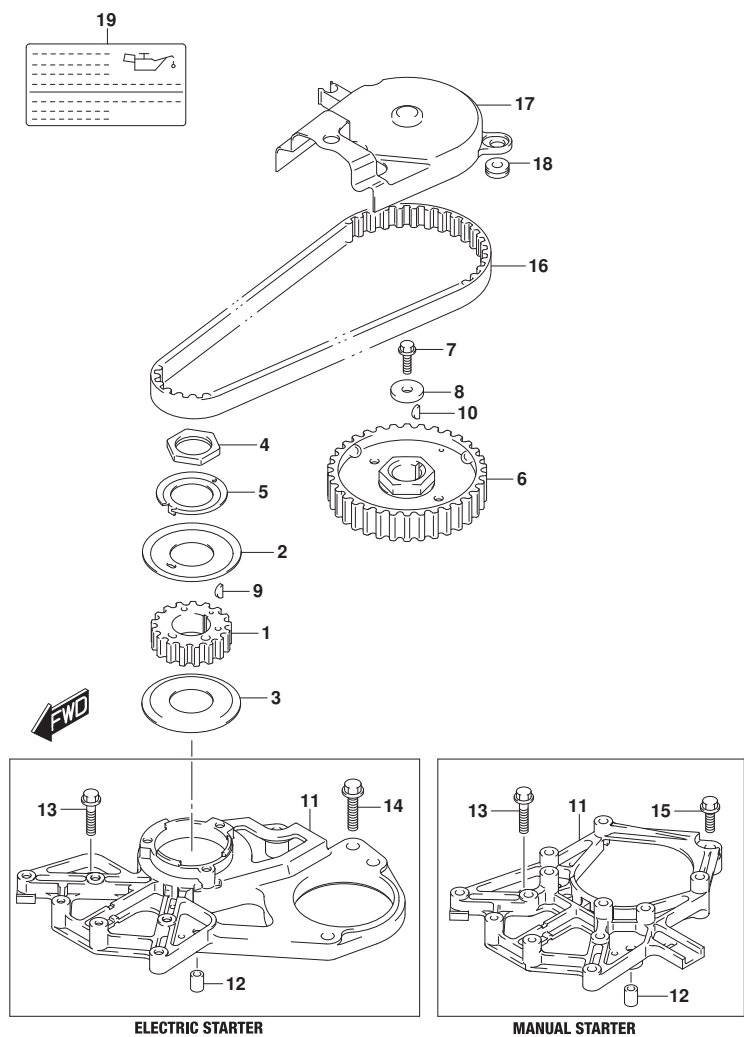


FIG.120A (1-B-5) TIMING BELT (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12631-99JM0	PULLEY, CRANKSHAFT (NT:17)	1	
2	12635-99J00	GUIDE,TIMING BELT	1	UPPER
3	12636-99J00	GUIDE,TIMING BELT	1	LOWER
4	12637-99J00	NUT,TIMING PULLEY (M24)	1	
5	12638-99J00	WASHER,PULLEY NUT LOCK	1	
6	12741-99JL0	PULLEY, CAMSHAFT (NT:34)	1	
7	09103-06546	BOLT (6X18)	1	
8	09160-06171	WASHER (6.5X24X4)	1	
9	08341-31039	KEY	1	
10	08341-31039	KEY	1	
11-1	12625-99J00	BASE,STATOR	1	E-STARTER
11-2	12625-99J10	BASE,STATOR	1	M-STARTER
12	04211-09149	PIN	2	
13	01550-0630C	BOLT (6X30)	3	
14	01550-08307	BOLT	1	E-STARTER
15	01550-0612C	BOLT (6X12)	1	M-STARTER
16	12761-99J00	BELT,TIMING	1	
17	12764-99J00	COVER,TIMING BELT	1	
18	09308-08016	GROMMET	2	
19	61494-99J01	LABEL,OIL & CLEARANCE	1	

FIG.120B

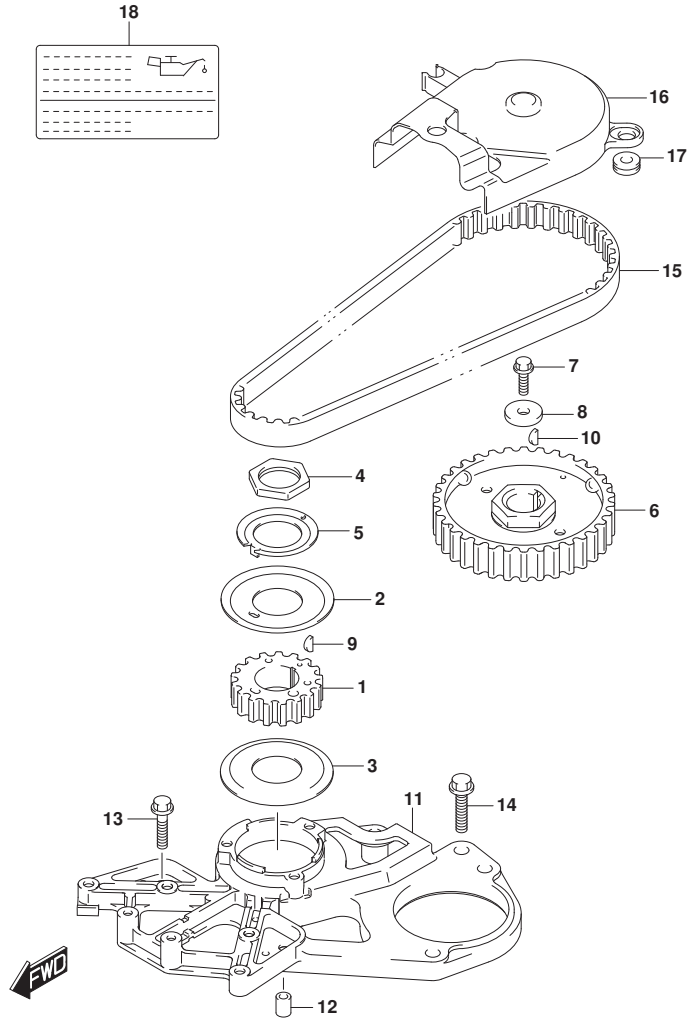


FIG.120B (1-B-6) TIMING BELT (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12631-99JM0	PULLEY, CRANKSHAFT (NT:17)	1	
2	12635-99J00	GUIDE,TIMING BELT	1	UPPER
3	12636-99J00	GUIDE,TIMING BELT	1	LOWER
4	12637-99J00	NUT,TIMING PULLEY (M24)	1	
5	12638-99J00	WASHER,PULLEY NUT LOCK	1	
6	12741-99JL0	PULLEY, CAMSHAFT (NT:34)	1	
7	09103-06546	BOLT (6X18)	1	
8	09160-06171	WASHER (6.5X24X4)	1	
9	08341-31039	KEY	1	
10	08341-31039	KEY	1	
11	12625-99J00	BASE,STATOR	1	
12	04211-09149	PIN	2	
13	01550-0630C	BOLT (6X30)	3	
14	01550-08307	BOLT	1	
15	12761-99J00	BELT,TIMING	1	
16	12764-99J00	COVER,TIMING BELT	1	
17	09308-08016	GROMMET	2	
18	61494-99J01	LABEL,OIL & CLEARANCE	1	

FIG.121A

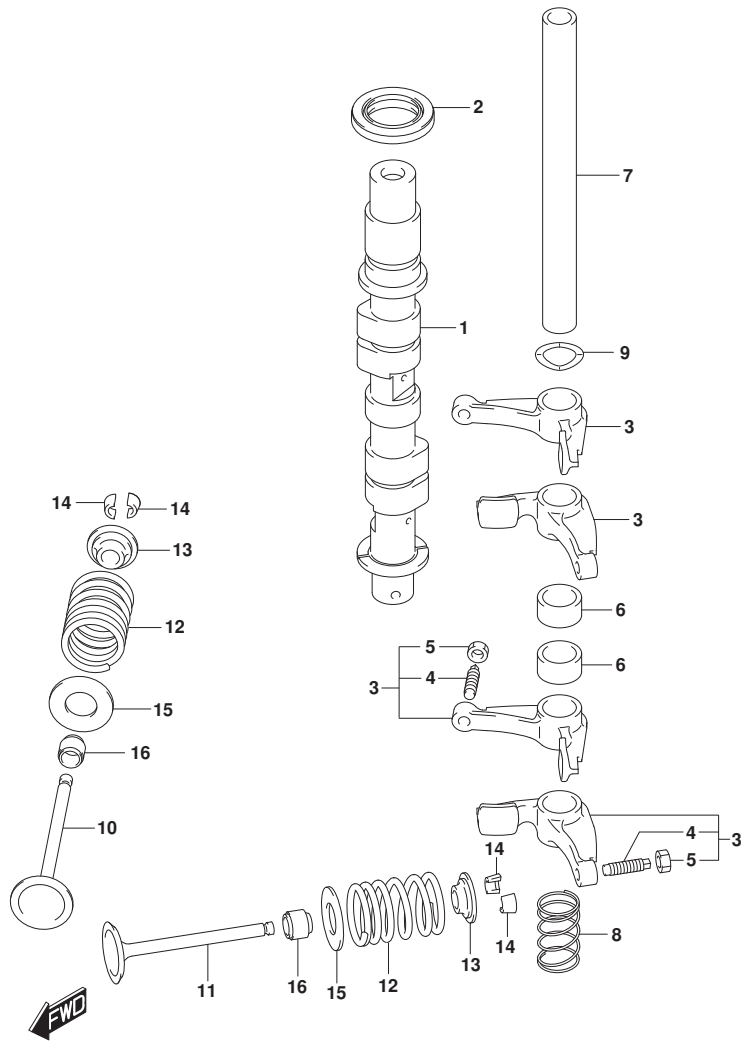


FIG.121A (1-B-7) CAMSHAFT (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	12700-99JL1	CAMSHAFT ASSY	1	M-STARTER W/DECOMP
1-2	12711-99JM1	CAMSHAFT	1	E-STARTER N/DECOMP
2	09283-21009	SEAL,OIL (19.7X33X6)	1	
3	12840-99J00	ARM,ROCKER	4	
4	12842-49201	.SCREW,TAPPET ADJUSTING	4	
5	12843-27A00	.NUT,TAPPET ADJUSTING	4	
6	12843-99J00	SPACER,ROCKER ARM (13X18X9)	2	
7	12861-99JL0	SHAFT, ROCKER ARM (9X13X142.5)	1	
8	12891-99J00	SPRING,ROCKER SHAFT	1	
9	09164-13008	WASHER	1	
10	12911-99J10	VALVE,INTAKE	2	
11	12915-99J10	VALVE,EXHAUST	2	
12	12921-99J00	SPRING,VALVE	4	
13	12931-78G00	RETAINER,VALVE SPRING	4	
14	12932-50MA0	COTTER,VALVE	8	
15	12933-71C00	SEAT,VALVE SPRING	4	
16	09289-05008	OIL SEAL (5X10.5X8.4)	4	

FIG.121B

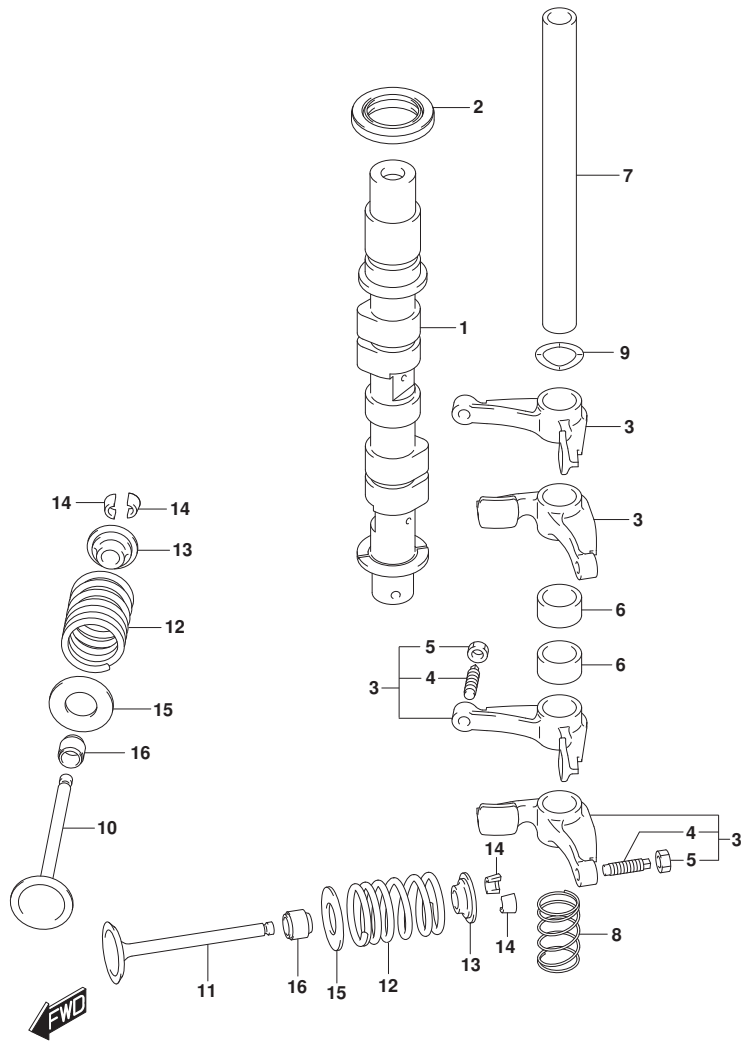


FIG.121B (1-B-8) CAMSHAFT (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12711-99JM1	CAMSHAFT	1	
2	09283-21009	SEAL,OIL (19.7X33X6)	1	
3	12840-99J00	ARM,ROCKER	4	
4	12842-49201	.SCREW,TAPPET ADJUSTING	4	
5	12843-27A00	.NUT,TAPPET ADJUSTING	4	
6	12843-99J00	SPACER,ROCKER ARM (13X18X9)	2	
7	12861-99JL0	SHAFT, ROCKER ARM (9X13X142.5)	1	
8	12891-99J00	SPRING,ROCKER SHAFT	1	
9	09164-13008	WASHER	1	
10	12911-99J10	VALVE,INTAKE	2	
11	12915-99J10	VALVE,EXHAUST	2	
12	12921-99J00	SPRING,VALVE	4	
13	12931-78G00	RETAINER,VALVE SPRING	4	
14	12932-50MA0	COTTER,VALVE	8	
15	12933-71C00	SEAT,VALVE SPRING	4	
16	09289-05008	OIL SEAL (5X10.5X8.4)	4	

FIG.126A


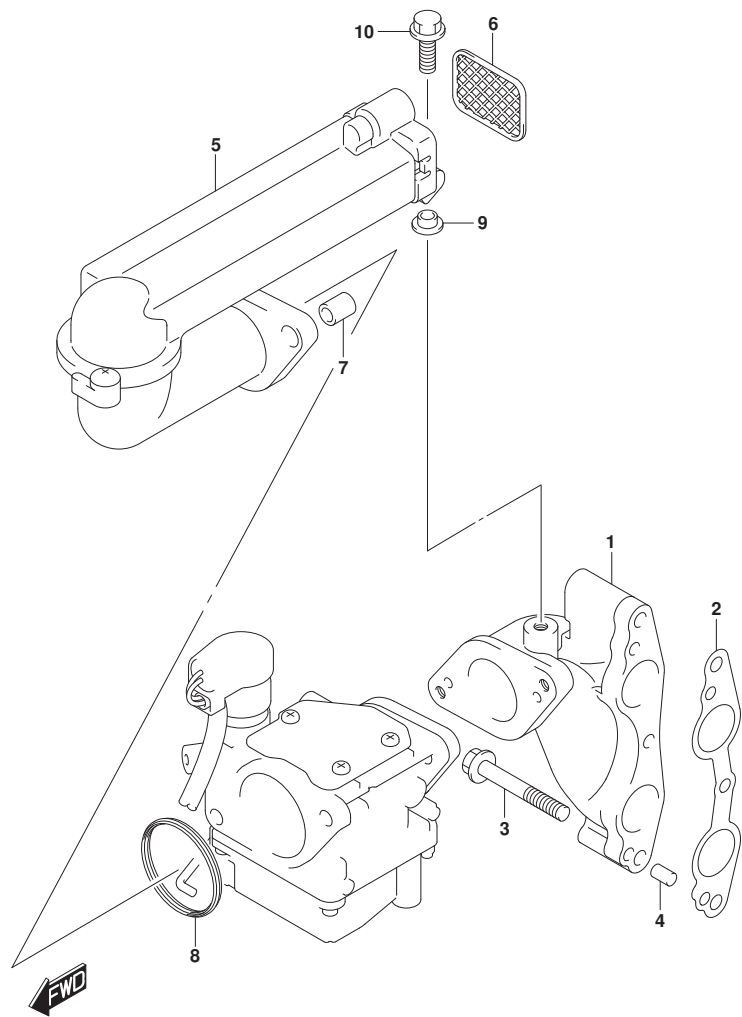


FIG.126A (1-B-9) INLET MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-99J00	MANIFOLD,INLET	1	
2	13119-99J00	GASKET,INLET MANIFOLD	1	
3	01560-06457	BOLT	3	
4	04221-05109	PIN	2	
5	13810-99J00	SILENCER	1	
6	13710-99J00	ARRESTER,FLAME	1	
7	09180-06290	SPACER (6.5X10X12)	2	
8	13832-94J01	SEAL,SILENCER	1	
9	09169-06082	WASHER	1	
10	01550-0616C	BOLT (6X16)	1	



DF8A_P01_022

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	13200-99J00	CARBURETOR ASSY	1	M-STARTER
1-2	13200-99J11	CARBURETOR ASSY	1	E-STARTER
2	13236-99J00	.NOZZLE,MAIN	1	
3-1	09491-70020	.JET,MAIN (70)	1	
3-2	09491-68008	.JET,MAIN (68)	1	
4-1	09492-38011	.JET,PILOT (38)	1	
4-2	09492-35033	.JET,PILOT (35)	1	
5	13239-94J00	.CAP,RUBBER	1	
6	13250-99J00	.FLOAT	1	
7	13370-94J00	.VALVE,FLOAT	1	
8	13247-94J00	.SCREW	4	
9	13375-26E00	.CLIP	1	
10	13254-94J00	.PIN,ARM	1	
11	13802-94J00	.SCREW	1	
12	13534-94J00	.SCREW,STOP	1	
13	13268-94J00	.SPRING	1	
14-1	13240-99J00	.CHAMBER ASSY,FRONT	1	M-STARTER
14-2	13240-99J10	.CHAMBER ASSY,FRONT	1	E-STARTER
15	13251-99J00	..GASKET,FRONT CHAMBER	1	
16	13279-99J00	..SCREW,DRAIN	1	
17	13275-99J00	..WASHER,PLANE	1	
18	13283-99J00	.PACKING	1	
19	13282-99J00	.PLATE	1	
20	13367-94J00	.SCREW	3	
21	13361-99J00	.HOLDER,CABLE	1	M-STARTER
22	13362-94J00	.GUIDE,CABLE	1	M-STARTER
23	13363-94J00	.CAP,CABLE SEALING	1	M-STARTER
24	13364-94J00	.VALVE,STARTER	1	M-STARTER
25	13365-94J00	.SPRING	1	M-STARTER
26	13295-14G00	.O-RING	1	M-STARTER
27	13367-94J00	.SCREW	1	E-STARTER
28	13368-99J10	.STARTER ASSY	1	E-STARTER
29	13281-99J00	.SCREW,PAN	1	
30	09103-06276	BOLT (6X100)	2	
31	13125-99J00	GASKET,CARBURETOR	2	

FIG.128A

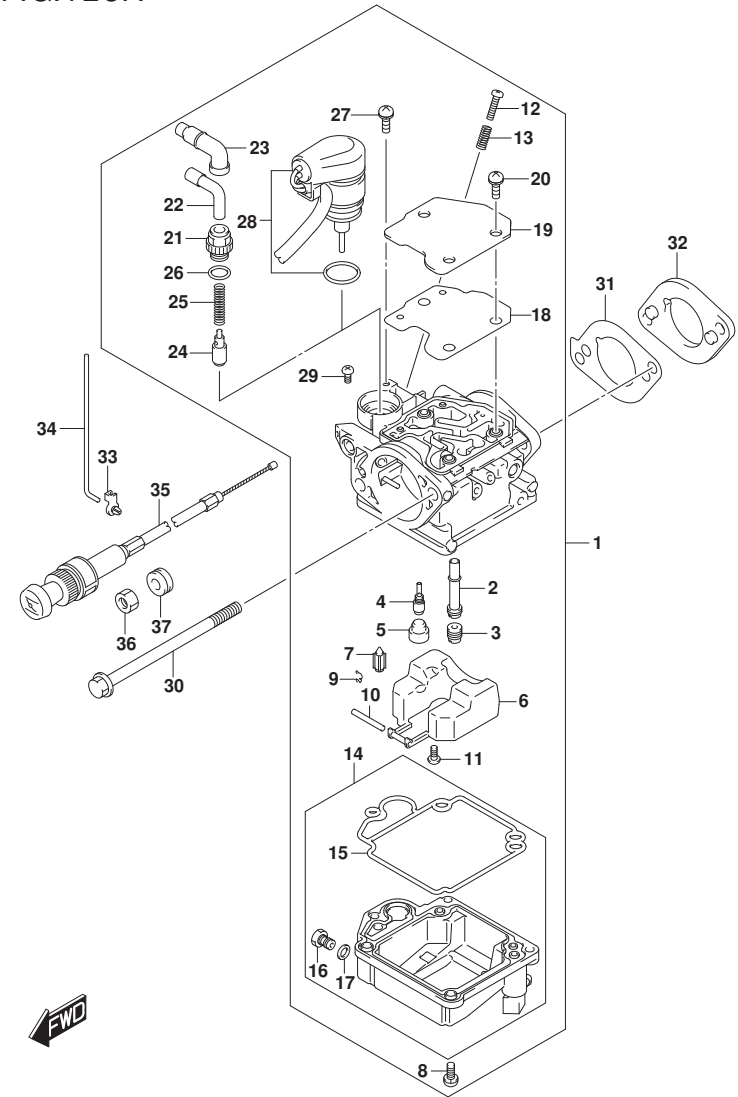


FIG.128A (1-B-11) CARBURETOR (DF8A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	13124-99J00	INSULATOR,CARBURETOR	1	
33	13436-91J00	CONNECTOR,CHOKE ROD	1	
34	13513-99J00	ROD,THROTTLE	1	
35	13640-99JL0	KNOB ASSY, STARTER	1	M-STARTER
36	09159-14032	NUT	1	M-STARTER
37	09320-10501	CUSHION	1	M-STARTER

FIG.128B

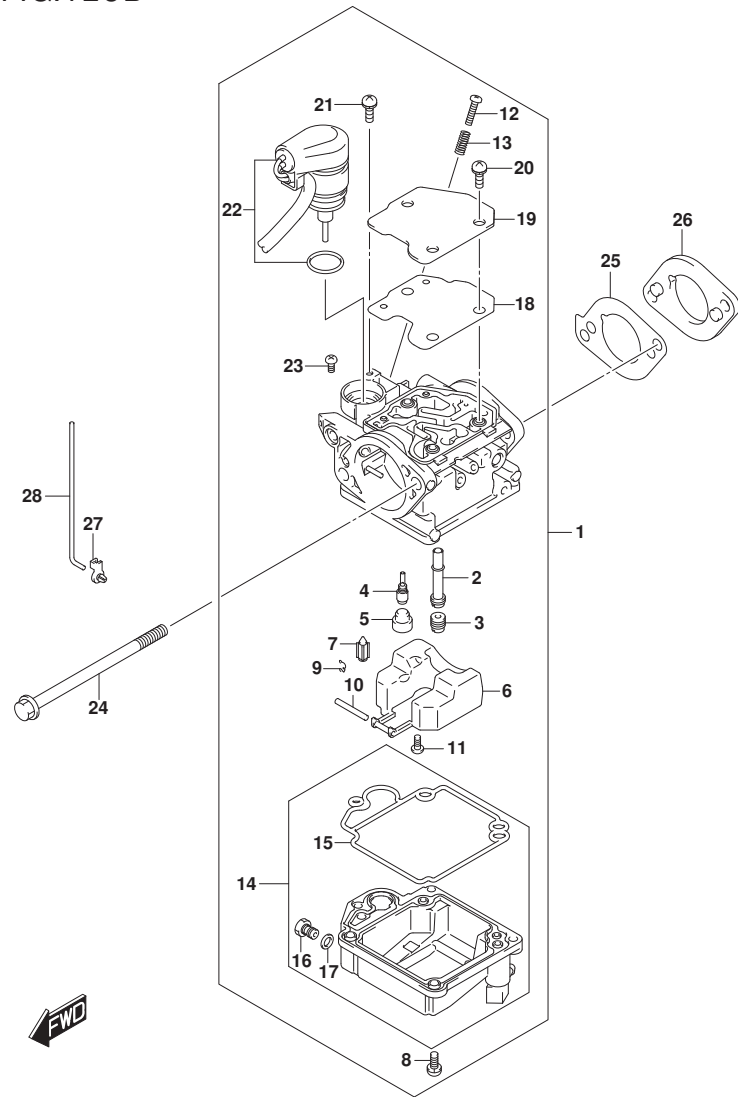


FIG.128B (1-B-12) CARBURETOR (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-99J11	CARBURETOR ASSY	1	
2	13236-99J00	.NOZZLE,MAIN	1	
3-1	09491-70020	.JET,MAIN (70)	1	
3-2	09491-68008	.JET,MAIN (68)	1	
4-1	09492-38011	.JET,PILOT (38)	1	
4-2	09492-35033	.JET,PILOT (35)	1	
5	13239-94J00	.CAP,RUBBER	1	
6	13250-99J00	.FLOAT	1	
7	13370-94J00	.VALVE,FLOAT	1	
8	13247-94J00	.SCREW	4	
9	13375-26E00	.CLIP	1	
10	13254-94J00	.PIN,ARM	1	
11	13802-94J00	.SCREW	1	
12	13534-94J00	.SCREW,STOP	1	
13	13268-94J00	.SPRING	1	
14	13240-99J10	.CHAMBER ASSY,FRONT	1	
15	13251-99J00	..GASKET,FRONT CHAMBER	1	
16	13279-99J00	..SCREW,DRAIN	1	
17	13275-99J00	..WASHER,PLANE	1	
18	13283-99J00	.PACKING	1	
19	13282-99J00	.PLATE	1	
20	13367-94J00	.SCREW	3	
21	13367-94J00	.SCREW	1	
22	13368-99J10	.STARTER ASSY	1	
23	13281-99J00	.SCREW,PAN	1	
24	09103-06276	BOLT (6X100)	2	
25	13125-99J00	GASKET,CARBURETOR	2	
26	13124-99J00	INSULATOR,CARBURETOR	1	
27	13436-91J00	CONNECTOR,CHOKE ROD	1	
28	13513-99J00	ROD,THROTTLE	1	

FIG.128C

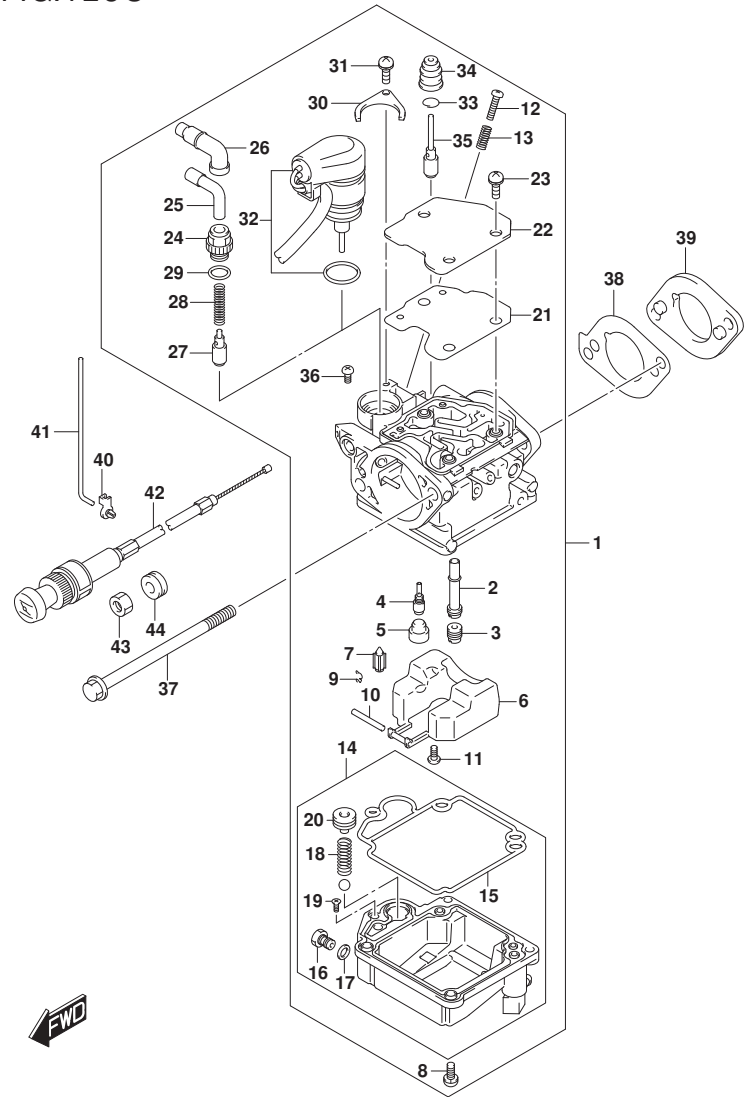


FIG.128C (1-B-13) CARBURETOR (DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	13200-99J20	CARBURETOR ASSY	1	M-STARTER
1-2	13200-99J30	CARBURETOR ASSY	1	E-STARTER
2	13236-99J20	.NOZZLE,MAIN	1	
3-1	09491-82013	.JET,MAIN (82)	1	
3-2	09491-80017	.JET,MAIN (80)	1	
4-1	09492-38011	.JET,PILOT (38)	1	
4-2	09492-35033	.JET,PILOT (35)	1	
5	13239-94J00	.CAP,RUBBER	1	
6	13250-99J00	.FLOAT	1	
7	13370-94J00	.VALVE,FLOAT	1	
8	13247-94J00	.SCREW	4	
9	13375-26E00	.CLIP	1	
10	13254-94J00	.PIN,ARM	1	
11	13802-94J00	.SCREW	1	
12	13534-94J00	.SCREW,STOP	1	
13	13268-94J00	.SPRING	1	
14-1	13240-99J20	.CHAMBER ASSY,FRONT	1	M-STARTER
14-2	13240-99J30	.CHAMBER ASSY,FRONT	1	E-STARTER
15	13251-99J00	..GASKET,FRONT CHAMBER	1	
16	13279-99J00	..SCREW,DRAIN	1	
17	13275-99J00	..WASHER,PLANE	1	
18	13441-99J00	..SPRING	1	
19	13443-99J00	..SCREW,SPECIAL	1	
20	13493-99J00	..PLUNGER	1	
21	13283-99J00	.PACKING	1	
22	13282-99J00	.PLATE	1	
23	13367-94J00	.SCREW	3	
24	13361-99J00	.HOLDER,CABLE	1	M-STARTER
25	13362-94J00	.GUIDE,CABLE	1	M-STARTER
26	13363-94J00	.CAP,CABLE SEALING	1	M-STARTER
27	13364-94J00	.VALVE,STARTER	1	M-STARTER
28	13365-94J00	.SPRING	1	M-STARTER
29	13295-14G00	.O-RING	1	M-STARTER
30	13428-06F30	.PLATE	1	E-STARTER
31	13367-94J00	.SCREW	1	E-STARTER

FIG.128C

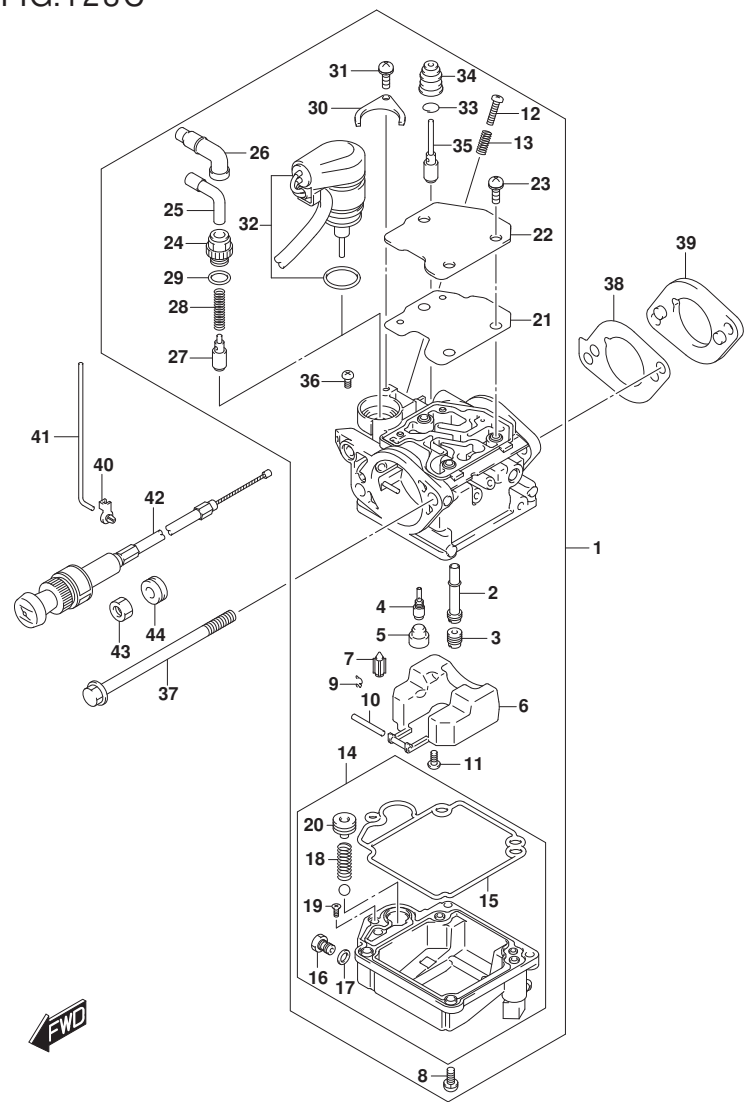


FIG.128C (1-B-14) CARBURETOR (DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	13368-99J00	.STARTER ASSY	1	E-STARTER
33	13494-94J00	.CLIP	1	
34	13495-94J00	.CAP,RUBBER	1	
35	13496-99J00	.ROD,LINK	1	
36	13281-99J00	.SCREW,PAN	1	
37	09103-06276	BOLT (6X100)	2	
38	13125-99J00	GASKET,CARBURETOR	2	
39	13124-99J00	INSULATOR,CARBURETOR	1	
40	13436-91J00	CONNECTOR,CHOKE ROD	1	
41	13513-99J00	ROD,THROTTLE	1	
42	13640-99JL0	KNOB ASSY, STARTER	1	M-STARTER
43	09159-14032	NUT	1	M-STARTER
44	09320-10501	CUSHION	1	M-STARTER

FIG.146A (1-B-15) FUEL PUMP

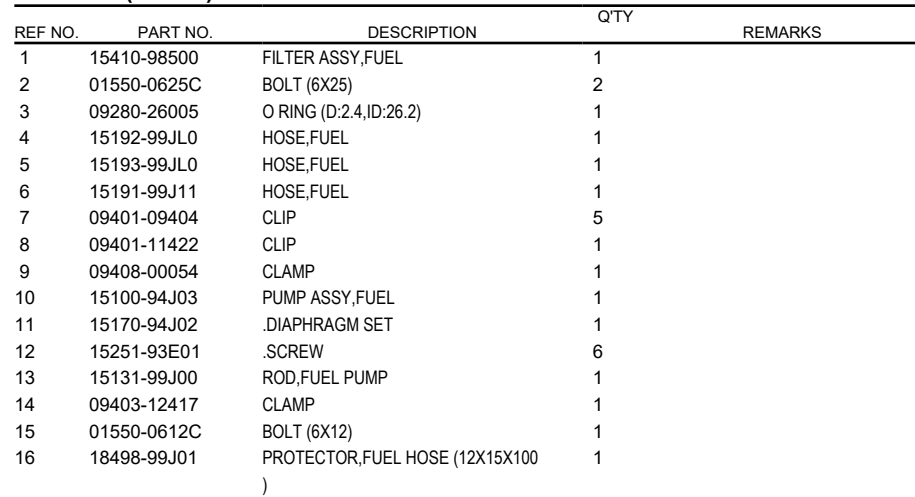


FIG.160A

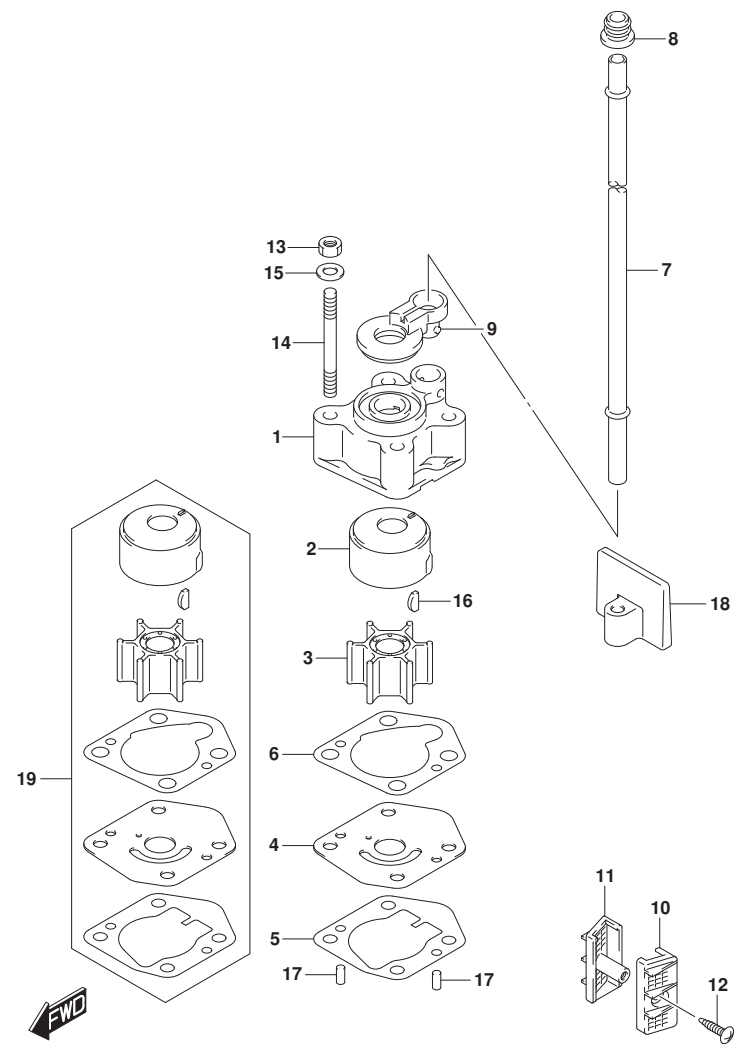


FIG.160A (1-B-16) WATER PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17411-94J00	CASE,WATER PUMP	1	
2	17413-94J00	SLEEVE,WATER PUMP CASE	1	
3	17461-939M0	IMPELLER,WATER PUMP	1	
4	17471-99J20	PANEL,PUMP CASE UNDER	1	
5	17472-99J00	GASKET,PUMP CASE PANEL	1	
6	17473-94J00	GASKET,WATER PUMP CASE	1	
7-1	17561-99J00	TUBE,WATER	1	
7-2	17561-99J10	TUBE,WATER	1	
8	17563-94J00	GROMMET,WATER TUBE	1	
9	17564-99J00	BUSH,WATER PUMP CASE	1	
10	17631-99J20	FILTER,WATER PORT SIDE	1	PORT
11	17632-99J30	FILTER,WATER STBD SIDE	1	STBD
12	03141-0416A	SCREW	1	
13	29141-93J00	NUT (M6)	4	
14	09108-06141	BOLT,STUD	4	
15	09160-06082	WASHER (6.5X13X1.0)	4	
16	09420-03009	KEY	1	
17	09202-04008	PIN (D:4,L:9)	2	
18	17565-99J00	GUIDE,WATER TUBE	1	
19	17400-99J20	KIT,WATER PUMP REPAIR	1	

FIG.162A

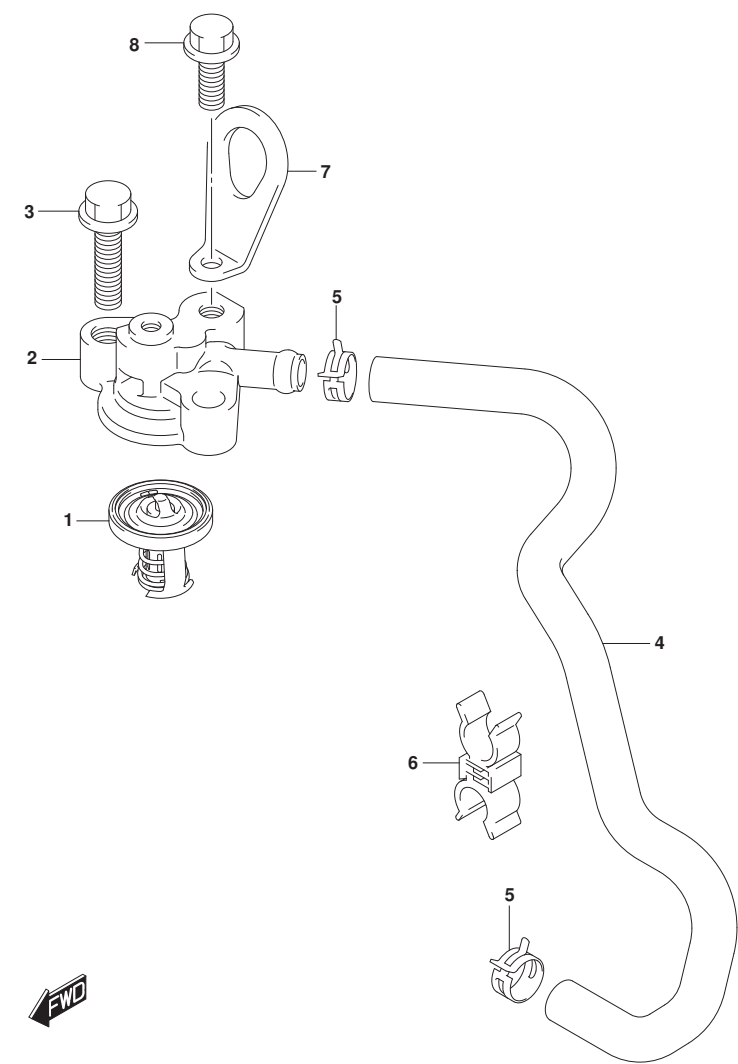


FIG.162A (1-C-2) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17670-94J02	THERMOSTAT, WATER (60C)	1	
2	17681-99J11	COVER, THERMOSTAT	1	
3	01550-08307	BOLT	2	
4	11197-99J01	HOSE, WATER RETURN	1	
5	09401-12413	CLIP	2	
6	09408-00173	CLAMP	1	
7	11291-91B50	HOOK, ENGINE	1	OPT
8	01550-08207	BOLT (8X20)	1	OPT

FIG.166A

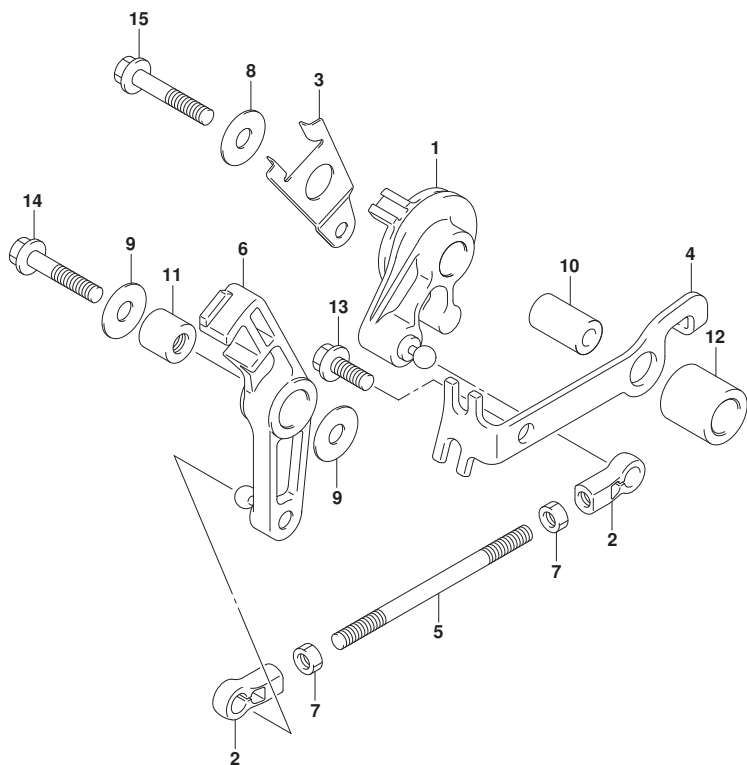


FIG.166A (1-C-3) THROTTLE CONTROL (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19120-99J00	DRUM,THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	2	
3	19148-99J00	LEVER,INTERLINK THROTTLE NO.1	1	
4	19184-99J00	BRACKET,THROTTLE CABLE	1	
5	19656-99J00	ROD,THROTTLE STOPPER	1	
6	19810-99J00	STOPPER,THROTTLE	1	
7	09140-05005	NUT (M5)	2	
8	09160-06046	WASHER (6.5X20X1.5)	1	
9	09160-06046	WASHER (6.5X20X1.5)	2	
10	09180-06186	SPACER (6.2X12.6X21)	1	
11	09180-06230	SPACER (6.2X12.6X12.5)	1	
12	09180-12158	SPACER (12.2X20X19.9)	1	
13	01550-0616C	BOLT (6X16)	1	
14	01550-0630C	BOLT (6X30)	1	
15	01550-06357	BOLT (6X35)	1	

FIG.166B

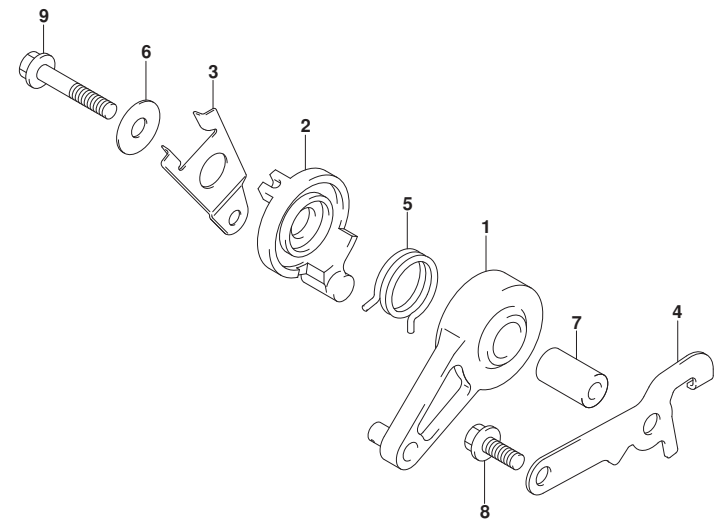


FIG.166B (1-C-4) THROTTLE CONTROL (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19120-99J11	LEVER,THROTTLE CONTROL	1	
2	19122-99J00	LEVER,INTERLINK THROTTLE NO.2	1	
3	19148-99J10	LEVER,INTERLINK THROTTLE NO.1	1	
4	19184-99J10	PLATE,THROTTLE LINK	1	
5	19185-99J00	SPRING,THROTTLE LEVER	1	
6	09160-06046	WASHER (6.5X20X1.5)	1	
7	09180-06186	SPACER (6.2X12.6X21)	1	
8	01550-0616C	BOLT (6X16)	1	
9	01550-06357	BOLT (6X35)	1	



FIG.167A (1-C-5) RECOIL STARTER


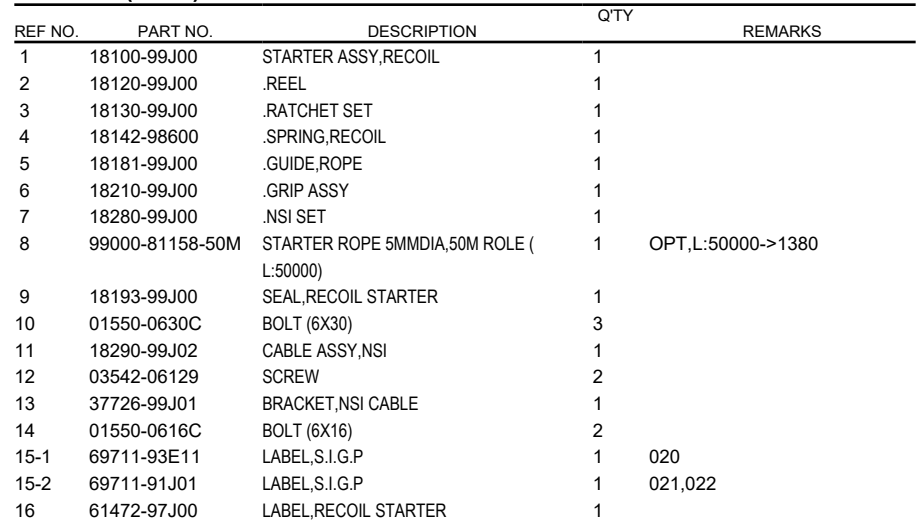


FIG.175A

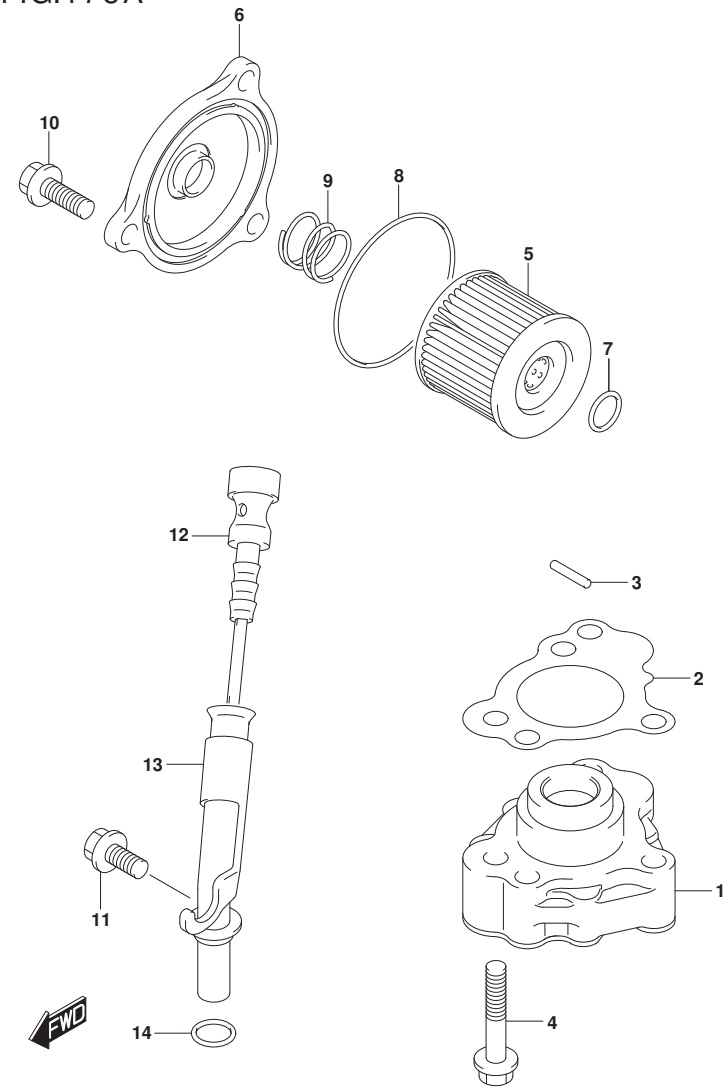


DF8A_P01_022_175A
OIL PUMP

FIG.175A (1-C-6) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	16400-99JL0	PUMP ASSY,OIL	1	
2	16542-99J00	GASKET,OIL PUMP	1	
3	09261-03009	ROLLER (3X15.8)	1	
4	01550-06357	BOLT (6X35)	3	
5	16510-45H10	FILTER ASSY,ENG OIL	1	
6	16512-99J00	CAP,OIL FILTER	1	
7	09280-13004	O RING (D:1.9,ID:13)	1	
8	09280-54001	O RING (D:2.4,ID:52.6)	1	
9	09440-18002	SPRING (L:14.5)	1	
10	01550-0620C	BOLT (6X20)	3	
11	01550-0612C	BOLT (6X12)	1	
12	16910-99J01	GAUGE,OIL LEVEL	1	
13	16930-99JL0	GUIDE, OIL LEVEL GAUGE	1	
14	09280-10016	O-RING (D:1.9,ID:9.8)	1	

DF8A_P01_022



DF8A_P01_022

FIG.206B

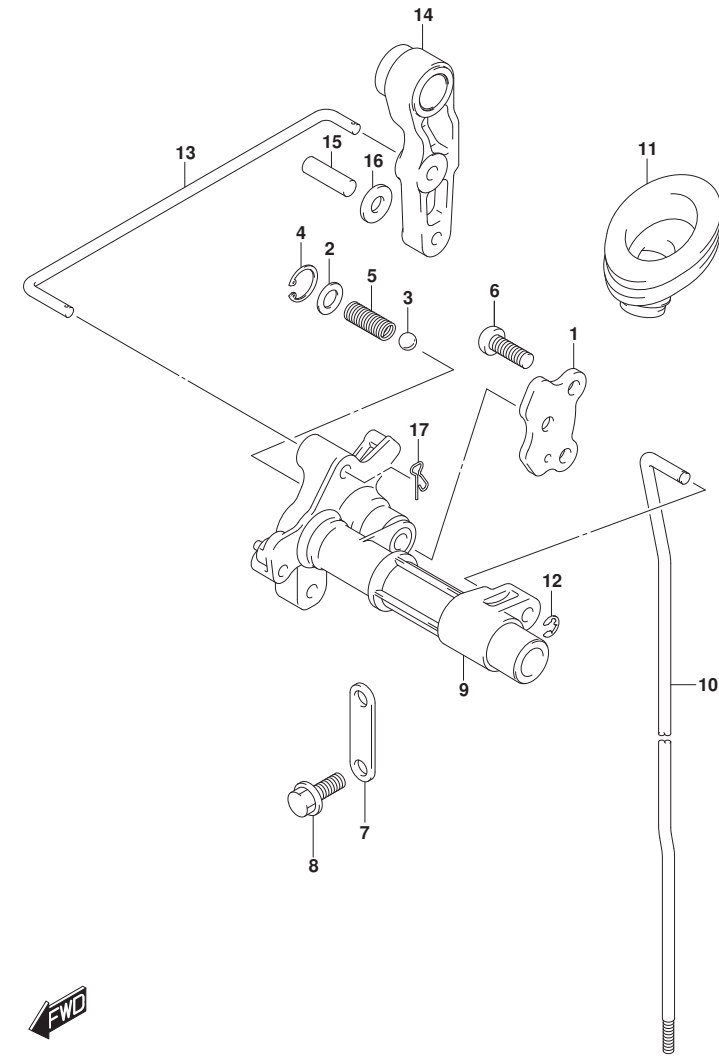


FIG.206B (1-C-8) CLUTCH ROD (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21122-99J00	PLATE,CLUTCH NOTCH	1	
2-1	09160-06082	WASHER (6.5X13X1.0)	1	
2-2	09160-06176	WASHER,NOTCH SPRING	1	
3	09260-10006	BALL	1	
4	09381-14004	CIRCLIP	1	
5	09440-07079	SPRING	1	
6	02112-06127	SCREW	2	
7	21126-99J00	HOLDER,CLUTCH SHAFT	1	
8	01550-0616C	BOLT (6X16)	2	
9	21210-99J00	SHAFT,CLUTCH	1	
10-1	23111-99J00	ROD,CLUTCH	1	S-TRANSOM
10-2	23111-99J10	ROD,CLUTCH	1	L-TRANSOM
11	23131-99J00	BOOT,CLUTCH ROD	1	
12	09383-04002	E RING	1	
13	21241-99J00	LINK,CLUTCH LEVER	1	
14	23210-99J00	LEVER,CLUTCH CONTROL	1	
15	09204-01002	PIN	1	
16	09160-05029	WASHER (5.5X12X0.8)	2	
17	09385-04003	CLIP	1	



FIG.210A (1-C-9) SHIFT ROD



DF8A_P01_022_210A
SHIFTROD

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	57100-99JN0	SHAFT ASSY,DRIVE	1	S-TRANSOM
1-2	57100-99JP0	SHAFT ASSY,DRIVE	1	L-TRANSOM
2	08110-60020	.BEARING	1	
3	09380-15001	.RING,SNAP	1	
4	09160-20027	WASHER (20X35X2.75)	1	
5-1	09181-20251	SHIM (T:1.0)	1	
5-2	09160-20042	SHIM (T:1.1)	1	
5-3	09160-20043	SHIM (T:1.2)	1	
5-4	09160-20044	SHIM (T:1.3)	1	
5-5	09181-20244	SHIM (T:0.7)	1	
5-6	09181-20246	SHIM (T:0.8)	1	
5-7	09181-20248	SHIM (T:0.9)	1	
6	09160-21009	WASHER (21X35X2.75)	1	
7	09263-20024	BEARING (20X35X4.5)	1	
8	57311-99J10	PINION (NT:12)	1	
9	57510-99J11	GEAR,FORWARD (NT:25)	1	
10	57521-99J10	GEAR,REVERSE (NT:25)	1	
11-1	09160-17024	WASHER (T:1.1)	1	
11-2	09160-17039	WASHER (T:1.2)	1	
11-3	09160-17025	WASHER (T:1.3)	1	
11-4	09160-17040	WASHER (T:1.4)	1	
11-5	09160-17026	WASHER (T:1.5)	1	
11-6	09160-17041	WASHER (T:1.6)	1	
11-7	09160-17027	WASHER (T:1.7)	1	
11-8	09160-17042	WASHER (T:1.8)	1	
11-9	09160-17028	WASHER (T:1.9)	1	
12-1	09181-25160	SHIM (25X34X0.7)	2	
12-2	09181-25162	SHIM (25X34X0.8)	2	
12-3	09181-25164	SHIM (T:0.9)	2	
12-4	09160-25040	WASHER (T:1.0)	2	
12-5	09160-25041	WASHER (T:1.1)	2	
12-6	09160-25042	WASHER (T:1.2)	2	
12-7	09181-25181	SHIM (T:1.3)	2	
13	09181-15241	WASHER (15X22X2)	1	
14	57610-99JL0	SHAFT,PROPELLER	1	


Exploded view diagram of a front wheel hub assembly. The main shaft assembly (1) is shown with various components labeled with numbers 1 through 24. The components include:

- 1: Main shaft assembly
- 2: Seal
- 3: Seal
- 4: Seal
- 5: Seal
- 6: Seal
- 7: Seal
- 8: Seal
- 9: Bearing
- 10: Gear
- 11: Pin
- 12: Spring
- 13: Pin
- 14: Pin
- 15: Pin
- 16: Pin
- 17: Pin
- 18: Pin
- 19: Pin
- 20: Pin
- 21: Pin
- 22: Pin
- 23: Pin
- 24: Pin

A "FWD" arrow indicates the front of the vehicle.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15	57621-99J11	SHIFTER,CLUTCH DOG	1	
16	09202-04025	PIN (4X31)	1	
17	59441-94J00	SPRING,RETURN	1	
18	59441-99J00	SPRING,DOG	1	
19	57631-93901	ROD,PUSH	1	
20	57632-97L00	PIN,PUSH (6X6)	1	
21	56130-99J30	HOUSING,DRIVE SHAFT BRG	1	
22	09282-13L01	.SEAL,OIL (12.5X25X7)	2	
23	56132-99J10	GASKET,DRIVE SFT BRG HSG	1	
24	09116-06229	BOLT (6X25)	2	

FIG.301A

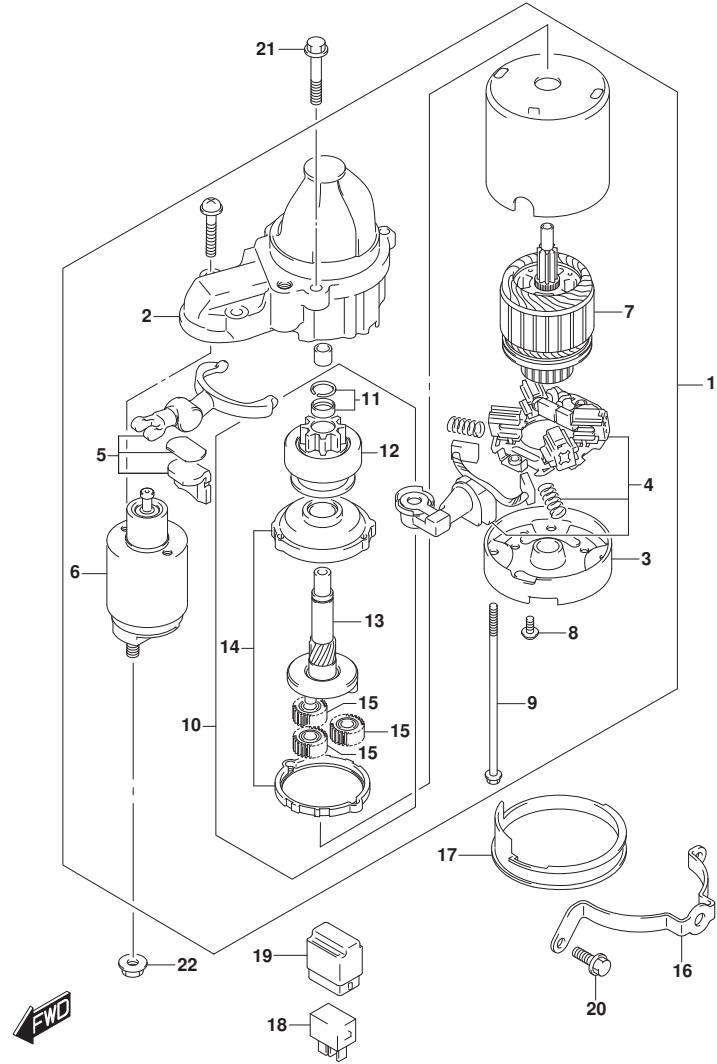

DF8A_P01_022_301A
STARTING MOTOR

FIG.301A (1-C-12) STARTING MOTOR (E-STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-89L00	MOTOR ASSY,STARTING	1	
2	31150-98L00	.CASE,GEAR	1	
3	31170-89L00	.HOUSING,REAR	1	
4	31173-98L00	.HOLDER ASSY,BRUSH	1	
5	31191-63J00	.LEVER SET	1	
6	31220-89L00	.SWITCH ASSY	1	
7	31311-63J00	ARMATURE	1	
8	31192-92J00	.SCREW SET	1	
9	31261-75F10	.BOLT	2	
10	31340-89L00	.CLUTCH SET,STARTING MOTOR	1	
11	31313-86030	..STOPPER SET	1	
12	31320-89L00	..PINION	1	
13	31341-89L00	..SHAFT,PINION	1	
14	31343-63J00	..INTERNAL GEAR ASSY	1	
15	31344-63J00	..GEAR ASSY	3	
16	31912-99J00	BAND,STARTER MOTOR	1	
17	31918-92J01	DAMPER,LOWER	1	LOWER
18	38860-76F01	RELAY ASSY	1	
19	38915-90J00	HOLDER,RELAY	1	
20	01550-06167	BOLT (6X16)	2	
21	01550-08257	BOLT (8X25)	2	
22	08316-10087	NUT	1	

DF8A_P01_022

FIG.303A

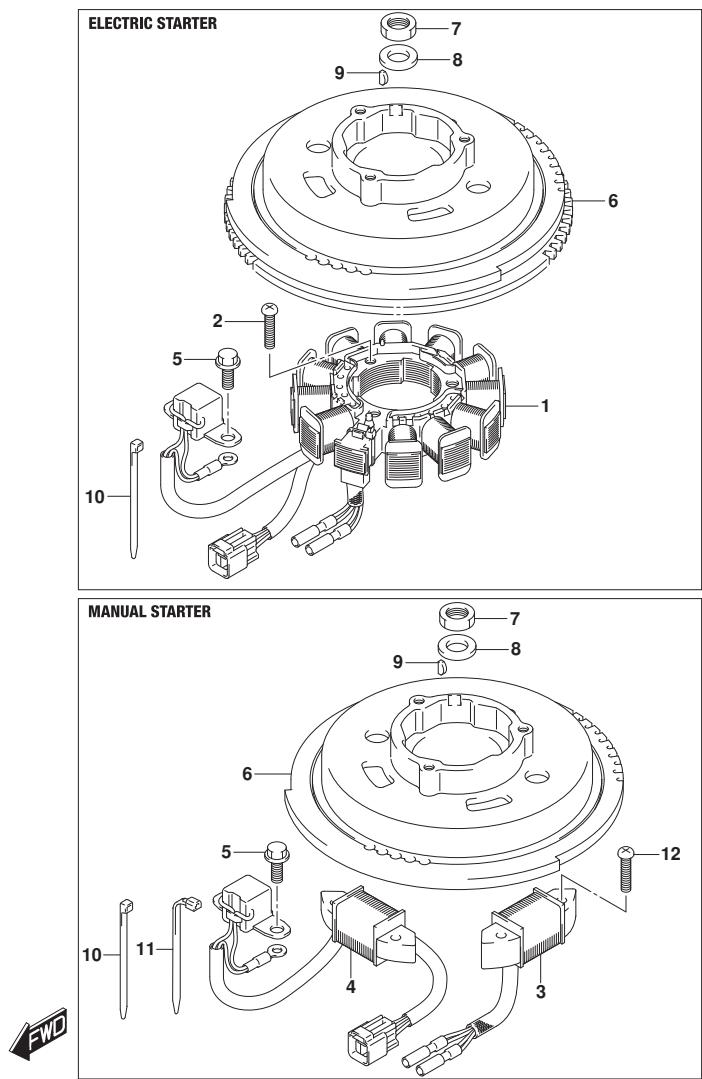


FIG.303A (1-C-13) MAGNETO (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32120-99J00	COIL,STATOR & PULSER	1	E-STARTER
2	09125-06035	SCREW (6X25)	3	E-STARTER
3	32120-99J10	COIL,BATTERY CHARGING	1	M-STARTER
4	32140-99J11	COIL,EXCITER & PULSER	1	M-STARTER
5	01550-05127	BOLT	2	
6-1	32102-99J00	FLYWHEEL,MAGNETO	1	E-STARTER
6-2	32102-99J10	FLYWHEEL,MAGNETO	1	M-STARTER
7	09140-14008	NUT (M14)	1	
8	09160-15057	WASHER,FLYWHEEL (15X27X4)	1	
9	08341-31039	KEY	1	
10	09407-14407	CLAMP (L:145)	1	
11	09407-14403	CLAMP (L:125)	1	M-STARTER
12	02112-06307	SCREW	4	M-STARTER

FIG.303B

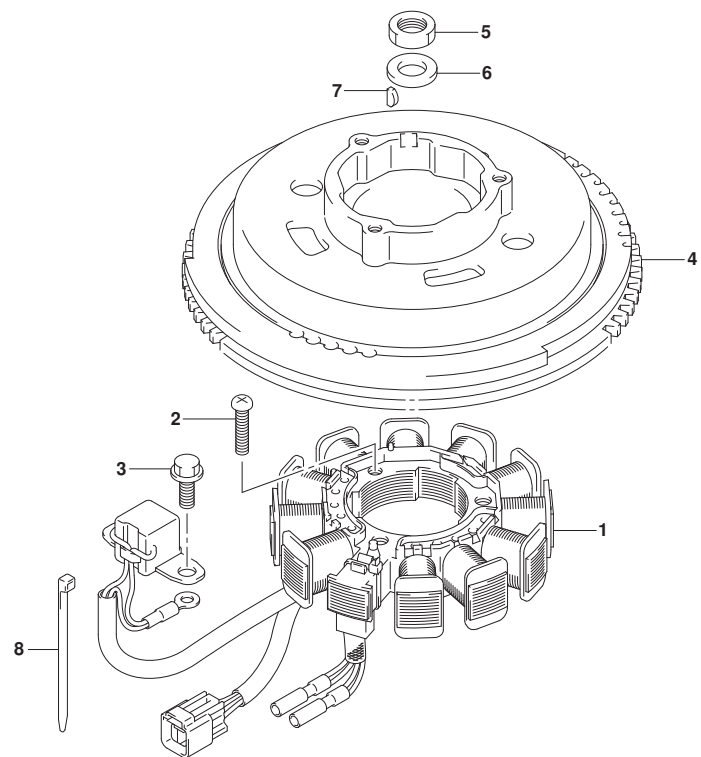


FIG.303B (1-C-14) MAGNETO (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32120-99J00	COIL,STATOR & PULSER	1	
2	09125-06035	SCREW (6X25)	3	
3	01550-05127	BOLT	2	
4	32102-99J00	FLYWHEEL,MAGNETO	1	
5	09140-14008	NUT (M14)	1	
6	09160-15057	WASHER,FLYWHEEL (15X27X4)	1	
7	08341-31039	KEY	1	
8	09407-14407	CLAMP (L:145)	1	



FIG.310A

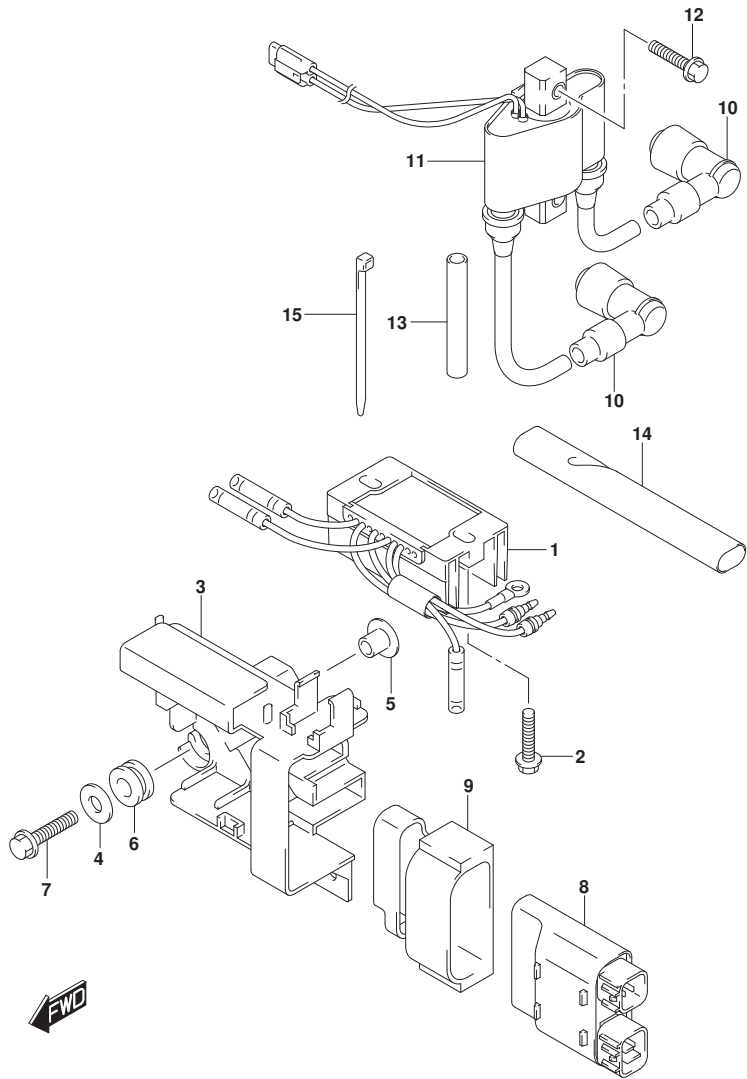


FIG.310A (1-C-15) RECTIFIER/IGNITION COIL (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-99J00	RECTIFIER & REGULATOR ASSY	1	E-STARTER
2	01550-06257	BOLT (6X25)	2	
3	32890-99J00	HOLDER,ELECTRIC PARTS	1	
4	09160-06084	WASHER (6.5X18X1.6)	2	
5	09169-06062	WASHER (6.3X17X1.6)	2	
6	09320-09016	CUSHION (9X18X9.5)	2	
7	01550-06257	BOLT (6X25)	2	
8-1	32900-99J00	UNIT,CDI	1	E-STARTER
8-2	32900-99J10	UNIT,CDI	1	M-STARTER
9	32980-99J00	CUSHION,CDI	1	
10	33500-07H00	CAP,SPARK PLUG	2	
11	33410-99J01	COIL,IGNITION	1	
12	01550-0625C	BOLT (6X25)	2	
13	33833-99J20	TUBE,IGN COIL LEAD (L:145)	1	
14	33833-94J11	PROTECTOR,HIGH TENSION CORD (L :50)	1	E-STARTER
15	09407-14407	CLAMP (L:145)	1	E-STARTER

FIG.310B

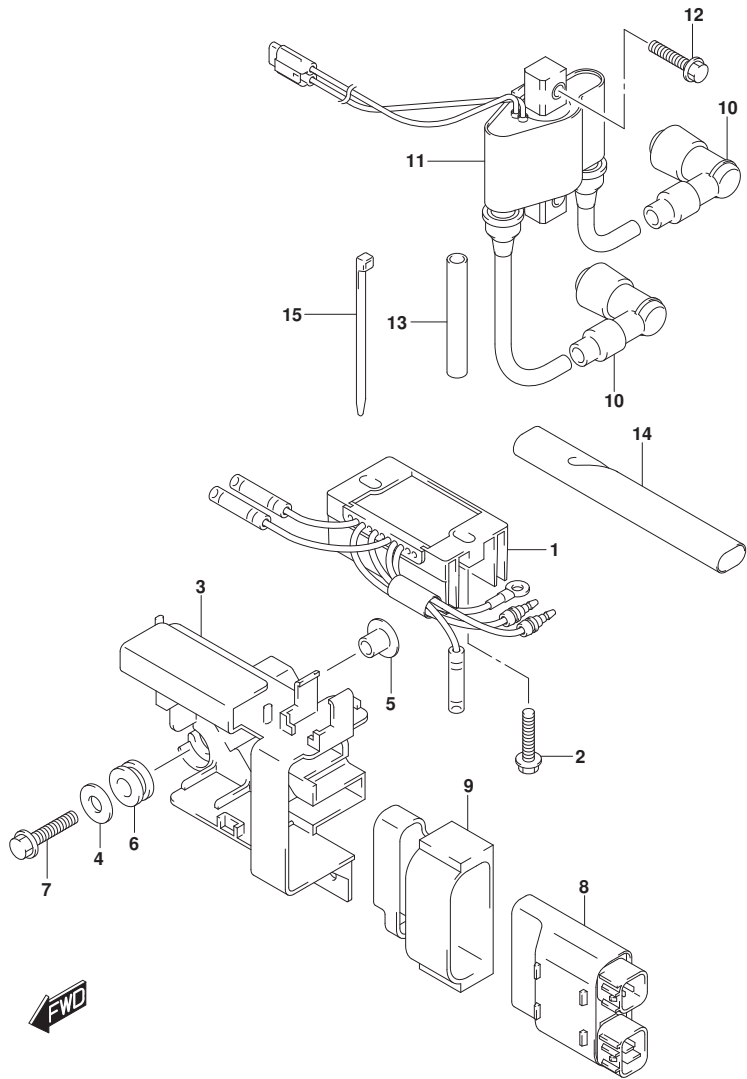


FIG.310B (1-C-16) RECTIFIER/IGNITION COIL (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-99J00	RECTIFIER & REGULATOR ASSY	1	
2	01550-06257	BOLT (6X25)	2	
3	32890-99J00	HOLDER,ELECTRIC PARTS	1	
4	09160-06084	WASHER (6.5X18X1.6)	2	
5	09169-06062	WASHER (6.3X17X1.6)	2	
6	09320-09016	CUSHION (9X18X9.5)	2	
7	01550-06257	BOLT (6X25)	2	
8	32900-99J00	UNIT,CDI	1	
9	32980-99J00	CUSHION,CDI	1	
10	33500-07H00	CAP,SPARK PLUG	2	
11	33410-99J01	COIL,IGNITION	1	
12	01550-0625C	BOLT (6X25)	2	
13	33833-99J20	TUBE,IGN COIL LEAD (L:145)	1	
14	33833-94J11	PROTECTOR,HIGH TENSION CORD (L:50)	1	
15	09407-14407	CLAMP (L:145)	1	

FIG.322A

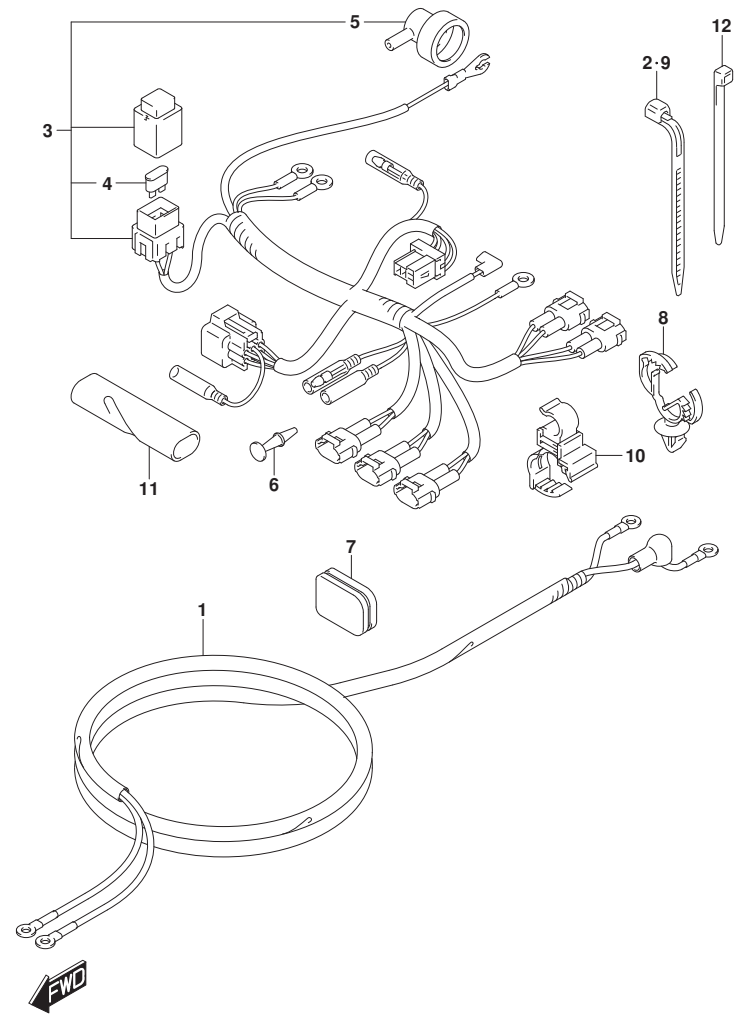


FIG.322A (1-D-2) HARNESS (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-99J00	CABLE,STARTER	1	E-STARTER
2	09407-14403	CLAMP (L:125)	1	E-STARTER
3-1	36610-99J01	HARNESS ASSY,WIRING	1	E-STARTER
3-2	36610-99J11	HARNESS ASSY,WIRING	1	M-STARTER
4	09481-20501	.FUSE (20A)	1	
5	36618-43410	.CAP,OIL PRESSURE SWITCH (40X70)	1	
6-1	36615-96300	TERMINAL	1	E-STARTER
6-2	36615-96300	TERMINAL	3	M-STARTER
7	36656-99J00	GROMMET,CABLE	1	PORT
8	09403-13311	CLAMP	1	
9	09407-14403	CLAMP (L:125)	1	
10	09408-00265	CLAMP	1	
11	33833-99J10	TUBE,HARNESS LEAD (16X17X60)	1	E-STARTER
12	09407-14407	CLAMP (L:145)	1	

FIG.322B


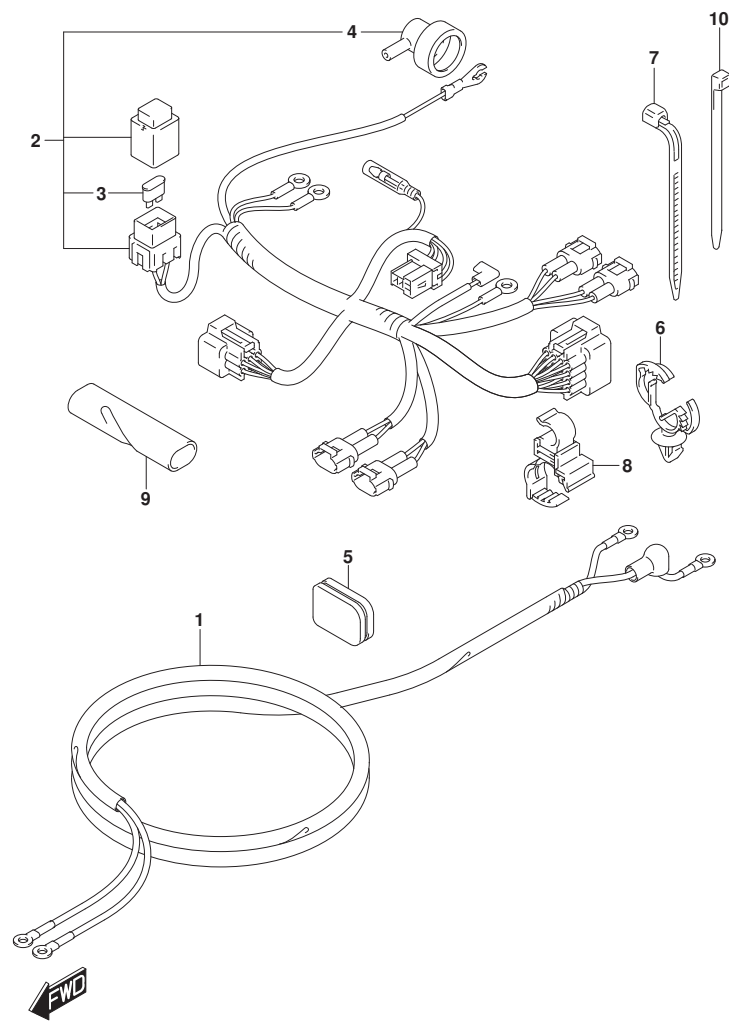


FIG.322B (1-D-3) HARNESS (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-99J00	CABLE,STARTER	1	
2	36610-99J21	HARNESS ASSY,WIRING	1	
3	09481-20501	.FUSE (20A)	1	
4	36618-43410	.CAP,OIL PRESSURE SWITCH (40X7 0)	1	
5	36656-99J10	GROMMET,CABLE	1	PORT
6	09403-13311	CLAMP	1	
7	09407-14403	CLAMP (L:125)	1	
8	09408-00265	CLAMP	1	
9	33833-99J10	TUBE,HARNESS LEAD (16X17X60)	1	
10	09407-14407	CLAMP (L:145)	1	

FIG.334A

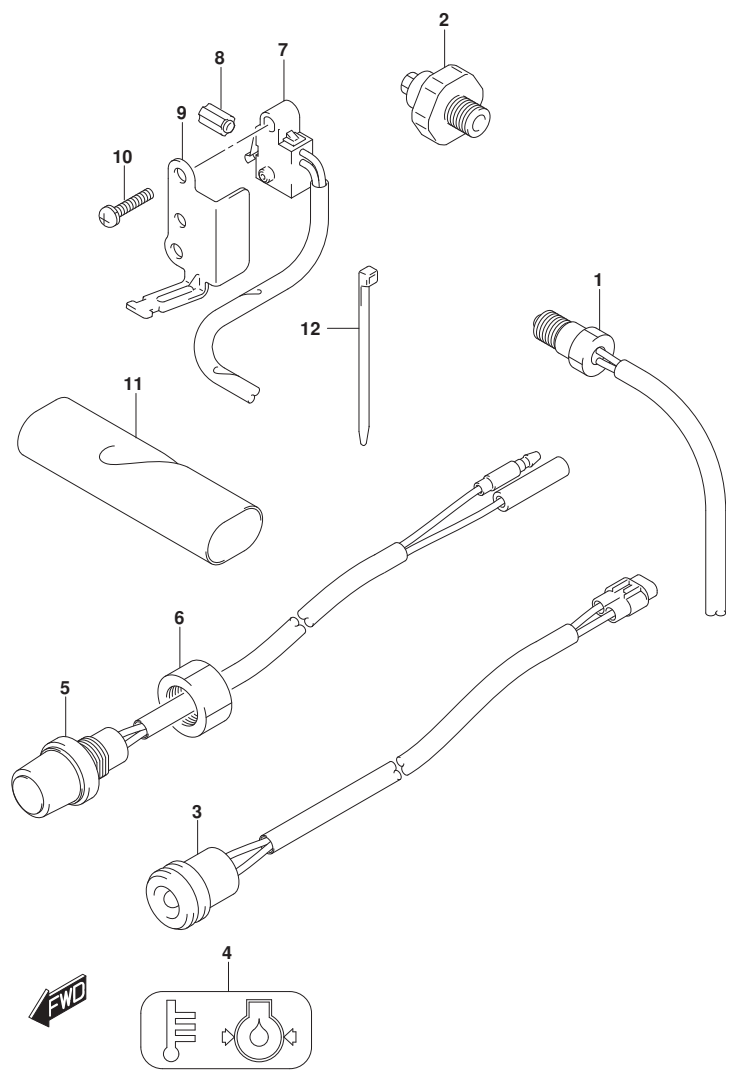


DF8A_P01_022_334A
SENSOR/SWITCH

FIG.334A (1-D-4) SENSOR/SWITCH (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34830-87J20	SENSOR,TEMP	1	
2	37820-93E11	SWITCH ASSY,OIL PRESSURE	1	
3	36360-99J00	INDICATOR,OIL PRESSURE	1	
4	36367-99J00	LABEL,WARNING	1	
5	37161-89E13	SWITCH,START	1	E-STARTER
6	09159-14032	NUT	1	E-STARTER
7	37721-99J10	SWITCH ASSY,NEUTRAL	1	E-STARTER
8	37724-99J00	ROD,SWITCH PUSH	1	E-STARTER
9	37726-99J10	BRACKET,NEUTRAL SWITCH	1	E-STARTER
10	09137-04004	SCREW (4X16)	2	E-STARTER
11	33833-99J00	TUBE,SW LEAD (19X20X80)	1	
12	09407-14407	CLAMP (L:145)	1	

FIG.334B

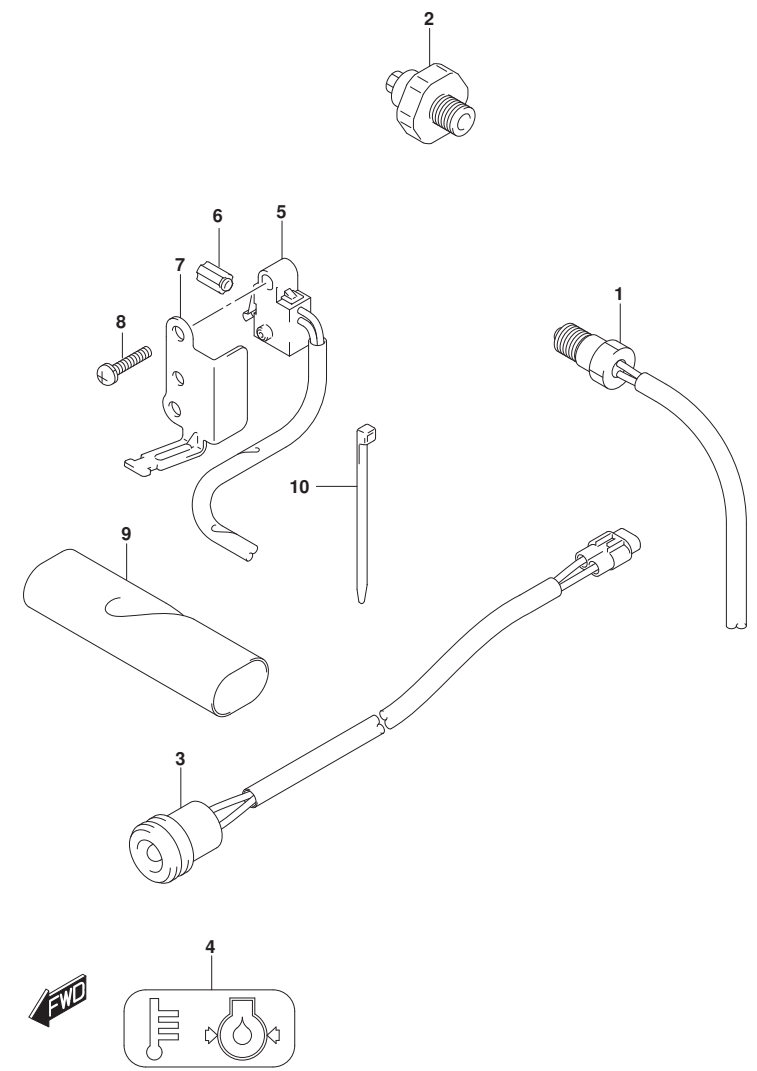


DF8A_P01_022_334B
SENSOR/SWITCH

FIG.334B (1-D-5) SENSOR/SWITCH (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34830-87J20	SENSOR,TEMP	1	
2	37820-93E11	SWITCH ASSY,OIL PRESSURE	1	
3	36360-99J10	INDICATOR,OIL PRESSURE	1	
4	36367-99J00	LABEL,WARNING	1	
5	37721-99J10	SWITCH ASSY,NEUTRAL	1	
6	37724-99J00	ROD,SWITCH PUSH	1	
7	37726-99J10	BRACKET,NEUTRAL SWITCH	1	
8	09137-04004	SCREW (4X16)	2	
9	33833-99J00	TUBE,SW LEAD (19X20X80)	1	
10	09407-14407	CLAMP (L:145)	1	

FIG.335A

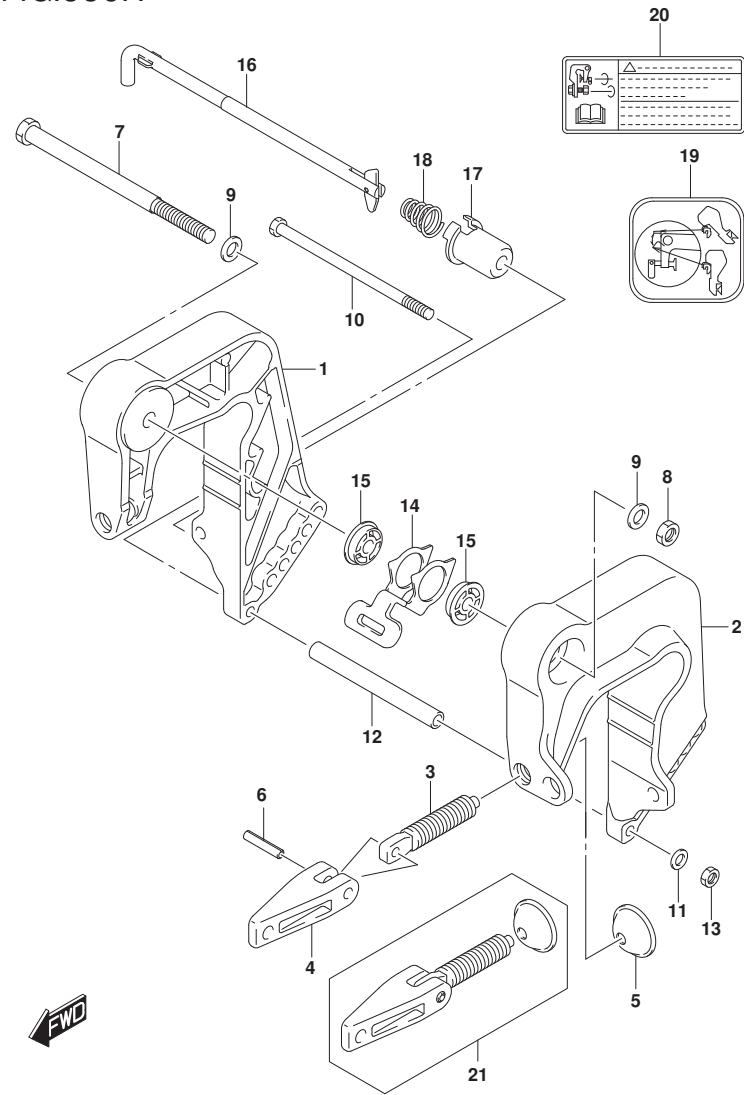


DF8A_P01_022_335A
CLAMPBRACKET

FIG.335A (1-D-6) CLAMP BRACKET (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-99J00-YAY	BRACKET,CLAMP STBD (BLACK)	1	STBD
2	41121-99J00-YAY	BRACKET,CLAMP PORT (BLACK)	1	PORT
3	41211-99JL0	SCREW,CLAMP	2	
4	41212-91J00	HANDLE,CLAMP	2	
5	41213-94J01	PLATE,CLAMP	2	
6	09205-06021	PIN,SPRING (6X25)	2	
7	09100-10320	BOLT (10X145)	1	
8	09159-10050	NUT (10X14)	1	
9	09160-10082	WASHER (10.5X19X2.0)	2	
10	09100-06177	BOLT,CLAMP BRACKET LOWER (6X14 0)	1	
11	09160-06082	WASHER (6.5X13X1.0)	1	
12	09180-06357	SPACER (6.5X10.5X104)	1	
13	29141-93J00	NUT (M6)	1	LOWER
14	45261-94J00	LEVER,RELEASE	1	
15	09306-10023	BUSH (22X27X7)	2	
16	45420-99JM1	PIN,TILT LOCK	1	
17	45425-94J01	STOPPER,TILT LOCK PIN	1	
18	09441-17001	SPRING	1	
19	45269-94J20	MARK,REVERSE LOCK	1	
20	69911-91J51	MARK,CLAMP BRACKET	1	
21	41210-99JL1	SCREW ASSY,CLAMP	1	OPT

FIG.335B

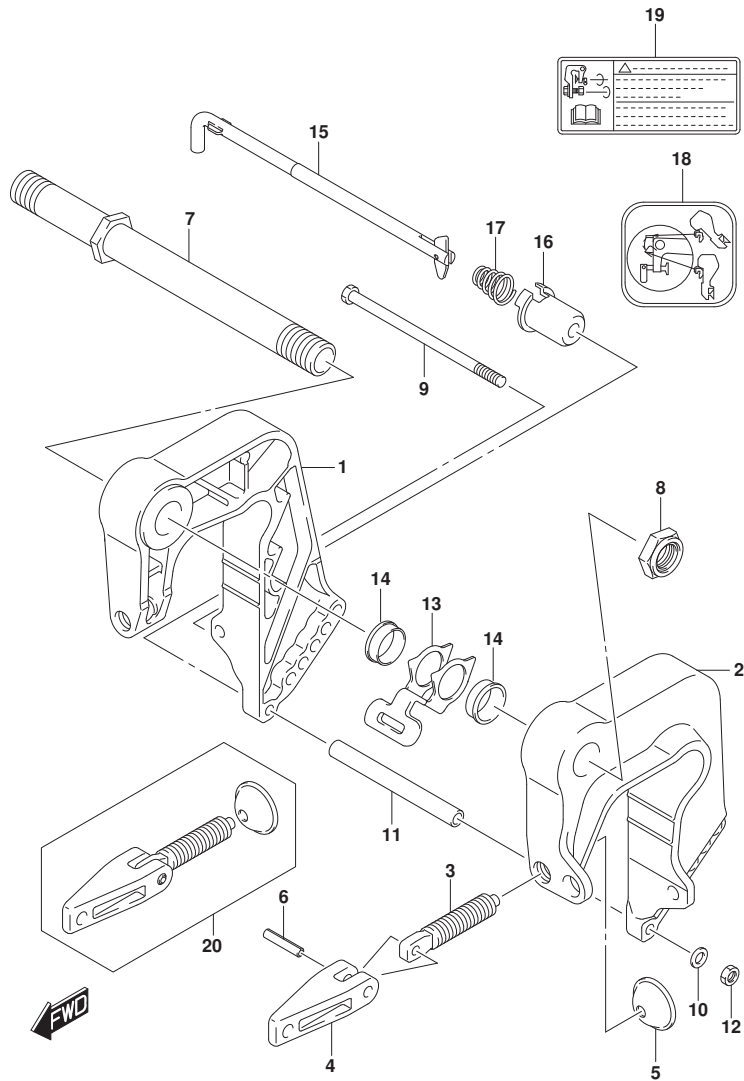


DF8A_P01_022_335B
CLAMPBRACKET

FIG.335B (1-D-7) CLAMP BRACKET (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-94J20-YAY	BRACKET,CLAMP STBD (BLACK)	1	STBD
2	41121-94J20-YAY	BRACKET,CLAMP PORT (BLACK)	1	PORT
3	41211-99JL0	SCREW,CLAMP	2	
4	41212-91J00	HANDLE,CLAMP	2	
5	41213-94J01	PLATE,CLAMP	2	
6	09205-06021	PIN,SPRING (6X25)	2	
7	41130-93E03	SHAFT,CLAMP BRACKET	1	
8	09159-22006	NUT (M22)	1	
9	09100-06177	BOLT,CLAMP BRACKET LOWER (6X14 0)	1	
10	09160-06082	WASHER (6.5X13X1.0)	1	
11	09180-06357	SPACER (6.5X10.5X104)	1	
12	29141-93J00	NUT (M6)	1	LOWER
13	45261-94J00	LEVER,RELEASE	1	
14	59315-94J00	BUSH,RELEASE LEVER (22.6X27X8)	2	
15	45420-99JM1	PIN,TILT LOCK	1	
16	45425-94J01	STOPPER,TILT LOCK PIN	1	
17	09441-17001	SPRING	1	
18	45269-94J20	MARK,REVERSE LOCK	1	
19	69911-91J51	MARK,CLAMP BRACKET	1	
20	41210-99JL1	SCREW ASSY,CLAMP	1	OPT

DF8A_P01_022

FIG.336A

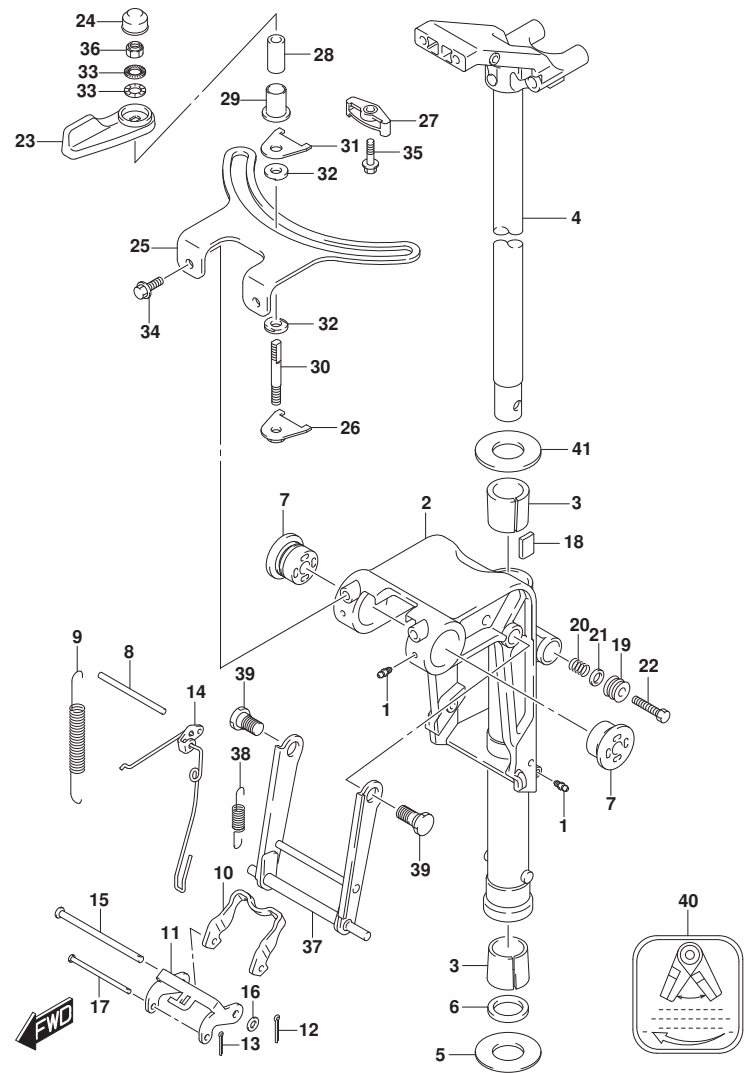


DF8A_P01_022_336A
SWIVEL BRACKET

FIG.336A (1-D-8) SWIVEL BRACKET (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE,GREASE	3	
2-1	43111-99J40-YAY	BRACKET,SWIVEL (BLACK)	1	S-TRANSOM
2-2	43111-99J50-YAY	BRACKET,SWIVEL (BLACK)	1	L-TRANSOM
3	43711-99J00	BUSH,STEERING	2	
4-1	43750-99J60-YAY	BRACKET,STEERING (BLACK)	1	S-TRANSOM
4-2	43750-99J70-YAY	BRACKET,STEERING (BLACK)	1	L-TRANSOM
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	SEAL,OIL (26X39X5)	1	
7	43211-99J00	BUSH,SWIVEL BRACKET	2	
8	41225-89L00	PIN,RELEASE ARM	1	
9	45212-95L00	SPRING,REVERSE LOCK ARM	2	
10	45231-89L00	ARM,REVERSE LOCK	1	
11	45241-89L00	LINK,REVERSE LOCK ARM	1	
12	09204-01002	PIN	1	
13	45247-99J00	PIN,REV LOCK ARM COTTER	1	
14	45250-89L03	LINK,RELEASE	1	
15	09200-06061	PIN (L:95.5)	1	
16	09160-06082	WASHER (6.5X13X1.0)	1	
17	09200-05014	PIN (L:73)	1	
18	43411-939L0	PLATE,STEERING ADJUSTER	1	
19	43412-93900	COVER,STRG ADJUSTER	1	
20	29440-93J00	SPRING,STEERING ADJUSTER	1	
21	09160-08082	WASHER (8.5X16X1.2)	1	
22	09100-08232	BOLT (8X30)	1	
23	43410-99J00	LEVER,STRG ADJ	1	
24	43412-99J00	COVER,STRG ADJ	1	
25	43415-99J00	PLATE,STRG ADJ	1	
26	43420-99J10	PLATE,STRG ADJ FRICTION	1	
27	43424-99J00	HOLDER,STRG ADJ NUT	1	
28	43427-99J00	SPACER,STRG ADJ FRICTION	1	
29	43428-99J00	BUSH,STRG ADJ FRICTION	1	
30	43512-99J00	SHAFT,STRG ADJ THREAD	1	
31	43514-94J00	PLATE,STRG ADJUSTER FRICTION	1	
32	43514-99J00	WASHER,STRG ADJ FRICTION PLATE	2	
33	43516-89J00	WASHER,STEERING ADJUSTER	2	

DF8A_P01_022

FIG.336A

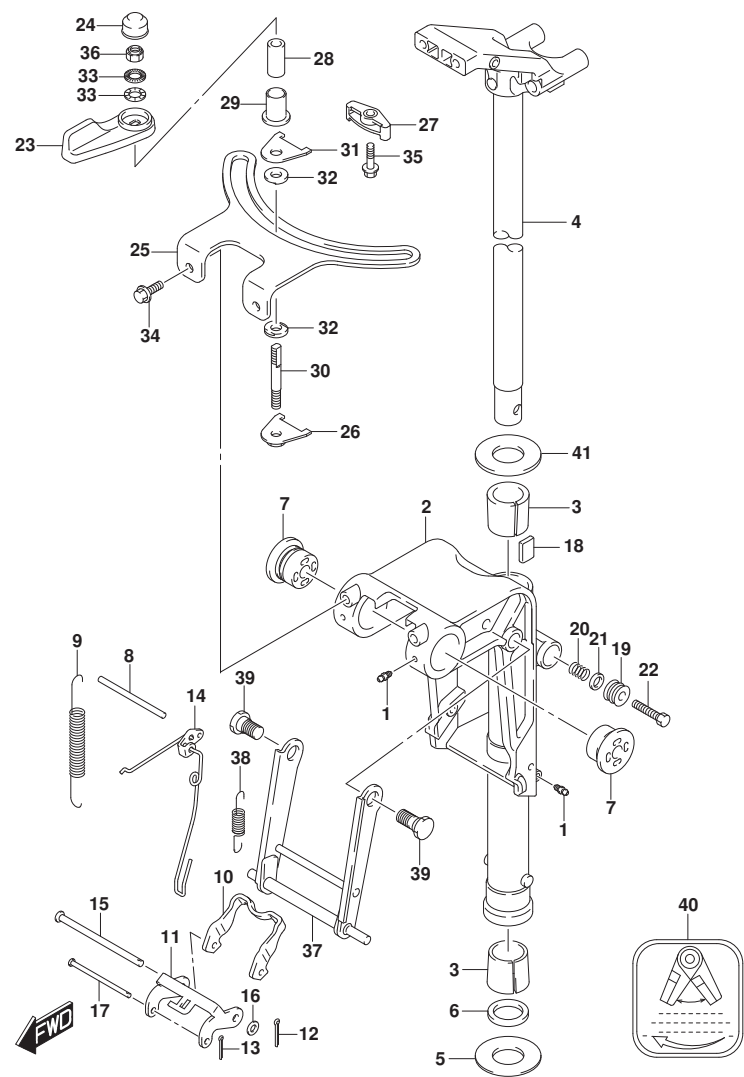

DF8A_P01_022_336A
SWIVEL BRACKET

FIG.336A (1-D-9) SWIVEL BRACKET (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	09116-06225	BOLT (6X16)	2	
35	09116-06229	BOLT (6X25)	1	
36	09159-08059	NUT (M8)	1	
37	45710-99JL1	ARM COMP, SHALLOW DRIVE	1	
38	45722-94J11	SPRING, SHALLOW WATER DRIVE ARM	1	
39	09111-10067	BOLT (10X20.5)	2	
40	45269-99J00	MARK, STEERING ADJUSTER	1	
41	09160-27012	WASHER (27.5X47X1)	1	

DF8A_P01_022

FIG.336B

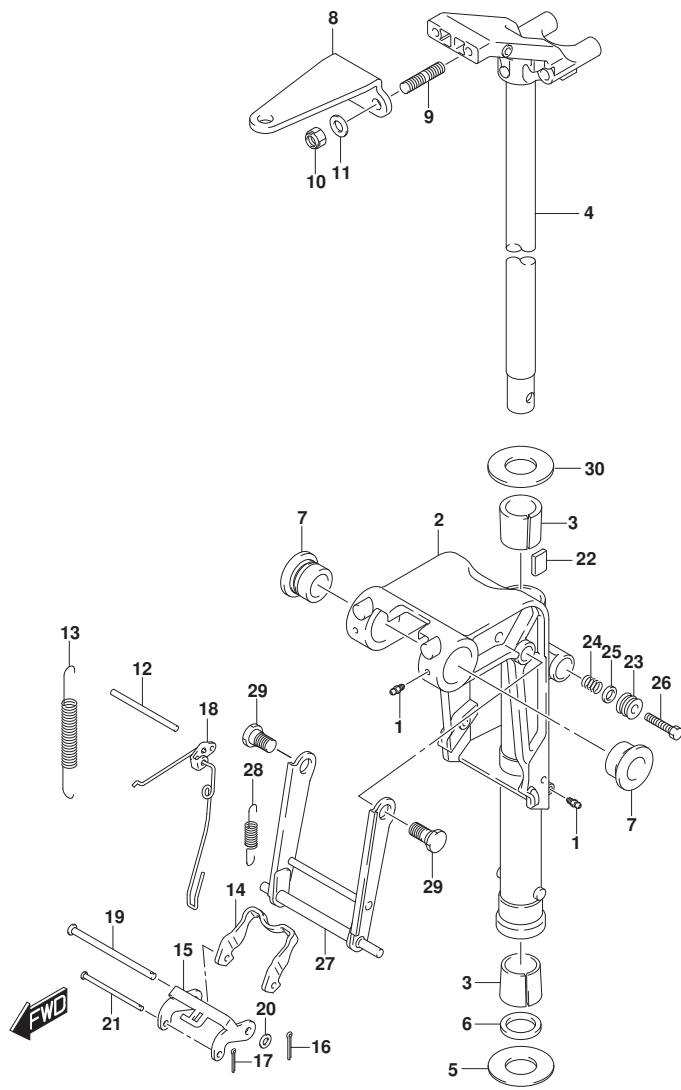


FIG.336B (1-D-10) SWIVEL BRACKET (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE,GREASE	3	
2-1	43111-99J60-YAY	BRACKET,SWIVEL (BLACK)	1	S-TRANSOM
2-2	43111-99J70-YAY	BRACKET,SWIVEL (BLACK)	1	L-TRANSOM
3	43711-99J00	BUSH,STEERING	2	
4-1	43750-99J60-YAY	BRACKET,STEERING (BLACK)	1	S-TRANSOM
4-2	43750-99J70-YAY	BRACKET,STEERING (BLACK)	1	L-TRANSOM
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	SEAL,OIL (26X39X5)	1	
7	43211-87JL0	BUSH,SWIVEL BRACKET	2	
8	43755-99J01	ATTACHMENT,STEERING BRACKET	1	
9	09108-08286	BOLT,STUD	2	
10	09159-08059	NUT (M8)	2	
11	09160-08082	WASHER (8.5X16X1.2)	2	
12	41225-89L00	PIN,RELEASE ARM	1	
13	45212-95L00	SPRING,REVERSE LOCK ARM	2	
14	45231-89L00	ARM,REVERSE LOCK	1	
15	45241-89L00	LINK,REVERSE LOCK ARM	1	
16	09204-01002	PIN	1	
17	45247-99J00	PIN,REV LOCK ARM COTTER	1	
18	45250-89L03	LINK,RELEASE	1	
19	09200-06061	PIN (L:95.5)	1	
20	09160-06082	WASHER (6.5X13X1.0)	1	
21	09200-05014	PIN (L:73)	1	
22	43411-939L0	PLATE,STEERING ADJUSTER	1	
23	43412-93900	COVER,STRG ADJUSTER	1	
24	29440-93J00	SPRING,STEERING ADJUSTER	1	
25	09160-08082	WASHER (8.5X16X1.2)	1	
26	09100-08232	BOLT (8X30)	1	
27	45710-99JL1	ARM COMP,SHALLOW DRIVE	1	
28	45722-94J11	SPRING,SHALLOW WATER DRIVE ARM	1	
29	09111-10067	BOLT (10X20.5)	2	
30	09160-27012	WASHER (27.5X47X1)	1	

FIG.401A

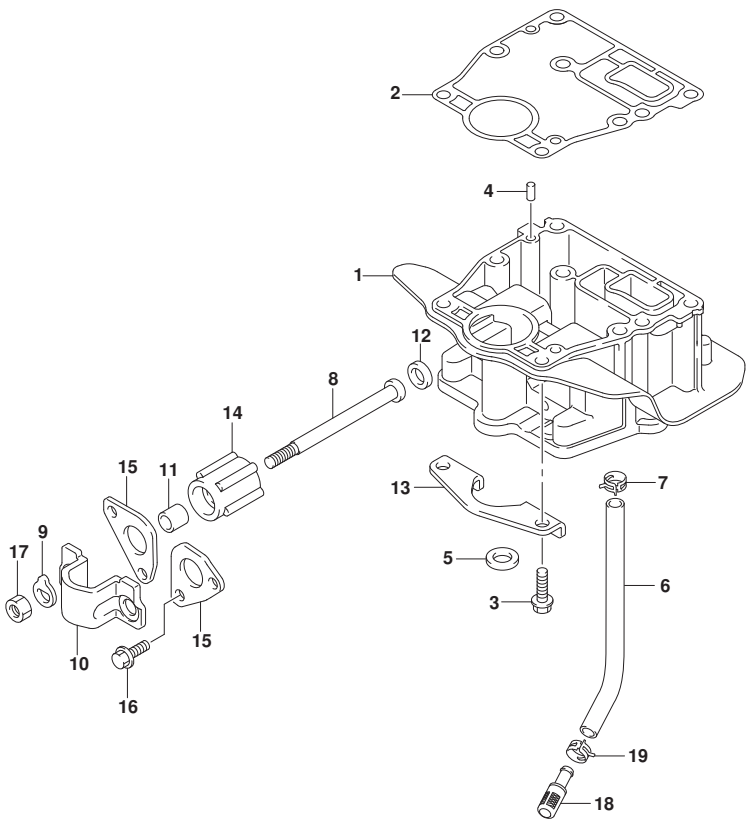


FIG.401A (1-D-11) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	51110-99J00	HOLDER,ENGINE	1	
2	51211-99J00	GASKET,ENGINE HOLDER	1	
3	09116-08151	BOLT (8X30)	2	
4	09202-06023	PIN (6X10)	2	
5	09282-12017	SEAL,OIL (11X24X4.5)	1	
6	16515-99J10	HOSE,OIL	1	
7	09401-12413	CLIP	1	
8	54112-99J01	BOLT,UPPER MOUNT (L:125.5)	2	
9	54113-99JM0	WASHER,UPR MOUNT BOLT	2	
10	54120-99JL0	MOUNT,UPPER THRUST	1	
11	54122-99J00	SPACER,UPPER MOUNT (10.2X16X15)	2	
12	54125-99J00	STOPPER,UPPER REVERSE THRUST	2	
13	54126-99JL0	STOPPER,UPPER THRUST	1	
14	54130-99J00	MOUNT,UPPER	2	UPPER
15	54148-99J00	COVER,UPPER MOUNT	2	
16-1	09116-08137	BOLT (8X22)	4	020
16-2	09116-08148	BOLT (8X22)	4	021,022
17	09140-10031	NUT (M10)	2	
18	16520-99J00	STRAINER,OIL	1	
19	09401-13424	CLIP	1	



FIG.405A


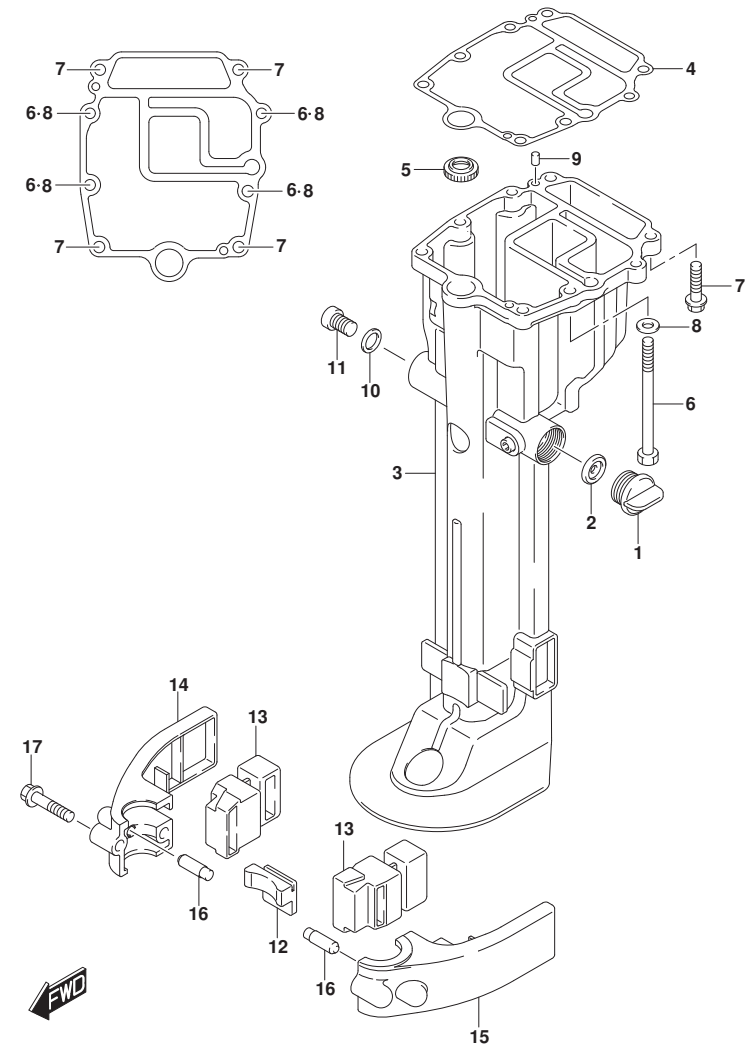


FIG.405A (1-D-12) DRIVE SHAFT HOUSING

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG,WATER	1	
2	17914-93J00	GASKET,WATER PLUG	1	
3-1	52110-99J00-YAY	HOUSING,DRIVE SHAFT (BLACK)	1	S-TRANSOM
3-2	52110-99J10-YAY	HOUSING,DRIVE SHAFT (BLACK)	1	L-TRANSOM
4	52113-99J00	GASKET,DRIVE SHAFT HOUSING	1	
5	57135-99J00	GUIDE,DRIVE SHAFT	1	
6	09100-08312	BOLT (8X105)	4	
7	09116-08151	BOLT (8X30)	4	
8	09160-08082	WASHER (8.5X16X1.2)	4	
9	09202-06023	PIN (6X10)	2	
10	09168-12017	GASKET (12X17X1)	1	
11	09248-12009	PLUG (12X18.65)	1	
12	54151-99J00	MOUNT,LOWER THRUST	1	LOWER
13	54167-99J01	MOUNT,LOWER SIDE	2	LOWER
14	54211-99J01-YAY	COVER,LOWER MOUNT STBD (BLACK)	1	STBD
15	54221-99J01-YAY	COVER,LOWER MOUNT PORT (BLACK)	1	PORT
16	54213-93901	PIN,LOWER MOUNT COVER KNOCK	2	
17	09116-08154	BOLT (8X40)	2	

FIG.407A

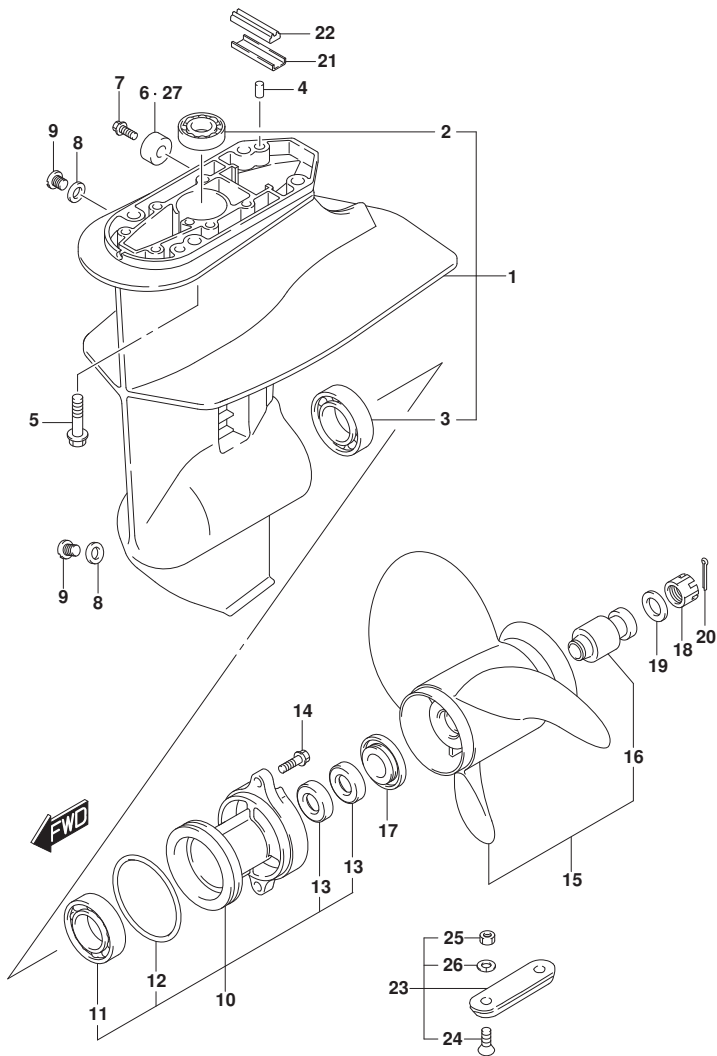

DF8A_P01_022_407A
GEAR CASE

FIG.407A (1-D-13) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-99J40-YAY	CASE ASSY,GEAR (BLACK)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE,PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET,DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10	56120-99J41-YAY	HOUSING,PROP SHAFT BRG (BLACK)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.SEAL,OIL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15-1	58100-89L00-019	PROPELLER (3X9-1/4X7,M701,BLAC K)	1	
15-2	58100-89L20-019	PROPELLER (3X9-1/4X9,M930,BLAC K)	1	
15-3	58100-89L70-019	PROPELLER (3X9-1/4X11,M1101,BL ACK)	1	
15-4	58100-89L60-019	PROPELLER (3X9-1/4X10,M1001,BL ACK)	1	
15-5	58100-90L41-019	PROPELLER (3X9-1/4X8,M821,BLAC K)	1	
15-6	58100-90L50-019	PROPELLER (3X9-1/4X9,M911,BLAC K)	1	
15-7	58100-90L60-019	PROPELLER (3X9-1/4X10,M1011,BL ACK)	1	
16	58120-89L00	.BUSH,PROPELLER	1	
17	57632-94J00	STOPPER,PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE,EXHAUST SEAL	1	
22	55332-99J10	RUBBER,EXHAUST SEAL	1	

DF8A_P01_022

FIG.407A


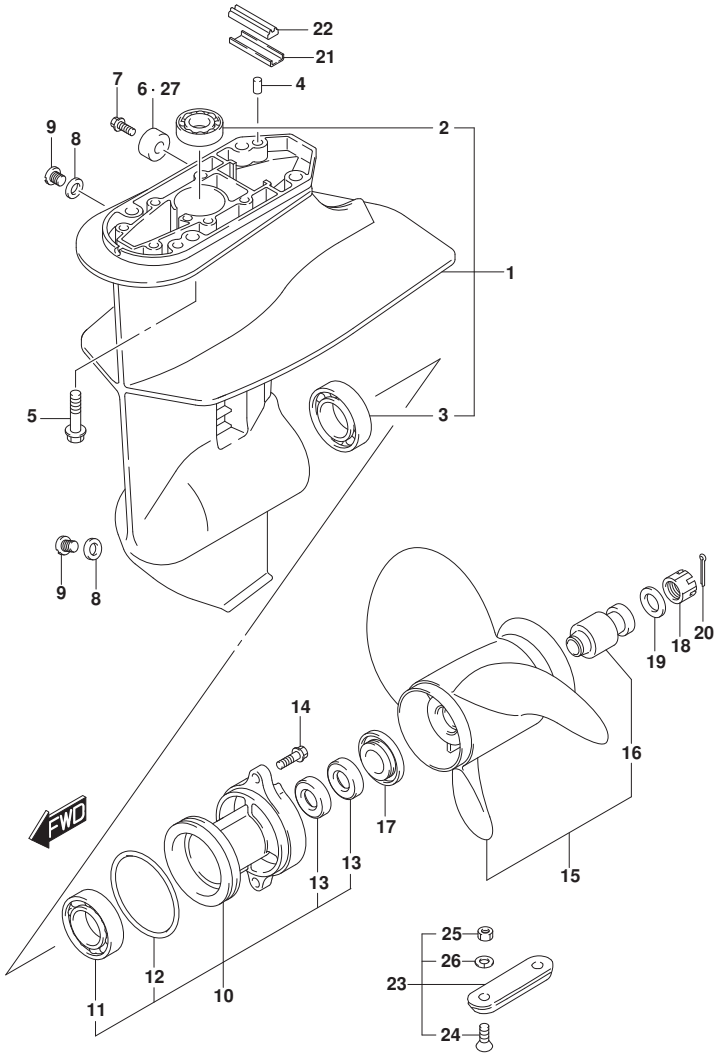


FIG.407A (1-D-14) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
23	55300-95500	ZINC ASSY,PROTECTION	1	OPT	
24	09126-06006	.SCREW (6X20)	2	OPT	
25	29141-93J00	.NUT (M6)	2	OPT	
26	29162-93J00	.WASHER (6.1X12.2X1.5)	2	OPT	
27	55321-87J11	ANODE (MAGNESIUM)	1	OPT	

DF8A_P01_022_410A
SIDE COVER



DF8A_P01_022

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61810-99J02-YAY	COVER,SIDE STBD (BLACK)	1	STBD
2	61155-94500	.TUBE,WATER INSP	1	
3	61820-99J01-YAY	COVER,SIDE PORT (BLACK)	1	PORT
4	09116-06523	BOLT,SIDE COVER (6X35)	8	
5	61112-99J00	RUBBER,SIDE COVER	1	
6	61134-99JL0	SEAL,SIDE COVER	1	
7	61157-99J00	HOSE,WATER INSP	1	
8	09401-08413	CLIP	2	
9	09403-12419	CLAMP	1	
10	61851-93E10	PROTECTOR,SIDE COVER	2	
11	03542-05169	SCREW	4	
12	61831-99J00-YAY	PANEL,INSTRUMENT (BLACK)	1	
13	09116-06230	BOLT (6X25)	2	
14	09169-06075	WASHER	2	
15	09320-09059	CUSHION (9X18X14)	2	
16	09148-06017	NUT	2	
17	02142-0616C	SCREW (6X16)	2	
18	61412-99J00	HOOK,FRONT PANEL	1	
19	61643-99J00	SCREW,HOOK	2	
20	09160-05029	WASHER (5.5X12X0.8)	2	
21	61610-90L00	FASTENER	1	
22	61616-93EL0	PIN,LEVER	1	
23	61642-99J00	HOLDER,FASTENER LEVER	1	
24	09161-04012	WASHER (4.2X11X1)	1	
25	09385-04003	CLIP	1	
26	09116-06223	BOLT (6X12)	1	
27	08310-00067	NUT	1	
28	61124-99J21	GROMMET,CABLE (STBD)	1	STBD
29	61151-99J00	CUSHION,SIDE COVER HOLDER	1	
30	61827-99J00	HOLDER,SIDE COVER	1	M-STARTER
31	02142-0616C	SCREW (6X16)	1	M-STARTER
32	61813-99J01	CUSHION,SIDE COVER REAR	1	
33	36617-93J10	BRACKET,HARNESS	1	
34	17917-87L00	CONNECTOR,FLUSH WATER	1	

FIG.410B

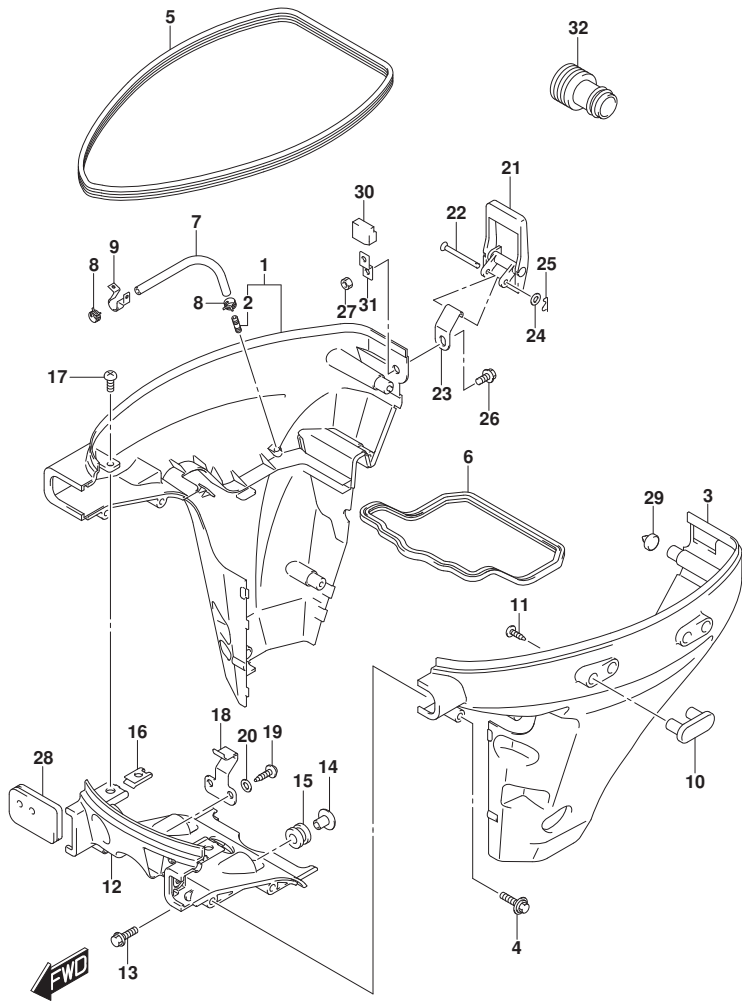


FIG.410B (1-D-16) SIDE COVER (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61810-99J02-YAY	COVER,SIDE STBD (BLACK)	1	STBD
2	61155-94500	.TUBE,WATER INSP	1	
3	61820-99J01-YAY	COVER,SIDE PORT (BLACK)	1	PORT
4	09116-06523	BOLT,SIDE COVER (6X35)	8	
5	61112-99J00	RUBBER,SIDE COVER	1	
6	61134-99JL0	SEAL,SIDE COVER	1	
7	61157-99J00	HOSE,WATER INSP	1	
8	09401-08413	CLIP	2	
9	09403-12419	CLAMP	1	
10	61851-93E10	PROTECTOR,SIDE COVER	2	
11	03542-05169	SCREW	4	
12	61831-99J00-YAY	PANEL,INSTRUMENT (BLACK)	1	
13	09116-06230	BOLT (6X25)	2	
14	09169-06075	WASHER	2	
15	09320-09059	CUSHION (9X18X14)	2	
16	09148-06017	NUT	2	
17	02142-0616C	SCREW (6X16)	2	
18	61412-99J00	HOOK,FRONT PANEL	1	
19	61643-99J00	SCREW,HOOK	2	
20	09160-05029	WASHER (5.5X12X0.8)	2	
21	61610-90L00	FASTENER	1	
22	61616-93EL0	PIN,LEVER	1	
23	61642-99J00	HOLDER,FASTENER LEVER	1	
24	09161-04012	WASHER (4.2X11X1)	1	
25	09385-04003	CLIP	1	
26	09116-06223	BOLT (6X12)	1	
27	08310-00067	NUT	1	
28	61124-99J10	GROMMET,R/CON CABLE (STBD)	1	STBD
29	61151-99J00	CUSHION,SIDE COVER HOLDER	1	
30	61813-99J01	CUSHION,SIDE COVER REAR	1	
31	36617-93J10	BRACKET,HARNESS	1	
32	17917-87L00	CONNECTOR,FLUSH WATER	1	

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61400-99J01-YAY	COVER ASSY,ENGINE (BLACK)	1	
2	61433-99J00	.COVER,AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61631-99J00	.HOOK,ENGINE COVER	1	
5	61413-99J00	.HOOK,ENGINE COVER	1	
6	09229-04025	.RIVET	4	
7	61443-97L01-YAY	STRIPE,ENG COVER STBD (BLACK)	1	STBD
8	61453-97L01-YAY	STRIPE,ENG COVER PORT (BLACK)	1	PORT
9	68111-99J00	EMBLEM,S	1	
10	61435-99J20	MARK,EMBLEM REAR (8)	1	
11	61458-89L30	LABEL,ENGINE COVER	1	
12	59800-99J11	TOOL ASSY	1	
13	99011-99J90-055	MANUAL,OWNER'S	1	

FIG.420B

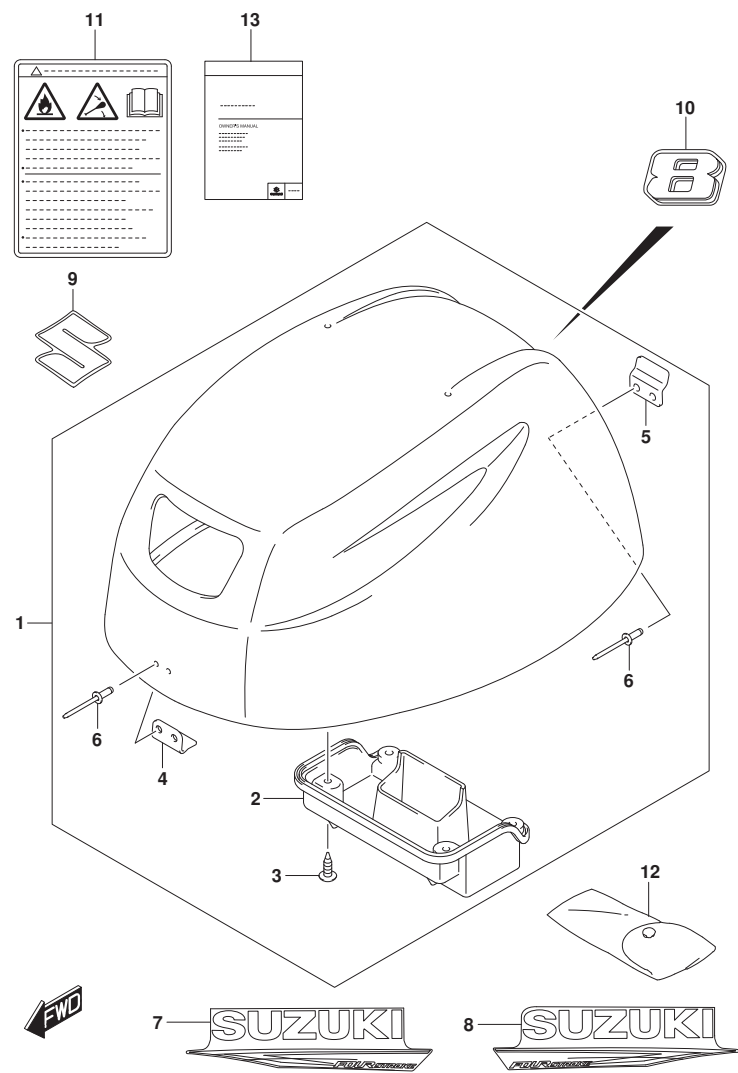


FIG.420B (1-E-3) ENGINE COVER ((DF8A,DF8AR):(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-99J01-YAY	COVER ASSY,ENGINE (BLACK)	1	
2	61433-99J00	.COVER,AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61631-99J00	.HOOK,ENGINE COVER	1	
5	61413-99J00	.HOOK,ENGINE COVER	1	
6	09229-04025	.RIVET	4	
7	61443-89L00-YAY	STRIPE,ENGINE COVER STBD (BLAC K)	1	STBD
8	61453-89L00-YAY	STRIPE,ENGINE COVER PORT (BLAC K)	1	PORT
9	68111-99J00	EMBLEM,S	1	
10	61435-99J30-YAY	MARK,EMBLEM REAR (BLACK)	1	
11	61458-89L30	LABEL,ENGINE COVER	1	
12	59800-99J11	TOOL ASSY	1	
13-1	99011-99J91-055	MANUAL,OWNER'S	1	021
13-2	99011-99JA0-055	MANUAL,OWNER'S	1	022

FIG.420C

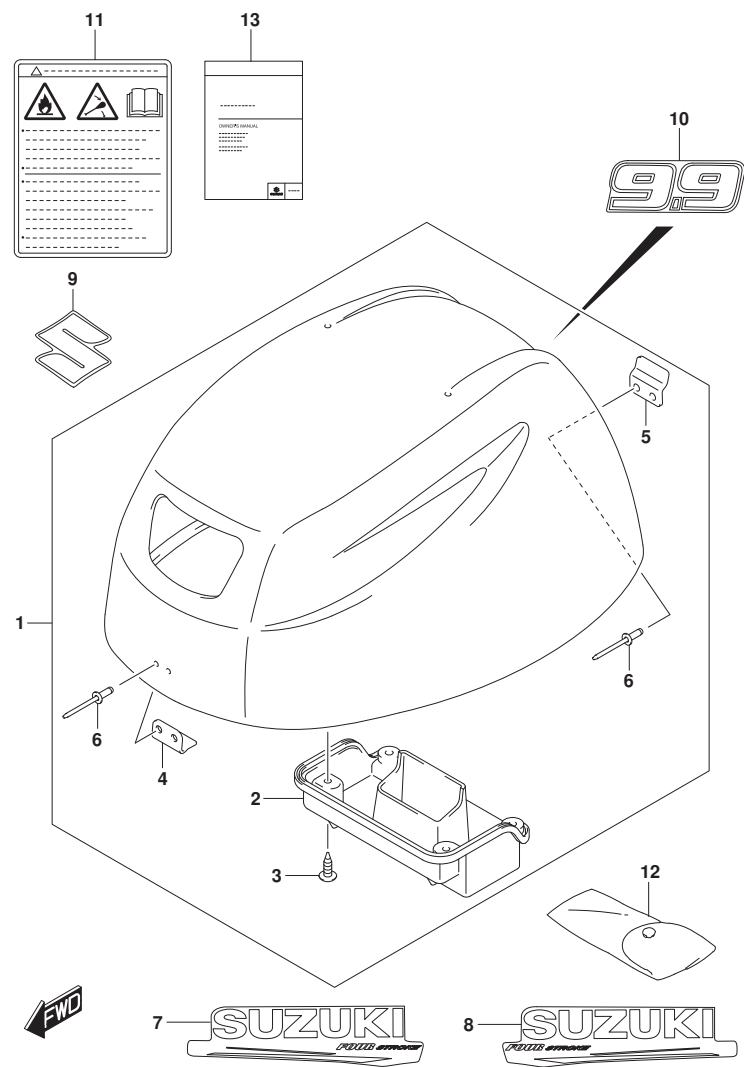


FIG.420C (1-E-4) ENGINE COVER (DF9.9A:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-99J01-YAY	COVER ASSY,ENGINE (BLACK)	1	
2	61433-99J00	.COVER,AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61631-99J00	.HOOK,ENGINE COVER	1	
5	61413-99J00	.HOOK,ENGINE COVER	1	
6	09229-04025	.RIVET	4	
7	61443-97L01-YAY	STRIPE,ENG COVER STBD (BLACK)	1	STBD
8	61453-97L01-YAY	STRIPE,ENG COVER PORT (BLACK)	1	PORT
9	68111-99J00	EMBLEM,S	1	
10	61435-89L10-YAY	MARK,EMBLEM REAR (9.9,BLACK)	1	
11	61458-89L30	LABEL,ENGINE COVER	1	
12	59800-99J11	TOOL ASSY	1	
13	99011-99J90-055	MANUAL,OWNER'S	1	

FIG.420D

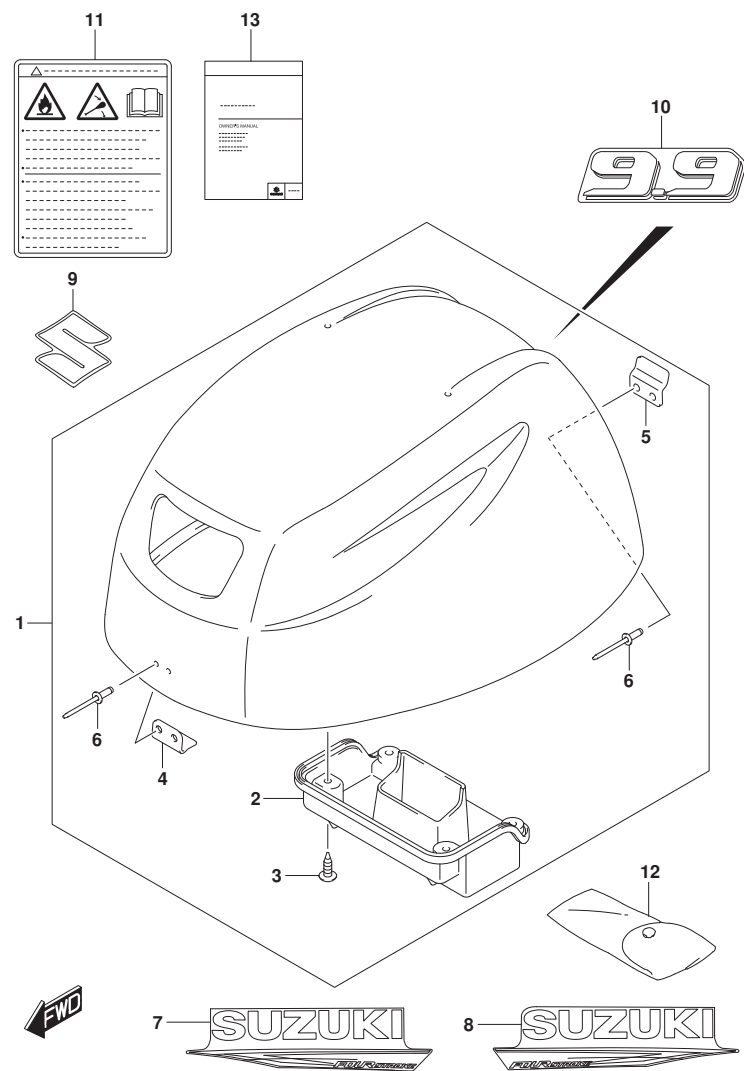


FIG.420D (1-E-5) ENGINE COVER (DF9.9A:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-99J01-YAY	COVER ASSY,ENGINE (BLACK)	1	
2	61433-99J00	.COVER,AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61631-99J00	.HOOK,ENGINE COVER	1	
5	61413-99J00	.HOOK,ENGINE COVER	1	
6	09229-04025	.RIVET	4	
7	61443-89L00-YAY	STRIPE,ENGINE COVER STBD (BLAC K)	1	STBD
8	61453-89L00-YAY	STRIPE,ENGINE COVER PORT (BLAC K)	1	PORT
9	68111-99J00	EMBLEM,S	1	
10	61435-89L40-YAY	MARK,EMBLEM REAR (BLACK)	1	
11	61458-89L30	LABEL,ENGINE COVER	1	
12	59800-99J11	TOOL ASSY	1	
13-1	99011-99J91-055	MANUAL,OWNER'S	1	021
13-2	99011-99JA0-055	MANUAL,OWNER'S	1	022

FIG.432A

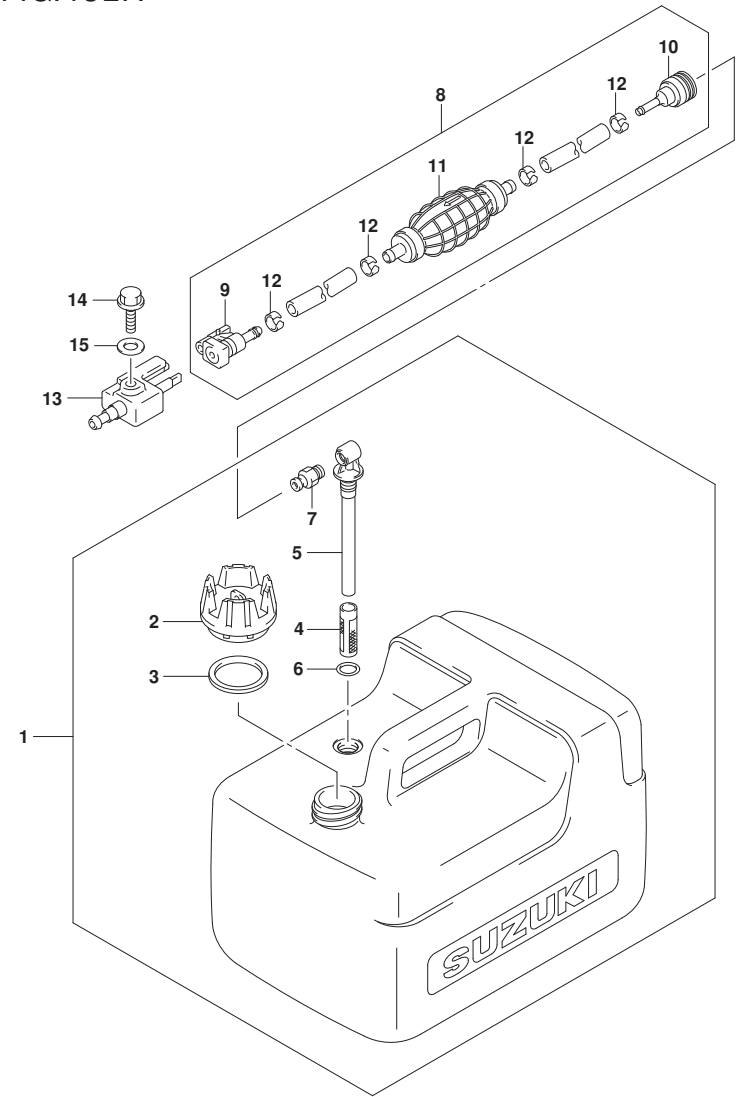


FIG.432A (1-E-6) FUEL TANK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-89L10	TANK ASSY,FUEL SEP (12L)	1	
2	65520-99100	.CAP ASSY,FUEL TANK	1	
3	65561-95D00	.GASKET,TANK CAP	1	
4	65831-95D00	.FILTER,OUTLET	1	
5	65890-99100	.OUTLET ASSY	1	
6	65892-95D00	.O-RING,FUEL OUTLET	1	
7	65740-95D01	.PLUG,FUEL CONNECTOR	1	
8	65700-89L32	HOSE,FUEL	1	
9	65750-87J11	.SOCKET,FUEL HOSE	1	
10	65750-955L1	.SOCKET,FUEL HOSE	1	
11	65770-89L00	.PUMP,SQUEEZE	1	
12	65781-98500	.CLIP,FUEL HOSE	4	
13	65720-986L0	PLUG,FUEL CONNECTOR	1	
14	09103-06237	BOLT (6X12.5)	1	
15	09160-06085	WASHER (6.5X15X1.0)	1	

FIG.442A

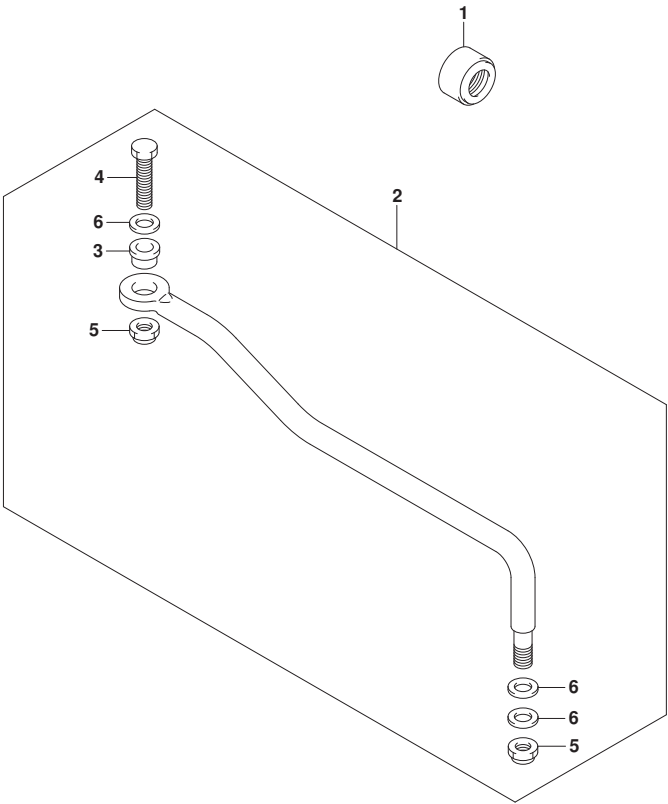


FIG.442A (1-E-7) DRAG LINK (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41161-94400	SEAL,STEERING CABLE	1	
2	67701-99J02	LINK ASSY,DRAG	1	
3	67721-93E10	.SPACER,DRAG LINK	1	
4	67725-96J00	.BOLT,DRAG LINK	1	
5	67726-99E00	.NUT,LOCK	2	
6	67728-99E00	.WASHER	4	

FIG.444A


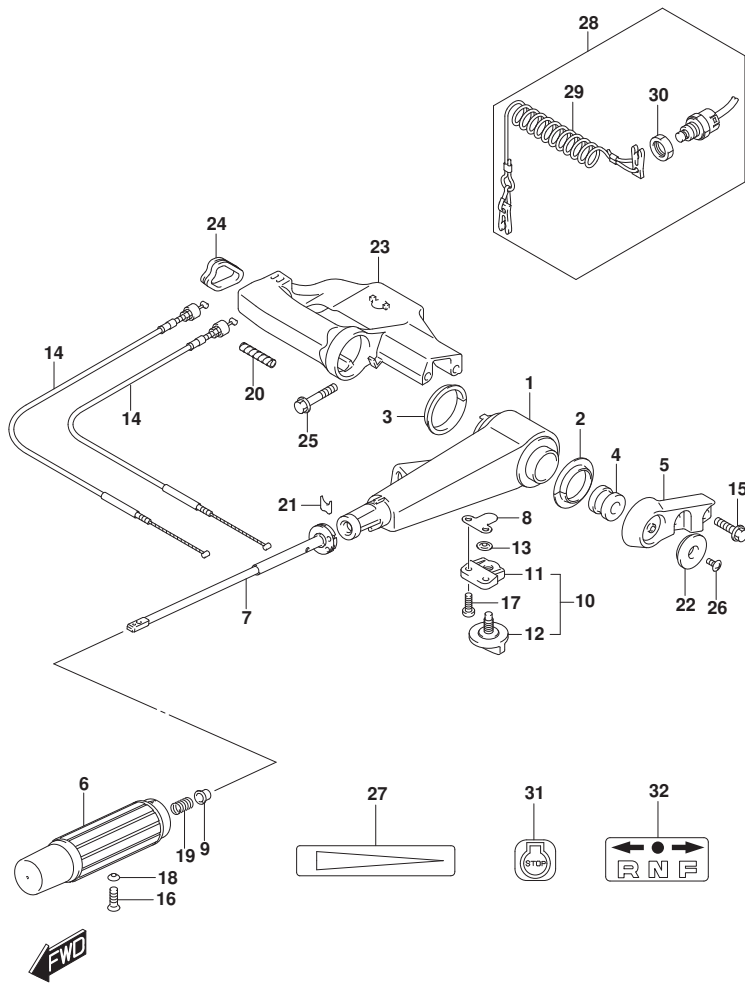


FIG.444A (1-E-8) TILLER HANDLE (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63111-89L01-YAY	HANDLE,TILLER (BLACK)	1	
2	63115-99J10	BUSH,TILLER HANDLE NO.1	1	
3	63115-99J00	BUSH,TILLER HANDLE NO.2	1	
4	63116-99J00	RUBBER,TILLER HANDLE FRICTION	1	
5	63121-99J00-YAY	COVER,TILLER HANDLE (BLACK)	1	
6	63210-89L11	GRIP,HANDLE	1	
7	63220-89L00	ROD,HANDLE	1	
8	63225-98601	PLATE,THROTTLE ADJ	1	
9	63225-93200	BUSH,HANDLE ROD	1	
10	63240-94J20	ADJUSTER SET,HANDLE ROD	1	
11	63241-986C0	.SUPPORT,HANDLE ROD	1	PORT
12	63244-94J10	.KNOB,THROTTLE ADJ	1	
13	09148-06008	NUT (M6)	1	
14	63610-99J00	CABLE ASSY,THROTTLE	2	
15	09116-08151	BOLT (8X30)	2	
16	09126-06015	SCREW (6X23)	1	
17	09136-05041	SCREW (5X20)	2	
18	09163-06001	WASHER,LOCK (6.4X12X0.5)	1	
19	09440-12027	SPRING	1	
20	33833-91J00	TUBE,SWITCH LEAD (L:250)	1	L:250->150
21	63114-99J01	PLATE,WARNING INDICATOR	1	
22	63122-99J00	PROTECTOR,HANDLE COVER	1	
23	63131-99J11-YAY	BRACKET,TILLER HANDLE (BLACK)	1	
24	63133-89L00	GROMMET,TILLER HANDLE BRACKET	1	
25	09116-08155	BOLT (8X45)	2	
26	09125-05145	SCREW (5X10)	1	
27	63215-93110	MARK,HANDLE GRIP	1	
28	37830-99J11	SWITCH ASSY,EMERGENCY & STOP	1	
29	37823-97J00	.PLATE,LOCK	1	
30	37826-97J01	.NUT,EMERGENCY SWITCH	1	
31	37835-91J00-YAY	LABEL,STOP (BLACK)	1	
32	21131-94J00-YAY	MARK,CLUTCH SHIFT (BLACK)	1	

FIG.450A

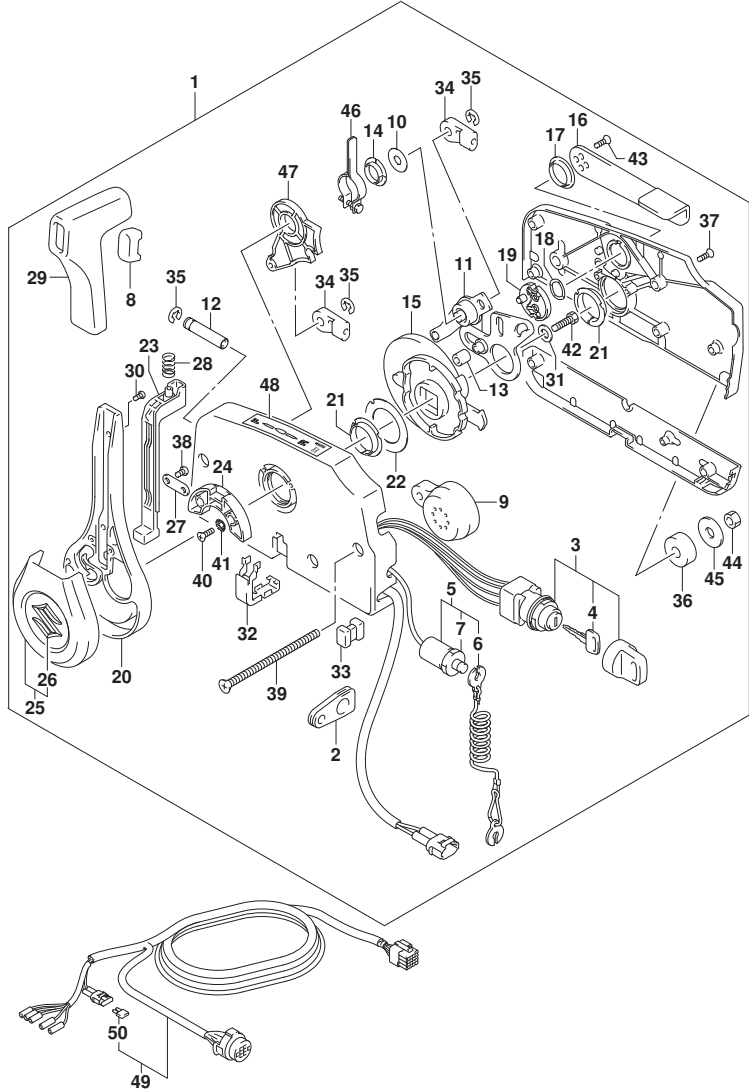


DF8A_P01_022_450A
REMOTE CONTROL

FIG.450A (1-E-9) REMOTE CONTROL (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J40	REMOTE CONTROL ASSY	1	
2	36628-91J00	.GROMMET,WIRING HARNESS	1	
3	37110-94J10	.SWITCH ASSY,IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37820-93J11	.SWITCH ASSY,EMERGENCY	1	
6	37823-92E02	..PLATE ASSY,EMERGENCY SW LOCK	1	
7	37826-92J10	..NUT	1	
8	67263-88L30	.CAP,GRIP SW HOLE	1	
9	38500-93J90	.BUZZER,WARNING	1	
10	67212-95600	.WASHER	1	
11	67220-95630	.PLATE ASSY	1	
12	67223-99E10	.KNOB,BRAKE ADJUST	1	
13	67229-95600	.ROLLER	1	
14	67232-95600	.BUSH	1	
15	67238-87D00	.GEAR,DRIVE	1	
16	67241-99E11	.LEVER,FREE THROTTLE	1	
17	67243-95600	.BUSH	1	
18	67244-95600	.WAVE WASHER	1	
19	67245-95600	.DRUM,FREE THROTTLE	1	
20	67251-96L00	.LEVER,HANDLE	1	
21	67252-95600	.BUSH	2	
22	67253-95600	.WASHER	1	
23	67255-96L00	.NEUTRAL LOCK ARM	1	
24	67256-95600	.HOLDER,NEUTRAL LOCK	1	

FIG.450A

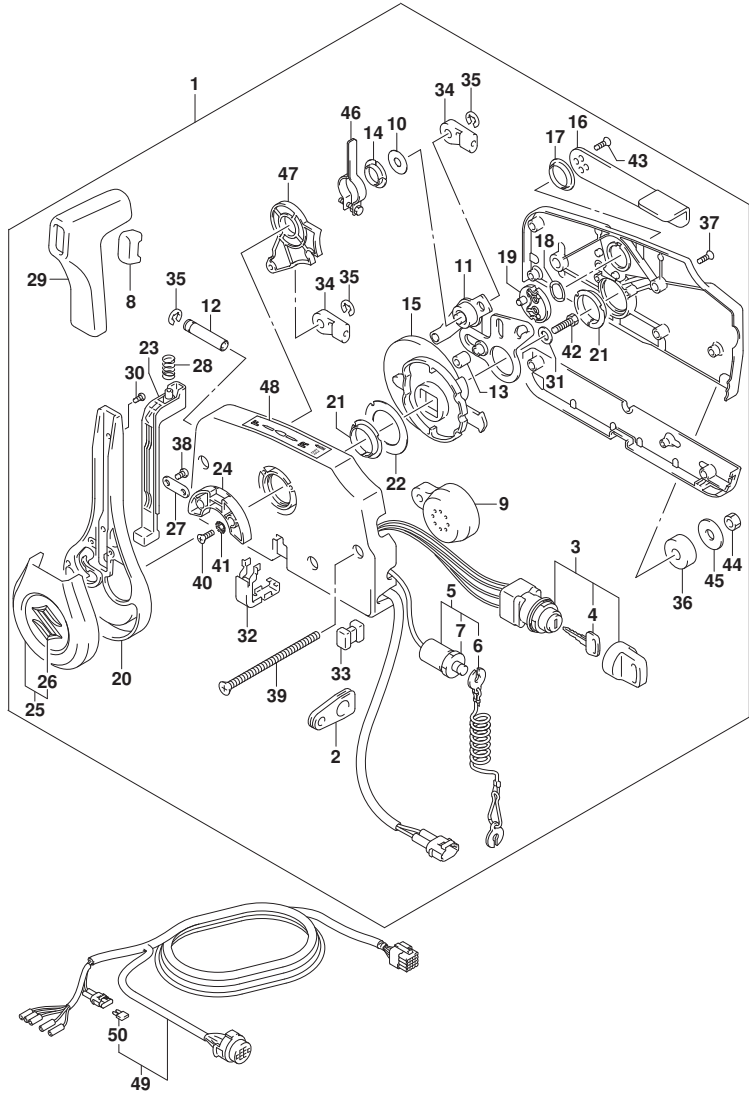

DF8A_P01_022_450A
REMOTE CONTROL

FIG.450A (1-E-10) REMOTE CONTROL (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	67257-96L00	.CAP ASSY,LEVER	1	
26	77811-54GB0-0PG	..EMBLEM,RR MARK S (CHROME)	1	
27	67258-99E00	.BRACKET	1	
28	67259-87D00	.SPRING,NEUTRAL ARM	1	
29	67261-96L00	.GRIP	1	
30	67296-96L10	.SCREW	2	
31	67264-95600	.WASHER	1	
32	67267-96L00	.COVER,WIRE SUB ASSY	1	
33	67273-95601	.SPACER	1	
34	67275-95600	.END,CABLE	2	
35	67292-94300	.E RING	3	
36	67294-95600	.SPACER	3	
37	67296-90J20	.SCREW	5	
38	67296-96L00	.SCREW	2	
39	67296-95630	.SCREW	3	
40	67296-95610	.SCREW	2	
41	67297-95600	.WASHER	2	
42	09100-08232	.BOLT (8X30)	1	
43	67269-96L10	.SCREW (5X12)	2	
44	09140-06020	.NUT	3	
45	67288-94320	.WAHSER (6.5X24X2)	3	
46	67224-96L00	.ARM,BRAKE ASSY	1	
47	67238-96L00	.GEAR,SHIFT ASSY	1	
48	67284-94L10	.MARK,HANDLE LEVER	1	
49	36620-89L10	WIRE ASSY,REMOTE CONTROL	1	
50	09481-10501	.FUSE (10A)	1	

DF8A_P01_022

FIG.454A

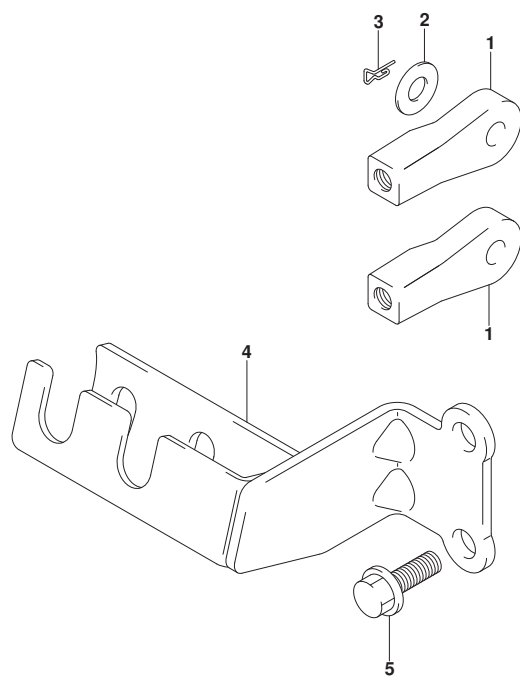


FIG.454A (1-E-11) REMOCON CABLE HOLDER (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67467-89J01	CONNECTOR	2	
2	09160-06055	WASHER (7X12X1.0)	2	
3	09385-06016	CLIP,R/CON CABLE CONNECTOR	2	
4	67340-99J00	HOLDER,R/CON CABLE	1	
5	01550-0616C	BOLT (6X16)	2	



FIG.501A

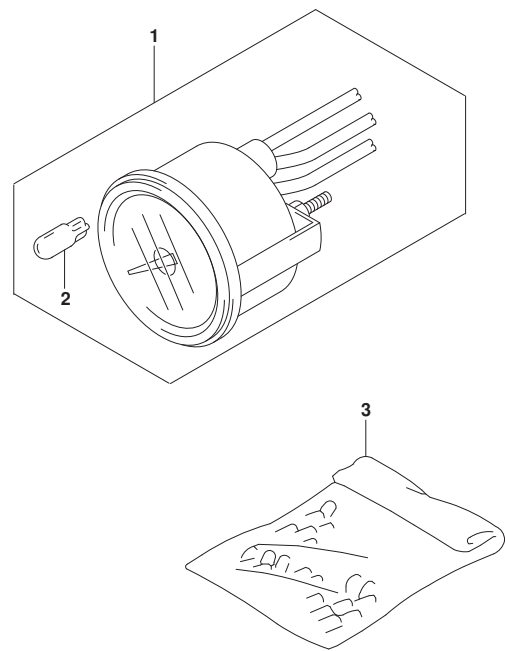


FIG.501A (1-E-12) OPT:METER (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34200-93J22	TACHOMETER ASSY,BLACK	1	BLACK
1-2	34200-93J34	TACHOMETER ASSY,WHITE	1	WHITE
2	09471-12028	.BULB (12V3.4W,T10)	1	
3	36990-87D00	TERMINAL & SLEEVE SET	1	

FIG.513A

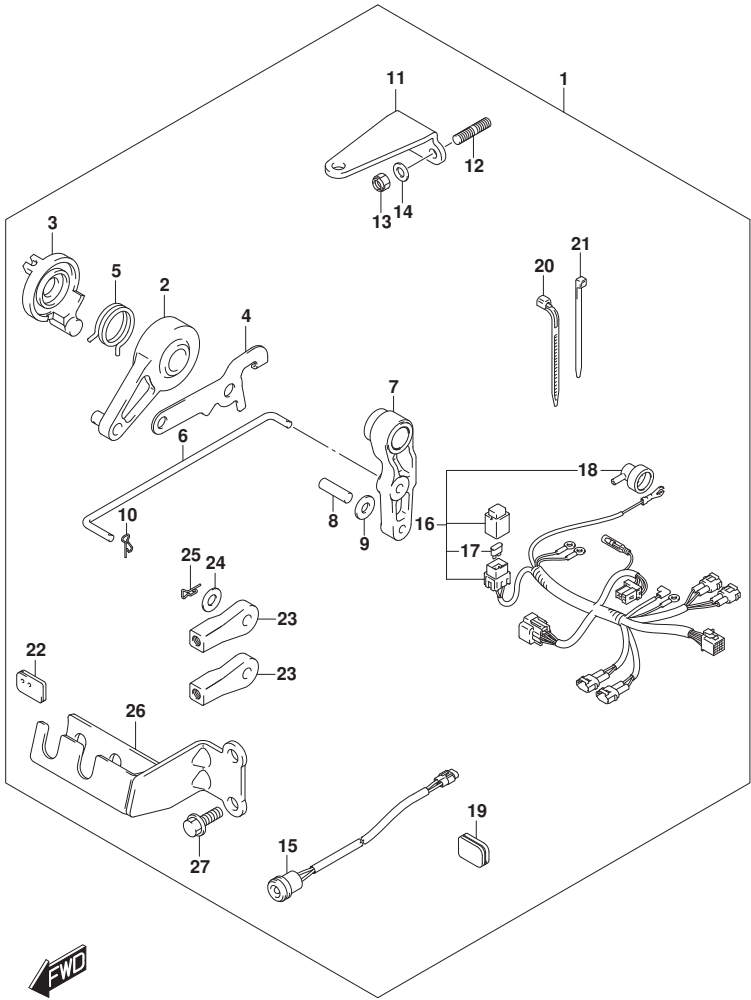


FIG.513A (1-E-13) OPT:REMOTE CONTROL PARTS (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-99J02	PARTS SET,REMOCON	1	
2	19120-99J11	.LEVER,THROTTLE CONTROL	1	
3	19122-99J00	.LEVER,INTERLINK THROTTLE NO.2	1	
4	19184-99J10	.PLATE,THROTTLE LINK	1	
5	19185-99J00	.SPRING,THROTTLE LEVER	1	
6	21241-99J00	.LINK,CLUTCH LEVER	1	
7	23210-99J00	.LEVER,CLUTCH CONTROL	1	
8	09204-01002	.PIN	1	
9	09160-05029	.WASHER (5.5X12X0.8)	2	
10	09385-04003	.CLIP	1	
11	43755-99J00	.ATTACHMENT,STEERING BRACKET	1	
12	09108-08286	.BOLT,STUD	2	
13	09159-08059	.NUT (M8)	2	
14	09160-08082	.WASHER (8.5X16X1.2)	2	
15	36360-99J10	.INDICATOR,OIL PRESSURE	1	
16	36610-99J21	.HARNES ASSY,WIRING	1	
17	09481-20501	..FUSE (20A)	1	
18	36618-43410	..CAP,OIL PRESSURE SWITCH (40X 70)	1	
19	36656-99J10	.GROMMET,CABLE	1	PORT
20	09407-14403	.CLAMP (L:125)	1	
21	09407-14407	.CLAMP (L:145)	1	
22	61124-99J10	.GROMMET,R/CON CABLE (STBD)	1	STBD
23	67467-89J01	.CONNECTOR	2	
24	09160-06055	.WASHER (7X12X1.0)	2	
25	09385-06012	.CLIP	2	
26	67340-99J00	.HOLDER,R/CON CABLE	1	
27	01550-06167	.BOLT (6X16)	2	

FIG.515A

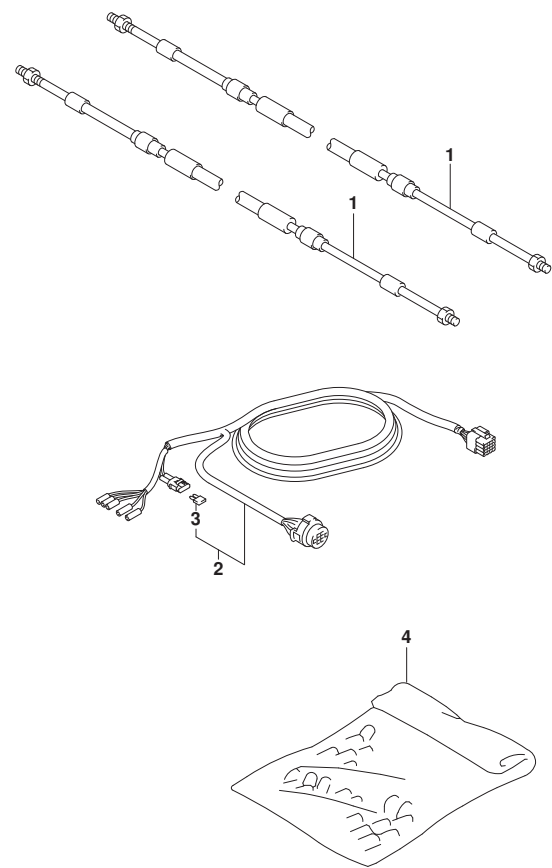


FIG.515A (1-E-14) OPT:REMOCON CABLE (DF8A,DF9.9A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	67320-93J00	CABLE ASSY,REMOCON (2.4M)	2	
1-2	67320-93J10	CABLE ASSY,REMOCON (3.1M)	2	
1-3	67320-93J20	CABLE ASSY,REMOCON (3.7M)	2	
1-4	67320-93J30	CABLE ASSY,REMOCON (4.2M)	2	
1-5	67320-93J40	CABLE ASSY,REMOCON (4.8M)	2	
1-6	67320-93J50	CABLE ASSY,REMOCON (5.4M)	2	
1-7	67320-93J60	CABLE ASSY,REMOCON (6.1M)	2	
1-8	67320-93J70	CABLE ASSY,REMOCON (6.7M)	2	
1-9	67320-93J80	CABLE ASSY,REMOCON (7.3M)	2	
2	36620-94J01	WIRE ASSY,REMOTE CONTROL (L:50 00)	1	E-STARTER
3	09481-10501	.FUSE (10A)	1	E-STARTER
4	36990-87D00	TERMINAL & SLEEVE SET	1	E-STARTER

FIG.515B

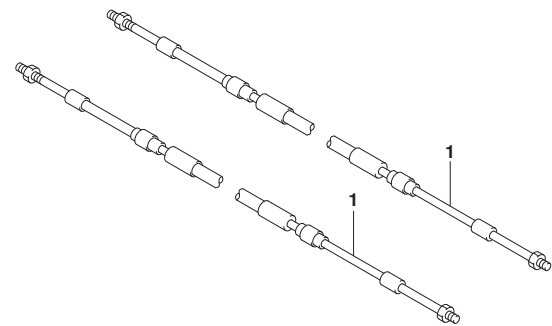


FIG.515B (1-E-15) OPT:REMOCON CABLE (DF8AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	67320-93J00	CABLE ASSY,REMOCON (2.4M)	2	
1-2	67320-93J10	CABLE ASSY,REMOCON (3.1M)	2	
1-3	67320-93J20	CABLE ASSY,REMOCON (3.7M)	2	
1-4	67320-93J30	CABLE ASSY,REMOCON (4.2M)	2	
1-5	67320-93J40	CABLE ASSY,REMOCON (4.8M)	2	
1-6	67320-93J50	CABLE ASSY,REMOCON (5.4M)	2	
1-7	67320-93J60	CABLE ASSY,REMOCON (6.1M)	2	
1-8	67320-93J70	CABLE ASSY,REMOCON (6.7M)	2	
1-9	67320-93J80	CABLE ASSY,REMOCON (7.3M)	2	

FIG.544A


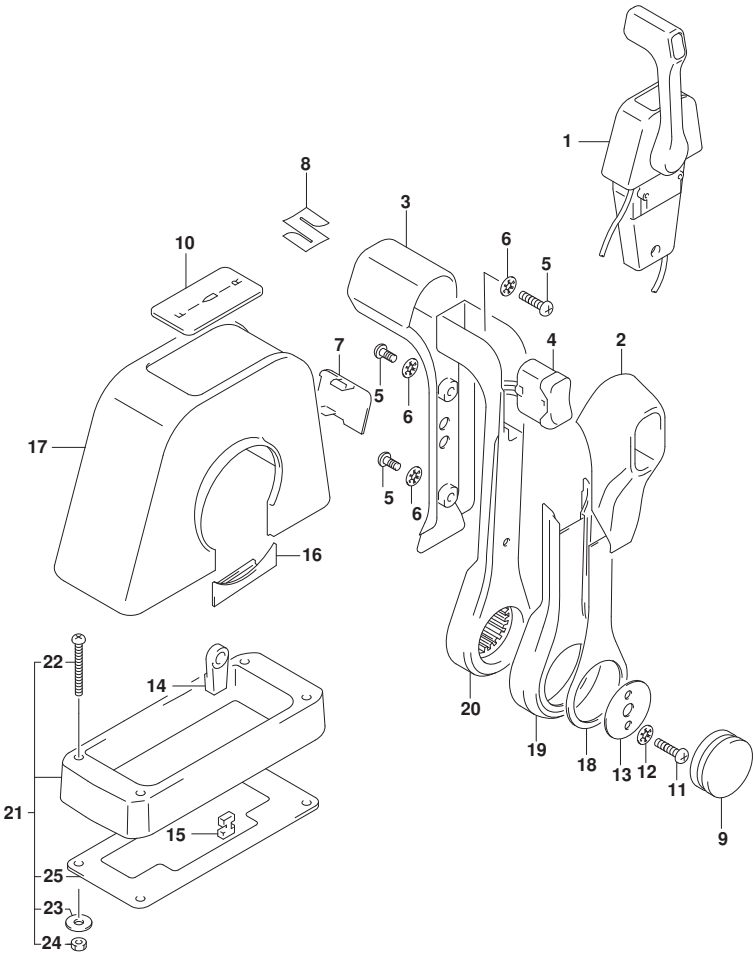


FIG.544A (1-E-16) OPT:REMOTE CONTROL ASSY SINGLE (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY,SINGLE	1	
2	67261-88L10	.GRIP,REMOCON NO.2	1	
3	67261-88L00	.GRIP,REMOCON NO.1	1	
4	37850-88L00	.SWITCH ASSY,GRIP PTT	1	
5	67296-88L00	.SCREW	3	
6	67288-92E20	.WASHER	3	
7	67212-88L00	.COVER,PLUG	1	
8	68111-88L00	.EMBLEM,MARK	1	
9	67257-88L00	.CAP,REMOCON LEVER	1	
10	67281-88L00	.DECAL	1	
11	67296-92E60	.SCREW	2	
12	67288-92E60	.WASHER	2	
13	67253-92E00	.WASHER	1	
14	67275-95600	.END,CABLE	2	
15	67273-95601	.SPACER	1	
16	67271-88L10	.COVER,REMOCON LEVER LOWER	1	LOWER
17	67211-88L00	.COVER	1	
18	67264-88L00	.COVER,LEVER DESIGN	1	
19	67264-88L10	.COVER,LEVER PLATING	1	
20	67251-88L00	.LEVER,HANDLE	1	
21	67500-88L00	KIT,R/CON SPACER SINGLE	1	
22	09125-05135	.SCREW (5X65)	4	
23	09160-05029	.WASHER (5.5X12X0.8)	4	
24	09140-05005	.NUT (M5)	4	
25	67273-88L00	.GROMMET,R/CON SINGLE	1	

FIG.545A

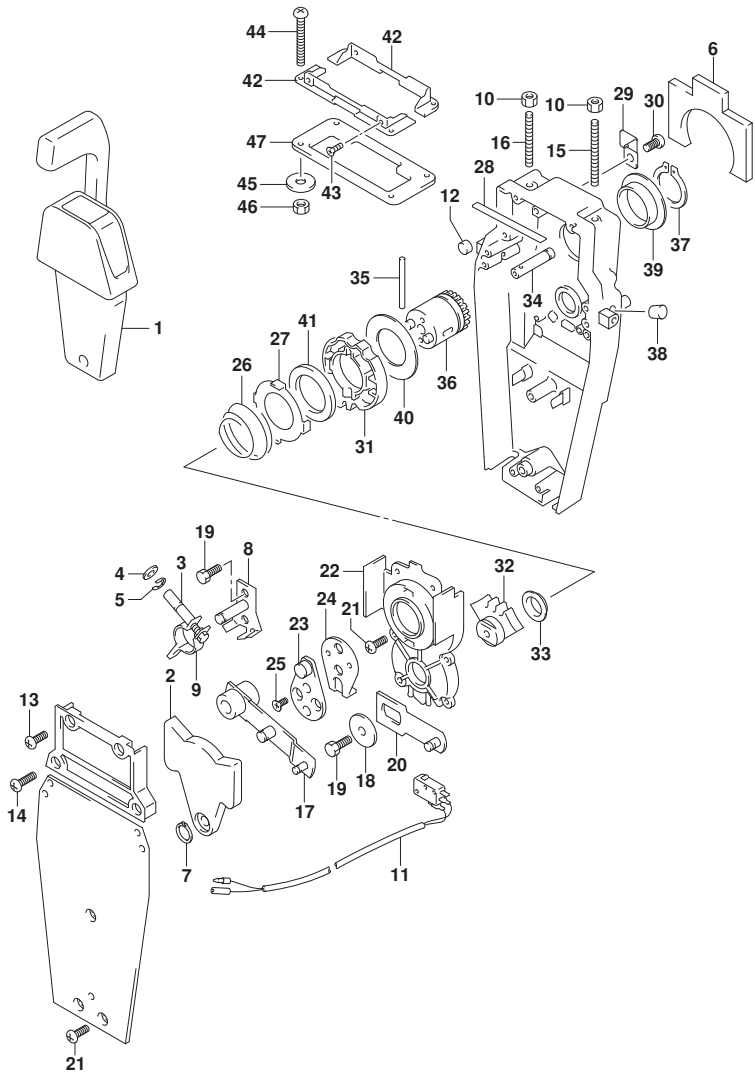

DF8A_P01_022_545A
OPT:REMOTE CONTROL ASSY SINGLE (2)

FIG.545A (1-F-2) OPT:REMOTE CONTROL ASSY SINGLE (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY,SINGLE	1	
2	67222-92E00	.DUEL PLATE	1	
3	67223-92E00	.BRAKE ADJUST	1	
4	67288-92E00	.WASHER	1	
5	67292-94300	.E RING	4	
6	67272-88L00	.GOM SEAL,WATERPROOF	1	
7	67291-92E00	.SNAP RING	1	
8	67221-92E00	.SHIFT ASSY	1	
9	67224-92E00	.BRAKE ARM ASSY	1	
10	09140-06020	.NUT	2	
11	37721-88L01	.SWITCH ASSY,NEUTRAL	1	
12	67236-92E00	.ROLLER	1	
13	67296-88D10	.SCREW (5X16)	2	
14	67296-92E20	.SCREW (5X25)	2	
15	67226-92E00	.BOLT,STOPPER	1	
16	67226-92E10	.BOLT,STOPPER (REAR)	1	
17	67240-92E00	.THROTTLE ARM ASSY	1	
18	67228-92E00	.WASHER	1	
19	67286-92E00	.BOLT (6X18)	3	
20	67230-88L00	ARM ASSY,REMOCON SHIFT	1	
21	09125-05042	.SCREW (5X10)	10	
22	67234-88L00	.CASE,REMOCON GEAR	1	
23	67245-92E00	.LEVER ASSY,THROTTLE	1	
24	67227-92E00	.STOPPER	1	
25	09126-06006	.SCREW (6X20)	2	
26	67233-92E00	.SPRING	1	
27	67235-92E00	.PLATE,SHIFT LOCK	1	
28	67237-92E01	.SPRING	5	
29	67269-92E01	.BRACKET	1	
30	67296-88D10	.SCREW (5X16)	1	
31	67238-88L00	.GEAR,REMOCON DRIVE	1	
32	67231-88L00	.GEAR,REMOCON SHIFT	1	
33	67232-88L00	.BUSH,SHIFT GEAR	1	
34	67241-88L00	.ROD,REMOCON FREE ACCEL	1	
35	67239-92E00	.PIN	1	

DF8A_P01_022

FIG.545A

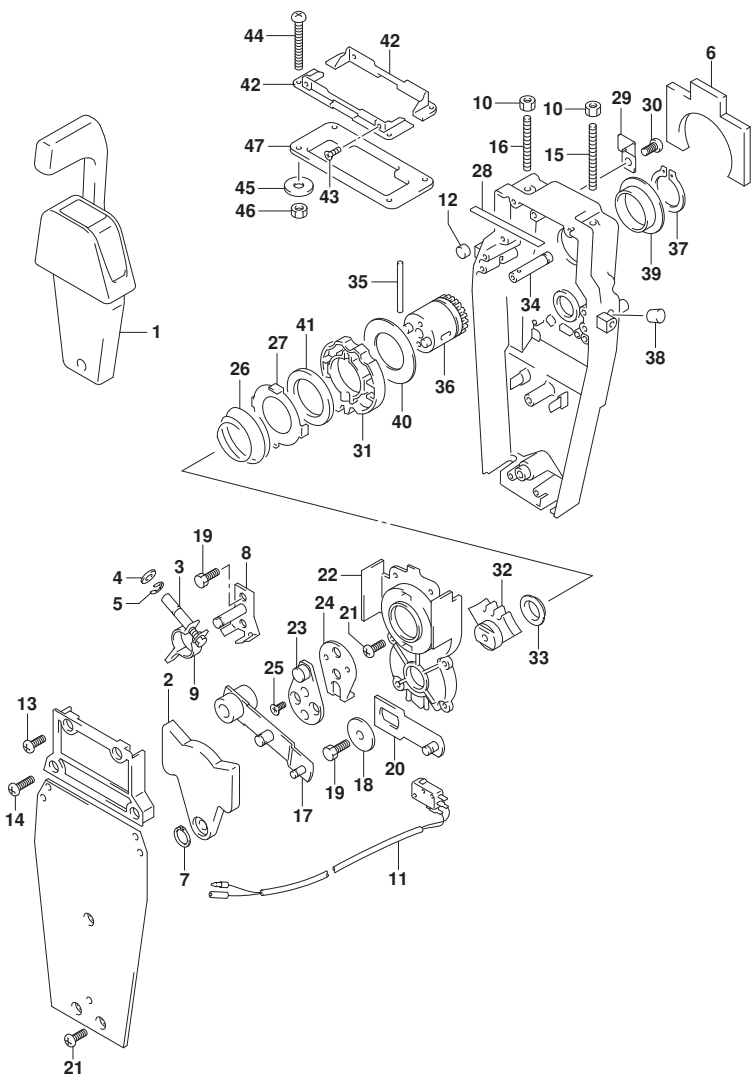


FIG.545A (1-F-3) OPT:REMOTE CONTROL ASSY SINGLE (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
36	67246-88L00	.SHAFT,REMOCON DRIVE	1	
37	67291-92E10	.SNAP RING	1	
38	67243-92E00	.CAP,HOLE	1	
39	67252-88L00	.BUSH,REMOCON DRIVE SHAFT	1	
40	67253-88L00	.WASHER,REMOCON DRIVE SHAFT	1	
41	67239-92E10	.PLATE,SHIFT PIN	1	
42	67274-88L00	.FLANGE,COVER BASE	2	
43	67296-95610	.SCREW	4	
44	67296-92E30	.SCREW	4	
45	09160-05024	.WASHER (5.5X16X1.5)	4	
46	67287-92E00	.NUT (M5)	4	
47	67273-88L00	.GROMMET,R/CON SINGLE	1	

FIG.553A

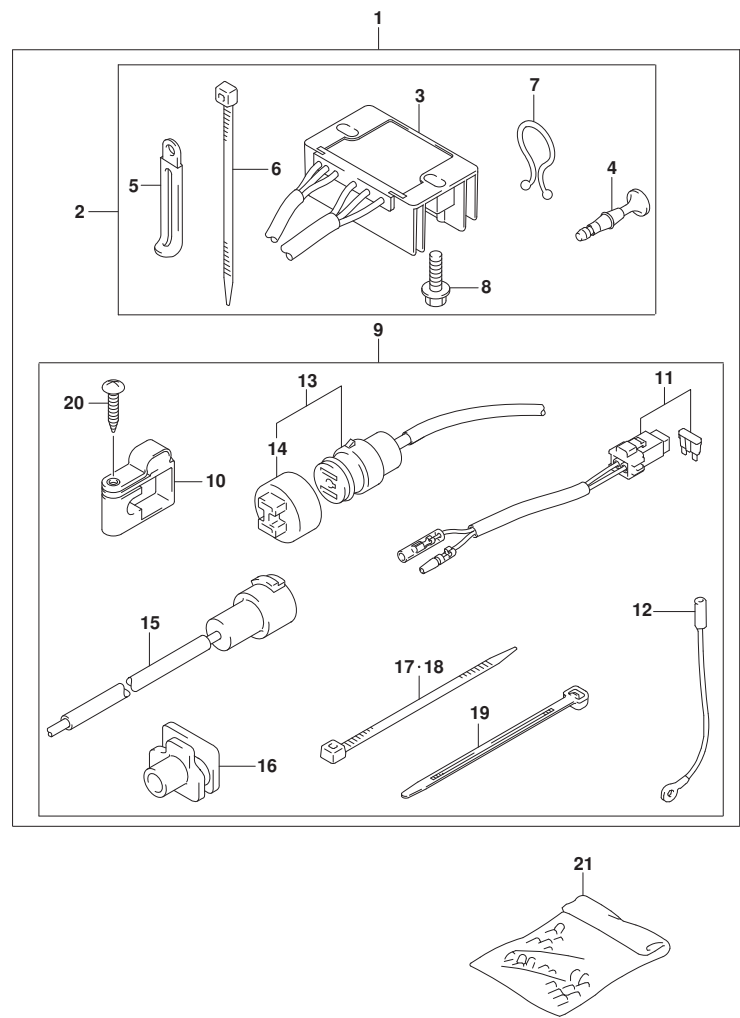


FIG.553A (1-F-4) OPT:ELECTRICAL (MANUAL STARTER) (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32000-99J03	KIT,BATTERY CHARGING	1	
2	32801-95J03	..RECTIFIER & REGULATOR SET	1	
3	32800-95J01	..RECTIFIER & REGULATOR ASSY	1	
4	36615-96300	..TERMINAL	2	
5	29404-93J11	..CLAMP (L:65)	1	
6	09407-10404	..CLAMP (L:100)	1	
7	09408-00024	..CLIP (ID:23)	1	
8	01550-06257	..BOLT (6X25)	2	
9	39600-94J03	..RECEPTACLE SET	1	
10	33816-94J01	..CLAMP,CABLE	1	
11	36740-94J00	..CASE ASSY,FUSE	1	
12	37801-98301	..LEAD,STOP SWITCH	1	
13	39601-95D01	..RECEPTACLE	1	
14	36634-93910	...CAP	1	
15	39602-93900	..PLUG ASSY,LAMP CORD	1	
16	39603-94401	..GROMMET,RECEPTACLEE	1	
17	09407-10404	..CLAMP (L:100)	1	
18	09407-25402	..CLAMP (L:250)	1	
19	09407-14403	..CLAMP (L:125)	2	
20	03241-0625A	..SCREW	1	
21	36990-87D00	TERMINAL & SLEEVE SET	1	

NOTE 1:
(DF8A,DF9.9A):M-STARTER

FIG.561A

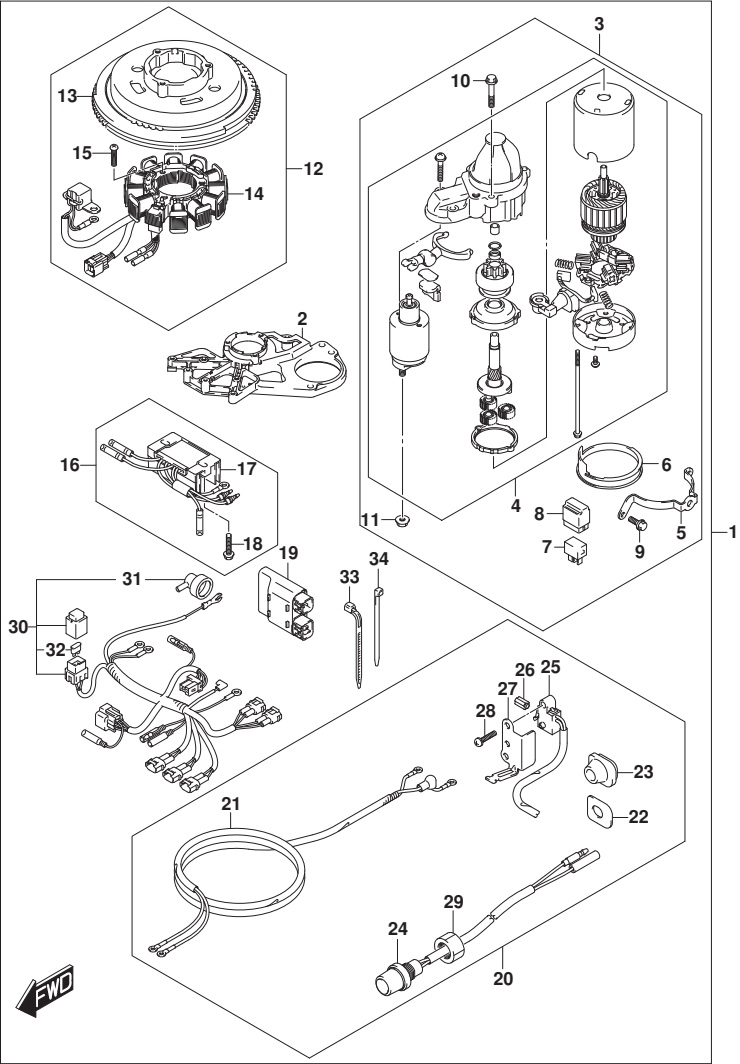


FIG.561A (1-F-5) OPT:STARTING MOTOR (MANUAL STARTER) (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31000-99J11	STARTER SET,ELECTRIC	1	
2	12625-99J00	..BASE,STATOR	1	
3	31101-99J10	..MOTOR SET,STARTER	1	
4	31100-89L00	..MOTOR ASSY,STARTING	1	
5	31912-99J00	..BAND,STARTER MOTOR	1	
6	31918-92J01	..DAMPER,LOWER	1	
7	38860-76F01	..RELAY ASSY	1	
8	38915-90J00	..HOLDER,RELAY	1	
9	01550-06167	..BOLT (6X16)	2	
10	01550-08257	..BOLT (8X25)	2	
11	08316-10087	..NUT	1	
12	32104-99J00	..MAGNETO SET	1	
13	32102-99J00	..FLYWHEEL,MAGNETO	1	
14	32120-99J00	..COIL,STATOR & PULSER	1	
15	09125-06035	..SCREW (6X25)	3	
16	32801-99J01	..RECTIFIER & REGULATOR SET	1	
17	32800-99J00	..RECTIFIER & REGULATOR ASSY	1	
18	01550-06257	..BOLT (6X25)	2	
19	32900-99J00	..UNIT,CDI	1	
20	33800-99J02	..CABLE SET,STARTER	1	
21	33810-99J00	..CABLE,STARTER	1	
22	36655-99J00	..PLATE,CABLE GROMMET	1	
23	36656-99J21	..GROMMET,CABLE	1	PORT
24	37161-89E13	..SWITCH,START	1	
25	37721-99J10	..SWITCH ASSY,NEUTRAL	1	
26	37724-99J00	..ROD,SWITCH PUSH	1	
27	37726-99J10	..BRACKET,NEUTRAL SWITCH	1	
28	09137-04004	..SCREW (4X16)	2	
29	09159-14032	..NUT	1	
30	36610-99J01	..HARNESS ASSY,WIRING	1	
31	36618-43410	..CAP,OIL PRESSURE SWITCH (40X 70)	1	
32	09481-20501	..FUSE (20A)	1	
33	09407-14403	..CLAMP (L:125)	2	
34	09407-14407	..CLAMP (L:145)	4	

FIG.561A

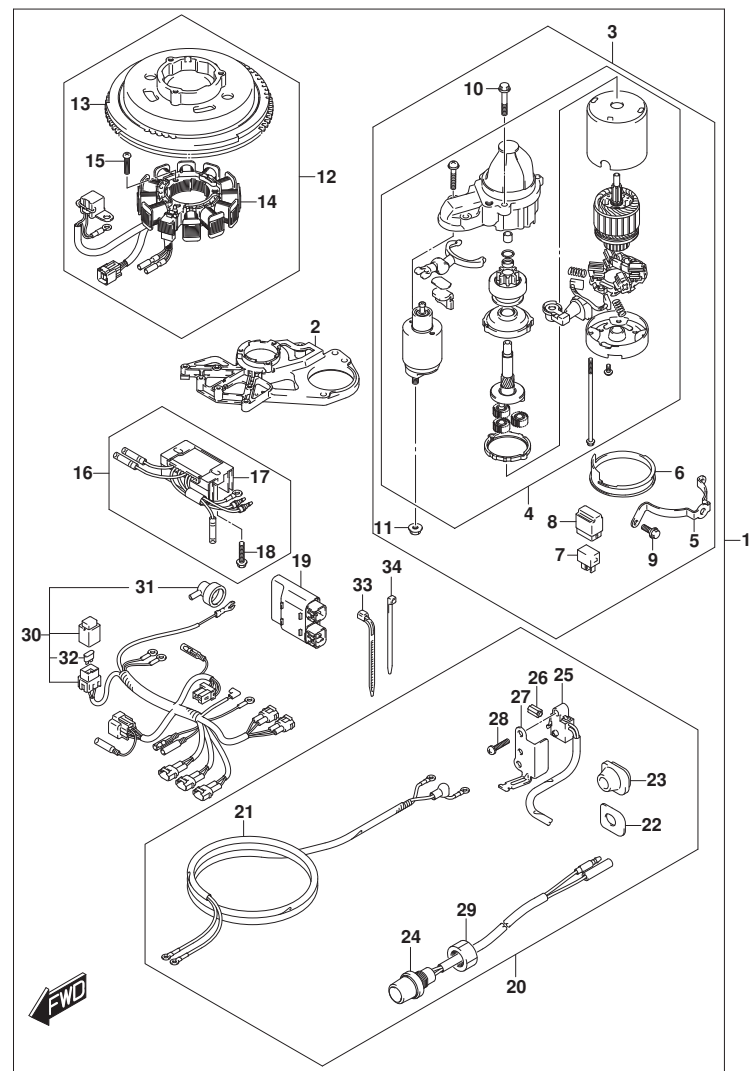


FIG.561A (1-F-6) OPT:STARTING MOTOR (MANUAL STARTER) (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
---------	----------	-------------	------	---------

NOTE 1:
(DF8A,DF9.9A):M-STARTER

FIG.583A

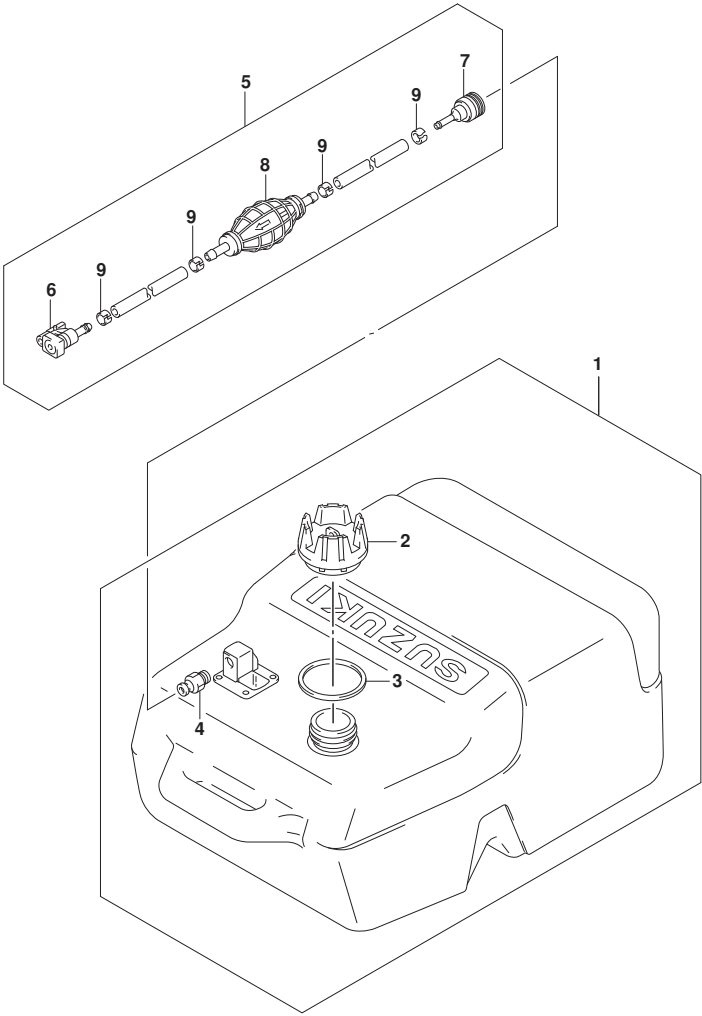


FIG.583A (1-F-7) OPT:FUEL TANK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-94L10	TANK ASSY,FUEL (25L)	1	
2	65520-99100	.CAP ASSY,FUEL TANK	1	
3	65561-95D00	.GASKET,TANK CAP	1	
4	65740-95D01	.PLUG,FUEL CONNECTOR	1	
5	65700-87J19	HOSE,FUEL	1	
6	65750-87J11	.SOCKET,FUEL HOSE	1	
7	65750-95501	.SOCKET,FUEL HOSE	1	
8	65770-90J13	.PUMP,SQUEEZE	1	
9	65781-98500	.CLIP,FUEL HOSE	4	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		120B-16		128B-8	
		12840-99J00	121A-3	128C-8	
			121B-3	128A-6	
		12842-49201	121A-4	128B-6	
			121B-4	128C-6	
11110-99J10	111A-1	12843-27A00	121A-5	128A-15	
11115-94L00-001	111A-23		121B-5	128B-15	
11118-99JL0	111A-3	12843-99J00	121A-6	128C-15	
11119-99JL0	111A-4		121B-6	128A-10	
11141-99J00	111A-2	12861-99JL0	121A-7	128B-10	
11170-99J00	111A-16		121B-7	128C-10	
11173-99J00	111A-20	12891-99J00	121A-8	128A-13	
11178-99J00	111A-17		121B-8	128B-13	
11196-99J01	111A-19	12911-99J10	121A-10	128C-13	
11197-99J01	162A-4		121B-10	128A-17	
11216-90J00	111A-6	12915-99J10	121A-11	128B-17	
11261-93J00	111A-8		121B-11	128C-17	
11291-91B50	162A-7	12921-99J00	121A-12	128A-16	
11301-99J20	113A-1		121B-12	128B-16	
11382-93E00	111A-13	12931-78G00	121A-13	128C-16	
12100-99JL0-050	116A-10		121B-13	128A-29	
12111-99JL0-0B0	116A-1	12932-50MA0	121A-14	128B-23	
12140-99J00	116A-2		121B-14	128C-36	
12151-99JL0	116A-3	12933-71C00	121A-15	128A-19	
12160-99JL1	116A-5		121B-15	128B-19	
12163-99JL1	116A-6	13111-99J00	126A-1	128C-22	
12220-99JL0	116A-7	13119-99J00	126A-2	128A-18	
12341-99J00	116A-8	13124-99J00	128A-32	128B-18	
12625-99J00	120A-11-1		128B-26	128C-21	
	120B-11		128C-39	128A-26	
12625-99J10	561A-2	13125-99J00	128A-31	128C-29	
12631-99JM0	120A-11-2		128B-25	128A-21	
	120A-1		128C-38	128C-24	
	120B-1	13200-99J00	128A-1-1	128A-22	
12635-99J00	120A-2	13200-99J11	128A-1-2	128C-25	
	120B-2		128B-1	128A-23	
12636-99J00	120A-3	13200-99J20	128C-1-1	128C-26	
	120B-3	13200-99J30	128C-1-2	128A-24	
12637-99J00	120A-4	13236-99J00	128A-2	128C-27	
	120B-4		128B-2	128A-25	
12638-99J00	120A-5	13236-99J20	128C-2	128C-28	
	120B-5	13239-94J00	128A-5	128A-20	
12700-99JL1	121A-1-1		128B-5	128A-27	
12711-99JM1	121A-1-2		128C-5	128B-20	
	121B-1	13240-99J00	128A-14-1	128B-21	
12741-99JL0	120A-6	13240-99J10	128A-14-2	128C-23	
	120B-6		128B-14	128C-31	
12761-99J00	120A-16	13240-99J20	128C-14-1	128C-32	
	120B-15	13240-99J30	128C-14-2	128A-28	
12764-99J00	120A-17	13247-94J00	128A-8	128B-22	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
13370-94J00	128A-7	17461-939M0	160A-3	21111-89L01	206A-15
	128B-7	17471-99J20	160A-4	21122-99J00	206B-1
	128C-7	17472-99J00	160A-5	21122-99J10	206A-1
13375-26E00	128A-9	17473-94J00	160A-6	21126-99J00	206A-7
	128B-9	17561-99J00	160A-7-1		206B-7
	128C-9	17561-99J10	160A-7-2	21126-99J10	206A-27
13428-06F30	128C-30	17563-94J00	160A-8	21131-94J00-YAY	444A-32
13436-91J00	128A-33	17564-99J00	160A-9	21210-99J00	206A-9
	128B-27	17565-99J00	160A-18		206B-9
	128C-40	17631-99J20	160A-10	21241-99J00	206B-13
13441-99J00	128C-18	17632-99J30	160A-11		513A-6
13443-99J00	128C-19	17670-94J02	162A-1	22511-99011	336A-1
13493-99J00	128C-20	17681-99J11	162A-2		336B-1
13494-94J00	128C-33	17913-93J00	405A-1	23111-99J00	206A-10-1
13495-94J00	128C-34	17914-93J00	405A-2		206B-10-1
13496-99J00	128C-35	17917-87L00	410A-34	23111-99J10	206A-10-2
13513-99J00	128A-34		410B-32		206B-10-2
	128B-28	18100-99J00	167A-1	23115-99J01	206A-14
	128C-41	18120-99J00	167A-2	23115-99J10	206A-16
13534-94J00	128A-12	18130-99J00	167A-3	23131-99J00	206A-11
	128B-12	18142-98600	167A-4		206B-11
	128C-12	18181-99J00	167A-5	23210-99J00	206B-14
13640-99JL0	128A-35	18193-99J00	167A-9		513A-7
	128C-42	18210-99J00	167A-6	23210-99J11	206A-18
13710-99J00	126A-6	18280-99J00	167A-7	23311-95J00	210A-1
13802-94J00	128A-11	18290-99J02	167A-11	23312-94JL0	206A-19
	128B-11	18498-99J01	146A-16	25111-99J01	210A-2
	128C-11	19120-99J00	166A-1	25211-99JL0	210A-5
13810-99J00	126A-5	19120-99J11	166B-1	25215-99J00	210A-6
13832-94J01	126A-8		513A-2	25311-99J00	210A-3
15100-94J03	146A-10	19122-99J00	166B-2	29141-93J00	160A-13
15131-99J00	146A-13		513A-3		206A-17
15170-94J02	146A-11	19131-95502	166A-2		210A-7
15191-99J11	146A-6	19148-99J00	166A-3		335A-13
15192-99JL0	146A-4	19148-99J10	166B-3		335B-12
15193-99JL0	146A-5	19184-99J00	166A-4		407A-25
15251-93E01	146A-12	19184-99J10	166B-4	29162-93J00	407A-26
15410-98500	146A-1		513A-4	29404-93J11	553A-5
16400-99JL0	175A-1	19185-99J00	166B-5	29440-93J00	336A-20
16440-11D00	113A-4		513A-5		336B-24
16510-45H10	175A-5	19656-99J00	166A-5		
16512-99J00	175A-6	19810-99J00	166A-6		
16515-99J10	401A-6				
16520-99J00	401A-18				
16542-99J00	175A-2				
16910-99J01	175A-12				
16930-99JL0	175A-13				
17400-99J20	160A-19				
17411-94J00	160A-1				
17413-94J00	160A-2				

30000

20000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
31170-89L00	301A-3	33816-94J01	553A-10	37141-99E30	450A-4-4
31173-98L00	301A-4	33833-91J00	444A-20	37141-99E40	450A-4-5
31191-63J00	301A-5	33833-94J11	310A-14	37141-99E50	450A-4-6
31192-92J00	301A-8		310B-14	37141-99E60	450A-4-7
31220-89L00	301A-6	33833-99J00	334A-11	37141-99E70	450A-4-8
31261-75F10	301A-9		334B-9	37141-99E80	450A-4-9
31311-63J00	301A-7	33833-99J10	322A-11	37141-99E90	450A-4-10
31313-86030	301A-11		322B-9	37141-99EA0	450A-4-11
31320-89L00	301A-12	33833-99J20	310A-13	37141-99EB0	450A-4-12
31340-89L00	301A-10		310B-13	37161-89E13	334A-5
31341-89L00	301A-13	34200-93J22	501A-1-1		561A-24
31343-63J00	301A-14	34200-93J34	501A-1-2	37721-88L01	545A-11
31344-63J00	301A-15	34830-87J20	334A-1	37721-99J10	334A-7
31912-99J00	301A-16		334B-1		334B-5
	561A-5	36360-99J00	334A-3		561A-25
31918-92J01	301A-17	36360-99J10	334B-3	37724-99J00	334A-8
	561A-6		513A-15		334B-6
32000-99J03	553A-1	36367-99J00	334A-4		561A-26
32102-99J00	303A-6-1		334B-4	37726-99J01	167A-13
	303B-4	36610-99J01	322A-3-1	37726-99J10	334A-9
	561A-13		561A-30		334B-7
32102-99J10	303A-6-2	36610-99J11	322A-3-2		561A-27
32104-99J00	561A-12	36610-99J21	322B-2	37801-98301	553A-12
32120-99J00	303A-1		513A-16	37820-93E11	334A-2
	303B-1	36615-96300	322A-6-1		334B-2
	561A-14		322A-6-2	37820-93J11	450A-5
32120-99J10	303A-3		553A-4	37823-92E02	450A-6
32140-99J11	303A-4	36617-93J10	410A-33	37823-97J00	444A-29
32800-95J01	553A-3		410B-31	37826-92J10	450A-7
32800-99J00	310A-1	36618-43410	322A-5	37826-97J01	444A-30
	310B-1		322B-4	37830-99J11	444A-28
	561A-17		513A-18	37835-91J00-YAY	444A-31
32801-95J03	553A-2		561A-31	37850-88L00	544A-4
32801-99J01	561A-16	36620-89L10	450A-49	38500-93J90	450A-9
32890-99J00	310A-3	36620-94J01	515A-2	38860-76F01	301A-18
	310B-3	36628-91J00	450A-2		561A-7
32900-99J00	310A-8-1	36634-93910	553A-14	38915-90J00	301A-19
	310B-8	36655-99J00	561A-22		561A-8
	561A-19	36656-99J00	322A-7	39600-94J03	553A-9
32900-99J10	310A-8-2	36656-99J10	322B-5	39601-95D01	553A-13
32980-99J00	310A-9		513A-19	39602-93900	553A-15
	310B-9	36656-99J21	561A-23	39603-94401	553A-16
33410-99J01	310A-11	36740-94J00	553A-11		
	310B-11	36990-87D00	501A-3		
33500-07H00	310A-10		515A-4		
	310B-10		553A-21		
33800-99J02	561A-20	37110-94J10	450A-3		
33810-99J00	322A-1	37141-99E00	450A-4-1		
	322B-1	37141-99E10	450A-4-2		
	561A-21	37141-99E20	450A-4-3		

40000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
41111-94J20-YAY	335B-1		336B-15	56120-99J41-YAY	407A-10
41111-99J00-YAY	335A-1	45247-99J00	336A-13	56130-99J30	220A-21
41121-94J20-YAY	335B-2		336B-17	56132-99J10	220A-23
41121-99J00-YAY	335A-2	45250-89L03	336A-14	57100-99JN0	220A-1-1
41130-93E03	335B-7		336B-18	57100-99JP0	220A-1-2
41161-94400	442A-1	45261-94J00	335A-14	57135-99J00	405A-5
41210-99JL1	335A-21		335B-13	57311-99J10	220A-8
	335B-20	45269-94J20	335A-19	57510-99J11	220A-9
41211-99JL0	335A-3		335B-18	57521-99J10	220A-10
	335B-3	45269-99J00	336A-40	57610-99JL0	220A-14
41212-91J00	335A-4	45420-99JM1	335A-16	57621-99J11	220A-15
	335B-4		335B-15	57631-93901	220A-19
41213-94J01	335A-5	45425-94J01	335A-17	57632-94J00	407A-17
	335B-5		335B-16	57632-97L00	220A-20
41225-89L00	336A-8	45710-99JL1	336A-37	58100-89L00-019	407A-15-1
	336B-12		336B-27	58100-89L20-019	407A-15-2
43111-99J40-YAY	336A-2-1	45722-94J11	336A-38	58100-89L60-019	407A-15-4
43111-99J50-YAY	336A-2-2		336B-28	58100-89L70-019	407A-15-3
43111-99J60-YAY	336B-2-1			58100-90L41-019	407A-15-5
43111-99J70-YAY	336B-2-2			58100-90L50-019	407A-15-6
43211-87JL0	336B-7			58100-90L60-019	407A-15-7
43211-99J00	336A-7			58120-89L00	407A-16
43410-99J00	336A-23			59178-97J00	407A-8
43411-939L0	336A-18			59315-94J00	335B-14
	336B-22			59441-94J00	220A-17
43412-93900	336A-19	51110-99J00	401A-1	59441-99J00	220A-18
	336B-23	51211-99J00	401A-2	59800-99J11	420A-12
43412-99J00	336A-24	52110-99J00-YAY	405A-3-1		420B-12
43415-99J00	336A-25	52110-99J10-YAY	405A-3-2		420C-12
43420-99J10	336A-26	52113-99J00	405A-4		420D-12
43424-99J00	336A-27	54112-99J01	401A-8		
43427-99J00	336A-28	54113-99JM0	401A-9		
43428-99J00	336A-29	54120-99JL0	401A-10		
43512-99J00	336A-30	54122-99J00	401A-11		
43514-94J00	336A-31	54125-99J00	401A-12		
43514-99J00	336A-32	54126-99JL0	401A-13	61112-99J00	410A-5
43516-89J00	336A-33	54130-99J00	401A-14		410B-5
43711-99J00	336A-3	54148-99J00	401A-15	61124-99J10	410B-28
	336B-3	54151-99J00	405A-12		513A-22
	336A-4-1	54167-99J01	405A-13	61124-99J21	410A-28
43750-99J60-YAY	336B-4-1	54211-99J01-YAY	405A-14	61134-99JL0	410A-6
	336B-4-1	54213-93901	405A-16		410B-6
43750-99J70-YAY	336A-4-2	54221-99J01-YAY	405A-15	61151-99J00	410A-29
	336B-4-2	55100-99J40-YAY	407A-1		410B-29
43755-99J00	513A-11	55300-95500	407A-23	61155-94500	410A-2
43755-99J01	336B-8				410B-2
45212-95L00	336A-9	55321-87J01	111A-10		410A-7
	336B-13		407A-6	61157-99J00	410A-7
	336A-10	55321-87J11	407A-27		410B-7
45231-89L00	336B-14	55331-99J10	407A-21	61400-99J01-YAY	420A-1
	336A-11	55332-99J10	407A-22		420B-1

50000

60000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61412-99J00	420C-1	61831-99J00-YAY	410A-12	67212-95600	450A-10
	420D-1		410B-12	67220-95630	450A-11
	410A-18	61851-93E10	410A-10	67221-92E00	545A-8
	410B-18		410B-10	67222-92E00	545A-2
61413-99J00	420A-5	63111-89L01-YAY	444A-1	67223-92E00	545A-3
	420B-5	63114-99J01	444A-21	67223-99E10	450A-12
	420C-5	63115-99J00	444A-3	67224-92E00	545A-9
	420D-5	63115-99J10	444A-2	67224-96L00	450A-46
61433-99J00	420A-2	63116-99J00	444A-4	67226-92E00	545A-15
	420B-2	63121-99J00-YAY	444A-5	67226-92E10	545A-16
	420C-2	63122-99J00	444A-22	67227-92E00	545A-24
	420D-2	63131-99J11-YAY	444A-23	67228-92E00	545A-18
61435-89L10-YAY	420C-10	63133-89L00	444A-24	67229-95600	450A-13
	420D-10	63210-89L11	444A-6	67230-88L00	545A-20
	61435-89L40-YAY	63215-93110	444A-27	67231-88L00	545A-32
	420A-10	63220-89L00	444A-7	67232-88L00	545A-33
61435-99J30-YAY	420B-10	63225-93200	444A-9	67232-95600	450A-14
	420B-7	63225-98601	444A-8	67233-92E00	545A-26
	420D-7	63240-94J20	444A-10	67234-88L00	545A-22
	420A-7	63241-986C0	444A-11	67235-92E00	545A-27
61443-89L00-YAY	420C-7	63244-94J10	444A-12	67236-92E00	545A-12
	420B-8	63610-99J00	444A-14	67237-92E01	545A-28
	420D-8	65000-89L10	432A-1	67238-87D00	450A-15
	420A-8	65000-94L10	583A-1	67238-88L00	545A-31
61443-97L01-YAY	420C-8	65520-99100	432A-2	67238-96L00	450A-47
	420A-11		583A-2	67239-92E00	545A-35
	420B-11	65561-95D00	432A-3	67239-92E10	545A-41
	420C-11		583A-3	67240-92E00	545A-17
61453-89L00-YAY	420D-11	65700-87J19	583A-5	67241-88L00	545A-34
	167A-16	65700-89L32	432A-8	67241-99E11	450A-16
	61494-99J01	65720-986L0	432A-13	67243-92E00	545A-38
	120A-19	65740-95D01	432A-7	67243-95600	450A-17
61610-90L00	120B-18		583A-4	67244-95600	450A-18
	410A-21	65750-87J11	432A-9	67245-92E00	545A-23
	410B-21		583A-6	67245-95600	450A-19
	410A-22		583A-7	67246-88L00	545A-36
61616-93EL0	410B-22	65750-95501	432A-10	67251-88L00	544A-20
		65750-955L1	432A-10	67251-96L00	450A-20
		65770-89L00	432A-11	67252-88L00	545A-39
		65770-90J13	583A-8	67252-95600	450A-21
61631-99J00	420A-4	65781-98500	432A-12	67253-88L00	545A-40
	420B-4		583A-9	67253-92E00	544A-13
	420C-4	65831-95D00	432A-4	67253-95600	450A-22
	420D-4	65890-99100	432A-5	67253-96L00	450A-23
61642-99J00	410A-23	65892-95D00	432A-6	67259-87D00	450A-28
	410B-23	67130-99J02	513A-1	67259-96L00	544A-9
	410B-23	67200-88L01	544A-1	67257-88L00	545A-1
	410B-30		545A-1	67257-96L00	450A-25
61643-99J00	410A-19	67200-94J40	450A-1	67258-99E00	450A-27
	410B-19	67211-88L00	544A-17	67259-87D00	450A-28
	61810-99J02-YAY	67212-88L00	544A-7	67261-88L00	545A-3
	410B-1			67261-96L00	450A-29
61813-99J01	410A-32			67263-88L30	450A-8
	410B-30			67264-88L00	544A-18
	61820-99J01-YAY			67264-88L10	544A-19
	410B-3			67264-95600	450A-31
61827-99J00	410A-30			67267-96L00	450A-32
				67269-92E01	545A-29
				67269-96L10	450A-43
				67271-88L10	544A-16

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67261-88L10	544A-2	67320-93J30	515A-1-4	99000-81158-50M	167A-8
67261-96L00	450A-29		515B-1-4	99011-99J90-055	420A-13
67263-88L30	450A-8	67320-93J40	515A-1-5		420C-13
67264-88L00	544A-18		515B-1-5	99011-99J91-055	420B-13-1
67264-88L10	544A-19	67320-93J50	515A-1-6		420D-13-1
67264-95600	450A-31		515B-1-6	99011-99JA0-055	420B-13-2
67267-96L00	450A-32	67320-93J60	515A-1-7		420D-13-2
67269-92E01	545A-29		515B-1-7		
67269-96L10	450A-43	67320-93J70	515A-1-8		
67271-88L10	544A-16		515B-1-8		
67272-88L00	545A-6	67320-93J80	515A-1-9		
67273-88L00	544A-25		515B-1-9		
	545A-47	67340-99J00	454A-4		
67273-95601	450A-33		513A-26		
	544A-15	67467-89J01	454A-1		
67274-88L00	545A-42		513A-23		
67275-95600	450A-34	67500-88L00	544A-21	01550-05127	303A-5
	544A-14	67701-99J02	442A-2		303B-3
67281-88L00	544A-10	67721-93E10	442A-3	01550-0612A	111A-21
67284-94L10	450A-48	67725-96J00	442A-4	01550-0612C	113A-6
67286-92E00	545A-19	67726-99E00	442A-5		120A-15
67287-92E00	545A-46	67728-99E00	442A-6		146A-15
67288-92E00	545A-4	68111-88L00	544A-8	01550-06167	175A-11
67288-92E20	544A-6	68111-99J00	420A-9		301A-20
67288-92E60	544A-12		420B-9		513A-27
67288-94320	450A-45		420C-9	01550-0616C	561A-9
67291-92E00	545A-7		420D-9		126A-10
67291-92E10	545A-37	69711-91J01	167A-15-2		166A-13
67292-94300	450A-35	69711-93E11	167A-15-1		166B-8
	545A-5	69911-91J51	335A-20		167A-14
67294-95600	450A-36		335B-19		206A-8
67296-88D10	545A-13				206A-13
	545A-30				206B-8
67296-88L00	544A-5			01550-0620C	454A-5
67296-90J20	450A-37				111A-18
67296-92E20	545A-14				175A-10
67296-92E30	545A-44				206A-20
67296-92E60	544A-11			01550-06257	310A-2
67296-95610	450A-40				310A-7
	545A-43				310B-2
67296-95630	450A-39				310B-7
67296-96L00	450A-38	77811-54GB0-0PG	450A-26		553A-8
67296-96L10	450A-30				561A-18
67297-95600	450A-41			01550-0625C	111A-5
67320-93J00	515A-1-1				146A-2
	515B-1-1				310A-12
67320-93J10	515A-1-2				310B-12
	515B-1-2				120A-13
67320-93J20	515A-1-3				120B-13
	515B-1-3				166A-14
					167A-10

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01550-06357	166A-15	09100-10320	335A-7	09140-10031	401A-17
	166B-9	09103-06237	432A-14	09140-14008	303A-7
	175A-4	09103-06276	128A-30		303B-5
01550-08207	162A-8		128B-24	09141-12005	407A-18
01550-0820C	111A-12		128C-37	09148-06008	444A-13
01550-08257	301A-21	09103-06281	111A-11	09148-06017	410A-16
	561A-10		407A-7		410B-16
01550-08307	120A-14	09103-06546	120A-7	09159-08059	336A-36
	120B-14		120B-7		336B-10
	162A-3	09108-06141	160A-14		513A-13
01560-06457	126A-3	09108-08286	336B-9	09159-10050	335A-8
01560-08557	113A-2		513A-12	09159-14032	128A-36
02112-06127	206A-6	09111-10067	336A-39		128C-43
	206B-6		336B-29		334A-6
02112-06307	303A-12	09116-06223	410A-26		561A-29
02142-0616C	410A-17		410B-26	09159-22006	335B-8
	410A-31	09116-06225	336A-34	09160-05024	545A-45
	410B-17	09116-06227	407A-14	09160-05029	206B-16
03141-0416A	160A-12	09116-06229	220A-24		410A-20
03241-0625A	553A-20		336A-35		410B-20
03542-05169	410A-11	09116-06230	410A-13		513A-9
	410B-11		410B-13		544A-23
	420A-3	09116-06234	206A-21	09160-06046	166A-8
	420B-3	09116-06523	410A-4		166A-9
	420C-3		410B-4		166B-6
	420D-3	09116-08137	401A-16-1		206A-22
03542-06129	167A-12	09116-08148	401A-16-2	09160-06055	454A-2
04211-09109	111A-15	09116-08151	401A-3		513A-24
	113A-3		405A-7	09160-06082	160A-15
04211-09149	120A-12		407A-5		206A-2-1
	120B-12		444A-15		206B-2-1
04221-05109	126A-4	09116-08154	405A-17		210A-8
08110-60020	220A-2	09116-08155	444A-25		335A-11
08110-60050	407A-11	09125-05042	545A-21		335B-10
08310-00067	410A-27	09125-05135	544A-22		336A-16
	410B-27	09125-05145	444A-26		336B-20
08316-10087	301A-22	09125-06035	303A-2	09160-06084	310A-4
	561A-11		303B-2		310B-4
08341-31039	120A-9		561A-15	09160-06085	432A-15
	120A-10	09126-06006	407A-24	09160-06168	206A-23
	120B-9		545A-25	09160-06171	120A-8
	120B-10	09126-06015	444A-16		120B-8
	303A-9	09136-05041	444A-17	09160-06176	206A-2-2
	303B-7	09137-04004	334A-10		206B-2-2
09100-06177	335A-10		334B-8	09160-08082	336A-21
	335B-9		561A-28		336B-11
09100-08232	336A-22	09140-05005	166A-7		336B-25
	336B-26		544A-24		405A-8
	450A-42	09140-06020	450A-44		513A-14
09100-08312	405A-6		545A-10	09160-10082	335A-9

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09160-12066	407A-19	09181-25160	220A-12-1	09289-05008	121A-16
09160-15057	303A-8	09181-25162	220A-12-2		121B-16
	303B-6	09181-25164	220A-12-3	09289-06L02	210A-11
09160-17024	220A-11-1	09181-25181	220A-12-7	09289-17L02	407A-13
09160-17025	220A-11-3	09200-05014	336A-17	09306-10023	335A-15
09160-17026	220A-11-5		336B-21	09308-08016	120A-18
09160-17027	220A-11-7	09200-06061	336A-15		120B-17
09160-17028	220A-11-9		336B-19	09320-09016	310A-6
09160-17039	220A-11-2	09202-04008	160A-17		310B-6
09160-17040	220A-11-4	09202-04025	220A-16	09320-09059	410A-15
09160-17041	220A-11-6	09202-06023	401A-4		410B-15
09160-17042	220A-11-8		405A-9	09320-10501	128A-37
09160-20027	220A-4		407A-4		128C-44
09160-20042	220A-5-2	09204-01002	206B-15	09380-15001	220A-3
09160-20043	220A-5-3		336A-12	09381-14001	116A-4
09160-20044	220A-5-4		336B-16	09381-14004	206A-4
09160-21009	220A-6		513A-8		206B-4
09160-25040	220A-12-4	09204-02004	407A-20	09383-04002	206A-12
09160-25041	220A-12-5	09205-02004	210A-4		206B-12
09160-25042	220A-12-6	09205-06021	335A-6	09385-04003	206B-17
09160-27012	336A-5		335B-6		410A-25
	336A-41	09229-04025	420A-6		410B-25
	336B-5		420B-6		513A-10
	336B-30		420C-6	09385-06012	513A-25
09161-04012	410A-24		420D-6	09385-06016	454A-3
	410B-24	09248-08001	407A-9	09401-08413	410A-8
09163-06001	444A-18	09248-12009	405A-11		410B-8
09164-13008	121A-9	09248-22002	111A-7	09401-09404	146A-7
	121B-9	09260-10006	206A-3	09401-11422	146A-8
09164-14008	206A-24		206B-3	09401-12413	162A-5
09168-12017	405A-10	09261-03009	175A-3		401A-7
09169-06062	310A-5	09262-25003	407A-3	09401-13424	401A-19
	310B-5	09263-17048	407A-2	09403-12417	113A-5
09169-06075	410A-14	09263-20024	220A-7		146A-14
	410B-14	09280-06012	210A-9	09403-12419	410A-9
09169-06082	126A-9	09280-09012	210A-10		410B-9
09180-06186	166A-10	09280-10016	175A-14	09403-13311	322A-8
	166B-7	09280-13004	175A-7		322B-6
	206A-25	09280-17003	111A-14	09407-10404	553A-6
09180-06230	166A-11	09280-22019	111A-9		553A-17
09180-06290	126A-7	09280-26005	146A-3	09407-14403	303A-11
09180-06357	335A-12	09280-54001	175A-8		322A-2
	335B-11	09280-57002	407A-12		322A-9
09180-06370	206A-26	09282-12017	401A-5		322B-7
09180-12158	166A-12	09282-13L01	220A-22		513A-20
09181-15241	220A-13	09282-27002	336A-6		553A-19
09181-20244	220A-5-5		336B-6		561A-33
09181-20246	220A-5-6	09283-21009	121A-2	09407-14407	303A-10
09181-20248	220A-5-7		121B-2		303B-8
09181-20251	220A-5-1	09283-30075	116A-9		310A-15

SUZUKI **DF8A/9.9A** PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION
Technical Readiness Group, Quality Administration Department
300 Takatsuka, Minami, Hamamatsu, Japan

SUZUKI MOTOR CORPORATION