

SUZUKI

PARTS CATALOGUE

DF40A/DF50A/DF60A

DF40AT/ATH/AQH/AST/ASVT

DF50AT/ATH/AVT

DF60AT/ATH/AQH/AVT/AVTH



OUTBOARD MOTOR

020 021 022

2021-6

E11/E40/E03/E01/E34

E11 = NORGE

1ST EDITION

This part catalogue supersedes all the following part catalogue with immediate effect

Model of catalogue	Parts catalogue No.
DF40A/DF50A/DF60A_021	9900B-45469-000

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF40A/50A/60A production start from 2019 to 2021.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	L	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~031234	: Up to E. NO. 06002F-031234	PTT	: Power trim and tilt
031234~	: From E. NO. 06002F-031234		
12 x 34 x 5.6..... Figures in the description column			
show the dimensions of parts.			
ID	OD	T(or W, L)	

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual. When assembling, use "SUZUKI SERVICE MANUAL".

6. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE No.
DF40AT_020	E01	04003F	S, L	YAY, Y5S	04003F-040001~
DF40AT_020	E03	04003F	L	YAY, Y5S	04003F-040001~
DF40AT_021	E11	04003F	S, L	YAY, QTN	04003F-140001~
DF40AT_022	E11	04003F	S, L	YAY, QTN	04003F-240001~
DF40AQH_020	E01	04003F	L	YAY	04003F-040001~
DF40AQH_021	E01	04003F	L	YAY	04003F-140001~
DF40AQH_022	E01	04003F	L	YAY	04003F-240001~
DF40ATH_020	E01	04003F	L	YAY	04003F-040001~
DF40ATH_021	E01	04003F	L	YAY	04003F-140001~
DF40ATH_022	E01	04003F	L	YAY	04003F-240001~
DF40AST_020	E34	04004F	S, L	YAY, Y5S	04004F-040001~
DF40AST_021	E34	04004F	S, L	YAY, QTN	04004F-140001~

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE No.
DF40AST_022	E34	04004F	S, L	YAY, QTN	04004F-240001~
DF50AT_020	E01	05003F	S, L	YAY, Y5S	05003F-040001~
DF50AT_020	E03	05003F	L	YAY, Y5S	05003F-040001~
DF50AT_021	E11	05003F	S, L	YAY, QTN	05003F-140001~
DF50AT_022	E11	05003F	S, L	YAY, QTN	05003F-240001~
DF50ATH_020	E01	05003F	L	YAY	05003F-040001~
DF50ATH_021	E01	05003F	L	YAY	05003F-140001~
DF50ATH_022	E01	05003F	L	YAY	05003F-240001~
DF60AT_020	E01	06002F	S, L, X	YAY, Y5S	06002F-040001~
DF60AT_020	E03	06002F	L	YAY, Y5S	06002F-040001~
DF60AT_021	E11	06002F	S, L, X	YAY, QTN	06002F-140001~
DF60AT_022	E11	06002F	S, L, X	YAY, QTN	06002F-240001~
DF60AT_020	E40	06002F	L, X	YAY, Y5S	06002F-040001~
DF60AT_021	E40	06002F	L, X	YAY, QTN	06002F-140001~
DF60AT_022	E40	06002F	L, X	YAY, QTN	06002F-240001~
DF60AQH_020	E40	06002F	L, X	YAY	06002F-040001~
DF60AQH_021	E40	06002F	L, X	YAY	06002F-140001~
DF60AQH_022	E40	06002F	L, X	YAY	06002F-240001~
DF60ATH_020	E01	06002F	L	YAY	06002F-040001~
DF60ATH_021	E01	06002F	L	YAY	06002F-140001~
DF60ATH_022	E01	06002F	L	YAY	06002F-240001~
DF60ATH_020	E40	06002F	L, X	YAY	06002F-040001~

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE No.
DF60ATH_021	E40	06002F	L, X	YAY	06002F-140001~
DF60ATH_022	E40	06002F	L, X	YAY	06002F-240001~
DF50AVT_020	E03	05004F	L	YAY	05004F-040001~
DF50AVT_021	E03	05004F	L	YAY	05004F-140001~
DF50AVT_022	E03	05004F	L	YAY	05004F-240001~
DF50AVTH_020	E01	05004F	L	YAY	05004F-040001~
DF60AVT_020	E01, E40	06003F	L, X	YAY	06003F-040001~
DF60AVT_020	E03	06003F	L	YAY	06003F-040001~
DF60AVT_021	E11	06003F	L, X	YAY	06003F-140001~
DF60AVT_022	E11	06003F	L, X	YAY	06003F-240001~
DF60AVTH_020	E40	06003F	L, X	YAY	06003F-040001~
DF60AVTH_021	E40	06003F	L, X	YAY	06003F-140001~
DF60AVTH_022	E40	06003F	L, X	YAY	06003F-240001~
DF40ASVT_020	E34	04004F	L	YAY, Y5S	04005F-040001~
DF40ASVT_021	E34	04004F	L	YAY, QTN	04005F-140001~
DF40ASVT_022	E34	04004F	L	YAY, QTN	04005F-240001~

PREFACE

Quand il devient nécessaire de remplacer des pièces sur SUZUKI MOTEURS HORSBOARD toujours utiliser les PIÈCES D'ORIGINE SUZUKI qui ont été soumises à des contrôles de qualité sévères leur garantissant qualité et performance impeccables.

Ce catalogue de pièces détachées couvre la liste de toutes les pièces de rechange pour SUZUKI DF40A/50A/60A production start from 2019 to 2021.

INSTRUCTIONS POUR UTILISER LE CATALOGUE

1. DIMENSIONS

Les dimensions des pièces dans ce catalogue sont indiquées en unités de millimètres.

2. ABBREVIATIONS

Les abréviations utilisées dans ce catalogue sont les suivantes:

AR	: Comme requis	NT	: Nombre de dents
ASSY	: Assemblage	OPT	: Sur option
E. NO.	: Numéro du moteur	OS	: Sur-dimensionné
F. NO.	: Numéro du chfssis	T	: Epaisseur
ID	: Diamètre intérieur	US	: Sous-dimensionné
OD	: Diamètre extérieur	W	: Largeur
L	: Longueur	W/	: Avec
LH(PORT)	: Côté gauche	L	: Type transom
RH(STBD)	: Côté droit	PTT	: Dispositif d'inclinaison et de revage assistés

~031234 : Jusqu'à E. No. 06002F-031234

031234~ : Depuis E. No. 06002F-031234

12 x 34 x 5.6..... Les chiffres dans la colonne

| | | remarques montrent les dimensions

ID OD T(or W,L) des pieces comme suit.

→12345-56781 (N° de pieces) : indique que le numéro des pièces a été échangé en 12345-56781 et que les nouvelles pièces sont interchangeables avec les anciennes, mais que celles-ci ne sont pas interchangeables avec les nouvelles.

←12345-56781 (N° de pieces) : indique que les anciennes et nouvelles pièces sont interchangeables les unes avec les autres et sont utilisables chacune.

3. PIÈCES INTERNES DE L'ASSEMBLAGE

Les numéros de pièces qui comportent un point (.) avant la désignation de pièce détachée indique la pièce interne se rapportant à l'assemblage.

4. AVIS DE MODIFICATION

Un bulletin de pièces détachées vous sera envoyé à tout moment opportun quand des changements de pièces ont lieu, y compris les modifications de pièces interchangeables entre les nouvelles et anciennes pièces.

5. A NOTER

5-1. Il existe certaines pièces différentes de celles de rechange pour les modèles de production vu des raisons administratives et dont l'usage est commun avec celles d'autres modèles.

5-2. Concernant les durites en caoutchouc et les tuyaux en vinyle, ne pas manquer de les couper à la bonne longueur comme indiqué dans le catalogue des pièces détachées ou selon ce qui est utile pour le véhicule affecté.

5-3. Noter que les dessins à la page d'illustration servent à titre de référence pour les numéros de pièces détachées, et non pas comme référence pour l'assemblage. Pour cette dernière opération, se reporter au "MANUEL D'ENTRETIEN SUZUKI".

6. NOM DU MODÈLE / NUMÉRO SÉRIE DU MOTEUR

HOUTEUR DE					
MODELE	DESTINATION	TYPE	BARRE D'ARCASSE	COULEUR	N° DELA MOTEUR
DF40AT_020	E01	04003F	S, L	YAY, Y5S	04003F-040001~
DF40AT_020	E03	04003F	L	YAY, Y5S	04003F-040001~
DF40AT_021	E11	04003F	S, L	YAY, QTN	04003F-140001~
DF40AT_022	E11	04003F	S, L	YAY, QTN	04003F-240001~
DF40AQH_020	E01	04003F	L	YAY	04003F-040001~
DF40AQH_021	E01	04003F	L	YAY	04003F-140001~
DF40AQH_022	E01	04003F	L	YAY	04003F-240001~
DF40ATH_020	E01	04003F	L	YAY	04003F-040001~
DF40ATH_021	E01	04003F	L	YAY	04003F-140001~
DF40ATH_022	E01	04003F	L	YAY	04003F-240001~
DF40AST_020	E34	04004F	S, L	YAY, Y5S	04004F-040001~

MODELE	DESTINATION	TYPE	HOUTEUR DE BARRE D' ARCASSE	COULEUR	N° DELA MOTEUR
DF40AST_021	E34	04004F	S, L	YAY, QTN	04004F-140001~
DF40AST_022	E34	04004F	S, L	YAY, QTN	04004F-240001~
DF50AT_020	E01	05003F	S, L	YAY, Y5S	05003F-040001~
DF50AT_020	E03	05003F	L	YAY, Y5S	05003F-040001~
DF50AT_021	E11	05003F	S, L	YAY, QTN	05003F-140001~
DF50AT_022	E11	05003F	S, L	YAY, QTN	05003F-240001~
DF50ATH_020	E01	05003F	L	YAY	05003F-040001~
DF50ATH_021	E01	05003F	L	YAY	05003F-140001~
DF50ATH_022	E01	05003F	L	YAY	05003F-240001~
DF60AT_020	E01	06002F	S, L, X	YAY, Y5S	06002F-040001~
DF60AT_020	E03	06002F	L	YAY, Y5S	06002F-040001~
DF60AT_021	E11	06002F	S, L, X	YAY, QTN	06002F-140001~
DF60AT_022	E11	06002F	S, L, X	YAY, QTN	06002F-240001~
DF60AT_020	E40	06002F	L, X	YAY, Y5S	06002F-040001~
DF60AT_021	E40	06002F	L, X	YAY, QTN	06002F-140001~
DF60AT_022	E40	06002F	L, X	YAY, QTN	06002F-240001~
DF60AQH_020	E40	06002F	L, X	YAY	06002F-040001~
DF60AQH_021	E40	06002F	L, X	YAY	06002F-140001~
DF60AQH_022	E40	06002F	L, X	YAY	06002F-240001~
DF60ATH_020	E01	06002F	L	YAY	06002F-040001~
DF60ATH_021	E01	06002F	L	YAY	06002F-140001~
DF60ATH_022	E01	06002F	L	YAY	06002F-240001~

DF60A E11 022

- 7 -


MODELE	DESTINATION	TYPE	HOUTEUR DE BARRE D' ARCASSE	COULEUR	N° DELA MOTEUR
DF60ATH_020	E40	06002F	L, X	YAY	06002F-040001~
DF60ATH_021	E40	06002F	L, X	YAY	06002F-140001~
DF60ATH_022	E40	06002F	L, X	YAY	06002F-240001~
DF50AVT_020	E03	05004F	L	YAY	05004F-040001~
DF50AVT_021	E03	05004F	L	YAY	05004F-140001~
DF50AVT_022	E03	05004F	L	YAY	05004F-240001~
DF50AVTH_020	E01	05004F	L	YAY	05004F-040001~
DF60AVT_020	E01, E40	06003F	L, X	YAY	06003F-040001~
DF60AVT_020	E03	06003F	L	YAY	06003F-040001~
DF60AVT_021	E11	06003F	L, X	YAY	06003F-140001~
DF60AVT_022	E11	06003F	L, X	YAY	06003F-240001~
DF60AVTH_020	E40	06003F	L, X	YAY	06003F-040001~
DF60AVTH_021	E40	06003F	L, X	YAY	06003F-140001~
DF60AVTH_022	E40	06003F	L, X	YAY	06003F-240001~
DF40ASVT_020	E34	04004F	L	YAY, Y5S	04005F-040001~
DF40ASVT_021	E34	04004F	L	YAY, QTN	04005F-140001~
DF40ASVT_022	E34	04004F	L	YAY, QTN	04005F-240001~

DF60A E11 022

- 8 -


[illegible][illegible]

FIG. 111A

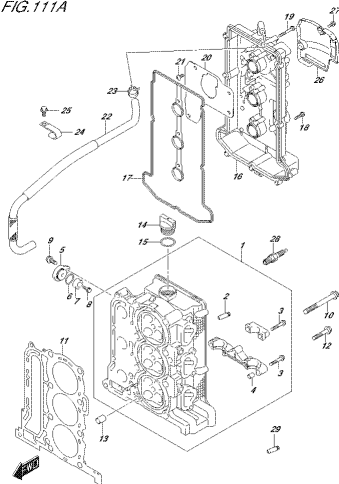


DF004_E1L_022_111A
CYLINDER HEAD

FIG. 111B

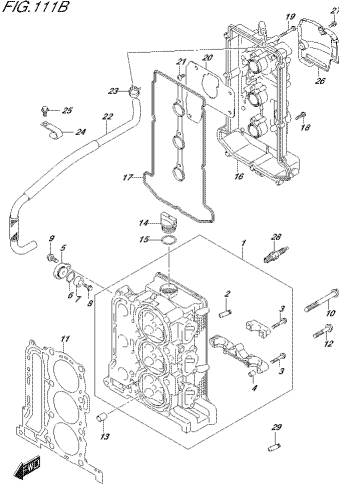


DF004_E1L_002_1119
CYLINDER HEAD

FIG. 111C

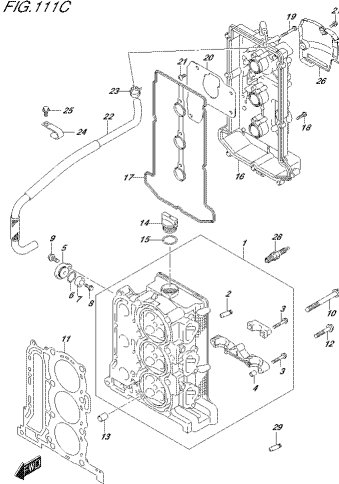


DFR04_E1L_022_111C

FIG. 113A

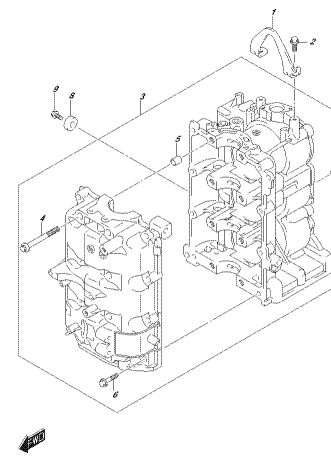


DF604_E1L_022_1134
CYLINDER BLOCK

FIG. 113B

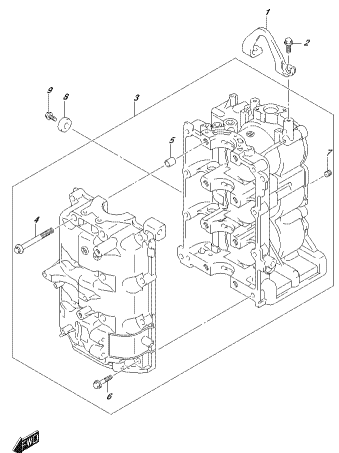


DF604_E1L_022_1129
CYLINDER BLOCK

FIG. 116A

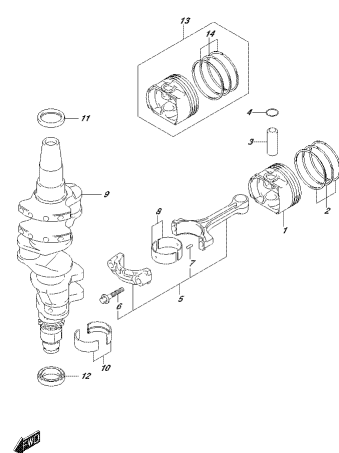


DF00A_E1L_002.116A
CRANKSHAFT

FIG. 119A

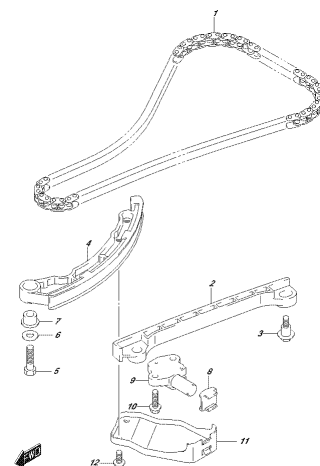


DF004_E1L_002_1154
TRUNG CHAN

FIG. 121A

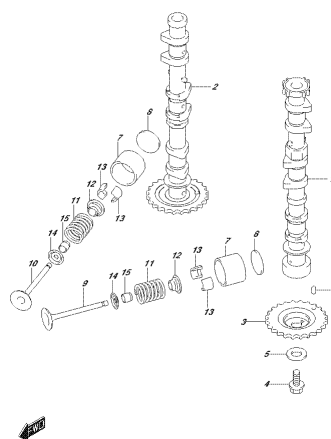


DF60A_E1L_022_121A
CAMSHAFT

FIG.124A

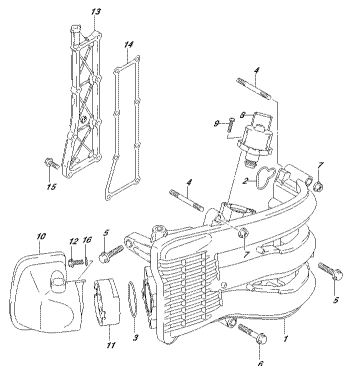


DEPOMLE 1, 022, 101A
RING GEAR COVER

FIG.124B

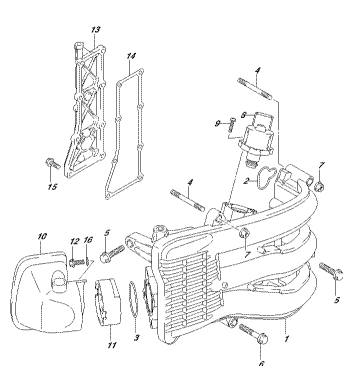


DEPOMLE 1, 022, 101B
RING GEAR COVER

FIG.124C

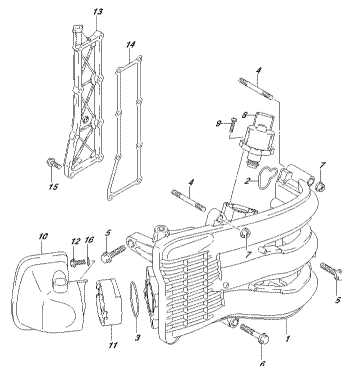


DEPOMLE 1, 022, 101C
RING GEAR COVER

FIG.124D

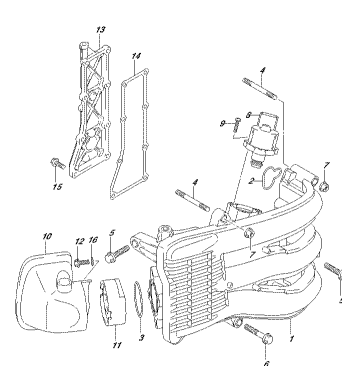


DEPOMLE 1, 022, 101D
RING GEAR COVER

FIG.124E

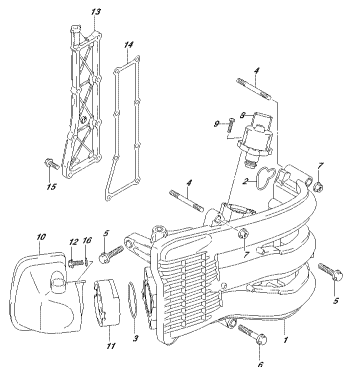


DEPOMLE 1, 022, 101E
RING GEAR COVER

FIG.124F

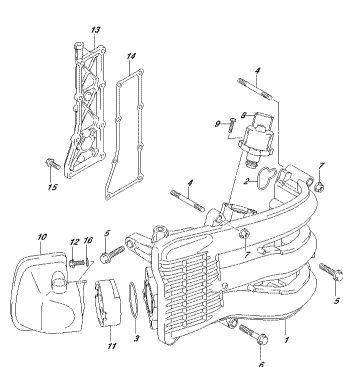


DEPOMLE 1, 022, 101F
RING GEAR COVER

FIG.136A

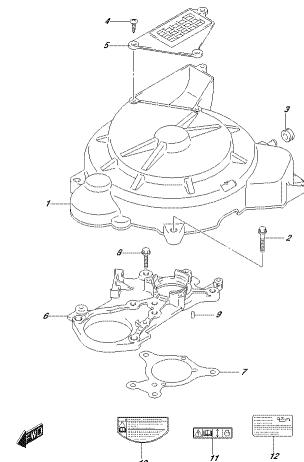


DEPOMLE 1, 022, 101A
RING GEAR COVER

FIG.143A

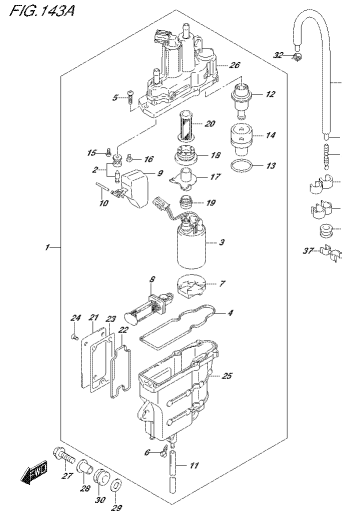


DEPOMLE 1, 022, 101A
RING GEAR COVER

FIG.143B

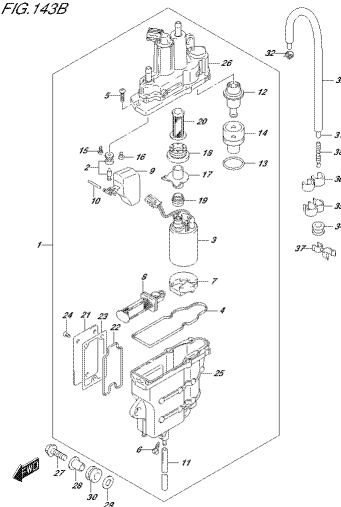


ZF80M, E71, 022, 1032
FUEL INJECTOR

FIG.144A

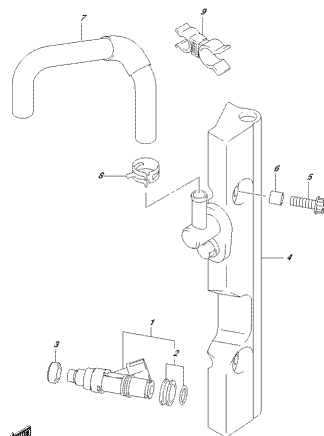


ZF80M, E71, 022, 1034
FUEL INJECTOR

FIG.144B

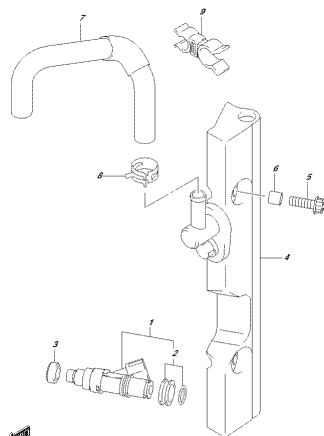


ZF80M, E71, 022, 1032
FUEL INJECTOR

FIG.146A

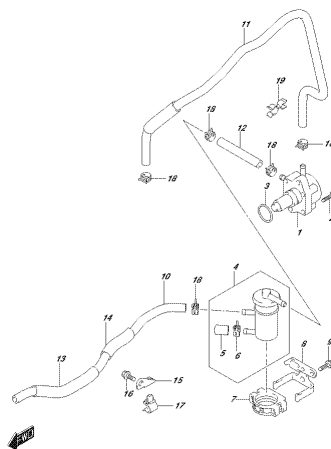


ZF80M, E71, 022, 1034
FUEL INJECTOR

FIG.160A

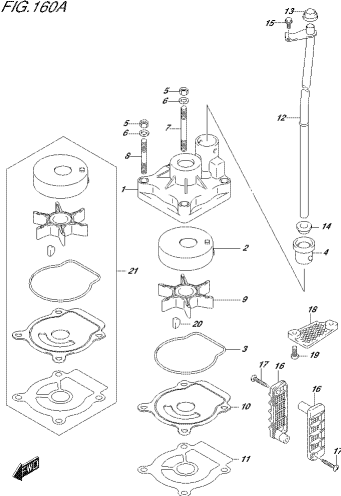


ZF80M, E71, 022, 1034
WATER PUMP

FIG.160B

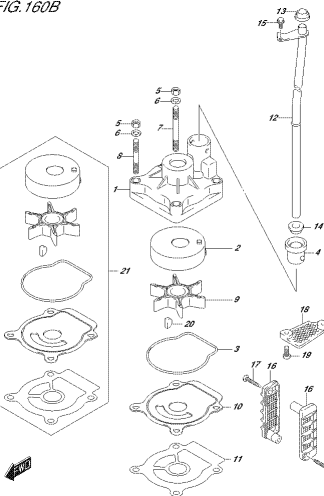


ZF80M, E71, 022, 1032
WATER PUMP

FIG.160C

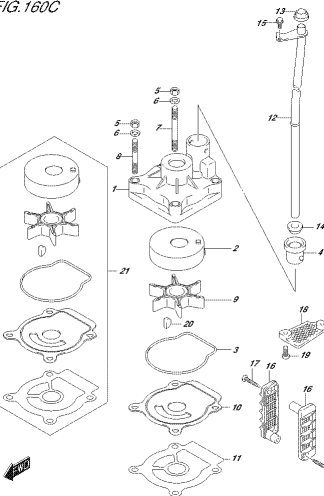


ZF80M, E71, 022, 1032
WATER PUMP

FIG.160D

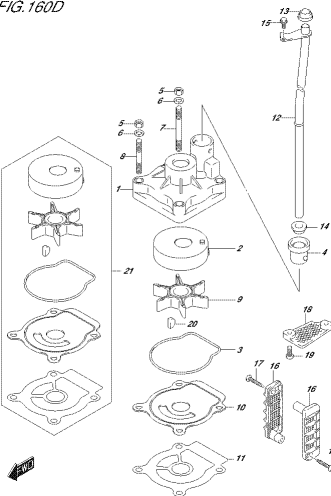


ZF80M, E71, 022, 1032
WATER PUMP

FIG.160E

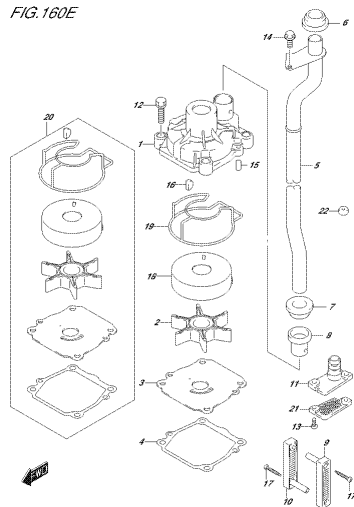


OPRM L71, 022, 102E
BACKER PUMP

FIG.160F

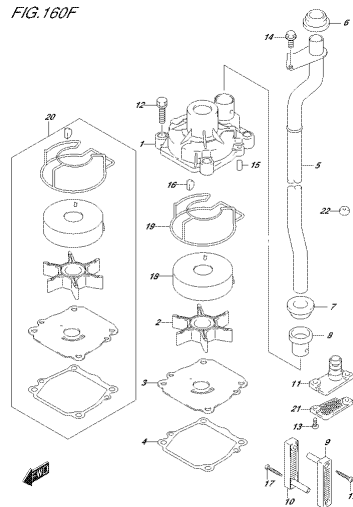


OPRM L71, 022, 102F
BACKER PUMP

FIG.160G

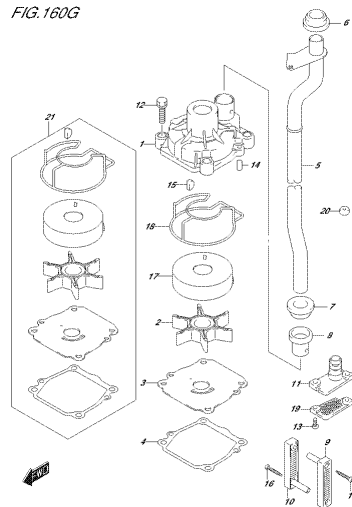


OPRM L71, 022, 102G
BACKER PUMP

FIG.162A

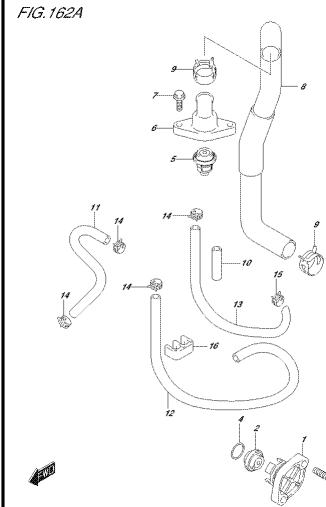


OPRM L71, 022, 102H
THERMOSEAL

FIG.163A

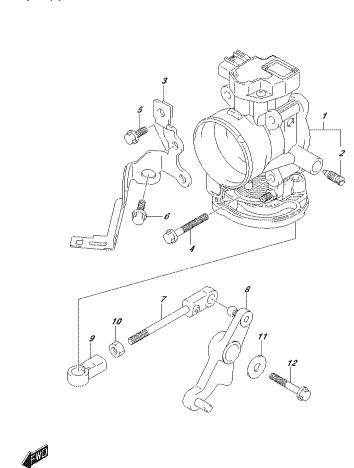


OPRM L71, 022, 103A
TARGET BODY

FIG.163B

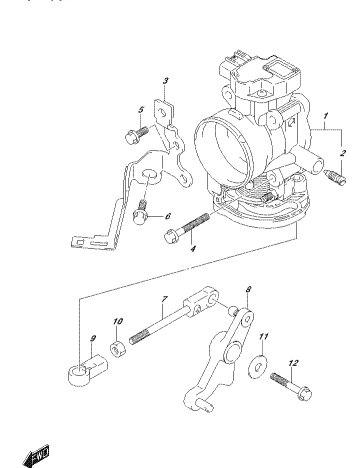


OPRM L71, 022, 103B
TARGET BODY

FIG.163C

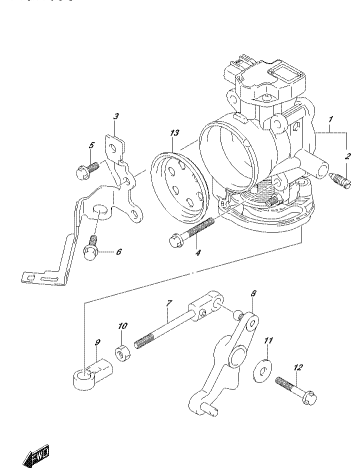


OPRM L71, 022, 103C
TARGET BODY

FIG.175A

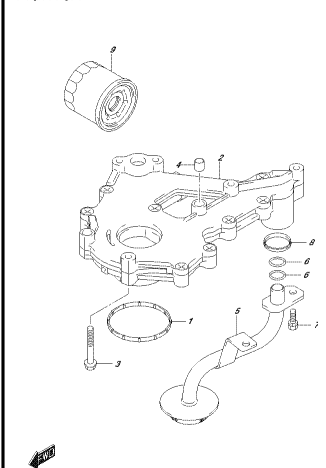


OPRM L71, 022, 175A
CN. PLIMP

FIG.180A

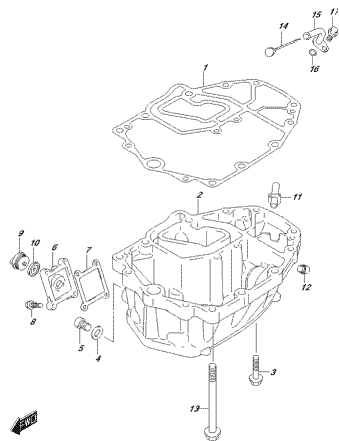


DFRML E1 L 022 180A
CSE 24V

FIG.180B

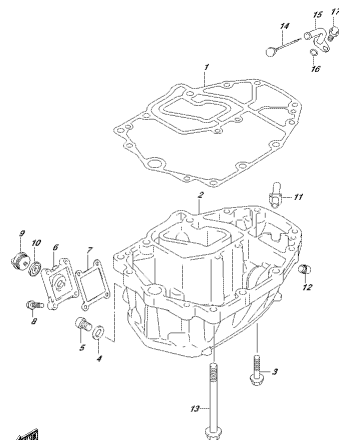


DFRML E1 L 022 180B
CSE 24V

FIG.204A

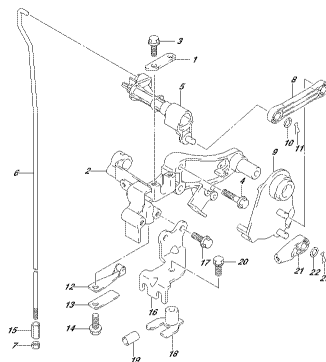


DFRML E1 L 022 204A
CLV 120V SH4T

FIG.204B

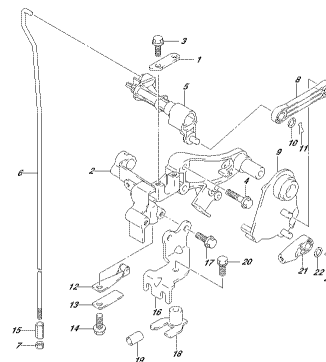


DFRML E1 L 022 204B
CLV 120V SH4T

FIG.204C

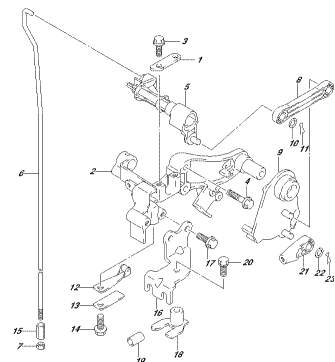


DFRML E1 L 022 204C
CLV 120V SH4T

FIG.204D

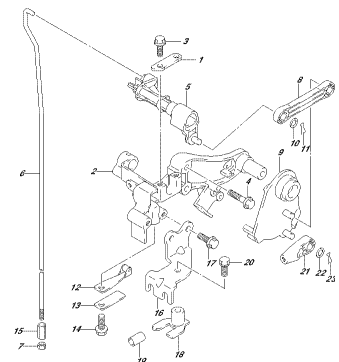


DFRML E1 L 022 204D
CLV 120V SH4T

FIG.204E

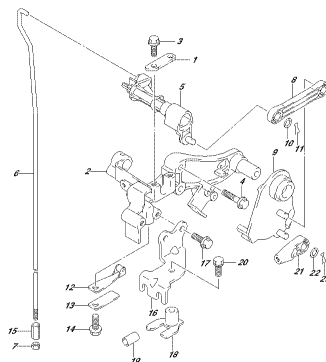


DFRML E1 L 022 204E
CLV 120V SH4T

FIG.204F

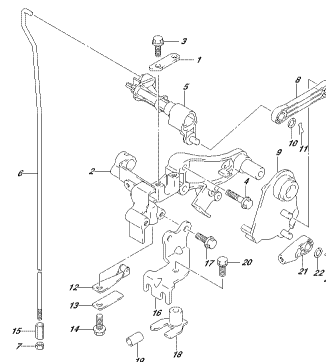


DFRML E1 L 022 204F
CLV 120V SH4T

FIG.204G

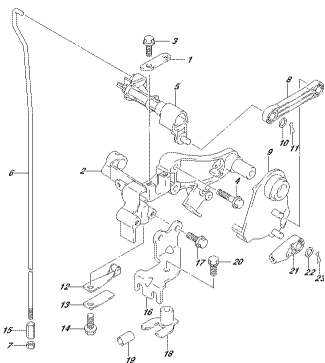


DFBML E11_022_204G
CLU/CO1/8047

FIG.206A

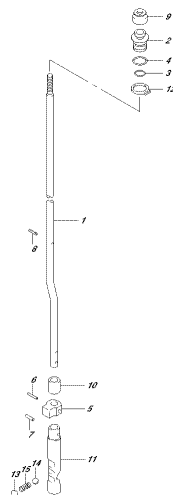


DFBML E11_022_206A
CLU/CO1/800

FIG.206B

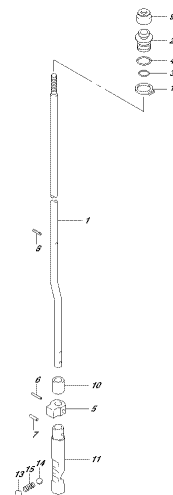


DFBML E11_022_206B
CLU/CO1/800

FIG.206C

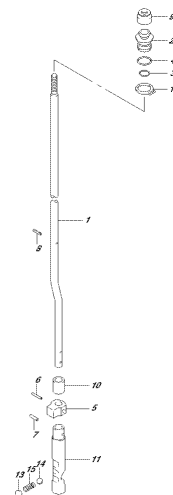


DFBML E11_022_206C
CLU/CO1/800

FIG.206D




DFBML E11_022_206D
CLU/CO1/800

FIG.210A

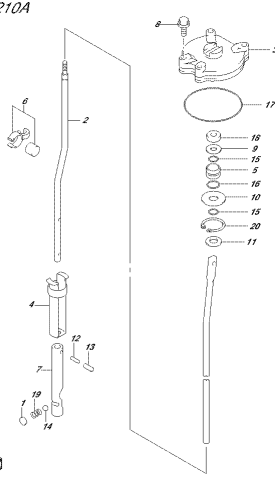


DFBML E11_022_210A
SHIFT/ACD

FIG.220A

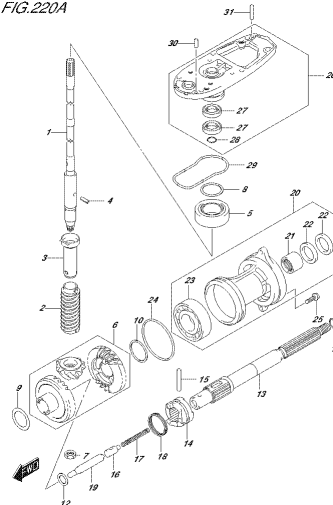


DFBML E11_022_220A
TRANSMISSION

FIG.220B

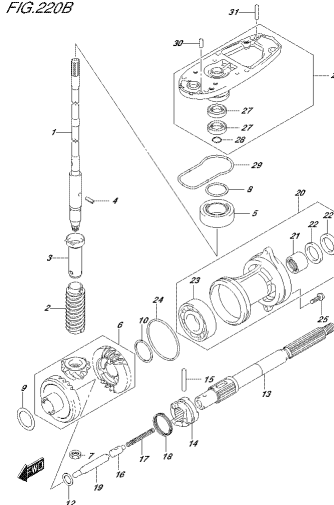


DFBML E11_022_220B
TRANSMISSION

FIG.220C

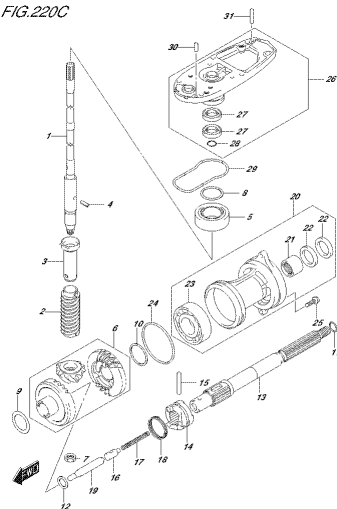


DP60M.E71.022.20C
TRANSMESION

FIG.220D

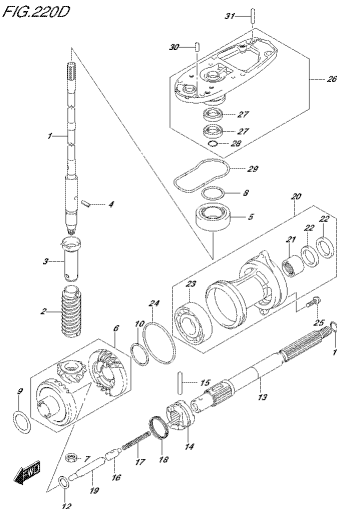


DP60M.E71.022.20D
TRANSMESION

FIG.220E

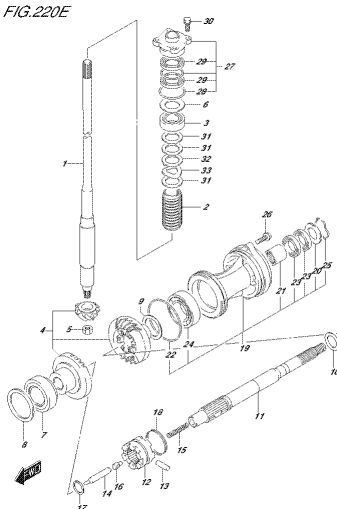


DP60M.E71.022.20E
TRANSMESION

FIG.220F

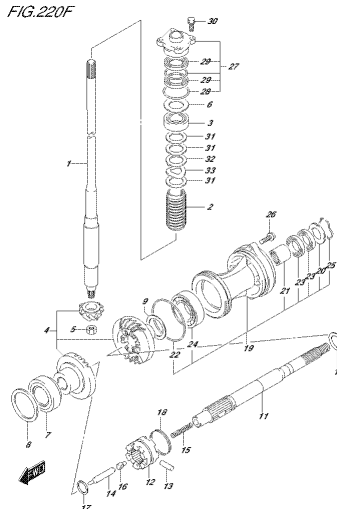


DP60M.E71.022.20F
TRANSMESION

FIG.220G

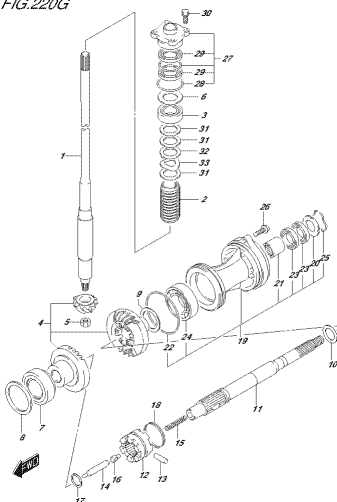


DP60M.E71.022.20G
TRANSMESION

FIG.220H

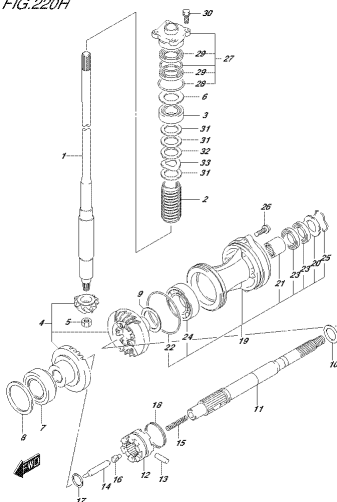


DP60M.E71.022.20H
TRANSMESION

FIG.301A

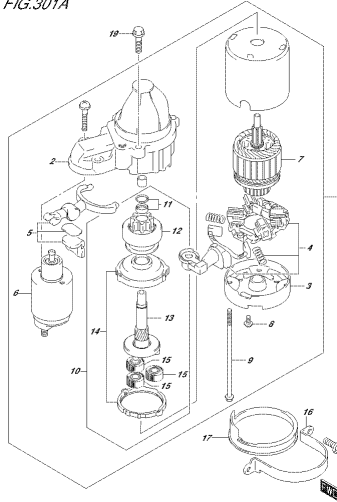


DP60M.E71.022.301A
STARTING MOTOR

FIG.303A

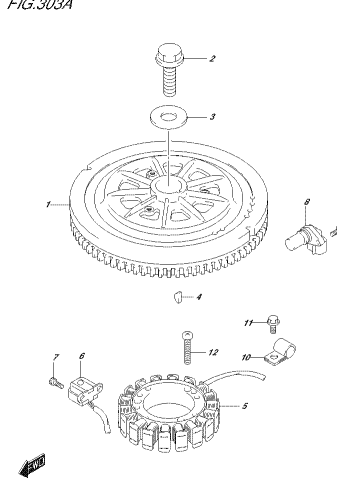


DP60M.E71.022.303A
MAGNETO

FIG.310A

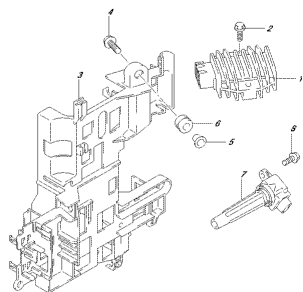


3F80LE71L022_310A
SEC/PROTEZIONE/COX

FIG.315A

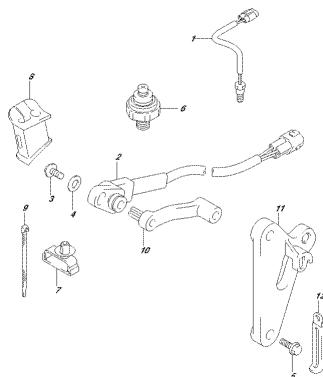


3F80LE71L022_315A
SEC/COX

FIG.315B

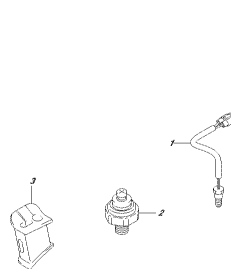


3F80LE71L022_315B
SEC/COX

FIG.315C

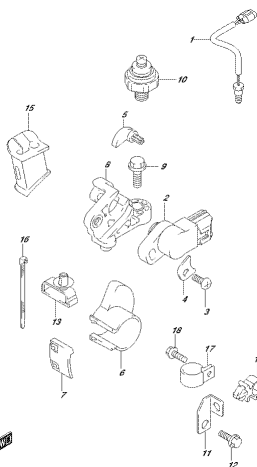


3F80LE71L022_315C
SEC/COX

FIG.322A

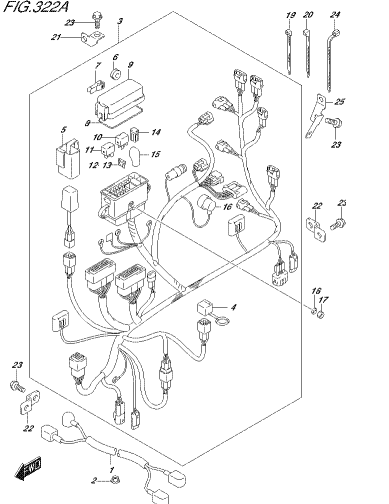


3F80LE71L022_322A
HARNESS

FIG.322B

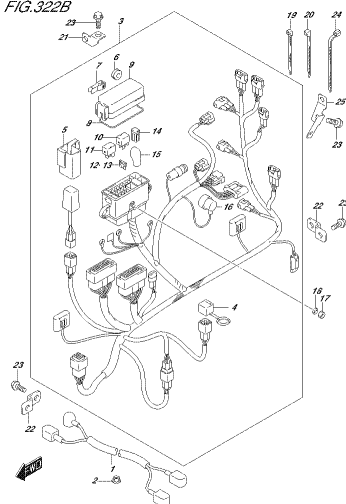


3F80LE71L022_322B
HARNESS

FIG.322C

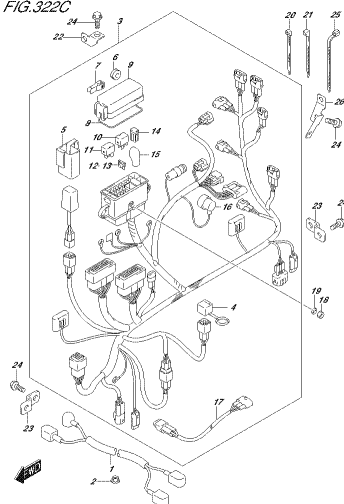


3F80LE71L022_322C
HARNESS

FIG.322D

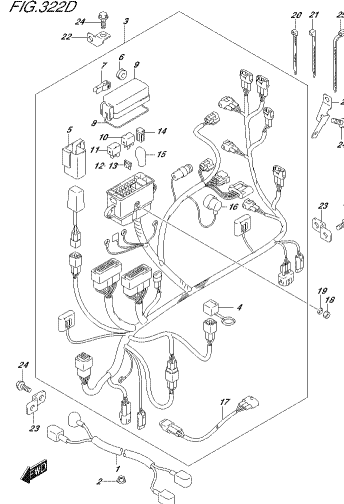


3F80LE71L022_322D
HARNESS

FIG.322E

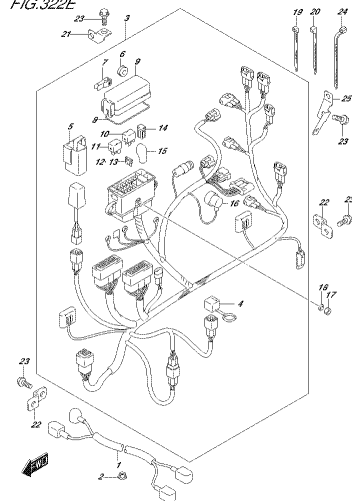


DP604L E1 L 022_202E
SWITCHING UNIT

FIG.326A

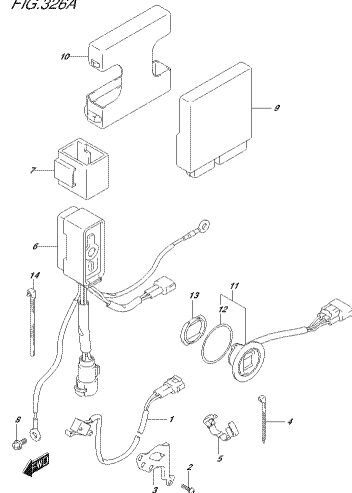


DP604L E1 L 022_206A
PTT SWITCHING CONTROL UNIT

FIG.326B

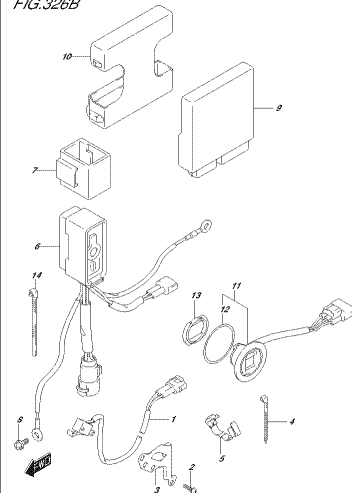


DP604L E1 L 022_206B
PTT SWITCHING CONTROL UNIT

FIG.326C

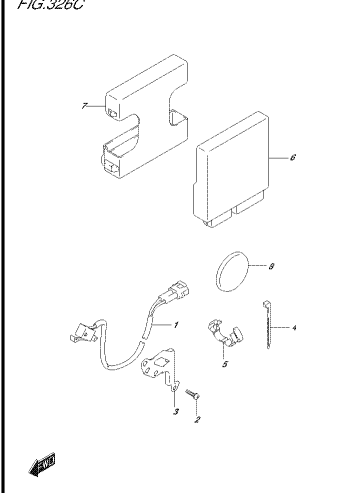


DP604L E1 L 022_206C
PTT SWITCHING CONTROL UNIT

FIG.326D

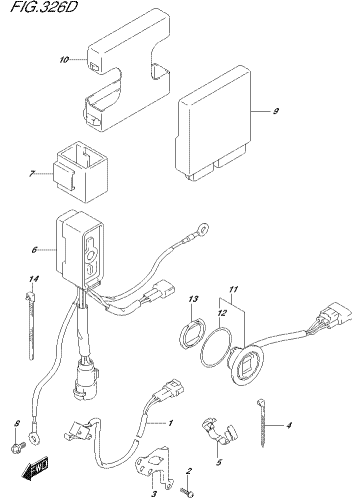


DP604L E1 L 022_206D
PTT SWITCHING CONTROL UNIT

FIG.326E

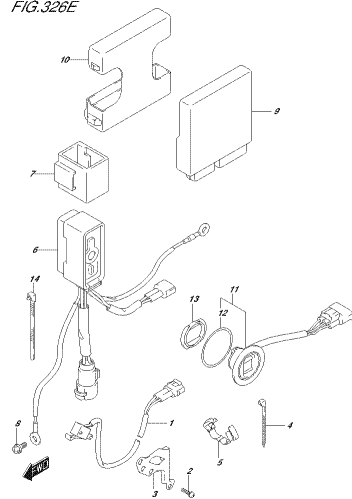


DP604L E1 L 022_206E
PTT SWITCHING CONTROL UNIT

FIG.326F

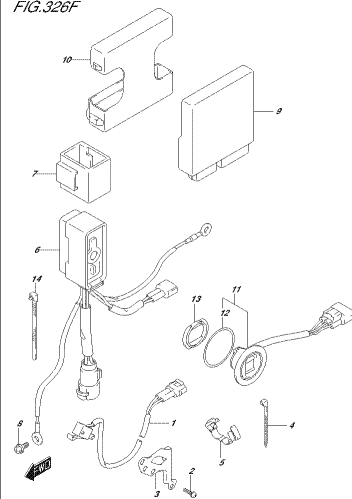


DP604L E1 L 022_206F
PTT SWITCHING CONTROL UNIT

FIG.326G

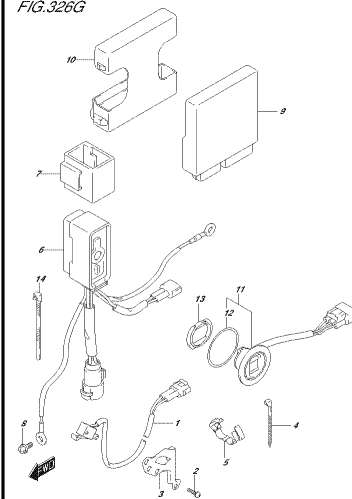


DP604L E1 L 022_206G
PTT SWITCHING CONTROL UNIT

FIG.326H

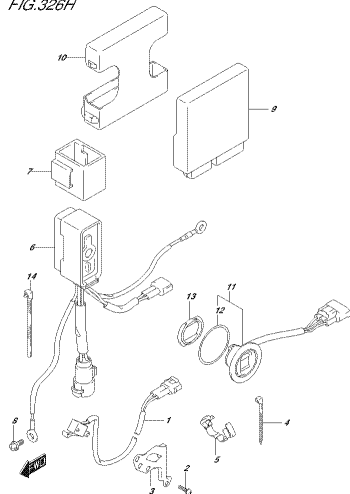


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.326J

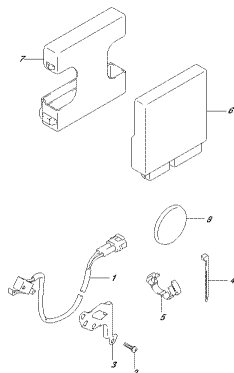


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.326K

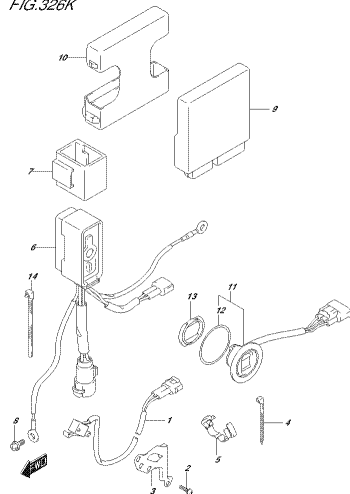


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.326L

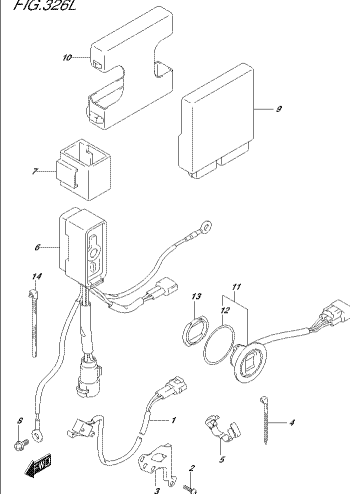


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.326M

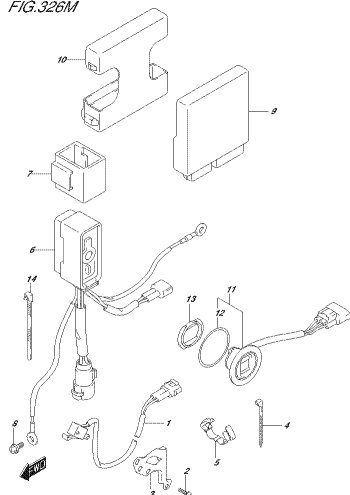


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.326N

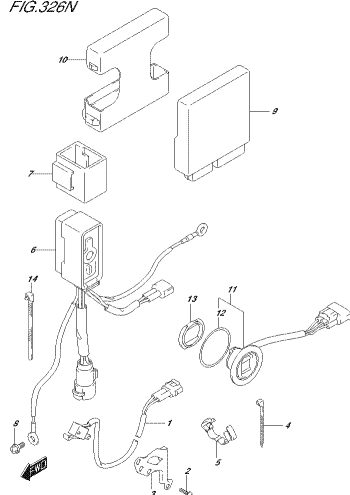


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.326P

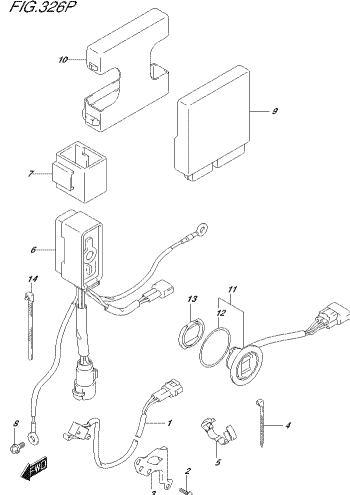


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.326R

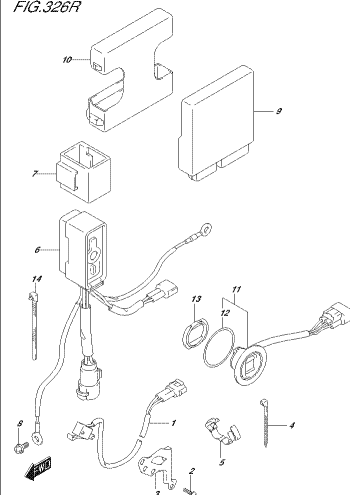


2P80M, E11, 022, 208V
PTT SWITCH-ENGINE CONTROL UNIT

FIG.335A

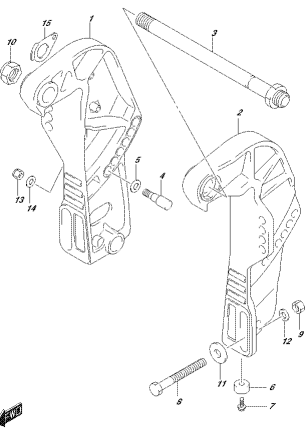


DP60M L71, 022, 0324
CLAMP BRACKET

FIG.335B

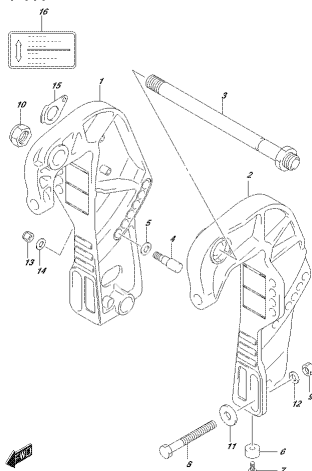


DP60M L71, 022, 0325
CLAMP BRACKET

FIG.335C

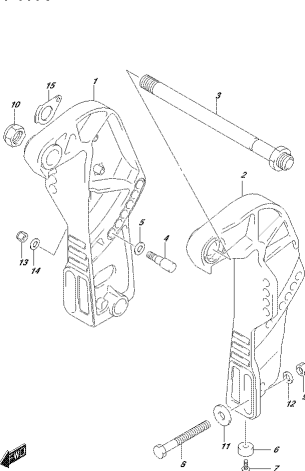


DP60M L71, 022, 0326
CLAMP BRACKET

FIG.335D

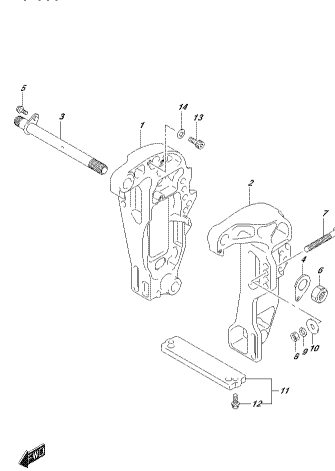


DP60M L71, 022, 0327
CLAMP BRACKET

FIG.335E

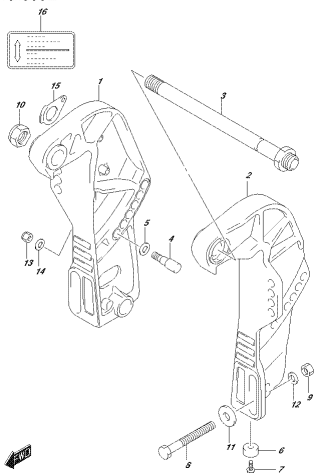


DP60M L71, 022, 0328
CLAMP BRACKET

FIG.335F

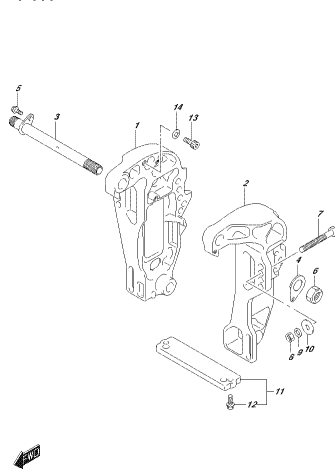


DP60M L71, 022, 0329
CLAMP BRACKET

FIG.335G

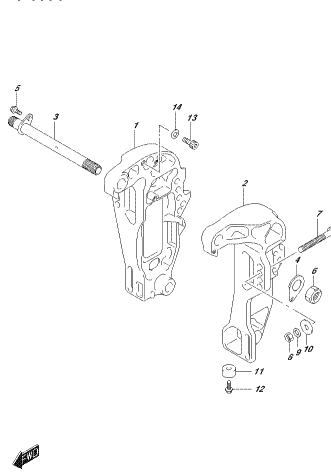


DP60M L71, 022, 0330
CLAMP BRACKET

FIG.336A

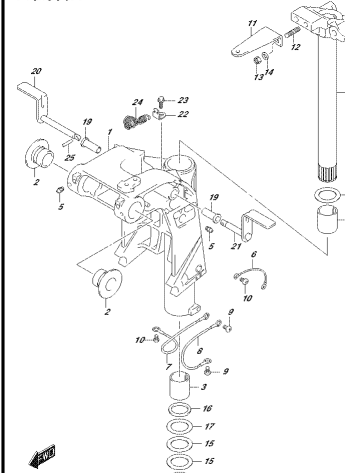


DP60M L71, 022, 0334
STRAP BRACKET

FIG.336B

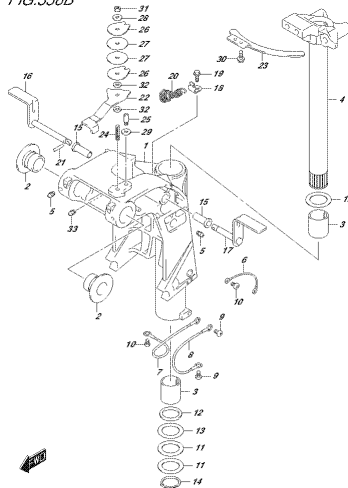


DP60M E71.022.036F
STRUEL 894C027

FIG.336C

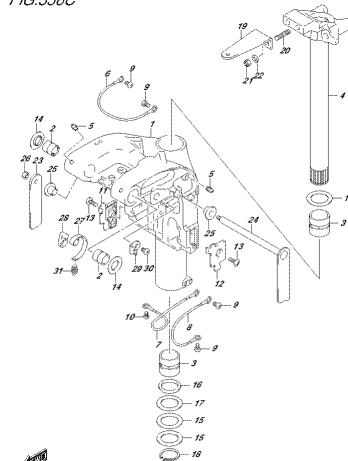


DP60M E71.022.036C
STRUEL 894C027

FIG.336D

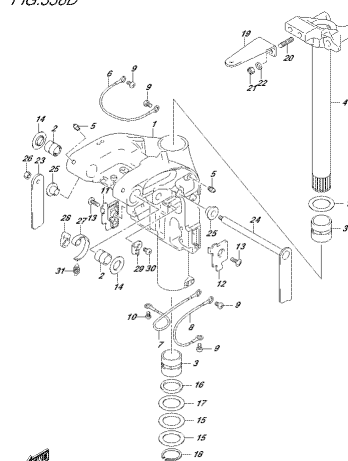


DP60M E71.022.036D
STRUEL 894C027

FIG.336E

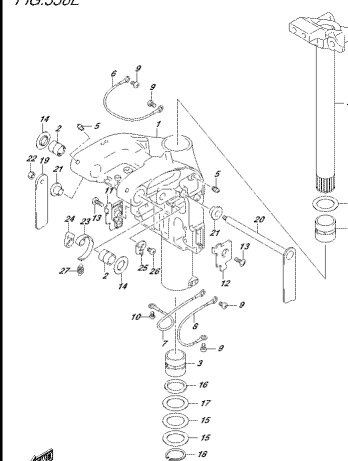


DP60M E71.022.036E
STRUEL 894C027

FIG.336F

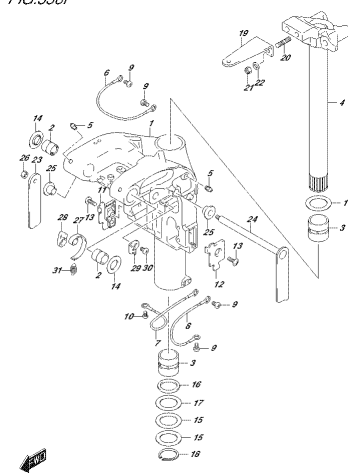


DP60M E71.022.036F
STRUEL 894C027

FIG.336G

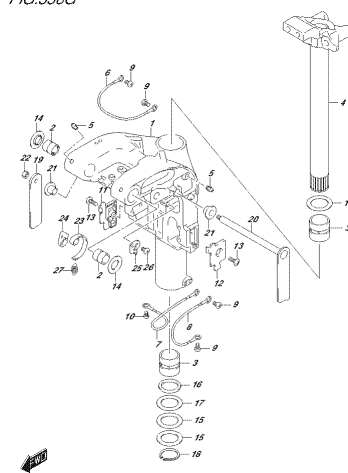


DP60M E71.022.036G
STRUEL 894C027

FIG.336H

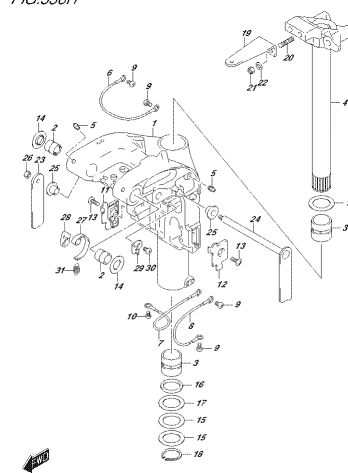


DP60M E71.022.036H
STRUEL 894C027

FIG.337A

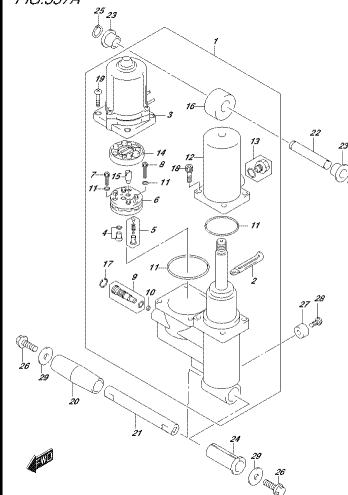


DP60M E71.022.037A
TRIN C71EN071

FIG.337B

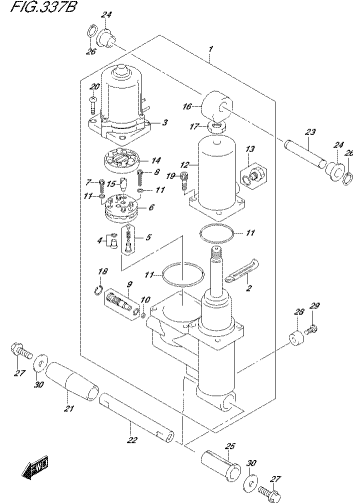


DFR04LE11.022.327B
Piston/Cylinder

FIG.337C

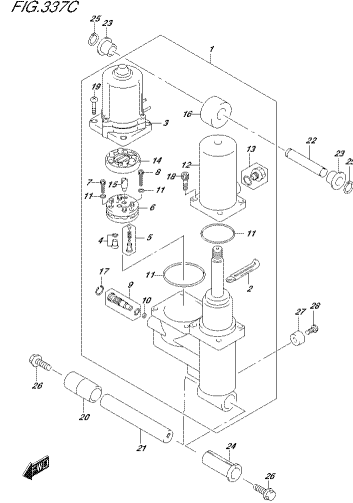


DFR04LE11.022.327C
Piston/Cylinder

FIG.337D

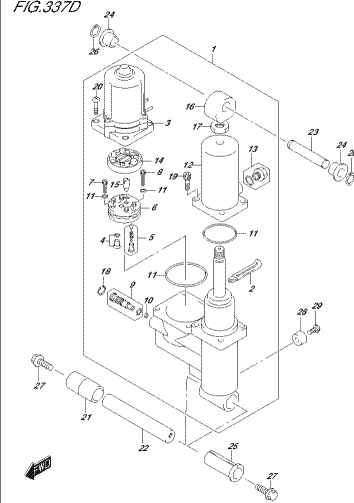


DFR04LE11.022.327D
Piston/Cylinder

FIG.337E

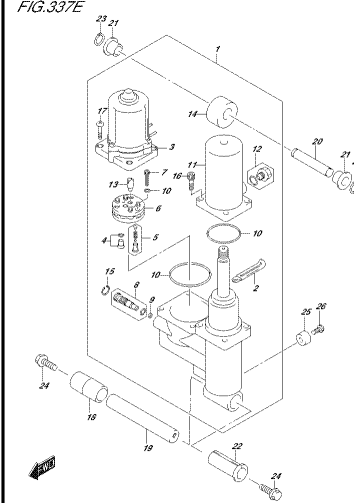


DFR04LE11.022.327E
Piston/Cylinder

FIG.337F

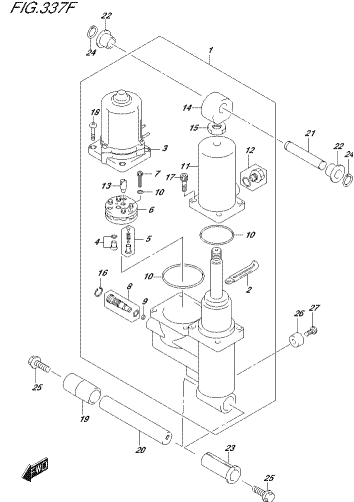


DFR04LE11.022.327F
Piston/Cylinder

FIG.339A

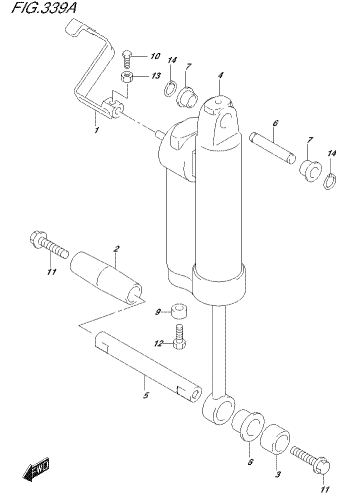


DFR04LE11.022.339A
Gas Cylinder

FIG.340A

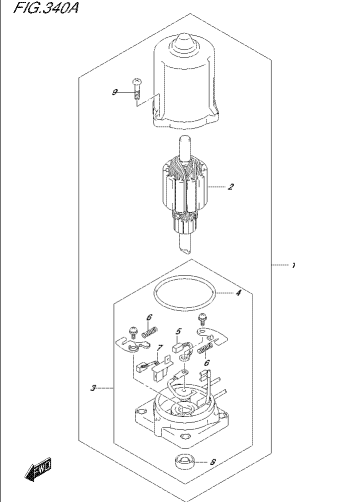


DFR04LE11.022.340A
Gas Cylinder

FIG.401A

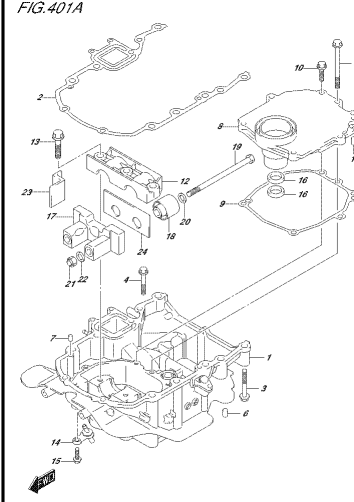


DFR04LE11.022.401A
Engine Assembly

FIG.401B

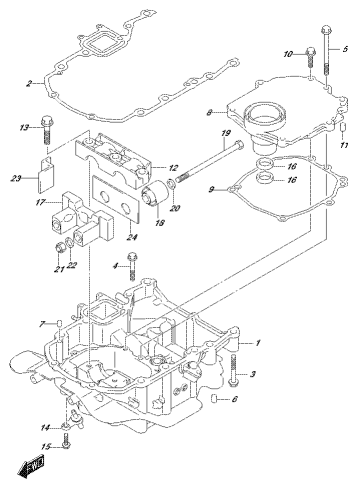


DP60M, E1 L 022, 401B
CRUISE SHAWT HELDING

FIG.401C

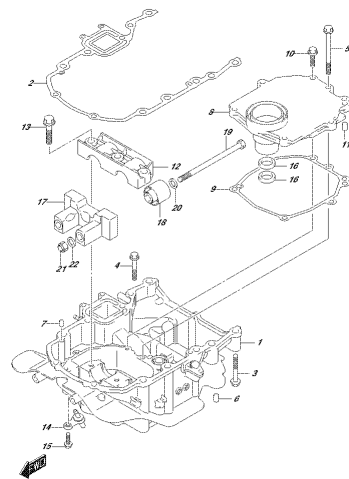


DP60M, E1 L 022, 401C
CRUISE SHAWT HELDING

FIG.401D

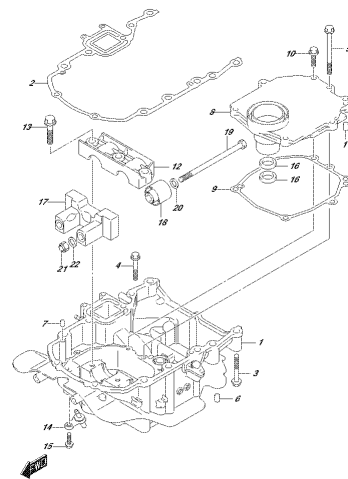


DP60M, E1 L 022, 401D
CRUISE SHAWT HELDING

FIG.405A

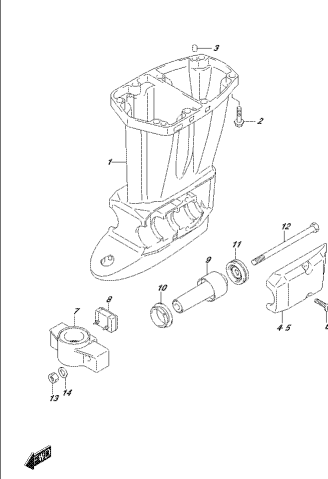


DP60M, E1 L 022, 405A
CRUISE SHAWT HELDING

FIG.405B

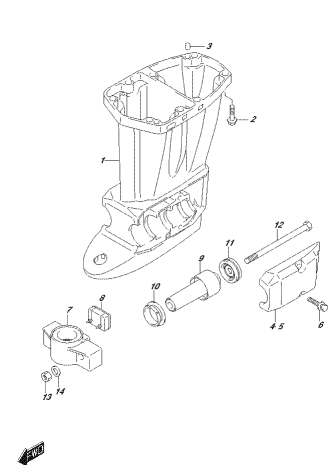


DP60M, E1 L 022, 405B
CRUISE SHAWT HELDING

FIG.405C

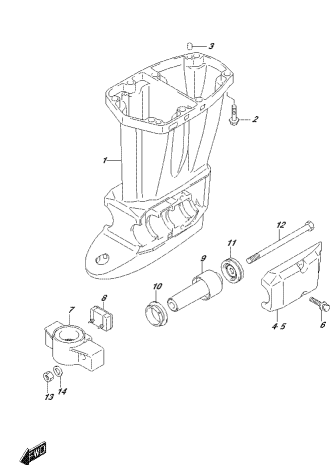


DP60M, E1 L 022, 405C
CRUISE SHAWT HELDING

FIG.405D

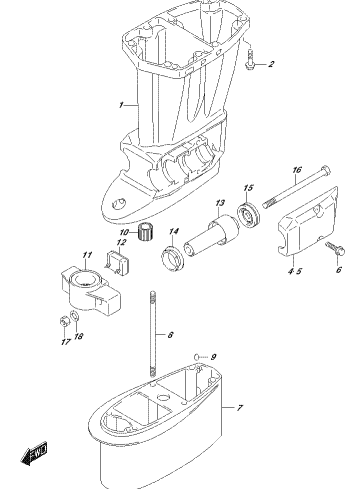


DP60M, E1 L 022, 405D
CRUISE SHAWT HELDING

FIG.405E

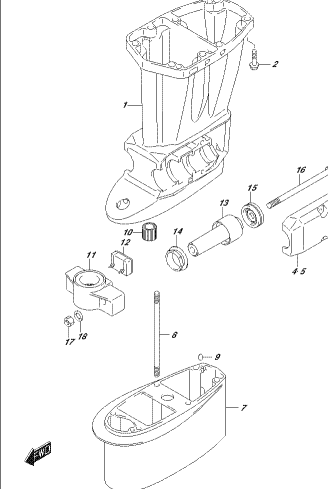


DP60M, E1 L 022, 405E
CRUISE SHAWT HELDING

FIG.405F

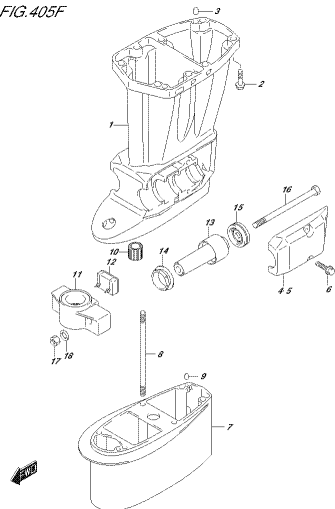


DFBM1E1L022-405F
CRUISE SHIFTER/SLD

FIG.405G

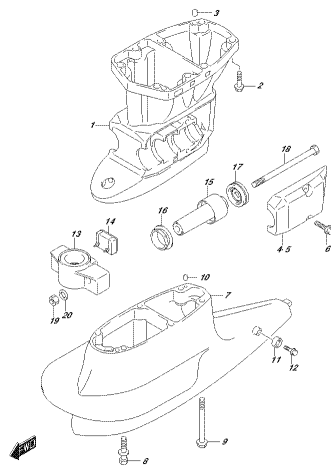


DFBM1E1L022-405G
CRUISE SHIFTER/SLD

FIG.405H

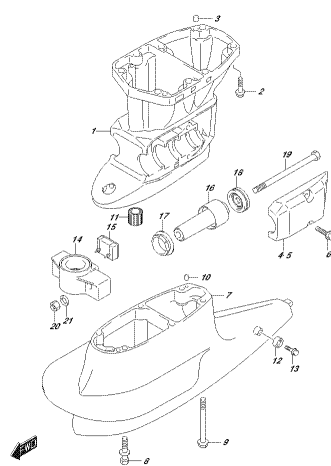


DFBM1E1L022-405H
CRUISE SHIFTER/SLD

FIG.405J

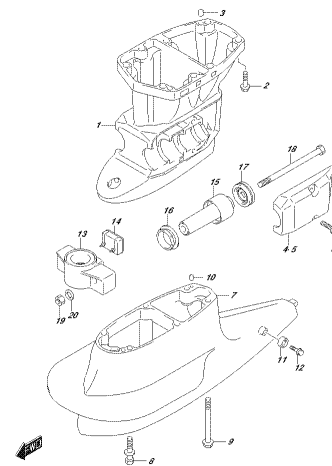


DFBM1E1L022-405J
CRUISE SHIFTER/SLD

FIG.407A

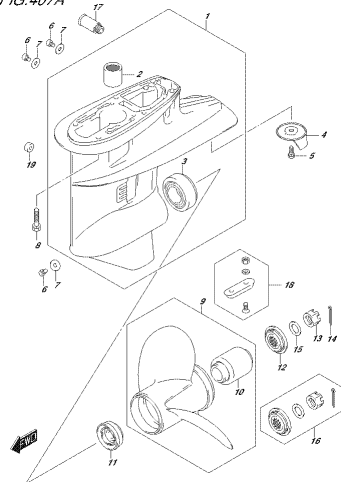


DFBM1E1L022-407A
GEAR CASE

FIG.407B

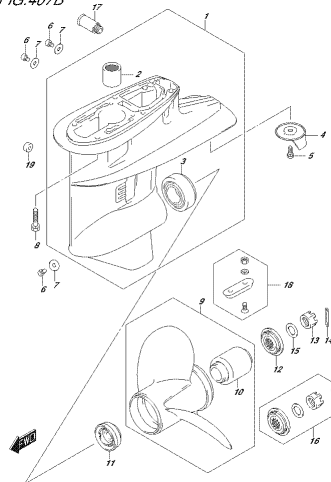


DFBM1E1L022-407B
GEAR CASE

FIG.407C

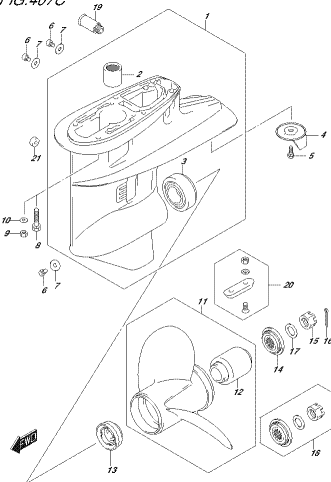


DFBM1E1L022-407C
GEAR CASE

FIG.407D

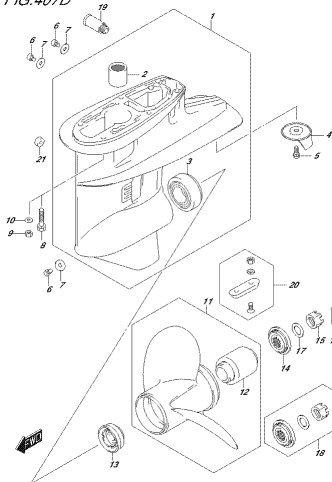


DFBM1E1L022-407D
GEAR CASE

FIG.407E

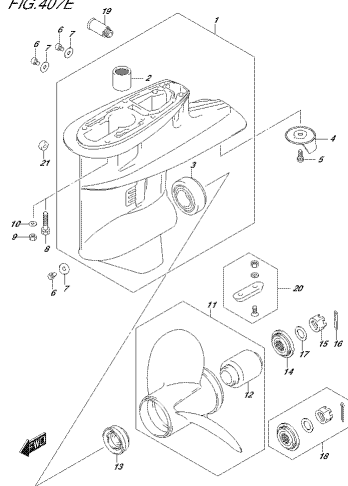


DFB04L E1 L, 402, 407E
SIDE COVER

FIG.407F

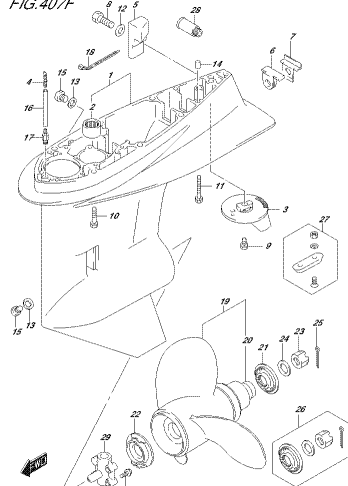


DFB04L E1 L, 402, 407F
SIDE COVER

FIG.407G

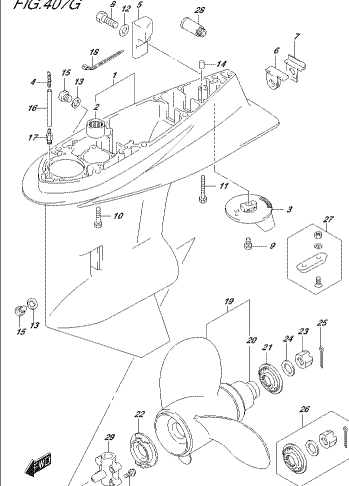


DFB04L E1 L, 402, 407G
SIDE COVER

FIG.410A

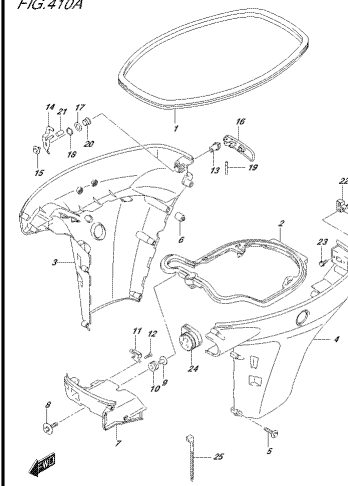


DFB04L E1 L, 402, 410A
SIDE COVER

FIG.410B

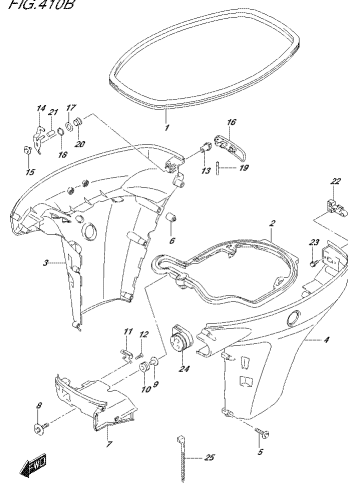


DFB04L E1 L, 402, 410B
SIDE COVER

FIG.420A

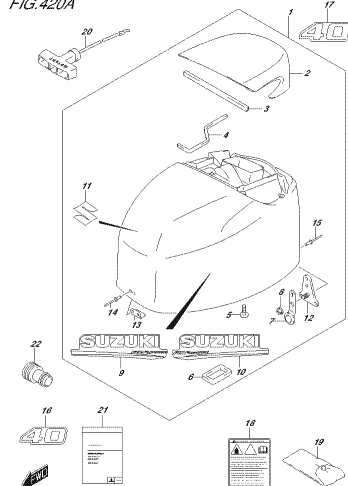


DFB04L E1 L, 402, 420A
SIDE COVER

FIG.420B

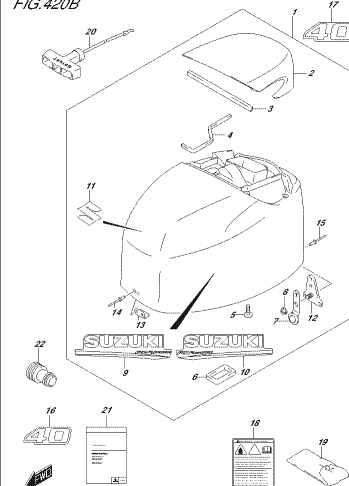


DFB04L E1 L, 402, 420B
SIDE COVER

FIG.420C

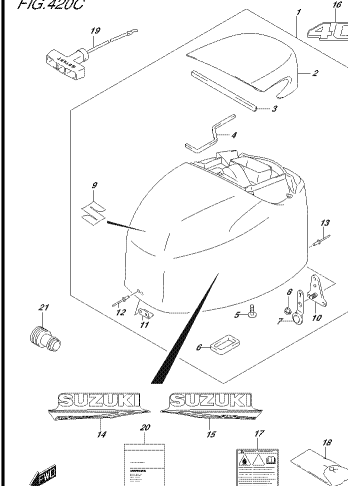


DFB04L E1 L, 402, 420C
SIDE COVER

FIG.420D

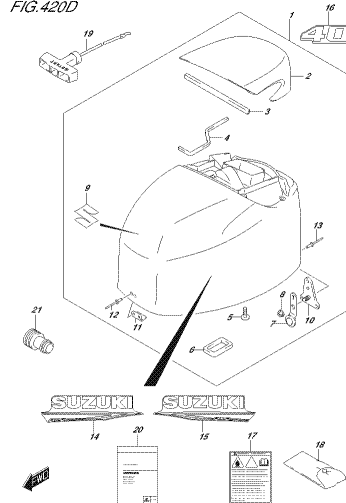


SPRINT L1, 402, 403
ENGINE COVER

FIG.420E

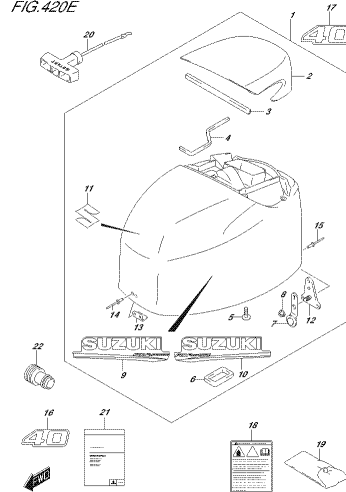


SPRINT L1, 402, 403F
ENGINE COVER

FIG.420F

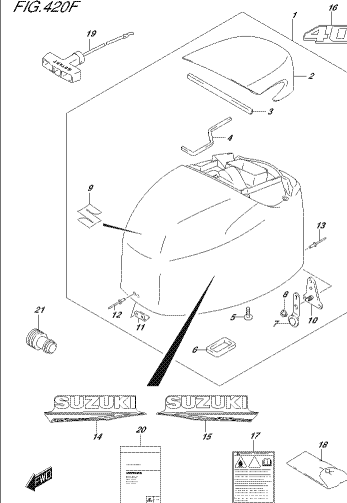


SPRINT L1, 402, 403F
ENGINE COVER

FIG.420G

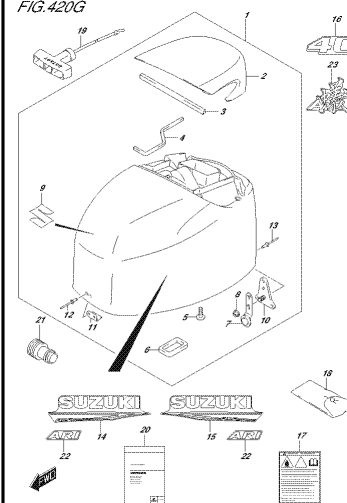


SPRINT L1, 402, 403G
ENGINE COVER

FIG.420H

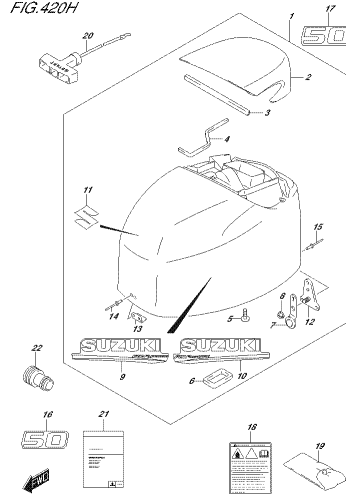


SPRINT L1, 402, 403H
ENGINE COVER

FIG.420J

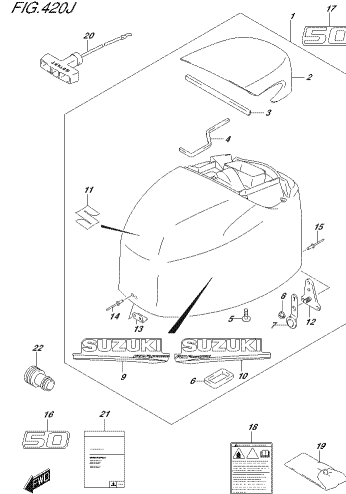


SPRINT L1, 402, 403H
ENGINE COVER

FIG.420K

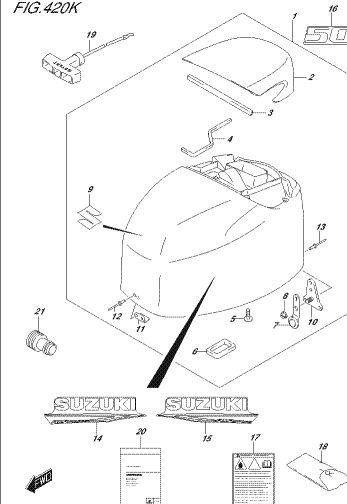


SPRINT L1, 402, 403K
ENGINE COVER

FIG.420L

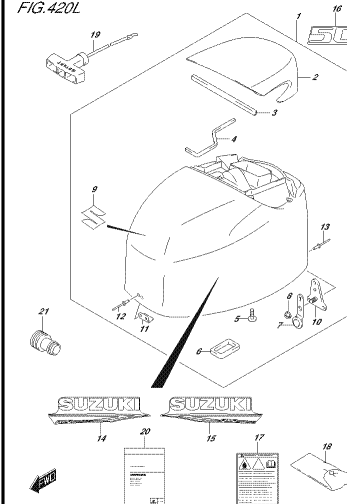


SPRINT L1, 402, 403L
ENGINE COVER

FIG.420M

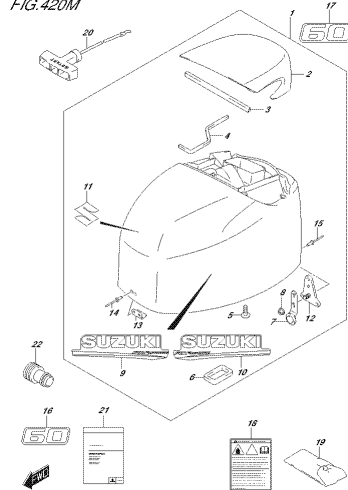


DP60M, E11, 422, 425H
EXTÉRIEURE COVER

FIG.420N

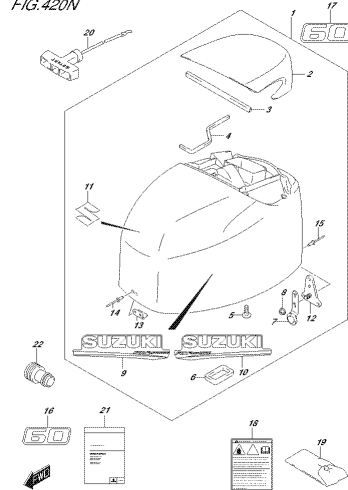


DP60M, E11, 422, 425N
EXTÉRIEURE COVER

FIG.420P

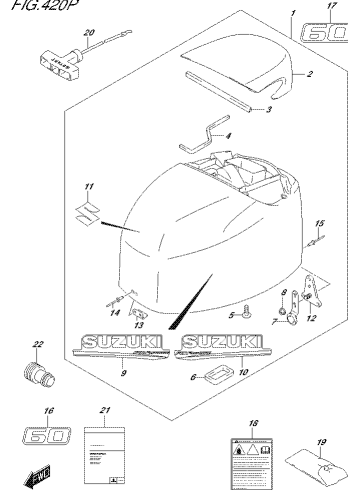


DP60M, E11, 422, 425P
EXTÉRIEURE COVER

FIG.420R

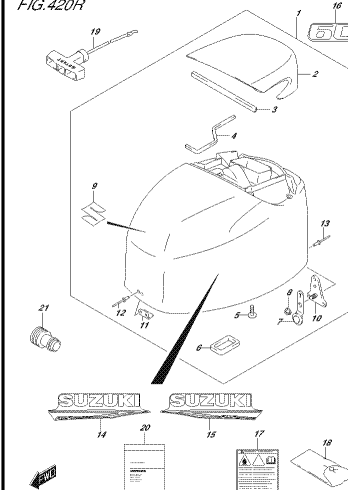


DP60M, E11, 422, 425R
EXTÉRIEURE COVER

FIG.420S

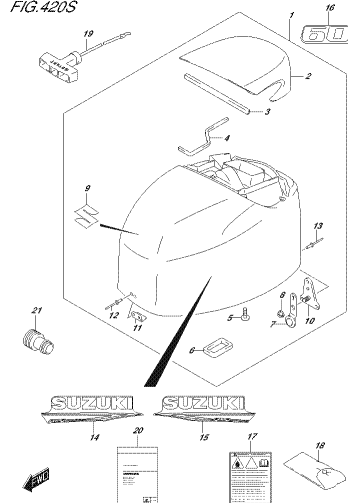


DP60M, E11, 422, 425S
EXTÉRIEURE COVER

FIG.420T

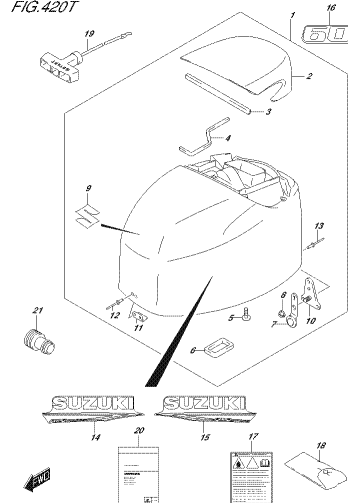


DP60M, E11, 422, 425T
EXTÉRIEURE COVER

FIG.420U

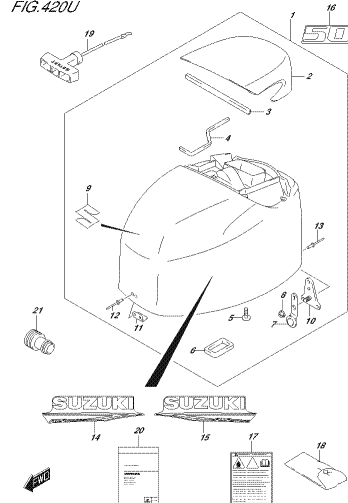


DP60M, E11, 422, 425U
EXTÉRIEURE COVER

FIG.430A

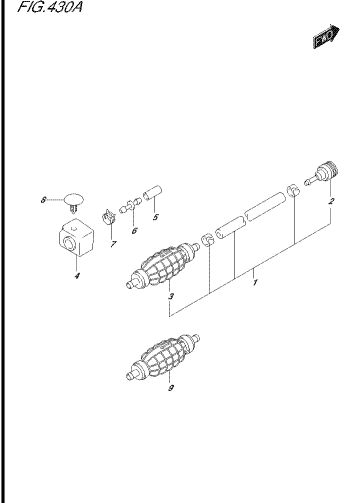


DP60M, E11, 422, 425A
FLUX 1425E

FIG.432A

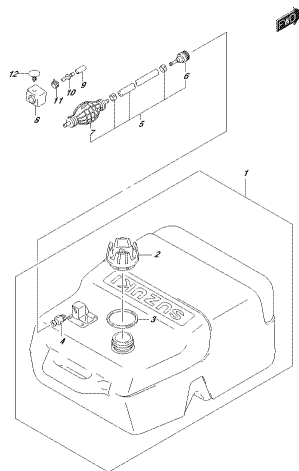


DP60M.E71.L.022.432A
T.E.C. 500W

FIG.442A

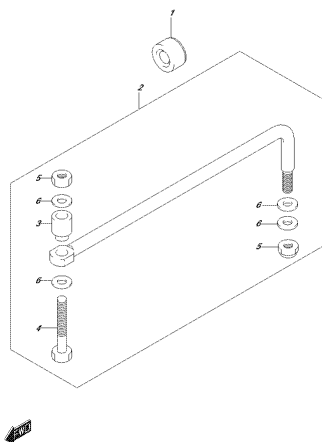


DP60M.E71.L.022.442A
CDSGLDHW

FIG.444A

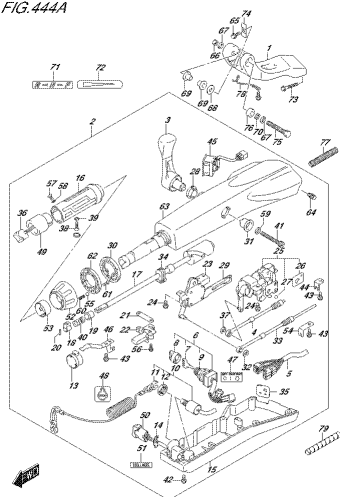


DP60M.E71.L.022.444A
TELECF-HANDLE

FIG.444B

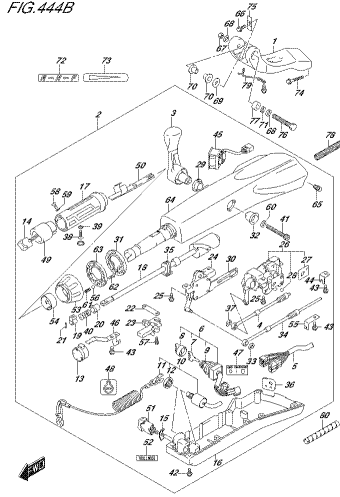


DP60M.E71.L.022.444B
TELECF-HANDLE

FIG.444C

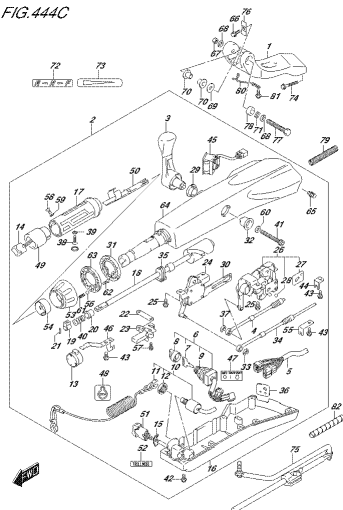


DP60M.E71.L.022.444C
TELECF-HANDLE

FIG.501A

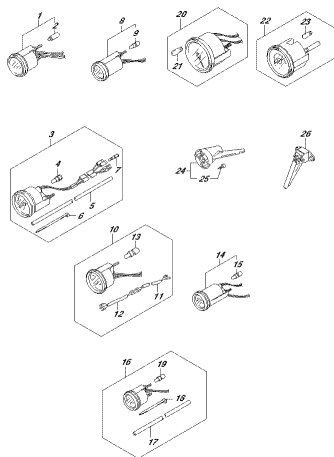


DP60M.E71.L.022.501A
OPT-METER

FIG.501B

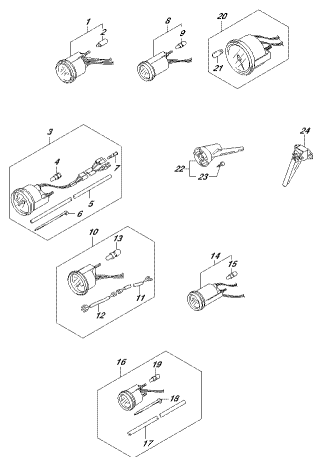


DP60M.E71.L.022.501B
OPT-METER

FIG.507A

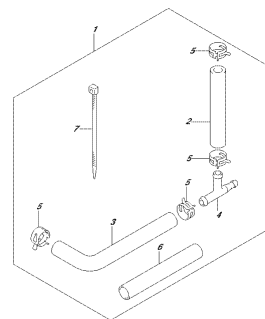


DP60M.E71.L.022.507A
OPT-HIGH TECH PRESSURE GAUGE SUBKIT

FIG.508A

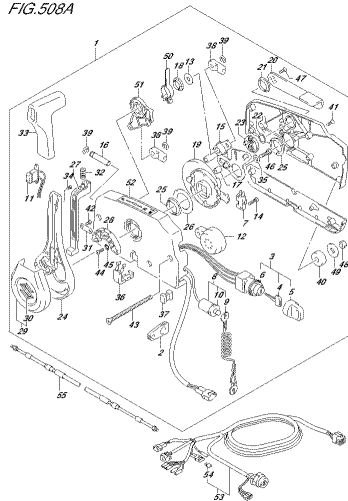


DFBML E1 L 022.508A
OPTIC REMOTE CONTROL

FIG.508B

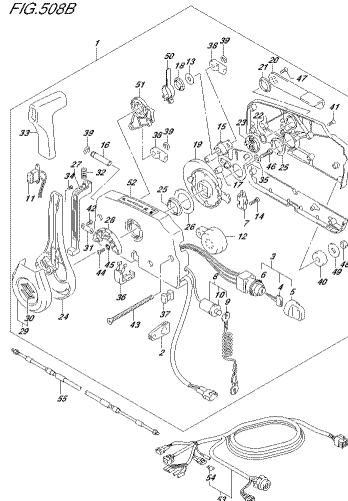


DFBML E1 L 022.508B
OPTIC REMOTE CONTROL

FIG.508C

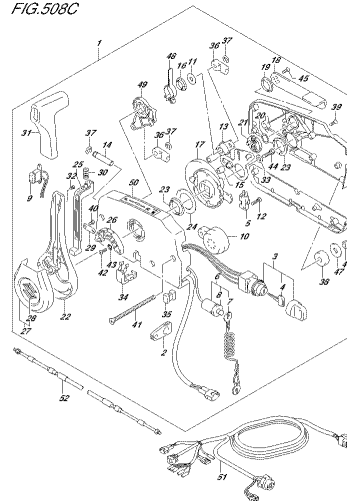


DFBML E1 L 022.508C
OPTIC REMOTE CONTROL

FIG.515A




DFBML E1 L 022.515A
OPTIC REMOTE CONTROL

FIG.517A

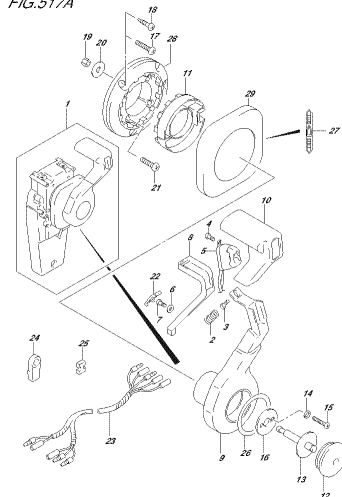


DFBML E1 L 022.517A
OPTIC REMOTE REMOCON (1)

FIG.518A

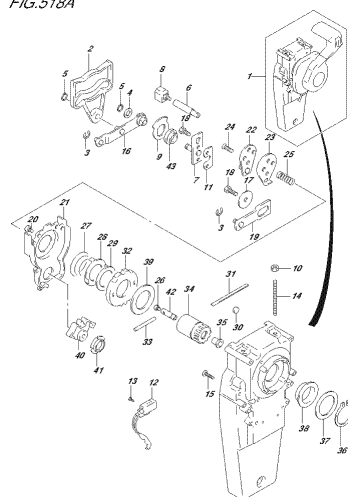


DFBML E1 L 022.518A
OPTIC REMOTE REMOCON (2)

FIG.521A

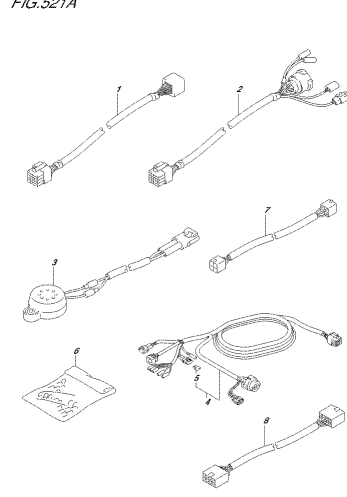


DFBML E1 L 022.521A
OPTIC REMOTE

FIG.521B

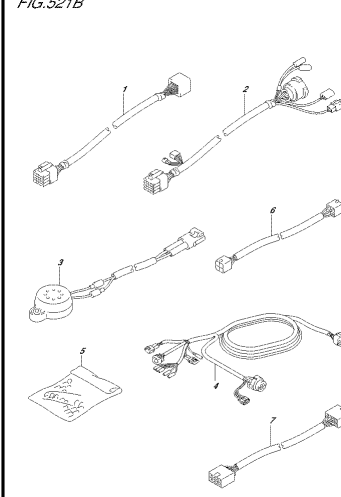


DFBML E1 L 022.521B
OPTIC REMOTE

FIG.521C

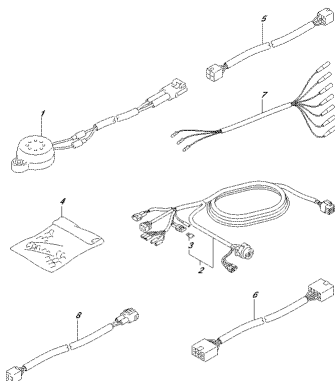


DFBML E11, 022, 301C
OPTICARDNESS

FIG.521D

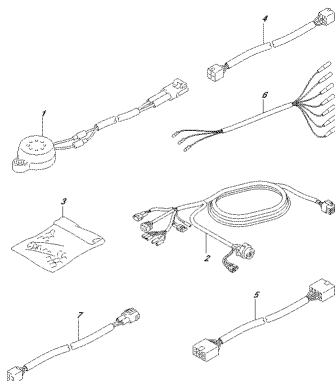


DFBML E11, 022, 301D
OPTICARDNESS

FIG.530A

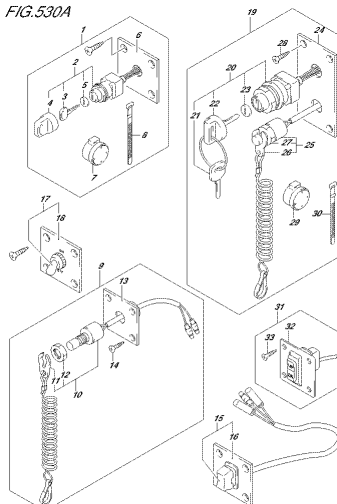


DFBML E11, 022, 303A
OPTICARDNESS

FIG.530B

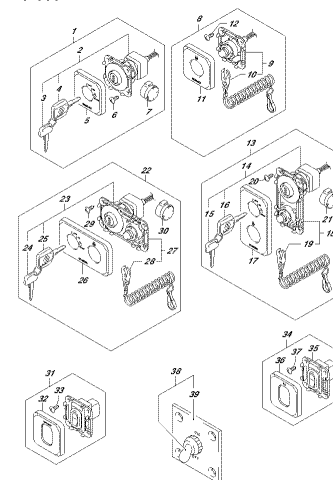


DFBML E11, 022, 303B
OPTICARDNESS

FIG.530C

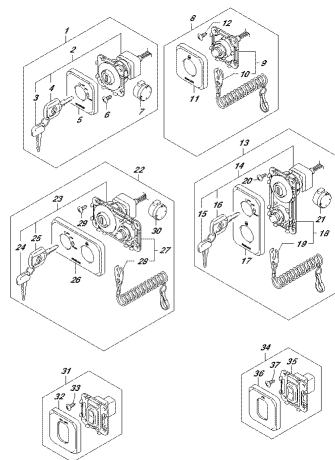


DFBML E11, 022, 303C
OPTICARDNESS

FIG.544A

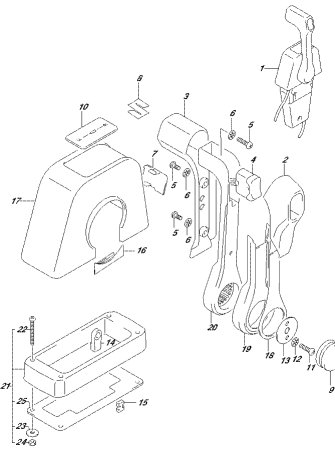


DFBML E11, 022, 304A
OPTICARDNESS CONTROL ASSY (SINGLE 1)

FIG.545A

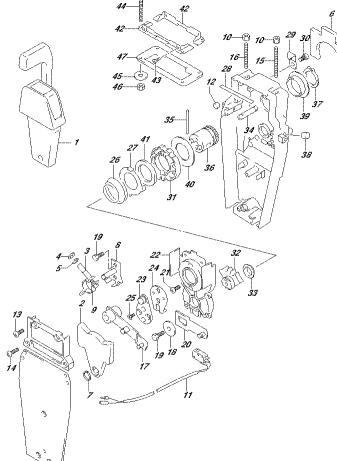


DFBML E11, 022, 304A
OPTICARDNESS CONTROL ASSY (SINGLE 2)

FIG.570A

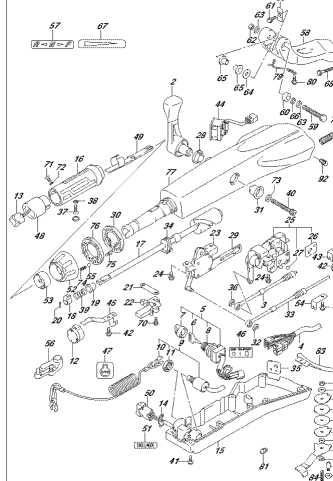


DFBML E11, 022, 370A
OPTICARDNESS CONTROL ASSY

FIG.570B

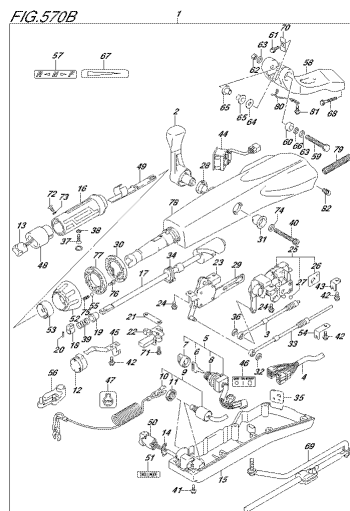


DP6M LE1 L 022 5702
OPTIFLEX HANDLE

FIG.575A

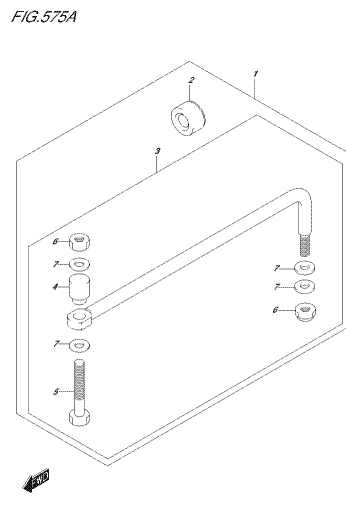


DP6M LE1 L 022 5754
OPTIFLEX CAN

FIG.585A

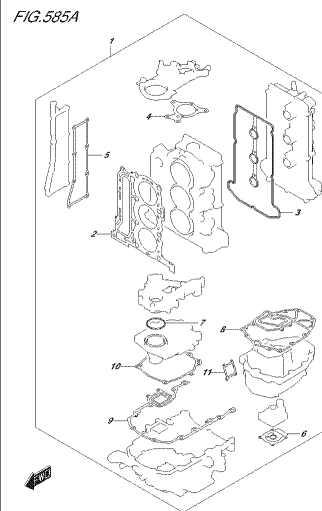


DP6M LE1 L 022 5854
OPTIFLEX NET SET

FIG.600A

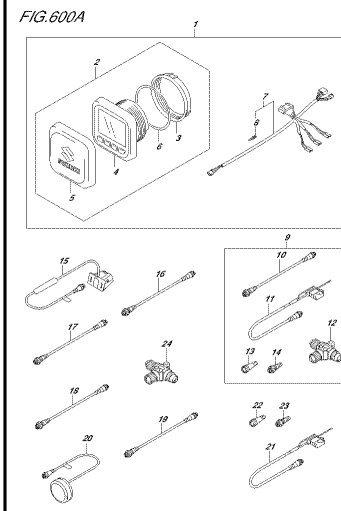


DP6M LE1 L 022 6004
OPTIFLEX FUNCTION GAUGE

FIG.600B

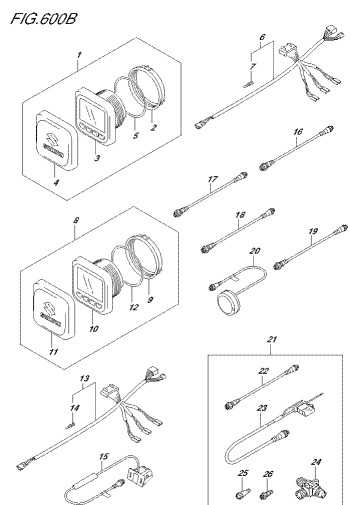


DP6M LE1 L 022 6020
OPTIFLEX FUNCTION GAUGE

FIG.600C

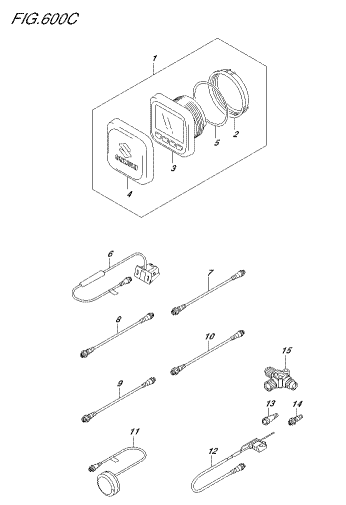

DP6M LE1 L 022 6020C
OPTIFLEX FUNCTION GAUGE

FIG.600D

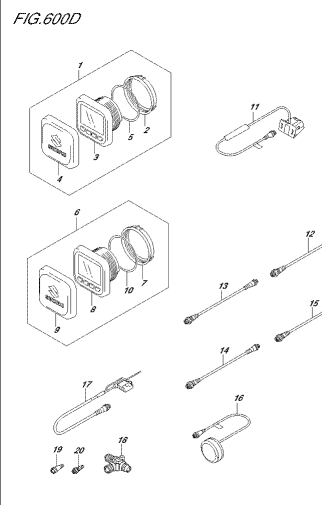

DP6M LE1 L 022 6020D
OPTIFLEX FUNCTION GAUGE

FIG.111A

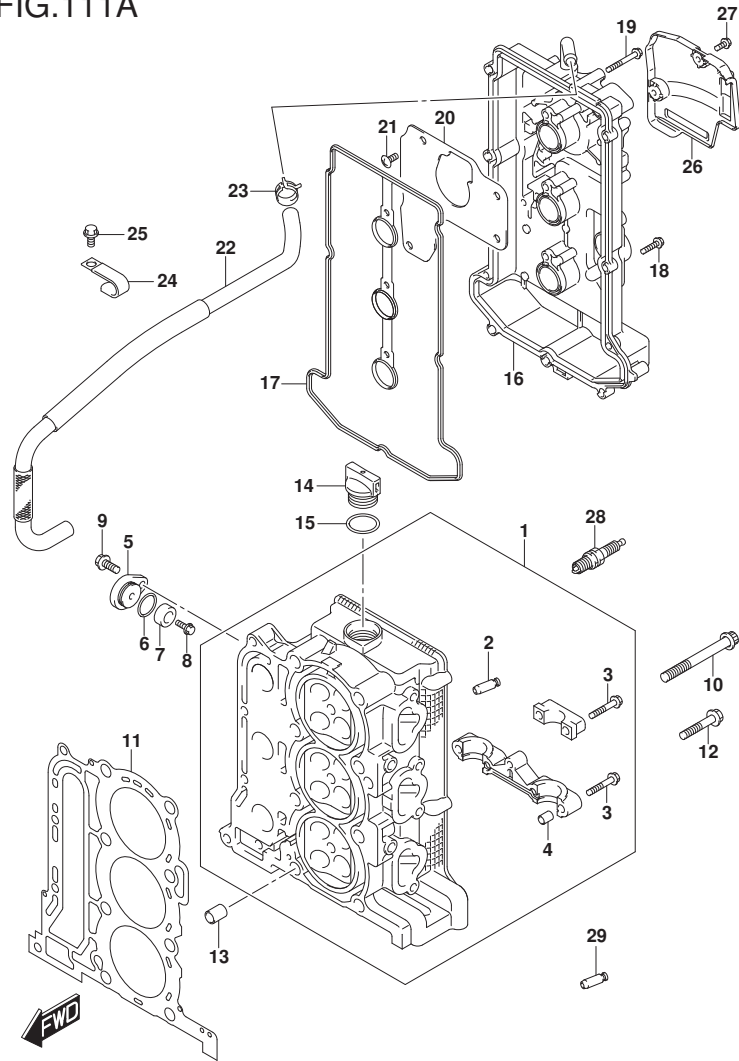


FIG.111A (1-B-2) CYLINDER HEAD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11100-88L10	HEAD ASSY, CYLINDER	1	
2	11115-73G01-001	.GUIDE, VALVE (OS:0.5)	12	
3	09103-06266	.BOLT (6X40)	17	
4	09206-08001	.PIN (8X11)	14	
5	11261-93J00	COVER, PROTECTION ANODE	2	
6	09280-22019	O RING (D:1.9,ID:21.8)	2	
7-1	55321-87J01	ANODE, PROTECTION	2	
7-2	55321-87J11	ANODE, PROTECTION	1	OPT
8	09103-06281	BOLT (6X14)	2	
9	01550-0820C	BOLT	2	
10	11119-87J00	BOLT, CYLINDER HEAD (10X95)	8	
11	11141-88L00	GASKET, CYLINDER HEAD	1	
12	01550-08457	BOLT	4	
13	04211-13189	PIN (10.4X13X18)	2	
14	11382-93J00	CAP, OIL FILLER	1	
15	09280-26006	O RING (D:3.1,ID:26.4)	1	
16	11170-88L10	COVER, CYLINDER HEAD	1	
17	11189-88L00	GASKET, CYLINDER HEAD COVER	1	
18	01547-0625C	BOLT	9	
19	01547-0645C	BOLT	3	
20	11173-88L00	PLATE, BREATHER	1	
21	02142-0612A	SCREW	4	
22	11174-88L01	HOSE, BREATHER	1	
23	09401-15414	CLIP	2	
24	09403-17312	CLAMP	2	
25	01550-0612C	BOLT	2	
26	11194-88L10	GUARD, FUEL HOSE	1	
27	01550-0616C	BOLT	2	
28	09482-00446	SPARK PLUG (DCPR6E)	3	NGK

NOTE : (020,021):(DF40A,DF40AQH,DF40ATH,
DF50A,DF50ATH,DF50AVT,DF50AVTH)

FIG.111A

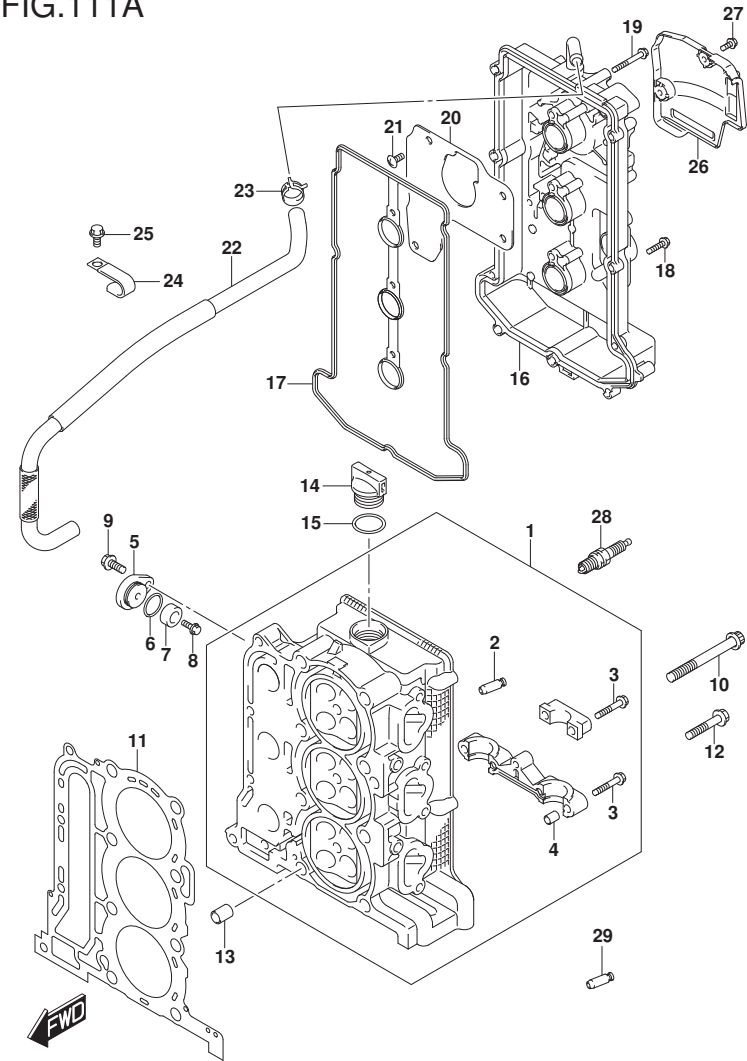


FIG.111A (1-B-3) CYLINDER HEAD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	11115-73G01-001	GUIDE, VALVE (OS:0.5)	4	OPT

NOTE : (020,021):(DF40A,DF40AQH,DF40ATH,
DF50A,DF50ATH,DF50AVT,DF50AVTH)

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AQH E01
- DF40ATH E01
- DF50A E01
- DF50A E03
- DF50A E11
- DF50ATH E01
- DF50AVT E03
- DF50AVTH E01

FIG.111B

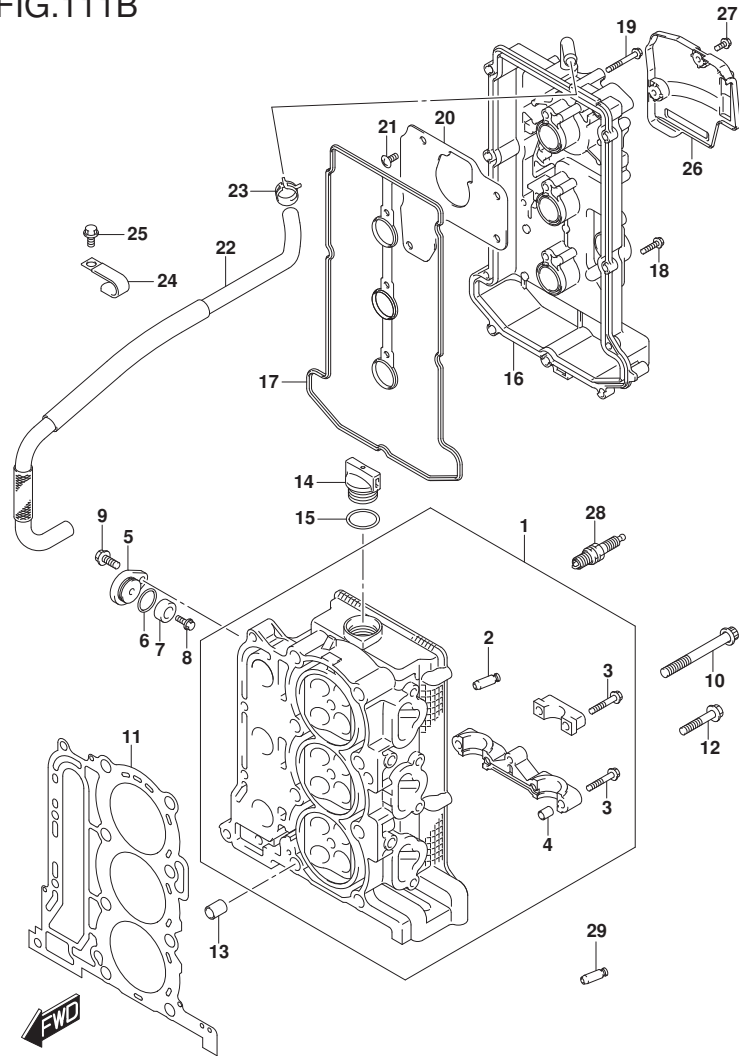


FIG.111B (1-B-4) CYLINDER HEAD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11100-88L10	HEAD ASSY, CYLINDER	1	
2	11115-73G01-001	.GUIDE, VALVE (OS:0.5)	12	
3	09103-06266	.BOLT (6X40)	17	
4	09206-08001	.PIN (8X11)	14	
5	11261-93J00	COVER, PROTECTION ANODE	2	
6	09280-22019	O RING (D:1.9,ID:21.8)	2	
7-1	55321-87J01	ANODE, PROTECTION	2	
7-2	55321-87J11	ANODE, PROTECTION	1	OPT
8	09103-06281	BOLT (6X14)	2	
9	01550-0820C	BOLT	2	
10	11119-87J00	BOLT, CYLINDER HEAD (10X95)	8	
11	11141-88L00	GASKET, CYLINDER HEAD	1	
12	01550-08457	BOLT	4	
13	04211-13189	PIN (10.4X13X18)	2	
14	11382-93J00	CAP, OIL FILLER	1	
15	09280-26006	O RING (D:3.1,ID:26.4)	1	
16	11170-88L10	COVER, CYLINDER HEAD	1	
17	11189-88L00	GASKET, CYLINDER HEAD COVER	1	
18	01547-0625C	BOLT	9	
19	01547-0645C	BOLT	3	
20	11173-88L00	PLATE, BREATHER	1	
21	02142-0612A	SCREW	4	
22	11174-88L01	HOSE, BREATHER	1	
23	09401-15414	CLIP	1	
24	09403-17312	CLAMP	2	
25	01550-0612C	BOLT	2	
26	11194-88L10	GUARD, FUEL HOSE	1	
27	01550-0616C	BOLT	2	
28	09482-00446	SPARK PLUG (DCPR6E)	3	NGK

NOTE : (020,021):(DF40AST,DF60A,DF60AQH,DF60ATH,DF60AVT,
DF40ASVT,DF60AVTH)

FIG.111B

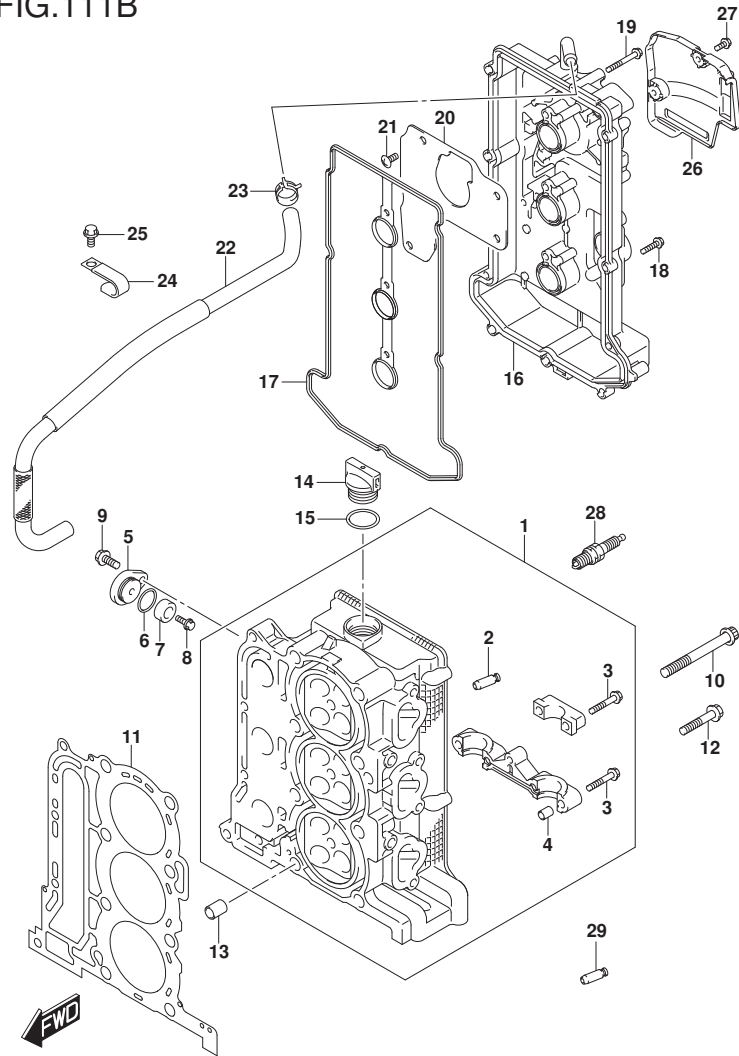


FIG.111B (1-B-5) CYLINDER HEAD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	11115-73G01-001	GUIDE, VALVE (OS:0.5)	4	OPT

NOTE : (020,021):(DF40AST,DF60A,DF60AQH,DF60ATH,DF60AVT,
DF40ASVT,DF60AVTH)

- DF40AST E34
- DF40ASVT E34
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.111C

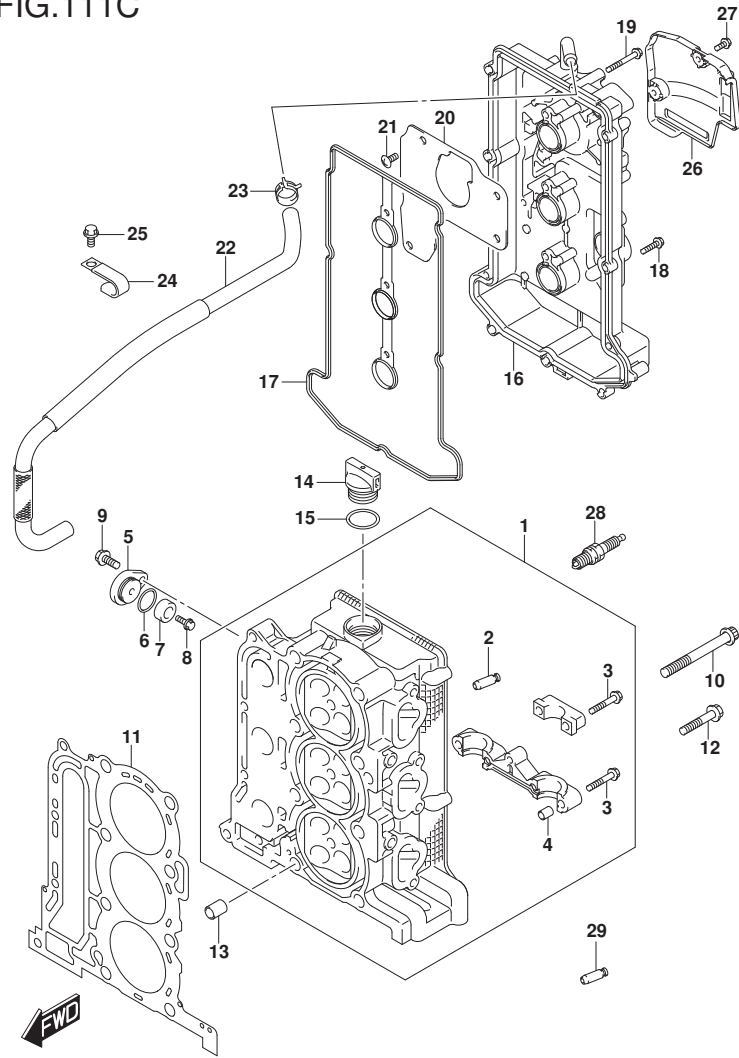


FIG.111C (1-B-6) CYLINDER HEAD (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11100-88L20	HEAD ASSY, CYLINDER	1	
2	11115-73G01-001	.GUIDE, VALVE (OS:0.5)	12	
3	09103-06266	.BOLT (6X40)	17	
4	09206-08001	.PIN (8X11)	14	
5	11261-93J00	COVER, PROTECTION ANODE	2	
6	09280-22019	O RING (D:1.9,ID:21.8)	2	
7-1	55321-87J01	ANODE, PROTECTION	2	
7-2	55321-87J11	ANODE, PROTECTION	1	OPT
8	09103-06281	BOLT (6X14)	2	
9	01550-0820C	BOLT	2	
10	11119-87J00	BOLT, CYLINDER HEAD (10X95)	8	
11	11141-88L00	GASKET, CYLINDER HEAD	1	
12	01550-08457	BOLT	4	
13	04211-13189	PIN (10.4X13X18)	2	
14	11382-93J00	CAP, OIL FILLER	1	
15	09280-26006	O RING (D:3.1,ID:26.4)	1	
16	11170-88L10	COVER, CYLINDER HEAD	1	
17	11189-88L00	GASKET, CYLINDER HEAD COVER	1	
18	01547-0625C	BOLT	9	
19	01547-0645C	BOLT	3	
20	11173-88L00	PLATE, BREATHER	1	
21	02112-0612A	SCREW	4	
22	11174-88L01	HOSE, BREATHER	1	
23	09401-15414	CLIP	1	
24	09403-17312	CLAMP	2	
25	01550-0612C	BOLT	2	
26	11194-88L10	GUARD, FUEL HOSE	1	
27	01550-0616C	BOLT	2	
28	09482-00446	SPARK PLUG (DCPR6E)	3	NGK

FIG.111C

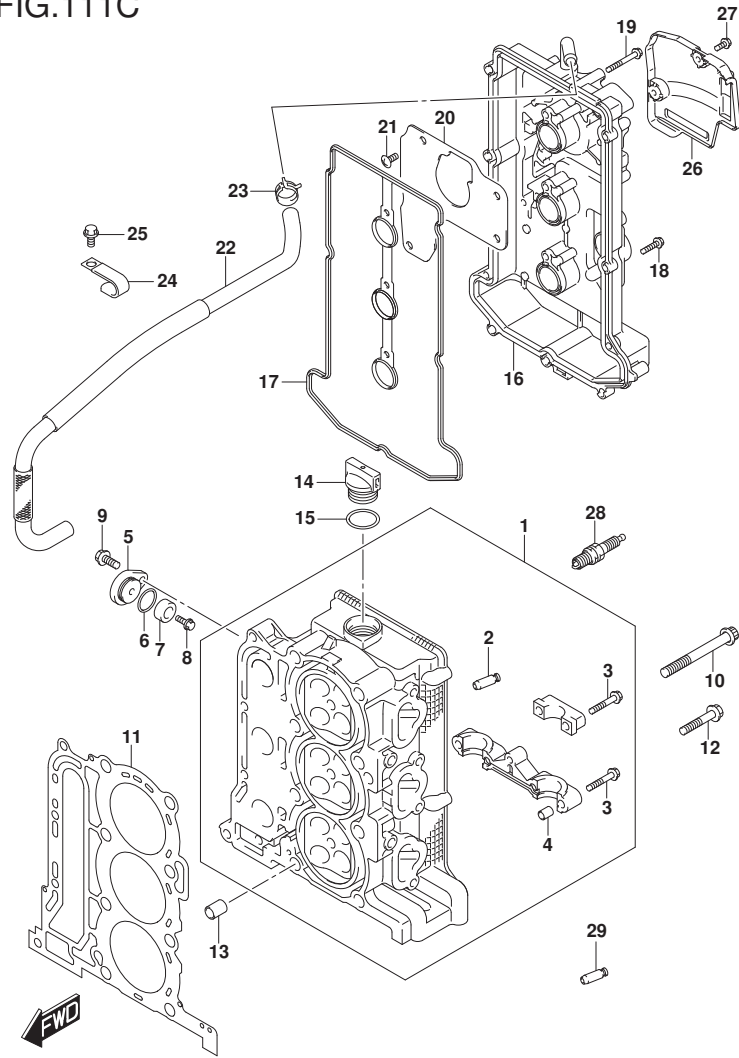


FIG.111C (1-B-7) CYLINDER HEAD (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	11115-73G01-001	GUIDE, VALVE (OS:0.5)	4	OPT

- DF40A E11
- DF40AQH E01
- DF40AST E34
- DF40ASVT E34
- DF40ATH E01
- DF50A E11
- DF50ATH E01
- DF50AVT E03
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E11
- DF60AVTH E40

FIG.113A

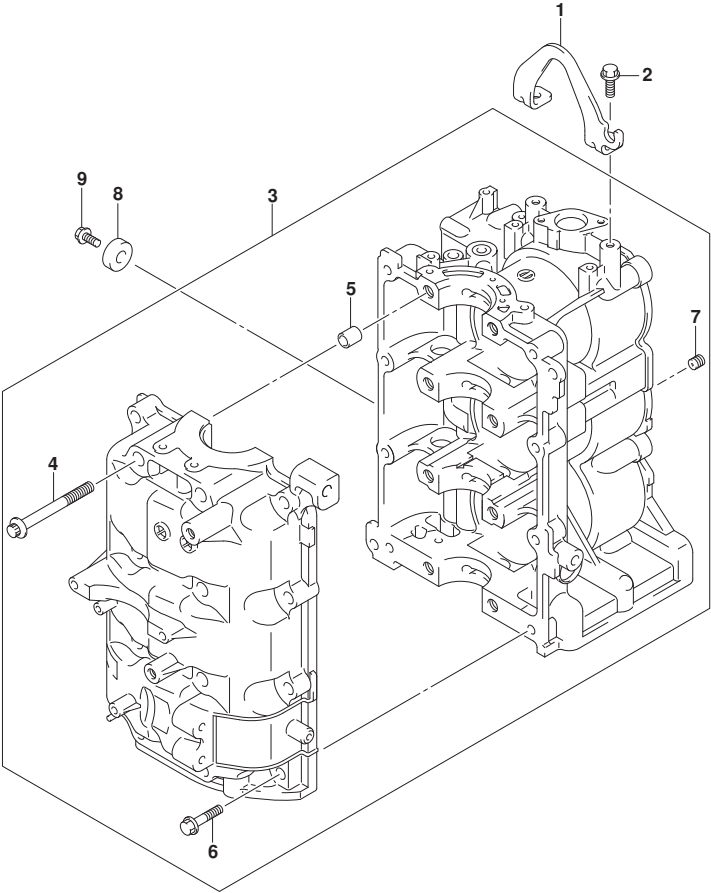


FIG.113A (1-B-8) CYLINDER BLOCK (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11291-88L00	HOOK, ENGINE	1	
2	01550-0820C	BOLT	2	
3	11301-88L20	BLOCK SET, CYLINDER	1	
4	11117-89J20	.BOLT, CRANKCASE INSIDE (10X98)	8	
5	09206-13019	.PIN (10.4X13X16)	4	
6	01550-08407	.BOLT	8	
7	11112-88L00	.PLUG, OIL VENTURI	1	
8	55321-87J01	ANODE, PROTECTION	1	

FIG.113A

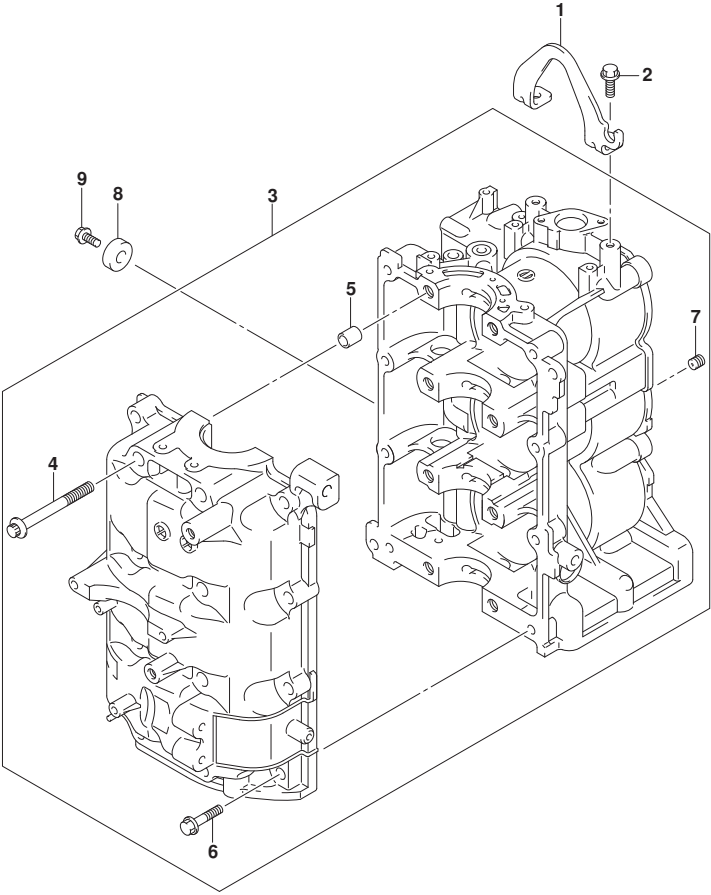


FIG.113A (1-B-9) CYLINDER BLOCK (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9	09103-06281	BOLT (6X14)	1	

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AQH E01
- DF40AST E34
- DF40ASVT E34
- DF40ATH E01
- DF50A E01
- DF50A E03
- DF50A E11
- DF50ATH E01
- DF50AVT E03
- DF50AVTH E01
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.113B

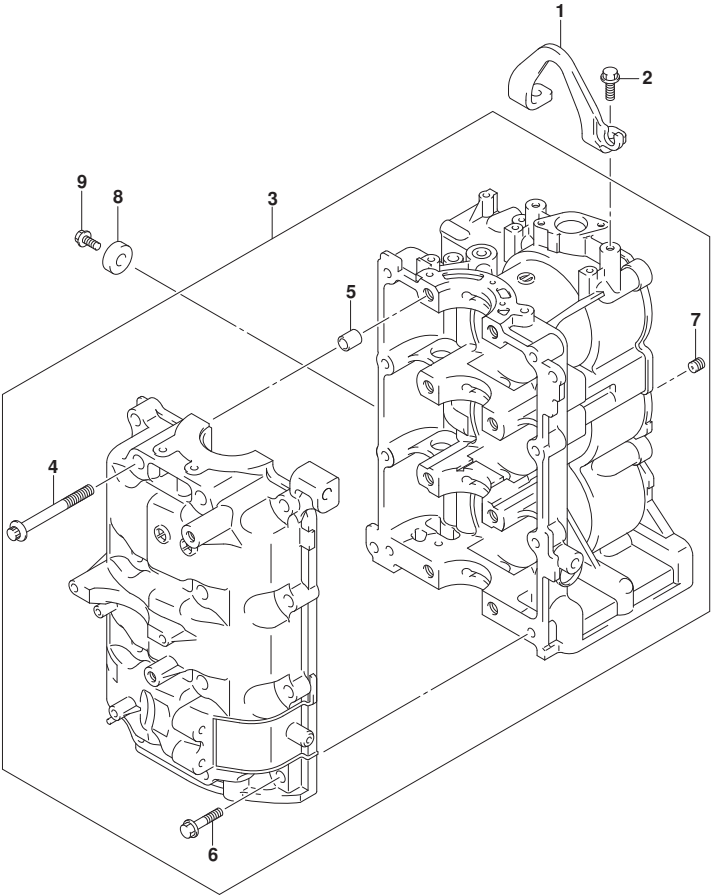


FIG.113B (1-B-10) CYLINDER BLOCK (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11291-88L10	HOOK, ENGINE	1	
2	01550-0820C	BOLT	2	
3	11301-88L20	BLOCK SET, CYLINDER	1	
4	11117-89J20	.BOLT, CRANKCASE INSIDE (10X98)	8	
5	09206-13019	.PIN (10.4X13X16)	4	
6	01550-08407	.BOLT	8	
7	11112-88L00	.PLUG, OIL VENTURI	1	
8	55321-87J01	ANODE, PROTECTION	1	
9	09103-06281	BOLT (6X14)	1	

- DF40A E11
- DF40AQH E01
- DF40AST E34
- DF40ASVT E34
- DF40ATH E01
- DF50A E11
- DF50ATH E01
- DF50AVT E03
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E11
- DF60AVTH E40

FIG.116A

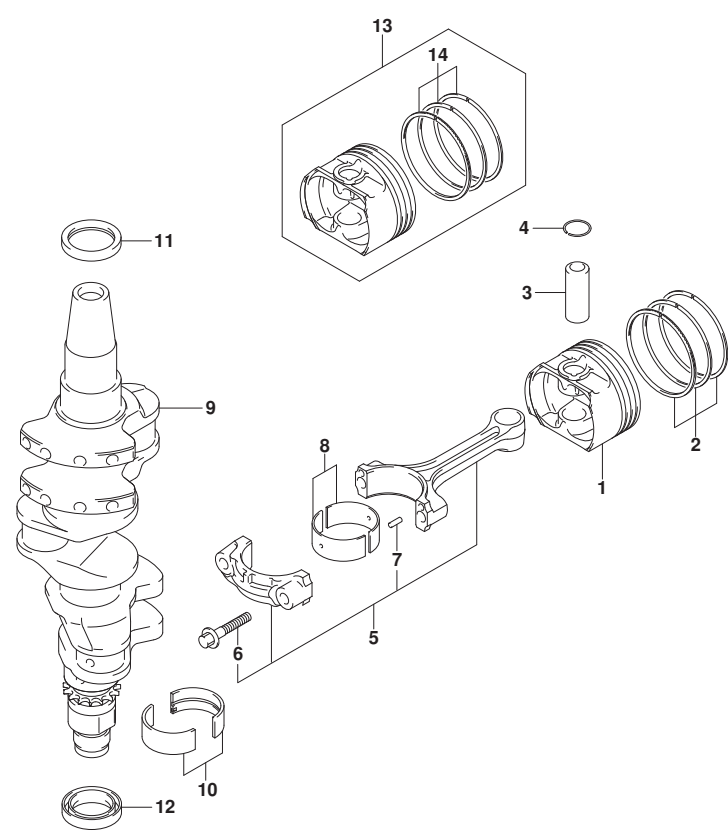


FIG.116A (1-B-11) CRANKSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-88L00	PISTON	3	
2	12140-88L01	RING SET, PISTON	3	
3	12151-54A50	PIN, PISTON	3	
4	09381-18002	CIRCLIP	6	
5	12160-88L01	CONNROD ASSY	3	
6	12163-69J00	.BOLT, CONNROD	6	
7	04221-04089	.PIN	6	
8-1	12100-51810-0A0	BEARING SET, CONNROD (GREEN)	3	
8-2	12100-51810-0B0	BEARING SET, CONNROD (BLACK)	3	
8-3	12100-51810-0C0	BEARING SET, CONNROD (NON)	3	
8-4	12100-51810-0D0	BEARING SET, CONNROD (YELLOW)	3	
8-5	12100-51810-0E0	BEARING SET, CONNROD (BLUE)	3	
9	12220-88L00	CRANKSHAFT	1	
10-1	12340-75FA0-0A0	BEARING SET, CRANKSHAFT (GREEN)	4	
10-2	12340-75FA0-0B0	BEARING SET, CRANKSHAFT (BLACK)	4	
10-3	12340-75F00-0C0	BEARING SET, CRANKSHAFT (NON)	4	
10-4	12340-75F00-0D0	BEARING SET, CRANKSHAFT (YELLOW)	4	
10-5	12340-75F00-0E0	BEARING SET, CRANKSHAFT (BLUE)	4	
11	09283-37005	OIL SEAL (37X49X6)	1	
12	12281-87J00	OIL SEAL, CRANKSHAFT UNDER (30X44X7)	1	LOWER
13	12100-88L01-050	PISTON SET (OS:0.5)	3	OPT
14	12140-88L01-050	.RING SET, PISTON	3	OPT

FIG.119A

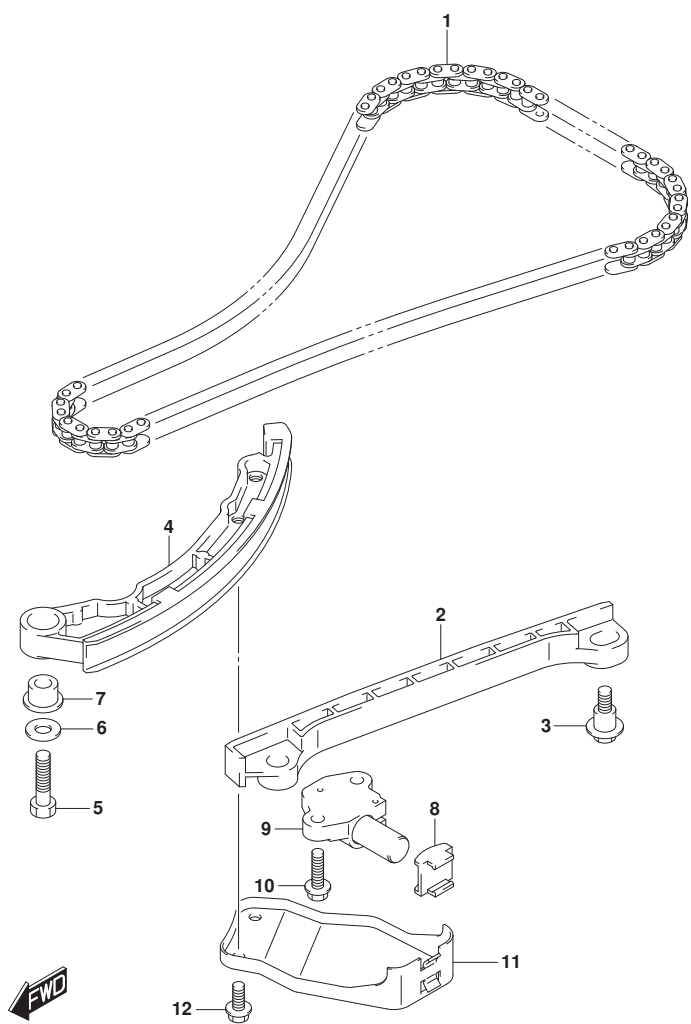


FIG.119A (1-B-12) TIMING CHAIN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12761-88L00	CHAIN, TIMING	1	
2	12771-87J00	GUIDE, TIMING CHAIN NO.1	1	
3	12776-85FA0	BOLT, TIMING CHAIN GUIDE	2	
4	12811-88L00	TENSIONER, TIMING CHAIN	1	
5	09100-08260	BOLT (8X30)	1	
6	09160-08123	WASHER (8.5X20X1.2)	1	
7	12812-73G10	SPACER, TIMING CHAIN TENSIONER	1	
8	12813-73G00	PAD, TIMING CHAIN TENSIONER	1	
9	12831-90J02	ADJUSTER ASSY, TENSIONER	1	
10	01550-0620A	BOLT	2	
11	12821-88L00	LINK, TIMING CHAIN TENSIONER	1	
12	01550-0612A	BOLT (6X12)	2	

FIG.121A

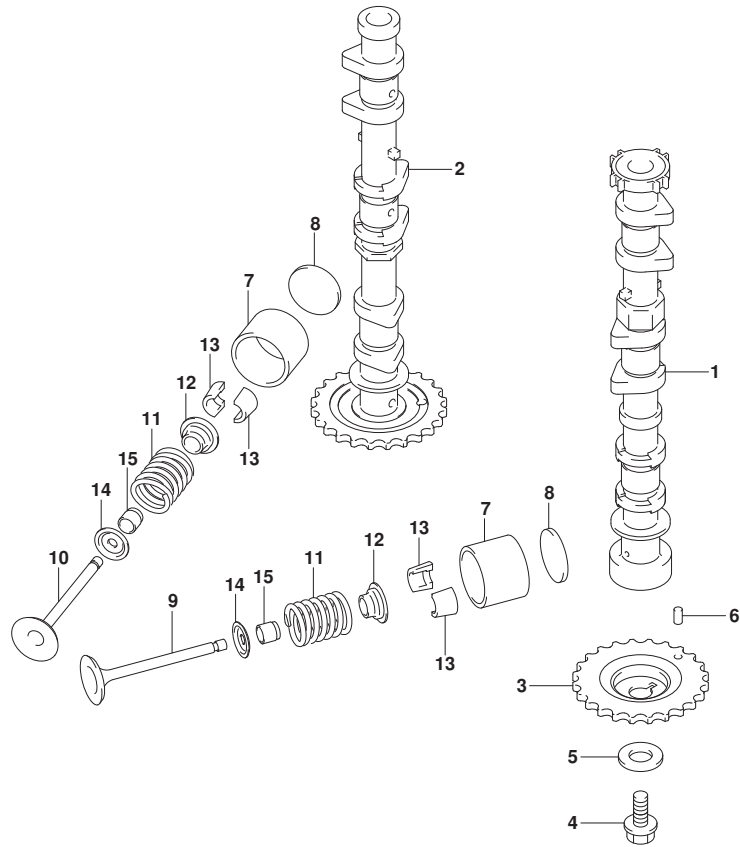


FIG.121A (1-B-13) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12710-88L00	CAMSHAFT, INTK	1	
2	12720-88L00	CAMSHAFT, EXH (NT:34)	1	
3	12741-88L00	SPROCKET, CAMSHAFT TIMING (NT:34)	1	
4	09103-10189	BOLT (10X23)	1	
5	09160-10093	WASHER (10.5X24X2.3)	1	
6	04221-05109	PIN	1	
7	12891-73G01	TAPPET	12	
8-1	12892-73G01-218	SHIM, TAPPET (T:2.18)	AR	OPT
8-2	12892-73G01-220	SHIM, TAPPET (T:2.20)	AR	OPT
8-3	12892-73G01-222	SHIM, TAPPET (T:2.22)	AR	OPT
8-4	12892-73G01-224	SHIM, TAPPET (T:2.24)	AR	OPT
8-5	12892-73G01-226	SHIM, TAPPET (T:2.26)	AR	OPT
8-6	12892-73G01-228	SHIM, TAPPET (T:2.28)	AR	OPT
8-7	12892-73G01-230	SHIM, TAPPET (T:2.30)	AR	
8-8	12892-73G01-232	SHIM, TAPPET (T:2.32)	AR	
8-9	12892-73G01-234	SHIM, TAPPET (T:2.34)	AR	
8-10	12892-73G01-236	SHIM, TAPPET (T:2.36)	AR	
8-11	12892-73G01-238	SHIM, TAPPET (T:2.38)	AR	
8-12	12892-73G01-240	SHIM, TAPPET (T:2.40)	AR	
8-13	12892-73G01-242	SHIM, TAPPET (T:2.42)	AR	
8-14	12892-73G01-244	SHIM, TAPPET (T:2.44)	AR	
8-15	12892-73G01-246	SHIM, TAPPET (T:2.46)	AR	
8-16	12892-73G01-248	SHIM, TAPPET (T:2.48)	AR	
8-17	12892-73G01-250	SHIM, TAPPET (T:2.50)	AR	
8-18	12892-73G01-252	SHIM, TAPPET (T:2.52)	AR	
8-19	12892-73G01-254	SHIM, TAPPET (T:2.54)	AR	
8-20	12892-73G01-256	SHIM, TAPPET (T:2.56)	AR	
8-21	12892-73G01-258	SHIM, TAPPET (T:2.58)	AR	
8-22	12892-73G01-260	SHIM, TAPPET (T:2.60)	AR	
8-23	12892-73G01-262	SHIM, TAPPET (T:2.62)	AR	
8-24	12892-73G01-264	SHIM, TAPPET (T:2.64)	AR	
8-25	12892-73G01-266	SHIM, TAPPET (T:2.66)	AR	
8-26	12892-73G01-268	SHIM, TAPPET (T:2.68)	AR	
8-27	12892-73G01-270	SHIM, TAPPET (T:2.70)	AR	
8-28	12892-73G01-272	SHIM, TAPPET (T:2.72)	AR	

FIG.121A

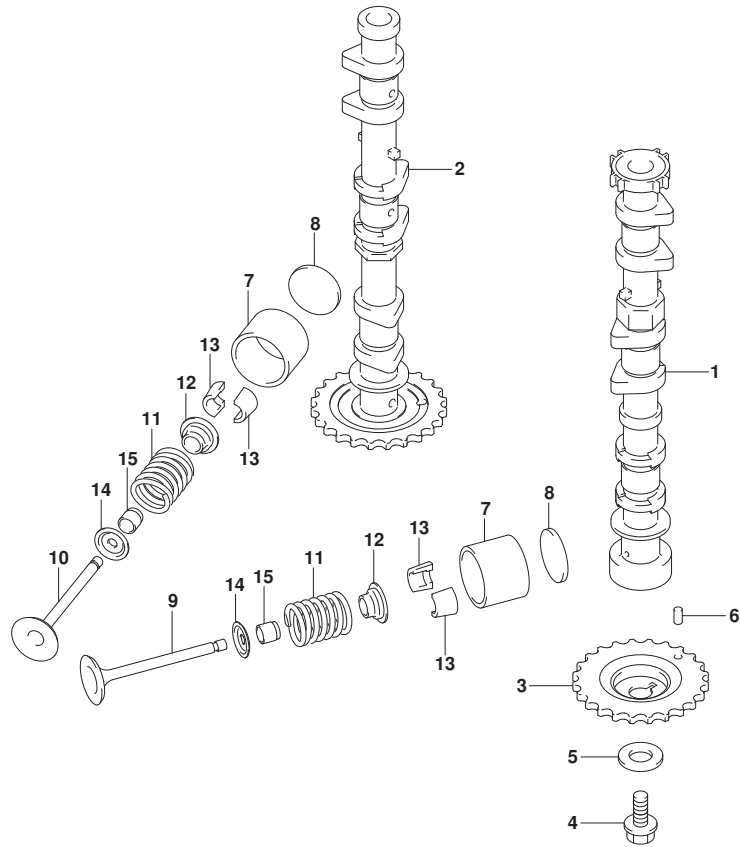


FIG.121A (1-B-14) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
8-29	12892-73G01-274	SHIM, TAPPET (T:2.74)	AR		
8-30	12892-73G01-276	SHIM, TAPPET (T:2.76)	AR		
8-31	12892-73G01-278	SHIM, TAPPET (T:2.78)	AR		
8-32	12892-73G01-280	SHIM, TAPPET (T:2.80)	AR		
8-33	12892-73G01-282	SHIM, TAPPET (T:2.82)	AR	OPT	
8-34	12892-73G01-284	SHIM, TAPPET (T:2.84)	AR	OPT	
8-35	12892-73G01-286	SHIM, TAPPET (T:2.86)	AR	OPT	
8-36	12892-73G01-288	SHIM, TAPPET (T:2.88)	AR	OPT	
8-37	12892-73G01-290	SHIM, TAPPET (T:2.90)	AR	OPT	
8-38	12892-73G01-292	SHIM, TAPPET (T:2.92)	AR	OPT	
8-39	12892-73G01-294	SHIM, TAPPET (T:2.94)	AR	OPT	
8-40	12892-73G01-296	SHIM, TAPPET (T:2.96)	AR	OPT	
8-41	12892-73G01-298	SHIM, TAPPET (T:2.98)	AR	OPT	
8-42	12892-73G01-300	SHIM, TAPPET (T:3.00)	AR	OPT	
9	12911-88L00	VALVE, INTAKE	6		
10	12915-73G20	VALVE, EXHAUST	6		
11	12921-87J11	SPRING, VALVE	12		
12	12931-78G00	RETAINER, VALVE SPRING	12		
13	12932-24400	COTTER, VALVE	24		
14	12933-51E00	SEAT, VALVE SPRING	12		
15	09289-05012	OIL SEAL (5.5X11.5X9.3)	12		

FIG.124A

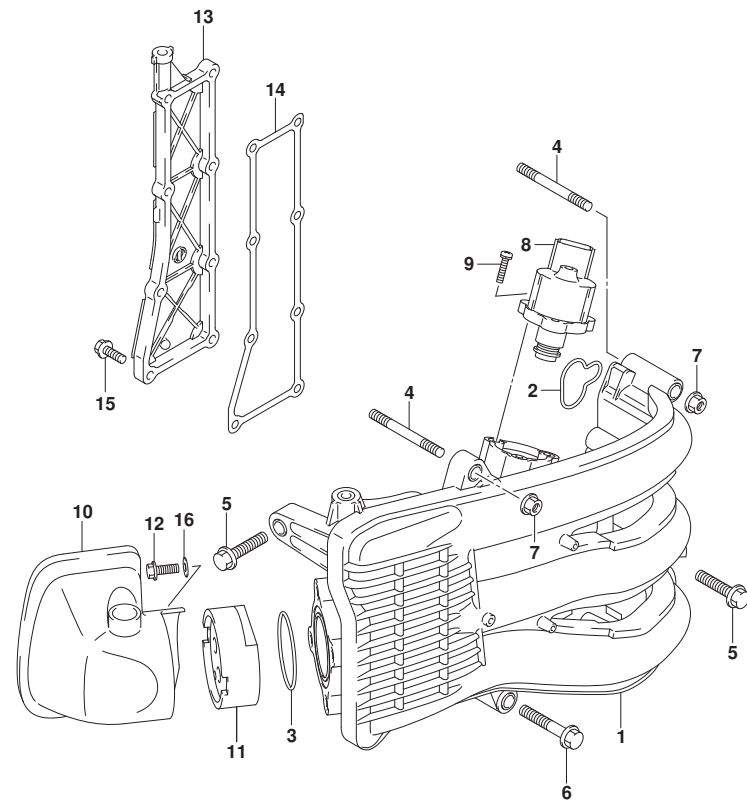


FIG.124A (1-C-2) INTAKE MANIFOLD/SILENCER/EXHAUST COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-88L00	MANIFOLD, INTAKE	1	
2	13119-88L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-88L00	.GASKET, THROTTLE BODY	1	
4	01421-08607	STUD BOLT	2	
5	01550-0830C	BOLT	6	
6	01550-0840C	BOLT	1	
7	08316-1008C	NUT	2	
8	18137-88L02	VALVE, IAC	1	
9	02112-34167	SCREW	3	
10	13810-88L00	SILENCER	1	
11	13820-88L01	HOLDER, SILENCER	1	
12	01547-0616C	BOLT	1	
13	14141-88L00	COVER, EXHAUST	1	
14	14151-88L00	GASKET, EXH COVER	1	
15	01550-0620C	BOLT	8	
16	09160-06094	WASHER (6.5X15X1.0)	1	

NOTE : (DF40A,DF40AQH,DF40ATH):(020,021)

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AQH E01
- DF40ATH E01



FIG.124B

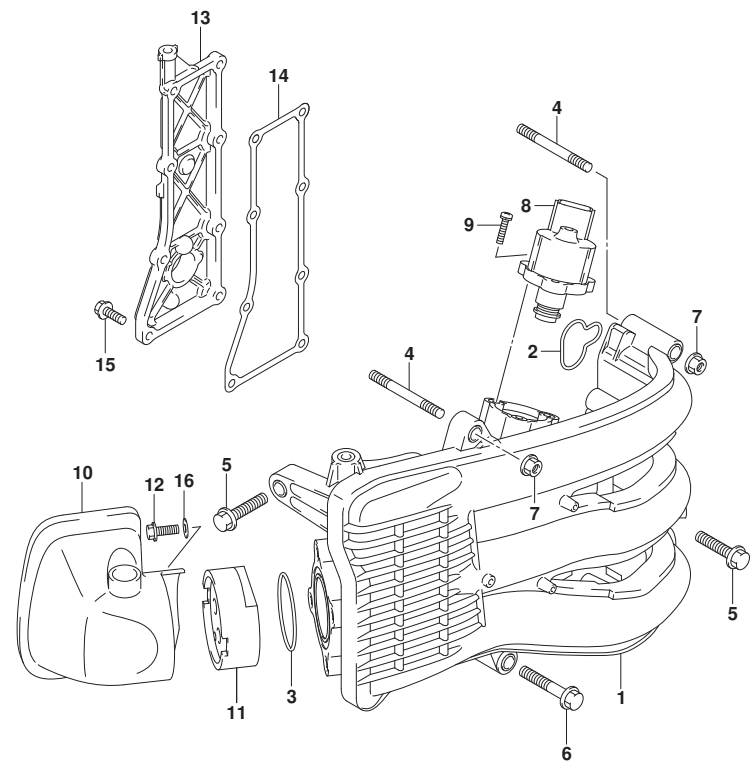


FIG.124B (1-C-3) INTAKE MANIFOLD/SILENCER/EXHAUST COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-88L00	MANIFOLD, INTAKE	1	
2	13119-88L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-88L00	.GASKET, THROTTLE BODY	1	
4	01421-08607	STUD BOLT	2	
5	01550-0830C	BOLT	6	
6	01550-0840C	BOLT	1	
7	08316-1008C	NUT	2	
8	18137-88L02	VALVE, IAC	1	
9	02112-34167	SCREW	3	
10	13810-88L00	SILENCER	1	
11	13820-88L01	HOLDER, SILENCER	1	
12	01547-0616C	BOLT	1	
13	14141-88L10	COVER, EXHAUST	1	
14	14151-88L00	GASKET, EXH COVER	1	
15	01550-0620C	BOLT	8	
16	09160-06094	WASHER (6.5X15X1.0)	1	

NOTE : (DF40A,DF40AQH,DF40ATH,DF40AST,DF40ASVT):022

- DF40A E11
- DF40AQH E01
- DF40AST E34
- DF40ASVT E34
- DF40ATH E01



FIG.124C

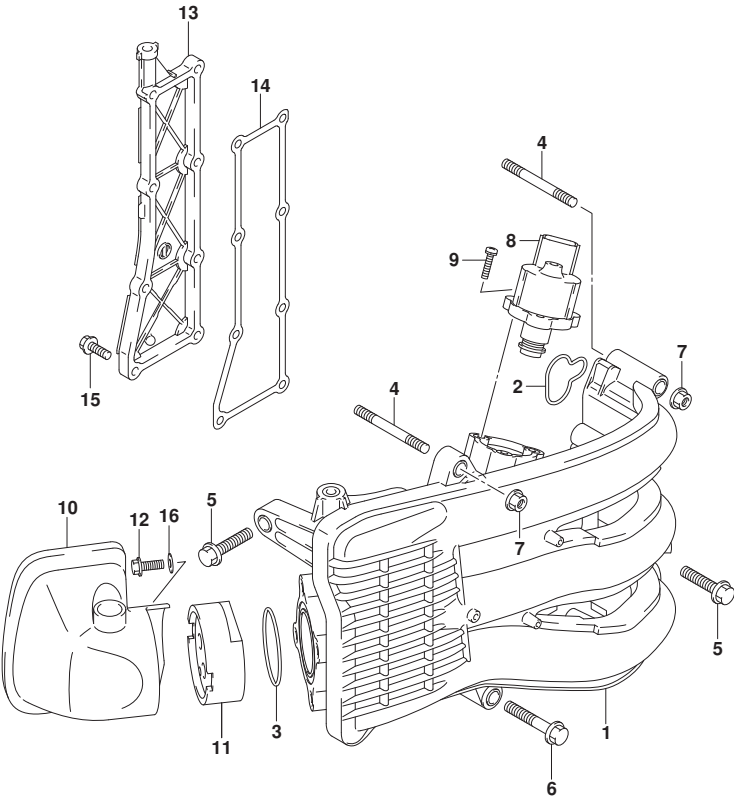


FIG.124C (1-C-4) INTAKE MANIFOLD/SILENCER/EXHAUST COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-88L00	MANIFOLD, INTAKE	1	
2	13119-88L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-88L00	.GASKET, THROTTLE BODY	1	
4	01421-08607	STUD BOLT	2	
5	01550-0830C	BOLT	6	
6	01550-0840C	BOLT	1	
7	08316-1008C	NUT	2	
8	18137-88L02	VALVE, IAC	1	
9	02112-34167	SCREW	3	
10	13810-88L00	SILENCER	1	
11	13813-88L01	HOLDER, ARRESTER	1	
12	01547-0616C	BOLT	1	
13	14141-88L00	COVER, EXHAUST	1	
14	14151-88L00	GASKET, EXH COVER	1	
15	01550-0620C	BOLT	8	
16	09160-06094	WASHER (6.5X15X1.0)	1	

NOTE : (DF40AST,DF60A,DF60AQH,DF60ATH,DF60AVT,DF40ASVT,DF60AVTH):
(020,021)

- DF40AST E34
- DF40ASVT E34
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.124D

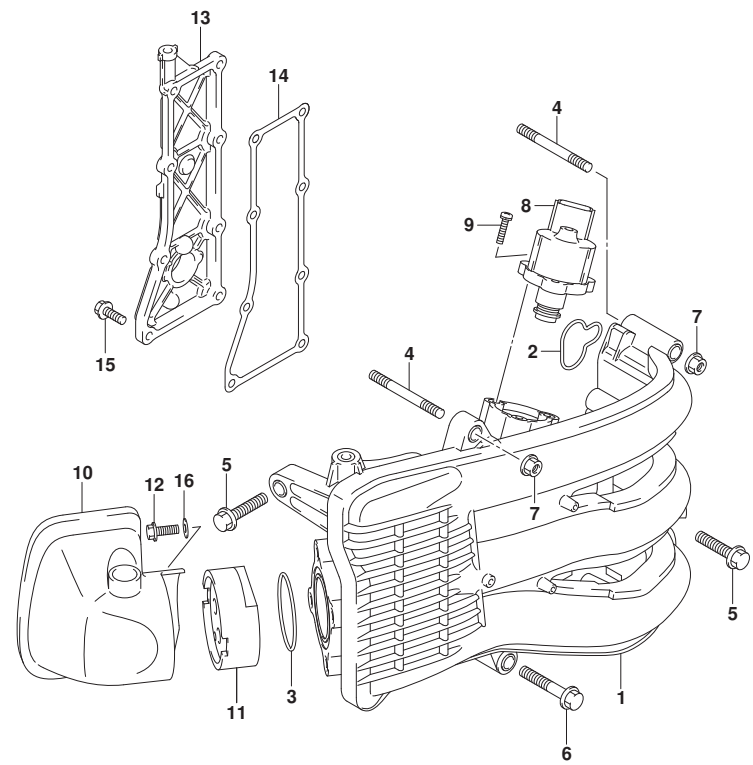


FIG.124D (1-C-5) INTAKE MANIFOLD/SILENCER/EXHAUST COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-88L00	MANIFOLD, INTAKE	1	
2	13119-88L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-88L00	.GASKET, THROTTLE BODY	1	
4	01421-08607	STUD BOLT	2	
5	01550-0830C	BOLT	6	
6	01550-0840C	BOLT	1	
7	08316-1008C	NUT	2	
8	18137-88L02	VALVE, IAC	1	
9	02112-34167	SCREW	3	
10	13810-88L00	SILENCER	1	
11	13813-88L01	HOLDER, ARRESTER	1	
12	01547-0616C	BOLT	1	
13	14141-88L10	COVER, EXHAUST	1	
14	14151-88L00	GASKET, EXH COVER	1	
15	01550-0620C	BOLT	8	
16	09160-06094	WASHER (6.5X15X1.0)	1	

NOTE : (DF60A,DF60AQH,DF60ATH,DF60AVT,DF60AVTH):022

- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E11
- DF60AVTH E40



FIG.124E

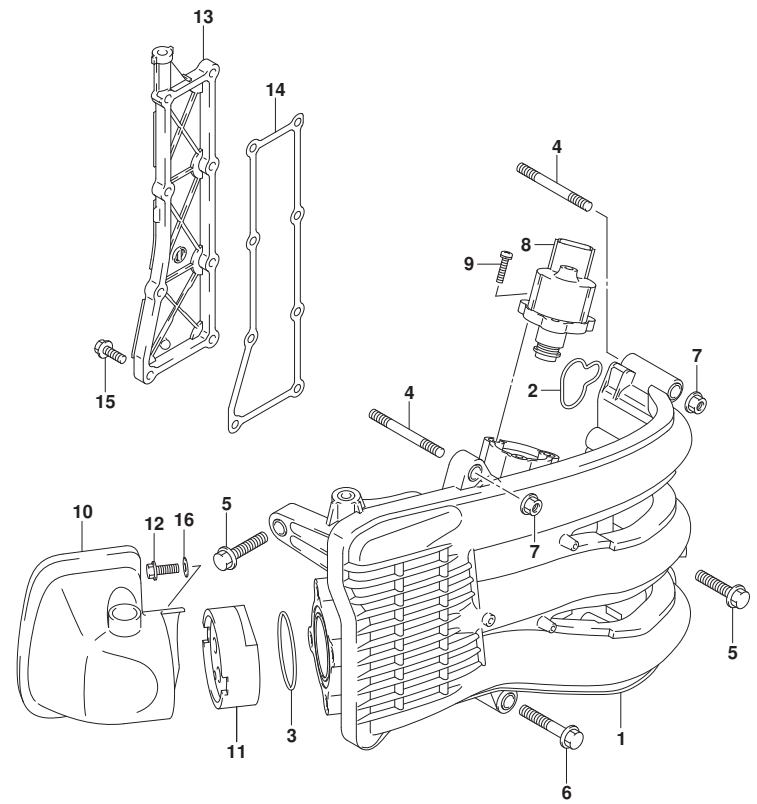


FIG.124E (1-C-6) INTAKE MANIFOLD/SILENCER/EXHAUST COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-88L00	MANIFOLD, INTAKE	1	
2	13119-88L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-88L00	.GASKET, THROTTLE BODY	1	
4	01421-08607	STUD BOLT	2	
5	01550-0830C	BOLT	6	
6	01550-0840C	BOLT	1	
7	08316-1008C	NUT	2	
8	18137-88L02	VALVE, IAC	1	
9	02112-34167	SCREW	3	
10	13810-88L00	SILENCER	1	
11	13820-88L11	HOLDER, SILENCER	1	
12	01547-0616C	BOLT	1	
13	14141-88L00	COVER, EXHAUST	1	
14	14151-88L00	GASKET, EXH COVER	1	
15	01550-0620C	BOLT	8	
16	09160-06094	WASHER (6.5X15X1.0)	1	

NOTE : (DF50A,DF50ATH,DF50AVT,DF50AVTH):(020,021)

- DF50A E01
- DF50A E03
- DF50A E11
- DF50ATH E01
- DF50AVT E03
- DF50AVTH E01



FIG.124F

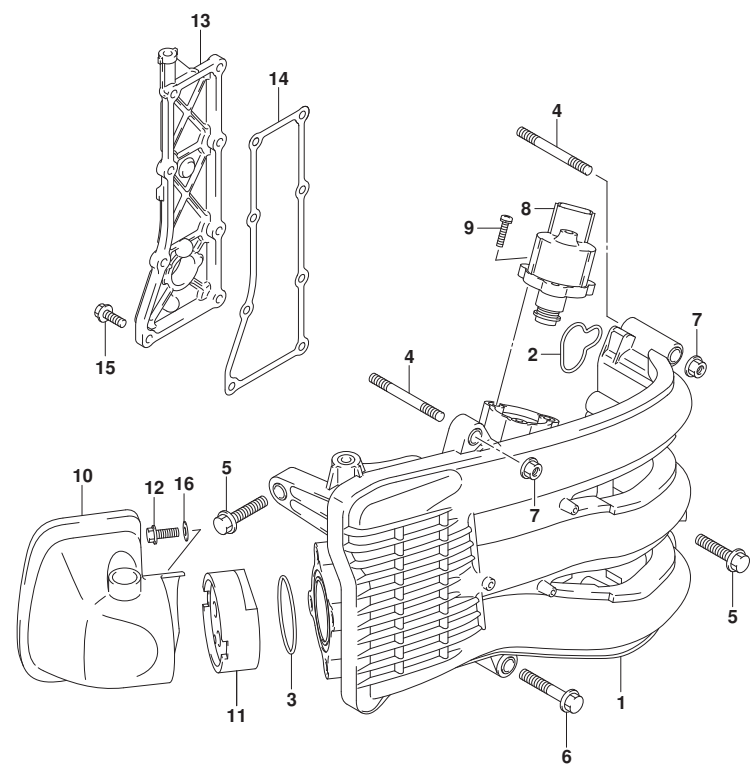


FIG.124F (1-C-7) INTAKE MANIFOLD/SILENCER/EXHAUST COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-88L00	MANIFOLD, INTAKE	1	
2	13119-88L00	.GASKET, INTAKE MANIFOLD	3	
3	13125-88L00	.GASKET, THROTTLE BODY	1	
4	01421-08607	STUD BOLT	2	
5	01550-0830C	BOLT	6	
6	01550-0840C	BOLT	1	
7	08316-1008C	NUT	2	
8	18137-88L02	VALVE, IAC	1	
9	02112-34167	SCREW	3	
10	13810-88L00	SILENCER	1	
11	13820-88L11	HOLDER, SILENCER	1	
12	01547-0616C	BOLT	1	
13	14141-88L10	COVER, EXHAUST	1	
14	14151-88L00	GASKET, EXH COVER	1	
15	01550-0620C	BOLT	8	
16	09160-06094	WASHER (6.5X15X1.0)	1	

NOTE : (DF50A,DF50ATH,DF50AVT,DF50AVTH):022

DF50A E11
DF50ATH E01
DF50AVT E03



FIG.136A (1-C-8) RING GEAR COVER

DF60A_E11_022

FIG.143A


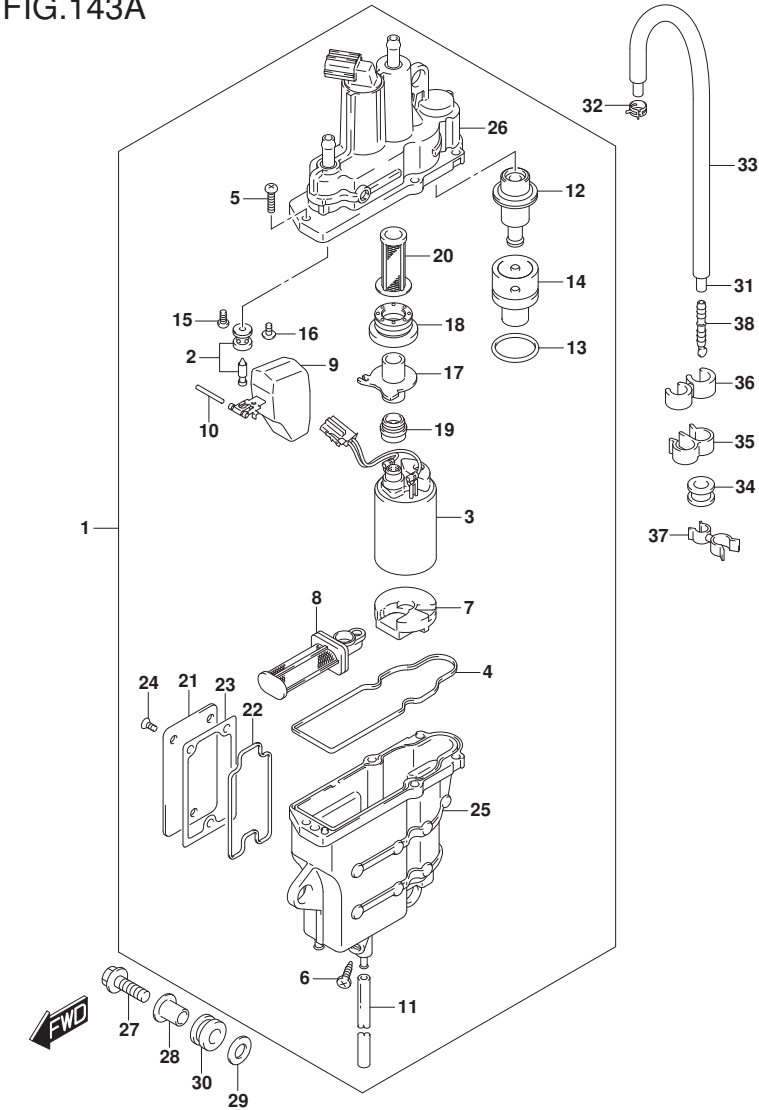


FIG.143A (1-C-9) FUEL VAPOR SEPARATOR (E01,E03,E11,E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-88L05	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-88L00	.VALVE ASSY, NEEDLE	1	
3	15200-88L00	.PUMP ASSY, FUEL	1	
4	15626-88L01	.SEAL	1	
5	15628-99E00	.SCREW (L:15)	5	
6	15629-99E10	.SCREW, DRAIN	1	
7	15641-88L00	.SPACER	1	
8	15642-88L00	.FILTER ASSY	1	
9	15650-99E00	.FLOAT	1	
10	15654-88L00	.PIN	1	
11	15683-87J00	.HOSE (L:120)	1	
12	15760-88L00	.REGULATOR ASSY	1	
13	15644-88L00	.O RING	1	
14	15645-88L00	.HOLDER, REGULATOR	1	
15	02112-0408A	.SCREW	1	
16	02142-0408B	.SCREW	1	
17	15643-88L10	.JOINT	1	
18	15641-88L31	.BUSH	1	
19	15641-88L51	.BUSH	1	
20	15642-88L10	.FILTER	1	
21	15612-88L00	.COVER, VAPOR SEPARATOR	1	
22	15613-88L00	.O RING	1	
23	15613-92J00	.GASKET	1	
24	15614-88L00	.SCREW	3	
25	15610-88L01	.CASE ASSY, VAPOR SEPARATOR	1	LOWER
26	15620-88L00	.CASE ASSY, VAPOR SEPARATOR	1	UPPER
27	01550-0630C	BOLT	3	
28	09169-06075	WASHER	3	
29	09160-06084	WASHER (6.5X18X1.6)	3	
30	09320-09059	CUSHION (9X18X14)	3	
31	09352-50003-770	HOSE (5X8.2X770)	1	
32	09401-08412	CLIP	1	
33	18498-88L11	PROTECTOR, EVAP HOSE (L:730)	1	
34	09320-08517	GROMMET	1	

FIG.143A (1-C-10) FUEL VAPOR SEPARATOR (E01,E03,E11,E34)

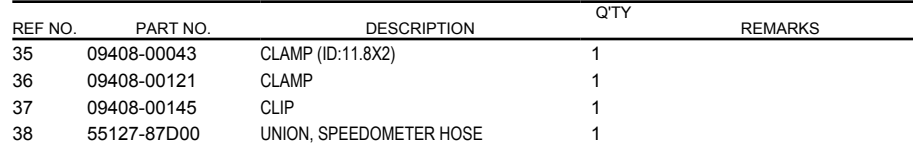

DF60A_E11_022_143A
FUEL VAPOR SEPARATOR

FIG.143B

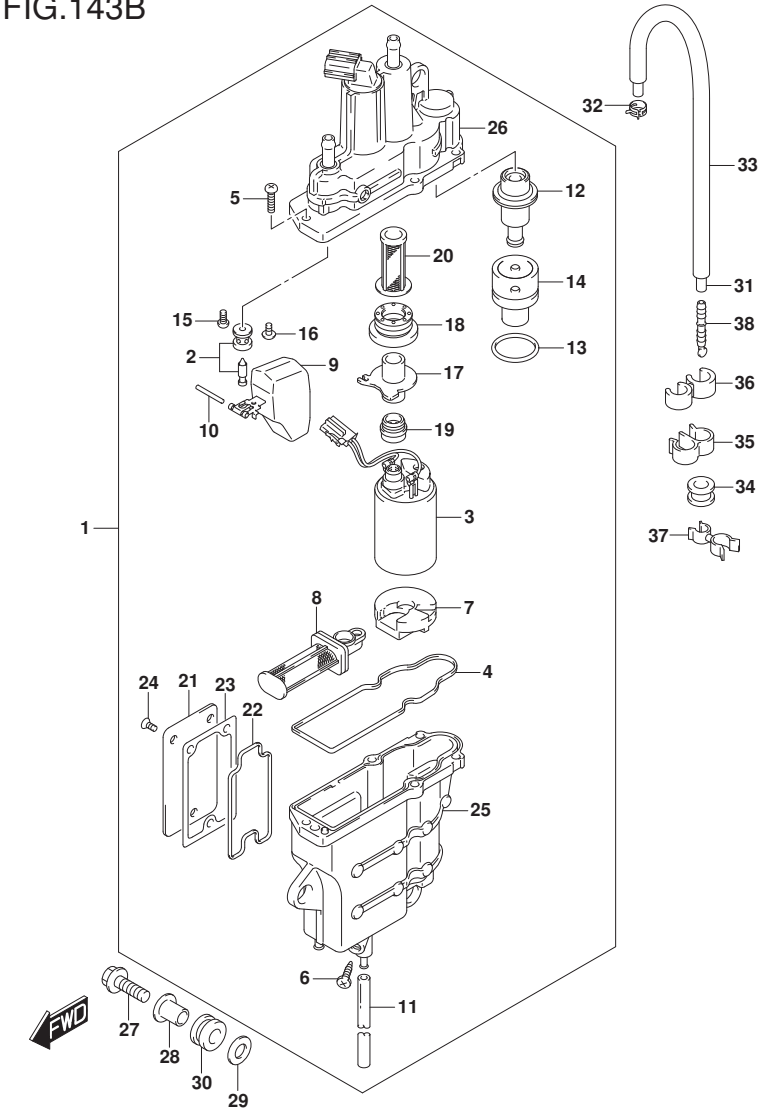


FIG.143B (1-C-11) FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-88L14	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-88L10	.VALVE ASSY, NEEDLE	1	
3	15200-88L10	.PUMP ASSY, FUEL	1	
4	15626-88L10	.SEAL	1	
5	15628-99E00	.SCREW (L:15)	5	
6	15629-99E10	.SCREW, DRAIN	1	
7	15641-88L10	.SPACER	1	
8	15642-88L00	.FILTER ASSY	1	
9	15650-99E00	.FLOAT	1	
10	15654-88L00	.PIN	1	
11	15683-87J00	.HOSE (L:120)	1	
12	15760-88L00	.REGULATOR ASSY	1	
13	15644-88L10	.O RING	1	
14	15645-88L00	.HOLDER, REGULATOR	1	
15	13614-89J00	.SCREW	1	
16	13614-93J00	.SCREW	1	
17	15643-88L10	.JOINT	1	
18	15641-88L31	.BUSH	1	
19	15641-88L51	.BUSH	1	
20	15642-88L10	.FILTER	1	
21	15612-88L00	.COVER, VAPOR SEPARATOR	1	
22	15613-88L00	.O RING	1	
23	15613-92J00	.GASKET	1	
24	15614-88L00	.SCREW	3	
25	15610-88L01	.CASE ASSY, VAPOR SEPARATOR	1	LOWER
26	15620-88L10	.CASE ASSY, VAPOR SEPARATOR	1	UPPER
27	01550-0630C	BOLT	3	
28	09169-06075	WASHER	3	
29	09160-06084	WASHER (6.5X18X1.6)	3	
30	09320-09059	CUSHION (9X18X14)	3	
31	09352-50003-770	HOSE (5X8.2X770)	1	
32	09401-08412	CLIP	1	
33	18498-88L11	PROTECTOR, EVAP HOSE (L:730)	1	
34	09320-08517	GROMMET	1	

FIG.143B


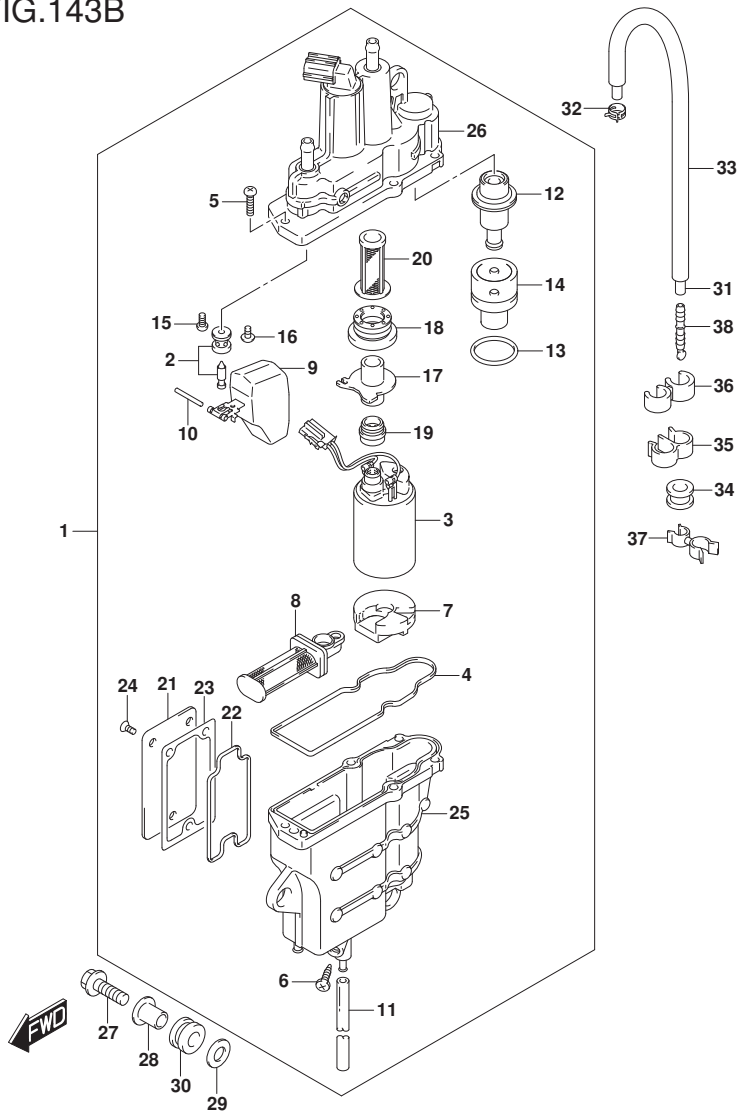


FIG.143B (1-C-12) FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00043	CLAMP (ID:11.8X2)	1	
36	09408-00121	CLAMP	1	
37	09408-00145	CLIP	1	
38	55127-87D00	UNION, SPEEDOMETER HOSE	1	

DF60A E40
DF60AQH E40
DF60ATH E40
DF60AVT E40
DF60AVTH E40

FIG.144A (1-C-13) FUEL INJECTOR (E01,E03,E11,E34)

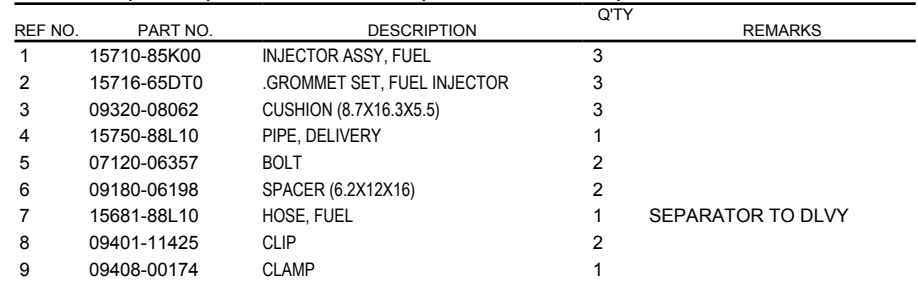

DF60A_E11_022_144A
FUEL INJECTOR

FIG.144B

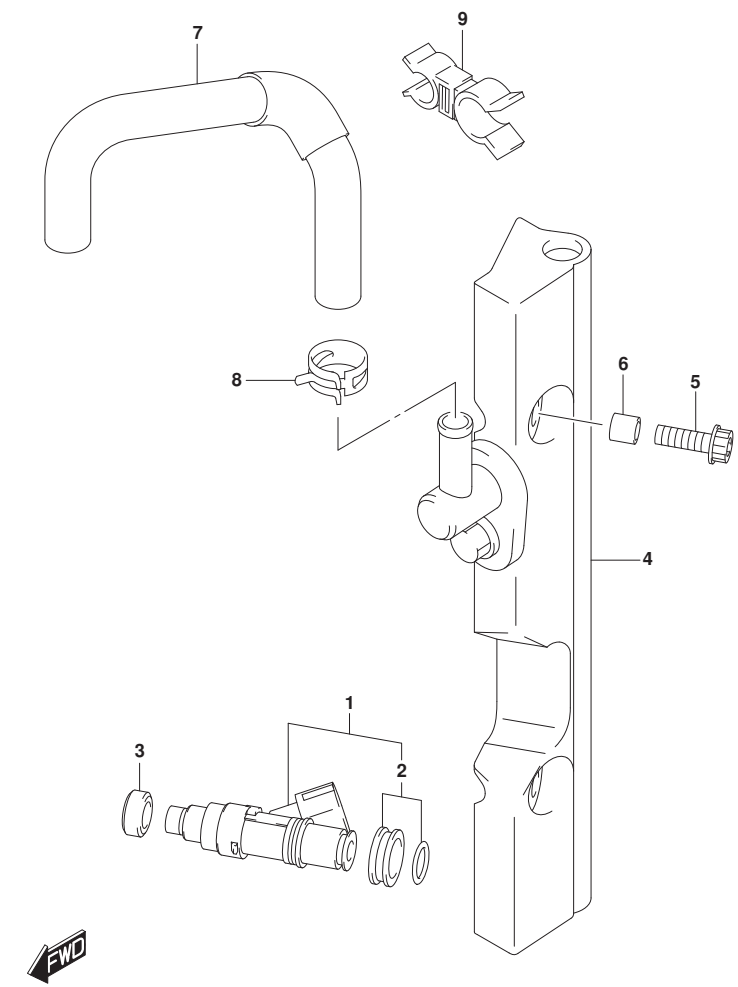


FIG.144B (1-C-14) FUEL INJECTOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15710-85K00	INJECTOR ASSY, FUEL	3	
2	15716-65DT0	.GROMMET SET, FUEL INJECTOR	3	
3	09320-08062	CUSHION (8.7X16.3X5.5)	3	
4	15750-88L20	PIPE, DELIVERY	1	
5	07120-06357	BOLT	2	
6	09180-06198	SPACER (6.2X12X16)	2	
7	15681-88L10	HOSE, FUEL	1	SEPARATOR TO DLVY
8	09401-11425	CLIP	2	
9	09408-00174	CLAMP	1	

DF60A E40
DF60AQH E40
DF60ATH E40
DF60AVT E40
DF60AVTH E40

FIG.146A

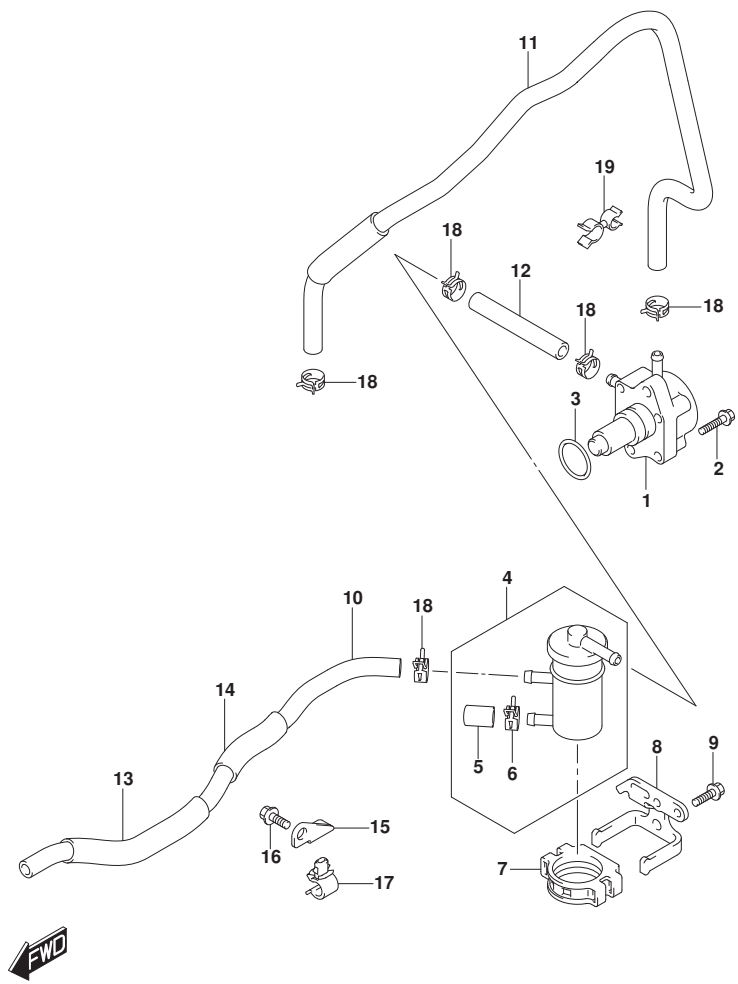


FIG.146A (1-D-2) FUEL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-90J11	PUMP ASSY, FUEL	1	
2	01550-0625C	BOLT	2	
3	09280-26005	O RING (D:2.4,ID:26.2)	1	
4	15410-88L00	FILTER, FUEL	1	
5	15419-87J00	.CAP, FUEL FILTER	1	
6	09401-11423	.CLIP	1	
7	15422-96J01	CLAMP, FUEL FILTER	1	
8	15421-88L00	BRACKET, FUEL FILTER	1	
9	01550-0616C	BOLT	2	
10	15191-88L20	HOSE, FUEL	1	JOINT TO FILTER PUMP TO SEPARATOR
11	15192-88L20	HOSE, FUEL	1	
12	09343-70503-080	HOSE (7X12X80)	1	
13	18498-90J51	PROTECTOR, HOSE	1	
14	18498-96J31	PROTECTOR, FUEL HOSE NO.2	1	
15	15197-88L00	BRACKET, FUEL HOSE CLAMP	1	
16	01550-0612C	BOLT	1	
17	09403-11320	CLAMP	3	
18	09401-11423	CLIP	5	
19	09408-00145	CLIP	1	

FIG.160A


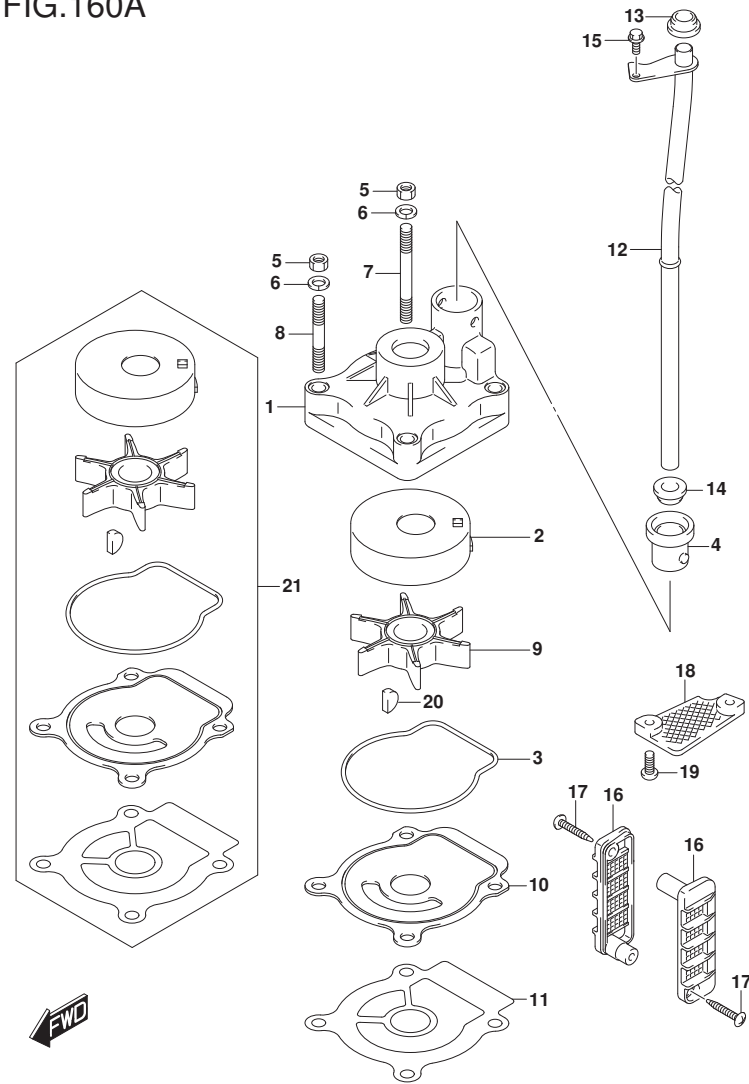


FIG.160A (1-D-3) WATER PUMP (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-88L00	CASE, WATER PUMP	1	
2	17413-95J00	SLEEVE, WATER PUMP CASE	1	
3	17416-95J00	SEALING, WATER PUMP CASE	1	
4	17564-88L01	BUSH, WATER PUMP CASE	1	
5	29141-93J00	NUT (M6)	4	
6	29162-93J00	WASHER (6.1X12.2X1.5)	4	
7	09108-06143	STUD BOLT (L:45)	2	
8	09108-06144	STUD BOLT (L:31)	2	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-95J01	PANEL, PUMP CASE UNDER	1	
11	17472-96304	GASKET, PUMP CASE UNDER	1	
12-1	17560-88L00	TUBE, WATER	1	W/TRANSOM(S):E01
12-2	17560-88L00	TUBE, WATER	1	W/TRANSOM(S):E11
12-3	17560-88L10	TUBE, WATER	1	W/TRANSOM(L)
12-4	17560-88L20	TUBE, WATER	1	W/TRANSOM(X)
13	17562-87L01	GROMMET, WATER TUBE UPPER	1	UPPER
14-1	17562-87L01	GROMMET, WATER TUBE LOWER	1	W/TRANSOM(L) LOWER
14-2	17562-87L01	GROMMET, WATER TUBE LOWER	1	W/TRANSOM(X) LOWER
15	09116-06236	BOLT (6X16)	1	
16	17631-96320	FILTER, WATER	2	
17	03142-04309	SCREW	2	
18-1	17635-87E00	FILTER, WATER SUB	1	
18-2	17635-87E10	PLATE, GEAR CASE	1	OPT
19	09125-05046	SCREW (5X12)	2	
20	09420-04006	KEY	1	

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60A,DF60ATH):E01,
(DF40A,DF50A,DF60A):E11



REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	17400-88L01	KIT, WATER PUMP REPAIR	1 OPT	

DF40A E01
DF40A E11
DF40AQH E01
DF40ATH E01
DF50A E01
DF50A E11
DF50ATH E01
DF60A E01
DF60A E11
DF60ATH E01

FIG.160B

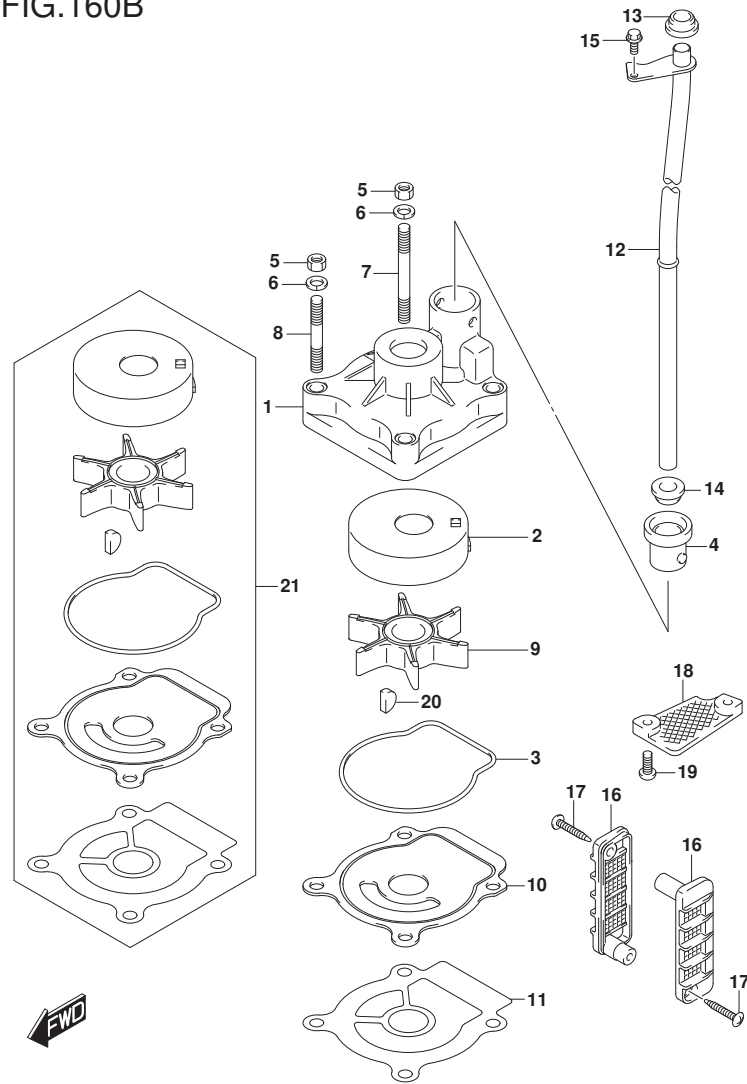


FIG.160B (1-D-5) WATER PUMP ((DF40A,DF50A,DF60A):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-88L00	CASE, WATER PUMP	1	
2	17413-95J00	SLEEVE, WATER PUMP CASE	1	
3	17416-95J00	SEALING, WATER PUMP CASE	1	
4	17564-88L01	BUSH, WATER PUMP CASE	1	
5	29141-93J00	NUT (M6)	4	
6	29162-93J00	WASHER (6.1X12.2X1.5)	4	
7	09108-06143	STUD BOLT (L:45)	2	
8	09108-06144	STUD BOLT (L:31)	2	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-95J01	PANEL, PUMP CASE UNDER	1	
11	17472-96304	GASKET, PUMP CASE UNDER	1	
12	17560-88L10	TUBE, WATER	1	
13	17562-87L01	GROMMET, WATER TUBE UPPER	1	UPPER
14	17562-87L01	GROMMET, WATER TUBE UPPER	1	LOWER
15	09116-06236	BOLT (6X16)	1	
16	17631-96320	FILTER, WATER	2	
17	03142-04309	SCREW	2	
18-1	17635-87E00	FILTER, WATER SUB	1	
18-2	17635-87E10	PLATE, GEAR CASE	1	OPT
19	09125-05046	SCREW (5X12)	2	
20	09420-04006	KEY	1	
21	17400-88L01	KIT, WATER PUMP REPAIR	1	OPT

DF40A E03
DF50A E03
DF60A E03

FIG.160C

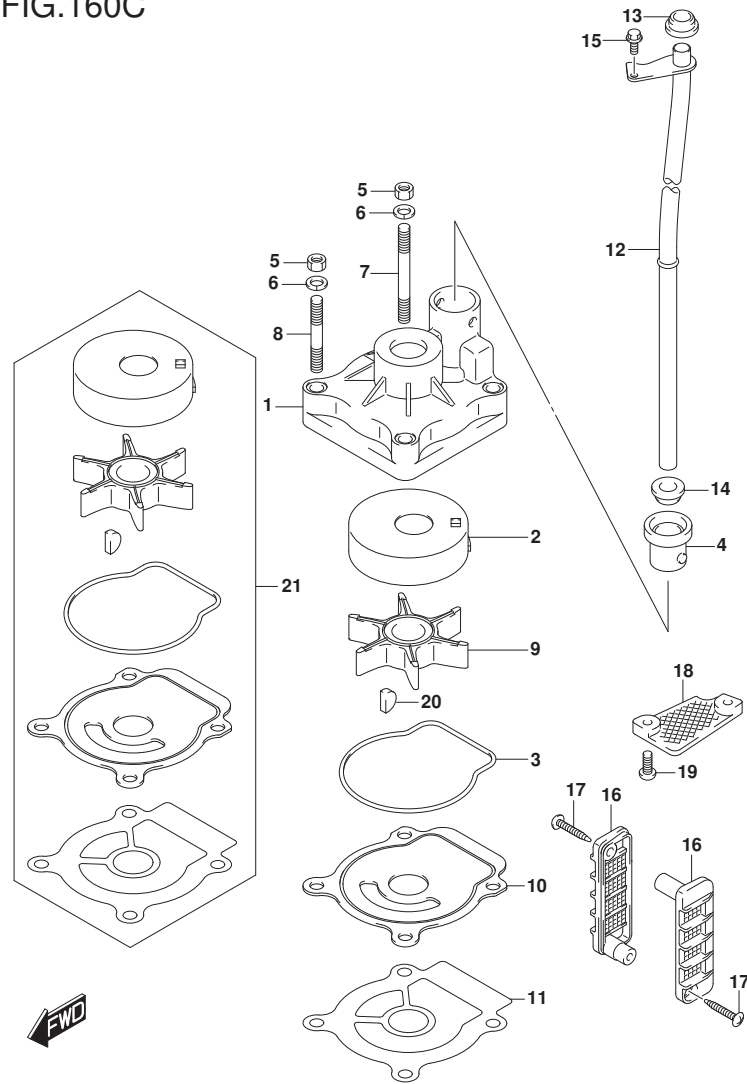


FIG.160C (1-D-6) WATER PUMP (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-88L00	CASE, WATER PUMP	1	
2	17413-95J00	SLEEVE, WATER PUMP CASE	1	
3	17416-95J00	SEALING, WATER PUMP CASE	1	
4	17564-88L01	BUSH, WATER PUMP CASE	1	
5	29141-93J00	NUT (M6)	4	
6	29162-93J00	WASHER (6.1X12.2X1.5)	4	
7	09108-06143	STUD BOLT (L:45)	2	
8	09108-06144	STUD BOLT (L:31)	2	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-95J01	PANEL, PUMP CASE UNDER	1	
11	17472-96304	GASKET, PUMP CASE UNDER	1	
12-1	17560-88L00	TUBE, WATER	1	W/TRANSOM(S)
12-2	17560-88L10	TUBE, WATER	1	W/TRANSOM(L)
13	17562-87L01	GROMMET, WATER TUBE UPPER	1	UPPER
14	17562-87L01	GROMMET, WATER TUBE UPPER	1	W/TRANSOM(L) LOWER
15	09116-06236	BOLT (6X16)	1	
16	17631-96320	FILTER, WATER	2	
17	03142-04309	SCREW	2	
18-1	17635-87E00	FILTER, WATER SUB	1	
18-2	17635-87E10	PLATE, GEAR CASE	1	OPT
19	09125-05046	SCREW (5X12)	2	
20	09420-04006	KEY	1	
21	17400-88L01	KIT, WATER PUMP REPAIR	1	OPT

DF40AST E34

FIG.160D

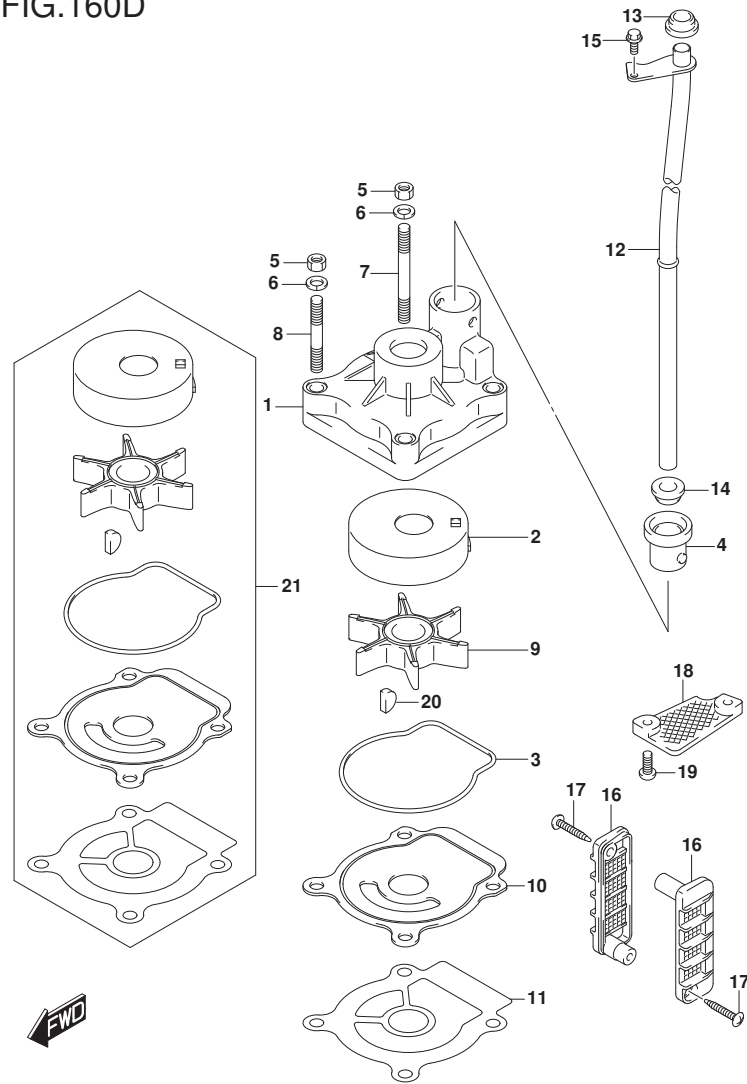


FIG.160D (1-D-7) WATER PUMP ((DF60A,DF60AQH,DF60ATH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-88L00	CASE, WATER PUMP	1	
2	17413-95J10	SLEEVE, WATER PUMP CASE	1	
3	17416-95J00	SEALING, WATER PUMP CASE	1	
4	17564-88L01	BUSH, WATER PUMP CASE	1	
5	29141-93J00	NUT (M6)	4	
6	29162-93J00	WASHER (6.1X12.2X1.5)	4	
7	09108-06143	STUD BOLT (L:45)	2	
8	09108-06144	STUD BOLT (L:31)	2	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-95J10	PANEL, PUMP CASE UNDER	1	
11	17472-96304	GASKET, PUMP CASE UNDER	1	
12-1	17560-88L10	TUBE, WATER	1	W/TRANSOM(L)
12-2	17560-88L20	TUBE, WATER	1	W/TRANSOM(X)
13	17562-87L01	GROMMET, WATER TUBE UPPER	1	UPPER
14	17562-87L01	GROMMET, WATER TUBE UPPER	1	LOWER
15	09116-06236	BOLT (6X16)	1	
16	17631-96320	FILTER, WATER	2	
17	03142-04309	SCREW	2	
18-1	17635-87E00	FILTER, WATER SUB	1	
18-2	17635-87E10	PLATE, GEAR CASE	1	OPT
19	09125-05046	SCREW (5X12)	2	
20	09420-04006	KEY	1	
21	17400-88L01	KIT, WATER PUMP REPAIR	1	OPT

DF60A E40
DF60AQH E40
DF60ATH E40

FIG.160E

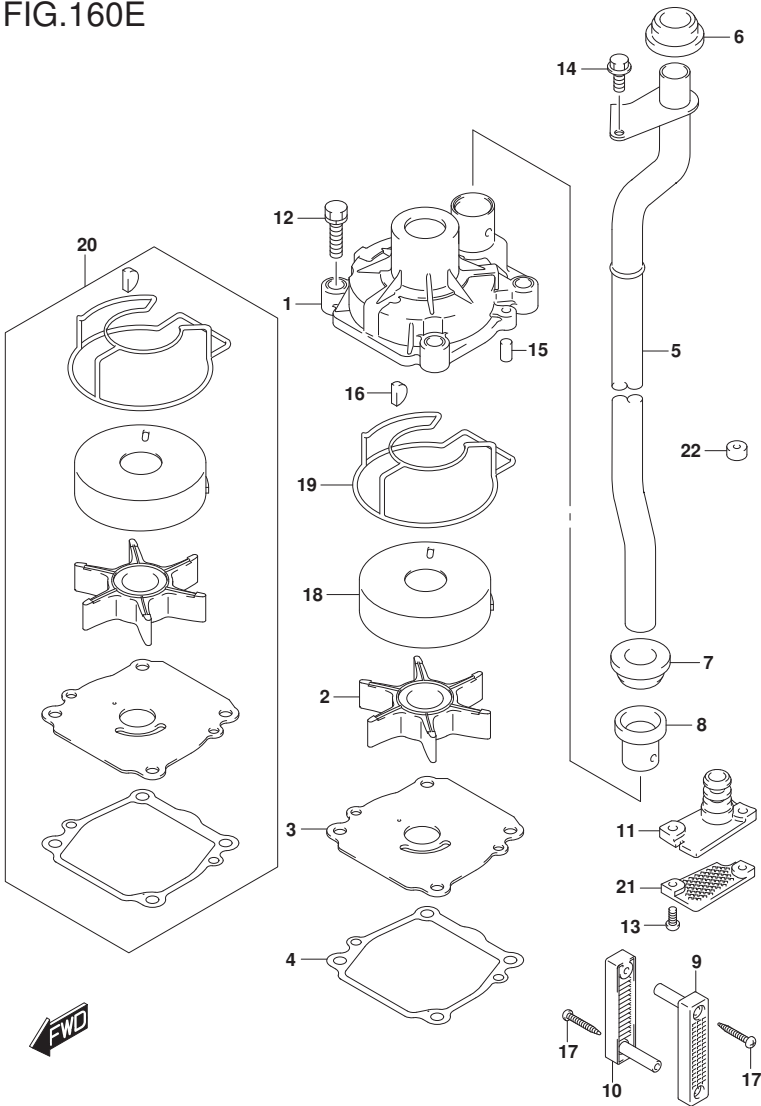


FIG.160E (1-D-8) WATER PUMP (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-99E10	CASE, WATER PUMP	1	
2	17461-87E12	IMPELLER, WATER PUMP	1	
3	17471-99E00	PANEL, PUMP CASE UNDER	1	
4	17472-87E10	GASKET, PUMP CASE PANEL	1	
5-1	17560-88L30	TUBE, WATER	1	W/TRANSOM(L)
5-2	17560-88L40	TUBE, WATER	1	W/TRANSOM(X)
6	17562-87L01	GROMMET, WATER TUBE UPPER	1	UPPER
7	17562-87L01	GROMMET, WATER TUBE UPPER	1	LOWER
8	17564-87D00	BUSH, WATER PUMP CASE	1	
9	17631-90J00	FILTER, WATER PORT SIDE	1	PORT
10	17632-90J00	FILTER, WATER STBD SIDE	1	STBD
11	17635-90J00	PLUG, SUB WATER TUBE	1	
12	29116-93J10	BOLT (8X35)	4	
13	09125-05046	SCREW (5X12)	2	
14	09116-06236	BOLT (6X16)	1	
15	09202-06031	PIN (6X12)	2	
16	09420-04009	KEY	1	
17	09132-04034	SCREW (4X18)	2	
18	17413-99E11	SLEEVE, WATER PUMP CASE	1	
19	17416-99E11	SEALING, WATER PUMP CASE NO.1	1	
20	17400-99E12	KIT, WATER PUMP REPAIR	1	OPT
21	17635-87E10	PLATE, GEAR CASE	1	OPT
22	55321-87J11	ANODE	1	OPT

NOTE : (DF50AVTH,DF60AVT):E01,DF60AVT:E11,DF40ASVT:E34

DF40ASVT E34
DF50AVTH E01
DF60AVT E01
DF60AVT E11

FIG.160F

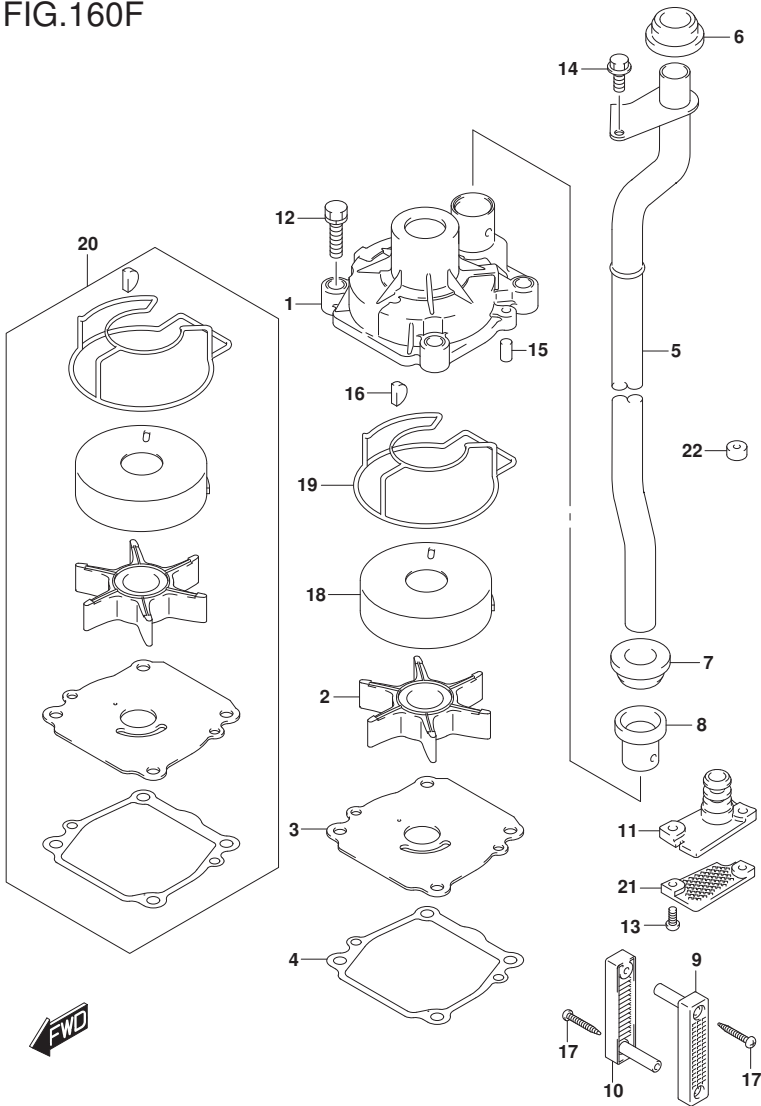


FIG.160F (1-D-9) WATER PUMP ((DF50AVT,DF60AVT):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-99E10	CASE, WATER PUMP	1	
2	17461-87E12	IMPELLER, WATER PUMP	1	
3	17471-99E00	PANEL, PUMP CASE UNDER	1	
4	17472-87E10	GASKET, PUMP CASE PANEL	1	
5	17560-88L30	TUBE, WATER	1	
6	17562-87L01	GROMMET, WATER TUBE UPPER	1	UPPER
7	17562-87L01	GROMMET, WATER TUBE UPPER	1	LOWER
8	17564-87D00	BUSH, WATER PUMP CASE	1	
9	17631-90J00	FILTER, WATER PORT SIDE	1	PORT
10	17632-90J00	FILTER, WATER STBD SIDE	1	STBD
11	17635-90J00	PLUG, SUB WATER TUBE	1	
12	29116-93J10	BOLT (8X35)	4	
13	09125-05046	SCREW (5X12)	2	
14	09116-06236	BOLT (6X16)	1	
15	09202-06031	PIN (6X12)	2	
16	09420-04009	KEY	1	
17	09132-04034	SCREW (4X18)	2	
18	17413-99E11	SLEEVE, WATER PUMP CASE	1	
19	17416-99E11	SEALING, WATER PUMP CASE NO.1	1	
20	17400-99E12	KIT, WATER PUMP REPAIR	1	OPT
21	17635-87E10	PLATE, GEAR CASE	1	OPT
22	55321-87J11	ANODE	1	OPT

DF50AVT E03
DF60AVT E03

FIG.160G

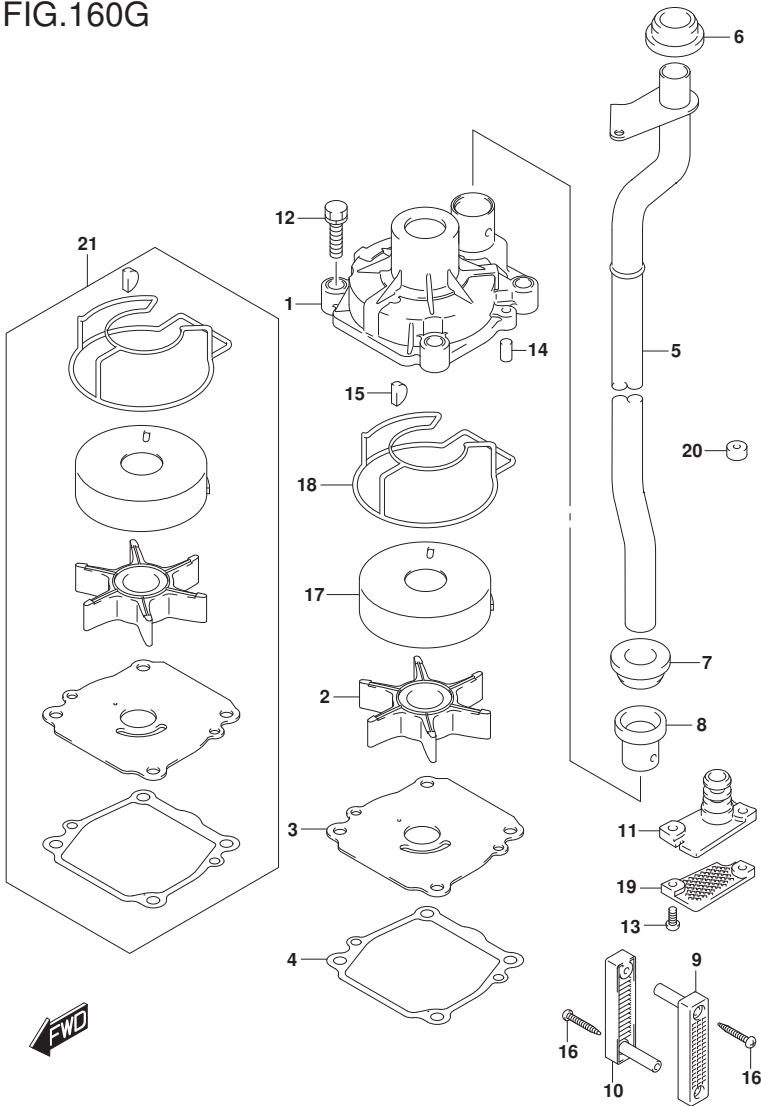


FIG.160G (1-D-10) WATER PUMP ((DF60AVT,DF60AVTH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-99E10	CASE, WATER PUMP	1	
2	17461-87E12	IMPELLER, WATER PUMP	1	
3	17471-99E10	PANEL, PUMP CASE UNDER	1	
4	17472-87E10	GASKET, PUMP CASE PANEL	1	
5-1	17560-88L30	TUBE, WATER	1	W/TRANSOM(L)
5-2	17560-88L40	TUBE, WATER	1	W/TRANSOM(X)
6	17562-87L01	GROMMET, WATER TUBE UPPER	1	UPPER
7	17562-87L01	GROMMET, WATER TUBE UPPER	1	LOWER
8	17564-87D00	BUSH, WATER PUMP CASE	1	
9	17631-90J00	FILTER, WATER PORT SIDE	1	PORT
10	17632-90J00	FILTER, WATER STBD SIDE	1	STBD
11	17635-90J00	PLUG, SUB WATER TUBE	1	
12	29116-93J10	BOLT (8X35)	4	
13	09125-05046	SCREW (5X12)	2	
14	09202-06031	PIN (6X12)	2	
15	09420-04009	KEY	1	
16	09132-04034	SCREW (4X18)	2	
17	17413-99E21	SLEEVE, WATER PUMP CASE	1	
18	17416-99E11	SEALING, WATER PUMP CASE NO.1	1	
19	17635-87E10	PLATE, GEAR CASE	1	OPT
20	55321-87J11	ANODE	1	OPT
21	17400-99E12	KIT, WATER PUMP REPAIR	1	DF60AVTH OPT

DF60AVT E40
DF60AVTH E40

FIG.162A

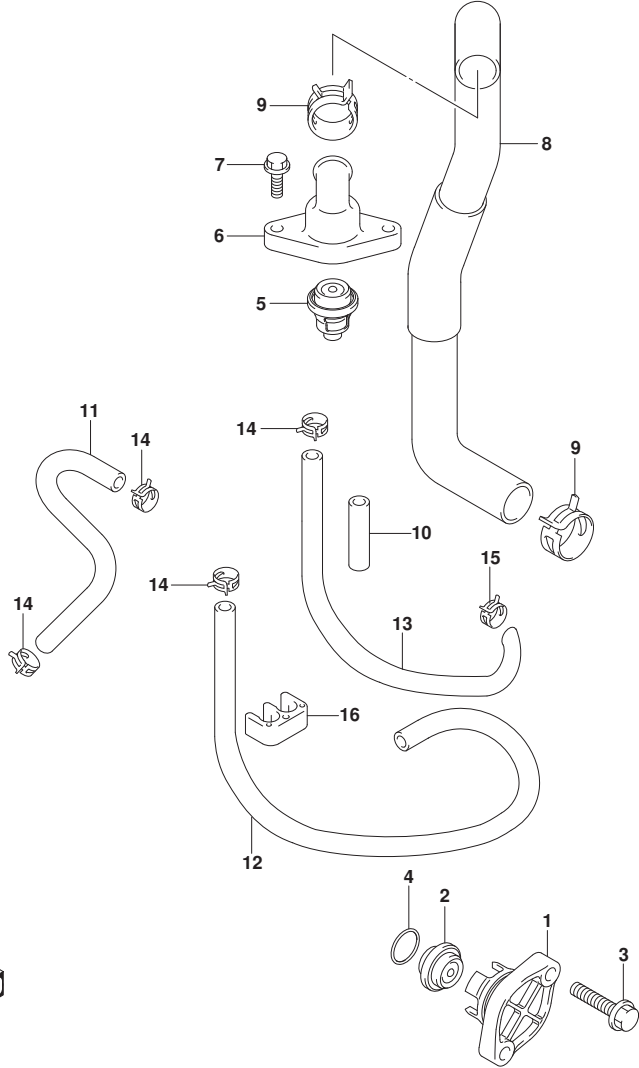


FIG.162A (1-D-11) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17611-90J00	COVER, WTR PRESS VALVE	1	
2	17660-99E01	VALVE, WATER PRESSURE	1	
3	09116-06121	BOLT (6X25)	2	
4	09280-26006	O RING (D:3.1,ID:26.4)	1	
5	17670-93955	THERMOSTAT, WATER (60C)	1	
6	17681-88L00	COVER, THERMOSTAT	1	
7	01550-0620C	BOLT	2	
8	11196-88L00	HOSE, WATER RETURN	1	
9	09401-25406	CLIP	2	
10	18498-94J11	PROTECTOR, WATER HOSE	2	
11	17712-88L01	HOSE, WATER	1	SEPARATOR TO INSP
12	09352-50006-600	HOSE (5X9X600)	1	L:600->500
13	09359-50901-980	HOSE (L:980)	1	L:980->250
14	09401-08413	CLIP	4	
15	09401-10415	CLIP	1	
16	09408-00175	CLAMP	1	

FIG.163A

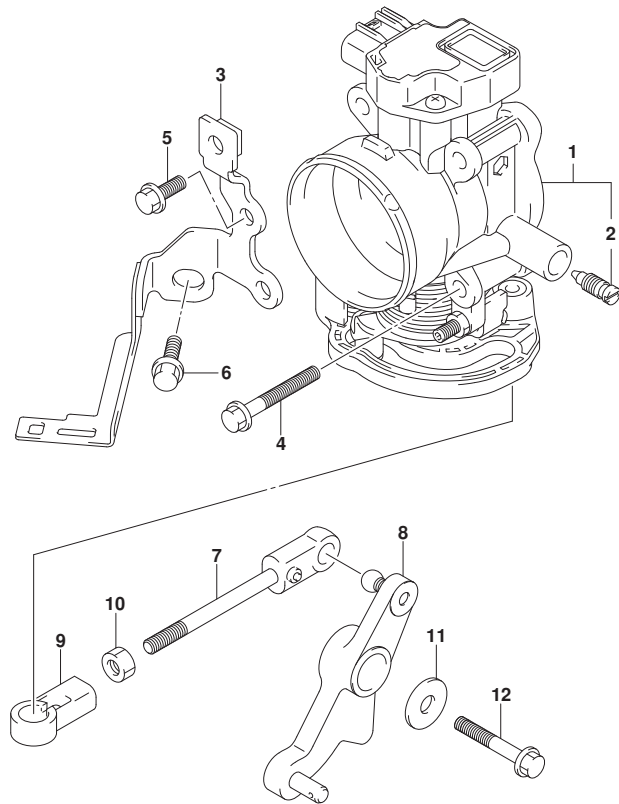


FIG.163A (1-D-12) THROTTLE BODY (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13300-88L02	BODY ASSY, THROTTLE	1	
2	13353-99E00	.ADJUSTER ASSY	1	
3	13315-88L00	BRACKET, THROTTLE BODY	1	
4	01550-0645C	BOLT	4	
5	01550-0616C	BOLT	2	
6	01550-0820C	BOLT	1	
7	13510-88L00	ROD, THROTTLE	1	
8	19120-88L01	LEVER, THROTTLE	1	
9	19131-95502	CONNECTOR	1	
10	09140-05005	NUT (M5)	1	
11	09160-06047	WASHER (6.5X20X2.0)	1	
12	01550-0640C	BOLT	1	

NOTE : DF40A,DF50A,DF60A,DF50AVT,DF60AVT

- DF40A E01
- DF40A E03
- DF40A E11
- DF50A E01
- DF50A E03
- DF50A E11
- DF50AVT E03
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40



FIG.163B

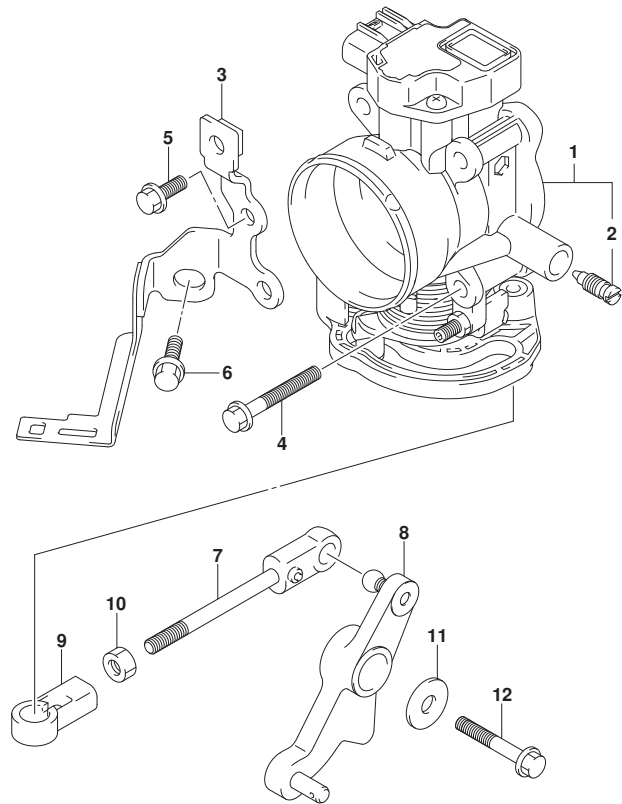


FIG.163B (1-D-13) THROTTLE BODY (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13300-88L02	BODY ASSY, THROTTLE	1	
2	13353-99E00	.ADJUSTER ASSY	1	
3	13315-88L00	BRACKET, THROTTLE BODY	1	
4	01550-0645C	BOLT	4	
5	01550-0616C	BOLT	2	
6	01550-0820C	BOLT	1	
7	13510-88L00	ROD, THROTTLE	1	
8	19120-88L12	LEVER, THROTTLE	1	
9	19131-95502	CONNECTOR	1	
10	09140-05005	NUT (M5)	1	
11	09160-06047	WASHER (6.5X20X2.0)	1	
12	01550-0640C	BOLT	1	

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVTH,DF60AVTH

- DF40AQH E01
- DF40ATH E01
- DF50ATH E01
- DF50AVTH E01
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVTH E40



FIG.163C

FIG.163C (1-D-14) THROTTLE BODY (DF40AST,DF40ASVT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13300-88L02	BODY ASSY, THROTTLE	1	
2	13353-99E00	.ADJUSTER ASSY	1	
3	13315-88L00	BRACKET, THROTTLE BODY	1	
4	01550-0645C	BOLT	4	
5	01550-0616C	BOLT	2	
6	01550-0820C	BOLT	1	
7	13510-88L00	ROD, THROTTLE	1	
8	19120-88L01	LEVER, THROTTLE	1	
9	19131-95502	CONNECTOR	1	
10	09140-05005	NUT (M5)	1	
11	09160-06047	WASHER (6.5X20X2.0)	1	
12	01550-0640C	BOLT	1	
13	13815-88L10	RESTRICTOR, INTAKE	1	020,021

DF40AST E34
DF40ASVT E34

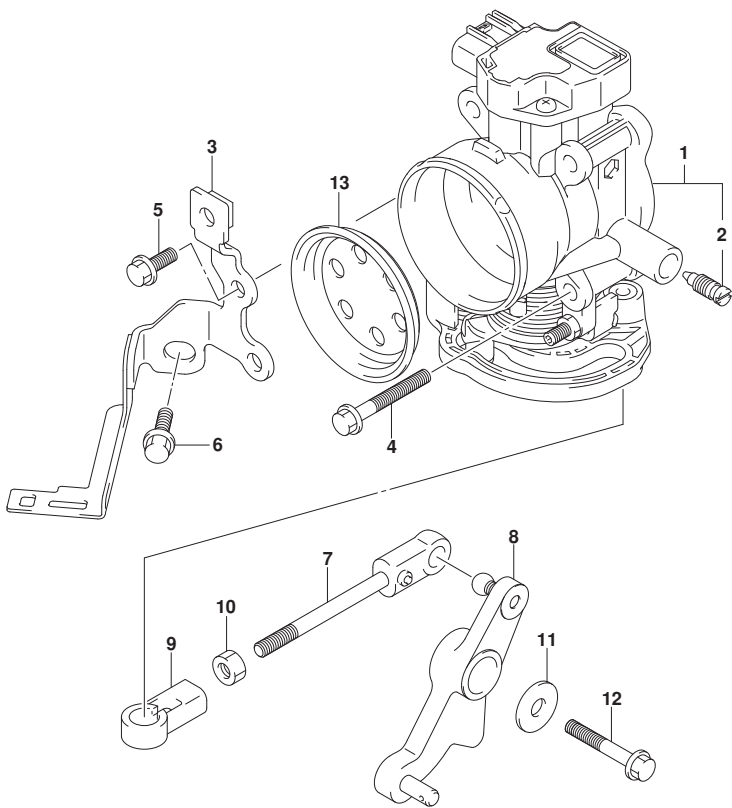


FIG.175A

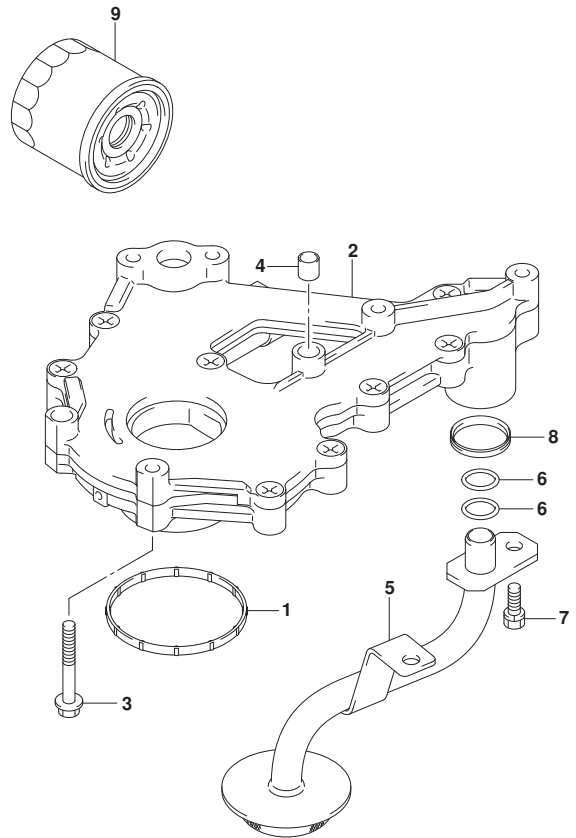


FIG.175A (1-E-2) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-88L00	GASKET, UNDER OIL SEAL	1	
2	16400-88L00	PUMP ASSY, OIL	1	
3	01547-0640A	BOLT	7	
4	04211-09109	PIN (H:10)	2	
5	16520-88L00	STRAINER, OIL	1	
6	09280-12008	O RING (D:2.4,ID:12.3)	2	
7	01570-0616A	BOLT	2	
8	16519-87L00	SEAL, ENGINE HOLDER	1	
9	16510-87J01	FILTER ASSY, OIL	1	

FIG.180A


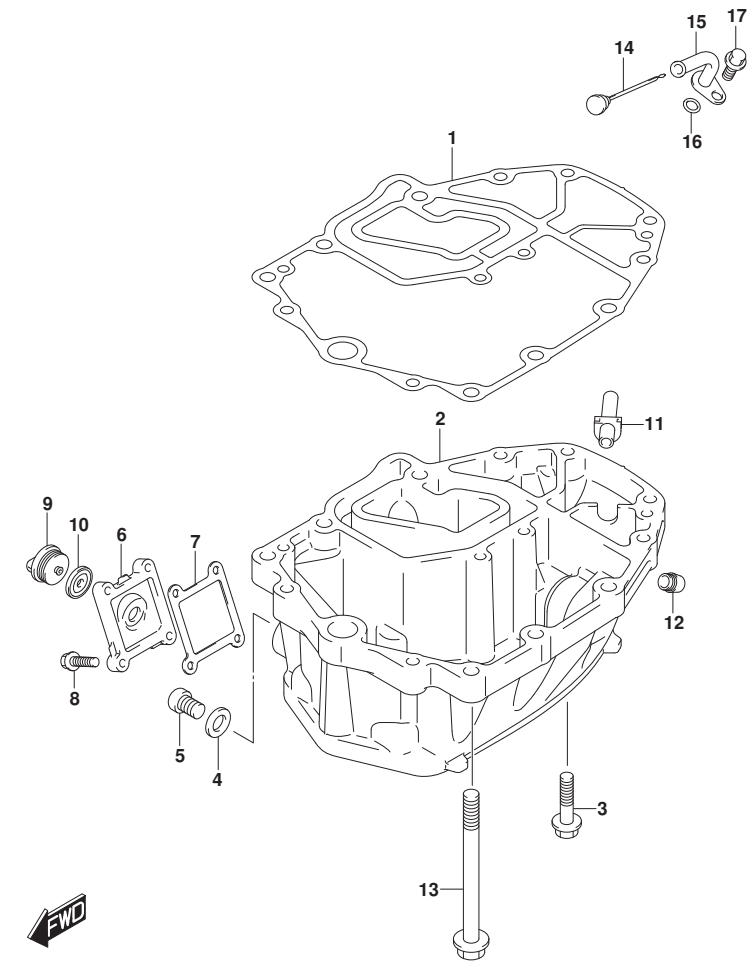


FIG.180A (1-E-3) OIL PAN (DF40A,DF40AST,DF50A,DF60A,DF40ASVT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11489-88L01	GASKET, OIL PAN	1	
2-1	11501-88L01-YAY	PAN, OIL (BLACK)	1	020 FOR YAY
2-2	11501-88L01-Y5S	PAN, OIL (WHITE)	1	020 FOR Y5S
2-3	11501-88L01-QTN	PAN, OIL (WHITE)	1	021 FOR QTN
2-4	11501-88L01-YAY	PAN, OIL (BLACK)	1	021 FOR QTN SEE NOTE
2-5	11501-88L01-YAY	PAN, OIL (BLACK)	1	021,022 FOR YAY
3	09116-08178	BOLT (8X40)	6	
4	09168-12012	GASKET (12.5X20X2.5)	1	
5	09248-12009	PLUG (12X18.65)	1	OIL DRAIN

NOTE : FROM 04003F-140758, FROM 05003F-140891,
FROM 06002F-140966

FIG.180A (1-E-4) OIL PAN (DF40A,DF40AST,DF50A,DF60A,DF40ASVT)

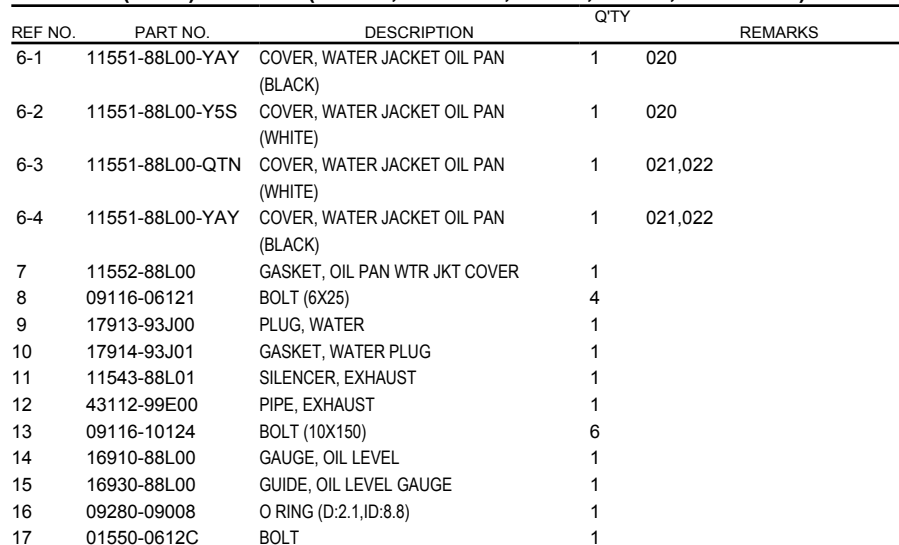

DF60A_E11_022

FIG.180B

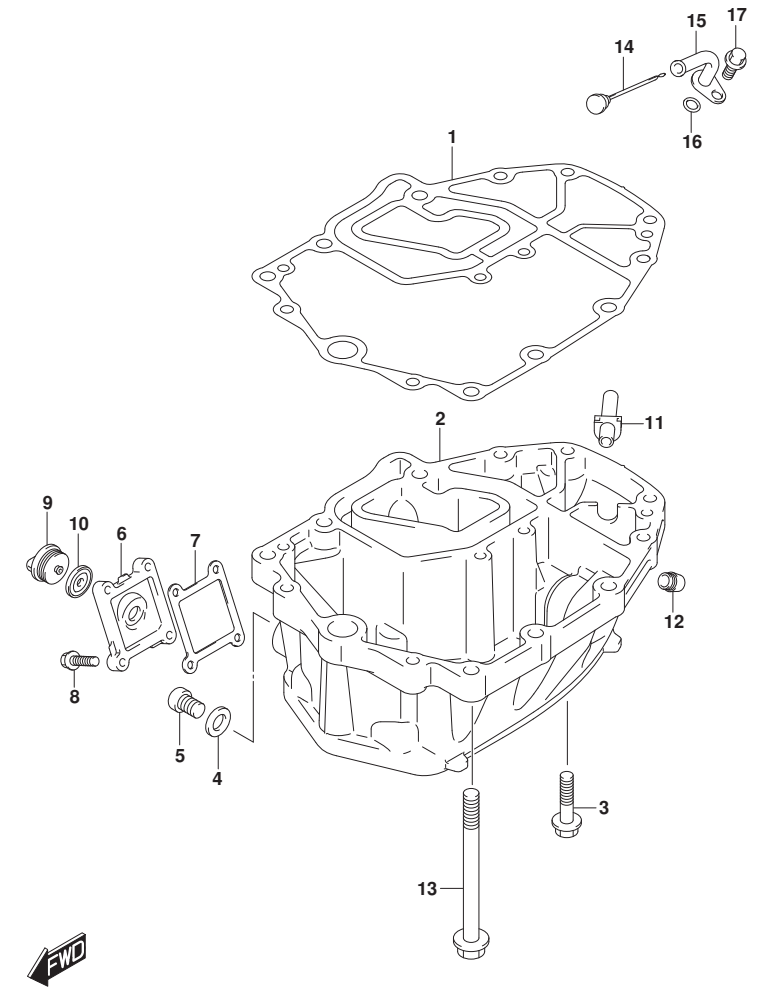


FIG.180B (1-E-5) OIL PAN (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11489-88L01	GASKET, OIL PAN	1	
2	11501-88L01-YAY	PAN, OIL (BLACK)	1	
3	09116-08178	BOLT (8X40)	6	
4	09168-12012	GASKET (12.5X20X2.5)	1	
5	09248-12009	PLUG (12X18.65)	1	OIL DRAIN
6	11551-88L00-YAY	COVER, WATER JACKET OIL PAN (BLACK)	1	
7	11552-88L00	GASKET, OIL PAN WTR JKT COVER	1	
8	09116-06121	BOLT (6X25)	4	
9	17913-93J00	PLUG, WATER	1	
10	17914-93J01	GASKET, WATER PLUG	1	
11	11543-88L01	SILENCER, EXHAUST	1	
12	43112-99E00	PIPE, EXHAUST	1	
13	09116-10124	BOLT (10X150)	6	
14	16910-88L00	GAUGE, OIL LEVEL	1	
15	16930-88L00	GUIDE, OIL LEVEL GAUGE	1	
16	09280-09008	O RING (D:2.1,ID:8.8)	1	

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVT,DF50AVTH,DF60AVT,DF60AVTH

FIG.180B

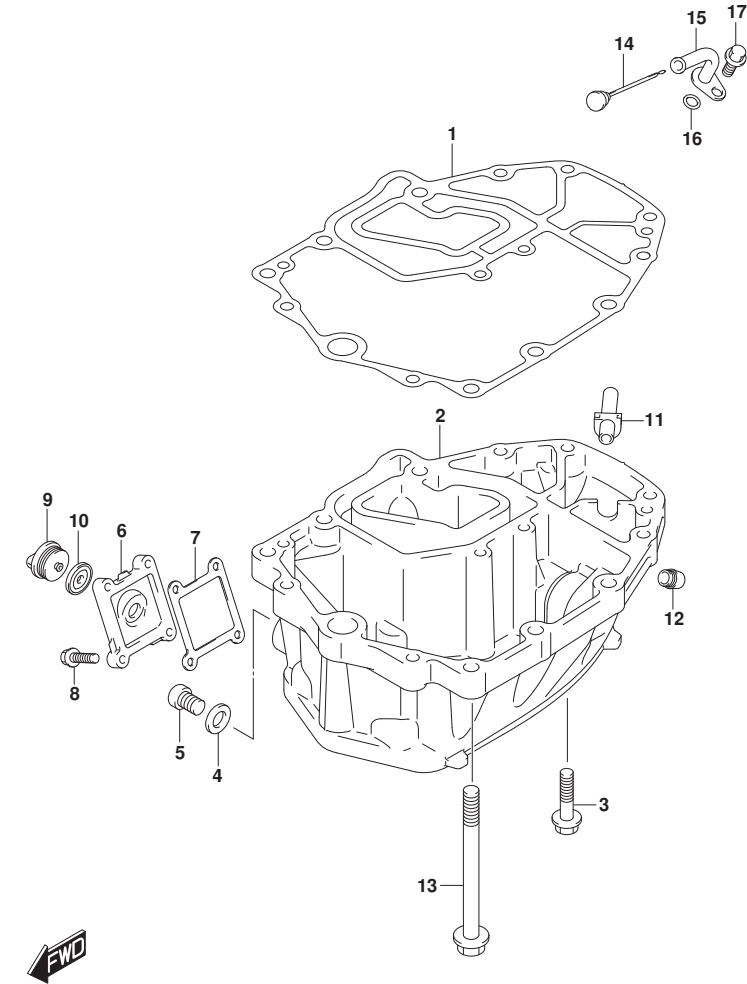


FIG.180B (1-E-6) OIL PAN (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
17	01550-0612C	BOLT	1	

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVT,DF50AVTH,
DF60AVT,DF60AVTH

- DF40AQH E01
- DF40ATH E01
- DF50ATH E01
- DF50AVT E03
- DF50AVTH E01
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.204A

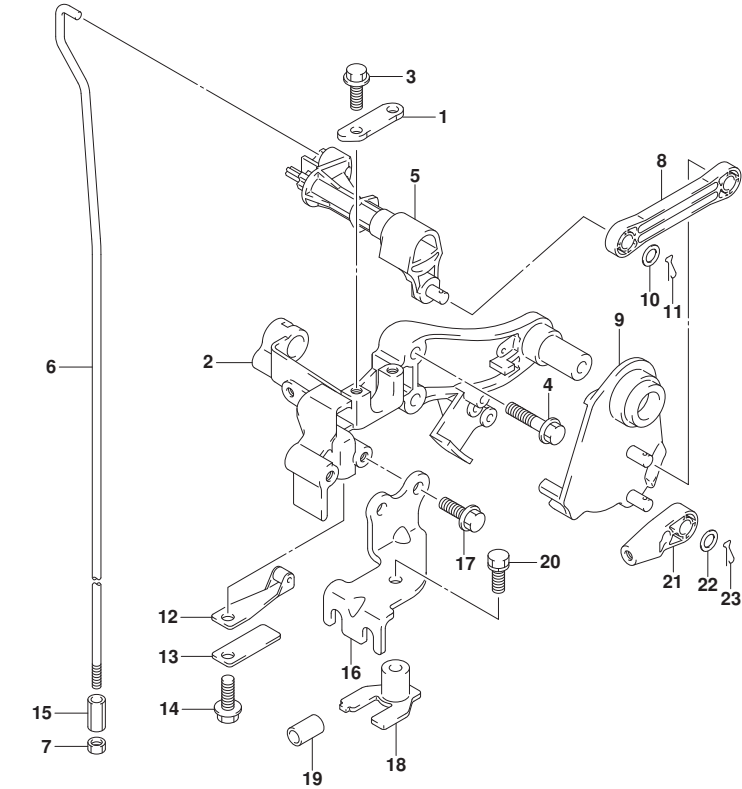


FIG.204A (1-E-7) CLUTCH SHAFT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21126-88L00	HOLDER, CLUTCH SHAFT	1	
2	21151-88L00	HOLDER, CLUTCH LEVER	1	
3	01550-0616C	BOLT	2	
4	01550-0630C	BOLT	2	
5	21210-88L01	SHAFT, CLUTCH	1	
6-1	23111-88L01	ROD, CLUTCH	1	W/TRANSOM(S)
6-2	23111-88L11	ROD, CLUTCH	1	W/TRANSOM(L)
6-3	23111-88L11	ROD, CLUTCH	1	W/TRANSOM(X)
7	29141-93J00	NUT (M6)	1	
8	23115-88L00	LINK, CLUTCH LEVER	1	
9	23210-88L00	LEVER, CLUTCH CONTROL	1	
10	09160-06055	WASHER (7X12X1.0)	2	
11	09385-06012	CLIP	2	
12	23213-89J01	SPRING, NOTCH PLATE NO.1	1	
13	23214-89J00	SPRING, NOTCH PLATE	1	
14	01550-0612C	BOLT	1	
15	23311-95J00	CONNECTOR, CLUTCH ROD	1	
16	67341-88L01	HOLDER, REMOCON CABLE	1	
17	01550-0616C	BOLT	2	
18	67343-88L01	STOPPER, REMOCON CABLE	1	
19	09352-70104-600	HOSE (7X10.2X600)	2	L:600->14
20	01570-06167	BOLT	1	
21	67467-89J01	CONNECTOR	2	
22	09160-06055	WASHER (7X12X1.0)	2	


NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60A,DF60ATH):E01,
(DF40A,DF50A,DF60A):E11



FIG.204A

FIG.204A (1-E-8) CLUTCH SHAFT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
23	09385-06012	CLIP	2	

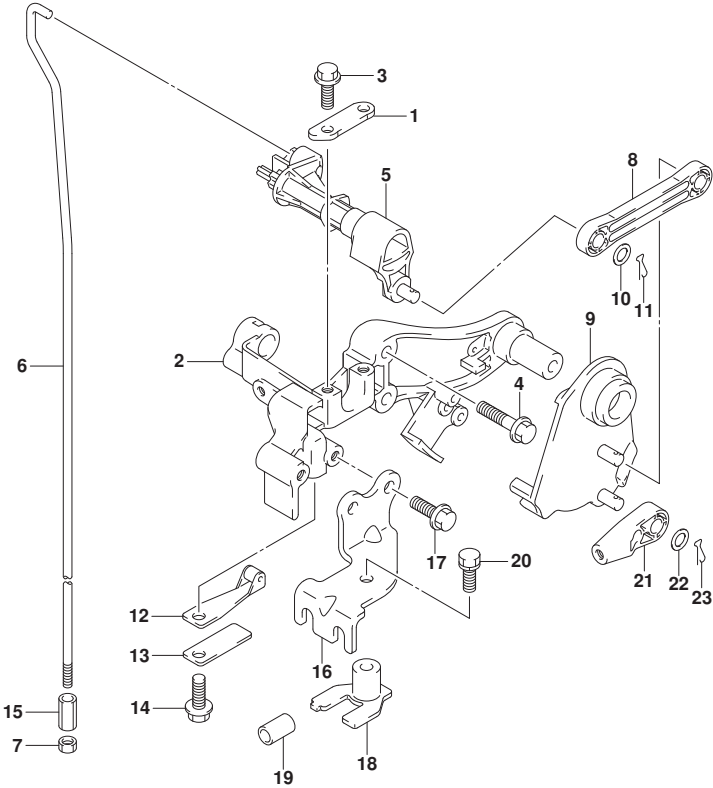

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60A,DF60ATH):E01,
(DF40A,DF50A,DF60A):E11

- DF40A E01
- DF40A E11
- DF40AQH E01
- DF40ATH E01
- DF50A E01
- DF50A E11
- DF50ATH E01
- DF60A E01
- DF60A E11
- DF60ATH E01



FIG.204B

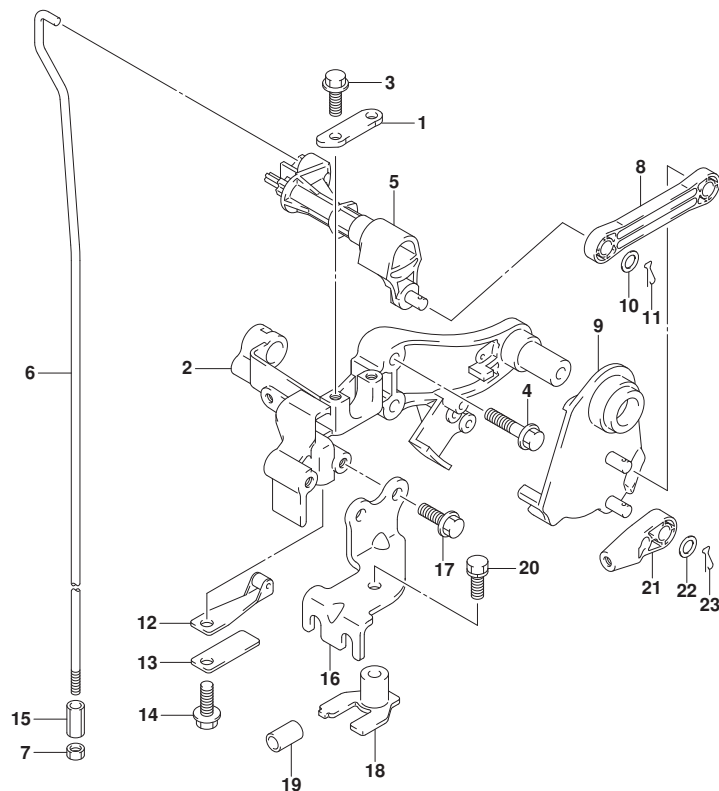


FIG.204B (1-E-9) CLUTCH SHAFT ((DF40A,DF50A,DF60A):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21126-88L00	HOLDER, CLUTCH SHAFT	1	
2	21151-88L00	HOLDER, CLUTCH LEVER	1	
3	01550-0616C	BOLT	2	
4	01550-0630C	BOLT	2	
5	21210-88L01	SHAFT, CLUTCH	1	
6	23111-88L11	ROD, CLUTCH	1	
7	29141-93J00	NUT (M6)	1	
8	23115-88L00	LINK, CLUTCH LEVER	1	
9	23210-88L00	LEVER, CLUTCH CONTROL	1	
10	09160-06055	WASHER (7X12X1.0)	2	
11	09385-06012	CLIP	2	
12	23213-89J01	SPRING, NOTCH PLATE NO.1	1	
13	23214-89J00	SPRING, NOTCH PLATE	1	
14	01550-0612C	BOLT	1	
15	23311-95J00	CONNECTOR, CLUTCH ROD	1	
16	67341-88L01	HOLDER, REMOCON CABLE	1	
17	01550-0616C	BOLT	2	
18	67343-88L01	STOPPER, REMOCON CABLE	1	
19	09352-70104-600	HOSE (7X10.2X600)	2	L:600->14
20	01570-06167	BOLT	1	
21	67467-89J01	CONNECTOR	2	
22	09160-06055	WASHER (7X12X1.0)	2	
23	09385-06012	CLIP	2	

DF40A E03
DF50A E03
DF60A E03

FIG.204C

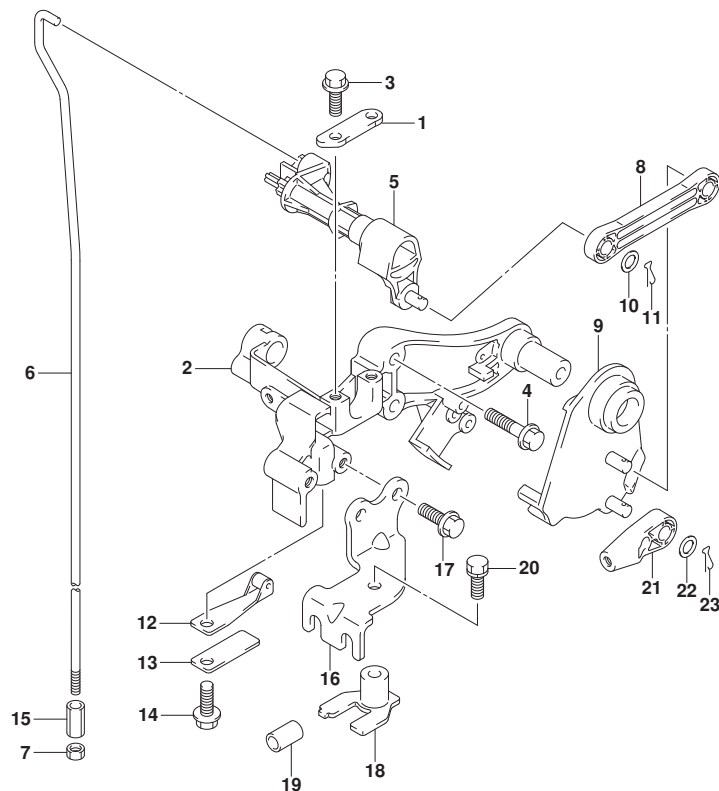


FIG.204C (1-E-10) CLUTCH SHAFT (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21126-88L00	HOLDER, CLUTCH SHAFT	1	
2	21151-88L00	HOLDER, CLUTCH LEVER	1	
3	01550-0616C	BOLT	2	
4	01550-0630C	BOLT	2	
5	21210-88L01	SHAFT, CLUTCH	1	
6-1	23111-88L01	ROD, CLUTCH	1	W/TRANSOM(S)
6-2	23111-88L11	ROD, CLUTCH	1	W/TRANSOM(L)
7	29141-93J00	NUT (M6)	1	
8	23115-88L00	LINK, CLUTCH LEVER	1	
9	23210-88L00	LEVER, CLUTCH CONTROL	1	
10	09160-06055	WASHER (7X12X1.0)	2	
11	09385-06012	CLIP	2	
12	23213-89J01	SPRING, NOTCH PLATE NO.1	1	
13	23214-89J00	SPRING, NOTCH PLATE	1	
14	01550-0612C	BOLT	1	
15	23311-95J00	CONNECTOR, CLUTCH ROD	1	
16	67341-88L01	HOLDER, REMOCON CABLE	1	
17	01550-0616C	BOLT	2	
18	67343-88L01	STOPPER, REMOCON CABLE	1	
19	09352-70104-600	HOSE (7X10.2X600)	2	L:600->14
20	01570-06167	BOLT	1	
21	67467-89J01	CONNECTOR	2	
22	09160-06055	WASHER (7X12X1.0)	2	
23	09385-06012	CLIP	2	

DF40AST E34

FIG.204D

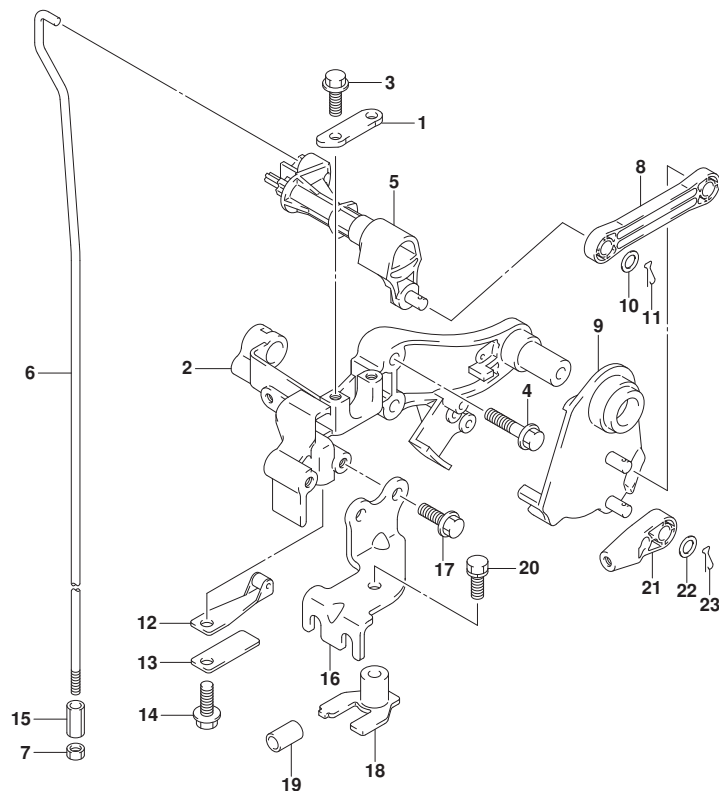


FIG.204D (1-E-11) CLUTCH SHAFT ((DF60A,DF60AQH,DF60ATH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21126-88L00	HOLDER, CLUTCH SHAFT	1	
2	21151-88L00	HOLDER, CLUTCH LEVER	1	
3	01550-0616C	BOLT	2	
4	01550-0630C	BOLT	2	
5	21210-88L01	SHAFT, CLUTCH	1	
6	23111-88L11	ROD, CLUTCH	1	
7	29141-93J00	NUT (M6)	1	
8	23115-88L00	LINK, CLUTCH LEVER	1	
9	23210-88L00	LEVER, CLUTCH CONTROL	1	
10	09160-06055	WASHER (7X12X1.0)	2	
11	09385-06012	CLIP	2	
12	23213-89J01	SPRING, NOTCH PLATE NO.1	1	
13	23214-89J00	SPRING, NOTCH PLATE	1	
14	01550-0612C	BOLT	1	
15	23311-95J00	CONNECTOR, CLUTCH ROD	1	
16	67341-88L01	HOLDER, REMOCON CABLE	1	
17	01550-0616C	BOLT	2	
18	67343-88L01	STOPPER, REMOCON CABLE	1	
19	09352-70104-600	HOSE (7X10.2X600)	2	L:600->14
20	01570-06167	BOLT	1	
21	67467-89J01	CONNECTOR	2	
22	09160-06055	WASHER (7X12X1.0)	2	
23	09385-06012	CLIP	2	

DF60A E40
DF60AQH E40
DF60ATH E40

FIG.204E

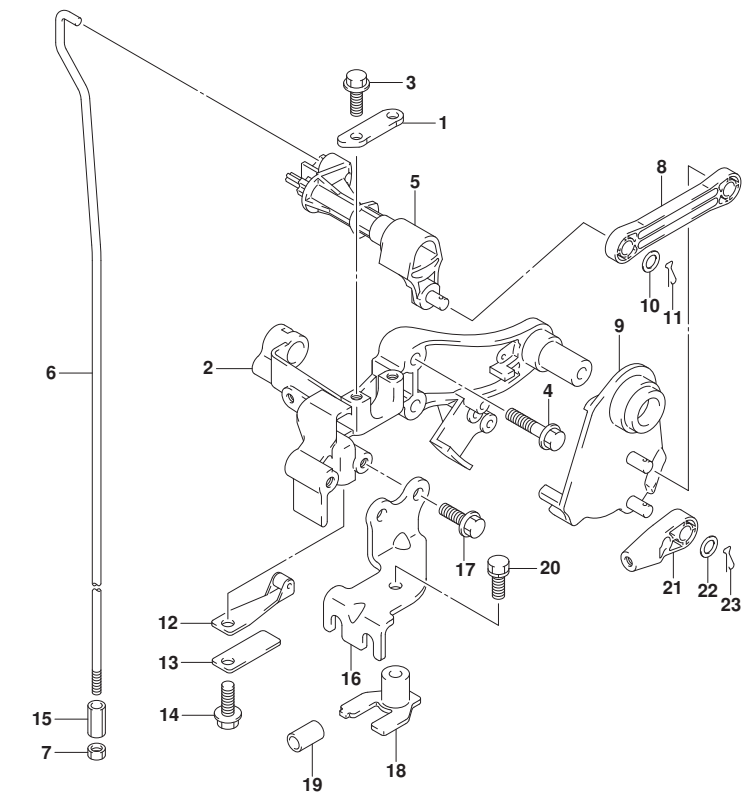


FIG.204E (1-E-12) CLUTCH SHAFT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21126-88L00	HOLDER, CLUTCH SHAFT	1	
2	21151-88L00	HOLDER, CLUTCH LEVER	1	
3	01550-0616C	BOLT	2	
4	01550-0630C	BOLT	2	
5	21210-88L01	SHAFT, CLUTCH	1	
6-1	23111-88L01	ROD, CLUTCH	1	W/TRANSOM(L)
6-2	23111-88L11	ROD, CLUTCH	1	W/TRANSOM(X)
7	29141-93J00	NUT (M6)	1	
8	23115-88L00	LINK, CLUTCH LEVER	1	
9	23210-88L00	LEVER, CLUTCH CONTROL	1	
10	09160-06055	WASHER (7X12X1.0)	2	
11	09385-06012	CLIP	2	
12	23213-89J01	SPRING, NOTCH PLATE NO.1	1	
13	23214-89J00	SPRING, NOTCH PLATE	1	
14	01550-0612C	BOLT	1	
15	23311-95J00	CONNECTOR, CLUTCH ROD	1	
16	67341-88L01	HOLDER, REMOCON CABLE	1	
17	01550-0616C	BOLT	2	
18	67343-88L01	STOPPER, REMOCON CABLE	1	
19	09352-70104-600	HOSE (7X10.2X600)	2	L:600->14
20	01570-06167	BOLT	1	
21	67467-89J01	CONNECTOR	2	
22	09160-06055	WASHER (7X12X1.0)	2	
23	09385-06012	CLIP	2	

NOTE : (DF50AVTH,DF60AVT):E01,DF60AVT:E11,DF40ASVT:E34

DF40ASVT E34
DF50AVTH E01
DF60AVT E01
DF60AVT E11



FIG.204F

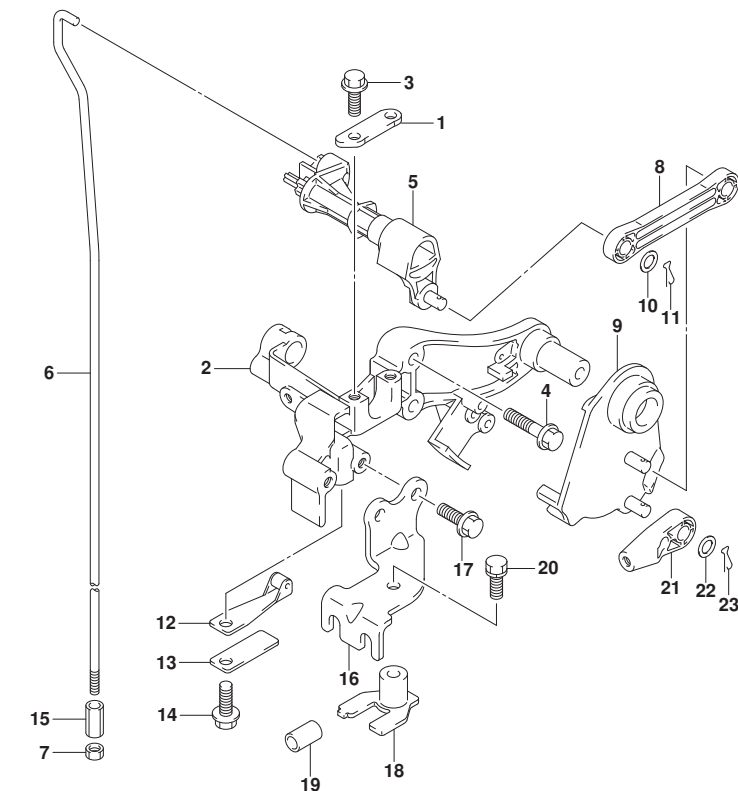


FIG.204F (1-E-13) CLUTCH SHAFT ((DF50AVT,DF60AVT):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21126-88L00	HOLDER, CLUTCH SHAFT	1	
2	21151-88L00	HOLDER, CLUTCH LEVER	1	
3	01550-0616C	BOLT	2	
4	01550-0630C	BOLT	2	
5	21210-88L01	SHAFT, CLUTCH	1	
6	23111-88L01	ROD, CLUTCH	1	
7	29141-93J00	NUT (M6)	1	
8	23115-88L00	LINK, CLUTCH LEVER	1	
9	23210-88L00	LEVER, CLUTCH CONTROL	1	
10	09160-06055	WASHER (7X12X1.0)	2	
11	09385-06012	CLIP	2	
12	23213-89J01	SPRING, NOTCH PLATE NO.1	1	
13	23214-89J00	SPRING, NOTCH PLATE	1	
14	01550-0612C	BOLT	1	
15	23311-95J00	CONNECTOR, CLUTCH ROD	1	
16	67341-88L01	HOLDER, REMOCON CABLE	1	
17	01550-0616C	BOLT	2	
18	67343-88L01	STOPPER, REMOCON CABLE	1	
19	09352-70104-600	HOSE (7X10.2X600)	2	L:600->14
20	01570-06167	BOLT	1	
21	67467-89J01	CONNECTOR	2	
22	09160-06055	WASHER (7X12X1.0)	2	
23	09385-06012	CLIP	2	

DF50AVT E03
DF60AVT E03

FIG.204G

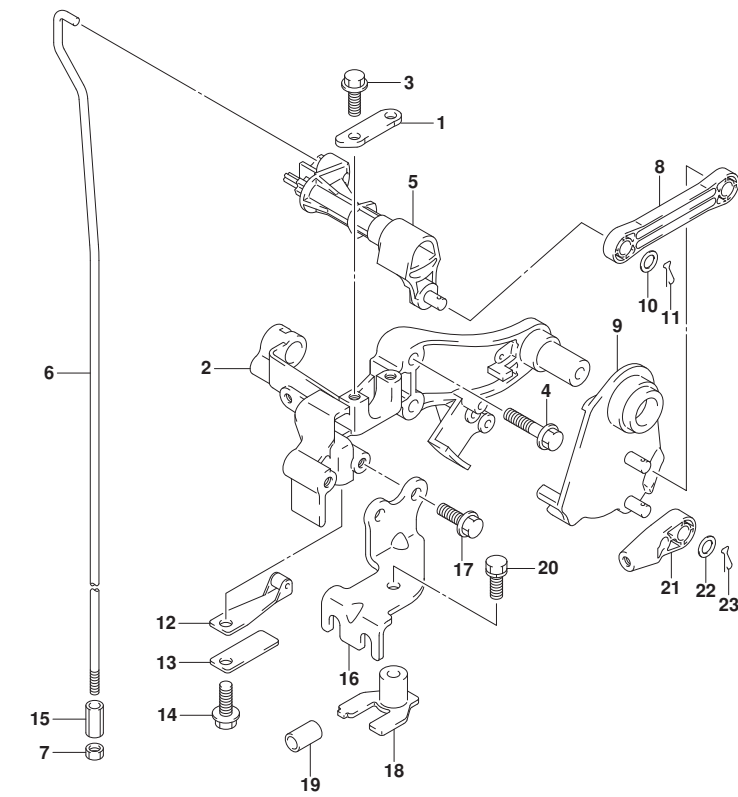


FIG.204G (1-E-14) CLUTCH SHAFT ((DF60AVT,DF60AVTH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21126-88L00	HOLDER, CLUTCH SHAFT	1	
2	21151-88L00	HOLDER, CLUTCH LEVER	1	
3	01550-0616C	BOLT	2	
4	01550-0630C	BOLT	2	
5	21210-88L01	SHAFT, CLUTCH	1	
6-1	23111-88L01	ROD, CLUTCH	1	W/TRANSOM(L)
6-2	23111-88L11	ROD, CLUTCH	1	W/TRANSOM(X)
7	29141-93J00	NUT (M6)	1	
8	23115-88L00	LINK, CLUTCH LEVER	1	
9	23210-88L00	LEVER, CLUTCH CONTROL	1	
10	09160-06055	WASHER (7X12X1.0)	2	
11	09385-06012	CLIP	2	
12	23213-89J01	SPRING, NOTCH PLATE NO.1	1	
13	23214-89J00	SPRING, NOTCH PLATE	1	
14	01550-0612C	BOLT	1	
15	23311-95J00	CONNECTOR, CLUTCH ROD	1	
16	67341-88L01	HOLDER, REMOCON CABLE	1	
17	01550-0616C	BOLT	2	
18	67343-88L01	STOPPER, REMOCON CABLE	1	
19	09352-70104-600	HOSE (7X10.2X600)	2	L:600->14
20	01570-06167	BOLT	1	
21	67467-89J01	CONNECTOR	2	
22	09160-06055	WASHER (7X12X1.0)	2	
23	09385-06012	CLIP	2	

DF60AVT E40
DF60AVTH E40

FIG.206A

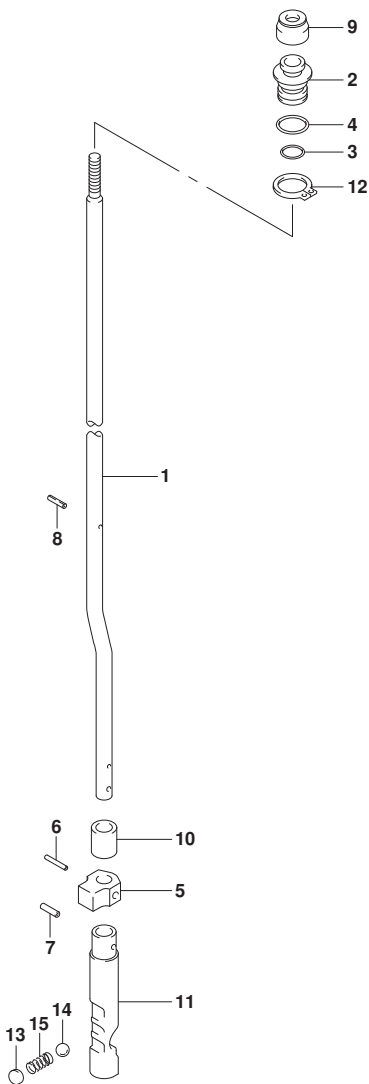


FIG.206A (1-F-2) CLUTCH ROD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	25111-88L00	ROD, SHIFT	1	W/TRANSOM(S)
1-2	25111-88L10	ROD, SHIFT	1	W/TRANSOM(L)
1-3	25111-88L20	ROD, SHIFT	1	W/TRANSOM(X)
2	25211-87J00	GUIDE, SHIFT ROD	1	
3	09280-08005	O RING (D:1.7,ID:7.7)	1	
4	09280-11001	O RING (D:2.4,ID:10.8)	1	
5	25212-94401	GUIDE, SHIFT ROD LOWER	1	LOWER
6	09205-02013	PIN (2.5X16)	1	
7	09205-03021	PIN (3.5X12)	1	
8	09205-02004	SPRING PIN (2.5X12)	1	
9-1	25223-94400	SEAL, SHIFT ROD DUST	1	020
9-2	25223-94400	SEAL, SHIFT ROD DUST	1	021
9-3	25223-96J00	SEAL, SHIFT ROD DUST	1	022
10	25232-96302	MAGNETO, GEAR CASE	1	
11	25311-88L00	CAM, SHIFT	1	
12	08331-3115A	CIRCLIP	1	
13	21121-93300	PLATE, CLUTCH NOTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60A,DF60ATH);E01,
(DF40A,DF50A,DF60A);E11

DF40A E01
DF40A E11
DF40AQH E01
DF40ATH E01
DF50A E01
DF50A E11
DF50ATH E01
DF60A E01
DF60A E11
DF60ATH E01



FIG.206B

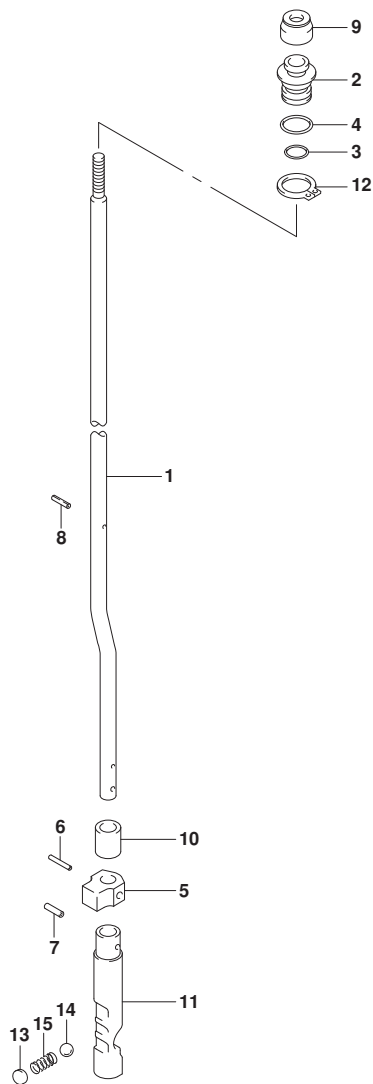


FIG.206B (1-F-3) CLUTCH ROD ((DF40A,DF50A,DF60A):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	25111-88L10	ROD, SHIFT	1	
2	25211-87J00	GUIDE, SHIFT ROD	1	
3	09280-08005	O RING (D:1.7,ID:7.7)	1	
4	09280-11001	O RING (D:2.4,ID:10.8)	1	
5	25212-94401	GUIDE, SHIFT ROD LOWER	1	LOWER
6	09205-02013	PIN (2.5X16)	1	
7	09205-03021	PIN (3.5X12)	1	
8	09205-02004	SPRING PIN (2.5X12)	1	
9	25223-94400	SEAL, SHIFT ROD DUST	1	
10	25232-96302	MAGNETO, GEAR CASE	1	
11	25311-88L00	CAM, SHIFT	1	
12	08331-3115A	CIRCLIP	1	
13	21121-93300	PLATE, CLUTCH NOTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	

DF40A E03
DF50A E03
DF60A E03



FIG.206C

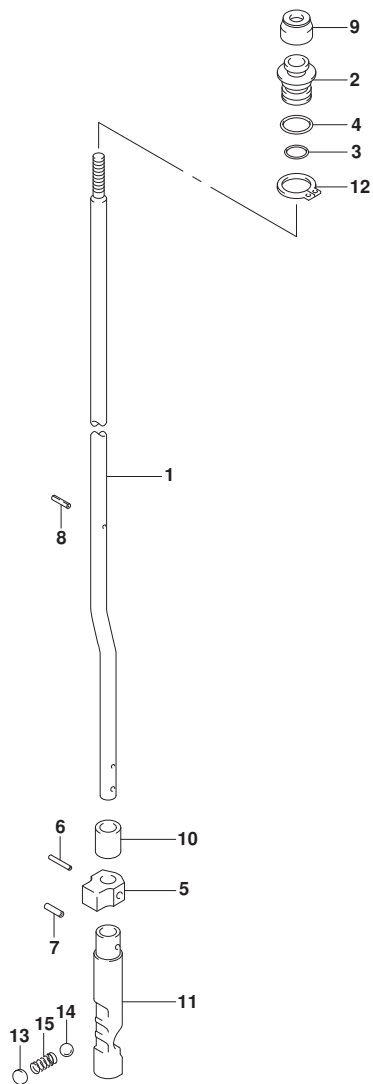


FIG.206C (1-F-4) CLUTCH ROD (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	25111-88L00	ROD, SHIFT	1	W/TRANSOM(S)
1-2	25111-88L10	ROD, SHIFT	1	W/TRANSOM(L)
2	25211-87J00	GUIDE, SHIFT ROD	1	
3	09280-08005	O RING (D:1.7,ID:7.7)	1	
4	09280-11001	O RING (D:2.4,ID:10.8)	1	
5	25212-94401	GUIDE, SHIFT ROD LOWER	1	LOWER
6	09205-02013	PIN (2.5X16)	1	
7	09205-03021	PIN (3.5X12)	1	
8	09205-02004	SPRING PIN (2.5X12)	1	
9-1	25223-94400	SEAL, SHIFT ROD DUST	1	020,021
9-2	25223-96J00	SEAL, SHIFT ROD DUST	1	022
10	25232-96302	MAGNETO, GEAR CASE	1	
11	25311-88L00	CAM, SHIFT	1	
12	08331-3115A	CIRCLIP	1	
13	21121-93300	PLATE, CLUTCH NOTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	

DF40AST E34

FIG.206D

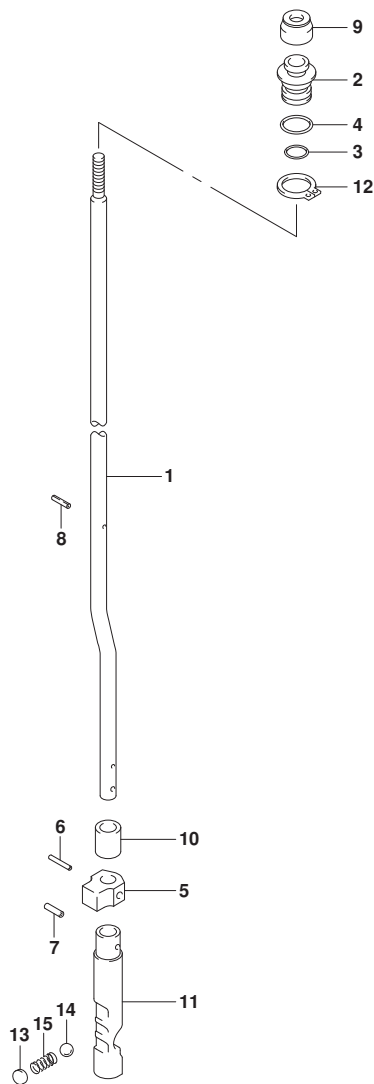


FIG.206D (1-F-5) CLUTCH ROD ((DF60A,DF60AQH,DF60ATH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	25111-88L10	ROD, SHIFT	1	W/TRANSOM(L)
1-2	25111-88L20	ROD, SHIFT	1	W/TRANSOM(X)
2	25211-87J00	GUIDE, SHIFT ROD	1	
3	09280-08005	O RING (D:1.7,ID:7.7)	1	
4	09280-11001	O RING (D:2.4,ID:10.8)	1	
5	25212-94401	GUIDE, SHIFT ROD LOWER	1	LOWER
6	09205-02013	PIN (2.5X16)	1	
7	09205-03021	PIN (3.5X12)	1	
8	09205-02004	SPRING PIN (2.5X12)	1	
9-1	25223-94400	SEAL, SHIFT ROD DUST	1	020,021
9-2	25223-96J00	SEAL, SHIFT ROD DUST	1	022
10	25232-96302	MAGNETO, GEAR CASE	1	
11	25311-88L00	CAM, SHIFT	1	
12	08331-3115A	CIRCLIP	1	
13	21121-93300	PLATE, CLUTCH NOTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	

DF60A E40
DF60AQH E40
DF60ATH E40

FIG.210A (1-F-6) SHIFT ROD (SEE NOTE)



NOTE : DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH

DF40ASVT E34
DF50AVT E03
DF50AVTH E01
DF60AVT E01
DF60AVT E03
DF60AVT E11
DF60AVT E40
DF60AVTH E40

FIG.220A


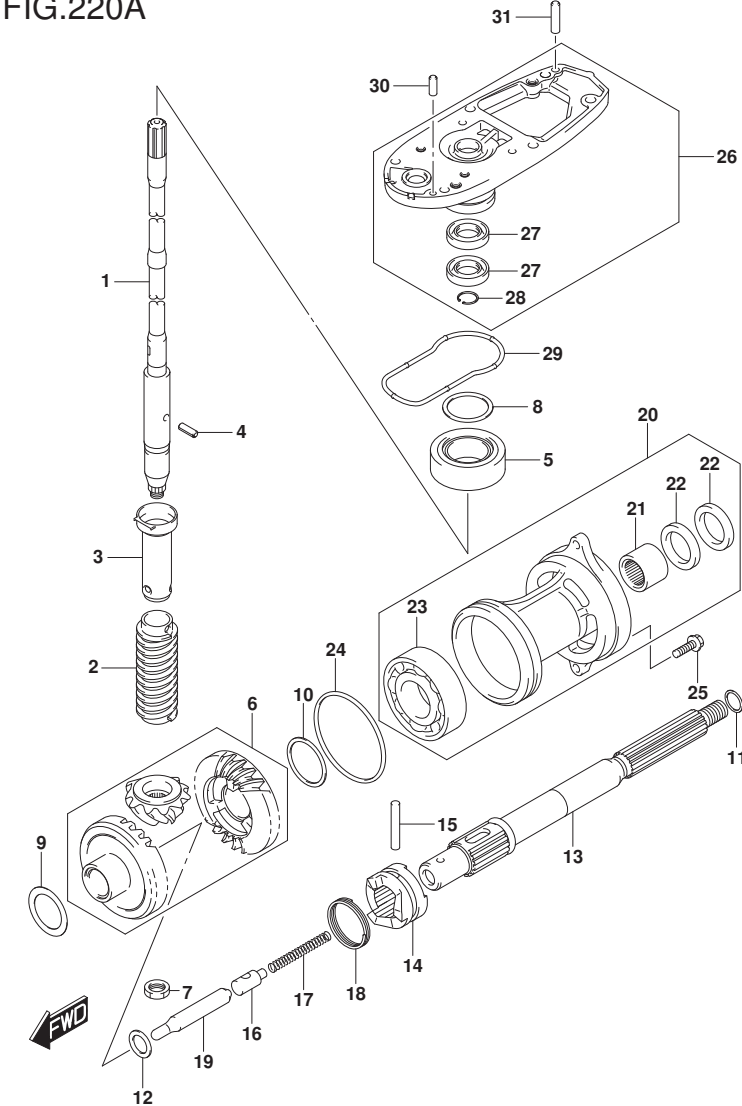


FIG.220A (1-F-7) TRANSMISSION (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-88L02	SHAFT, DRIVE	1	W/TRANSOM(S)
1-2	57110-88L12	SHAFT, DRIVE	1	W/TRANSOM(L)
1-3	57110-88L22	SHAFT, DRIVE	1	W/TRANSOM(X)
2	57133-88L01	COLLAR, DRIVE SHAFT	1	
3	57133-94400	HOUSING, DRIVE SHAFT SPRING	1	
4	09205-03019	PIN (3X10)	1	
5	09265-20015	BEARING (20X42X15)	1	
6	57300-88810	PINION & GEAR SET	1	
7	09140-12034	NUT	1	
8-1	09181-35101	SHIM (35X42X0.50)	AR	DRIVE SHAFT ADJUST
8-2	09181-33001	SHIM (33.5X41.8X0.55)	AR	DRIVE SHAFT ADJUST
8-3	09181-33002	SHIM (33.5X41.8X0.60)	AR	DRIVE SHAFT ADJUST
8-4	09181-33003	SHIM (33.5X41.8X0.65)	AR	DRIVE SHAFT ADJUST
8-5	09181-33004	SHIM (33.5X41.8X0.70)	AR	DRIVE SHAFT ADJUST
8-6	09181-33005	SHIM (33.5X41.8X0.75)	AR	DRIVE SHAFT ADJUST
8-7	09181-33006	SHIM (33.5X41.8X0.80)	AR	DRIVE SHAFT ADJUST
8-8	09181-33007	SHIM (33.5X41.8X0.85)	AR	DRIVE SHAFT ADJUST
8-9	09181-33008	SHIM (33.5X41.8X0.90)	AR	DRIVE SHAFT ADJUST
8-10	09181-33009	SHIM (33.5X41.8X0.95)	AR	DRIVE SHAFT ADJUST
8-11	09181-35110	SHIM (35X42X1)	AR	DRIVE SHAFT ADJUST
9-1	09181-30186	SHIM (30X42X0.5)	AR	FORWARD BACKUP
9-2	09181-30187	SHIM (30X42X0.6)	AR	FORWARD BACKUP
9-3	09181-30188	SHIM (30X42X0.7)	AR	FORWARD BACKUP
9-4	09181-30190	SHIM (30X42X0.8)	AR	FORWARD BACKUP
9-5	09181-30192	SHIM (30X42X0.9)	AR	FORWARD BACKUP
10-1	08221-35455	SHIM (35X45X0.5)	AR	REVERSE BACKUP
10-2	09181-35131	SHIM (35X46X0.6)	AR	REVERSE BACKUP
10-3	09181-35132	SHIM (35X46X0.7)	AR	REVERSE BACKUP
10-4	08221-35456	SHIM (35X45X0.8)	AR	REVERSE BACKUP
10-5	09181-35136	SHIM (35X46X0.9)	AR	REVERSE BACKUP
10-6	08211-35451	SHIM (35X45X1.0)	AR	REVERSE BACKUP

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60A,DF60ATH):E01,
(DF40A,DF50A,DF60A):E11

FIG.220A

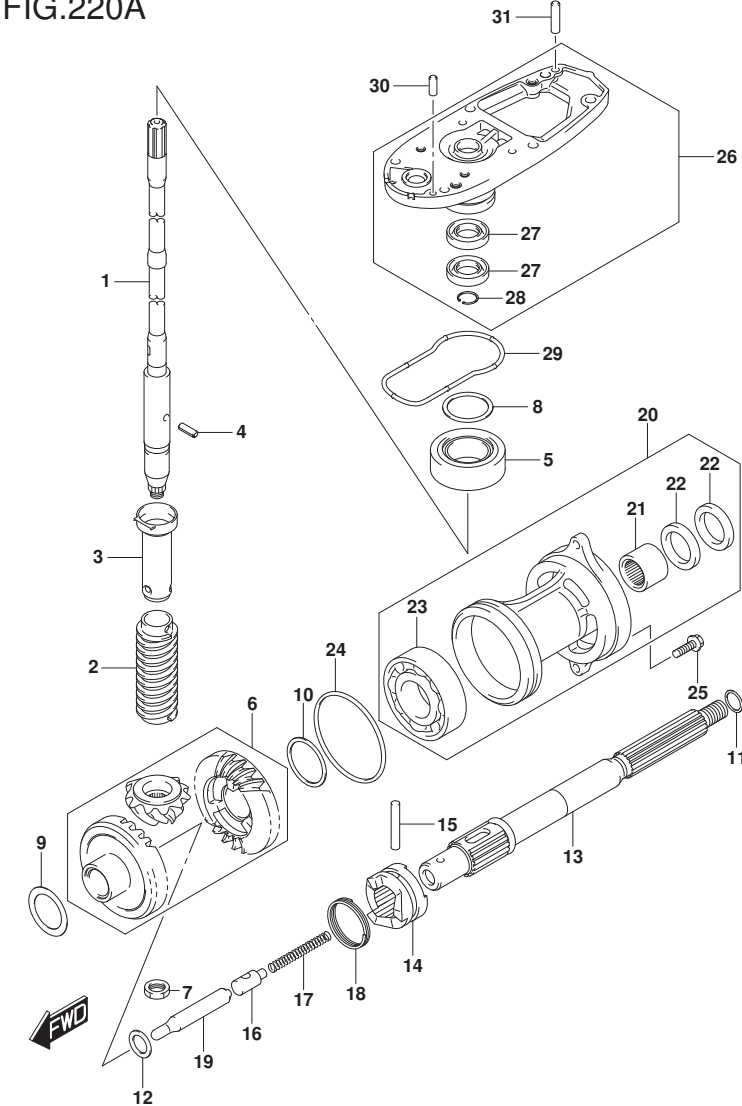

DF60A_E11_022_220A
TRANSMISSION

FIG.220A (1-F-8) TRANSMISSION (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
11-1	09160-22018	WASHER (22.5X28X1.8)	1	PROP SHAFT THRUST
11-2	09160-22019	WASHER (22.5X28X1.9)	1	PROP SHAFT THRUST
11-3	09160-22020	WASHER (22.5X28X2.0)	1	PROP SHAFT THRUST
11-4	09160-22021	WASHER (22.5X28X2.1)	1	PROP SHAFT THRUST
11-5	09160-22022	WASHER (22.5X28X2.2)	1	PROP SHAFT THRUST
11-6	09160-22023	WASHER (22.5X28X2.3)	1	PROP SHAFT THRUST
12	08211-20263	WASHER (20X26X2.0)	1	
13	57610-94403	SHAFT, PROPELLER	1	
14	57621-87J03	SHIFTER, CLUTCH DOG	1	
15	09202-05022	PIN (5.5X38.5)	1	
16	57634-88L00	PIN, PUSH	1	
17	09440-08043	SPRING	1	
18	09440-40002	SPRING	1	
19	57631-95303	ROD, PUSH	1	
20-1	56120-94321-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	E01
20-2	56120-94321-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	E01
20-3	56120-94321-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	E11
21	09263-22020	.BEARING (22.2X28.5X19)	1	
22	09289-22007	.OIL SEAL (22X35X5)	2	
23	09262-35070	.BEARING (35X62X14)	1	
24	09280-75001	O RING (D:3.3,ID:75)	1	
25	09116-08122	BOLT (8X30)	2	
26-1	56130-87J12-YAY	HOUSING, DRIVE SFT BRG (BLACK)	1	E01
26-2	56130-87J12-Y5S	HOUSING, DRIVE SFT BRG (WHITE)	1	E01
26-3	56130-87J12-QTN	HOUSING, DRIVE SFT BRG (WHITE)	1	E11
27	09282-17005	.OIL SEAL (17X32X6)	2	
28	08331-41329	.CIRCLIP	1	
29	55122-88L00	RING, GEAR CASE SEAL	1	

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60A,DF60ATH);E01,
(DF40A,DF50A,DF60A);E11

DF60A_E11_022

FIG.220A

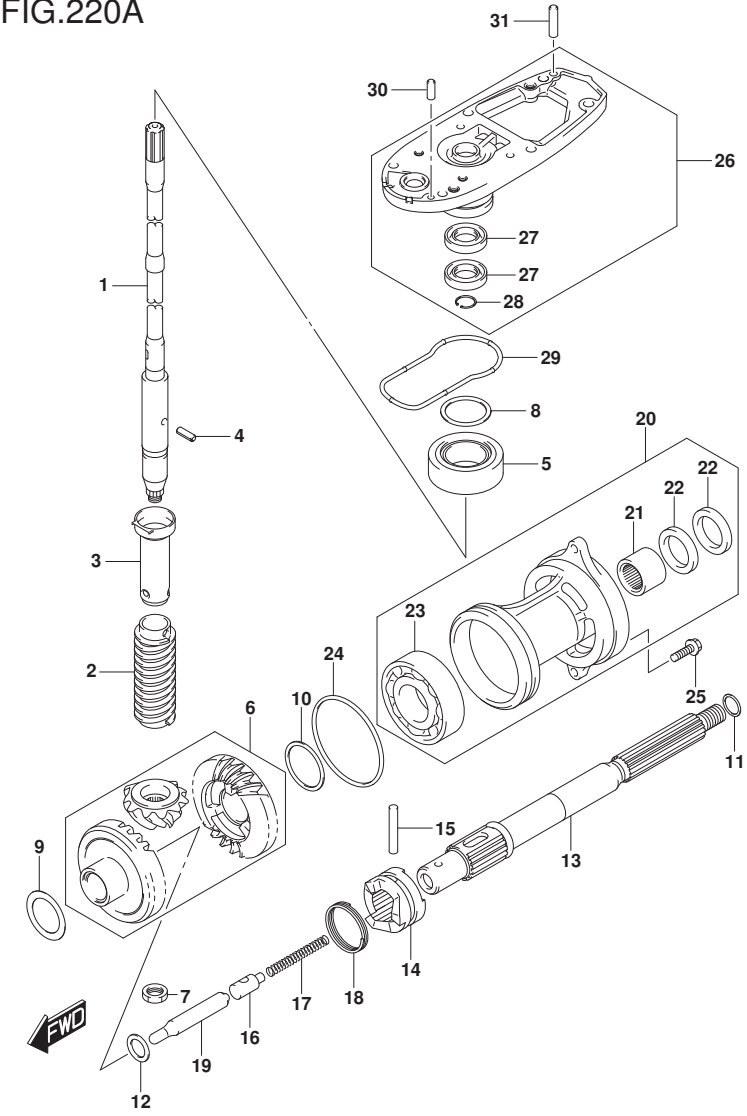



FIG.220A (1-F-9) TRANSMISSION (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	09202-06025	PIN (6X17)	1	
31	09202-06027	PIN (6X23)	1	

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60A,DF60ATH);E01,
(DF40A,DF50A,DF60A);E11

- DF40A E01
- DF40A E11
- DF40AQH E01
- DF40ATH E01
- DF50A E01
- DF50A E11
- DF50ATH E01
- DF60A E01
- DF60A E11
- DF60ATH E01

FIG.220B

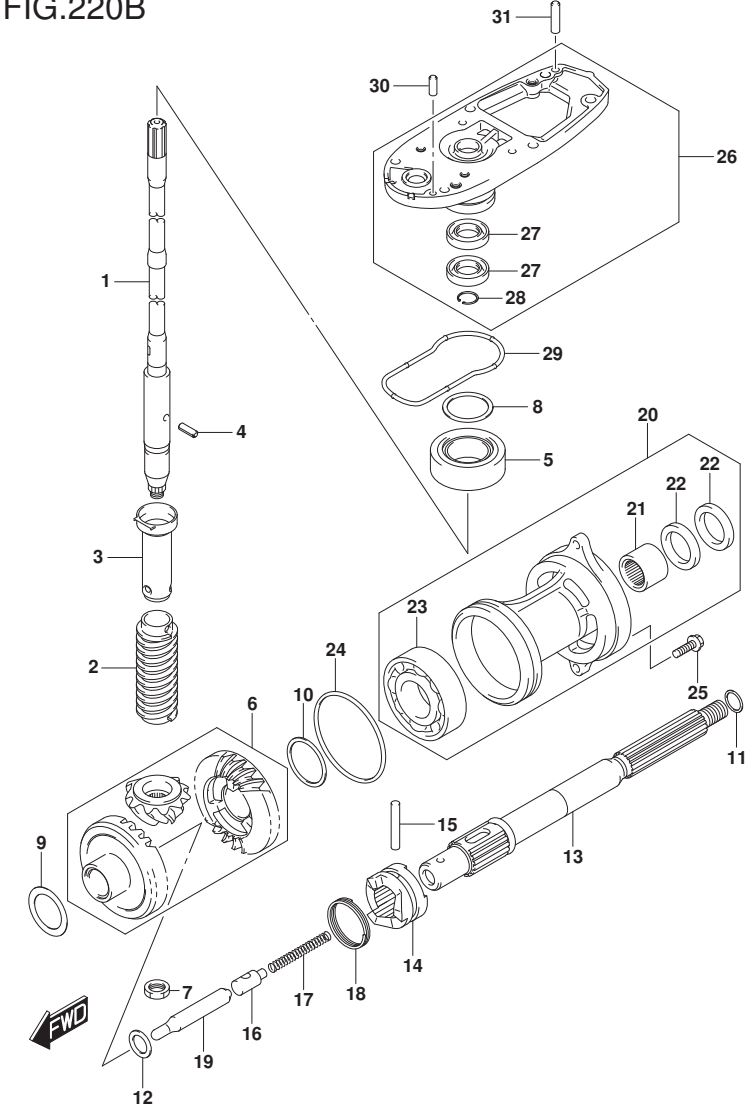

DF60A_E11_022_220B
TRANSMISSION

FIG.220B (1-F-10) TRANSMISSION ((DF40A,DF50A,DF60A):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	57110-88L12	SHAFT, DRIVE	1	
2	57133-88L01	COLLAR, DRIVE SHAFT	1	
3	57133-94400	HOUSING, DRIVE SHAFT SPRING	1	
4	09205-03019	PIN (3X10)	1	
5	09265-20015	BEARING (20X42X15)	1	
6	57300-88810	PINION & GEAR SET	1	
7	09140-12034	NUT	1	
8-1	09181-35101	SHIM (35X42X0.50)	AR	DRIVE SHAFT ADJUST
8-2	09181-33001	SHIM (33.5X41.8X0.55)	AR	DRIVE SHAFT ADJUST
8-3	09181-33002	SHIM (33.5X41.8X0.60)	AR	DRIVE SHAFT ADJUST
8-4	09181-33003	SHIM (33.5X41.8X0.65)	AR	DRIVE SHAFT ADJUST
8-5	09181-33004	SHIM (33.5X41.8X0.70)	AR	DRIVE SHAFT ADJUST
8-6	09181-33005	SHIM (33.5X41.8X0.75)	AR	DRIVE SHAFT ADJUST
8-7	09181-33006	SHIM (33.5X41.8X0.80)	AR	DRIVE SHAFT ADJUST
8-8	09181-33007	SHIM (33.5X41.8X0.85)	AR	DRIVE SHAFT ADJUST
8-9	09181-33008	SHIM (33.5X41.8X0.90)	AR	DRIVE SHAFT ADJUST
8-10	09181-33009	SHIM (33.5X41.8X0.95)	AR	DRIVE SHAFT ADJUST
8-11	09181-35110	SHIM (35X42X1)	AR	DRIVE SHAFT ADJUST
9-1	09181-30186	SHIM (30X42X0.5)	AR	FORWARD BACKUP
9-2	09181-30187	SHIM (30X42X0.6)	AR	FORWARD BACKUP
9-3	09181-30188	SHIM (30X42X0.7)	AR	FORWARD BACKUP
9-4	09181-30190	SHIM (30X42X0.8)	AR	FORWARD BACKUP
9-5	09181-30192	SHIM (30X42X0.9)	AR	FORWARD BACKUP
10-1	08221-35455	SHIM (35X45X0.5)	AR	REVERSE BACKUP
10-2	09181-35131	SHIM (35X46X0.6)	AR	REVERSE BACKUP
10-3	09181-35132	SHIM (35X46X0.7)	AR	REVERSE BACKUP
10-4	08221-35456	SHIM (35X45X0.8)	AR	REVERSE BACKUP
10-5	09181-35136	SHIM (35X46X0.9)	AR	REVERSE BACKUP
10-6	08211-35451	SHIM (35X45X1.0)	AR	REVERSE BACKUP
11-1	09160-22018	WASHER (22.5X28X1.8)	1	PROP SHAFT THRUST
11-2	09160-22019	WASHER (22.5X28X1.9)	1	PROP SHAFT THRUST
11-3	09160-22020	WASHER (22.5X28X2.0)	1	PROP SHAFT THRUST
11-4	09160-22021	WASHER (22.5X28X2.1)	1	PROP SHAFT THRUST
11-5	09160-22022	WASHER (22.5X28X2.2)	1	PROP SHAFT THRUST
11-6	09160-22023	WASHER (22.5X28X2.3)	1	PROP SHAFT THRUST
12	08211-20263	WASHER (20X26X2.0)	1	

DF60A_E11_022

FIG.220B


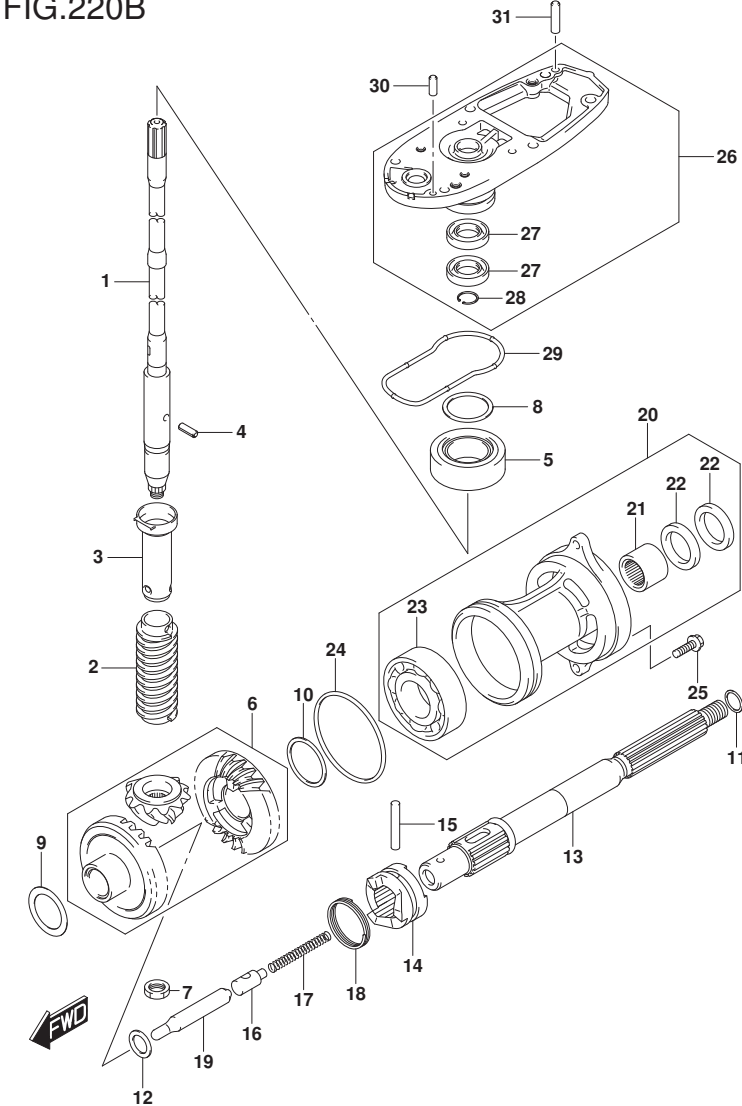


FIG.220B (1-F-11) TRANSMISSION ((DF40A,DF50A,DF60A):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
13	57610-94403	SHAFT, PROPELLER	1	
14	57621-87J03	SHIFTER, CLUTCH DOG	1	
15	09202-05022	PIN (5.5X38.5)	1	
16	57634-88L00	PIN, PUSH	1	
17	09440-08043	SPRING	1	
18	09440-40002	SPRING	1	
19	57631-95303	ROD, PUSH	1	
20-1	56120-94321-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
20-2	56120-94321-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	
21	09263-22020	.BEARING (22.2X28.5X19)	1	
22	09289-22007	.OIL SEAL (22X35X5)	2	
23	09262-35070	.BEARING (35X62X14)	1	
24	09280-75001	O RING (D:3.3,ID:75)	1	
25	09116-08122	BOLT (8X30)	2	
26-1	56130-87J12-YAY	HOUSING, DRIVE SFT BRG (BLACK)	1	
26-2	56130-87J12-Y5S	HOUSING, DRIVE SFT BRG (WHITE)	1	
27	09282-17005	.OIL SEAL (17X32X6)	2	
28	08331-41329	.CIRCLIP	1	
29	55122-88L00	RING, GEAR CASE SEAL	1	
30	09202-06025	PIN (6X17)	1	
31	09202-06027	PIN (6X23)	1	

DF40A E03
DF50A E03
DF60A E03

FIG.220C

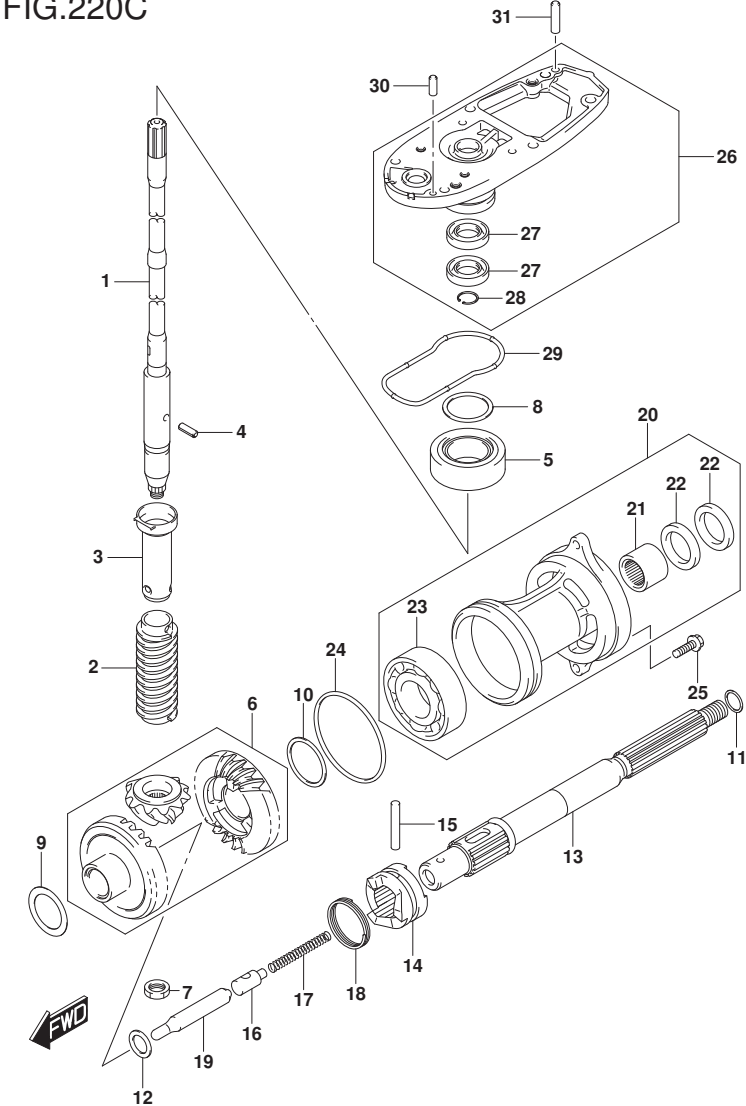


DF60A_E11_022_220C
TRANSMISSION

FIG.220C (1-F-12) TRANSMISSION (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-88L02	SHAFT, DRIVE	1	W/TRANSOM(S)
1-2	57110-88L12	SHAFT, DRIVE	1	W/TRANSOM(L)
2	57133-88L01	COLLAR, DRIVE SHAFT	1	
3	57133-94400	HOUSING, DRIVE SHAFT SPRING	1	
4	09205-03019	PIN (3X10)	1	
5	09265-20015	BEARING (20X42X15)	1	
6	57300-88820	PINION & GEAR SET	1	
7	09140-12034	NUT	1	
8-1	09181-35101	SHIM (35X42X0.50)	AR	DRIVE SHAFT ADJUST
8-2	09181-33001	SHIM (33.5X41.8X0.55)	AR	DRIVE SHAFT ADJUST
8-3	09181-33002	SHIM (33.5X41.8X0.60)	AR	DRIVE SHAFT ADJUST
8-4	09181-33003	SHIM (33.5X41.8X0.65)	AR	DRIVE SHAFT ADJUST
8-5	09181-33004	SHIM (33.5X41.8X0.70)	AR	DRIVE SHAFT ADJUST
8-6	09181-33005	SHIM (33.5X41.8X0.75)	AR	DRIVE SHAFT ADJUST
8-7	09181-33006	SHIM (33.5X41.8X0.80)	AR	DRIVE SHAFT ADJUST
8-8	09181-33007	SHIM (33.5X41.8X0.85)	AR	DRIVE SHAFT ADJUST
8-9	09181-33008	SHIM (33.5X41.8X0.90)	AR	DRIVE SHAFT ADJUST
8-10	09181-33009	SHIM (33.5X41.8X0.95)	AR	DRIVE SHAFT ADJUST
8-11	09181-35110	SHIM (35X42X1)	AR	DRIVE SHAFT ADJUST
9-1	09181-30186	SHIM (30X42X0.5)	AR	FORWARD BACKUP
9-2	09181-30187	SHIM (30X42X0.6)	AR	FORWARD BACKUP
9-3	09181-30188	SHIM (30X42X0.7)	AR	FORWARD BACKUP
9-4	09181-30190	SHIM (30X42X0.8)	AR	FORWARD BACKUP
9-5	09181-30192	SHIM (30X42X0.9)	AR	FORWARD BACKUP
10-1	08221-35455	SHIM (35X45X0.5)	AR	REVERSE BACKUP
10-2	09181-35131	SHIM (35X46X0.6)	AR	REVERSE BACKUP
10-3	09181-35132	SHIM (35X46X0.7)	AR	REVERSE BACKUP
10-4	08221-35456	SHIM (35X45X0.8)	AR	REVERSE BACKUP
10-5	09181-35136	SHIM (35X46X0.9)	AR	REVERSE BACKUP
10-6	08211-35451	SHIM (35X45X1.0)	AR	REVERSE BACKUP
11-1	09160-22018	WASHER (22.5X28X1.8)	1	PROP SHAFT THRUST
11-2	09160-22019	WASHER (22.5X28X1.9)	1	PROP SHAFT THRUST
11-3	09160-22020	WASHER (22.5X28X2.0)	1	PROP SHAFT THRUST
11-4	09160-22021	WASHER (22.5X28X2.1)	1	PROP SHAFT THRUST
11-5	09160-22022	WASHER (22.5X28X2.2)	1	PROP SHAFT THRUST
11-6	09160-22023	WASHER (22.5X28X2.3)	1	PROP SHAFT THRUST

DF60A_E11_022

FIG.220C

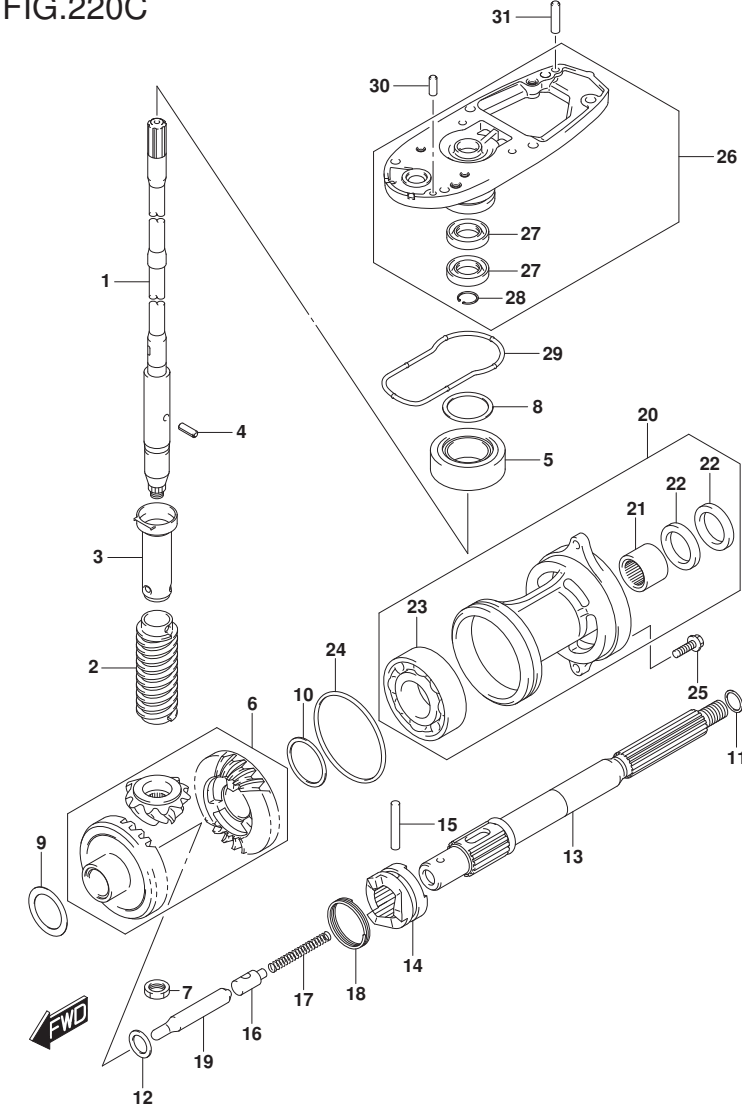

DF60A_E11_022_220C
TRANSMISSION

FIG.220C (1-F-13) TRANSMISSION (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
12	08211-20263	WASHER (20X26X2.0)	1		
13	57610-94403	SHAFT, PROPELLER	1		
14	57621-87J03	SHIFTER, CLUTCH DOG	1		
15	09202-05022	PIN (5.5X38.5)	1		
16	57634-88L00	PIN, PUSH	1		
17	09440-08043	SPRING	1		
18	09440-40002	SPRING	1		
19	57631-95303	ROD, PUSH	1		
20-1	56120-94321-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	020	
20-2	56120-94321-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	020	
20-3	56120-94321-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	021,022	
20-4	56120-94321-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	021,022	
21	09263-22020	.BEARING (22.2X28.5X19)	1		
22	09289-22007	.OIL SEAL (22X35X5)	2		
23	09262-35070	.BEARING (35X62X14)	1		
24	09280-75001	O RING (D:3.3,ID:75)	1		
25	09116-08122	BOLT (8X30)	2		
26-1	56130-87J12-YAY	HOUSING, DRIVE SFT BRG (BLACK)	1	020	
26-2	56130-87J12-Y5S	HOUSING, DRIVE SFT BRG (WHITE)	1	020	
26-3	56130-87J12-QTN	HOUSING, DRIVE SFT BRG (WHITE)	1	021,022	
26-4	56130-87J12-YAY	HOUSING, DRIVE SFT BRG (BLACK)	1	021,022	
27	09282-17005	.OIL SEAL (17X32X6)	2		
28	08331-41329	.CIRCLIP	1		
29	55122-88L00	RING, GEAR CASE SEAL	1		
30	09202-06025	PIN (6X17)	1		
31	09202-06027	PIN (6X23)	1		

DF40AST E34

DF60A_E11_022

FIG.220D


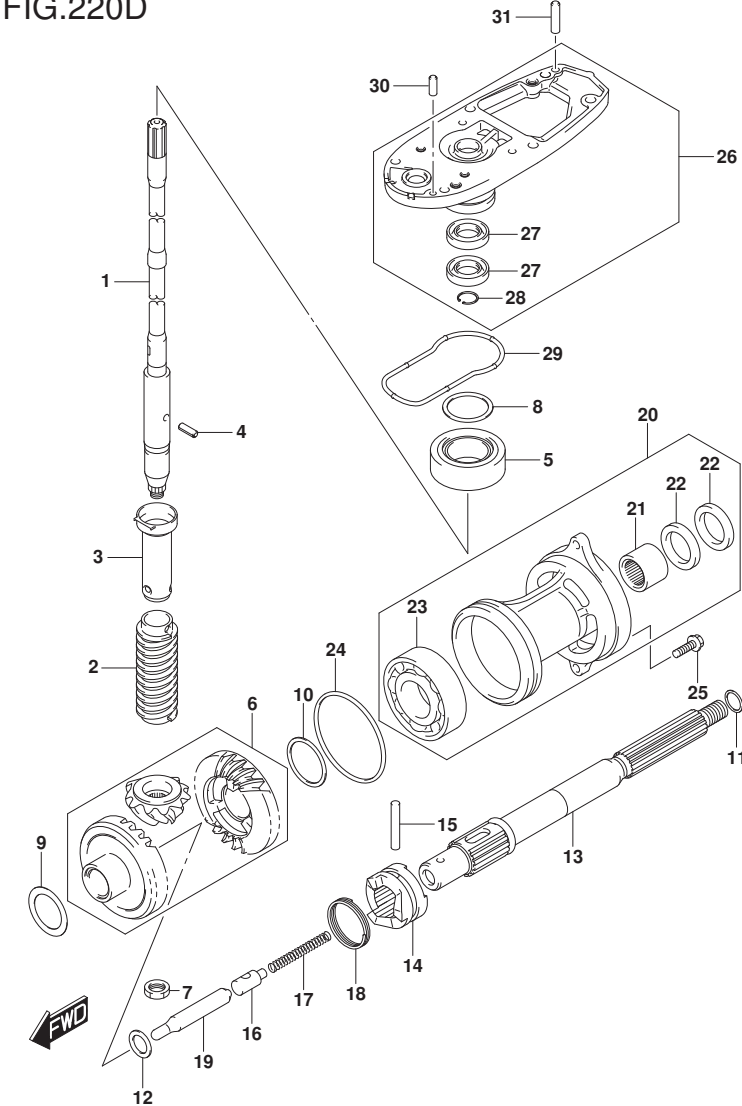


FIG.220D (1-F-14) TRANSMISSION ((DF60A,DF60AQH,DF60ATH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-88L12	SHAFT, DRIVE	1	W/TRANSOM(L)
1-2	57110-88L22	SHAFT, DRIVE	1	W/TRANSOM(X)
2	57133-88L01	COLLAR, DRIVE SHAFT	1	
3	57133-94400	HOUSING, DRIVE SHAFT SPRING	1	
4	09205-03019	PIN (3X10)	1	
5	09265-20015	BEARING (20X42X15)	1	
6	57300-88810	PINION & GEAR SET	1	
7	09140-12034	NUT	1	
8-1	09181-35101	SHIM (35X42X0.50)	AR	DRIVE SHAFT ADJUST
8-2	09181-33001	SHIM (33.5X41.8X0.55)	AR	DRIVE SHAFT ADJUST
8-3	09181-33002	SHIM (33.5X41.8X0.60)	AR	DRIVE SHAFT ADJUST
8-4	09181-33003	SHIM (33.5X41.8X0.65)	AR	DRIVE SHAFT ADJUST
8-5	09181-33004	SHIM (33.5X41.8X0.70)	AR	DRIVE SHAFT ADJUST
8-6	09181-33005	SHIM (33.5X41.8X0.75)	AR	DRIVE SHAFT ADJUST
8-7	09181-33006	SHIM (33.5X41.8X0.80)	AR	DRIVE SHAFT ADJUST
8-8	09181-33007	SHIM (33.5X41.8X0.85)	AR	DRIVE SHAFT ADJUST
8-9	09181-33008	SHIM (33.5X41.8X0.90)	AR	DRIVE SHAFT ADJUST
8-10	09181-33009	SHIM (33.5X41.8X0.95)	AR	DRIVE SHAFT ADJUST
8-11	09181-35110	SHIM (35X42X1)	AR	DRIVE SHAFT ADJUST
9-1	09181-30186	SHIM (30X42X0.5)	AR	FORWARD BACKUP
9-2	09181-30187	SHIM (30X42X0.6)	AR	FORWARD BACKUP
9-3	09181-30188	SHIM (30X42X0.7)	AR	FORWARD BACKUP
9-4	09181-30190	SHIM (30X42X0.8)	AR	FORWARD BACKUP
9-5	09181-30192	SHIM (30X42X0.9)	AR	FORWARD BACKUP
10-1	08221-35455	SHIM (35X45X0.5)	AR	REVERSE BACKUP
10-2	09181-35131	SHIM (35X46X0.6)	AR	REVERSE BACKUP
10-3	09181-35132	SHIM (35X46X0.7)	AR	REVERSE BACKUP
10-4	08221-35456	SHIM (35X45X0.8)	AR	REVERSE BACKUP
10-5	09181-35136	SHIM (35X46X0.9)	AR	REVERSE BACKUP
10-6	08211-35451	SHIM (35X45X1.0)	AR	REVERSE BACKUP
11-1	09160-22018	WASHER (22.5X28X1.8)	1	PROP SHAFT THRUST
11-2	09160-22019	WASHER (22.5X28X1.9)	1	PROP SHAFT THRUST
11-3	09160-22020	WASHER (22.5X28X2.0)	1	PROP SHAFT THRUST
11-4	09160-22021	WASHER (22.5X28X2.1)	1	PROP SHAFT THRUST
11-5	09160-22022	WASHER (22.5X28X2.2)	1	PROP SHAFT THRUST
11-6	09160-22023	WASHER (22.5X28X2.3)	1	PROP SHAFT THRUST

FIG.220D

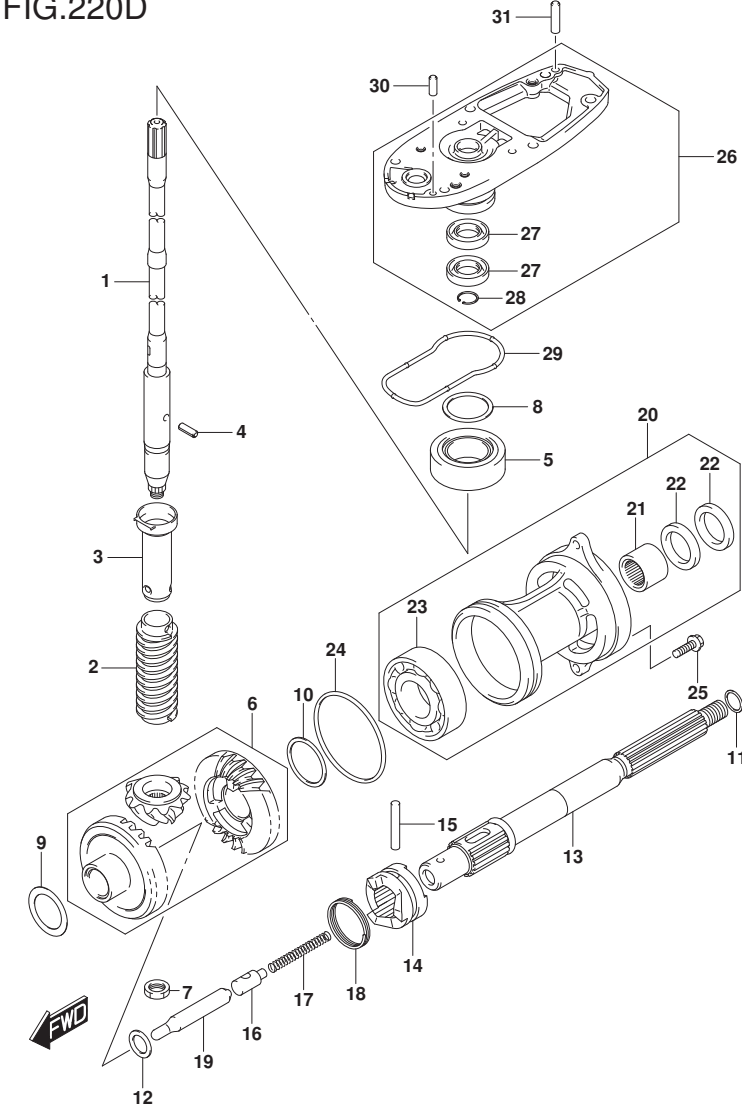

DF60A_E11_022_220D
TRANSMISSION

FIG.220D (1-F-15) TRANSMISSION ((DF60A,DF60AQH,DF60ATH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
12	08211-20263	WASHER (20X26X2.0)	1	
13	57610-94403	SHAFT, PROPELLER	1	
14	57621-87J03	SHIFTER, CLUTCH DOG	1	
15	09202-05022	PIN (5.5X38.5)	1	
16	57634-88L00	PIN, PUSH	1	
17	09440-08043	SPRING	1	
18	09440-40002	SPRING	1	
19	57631-95303	ROD, PUSH	1	
20-1	56120-94321-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	020
20-2	56120-94321-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	020
20-3	56120-94321-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	021,022
20-4	56120-94321-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	021,022
21	09263-22020	.BEARING (22.2X28.5X19)	1	
22	09289-22007	.OIL SEAL (22X35X5)	2	
23	09262-35070	.BEARING (35X62X14)	1	
24	09280-75001	O RING (D:3.3,ID:75)	1	
25	09116-08122	BOLT (8X30)	2	
26-1	56130-87J12-YAY	HOUSING, DRIVE SFT BRG (BLACK)	1	020
26-2	56130-87J12-Y5S	HOUSING, DRIVE SFT BRG (WHITE)	1	020
26-3	56130-87J12-QTN	HOUSING, DRIVE SFT BRG (WHITE)	1	021,022
26-4	56130-87J12-YAY	HOUSING, DRIVE SFT BRG (BLACK)	1	021,022
27	09282-17005	.OIL SEAL (17X32X6)	2	
28	08331-41329	.CIRCLIP	1	
29	55122-88L00	RING, GEAR CASE SEAL	1	
30	09202-06025	PIN (6X17)	1	
31	09202-06027	PIN (6X23)	1	

DF60A E40
DF60AQH E40
DF60ATH E40

FIG.220E

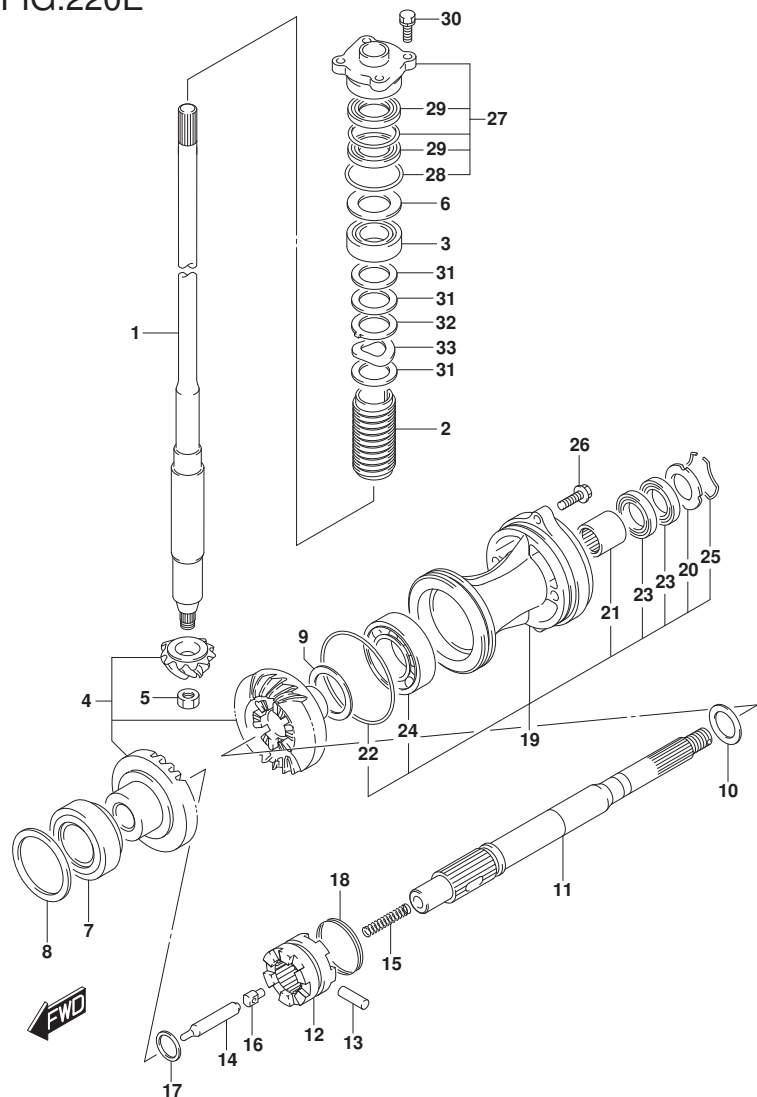


FIG.220E (1-G-2) TRANSMISSION (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-88L30	SHAFT, DRIVE	1	W/TRANSOM(L)
1-2	57110-88L40	SHAFT, DRIVE	1	W/TRANSOM(X)
2	57133-90J02	COLLAR, DRIVE SHAFT	1	
3	09265-25046	BEARING (25X52X19.25)	1	
4	57300-99824	PINION & GEAR SET	1	
5	09140-14024	NUT	1	
6-1	09181-40186	SHIM (41X52X0.5)	1	
6-2	09181-41002	SHIM (41X52X0.55)	1	
6-3	09181-41003	SHIM (41X52X0.60)	1	
6-4	09181-41004	SHIM (41X52X0.65)	1	
6-5	09181-41005	SHIM (41X52X0.70)	1	
6-6	09181-41006	SHIM (41X52X0.75)	1	
6-7	09181-40190	SHIM (40X52X0.8)	1	
6-8	09181-41008	SHIM (41X52X0.85)	1	
6-9	09181-41009	SHIM (41X52X0.90)	1	
6-10	09181-41010	SHIM (41X52X0.95)	1	
6-11	09181-40195	SHIM (41X52X1.00)	1	
6-12	09181-41012	SHIM (41X52X1.05)	1	
6-13	09181-41013	SHIM (41X52X1.10)	1	
6-14	09181-41014	SHIM (41X52X1.15)	1	
7	09265-50003	BEARING (50X85X26)	1	PART OF GEAR CASE
8-1	09181-50020	SHIM (50X65X0.45)	1	FORWARD GEAR
8-2	09181-50021	SHIM (50X65X0.5)	1	FORWARD GEAR
8-3	09181-50022	SHIM (50X65X0.55)	1	FORWARD GEAR
8-4	09181-50023	SHIM (50X65X0.6)	1	FORWARD GEAR
8-5	09181-50024	SHIM (50X65X0.65)	1	FORWARD GEAR
8-6	09181-50025	SHIM (50X65X0.7)	1	FORWARD GEAR
8-7	09181-50026	SHIM (50X65X0.75)	1	FORWARD GEAR
8-8	09181-50027	SHIM (50X65X0.8)	1	FORWARD GEAR
8-9	09181-50028	SHIM (50X65X0.85)	1	FORWARD GEAR
8-10	09181-50029	SHIM (50X65X0.9)	1	FORWARD GEAR

NOTE : (DF50AVTH,DF60AVT):E01,DF60AVT:E11

Exploded view diagram of a front wheel hub assembly. The diagram shows the following components and their assembly sequence:

- Hub Assembly (Top):** Includes the hub (1), hub nut (2), hub washer (3), hub seal (4), hub cap (5), hub nut (6), hub washer (7), hub seal (8), hub cap (9), hub nut (10), hub washer (11), hub seal (12), hub cap (13), hub nut (14), hub washer (15), hub seal (16), hub cap (17), hub nut (18), hub washer (19), hub seal (20), hub cap (21), hub nut (22), hub washer (23), hub seal (24), hub cap (25), hub nut (26), hub washer (27), hub seal (28), hub cap (29), hub nut (30).
- Hub Assembly (Bottom):** Includes the hub (1), hub nut (2), hub washer (3), hub seal (4), hub cap (5), hub nut (6), hub washer (7), hub seal (8), hub cap (9), hub nut (10), hub washer (11), hub seal (12), hub cap (13), hub nut (14), hub washer (15), hub seal (16), hub cap (17), hub nut (18), hub washer (19), hub seal (20), hub cap (21), hub nut (22), hub washer (23), hub seal (24), hub cap (25), hub nut (26), hub washer (27), hub seal (28), hub cap (29), hub nut (30).

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9-1	09181-45003	SHIM (45X56X1.0)	1	REVERSE GEAR
9-2	09181-45004	SHIM (45X56X1.1)	1	REVERSE GEAR
9-3	09181-45005	SHIM (45X56X1.2)	1	REVERSE GEAR
9-4	09181-45006	SHIM (45X56X1.3)	1	REVERSE GEAR
9-5	09181-45007	SHIM (45X56X1.4)	1	REVERSE GEAR
9-6	09181-45008	SHIM (45X56X1.5)	1	REVERSE GEAR
9-7	09181-45009	SHIM (45X56X1.6)	1	REVERSE GEAR
10-1	09181-28015	SHIM (28X33.5X0.90)	1	PROP SHAFT REVERSE THRUST
10-2	09181-28016	SHIM (28X33.5X1.00)	1	PROP SHAFT REVERSE THRUST
10-3	09181-28017	SHIM (28X33.5X1.20)	1	PROP SHAFT REVERSE THRUST
10-4	09181-28018	SHIM (28X33.5X1.30)	1	PROP SHAFT REVERSE THRUST
10-5	09181-28019	SHIM (28X33.5X1.40)	1	PROP SHAFT REVERSE THRUST
10-6	09181-28020	SHIM (28X33.5X1.60)	1	PROP SHAFT REVERSE THRUST
11	57610-88L10	SHAFT, PROPELLER	1	
12	57621-88L00	SHIFTER, CLUTCH DOG	1	
13	09202-07002	PIN (7X48)	1	
14	57631-99E01	ROD, PUSH	1	
15	09440-11020	SPRING (L:67)	1	
16	09209-12007	PIN (ID:7)	1	
17	09181-25030	SHIM (25X32X3)	1	
18	09440-49004	SPRING	1	
19	56120-90J02-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
20	56123-90J00	.WASHER, OIL SEAL PROTECTOR	1	
21	09263-28047	.BEARING (28X37X30)	1	
22	09280-97001	.O RING (D:3.5,ID:95)	1	
23	09282-28002	.OIL SEAL (28X50X6)	2	
24	08113-62090	.BEARING (45X85X19)	1	
25	09387-52001	.RING SET	1	
26	09116-08122	BOLT (8X30)	2	
27	56130-87E00	HOUSING, DRIVE SHAFT OIL SEAL	1	
28	09280-46004	.O RING (D:3.5,ID:45.7)	1	

DF60A_E11_022

FIG.220E

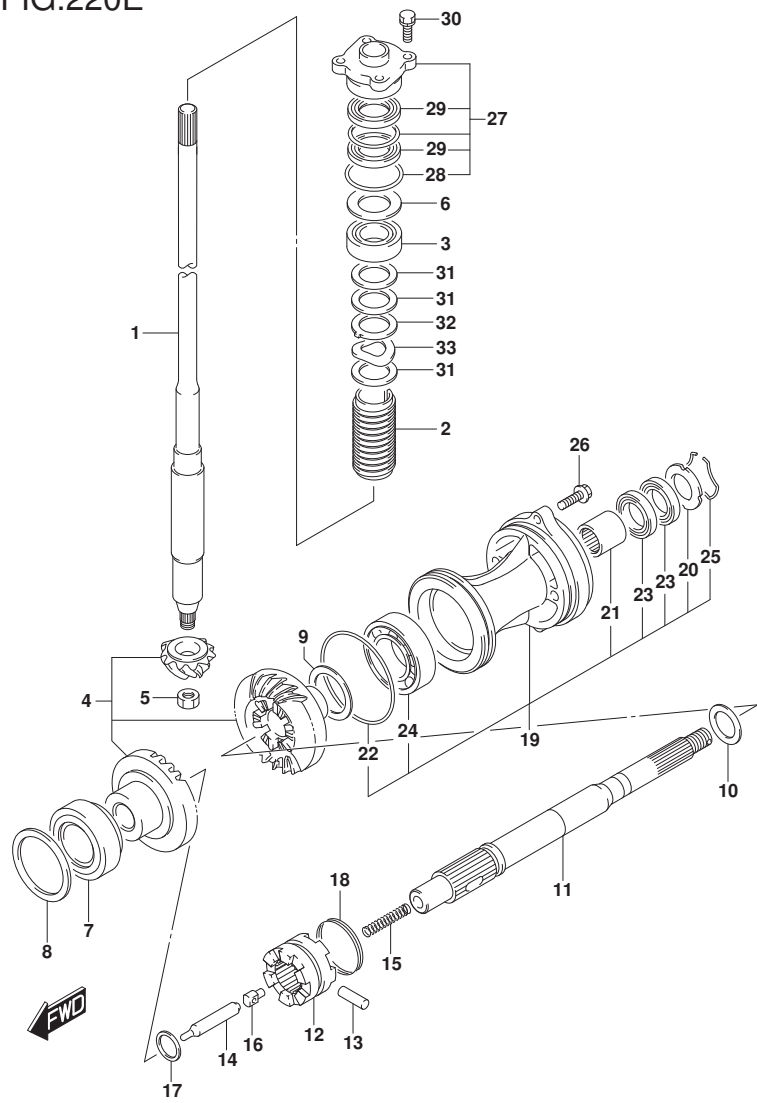


FIG.220E (1-G-4) TRANSMISSION (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	09282-22007	.OIL SEAL (22X36X6)	2	
30	09117-08110	BOLT (8X25)	4	
31	09181-31001	SHIM (31X46X2)	3	
32	09169-31001	WASHER (33X40X2.0)	1	
33	09164-31001	WASHER	1	

NOTE : (DF50AVTH,DF60AVT):E01,DF60AVT:E11

DF50AVTH E01
DF60AVT E01
DF60AVT E11

FIG.220F


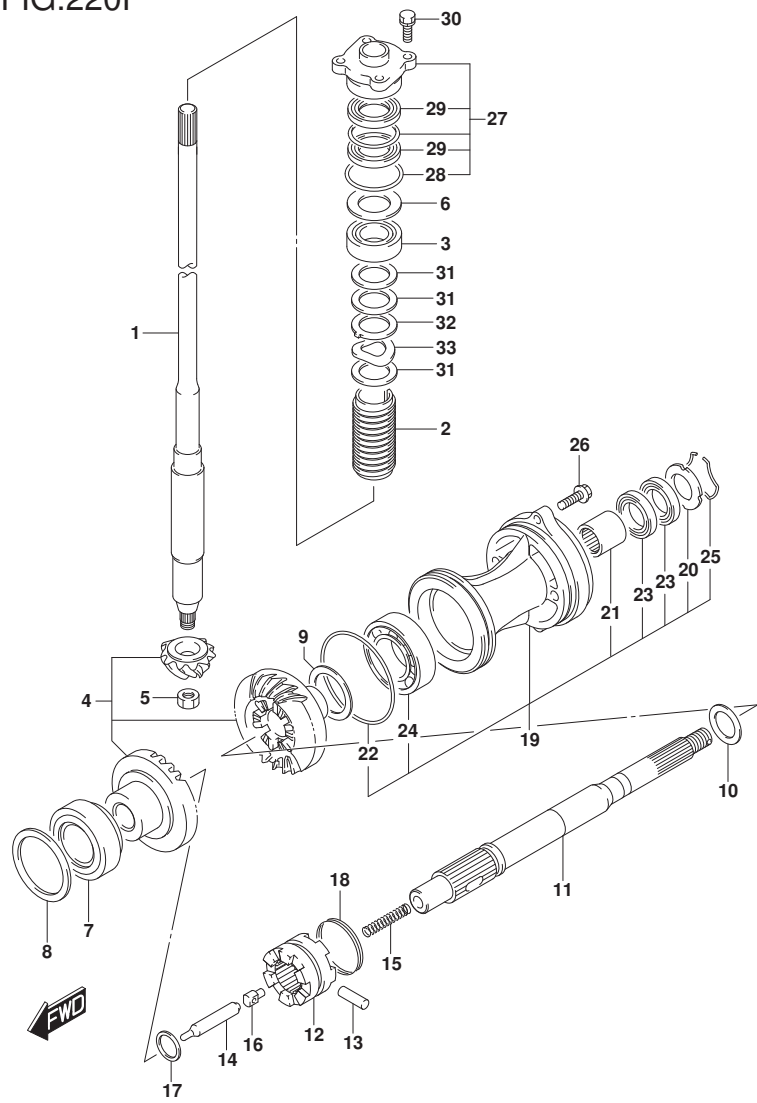


FIG.220F (1-G-5) TRANSMISSION ((DF50AVT,DF60AVT):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	57110-88L30	SHAFT, DRIVE	1	
2	57133-90J02	COLLAR, DRIVE SHAFT	1	
3	09265-25046	BEARING (25X52X19.25)	1	
4	57300-99824	PINION & GEAR SET	1	
5	09140-14024	NUT	1	
6-1	09181-40186	SHIM (41X52X0.5)	1	
6-2	09181-41002	SHIM (40X52X0.8)	1	
6-3	09181-41003	SHIM (40X52X1)	1	
6-4	09181-41004	SHIM (41X52X0.55)	1	
6-5	09181-41005	SHIM (41X52X0.6)	1	
6-6	09181-41006	SHIM (41X52X0.65)	1	
6-7	09181-40190	SHIM (41X52X0.7)	1	
6-8	09181-41008	SHIM (41X52X0.75)	1	
6-9	09181-41009	SHIM (41X52X0.85)	1	
6-10	09181-41010	SHIM (41X52X0.9)	1	
6-11	09181-40195	SHIM (41X52X0.95)	1	
6-12	09181-41012	SHIM (41X52X1.05)	1	
6-13	09181-41013	SHIM (41X52X1.1)	1	
6-14	09181-41014	SHIM (41X52X1.15)	1	
7	09265-50003	BEARING (50X85X26)	1	PART OF GEAR CASE
8-1	09181-50020	SHIM (50X65X0.45)	1	FORWARD GEAR
8-2	09181-50021	SHIM (50X65X0.5)	1	FORWARD GEAR
8-3	09181-50022	SHIM (50X65X0.55)	1	FORWARD GEAR
8-4	09181-50023	SHIM (50X65X0.6)	1	FORWARD GEAR
8-5	09181-50024	SHIM (50X65X0.65)	1	FORWARD GEAR
8-6	09181-50025	SHIM (50X65X0.7)	1	FORWARD GEAR
8-7	09181-50026	SHIM (50X65X0.75)	1	FORWARD GEAR
8-8	09181-50027	SHIM (50X65X0.8)	1	FORWARD GEAR
8-9	09181-50028	SHIM (50X65X0.85)	1	FORWARD GEAR
8-10	09181-50029	SHIM (50X65X0.9)	1	FORWARD GEAR

FIG.220F

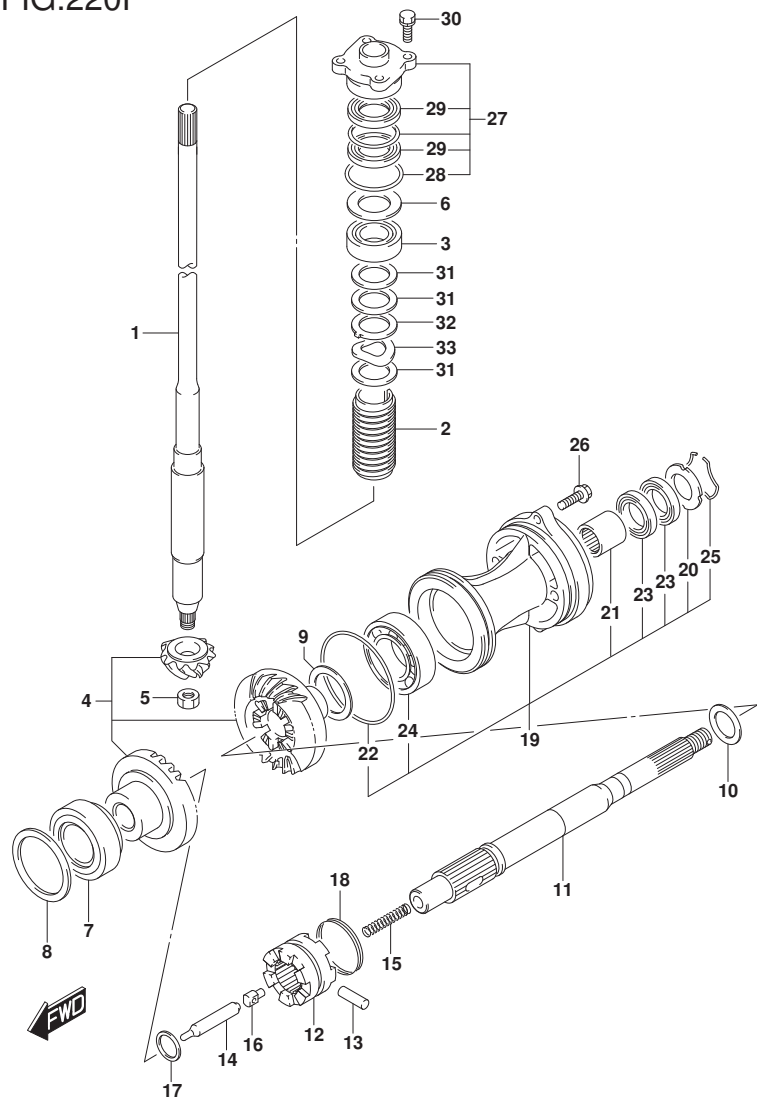

DF60A_E11_022_220F
TRANSMISSION

FIG.220F (1-G-6) TRANSMISSION ((DF50AVT,DF60AVT):E03)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
9-1	09181-45003	SHIM (45X56X1.0)	1	REVERSE GEAR
9-2	09181-45004	SHIM (45X56X1.1)	1	REVERSE GEAR
9-3	09181-45005	SHIM (45X56X1.2)	1	REVERSE GEAR
9-4	09181-45006	SHIM (45X56X1.3)	1	REVERSE GEAR
9-5	09181-45007	SHIM (45X56X1.4)	1	REVERSE GEAR
9-6	09181-45008	SHIM (45X56X1.5)	1	REVERSE GEAR
9-7	09181-45009	SHIM (45X56X1.6)	1	REVERSE GEAR
10-1	09181-28015	SHIM (28X33.5X0.90)	1	PROP SHAFT REVERSE THRUST
10-2	09181-28016	SHIM (28X33.5X1.00)	1	PROP SHAFT REVERSE THRUST
10-3	09181-28017	SHIM (28X33.5X1.20)	1	PROP SHAFT REVERSE THRUST
10-4	09181-28018	SHIM (28X33.5X1.30)	1	PROP SHAFT REVERSE THRUST
10-5	09181-28019	SHIM (28X33.5X1.40)	1	PROP SHAFT REVERSE THRUST
10-6	09181-28020	SHIM (28X33.5X1.60)	1	PROP SHAFT REVERSE THRUST
11	57610-88L10	SHAFT, PROPELLER	1	
12	57621-88L00	SHIFTER, CLUTCH DOG	1	
13	09202-07002	PIN (7X48)	1	
14	57631-99E01	ROD, PUSH	1	
15	09440-11020	SPRING (L:67)	1	
16	09209-12007	PIN (ID:7)	1	
17	09181-25030	SHIM (25X32X3)	1	
18	09440-49004	SPRING	1	
19	56120-90J02-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
20	56123-90J00	.WASHER, OIL SEAL PROTECTOR	1	
21	09263-28047	.BEARING (28X37X30)	1	
22	09280-97001	.O RING (D:3.5,ID:95)	1	
23	09282-28002	.OIL SEAL (28X50X6)	2	
24	08113-62090	.BEARING (45X85X19)	1	
25	09387-52001	.RING SET	1	
26	09116-08122	BOLT (8X30)	2	
27	56130-87E00	HOUSING, DRIVE SHAFT OIL SEAL	1	
28	09280-46004	.O RING (D:3.5,ID:45.7)	1	
29	09282-22007	.OIL SEAL (22X36X6)	2	
30	09117-08110	BOLT (8X25)	4	
31	09181-31001	SHIM (31X46X2)	3	
32	09169-31001	WASHER (33X40X2.0)	1	

DF60A_E11_022

FIG.220F


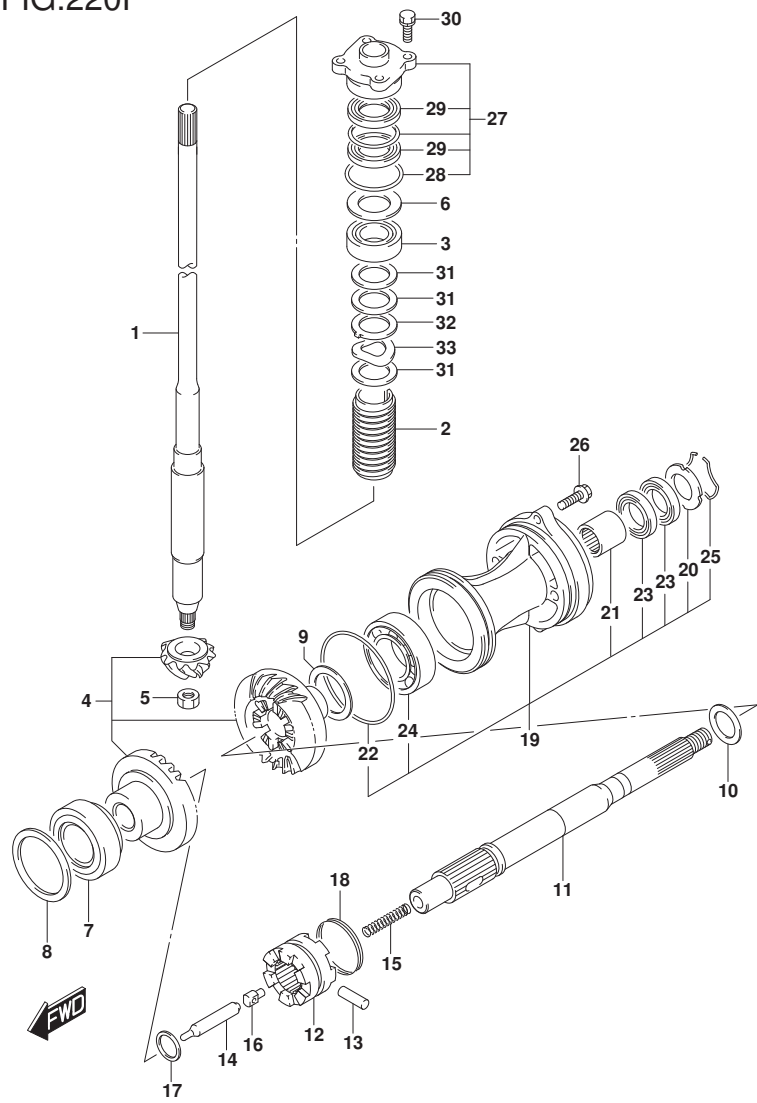


FIG.220F (1-G-7) TRANSMISSION ((DF50AVT,DF60AVT):E03)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	09164-31001	WASHER	1	

DF50AVT E03
DF60AVT E03

FIG.220G

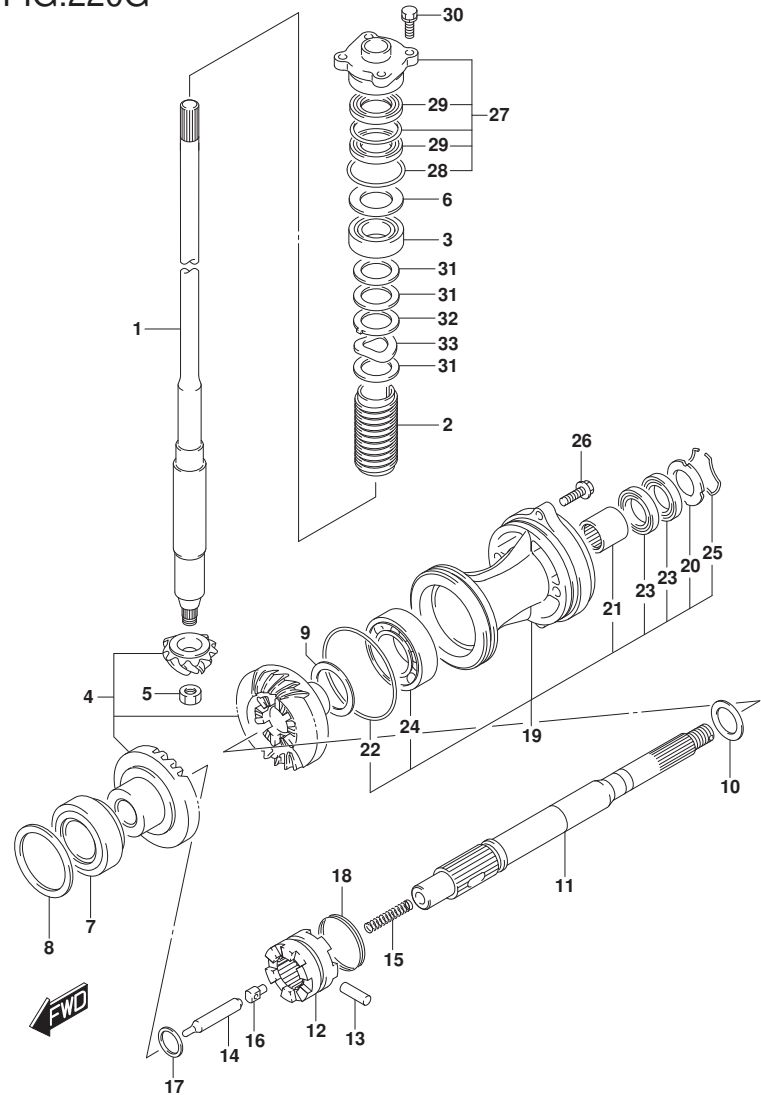


DF60A_E11_022_220G
TRANSMISSION

FIG.220G (1-G-8) TRANSMISSION ((DF60AVT,DF60AVTH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-88L30	SHAFT, DRIVE	1	W/TRANSOM(L)
1-2	57110-88L40	SHAFT, DRIVE	1	W/TRANSOM(X)
2	57133-90J02	COLLAR, DRIVE SHAFT	1	
3	09265-25046	BEARING (25X52X19.25)	1	
4	57300-99824	PINION & GEAR SET	1	
5	09140-14024	NUT	1	
6-1	09181-40186	SHIM (41X52X0.5)	1	
6-2	09181-41002	SHIM (40X52X0.8)	1	
6-3	09181-41003	SHIM (40X52X1)	1	
6-4	09181-41004	SHIM (41X52X0.55)	1	
6-5	09181-41005	SHIM (41X52X0.6)	1	
6-6	09181-41006	SHIM (41X52X0.65)	1	
6-7	09181-40190	SHIM (41X52X0.7)	1	
6-8	09181-41008	SHIM (41X52X0.75)	1	
6-9	09181-41009	SHIM (41X52X0.85)	1	
6-10	09181-41010	SHIM (41X52X0.9)	1	
6-11	09181-40195	SHIM (41X52X0.95)	1	
6-12	09181-41012	SHIM (41X52X1.05)	1	
6-13	09181-41013	SHIM (41X52X1.1)	1	
6-14	09181-41014	SHIM (41X52X1.15)	1	
7	09265-50003	BEARING (50X85X26)	1	PART OF GEAR CASE
8-1	09181-50020	SHIM (50X65X0.45)	1	FORWARD GEAR
8-2	09181-50021	SHIM (50X65X0.5)	1	FORWARD GEAR
8-3	09181-50022	SHIM (50X65X0.55)	1	FORWARD GEAR
8-4	09181-50023	SHIM (50X65X0.6)	1	FORWARD GEAR
8-5	09181-50024	SHIM (50X65X0.65)	1	FORWARD GEAR
8-6	09181-50025	SHIM (50X65X0.7)	1	FORWARD GEAR
8-7	09181-50026	SHIM (50X65X0.75)	1	FORWARD GEAR
8-8	09181-50027	SHIM (50X65X0.8)	1	FORWARD GEAR
8-9	09181-50028	SHIM (50X65X0.85)	1	FORWARD GEAR
8-10	09181-50029	SHIM (50X65X0.9)	1	FORWARD GEAR

DF60A_E11_022

FIG.220G

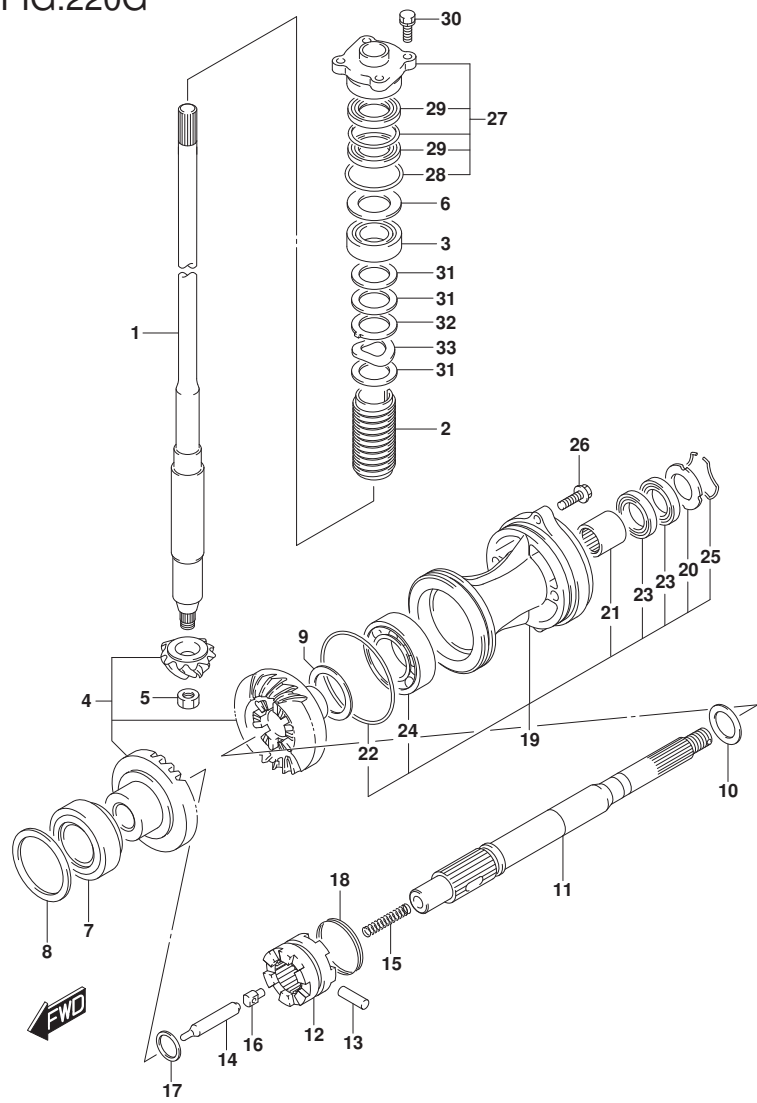

DF60A_E11_022_220G
TRANSMISSION

FIG.220G (1-G-9) TRANSMISSION ((DF60AVT,DF60AVTH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9-1	09181-45003	SHIM (45X56X1.0)	1	REVERSE GEAR
9-2	09181-45004	SHIM (45X56X1.1)	1	REVERSE GEAR
9-3	09181-45005	SHIM (45X56X1.2)	1	REVERSE GEAR
9-4	09181-45006	SHIM (45X56X1.3)	1	REVERSE GEAR
9-5	09181-45007	SHIM (45X56X1.4)	1	REVERSE GEAR
9-6	09181-45008	SHIM (45X56X1.5)	1	REVERSE GEAR
9-7	09181-45009	SHIM (45X56X1.6)	1	REVERSE GEAR
10-1	09181-28015	SHIM (28X33.5X0.90)	1	PROP SHAFT REVERSE THRUST
10-2	09181-28016	SHIM (28X33.5X1.00)	1	PROP SHAFT REVERSE THRUST
10-3	09181-28017	SHIM (28X33.5X1.20)	1	PROP SHAFT REVERSE THRUST
10-4	09181-28018	SHIM (28X33.5X1.30)	1	PROP SHAFT REVERSE THRUST
10-5	09181-28019	SHIM (28X33.5X1.40)	1	PROP SHAFT REVERSE THRUST
10-6	09181-28020	SHIM (28X33.5X1.60)	1	PROP SHAFT REVERSE THRUST
11	57610-88L10	SHAFT, PROPELLER	1	
12	57621-88L00	SHIFTER, CLUTCH DOG	1	
13	09202-07002	PIN (7X48)	1	
14	57631-99E01	ROD, PUSH	1	
15	09440-11020	SPRING (L:67)	1	
16	09209-12007	PIN (ID:7)	1	
17	09181-25030	SHIM (25X32X3)	1	
18	09440-49004	SPRING	1	
19	56120-90J02-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
20	56123-90J00	.WASHER, OIL SEAL PROTECTOR	1	
21	09263-28047	.BEARING (28X37X30)	1	
22	09280-97001	.O RING (D:3.5,ID:95)	1	
23	09282-28002	.OIL SEAL (28X50X6)	2	
24	08113-62090	.BEARING (45X85X19)	1	
25	09387-52001	.RING SET	1	
26	09116-08122	BOLT (8X30)	2	
27	56130-87E00	HOUSING, DRIVE SHAFT OIL SEAL	1	
28	09280-46004	.O RING (D:3.5,ID:45.7)	1	
29	09282-22007	.OIL SEAL (22X36X6)	2	
30	09117-08110	BOLT (8X25)	4	
31	09181-31001	SHIM (31X46X2)	3	
32	09169-31001	WASHER (33X40X2.0)	1	

DF60A_E11_022

FIG.220G


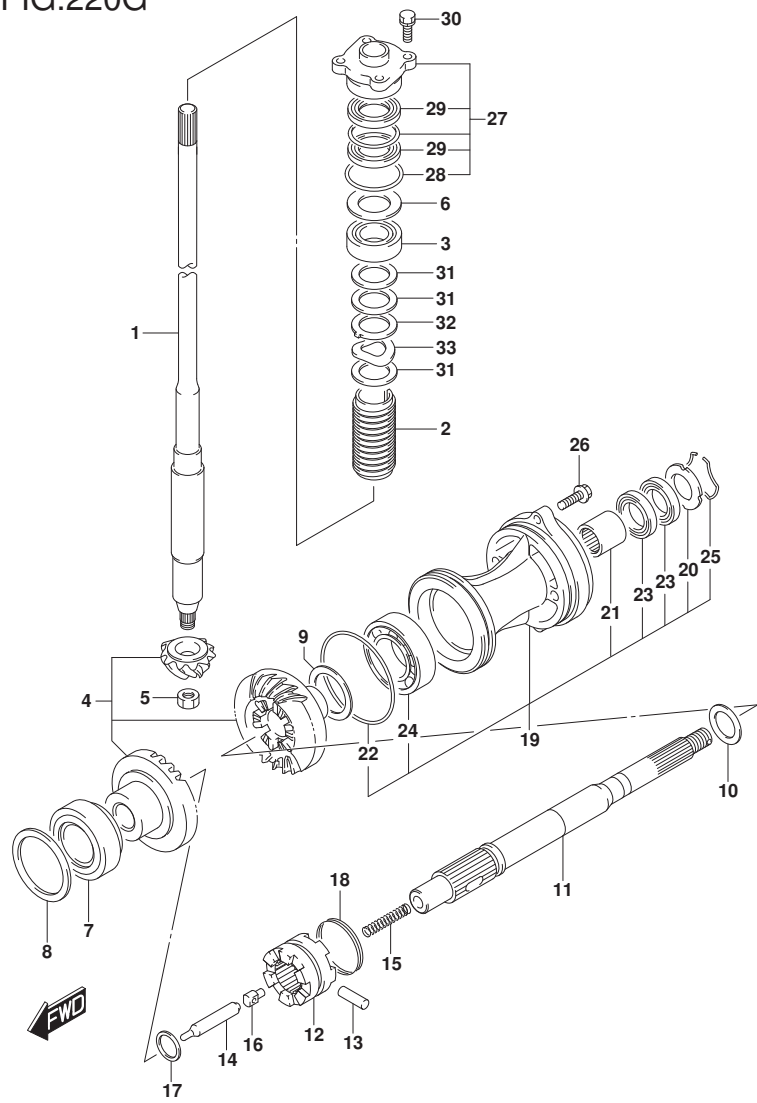


FIG.220G (1-G-10) TRANSMISSION ((DF60AVT,DF60AVTH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	09164-31001	WASHER	1	

DF60AVT E40
DF60AVTH E40

FIG.220H

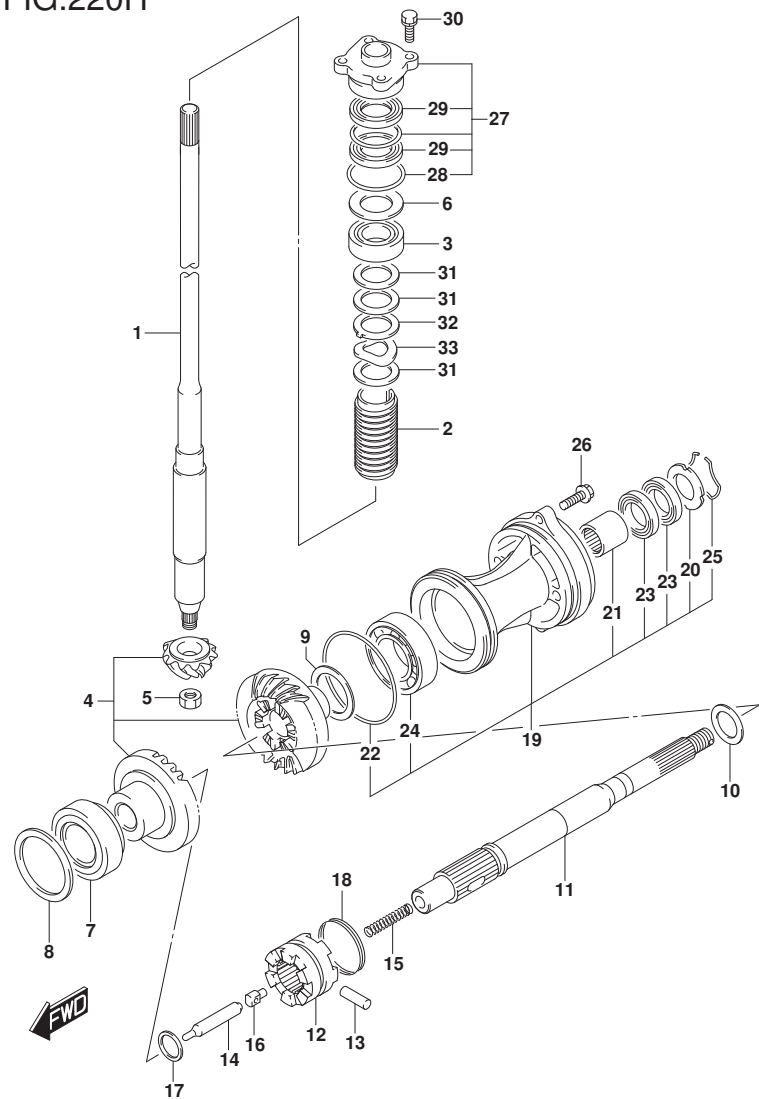


DF60A_E11_022_220H
TRANSMISSION

FIG.220H (1-G-11) TRANSMISSION (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	57110-88L30	SHAFT, DRIVE	1	
2	57133-90J02	COLLAR, DRIVE SHAFT	1	
3	09265-25046	BEARING (25X52X19.25)	1	
4	57300-99824	PINION & GEAR SET	1	
5	09140-14024	NUT	1	
6-1	09181-40186	SHIM (41X52X0.5)	1	
6-2	09181-41002	SHIM (40X52X0.8)	1	
6-3	09181-41003	SHIM (40X52X1)	1	
6-4	09181-41004	SHIM (41X52X0.55)	1	
6-5	09181-41005	SHIM (41X52X0.6)	1	
6-6	09181-41006	SHIM (41X52X0.65)	1	
6-7	09181-40190	SHIM (41X52X0.7)	1	
6-8	09181-41008	SHIM (41X52X0.75)	1	
6-9	09181-41009	SHIM (41X52X0.85)	1	
6-10	09181-41010	SHIM (41X52X0.9)	1	
6-11	09181-40195	SHIM (41X52X0.95)	1	
6-12	09181-41012	SHIM (41X52X1.05)	1	
6-13	09181-41013	SHIM (41X52X1.1)	1	
6-14	09181-41014	SHIM (41X52X1.15)	1	
7	09265-50003	BEARING (50X85X26)	1	PART OF GEAR CASE
8-1	09181-50020	SHIM (50X65X0.45)	1	FORWARD GEAR
8-2	09181-50021	SHIM (50X65X0.5)	1	FORWARD GEAR
8-3	09181-50022	SHIM (50X65X0.55)	1	FORWARD GEAR
8-4	09181-50023	SHIM (50X65X0.6)	1	FORWARD GEAR
8-5	09181-50024	SHIM (50X65X0.65)	1	FORWARD GEAR
8-6	09181-50025	SHIM (50X65X0.7)	1	FORWARD GEAR
8-7	09181-50026	SHIM (50X65X0.75)	1	FORWARD GEAR
8-8	09181-50027	SHIM (50X65X0.8)	1	FORWARD GEAR
8-9	09181-50028	SHIM (50X65X0.85)	1	FORWARD GEAR
8-10	09181-50029	SHIM (50X65X0.9)	1	FORWARD GEAR

FIG.220H

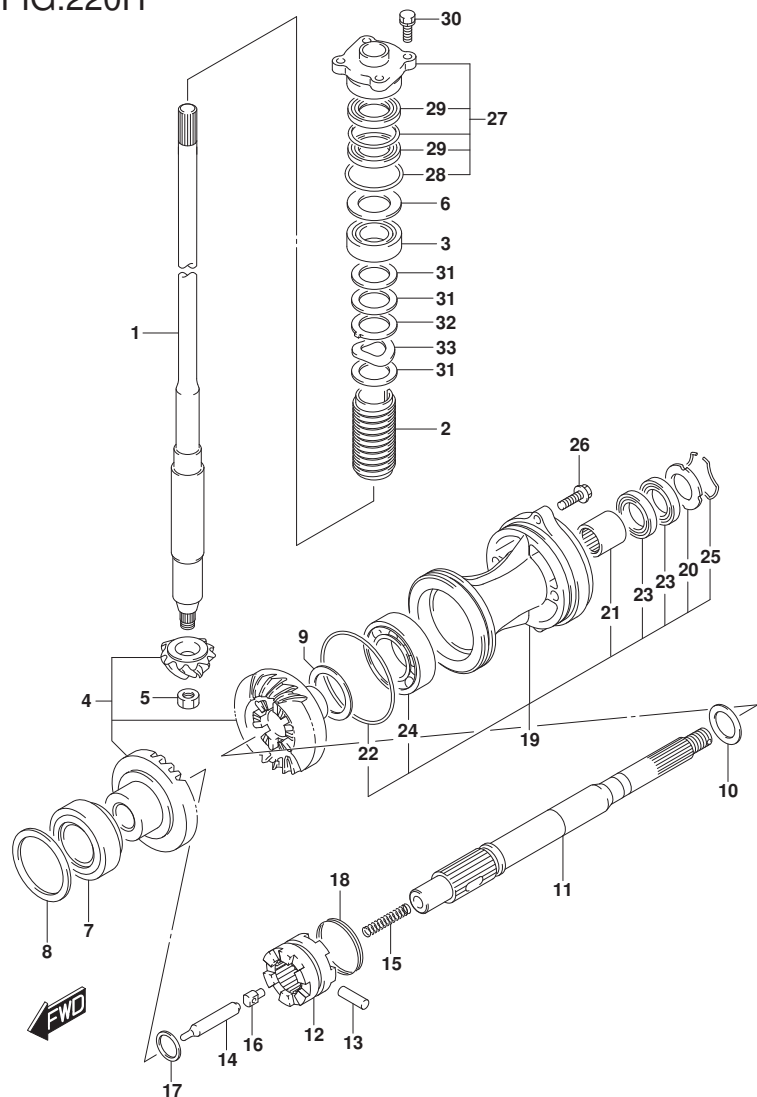

DF60A_E11_022_220H
TRANSMISSION

FIG.220H (1-G-12) TRANSMISSION (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9-1	09181-45003	SHIM (45X56X1.0)	1	REVERSE GEAR
9-2	09181-45004	SHIM (45X56X1.1)	1	REVERSE GEAR
9-3	09181-45005	SHIM (45X56X1.2)	1	REVERSE GEAR
9-4	09181-45006	SHIM (45X56X1.3)	1	REVERSE GEAR
9-5	09181-45007	SHIM (45X56X1.4)	1	REVERSE GEAR
9-6	09181-45008	SHIM (45X56X1.5)	1	REVERSE GEAR
9-7	09181-45009	SHIM (45X56X1.6)	1	REVERSE GEAR
10-1	09181-28015	SHIM (28X33.5X0.90)	1	PROP SHAFT REVERSE THRUST
10-2	09181-28016	SHIM (28X33.5X1.00)	1	PROP SHAFT REVERSE THRUST
10-3	09181-28017	SHIM (28X33.5X1.20)	1	PROP SHAFT REVERSE THRUST
10-4	09181-28018	SHIM (28X33.5X1.30)	1	PROP SHAFT REVERSE THRUST
10-5	09181-28019	SHIM (28X33.5X1.40)	1	PROP SHAFT REVERSE THRUST
10-6	09181-28020	SHIM (28X33.5X1.60)	1	PROP SHAFT REVERSE THRUST
11	57610-88L10	SHAFT, PROPELLER	1	
12	57621-88L00	SHIFTER, CLUTCH DOG	1	
13	09202-07002	PIN (7X48)	1	
14	57631-99E01	ROD, PUSH	1	
15	09440-11020	SPRING (L:67)	1	
16	09209-12007	PIN (ID:7)	1	
17	09181-25030	SHIM (25X32X3)	1	
18	09440-49004	SPRING	1	
19-1	56120-90J02-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	020
19-2	56120-90J02-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	020
19-3	56120-90J02-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	021,022
19-4	56120-90J02-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	021,022
20	56123-90J00	.WASHER, OIL SEAL PROTECTOR	1	
21	09263-28047	.BEARING (28X37X30)	1	
22	09280-97001	.O RING (D:3.5,ID:95)	1	
23	09282-28002	.OIL SEAL (28X50X6)	2	
24	08113-62090	.BEARING (45X85X19)	1	
25	09387-52001	.RING SET	1	
26	09116-08122	BOLT (8X30)	2	

DF60A_E11_022

FIG.220H

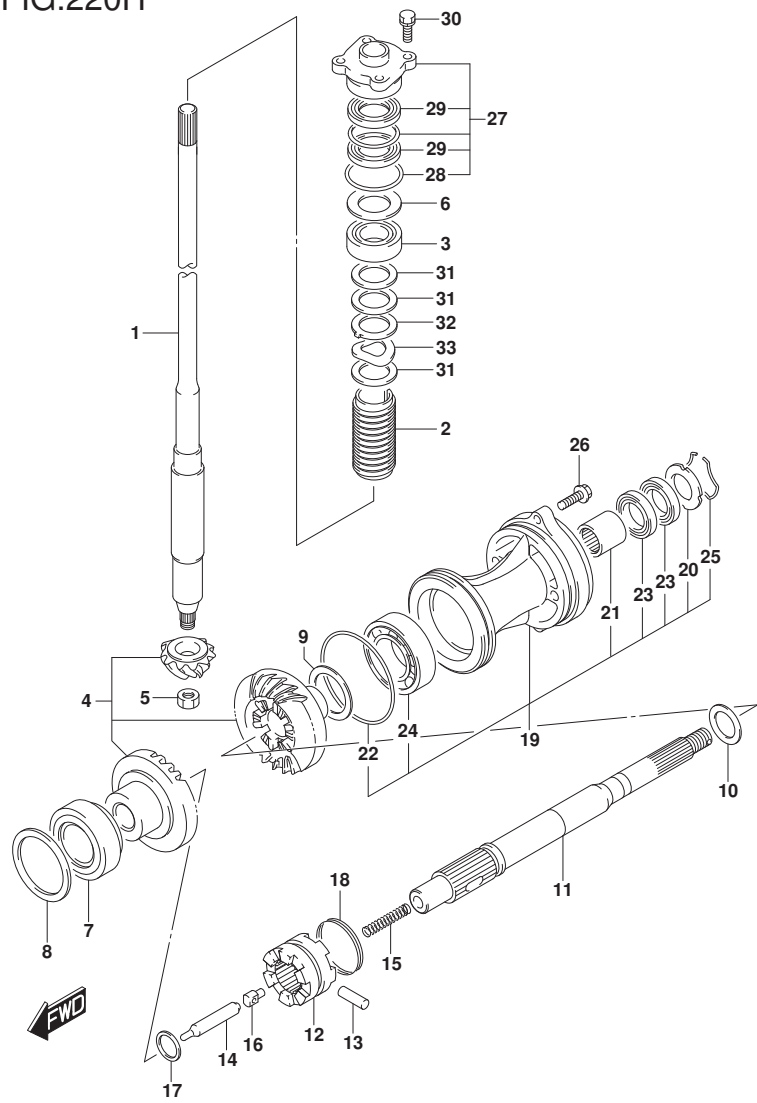


FIG.220H (1-G-13) TRANSMISSION (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	56130-87E00	HOUSING, DRIVE SHAFT OIL SEAL	1	
28	09280-46004	.O RING (D:3.5,ID:45.7)	1	
29	09282-22007	.OIL SEAL (22X36X6)	2	
30	09117-08110	BOLT (8X25)	4	
31	09181-31001	SHIM (31X46X2)	3	
32	09169-31001	WASHER (33X40X2.0)	1	
33	09164-31001	WASHER	1	

DF40ASVT E34

FIG.301A

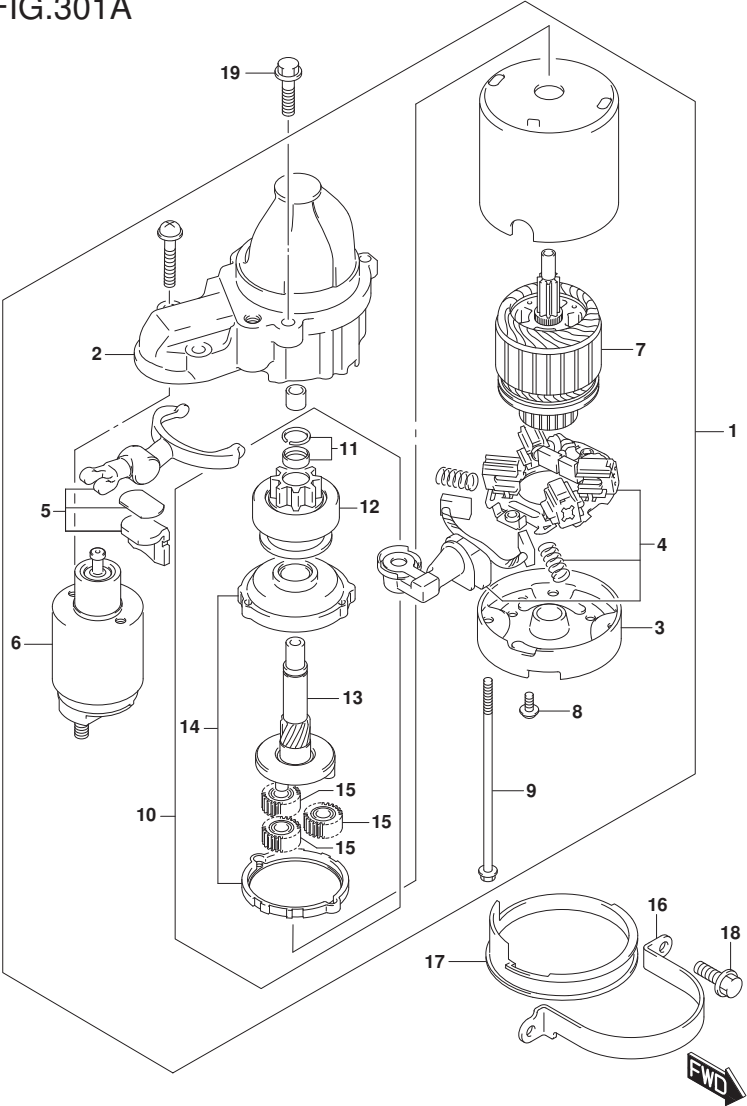


FIG.301A (1-G-14) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-89L00	MOTOR ASSY, STARTING	1	
2	31150-98L00	.CASE, GEAR	1	
3	31170-89L00	.HOUSING, REAR	1	
4	31173-98L00	.HOLDER ASSY, BRUSH	1	
5	31191-63J00	.LEVER SET	1	
6	31220-89L00	.SWITCH ASSY	1	
7	31311-63J00	ARMATURE	1	
8	31192-92J00	.SCREW SET	1	
9	31261-75F10	.BOLT	2	
10	31340-89L00	.CLUTCH SET, STARTING MOTOR	1	
11	31313-86030	..STOPPER SET	1	
12	31320-89L00	..PINION	1	
13	31341-89L00	..SHAFT, PINION	1	
14	31343-63J00	..INTERNAL GEAR ASSY	1	
15	31344-63J00	..GEAR ASSY	3	
16	31912-88L00	BAND, STARTER MOTOR	1	
17	31918-92J01	DAMPER, LOWER	1	LOWER
18	01550-06167	BOLT (6X16)	2	
19	01550-0830C	BOLT	2	

FIG.303A

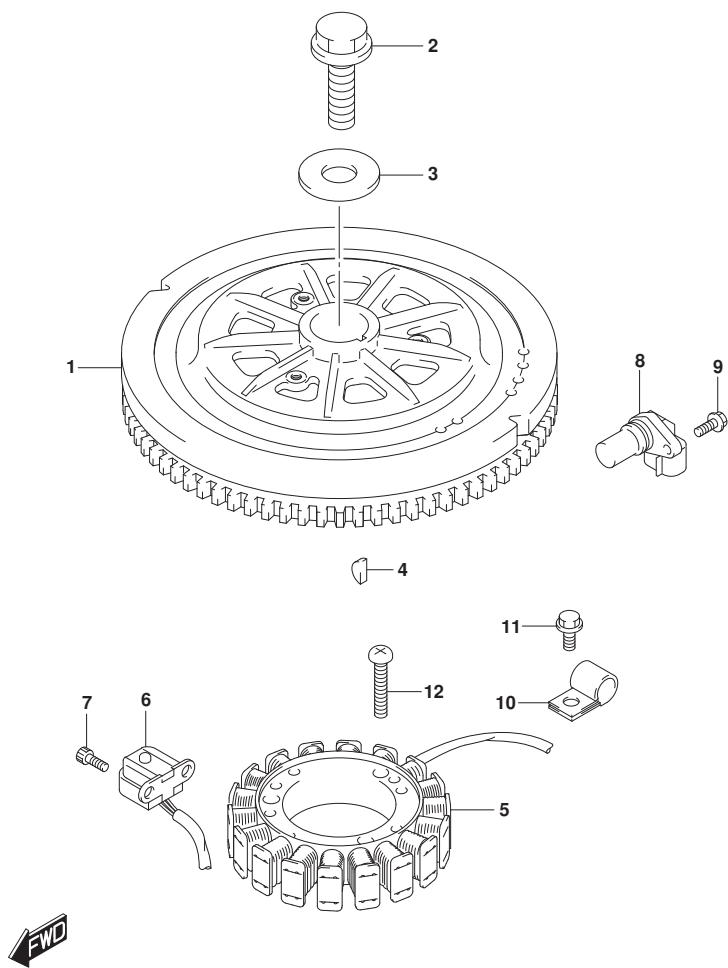


FIG.303A (1-H-2) MAGNETO

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32102-88L01	FLYWHEEL, MAGNETO	1	
2	09103-14024	BOLT (14X50)	1	
3	09160-14065	WASHER (14.5X36X4.5)	1	
4	09420-04008	KEY (B:4,D:16,H6.5)	1	
5	32120-88L00	COIL, BATTERY CHARGING	1	
6	32160-88L01	COIL, IGN TIMING	1	
7	09106-05030	BOLT (5X10)	2	
8	33220-64L10	SENSOR ASSY, POSN	1	
9	01550-0616C	BOLT	1	
10	09403-13414	CLAMP	1	
11	01550-06127	BOLT	1	
12	02112-06307	SCREW	3	

FIG.310A

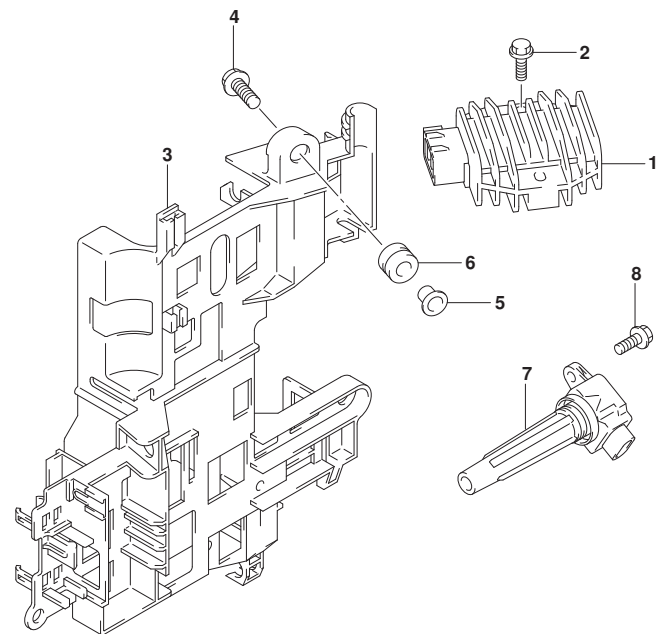


FIG.310A (1-H-3) RECTIFIER/IGNITION COIL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-88L01	RECTIFIER & REGULATOR ASSY	1	
2	01550-0625C	BOLT	2	
3	32890-88L01	HOLDER, ELECTRIC PARTS	1	
4	09116-06202	BOLT (6X25)	3	
5	09169-06062	WASHER (6.3X17X1.6)	3	
6	09320-09016	CUSHION	3	
7	33410-87L00	COIL ASSY, IGNITION	3	
8	01550-0620C	BOLT	3	



FIG.315A

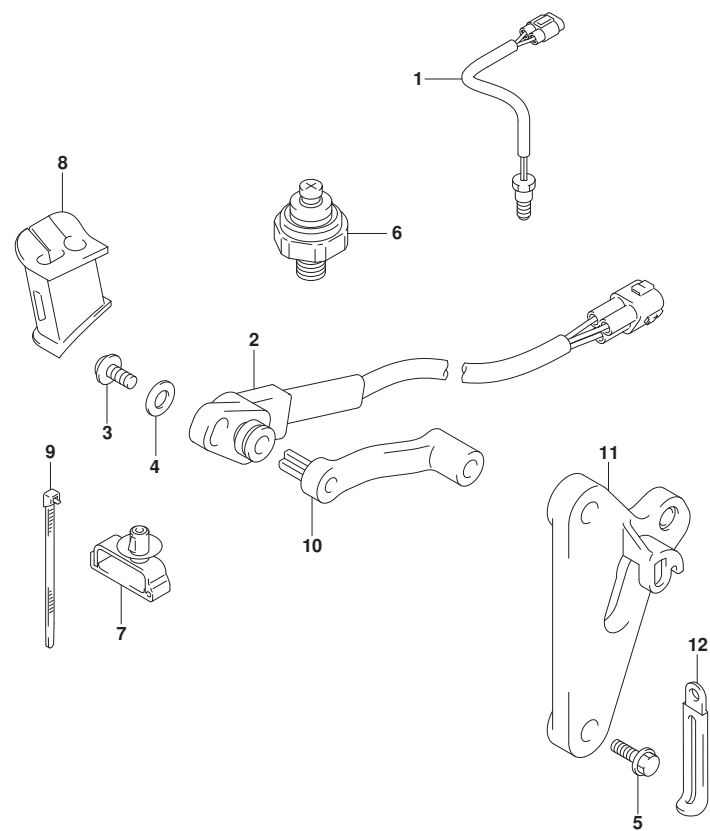


FIG.315A (1-H-4) SENSOR (DF40A,DF40ATH,DF50A,DF50ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34830-87J20	SENSOR, TEMP	1	
2	34840-98J03	SENSOR ASSY, TRIM & TILT	1	
3	09125-05048	SCREW (5X16)	1	
4	09160-05029	WASHER (5.5X12X0.8)	1	
5	09103-06093	BOLT (6X20)	2	
6	37820-99E02	SWITCH ASSY, OIL PRESSURE	1	
7	09403-07340	CLAMP	1	
8	36656-88L00	GROMMET, PTT CABLE	1	
9	09407-14407	CLAMP (L:145)	3	
10	34841-88L01	LEVER, TRIM SENSOR	1	
11	34845-88L02	BRACKET, TRIM SENSOR	1	
12	29404-93J11	CLAMP (L:65)	1	

DF40A E01
DF40A E03
DF40A E11
DF40ATH E01
DF50A E01
DF50A E03
DF50A E11
DF50ATH E01



FIG.315B

FIG.315B (1-H-5) SENSOR (DF40AQH,DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34830-87J20	SENSOR, TEMP	1	
2	37820-99E02	SWITCH ASSY, OIL PRESSURE	1	
3	36656-88L10	GROMMET, PTT CABLE	1	

DF40AQH E01
DF60AQH E40

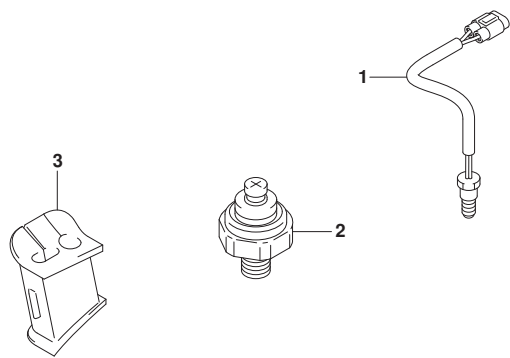


FIG.315C

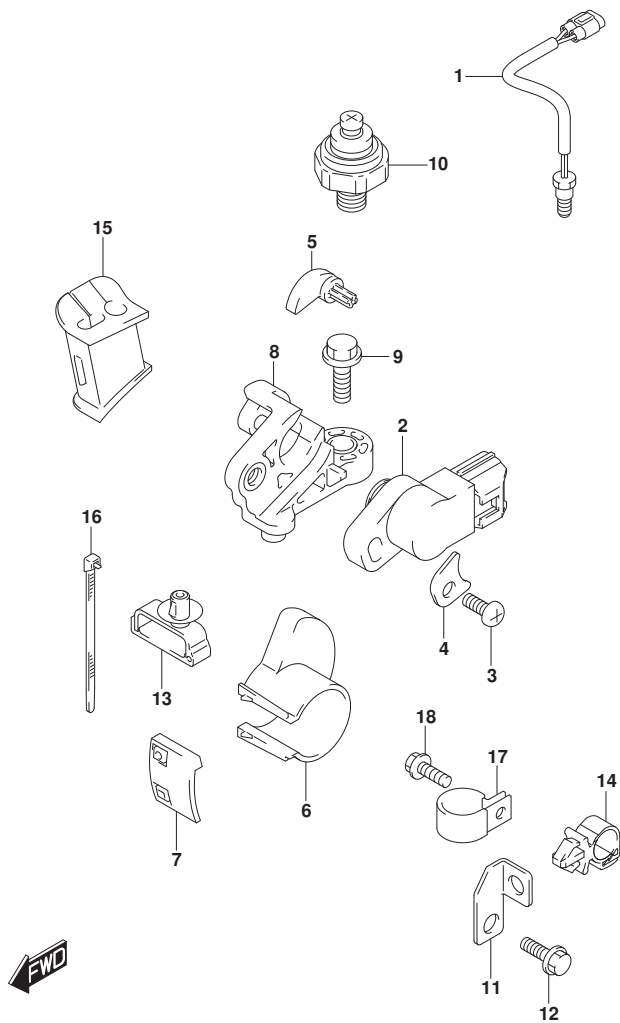


FIG.315C (1-H-6) SENSOR (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34830-87J20	SENSOR, TEMP	1	
2	34840-98J11	SENSOR ASSY, TRIM	1	
3	09125-05046	SCREW (5X12)	1	
4	34846-87L00	WASHER, TRIM SENSOR (5.5X12X0.8)	1	
5	34841-87L10	LEVER, TRIM SENSOR	1	
6	34842-88L10	CAM, TRIM SENSOR UPPER	1	UPPER
7	34843-87L00	CAM, TRIM SENSOR LOWER	1	LOWER
8	34845-88L10	BRACKET, TRIM SENSOR	1	
9	09103-06093	BOLT (6X20)	1	
10	37820-99E02	SWITCH ASSY, OIL PRESSURE	1	
11	36617-88L00	BRACKET, PTT CABLE CLAMP	1	
12	29103-93J00	BOLT (6X12)	1	
13	09403-07340	CLAMP	1	
14	09403-11321	CLAMP	1	
15	36656-88L00	GROMMET, PTT CABLE	1	
16	09407-14407	CLAMP (L:145)	2	
17	09403-13413	CLAMP	1	

NOTE : DF40AST,DF60A,DF60ATH,DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,
DF60AVTH

FIG.315C

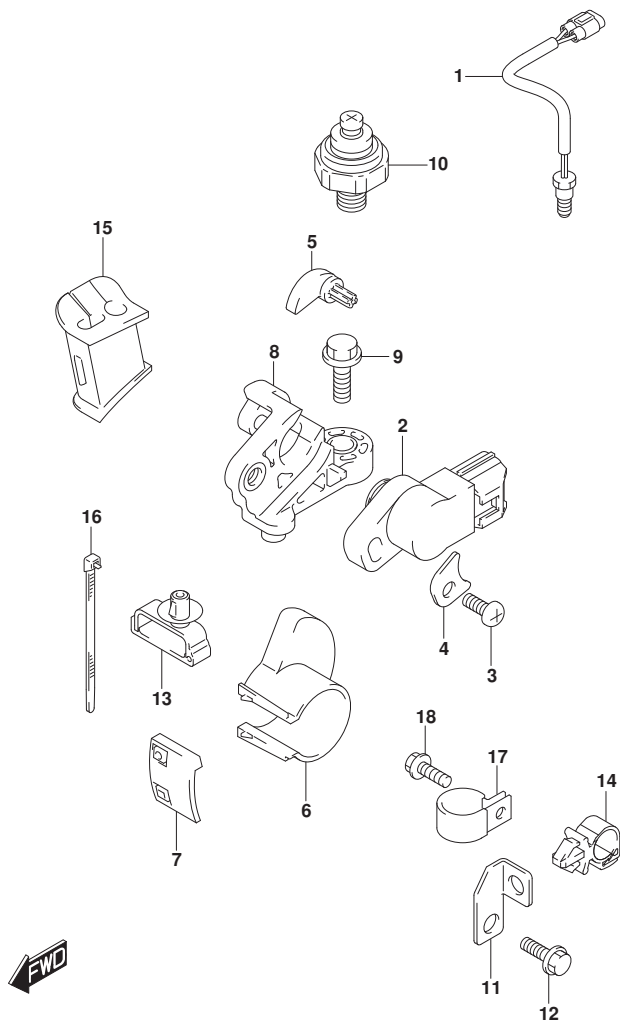


FIG.315C (1-H-7) SENSOR (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	29103-93J00	BOLT (6X12)	1	

NOTE : DF40AST,DF60A,DF60ATH,DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,
DF60AVTH

- DF40AST E34
- DF40ASVT E34
- DF50AVT E03
- DF50AVTH E01
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.322A

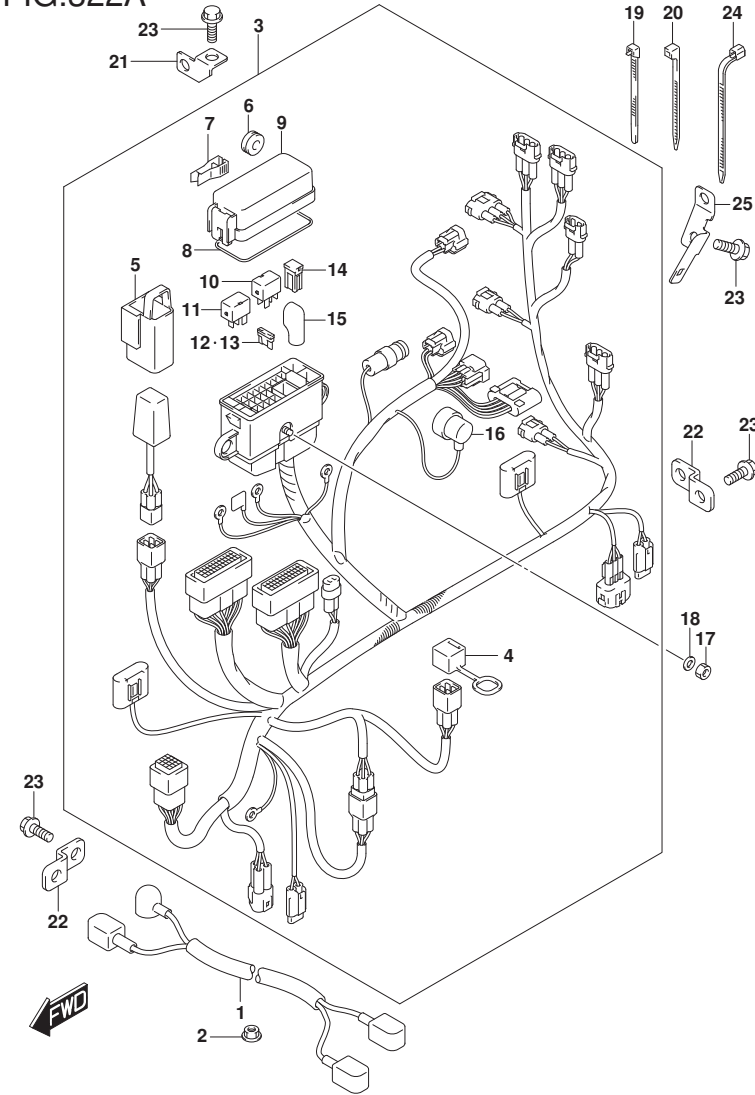


FIG.322A (1-H-8) HARNESS (DF40A,DF40ATH,DF50A,DF50ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-88L10	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-88LM1	HARNESS ASSY, WIRING	1	
4	33634-96J00	.CAP, SERVICE CONNECTOR	1	
5	36668-87L00	.HOLDER, CONDENSER	1	
6	09320-08510	.CUSHION (8.5X20X8)	2	
7	36737-98L00	.PULLER, FUSE	1	
8	36721-98L00	.O RING, UPR COVER	1	UPPER
9	36738-98L00	.COVER, FUSE CASE UPPER	1	UPPER
10	38860-76F01	.RELAY ASSY	1	ENG CONTROL UNIT
11	38860-76F01	.RELAY ASSY	1	STARTER MOTOR
12	09481-15504	.FUSE (15A)	3	
13	09481-30504	.FUSE (30A)	3	
14	09481-30403	.FUSE (30A)	2	
15	36612-96J01	.CAP, TERMINAL	1	
16	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
17	08310-00067	NUT	1	
18	08321-01067	LOCK WASHER	1	
19	09407-14403	CLAMP (L:125)	2	
20	09407-14407	CLAMP (L:145)	1	
21	36617-88L00	BRACKET, PTT CABLE CLAMP	2	
22	36617-93J10	BRACKET, HARNESS	2	
23	01550-0612C	BOLT	5	
24	09407-18402	CLAMP (L:165)	1	
25	36617-88L20	BRACKET, HARNESS	1	

DF40A E01
DF40A E03
DF40A E11
DF40ATH E01
DF50A E01
DF50A E03
DF50A E11
DF50ATH E01

FIG.322B

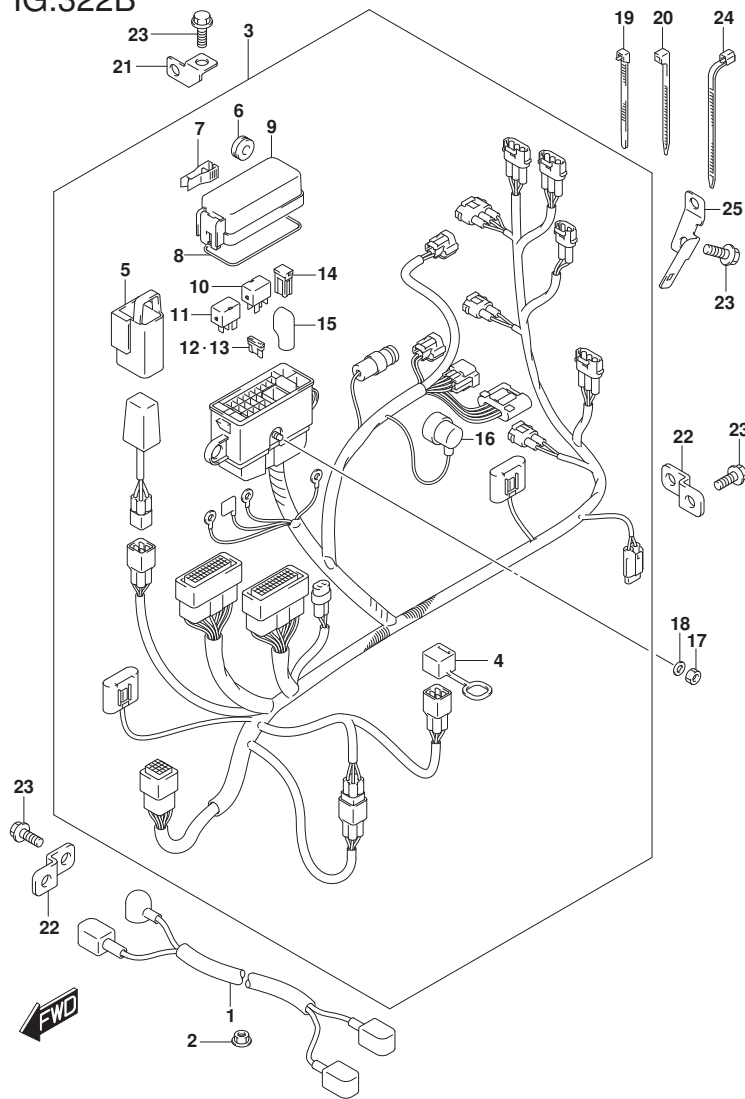


FIG.322B (1-H-9) HARNESS (DF40AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-88L10	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-88LL1	HARNESS ASSY, WIRING	1	
4	33634-96J00	.CAP, SERVICE CONNECTOR	1	
5	36668-87L00	.HOLDER, CONDENSER	1	
6	09320-08510	.CUSHION (8.5X20X8)	2	
7	36737-98L00	.PULLER, FUSE	1	
8	36721-98L00	.O RING, UPR COVER	1	UPPER
9	36738-98L00	.COVER, FUSE CASE UPPER	1	UPPER
10	38860-76F01	.RELAY ASSY	1	ENG CONTROL UNIT
11	38860-76F01	.RELAY ASSY	1	STARTER MOTOR
12	09481-15504	.FUSE (15A)	2	
13	09481-30504	.FUSE (30A)	3	
14	09481-30403	.FUSE (30A)	2	
15	36612-96J01	.CAP, TERMINAL	1	
16	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
17	08310-00067	NUT	1	
18	08321-01067	LOCK WASHER	1	
19	09407-14403	CLAMP (L:125)	2	
20	09407-14407	CLAMP (L:145)	1	
21	36617-88L00	BRACKET, PTT CABLE CLAMP	2	
22	36617-93J10	BRACKET, HARNESS	2	
23	01550-0612C	BOLT	5	
24	09407-18402	CLAMP (L:165)	1	
25	36617-88L20	BRACKET, HARNESS	1	

DF40AQH E01

FIG.322C

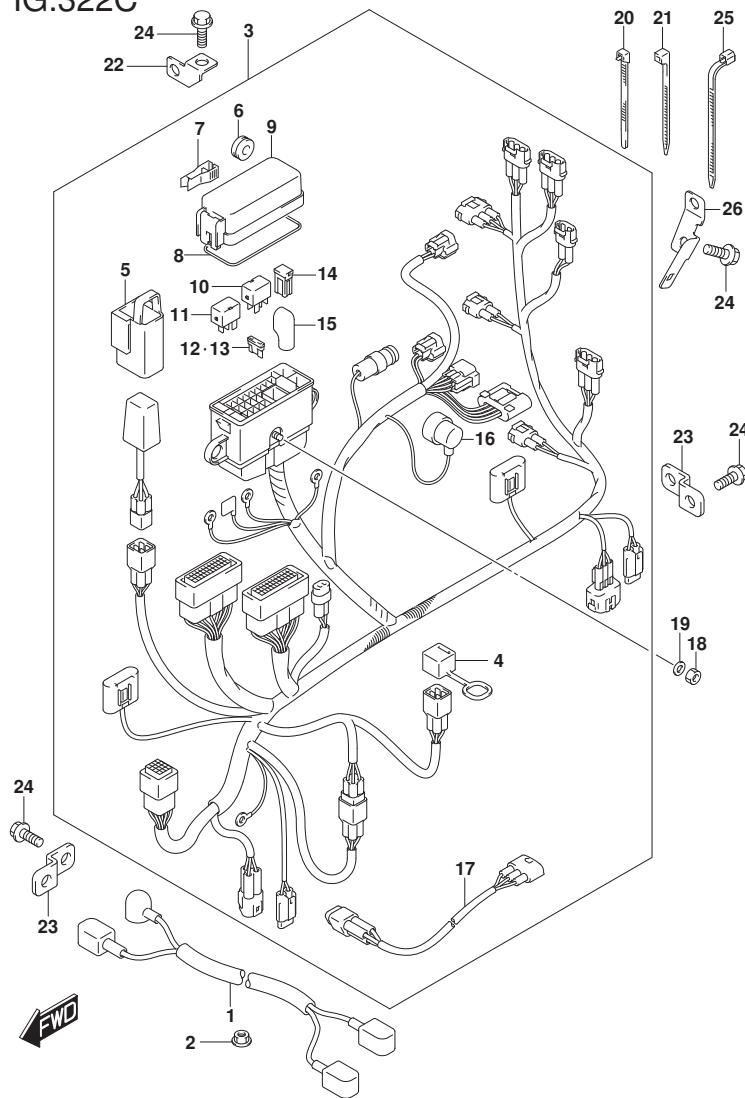


FIG.322C (1-H-10) HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-88L10	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-88LN1	HARNESS ASSY, WIRING	1	
4	33634-96J00	.CAP, SERVICE CONNECTOR	1	
5	36668-87L00	.HOLDER, CONDENSER	1	
6	09320-08510	.CUSHION (8.5X20X8)	2	
7	36737-98L00	.PULLER, FUSE	1	
8	36721-98L00	.O RING, UPR COVER	1	UPPER
9	36738-98L00	.COVER, FUSE CASE UPPER	1	UPPER
10	38860-76F01	.RELAY ASSY	1	ENG CONTROL UNIT
11	38860-76F01	.RELAY ASSY	1	STARTER MOTOR
12	09481-15504	.FUSE (15A)	3	
13	09481-30504	.FUSE (30A)	3	
14	09481-30403	.FUSE (30A)	2	
15	36612-96J01	.CAP, TERMINAL	1	
16	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
17	36611-88L00	.HARNESS ASSY, WIRING SUB	1	
18	08310-00067	NUT	1	
19	08321-01067	LOCK WASHER	1	
20	09407-14403	CLAMP (L:125)	2	
21	09407-14407	CLAMP (L:145)	1	
22	36617-88L00	BRACKET, PTT CABLE CLAMP	2	
23	36617-93J10	BRACKET, HARNESS	2	
24	01550-0612C	BOLT	5	
25	09407-18402	CLAMP (L:165)	1	
26	36617-88L20	BRACKET, HARNESS	1	

NOTE : (DF40AST,DF40ASVT):(020,021),(DF50AVT,DF50AVTH)

DF40AST E34
DF40ASVT E34
DF50AVT E03
DF50AVTH E01

FIG.322D

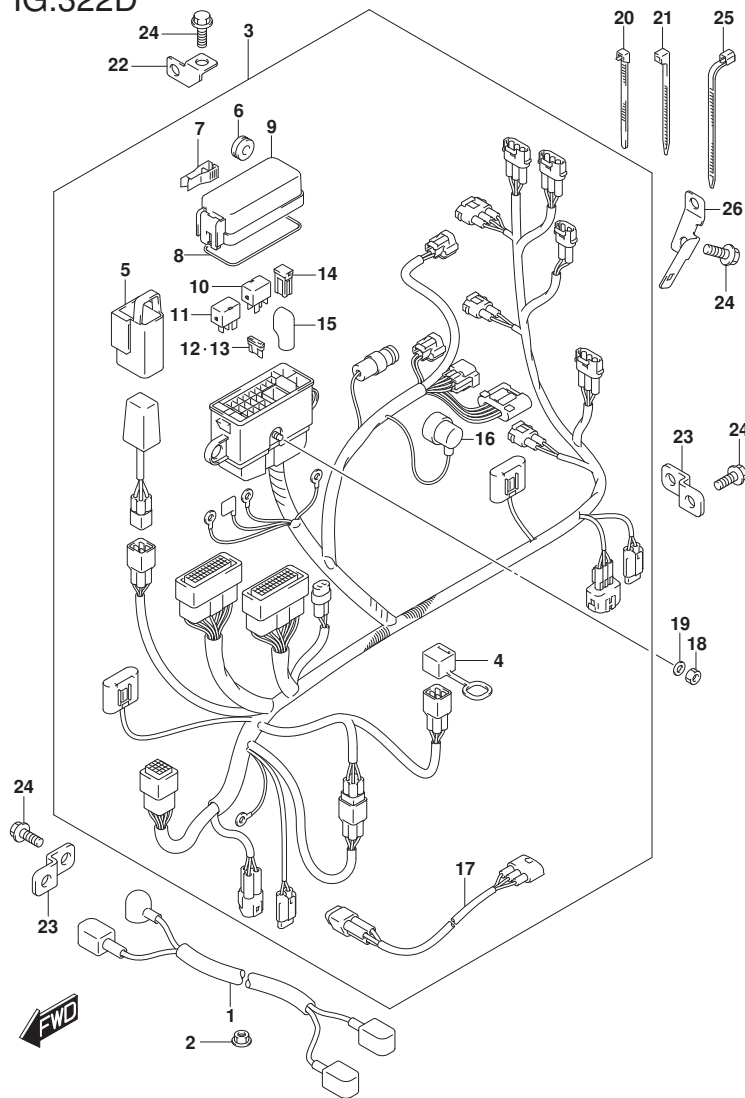


FIG.322D (1-H-11) HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-88L10	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-88LQ1	HARNESS ASSY, WIRING	1	
4	33634-96J00	.CAP, SERVICE CONNECTOR	1	
5	36668-87L00	.HOLDER, CONDENSER	1	
6	09320-08510	.CUSHION (8.5X20X8)	2	
7	36737-98L00	.PULLER, FUSE	1	
8	36721-98L00	.O RING, UPR COVER	1	UPPER
9	36738-98L00	.COVER, FUSE CASE UPPER	1	UPPER
10	38860-76F01	.RELAY ASSY	1	ENG CONTROL UNIT
11	38860-76F01	.RELAY ASSY	1	STARTER MOTOR
12	09481-15504	.FUSE (15A)	3	
13	09481-30504	.FUSE (30A)	3	
14	09481-30403	.FUSE (30A)	2	
15	36612-96J01	.CAP, TERMINAL	1	
16	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
17	36611-88L00	.HARNESS ASSY, WIRING SUB	1	
18	08310-00067	NUT	1	
19	08321-01067	LOCK WASHER	1	
20	09407-14403	CLAMP (L:125)	2	
21	09407-14407	CLAMP (L:145)	1	
22	36617-88L00	BRACKET, PTT CABLE CLAMP	2	
23	36617-93J10	BRACKET, HARNESS	2	
24	01550-0612C	BOLT	5	
25	09407-18402	CLAMP (L:165)	1	

NOTE : (DF40AST,DF40ASVT):**022**, (DF60A,DF60ATH,DF60AVT,DF60AVTH)

FIG.322D

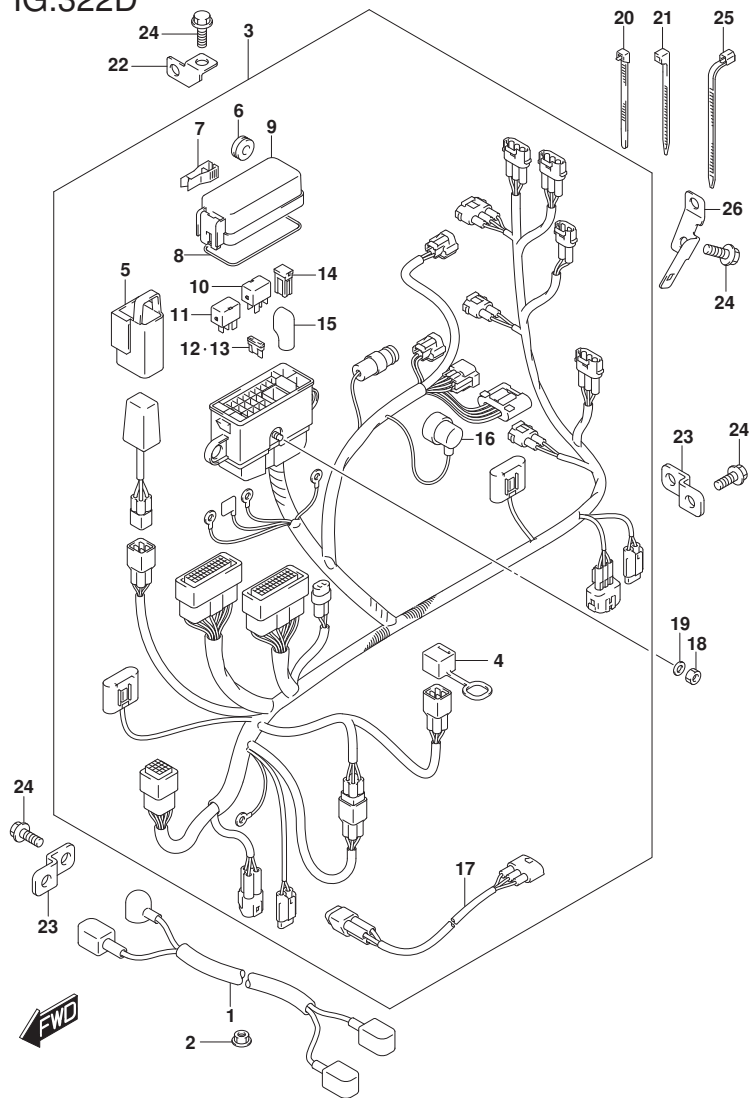


FIG.322D (1-H-12) HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
26	36617-88L20	BRACKET, HARNESS	1	

NOTE : (DF40AST,DF40ASVT):022,(DF60A,DF60ATH,DF60AVT,DF60AVTH)

- DF40AST E34
- DF40ASVT E34
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.322E

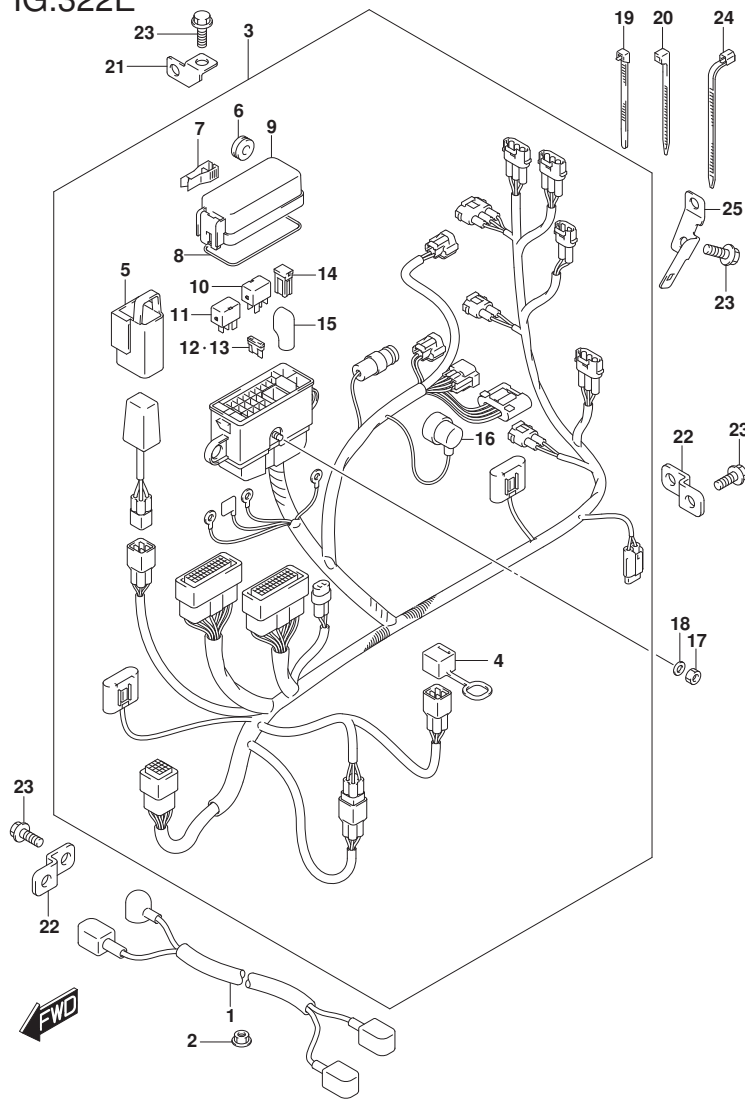


FIG.322E (1-H-13) HARNESS (DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-88L10	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-88LP1	HARNESS ASSY, WIRING	1	
4	33634-96J00	.CAP, SERVICE CONNECTOR	1	
5	36668-87L00	.HOLDER, CONDENSER	1	
6	09320-08510	.CUSHION (8.5X20X8)	2	
7	36737-98L00	.PULLER, FUSE	1	
8	36721-98L00	.O RING, UPR COVER	1	UPPER
9	36738-98L00	.COVER, FUSE CASE UPPER	1	UPPER
10	38860-76F01	.RELAY ASSY	1	ENG CONTROL UNIT
11	38860-76F01	.RELAY ASSY	1	STARTER MOTOR
12	09481-15504	.FUSE (15A)	2	
13	09481-30504	.FUSE (30A)	3	
14	09481-30403	.FUSE (30A)	2	
15	36612-96J01	.CAP, TERMINAL	1	
16	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
17	08310-00067	NUT	1	
18	08321-01067	LOCK WASHER	1	
19	09407-14403	CLAMP (L:125)	2	
20	09407-14407	CLAMP (L:145)	1	
21	36617-88L00	BRACKET, PTT CABLE CLAMP	2	
22	36617-93J10	BRACKET, HARNESS	2	
23	01550-0612C	BOLT	5	
24	09407-18402	CLAMP (L:165)	1	
25	36617-88L20	BRACKET, HARNESS	1	

DF60AQH E40

FIG.326A

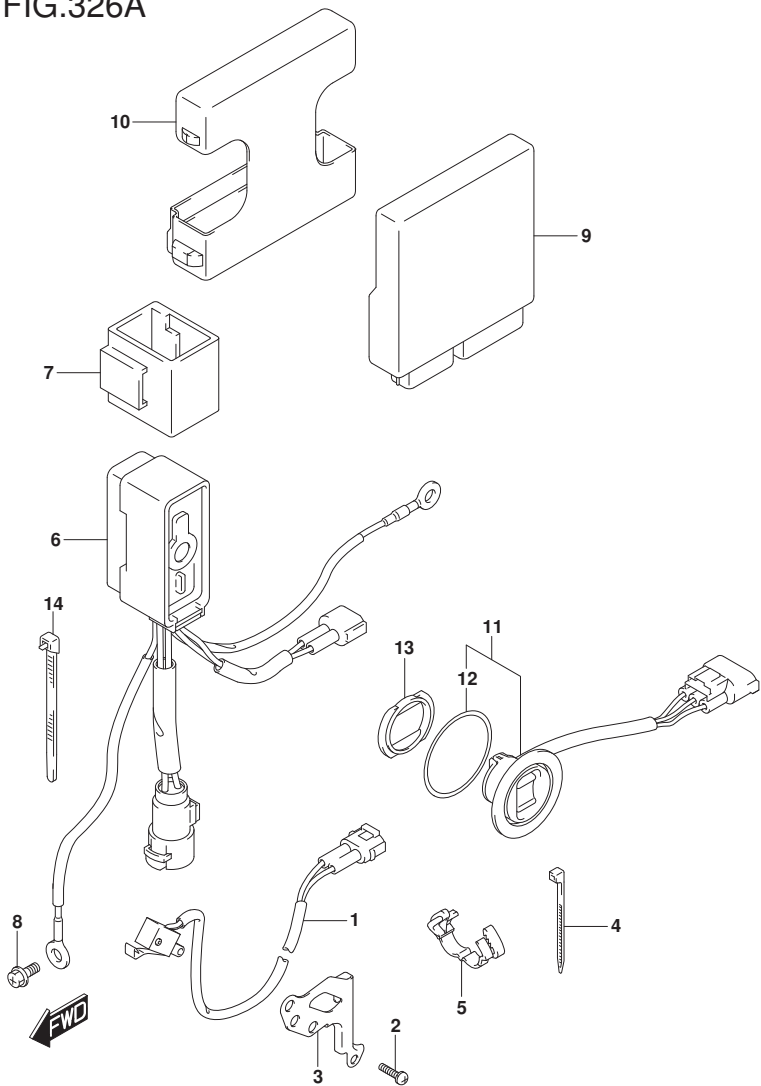



FIG.326A (1-H-14) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33940-88LJ0	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : (DF40A:(E01,E03,E11),(DF40ATH:E01)):(020,021)

- DF40A E01
- DF40A E03
- DF40A E11
- DF40ATH E01

FIG.326B

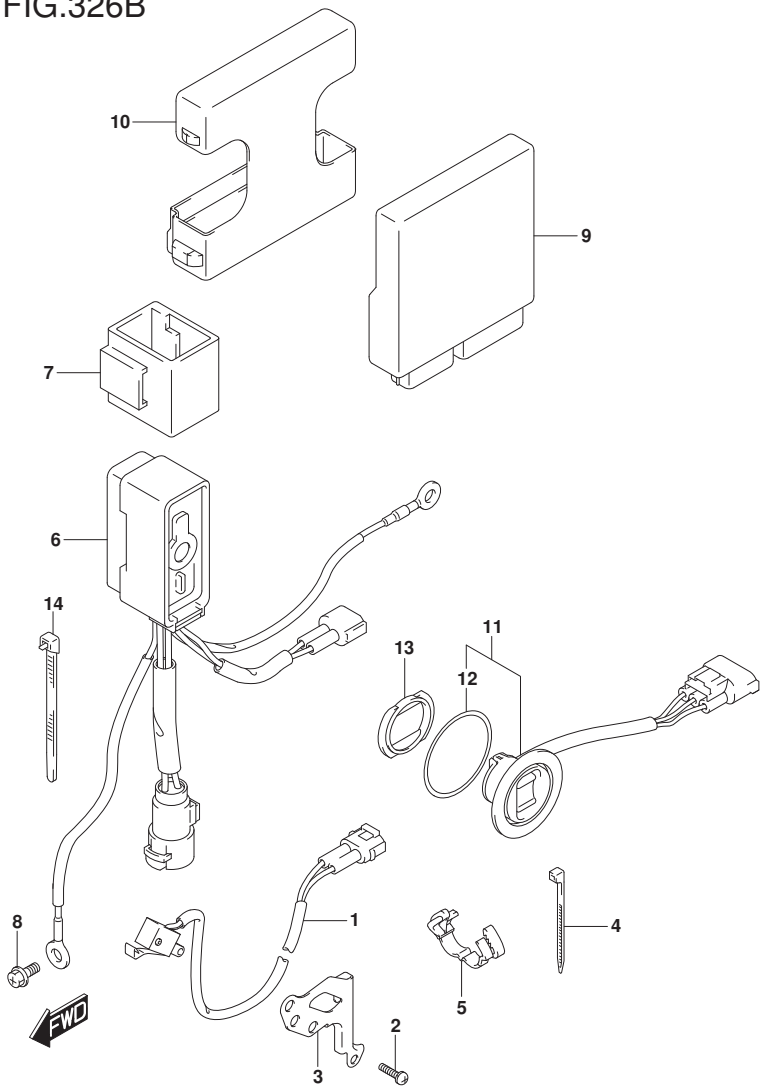

DF60A_E11_022_326B
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326B (1-1-2) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33950-88L60	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : (DF40A:E11,DF40ATH:E01):022

DF40A E11
DF40ATH E01

FIG.326C

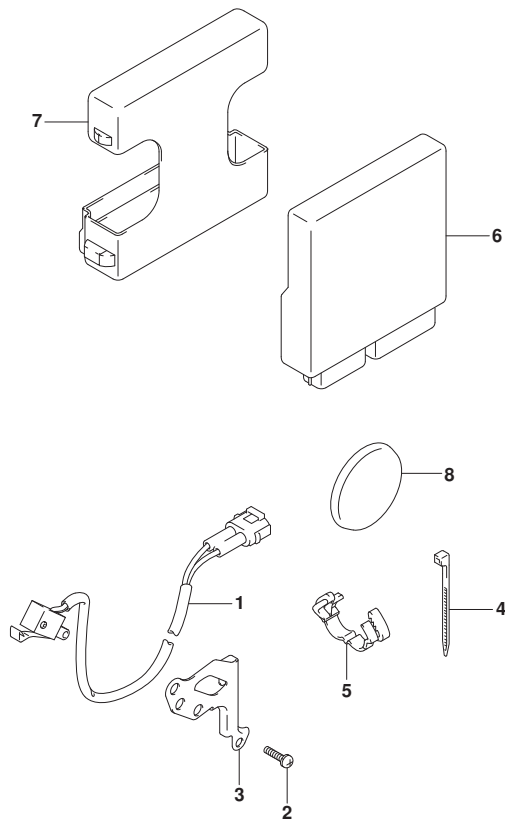


FIG.326C (1-1-3) PTT SWITCH/ENGINE CONTROL UNIT (DF40AQH:E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6-1	33940-88LJ0	UNIT, ENGINE CONTROL	1	020,021
6-2	33950-88L60	UNIT, ENGINE CONTROL	1	022
7	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
8	09250-40002	CAP (OD:52)	1	

DF40AQH E01



FIG.326D


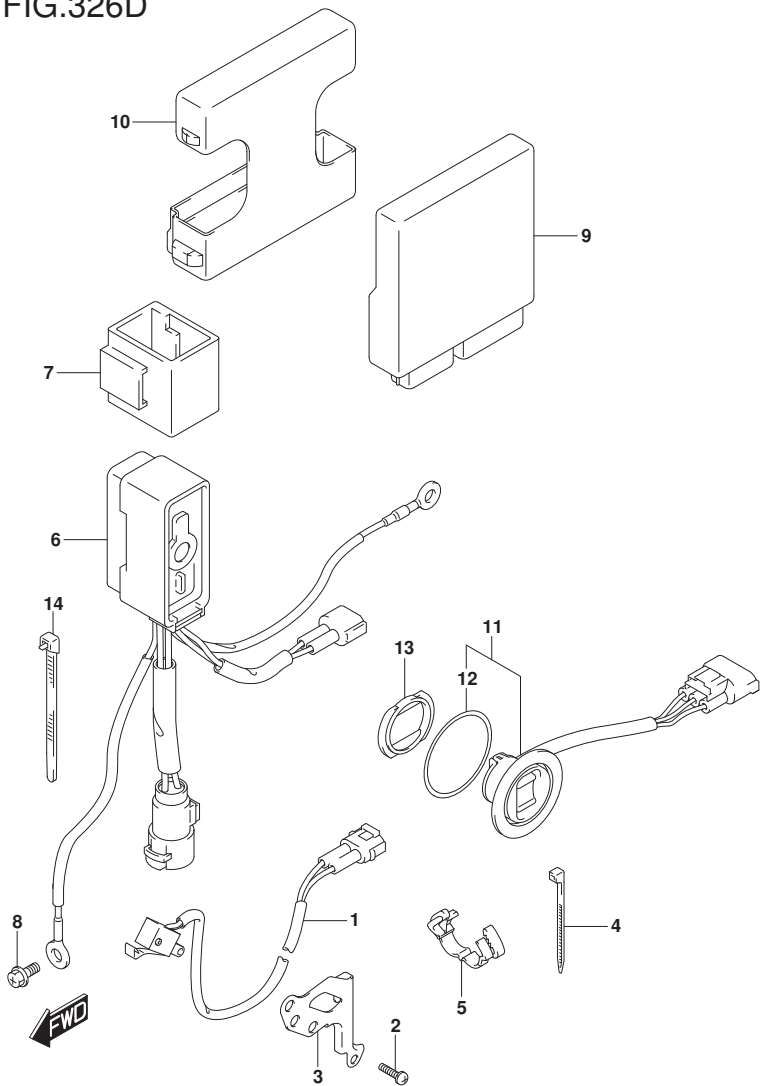


FIG.326D (1-1-4) PTT SWITCH/ENGINE CONTROL UNIT (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9-1	33940-88LK0	UNIT, ENGINE CONTROL	1	020,021
9-2	33950-88L20	UNIT, ENGINE CONTROL	1	022
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

DF40AST E34

FIG.326E

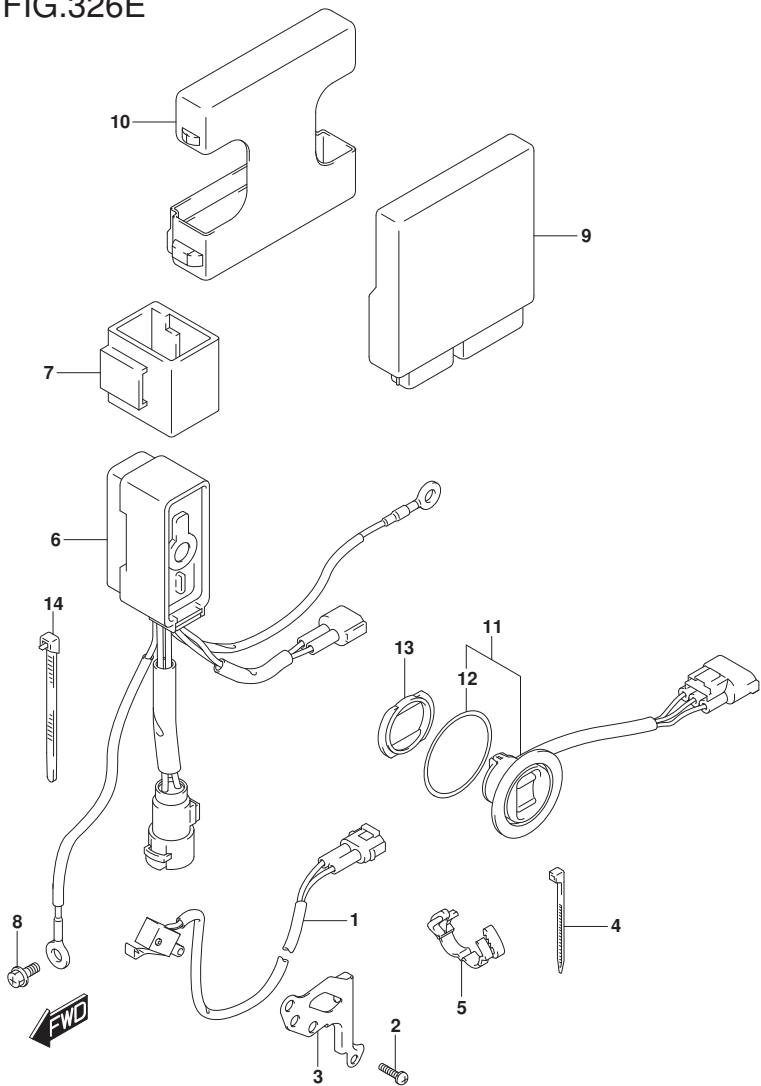

DF60A_E11_022_326E
PTT SWITCH/ENGINE CONTROL UNIT


FIG.326E (1-1-5) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33940-88LL0	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : DF50A:(E01,E03,E11),DF50ATH:E01

DF50A E01
DF50A E03
DF50A E11
DF50ATH E01

FIG.326F

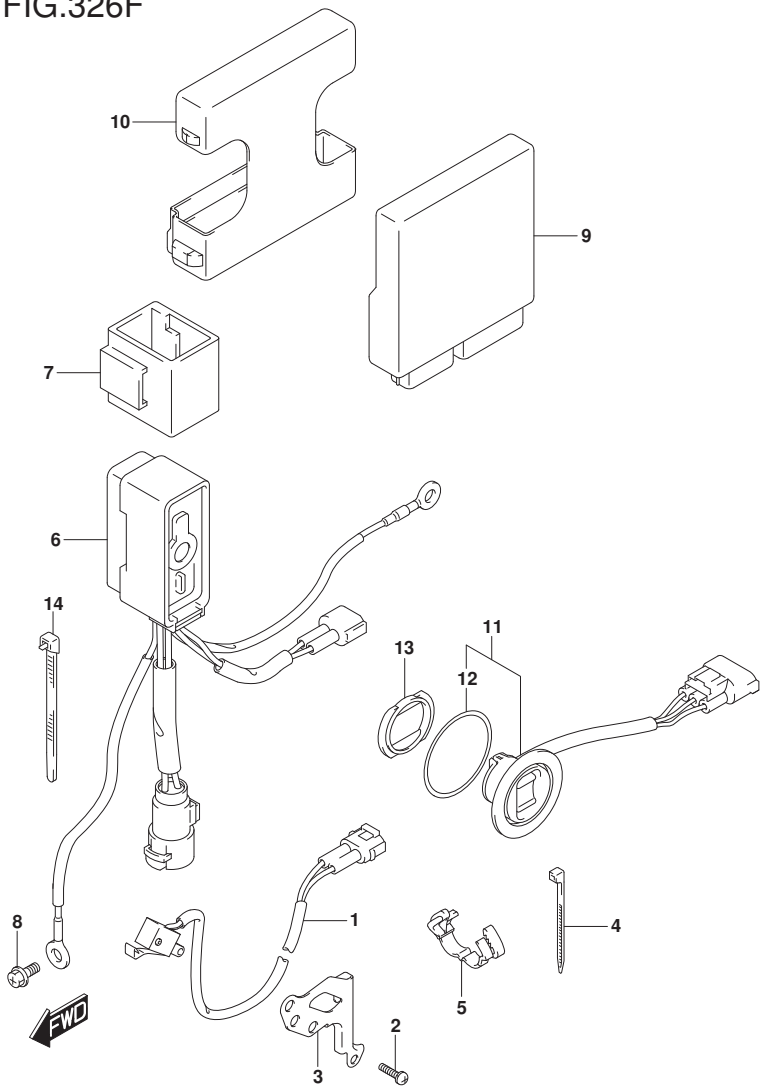

DF60A_E11_022_326F
PTT SWITCH/ENGINE CONTROL UNIT


FIG.326F (1-1-6) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33940-88LG0	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : (DF60A:(E01,E03,E11),DF60ATH:E01):(020,021)

- DF60A E01
- DF60A E03
- DF60A E11
- DF60ATH E01

FIG.326G

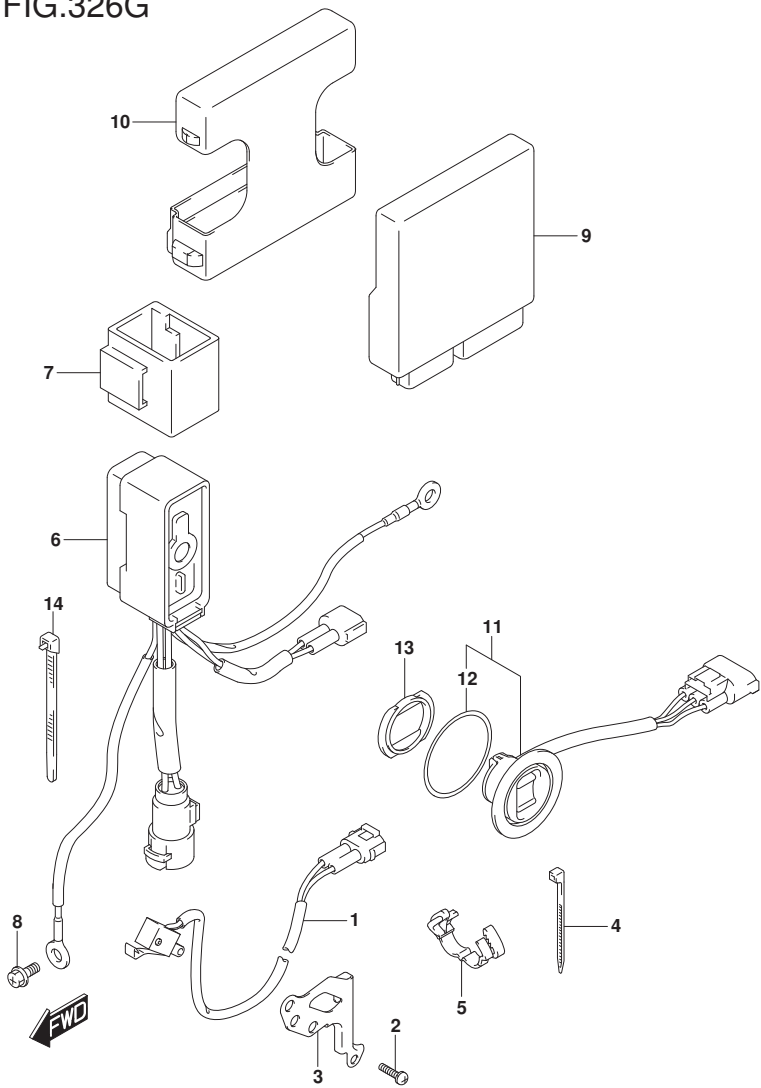

DF60A_E11_022_326G
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326G (1-I-7) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33950-88L00	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : (DF60A:E11,DF60ATH:E01):022

DF60A E11
DF60ATH E01

FIG.326H

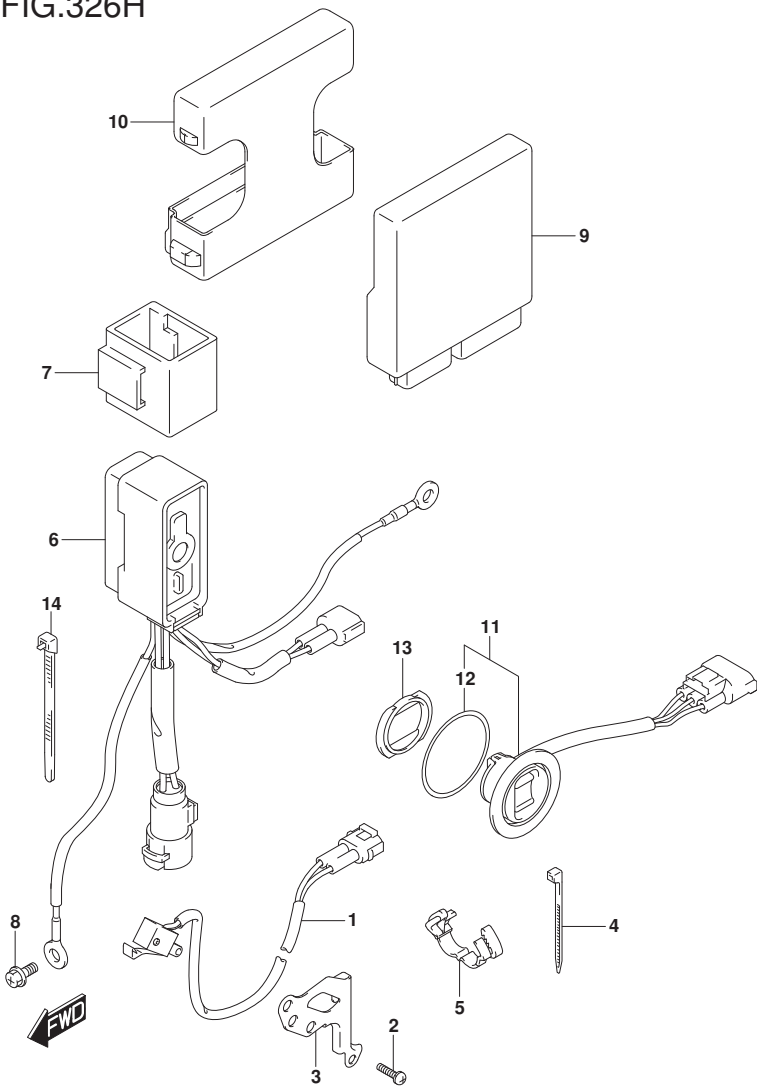


FIG.326H (1-1-8) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9-1	33940-88LH0	UNIT, ENGINE CONTROL	1	020,021
9-2	33950-88L10	UNIT, ENGINE CONTROL	1	022
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : DF60A:E40,DF60ATH:E40

DF60A E40
DF60ATH E40

FIG.326J

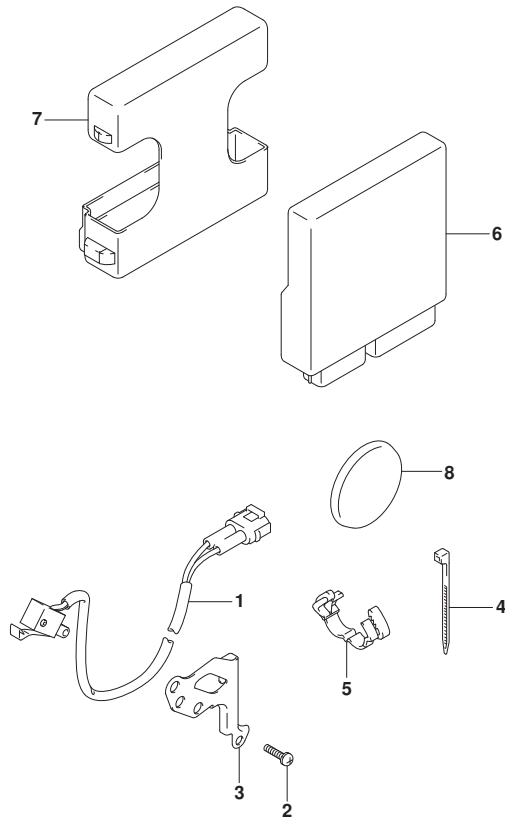



FIG.326J (1-I-9) PTT SWITCH/ENGINE CONTROL UNIT (DF60AQH:E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6-1	33940-88LH0	UNIT, ENGINE CONTROL	1	020,021
6-2	33950-88L10	UNIT, ENGINE CONTROL	1	022
7	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
8	09250-40002	CAP (OD:52)	1	

DF60AQH E40



FIG.326K

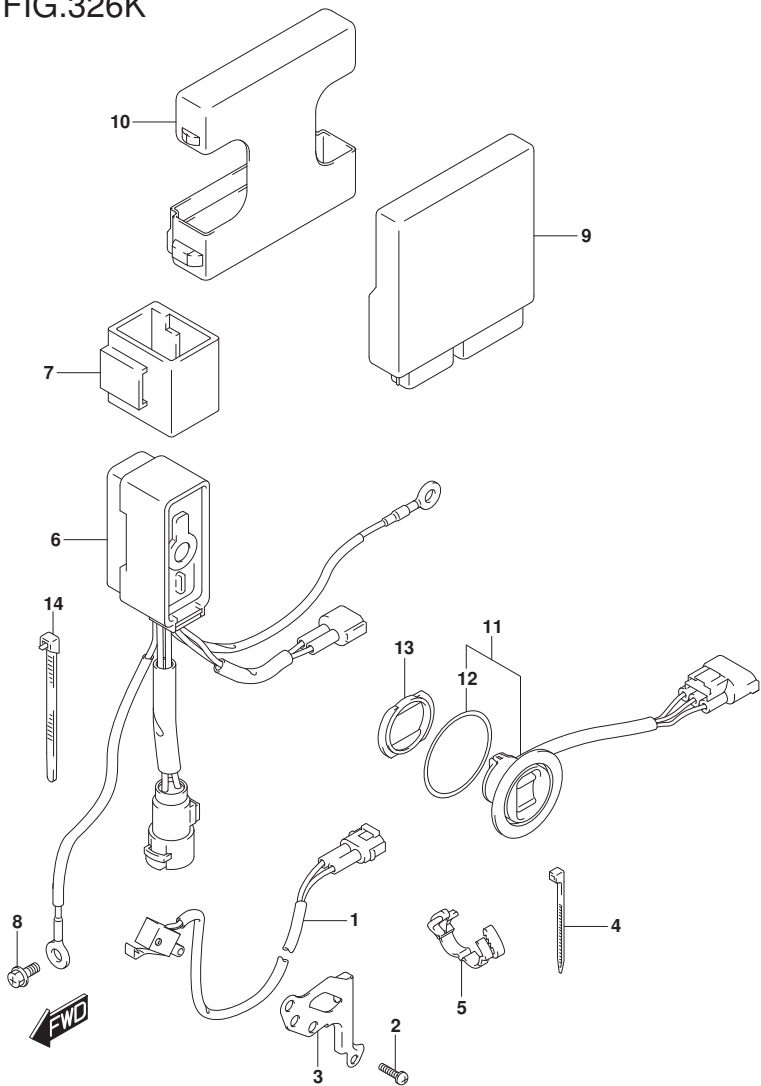

DF60A_E11_022_326K
PTT SWITCH/ENGINE CONTROL UNIT


FIG.326K (1-I-10) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33940-88LP0	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : DF50AVT:E03,DF50AVTH:E01

DF50AVT E03
DF50AVTH E01

FIG.326L

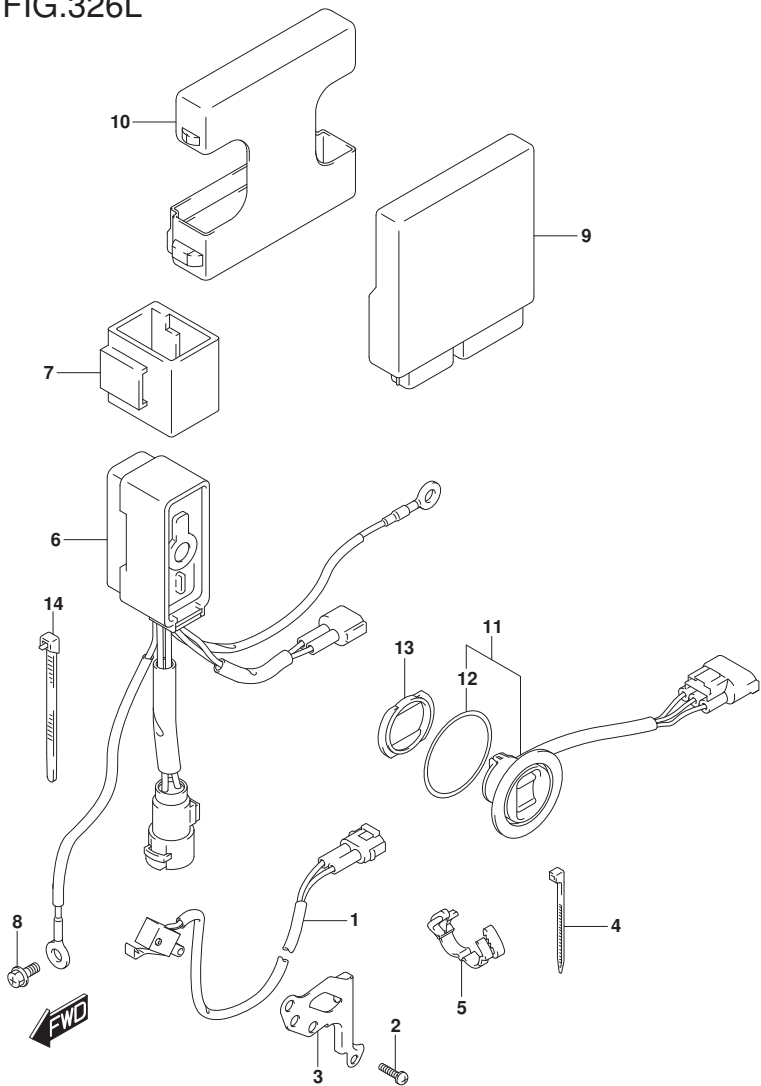

DF60A_E11_022_326L
PTT SWITCH/ENGINE CONTROL UNIT


FIG.326L (1-I-11) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33940-88LM0	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : (DF60AVT:(E01,E03,E11)):(020,021)

DF60AVT E01
DF60AVT E03
DF60AVT E11

FIG.326M

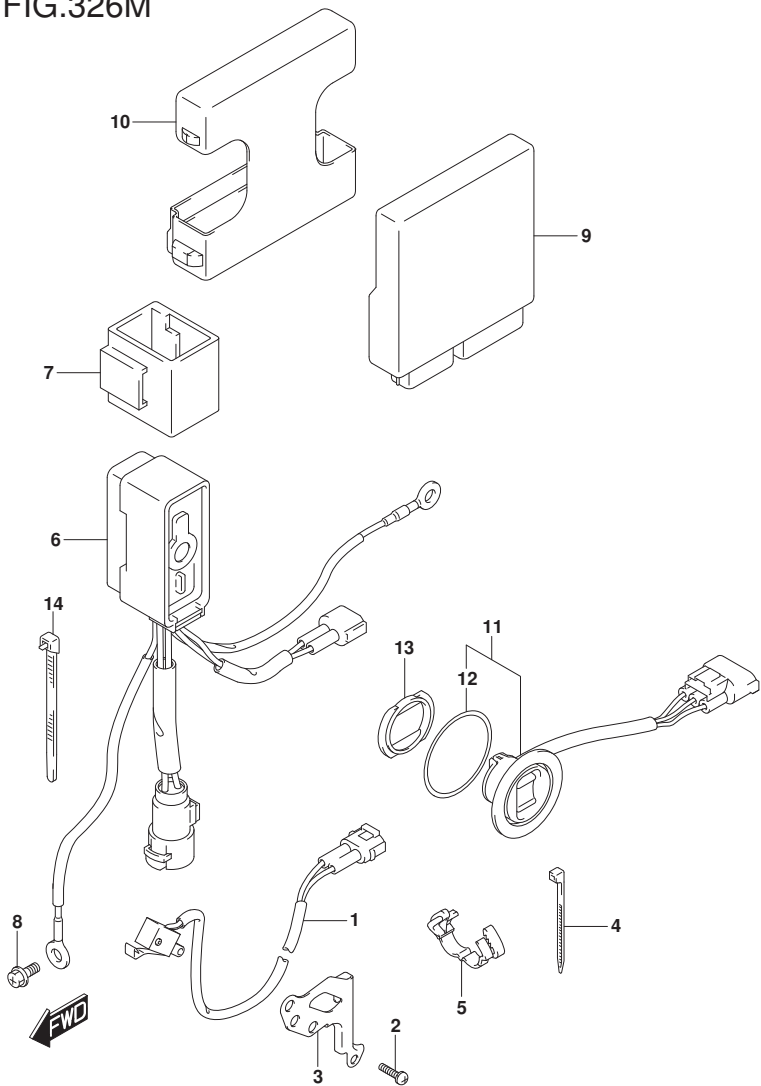

DF60A_E11_022_326M
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326M (1-I-12) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33950-88L30	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : DF60AVT:E11:022

DF60AVT E11

FIG.326N

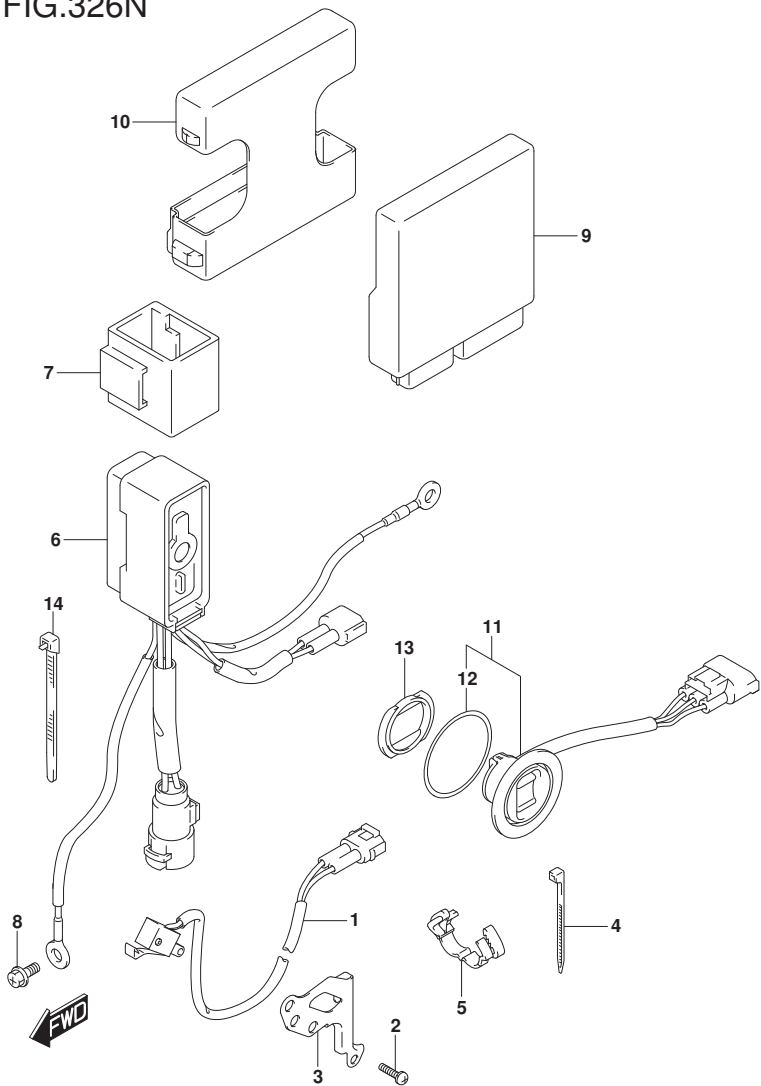


FIG.326N (1-I-13) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33940-88LN0	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : (DF60AVT:E40,DF60AVTH:E40):(020,021)

DF60AVT E40
DF60AVTH E40

FIG.326P

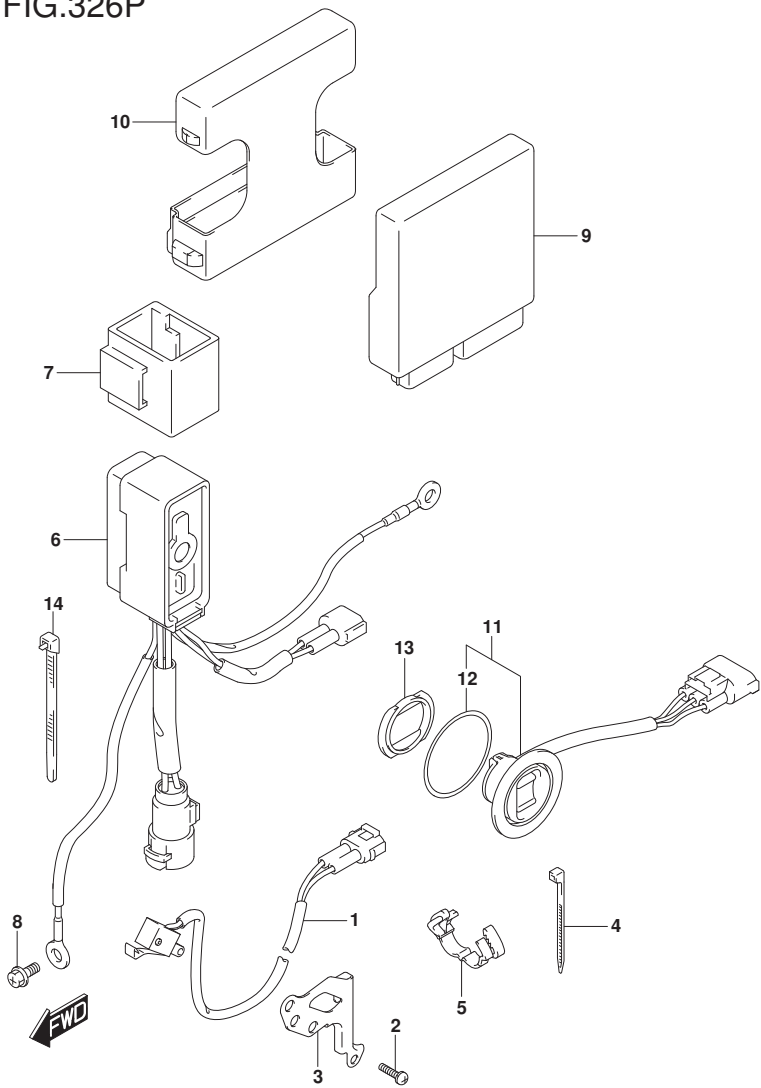


FIG.326P (1-I-14) PTT SWITCH/ENGINE CONTROL UNIT (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9	33950-88L40	UNIT, ENGINE CONTROL	1	
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

NOTE : DF60AVTH:E40:022

DF60AVTH E40

FIG.326R


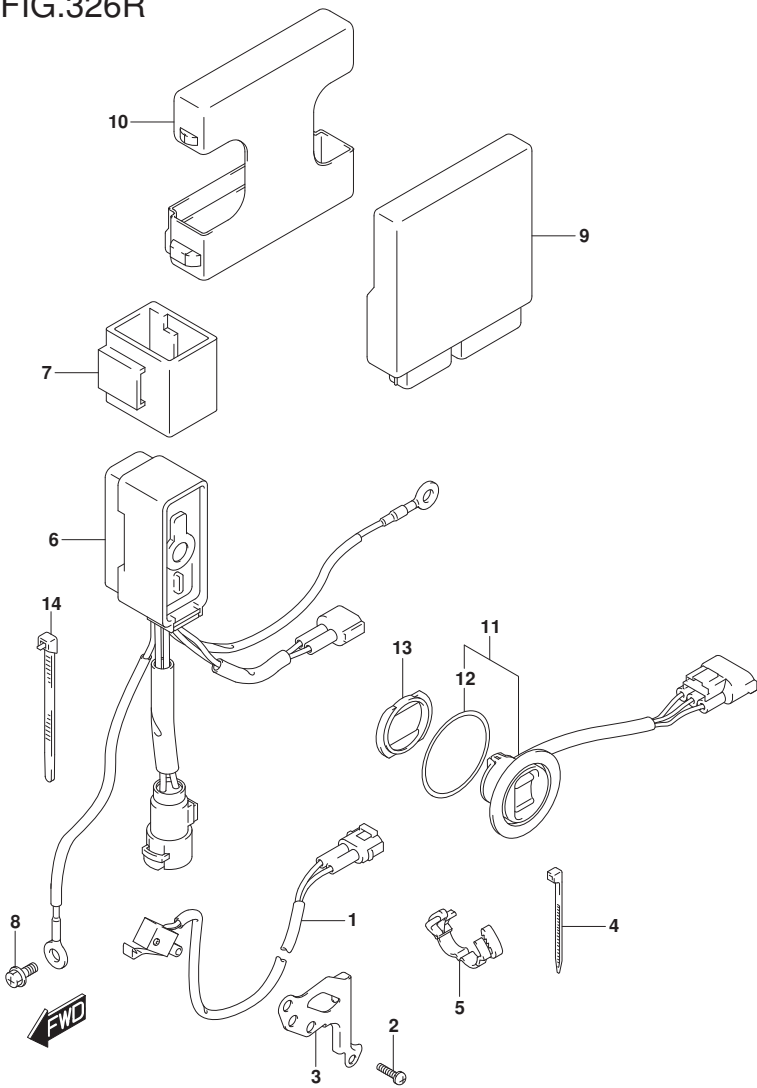


FIG.326R (1-J-2) PTT SWITCH/ENGINE CONTROL UNIT (DF40ASVT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-93J00	SWITCH ASSY, NEUTRAL	1	
2	09137-04004	SCREW (4X16)	2	
3	37725-88L00	BRACKET, NEUTRAL SWITCH	1	
4	09407-10404	CLAMP (L:100)	1	
5	09408-00184	CLAMP	1	
6	38410-93J12	RELAY ASSY, PTT	1	
7	38415-93J00	HOLDER, PTT RELAY	1	
8	01550-06127	BOLT	1	
9-1	33940-88LQ0	UNIT, ENGINE CONTROL	1	020,021
9-2	33950-88L50	UNIT, ENGINE CONTROL	1	022
10	33925-88L10	CUSHION, ENGINE CONTROL UNIT	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J01	BUSH, PTT SWITCH	1	
14	09407-14407	CLAMP (L:145)	1	

DF40ASVT E34

FIG.335A

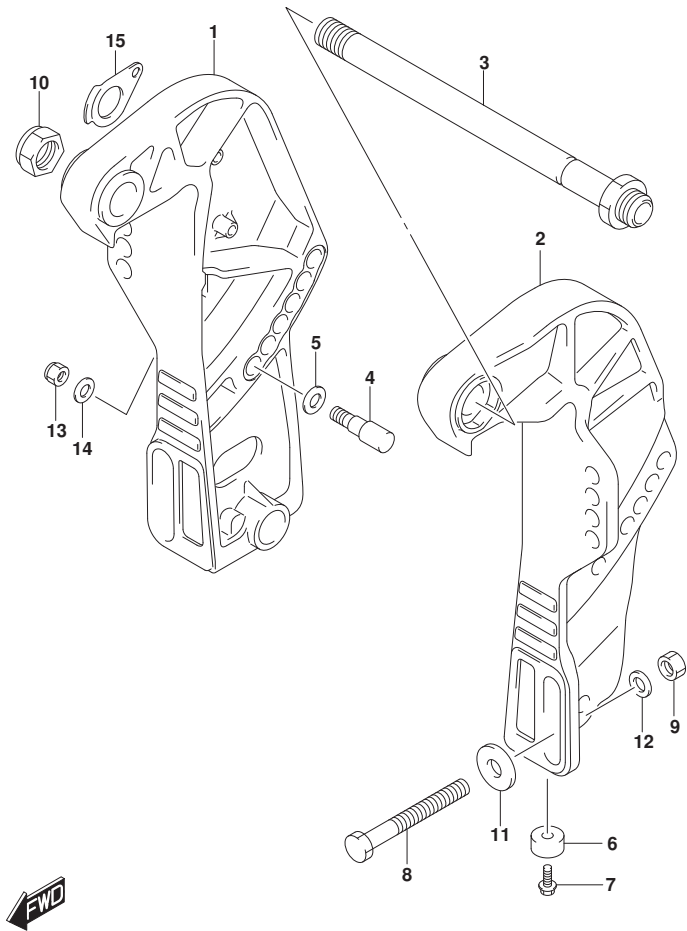

DF60A_E11_022_335A
CLAMP BRACKET

FIG.335A (1-J-3) CLAMP BRACKET (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	41111-88L20-YAY	BRACKET, CLAMP STBD (BLACK)	1	020	STBD
1-2	41111-88L20-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020	STBD
1-3	41111-88L20-QTN	BRACKET, CLAMP STBD (WHITE)	1	021,022	STBD
1-4	41111-88L20-YAY	BRACKET, CLAMP STBD (BLACK)	1	021,022	STBD
2-1	41121-88L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	020	PORT
2-2	41121-88L10-Y5S	BRACKET, CLAMP PORT (WHITE)	1	020	PORT
2-3	41121-88L10-QTN	BRACKET, CLAMP PORT (WHITE)	1	021,022	PORT
2-4	41121-88L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	021,022	PORT
3	41130-87J11	SHAFT, CLAMP BRACKET	1		
4	45421-89J00	PIN, TILT LOCK	2		
5	09160-12066	WASHER (12.5X22X2.5)	2		
6	55321-87J01	ANODE, PROTECTION	2		
7	09103-06281	BOLT (6X14)	2		
8-1	09100-12093	BOLT (12X100)	4		
8-2	09100-12091	BOLT (12X115)	1	OPT	
9	09159-12014	NUT (12X17)	4		
10	09159-22006	NUT (M22)	1		
11	09160-12128	WASHER (12.5X35X3)	4		
12	09160-12126	WASHER (12.5X22X3)	4		
13	09159-10050	NUT (10X14)	2		
14	09160-10082	WASHER (10.5X19X2.0)	2		

DF60A_E11_022

FIG.335A

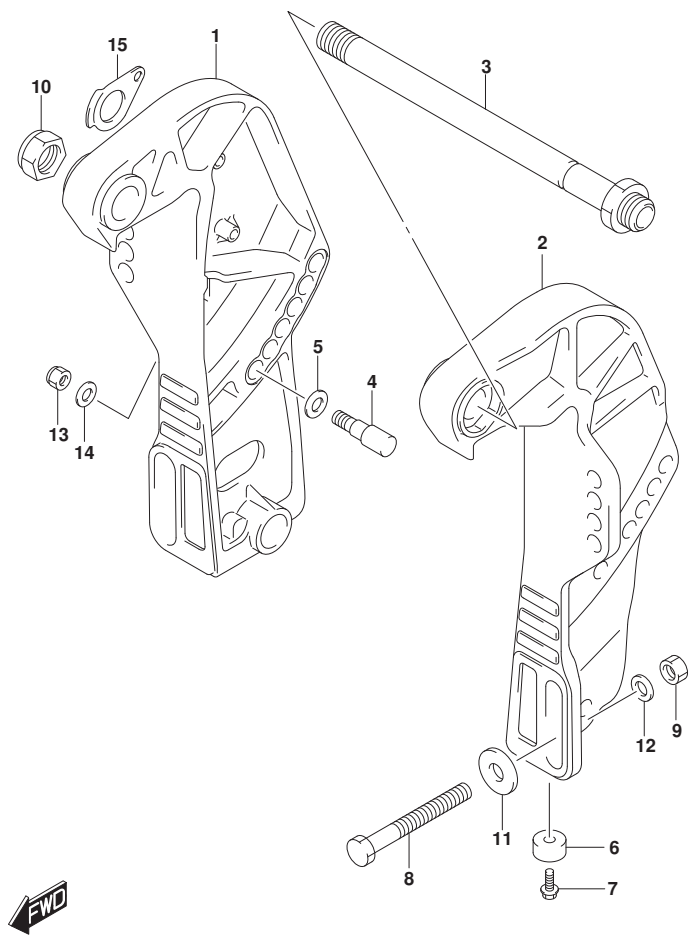


FIG.335A (1-J-4) CLAMP BRACKET (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15	41135-93J00	WASHER, CLAMP BRACKET SHAFT	1	

- DF40A E01
- DF40A E03
- DF40A E11
- DF50A E01
- DF50A E03
- DF50A E11



FIG.335B

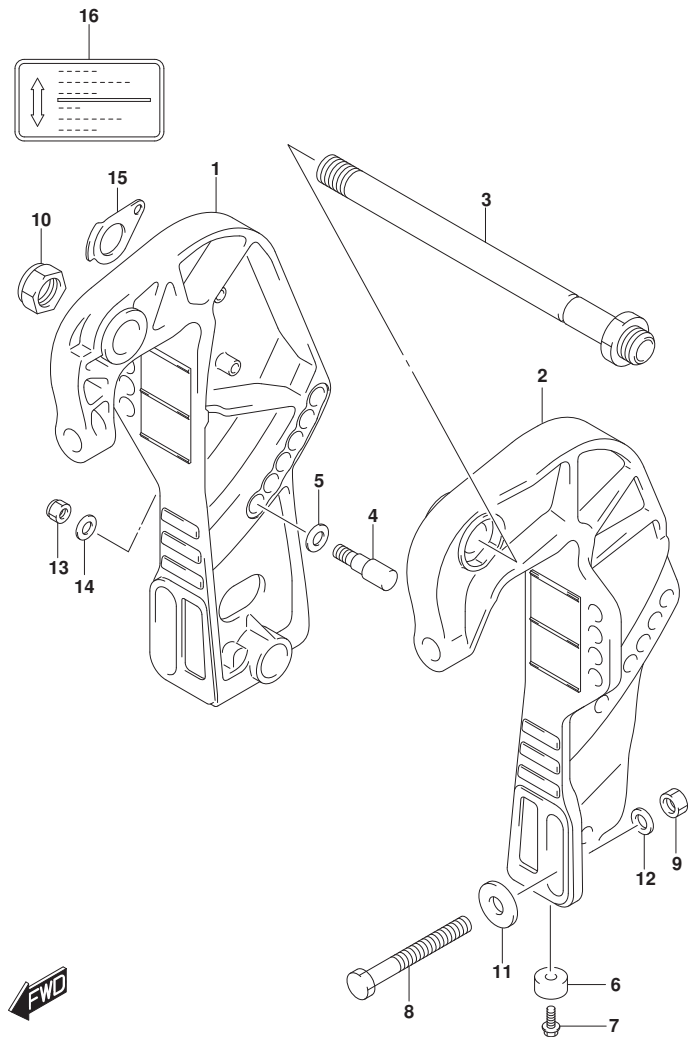


FIG.335B (1-J-5) CLAMP BRACKET (DF40AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-89J21-YAY	BRACKET, CLAMP STBD (BLACK)	1	STBD
2	41121-89J15-YAY	BRACKET, CLAMP PORT (BLACK)	1	PORT
3	41130-87J11	SHAFT, CLAMP BRACKET	1	
4	45421-89J00	PIN, TILT LOCK	2	
5	09160-12066	WASHER (12.5X22X2.5)	2	
6	55321-87J01	ANODE, PROTECTION	2	
7	09103-06281	BOLT (6X14)	2	
8-1	09100-12093	BOLT (12X100)	4	
8-2	09100-12091	BOLT (12X115)	1	OPT
9	09159-12014	NUT (12X17)	4	
10	09159-22006	NUT (M22)	1	
11	09160-12128	WASHER (12.5X35X3)	4	
12	09160-12126	WASHER (12.5X22X3)	4	
13	09159-10050	NUT (10X14)	2	
14	09160-10082	WASHER (10.5X19X2.0)	2	
15	41135-93J00	WASHER, CLAMP BRACKET SHAFT	1	
16	43241-87J00	MARK, RELEASE LEVER	1	

DF40AQH E01

FIG.335C

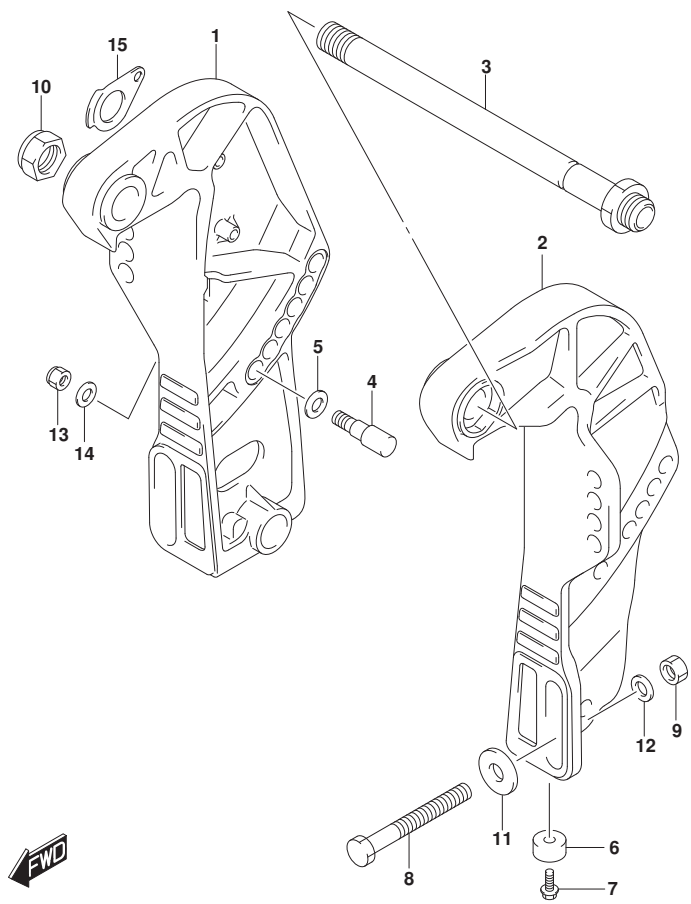


FIG.335C (1-J-6) CLAMP BRACKET (DF40ATH,DF50ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-88L20-YAY	BRACKET, CLAMP STBD (BLACK)	1	STBD
2	41121-88L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	PORT
3	41130-87J11	SHAFT, CLAMP BRACKET	1	
4	45421-89J00	PIN, TILT LOCK	2	
5	09160-12066	WASHER (12.5X22X2.5)	2	
6	55321-87J01	ANODE, PROTECTION	2	
7	09103-06281	BOLT (6X14)	2	
8-1	09100-12093	BOLT (12X100)	4	
8-2	09100-12091	BOLT (12X115)	1	OPT
9	09159-12014	NUT (12X17)	4	
10	09159-22006	NUT (M22)	1	
11	09160-12128	WASHER (12.5X35X3)	4	
12	09160-12126	WASHER (12.5X22X3)	4	
13	09159-10050	NUT (10X14)	2	
14	09160-10082	WASHER (10.5X19X2.0)	2	
15	41135-93J00	WASHER, CLAMP BRACKET SHAFT	1	

DF40ATH E01
DF50ATH E01

FIG.335D


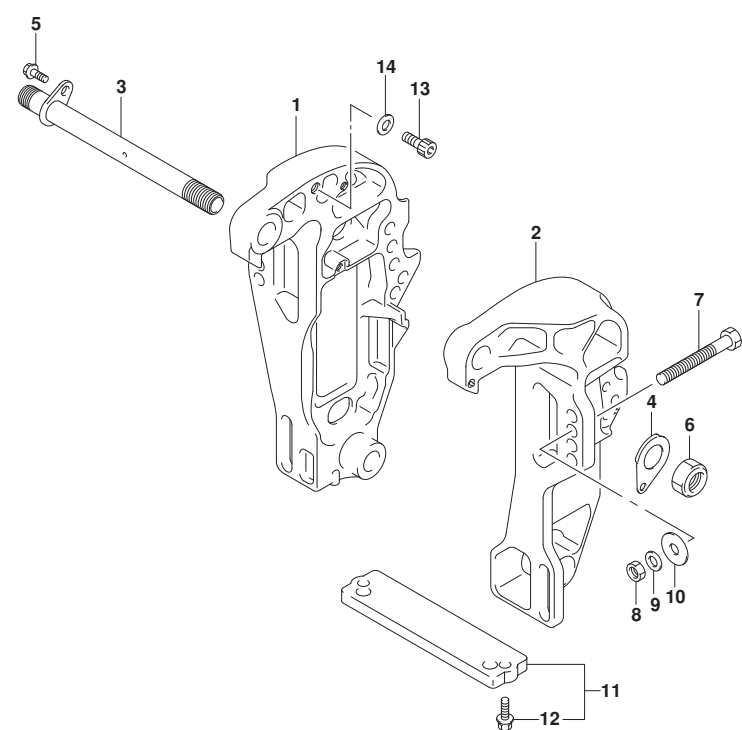


FIG.335D (1-J-7) CLAMP BRACKET (DF40AST,DF60A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-88L11-YAY	BRACKET, CLAMP STBD (BLACK)	1	020 STBD
1-2	41111-88L11-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020 STBD
1-3	41111-88L11-QTN	BRACKET, CLAMP STBD (WHITE)	1	021,022 STBD
1-4	41111-88L11-YAY	BRACKET, CLAMP STBD (BLACK)	1	021,022 STBD
2-1	41121-88L01-YAY	BRACKET, CLAMP PORT (BLACK)	1	020 PORT
2-2	41121-88L01-Y5S	BRACKET, CLAMP PORT (WHITE)	1	020 PORT
2-3	41121-88L01-QTN	BRACKET, CLAMP PORT (WHITE)	1	021,022 PORT
2-4	41121-88L01-YAY	BRACKET, CLAMP PORT (BLACK)	1	021,022 PORT
3	41130-88L10	SHAFT, CLAMP BRACKET	1	
4	41135-93J00	WASHER, CLAMP BRACKET SHAFT	1	
5	09116-08137	BOLT (8X22)	1	
6	09159-22006	NUT (M22)	1	
7-1	09100-12093	BOLT (12X100)	4	
7-2	09100-12091	BOLT (12X115)	1	OPT
8	09159-12014	NUT (12X17)	4	
9	09160-12126	WASHER (12.5X22X3)	4	
10	09160-12128	WASHER (12.5X35X3)	4	
11	55320-94900	ANODE SET, CLAMP BRACKET	1	
12	09116-06121	.BOLT (6X25)	2	
13	09106-10065	BOLT (10X20)	2	

FIG.335D

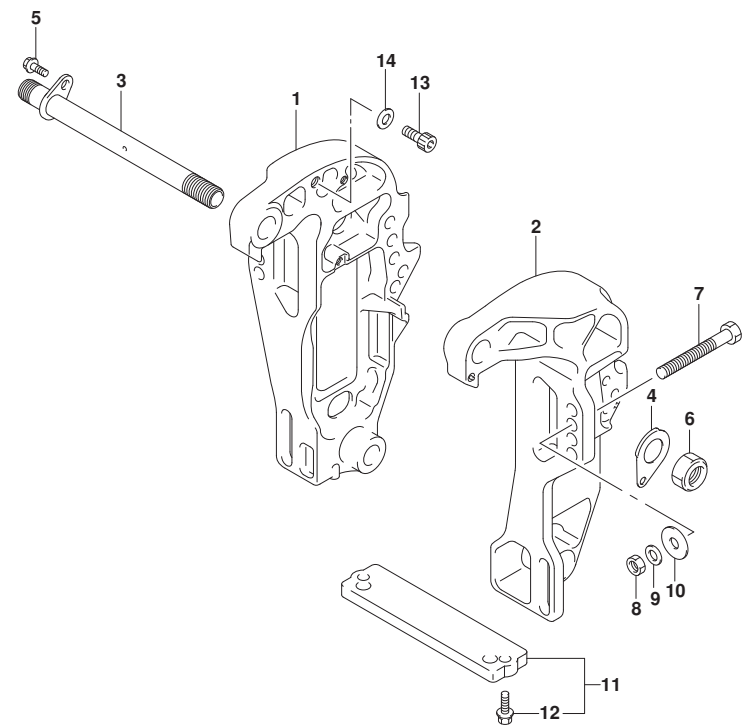


DF40AST E34
DF60A E01
DF60A E03
DF60A E11
DF60A E40

FIG.335D (1-J-8) CLAMP BRACKET (DF40AST,DF60A)				
REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14	09160-10082	WASHER (10.5X19X2.0)	2	



FIG.335E

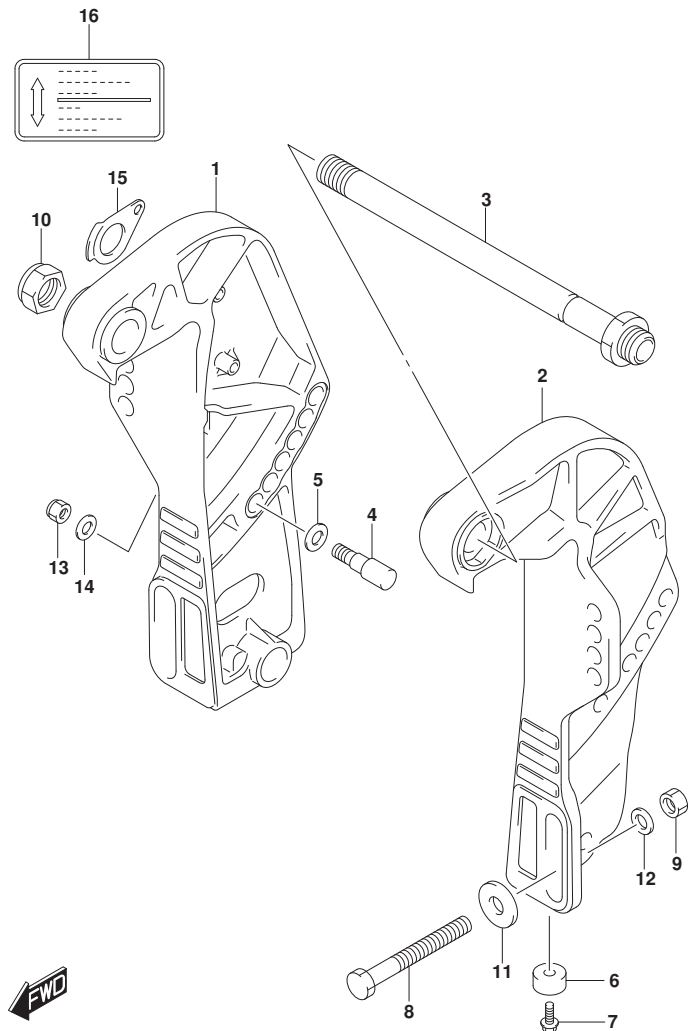

DF60A_E11_022_335E
CLAMP BRACKET

FIG.335E (1-J-9) CLAMP BRACKET (DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-88L20-YAY	BRACKET, CLAMP STBD (BLACK)	1	STBD
2	41121-88L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	PORT
3	41130-87J11	SHAFT, CLAMP BRACKET	1	
4	45421-89J00	PIN, TILT LOCK	2	
5	09160-12066	WASHER (12.5X22X2.5)	2	
6	55321-87J01	ANODE, PROTECTION	2	
7	09103-06281	BOLT (6X14)	2	
8-1	09100-12093	BOLT (12X100)	4	
8-2	09100-12091	BOLT (12X115)	1	OPT
9	09159-12014	NUT (12X17)	4	
10	09159-22006	NUT (M22)	1	
11	09160-12128	WASHER (12.5X35X3)	4	
12	09160-12126	WASHER (12.5X22X3)	4	
13	09159-10050	NUT (10X14)	2	
14	09160-10082	WASHER (10.5X19X2.0)	2	
15	41135-93J00	WASHER, CLAMP BRACKET SHAFT	1	
16	43241-87J00	MARK, RELEASE LEVER	1	

DF60AQH E40

FIG.335F

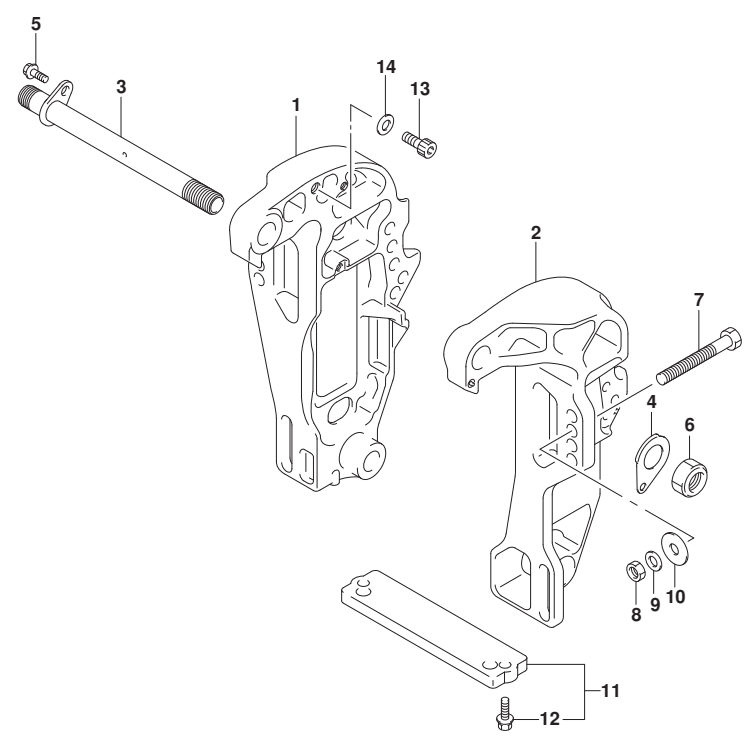


FIG.335F (1-J-10) CLAMP BRACKET (DF60ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-88L11-YAY	BRACKET, CLAMP STBD (BLACK)	1	STBD
2	41121-88L01-YAY	BRACKET, CLAMP PORT (BLACK)	1	PORT
3	41130-88L10	SHAFT, CLAMP BRACKET	1	
4	41135-93J00	WASHER, CLAMP BRACKET SHAFT	1	
5	09116-08137	BOLT (8X22)	1	
6	09159-22006	NUT (M22)	1	
7-1	09100-12093	BOLT (12X100)	4	
7-2	09100-12091	BOLT (12X115)	1	OPT
8	09159-12014	NUT (12X17)	4	
9	09160-12126	WASHER (12.5X22X3)	4	
10	09160-12128	WASHER (12.5X35X3)	4	
11	55320-94900	ANODE SET, CLAMP BRACKET	1	
12	09116-06121	.BOLT (6X25)	2	
13	09106-10065	BOLT (10X20)	2	
14	09160-10082	WASHER (10.5X19X2.0)	2	

DF60ATH E01
DF60ATH E40

FIG.335G

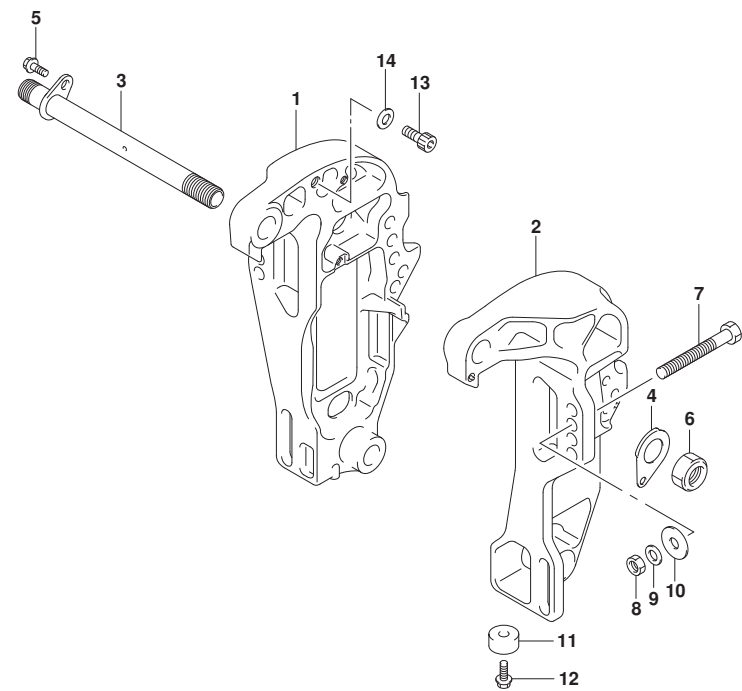


FIG.335G (1-J-11) CLAMP BRACKET (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-88L11-YAY	BRACKET, CLAMP STBD (BLACK)	1	020 STBD
1-2	41111-88L11-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020 STBD
1-3	41111-88L11-QTN	BRACKET, CLAMP STBD (WHITE)	1	021,022 STBD
1-4	41111-88L11-YAY	BRACKET, CLAMP STBD (BLACK)	1	021,022 STBD
2-1	41121-88L01-YAY	BRACKET, CLAMP PORT (BLACK)	1	020 PORT
2-2	41121-88L01-Y5S	BRACKET, CLAMP PORT (WHITE)	1	020 PORT
2-3	41121-88L01-QTN	BRACKET, CLAMP PORT (WHITE)	1	021,022 PORT
2-4	41121-88L01-YAY	BRACKET, CLAMP PORT (BLACK)	1	021,022 PORT
3	41130-88L10	SHAFT, CLAMP BRACKET	1	
4	41135-93J00	WASHER, CLAMP BRACKET SHAFT	1	
5	09116-08137	BOLT (8X22)	1	
6	09159-22006	NUT (M22)	1	
7-1	09100-12093	BOLT (12X100)	4	
7-2	09100-12091	BOLT (12X115)	1	OPT
8	09159-12014	NUT (12X17)	4	
9	09160-12126	WASHER (12.5X22X3)	4	
10	09160-12128	WASHER (12.5X35X3)	4	
11	55321-87J01	ANODE, PROTECTION	2	
12	09103-06281	BOLT (6X14)	2	
13	09106-10065	BOLT (10X20)	2	

NOTE : DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH

FIG.335G

FIG.335G (1-J-12) CLAMP BRACKET (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14	09160-10082	WASHER (10.5X19X2.0)	2	

NOTE : DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH

- DF40ASVT E34
- DF50AVT E03
- DF50AVTH E01
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

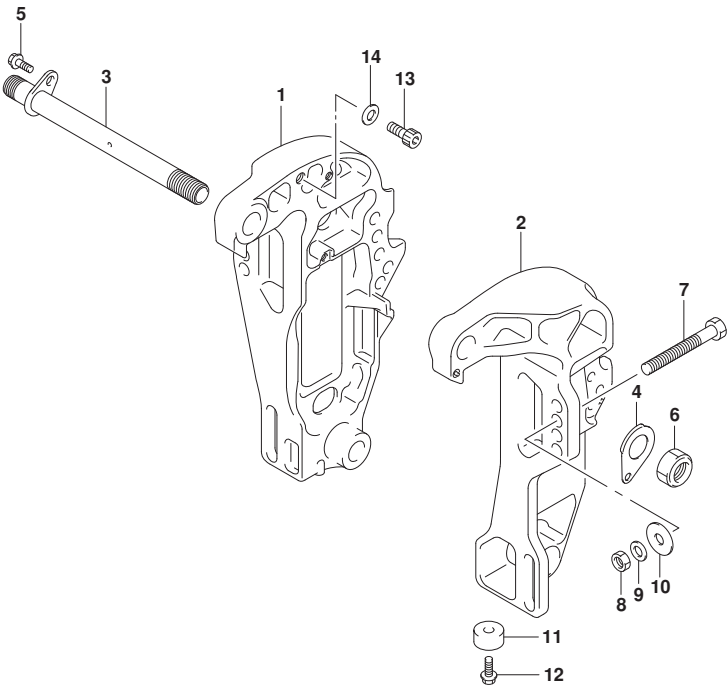


FIG.336A

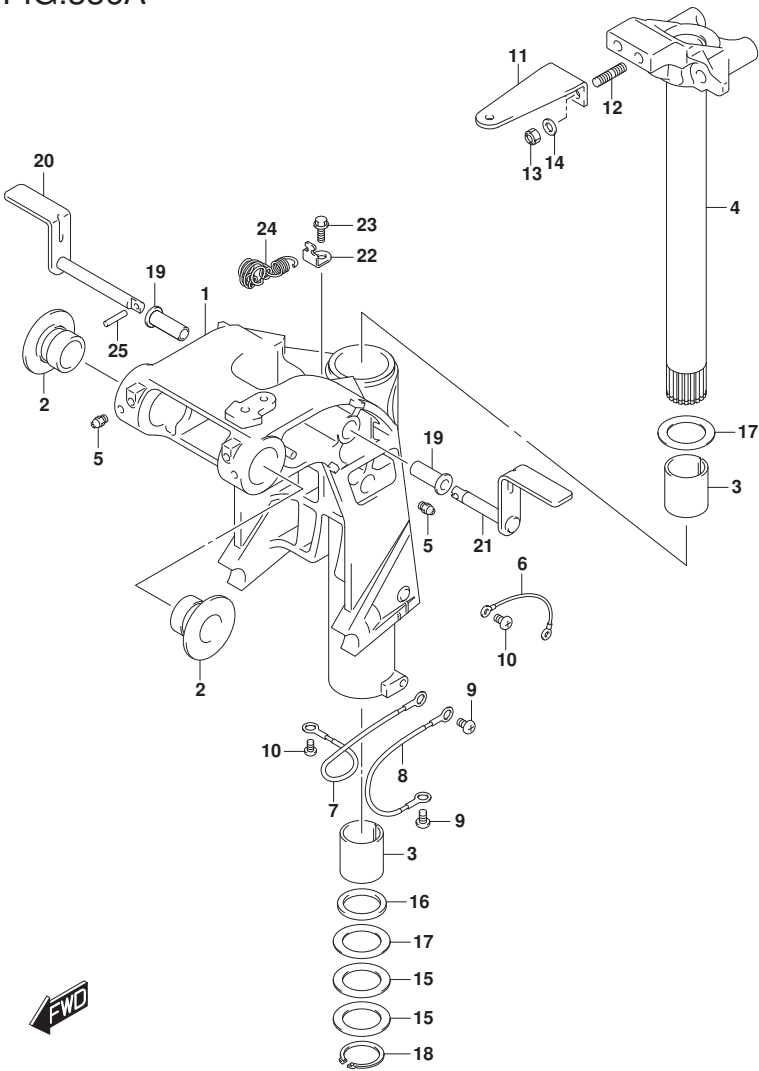


FIG.336A (1-J-13) SWIVEL BRACKET (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	43111-88L31-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(S)
1-2	43111-88L31-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(S)
1-3	43111-88L21-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(L)
1-4	43111-88L21-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(L)
1-5	43111-88L31-QTN	BRACKET, SWIVEL (WHITE)	1	(021,022):W/TRANSOM(S)
1-6	43111-88L31-YAY	BRACKET, SWIVEL (BLACK)	1	(021,022):W/TRANSOM(S)
1-7	43111-88L21-QTN	BRACKET, SWIVEL (WHITE)	1	(021,022):W/TRANSOM(L)
1-8	43111-88L21-YAY	BRACKET, SWIVEL (BLACK)	1	(021,022):W/TRANSOM(L)
2	43211-87J00	BUSH, SWIVEL BRACKET	2	
3	43711-89J10	BUSH, STEERING	2	
4-1	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(S)
4-2	43750-88L32-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(S)
4-3	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(L)
4-4	43750-88L22-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(L)
4-5	43750-88L32-QTN	BRACKET, STEERING (WHITE)	1	(021,022):W/TRANSOM(S)
4-6	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	(021,022):W/TRANSOM(S)
4-7	43750-88L22-QTN	BRACKET, STEERING (WHITE)	1	(021,022):W/TRANSOM(L)
4-8	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	(021,022):W/TRANSOM(L)
5	22511-99011	NIPPLE, GREASE	3	
6	36894-95201	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	2	
10	09125-05050	SCREW (5X8)	3	
11	43755-88L00	ATTACHMENT, STEERING BRACKET	1	
12	09108-10161	STUD BOLT (10X20)	2	
13	09159-10050	NUT (10X14)	2	
14	09160-10165	WASHER	2	
15	09160-39003	WASHER (39.5X58X0.3)	2	
16	09282-39001	OIL SEAL (39X51X5)	1	
17	09160-39002	WASHER (39.5X58X1)	2	
18	09380-38003	CIRCLIP	1	
19	41226-97E00	BUSH, TILT LOCK LEVER	2	
20	41270-89J11	LEVER, TILT LOCK STBD	1	STBD
21	41280-89J04	LEVER, TILT LOCK PORT	1	PORT
22	45731-96312	BRACKET, SPRING	1	

FIG.336A

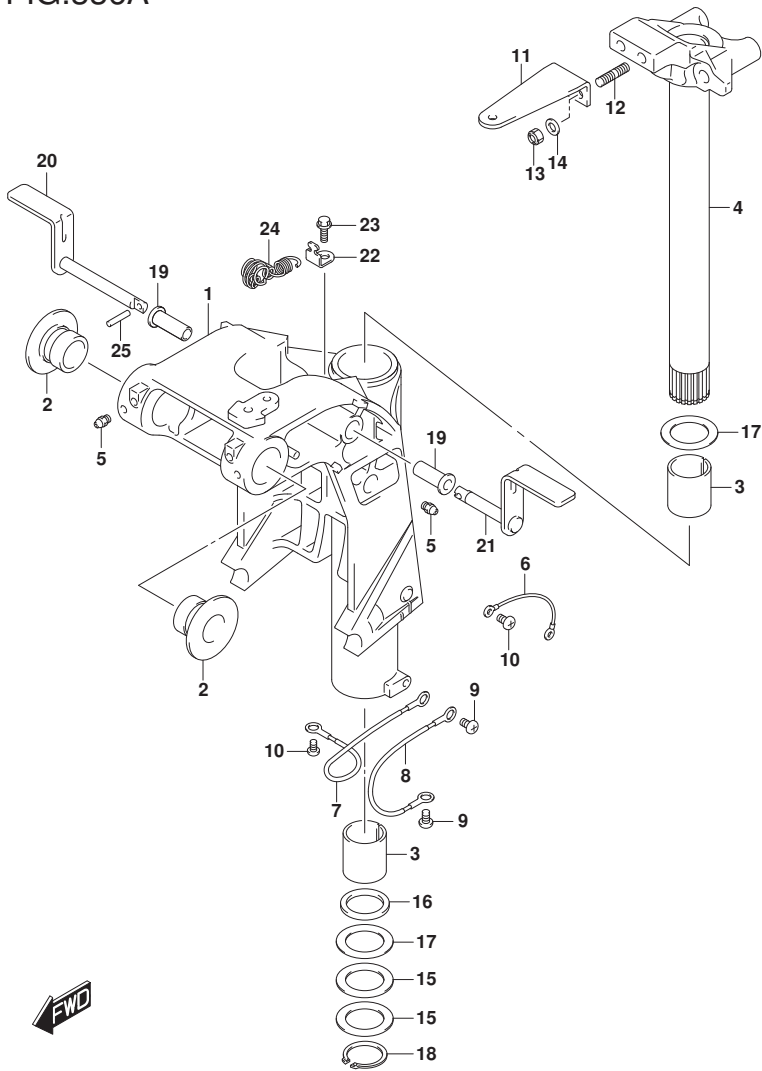


FIG.336A (1-J-14) SWIVEL BRACKET (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
23	09116-06236	BOLT (6X16)	1	
24	41230-97E10	SPRING, TILT LOCK	1	
25	09205-03051	PIN (3X16)	1	

DF40A E01
DF40A E03
DF40A E11
DF50A E01
DF50A E03
DF50A E11



FIG.336B

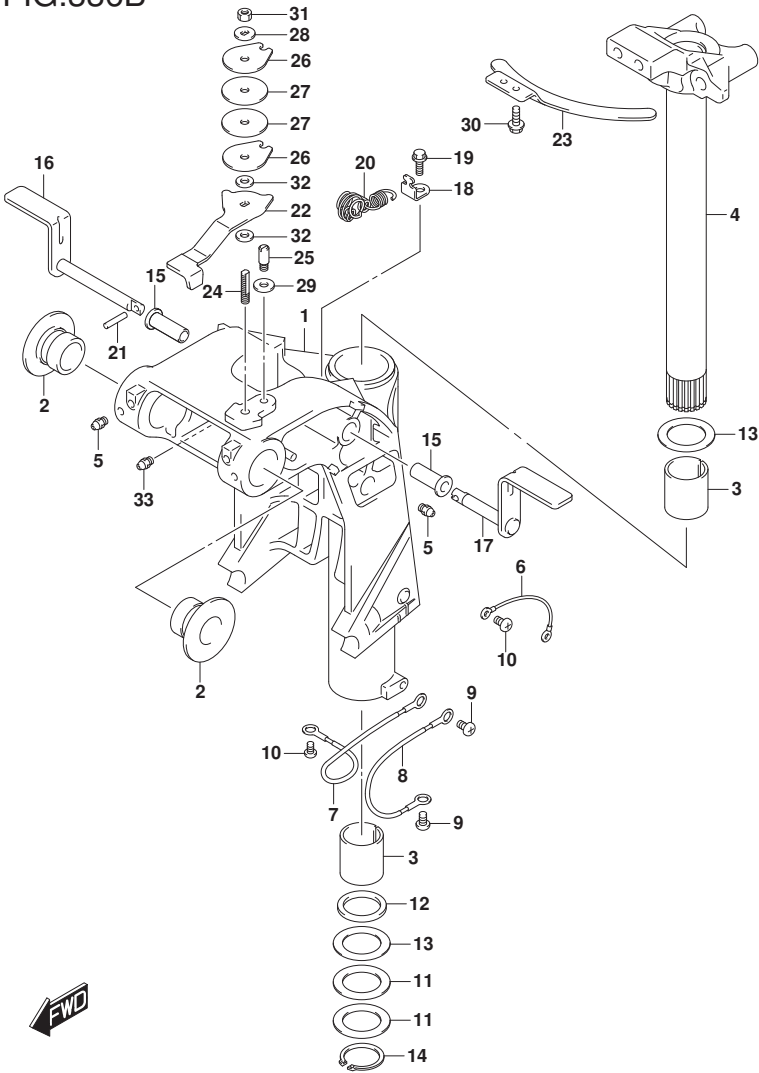


FIG.336B (1-K-2) SWIVEL BRACKET (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43111-88L21-YAY	BRACKET SWIVEL (BLACK)	1	
2	43211-87J00	BUSH, SWIVEL BRACKET	2	
3	43711-89J10	BUSH, STEERING	2	
4	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	
5	22511-99011	NIPPLE, GREASE	3	
6	36894-95201	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	2	
10	09125-05050	SCREW (5X8)	3	
11	09160-39003	WASHER (39.5X58X0.3)	2	
12	09282-39001	OIL SEAL (39X51X5)	1	
13	09160-39002	WASHER (39.5X58X1)	2	
14	09380-38003	CIRCLIP	1	
15	41226-97E00	BUSH, TILT LOCK LEVER	2	
16	41270-89J11	LEVER, TILT LOCK STBD	1	STBD
17	41280-89J04	LEVER, TILT LOCK PORT	1	PORT
18	45731-96312	BRACKET, SPRING	1	
19	09116-06236	BOLT (6X16)	1	
20	41230-97E10	SPRING, TILT LOCK	1	
21	09205-03051	PIN (3X16)	1	
22	43411-88L01	ADJUSTER, STEERING	1	
23	43415-88L00	PLATE, STEERING ADJUSTER	1	
24	43512-88L00	SHAFT, STRG ADJUSTER THREAD	1	
25	43513-88L00	BOLT, STEERING ADJUSTER	1	
26	43514-88L00	PLATE, STRG ADJUSTER FRICTION	2	
27	43515-88L00	WASHER, STRG ADJ FRICTION	2	
		PLATE		
28	43516-88L00	WASHER, STRG ADJUSTER FRICTION	1	
29	43517-88L00	SPACER, STEERING ADJUSTER	1	
30	09116-06237	BOLT (6X15)	2	
31	09159-08059	NUT (M8)	1	

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH

FIG.336B

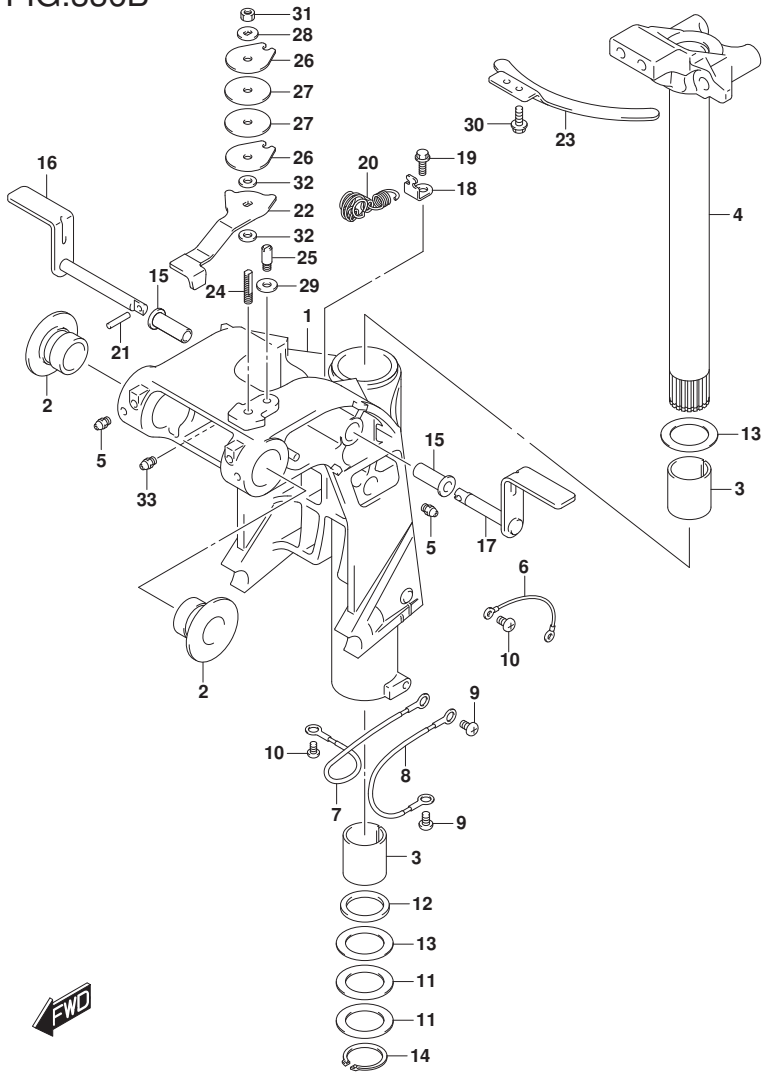


FIG.336B (1-K-3) SWIVEL BRACKET (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	09161-08011	WASHER (8.2X18X1.2)	2	
33	22511-99011	NIPPLE, GREASE	1	

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH

DF40AQH E01
DF40ATH E01
DF50ATH E01
DF60AQH E40



FIG.336C

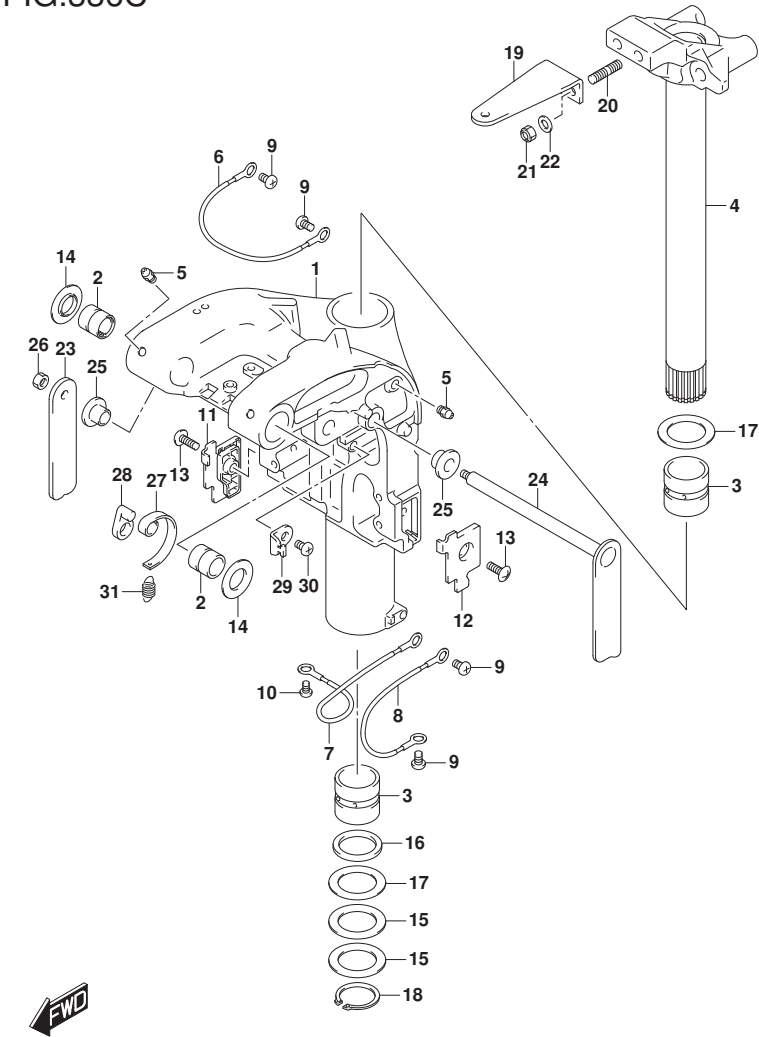


FIG.336C (1-K-4) SWIVEL BRACKET (DF40AST)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(S)
1-2	43111-88L50-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(S)
1-3	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(L)
1-4	43111-88L40-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(L)
1-5	43111-88L50-QTN	BRACKET, SWIVEL (WHITE)	1	(021,022):W/TRANSOM(S)
1-6	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	(021,022):W/TRANSOM(S)
1-7	43111-88L40-QTN	BRACKET, SWIVEL (WHITE)	1	(021,022):W/TRANSOM(L)
1-8	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	(021,022):W/TRANSOM(L)
2	43211-88L00	BUSH, SWIVEL BRACKET	2	
3	43711-97E11	BUSH, STEERING	2	
4-1	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(S)
4-2	43750-88L32-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(S)
4-3	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(L)
4-4	43750-88L22-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(L)
4-5	43750-88L32-QTN	BRACKET, STEERING (WHITE)	1	(021,022):W/TRANSOM(S)
4-6	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	(021,022):W/TRANSOM(S)
4-7	43750-88L22-QTN	BRACKET, STEERING (WHITE)	1	(021,022):W/TRANSOM(L)
4-8	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	(021,022):W/TRANSOM(L)
5	22511-99011	NIPPLE, GREASE	4	
6	36894-87D00	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	4	
10	09125-05050	SCREW (5X8)	1	
11	43119-88L00	PLATE, SWIVEL BRKT LOWER STBD	1	LOWER,STBD
12	43119-88L10	PLATE, SWIVEL BRKT LOWER PORT	1	LOWER,PORT
13	09125-06067	SCREW (6X16)	2	
14	43114-88L00	WASHER, SWIVEL TO CLAMP BRKT	2	
15	09160-39003	WASHER (39.5X58X0.3)	2	
16	09282-39001	OIL SEAL (39X51X5)	1	
17	09160-39002	WASHER (39.5X58X1)	2	
18	09380-38003	CIRCLIP	1	
19	43755-88L00	ATTACHMENT, STEERING BRACKET	1	
20	09108-10161	STUD BOLT (10X20)	2	
21	09159-10050	NUT (10X14)	2	
22	09160-10165	WASHER	2	

FIG.336C (1-K-5) SWIVEL BRACKET (DF40AST)

DF60A_E11_022

FIG.336D

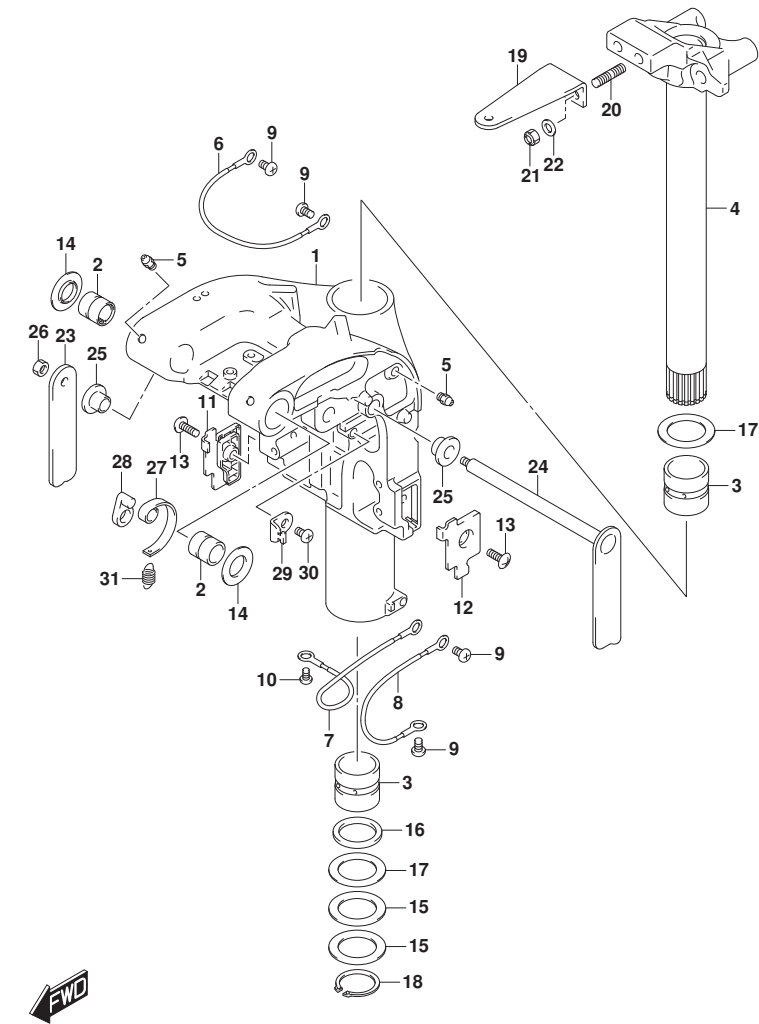


FIG.336D (1-K-6) SWIVEL BRACKET (DF60A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(S)
1-2	43111-88L50-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(S)
1-3	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(L)
1-4	43111-88L40-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(L)
1-5	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(X)
1-6	43111-88L40-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(X)
1-7	43111-88L50-QTN	BRACKET, SWIVEL (WHITE)	1	(021,(E11:022)):W/TRANSOM(S)
1-8	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	(021,(E11:022)):W/TRANSOM(S)
1-9	43111-88L40-QTN	BRACKET, SWIVEL (WHITE)	1	(021,022):W/TRANSOM(L)
1-10	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	(021,022):W/TRANSOM(L)
1-11	43111-88L40-QTN	BRACKET, SWIVEL (WHITE)	1	(021,022):W/TRANSOM(X)
1-12	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	(021,022):W/TRANSOM(X)
2	43211-88L00	BUSH, SWIVEL BRACKET	2	
3	43711-97E11	BUSH, STEERING	2	
4-1	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(S)
4-2	43750-88L32-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(S)
4-3	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(L)
4-4	43750-88L22-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(L)
4-5	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(X)
4-6	43750-88L22-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(X)
4-7	43750-88L32-QTN	BRACKET, STEERING (WHITE)	1	(021,(E11:022)):W/TRANSOM(S)
4-8	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	(021,(E11:022)):W/TRANSOM(S)
4-9	43750-88L22-QTN	BRACKET, STEERING (WHITE)	1	(021,022):W/TRANSOM(L)
4-10	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	(021,022):W/TRANSOM(L)
4-11	43750-88L22-QTN	BRACKET, STEERING (WHITE)	1	(021,022):W/TRANSOM(X)
4-12	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	(021,022):W/TRANSOM(X)
5	22511-99011	NIPPLE, GREASE	4	
6	36894-87D00	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	4	
10	09125-05050	SCREW (5X8)	1	
11	43119-88L00	PLATE, SWIVEL BRKT LOWER STBD	1	LOWER,STBD
12	43119-88L10	PLATE, SWIVEL BRKT LOWER PORT	1	LOWER,PORT
13	09125-06067	SCREW (6X16)	2	
14	43114-88L00	WASHER, SWIVEL TO CLAMP BRKT	2	

FIG.336D

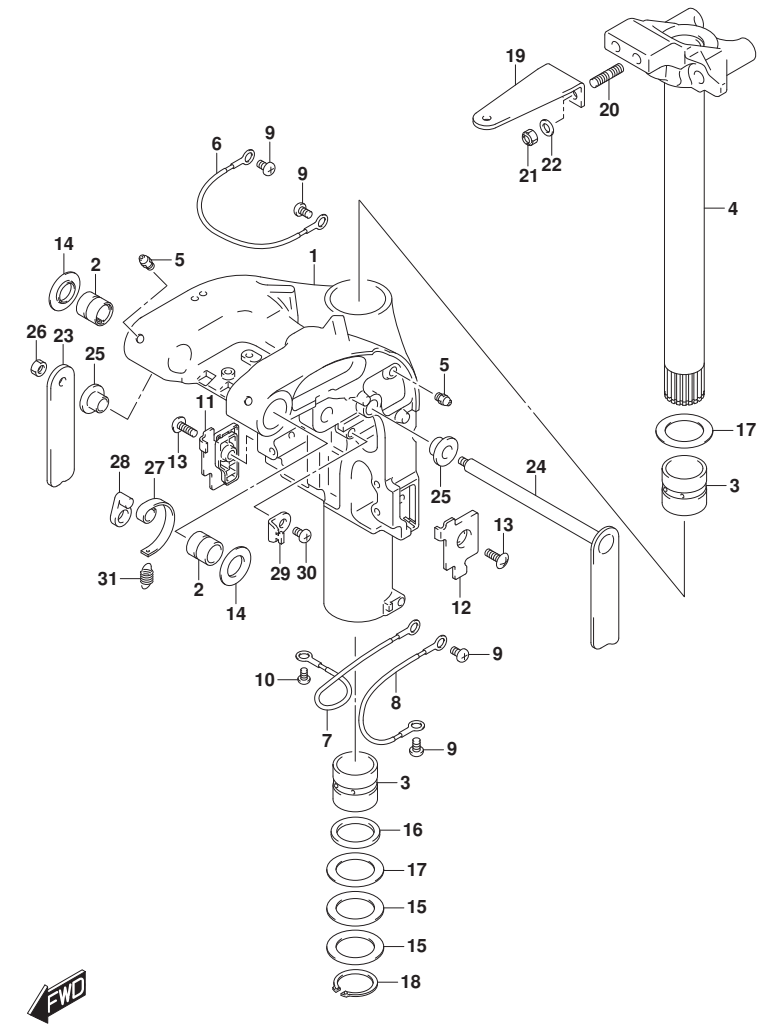


FIG.336D (1-K-7) SWIVEL BRACKET (DF60A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15	09160-39003	WASHER (39.5X58X0.3)	2	
16	09282-39001	OIL SEAL (39X51X5)	1	
17	09160-39002	WASHER (39.5X58X1)	2	
18	09380-38003	CIRCLIP	1	
19	43755-88L00	ATTACHMENT, STEERING BRACKET	1	
20	09108-10161	STUD BOLT (10X20)	2	
21	09159-10050	NUT (10X14)	2	
22	09160-10165	WASHER	2	
23	41221-88L00	LEVER, TILT LOCK STBD	1	STBD
24	41280-88L10	LEVER, TILT LOCK PORT	1	PORT
25	41224-88L00	BUSH, TILT LOCK LEVER	2	
26	29141-93J00	NUT (M6)	1	STBD
27	41231-88L01	LINK, TILT LOCK LEVER	1	
28	41234-88L00	ARM, TILT LOCK LINK	1	
29	45731-96312	BRACKET, SPRING	1	
30	09125-06063	SCREW (6X10)	1	
31	09443-10043	SPRING	1	

DF60A E01
DF60A E03
DF60A E11
DF60A E40

FIG.336E

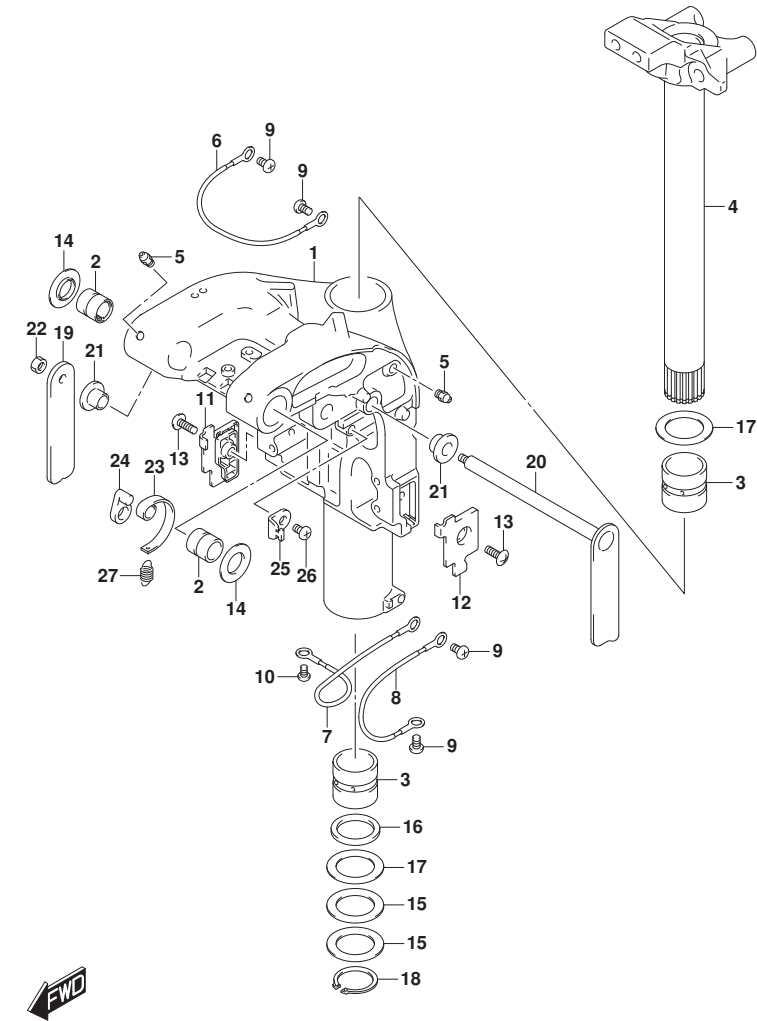


FIG.336E (1-K-8) SWIVEL BRACKET (DF60ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	
2	43211-88L00	BUSH, SWIVEL BRACKET	2	
3	43711-97E11	BUSH, STEERING	2	
4	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	
5	22511-99011	NIPPLE, GREASE	4	
6	36894-87D00	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	4	
10	09125-05050	SCREW (5X8)	1	
11	43119-88L00	PLATE, SWIVEL BRKT LOWER STBD	1	LOWER,STBD
12	43119-88L10	PLATE, SWIVEL BRKT LOWER PORT	1	LOWER,PORT
13	09125-06067	SCREW (6X16)	2	
14	43114-88L00	WASHER, SWIVEL TO CLAMP BRKT	2	
15	09160-39003	WASHER (39.5X58X0.3)	2	
16	09282-39001	OIL SEAL (39X51X5)	1	
17	09160-39002	WASHER (39.5X58X1)	2	
18	09380-38003	CIRCLIP	1	
19	41221-88L00	LEVER, TILT LOCK STBD	1	STBD
20	41280-88L10	LEVER, TILT LOCK PORT	1	PORT
21	41224-88L00	BUSH, TILT LOCK LEVER	2	
22	29141-93J00	NUT (M6)	1	STBD
23	41231-88L01	LINK, TILT LOCK LEVER	1	
24	41234-88L00	ARM, TILT LOCK LINK	1	
25	45731-96312	BRACKET, SPRING	1	
26	09125-06063	SCREW (6X10)	1	
27	09443-10043	SPRING	1	

DF60ATH E01
DF60ATH E40



FIG.336F

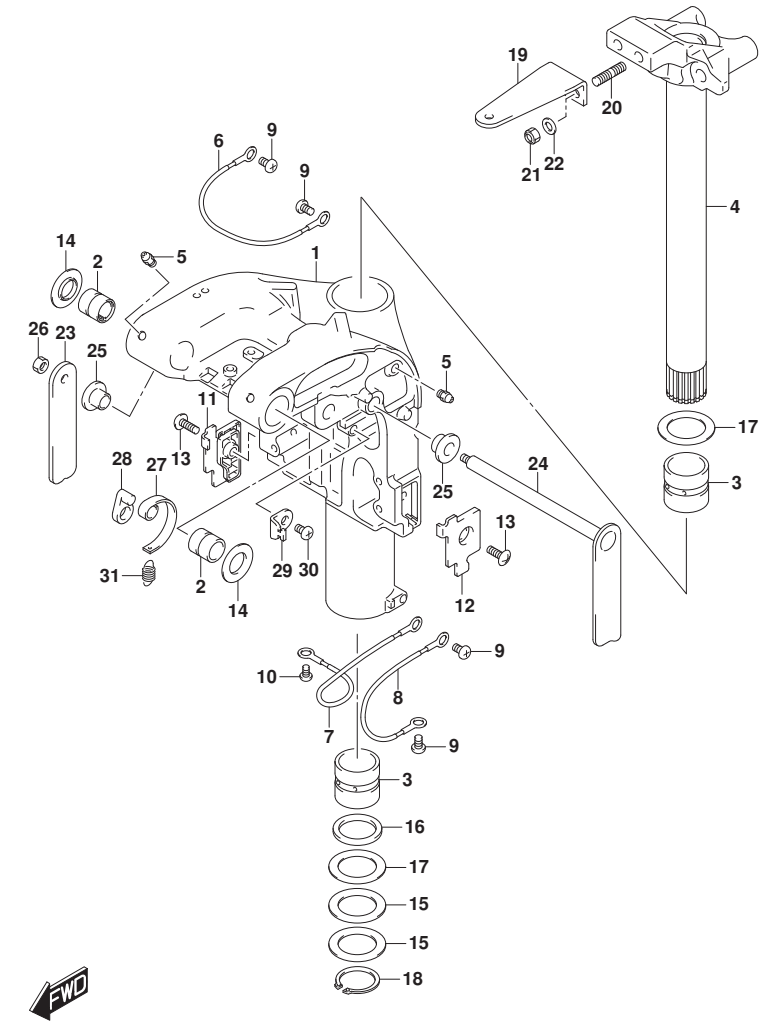


FIG.336F (1-K-9) SWIVEL BRACKET (DF50AVT,DF60AVT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(L)
1-2	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(X)
2	43211-88L00	BUSH, SWIVEL BRACKET	2	
3	43711-97E11	BUSH, STEERING	2	
4-1	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(L)
4-2	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(X)
5	22511-99011	NIPPLE, GREASE	4	
6	36894-87D00	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	4	
10	09125-05050	SCREW (5X8)	1	
11	43119-88L00	PLATE, SWIVEL BRKT LOWER STBD	1	LOWER,STBD
12	43119-88L10	PLATE, SWIVEL BRKT LOWER PORT	1	LOWER,PORT
13	09125-06067	SCREW (6X16)	2	
14	43114-88L00	WASHER, SWIVEL TO CLAMP BRKT	2	
15	09160-39003	WASHER (39.5X58X0.3)	2	
16	09282-39001	OIL SEAL (39X51X5)	1	
17	09160-39002	WASHER (39.5X58X1)	2	
18	09380-38003	CIRCLIP	1	
19	43755-88L00	ATTACHMENT, STEERING BRACKET	1	
20	09108-10161	STUD BOLT (10X20)	2	
21	09159-10050	NUT (10X14)	2	
22	09160-10165	WASHER	2	
23	41221-88L00	LEVER, TILT LOCK STBD	1	STBD
24	41280-88L10	LEVER, TILT LOCK PORT	1	PORT
25	41224-88L00	BUSH, TILT LOCK LEVER	2	
26	29141-93J00	NUT (M6)	1	STBD
27	41231-88L01	LINK, TILT LOCK LEVER	1	
28	41234-88L00	ARM, TILT LOCK LINK	1	
29	45731-96312	BRACKET, SPRING	1	
30	09125-06063	SCREW (6X10)	1	

FIG.336F

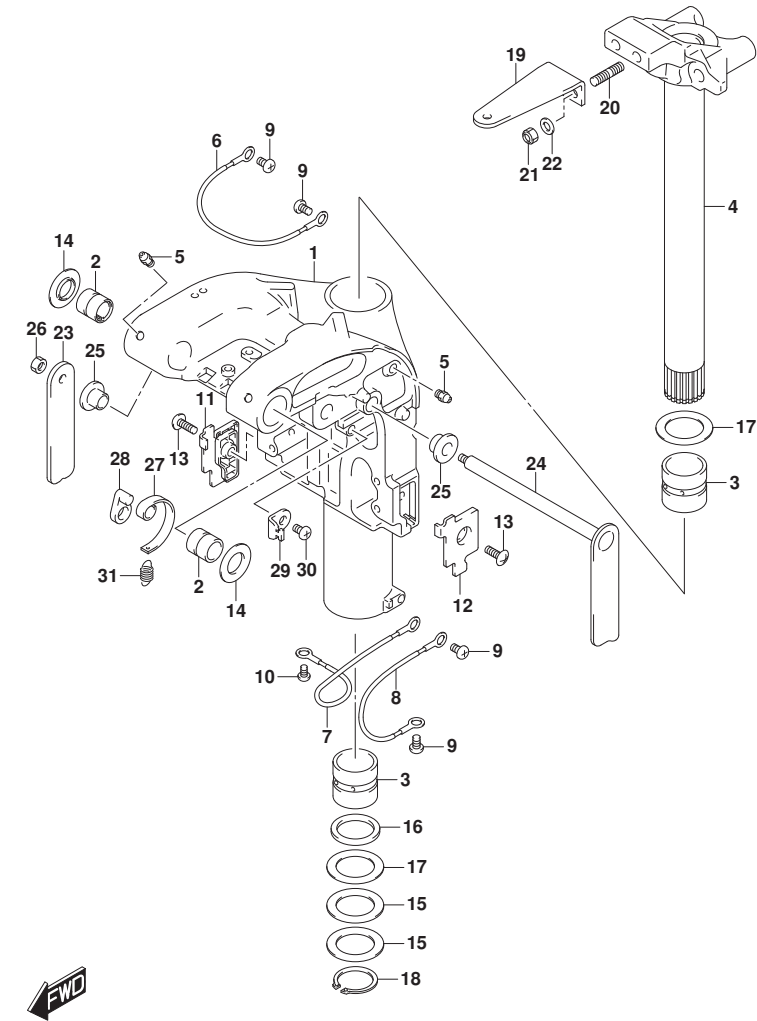


FIG.336F (1-K-10) SWIVEL BRACKET (DF50AVT,DF60AVT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
31	09443-10043	SPRING	1	

DF50AVT E03
DF60AVT E01
DF60AVT E03
DF60AVT E11
DF60AVT E40



FIG.336G

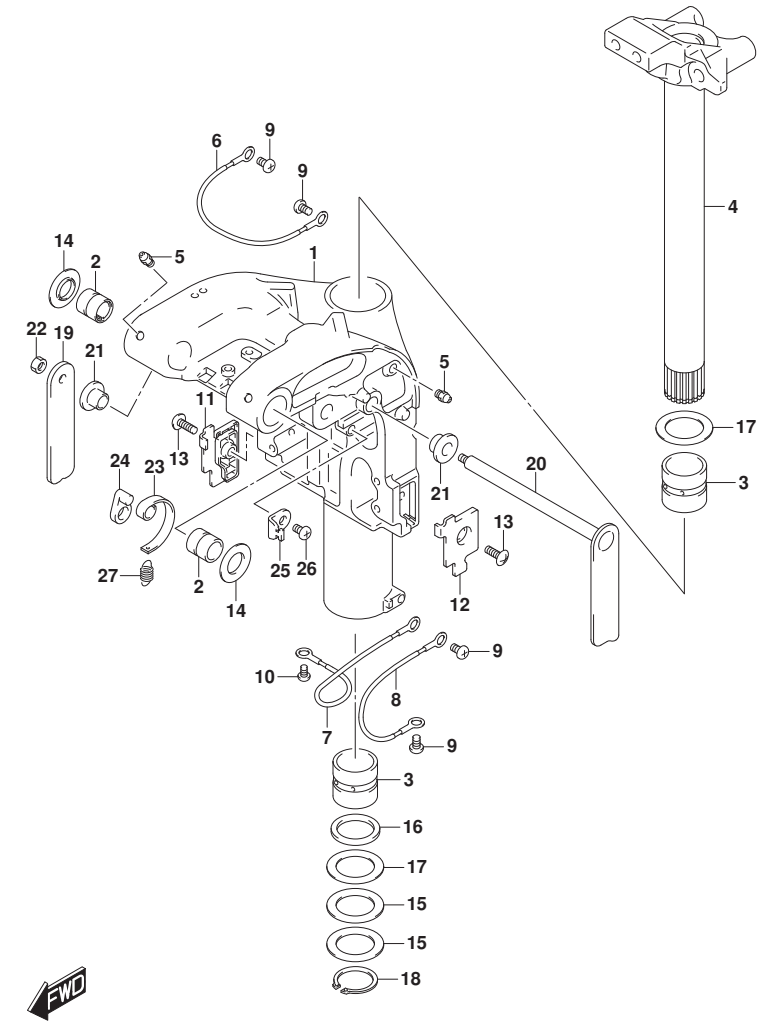


FIG.336G (1-K-11) SWIVEL BRACKET (DF50AVTH,DF60AVTH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(L)
1-2	43111-88L40-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(X)
2	43211-88L00	BUSH, SWIVEL BRACKET	2	
3	43711-97E11	BUSH, STEERING	2	
4-1	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(L)
4-2	43750-88L22-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(X)
5	22511-99011	NIPPLE, GREASE	4	
6	36894-87D00	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	4	
10	09125-05050	SCREW (5X8)	1	
11	43119-88L00	PLATE, SWIVEL BRKT LOWER STBD	1	LOWER,STBD
12	43119-88L10	PLATE, SWIVEL BRKT LOWER PORT	1	LOWER,PORT
13	09125-06067	SCREW (6X16)	2	
14	43114-88L00	WASHER, SWIVEL TO CLAMP BRKT	2	
15	09160-39003	WASHER (39.5X58X0.3)	2	
16	09282-39001	OIL SEAL (39X51X5)	1	
17	09160-39002	WASHER (39.5X58X1)	2	
18	09380-38003	CIRCLIP	1	
19	41221-88L00	LEVER, TILT LOCK STBD	1	STBD
20	41280-88L10	LEVER, TILT LOCK PORT	1	PORT
21	41224-88L00	BUSH, TILT LOCK LEVER	2	
22	29141-93J00	NUT (M6)	1	STBD
23	41231-88L01	LINK, TILT LOCK LEVER	1	
24	41234-88L00	ARM, TILT LOCK LINK	1	
25	45731-96312	BRACKET, SPRING	1	
26	09125-06063	SCREW (6X10)	1	
27	09443-10043	SPRING	1	

DF50AVTH E01
DF60AVTH E40

FIG.336H

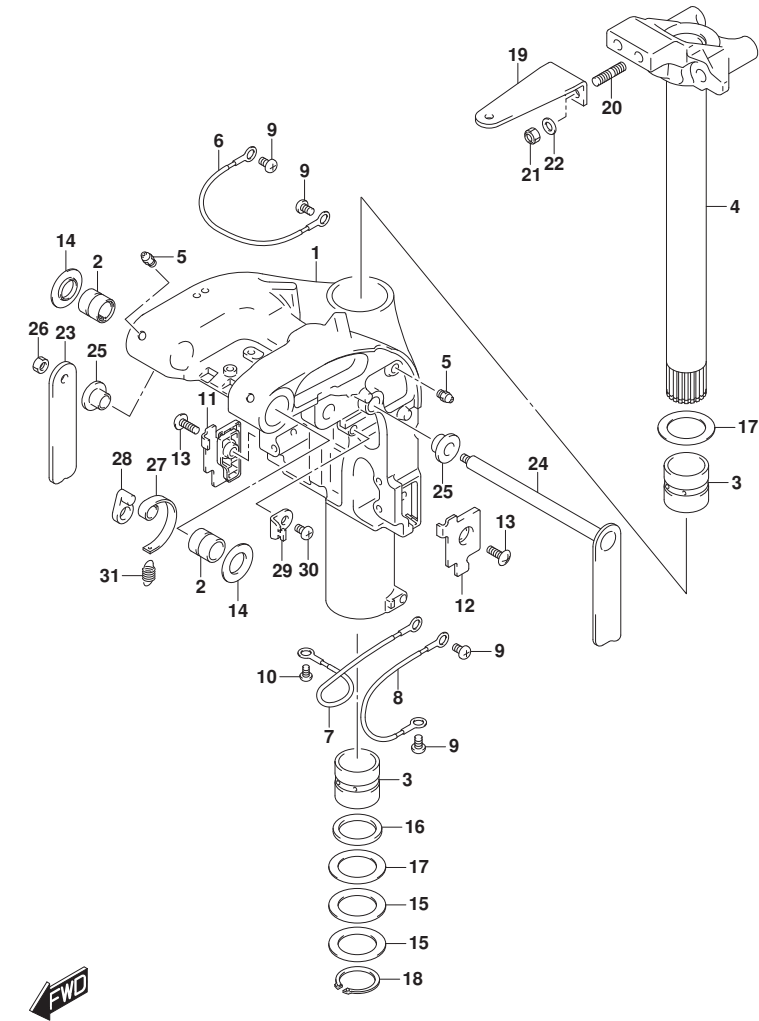


FIG.336H (1-K-12) SWIVEL BRACKET (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	020:W/TRANSOM(L)
1-2	43111-88L50-Y5S	BRACKET, SWIVEL (WHITE)	1	020:W/TRANSOM(L)
1-3	43111-88L50-QTN	BRACKET, SWIVEL (WHITE)	1	(021,022):W/TRANSOM(L)
1-4	43111-88L50-YAY	BRACKET, SWIVEL (BLACK)	1	(021,022):W/TRANSOM(L)
2	43211-88L00	BUSH, SWIVEL BRACKET	2	
3	43711-97E11	BUSH, STEERING	2	
4-1	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	020:W/TRANSOM(L)
4-2	43750-88L32-Y5S	BRACKET, STEERING (WHITE)	1	020:W/TRANSOM(L)
4-3	43750-88L32-QTN	BRACKET, STEERING (WHITE)	1	(021,022):W/TRANSOM(L)
4-4	43750-88L32-YAY	BRACKET, STEERING (BLACK)	1	(021,022):W/TRANSOM(L)
5	22511-99011	NIPPLE, GREASE	4	
6	36894-87D00	LEAD (L:165)	1	CLAMP TO SWIVEL
7	36895-87D01	LEAD (L:230)	1	SWIVEL TO MOUNT BRKT
8	36895-87D01	LEAD (L:230)	1	SWIVEL TO HOUSING
9	09125-06063	SCREW (6X10)	4	
10	09125-05050	SCREW (5X8)	1	
11	43119-88L00	PLATE, SWIVEL BRKT LOWER STBD	1	LOWER,STBD
12	43119-88L10	PLATE, SWIVEL BRKT LOWER PORT	1	LOWER,PORT
13	09125-06067	SCREW (6X16)	2	
14	43114-88L00	WASHER, SWIVEL TO CLAMP BRKT	2	
15	09160-39003	WASHER (39.5X58X0.3)	2	
16	09282-39001	OIL SEAL (39X51X5)	1	
17	09160-39002	WASHER (39.5X58X1)	2	
18	09380-38003	CIRCLIP	1	
19	43755-88L00	ATTACHMENT, STEERING BRACKET	1	
20	09108-10161	STUD BOLT (10X20)	2	
21	09159-10050	NUT (10X14)	2	
22	09160-10165	WASHER	2	
23	41221-88L00	LEVER, TILT LOCK STBD	1	STBD
24	41280-88L10	LEVER, TILT LOCK PORT	1	PORT
25	41224-88L00	BUSH, TILT LOCK LEVER	2	
26	29141-93J00	NUT (M6)	1	STBD
27	41231-88L01	LINK, TILT LOCK LEVER	1	
28	41234-88L00	ARM, TILT LOCK LINK	1	
29	45731-96312	BRACKET, SPRING	1	
30	09125-06063	SCREW (6X10)	1	



FIG.336H

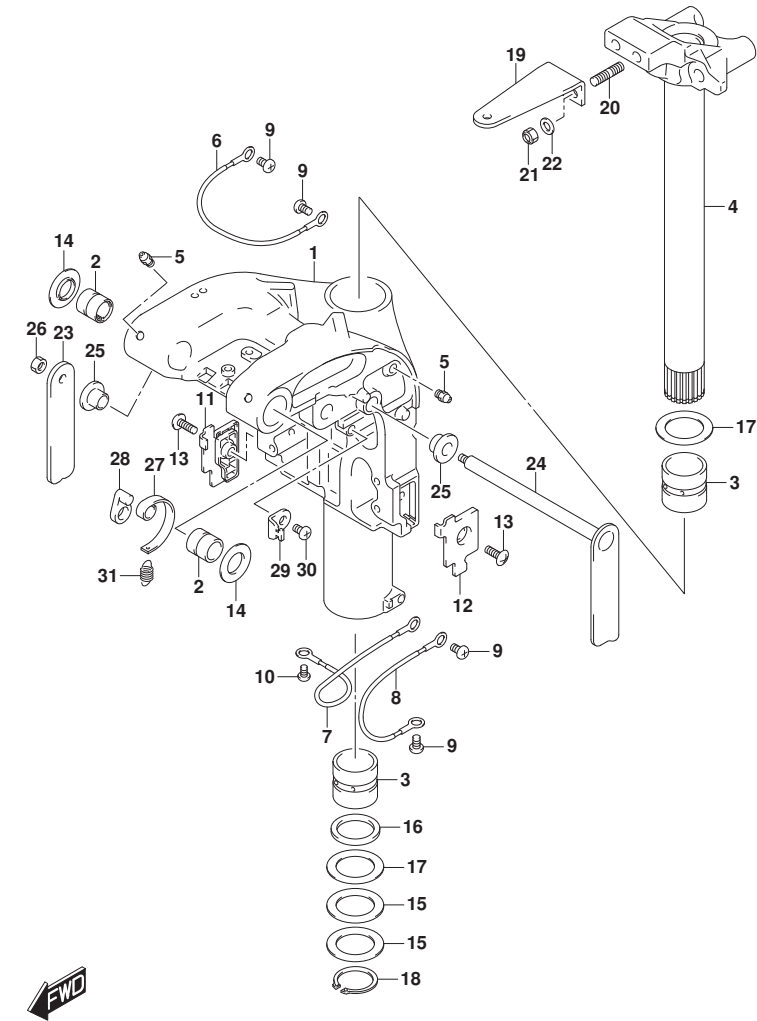



FIG.336H (1-K-13) SWIVEL BRACKET (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
31	09443-10043	SPRING	1	

DF40ASVT E34



FIG.337A

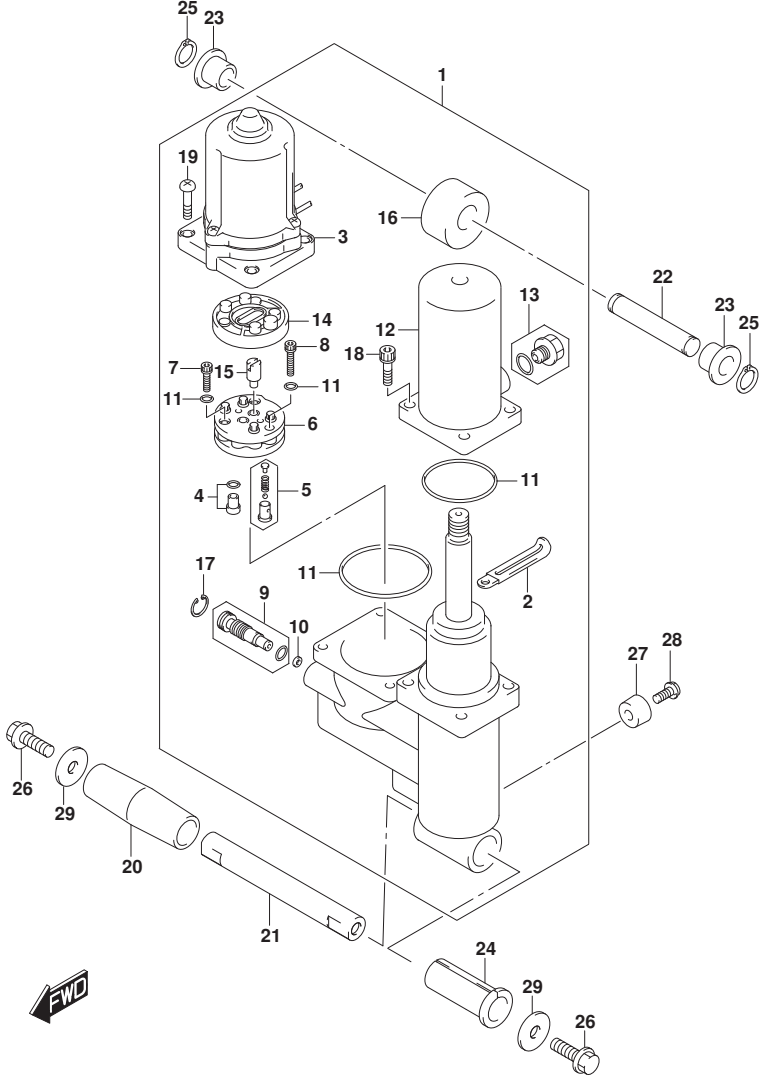

DF60A_E11_022_337A
TRIM CYLINDER

FIG.337A (1-K-14) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-88L18	TRIM ASSY, POWER WITH TILT	1	
2	29404-93J11	.CLAMP (L:65)	1	
3	38100-88L12	.MOTOR ASSY, PTT	1	
4	48320-87J10	.VALVE, UPPER PRESSURE	1	UPPER
5	48330-87J10	.VALVE, DOWN PRESSURE	1	
6	48510-97E00	.PUMP ASSY, GEAR	1	
7	48541-87J10	.BOLT	2	
8	48541-87J20	.BOLT	1	
9	48551-88L00	.VALVE, MANUAL	1	
10	48553-88L00	.SEAL, WASHER	1	
11	48557-87J10	.O RING SET	1	
12	48571-88L01	.TANK, RESERVOIR	1	
13	48572-87L00	.PLUG	1	
14	48582-97E01	.FILTER	1	
15	48583-87J10	.JOINT, DRIVE	1	
16	48611-88L00	.JOINT, METAL	1	
17	48681-87J11	.CIRCLIP	1	
18	48862-87J20	.BOLT, RESERVOIR	4	
19	48862-88L00	.SCREW, PTT MOTOR	4	
20	47225-87J00	COLLAR, TILT CYLINDER LOWER	1	LOWER
21	48121-89J10	SHAFT, TILT CYL LOWER	1	LOWER
22	48321-89J11	SHAFT, TILT CYLINDER UPPER	1	UPPER
23	48325-89J00	BUSH, TILT CYL UPPER	2	UPPER
24	48326-87J00	BUSH, TILT CYLINDER LOWER	1	LOWER
25	09380-12002	SNAP RING	2	
26	09116-10179	BOLT (10X35)	2	
27	55321-87J01	ANODE, PROTECTION	1	
28	09103-06281	BOLT (6X14)	1	

NOTE : (DF40A,DF40ATH,DF50A,DF50ATH):(020,021)

FIG.337A

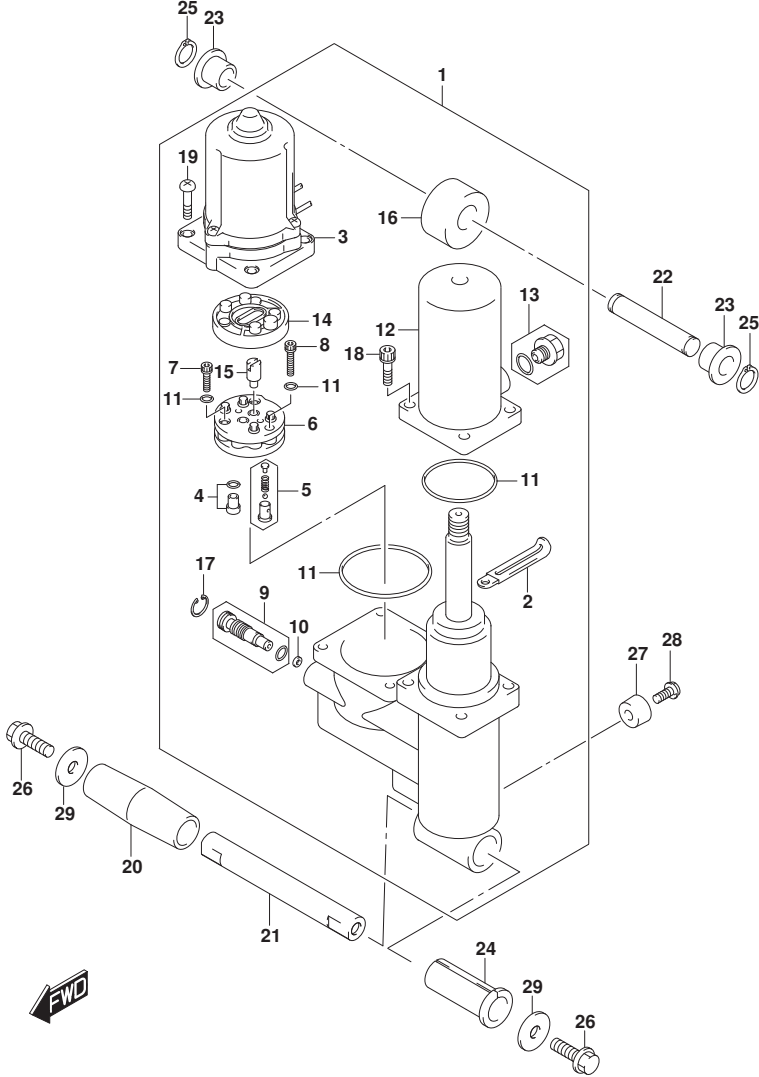


FIG.337A (1-K-15) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	09160-10139	WASHER (10.5X35X3)	2	

NOTE : (DF40A,DF40ATH,DF50A,DF50ATH):(020,021)

- DF40A E01
- DF40A E03
- DF40A E11
- DF40ATH E01
- DF50A E01
- DF50A E03
- DF50A E11
- DF50ATH E01

FIG.337B

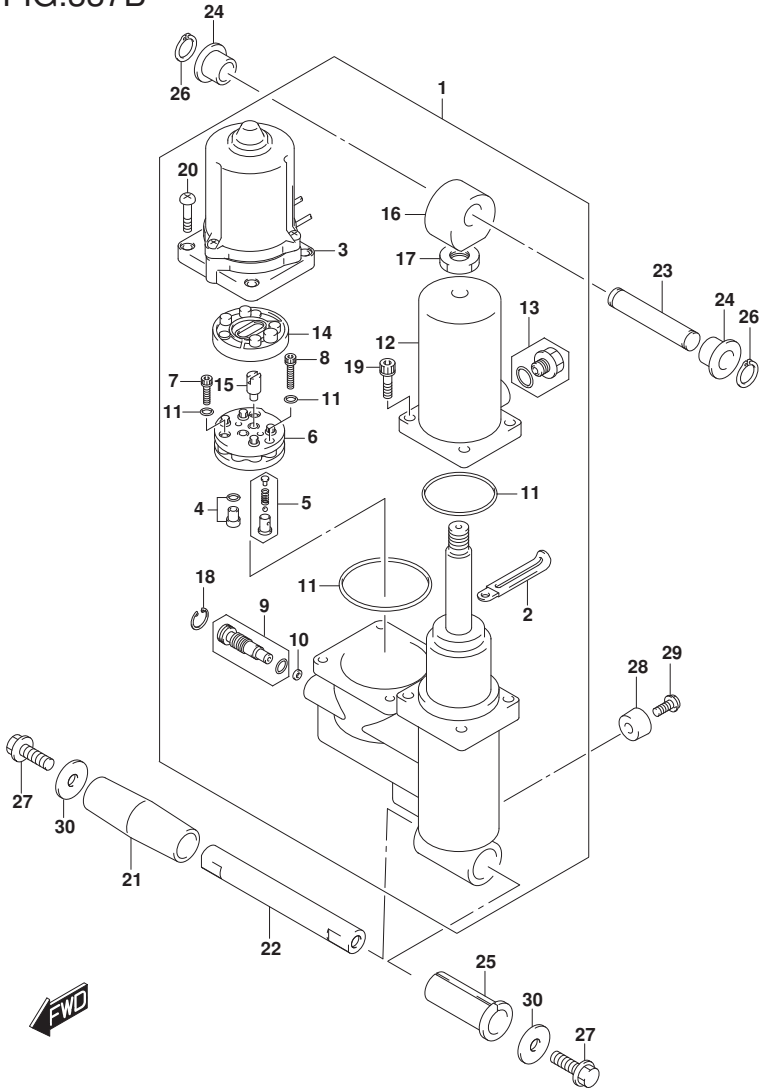


FIG.337B (1-L-2) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-88L30	TRIM ASSY, POWER WITH TILT	1	
2	29404-93J11	.CLAMP (L:65)	1	
3	38100-88L12	.MOTOR ASSY, PTT	1	
4	48320-87J10	.VALVE, UPPER PRESSURE	1	UPPER
5	48330-87J10	.VALVE, DOWN PRESSURE	1	
6	48510-97E00	.PUMP ASSY, GEAR	1	
7	48541-87J10	.BOLT	2	
8	48541-87J20	.BOLT	1	
9	48551-88L00	.VALVE, MANUAL	1	
10	48553-88L00	.SEAL, WASHER	1	
11	48557-87J10	.O RING SET	1	
12	48571-88L01	.TANK, RESERVOIR	1	
13	48572-87L00	.PLUG	1	
14	48582-97E01	.FILTER	1	
15	48583-87J10	.JOINT, DRIVE	1	
16	48611-88L10	.JOINT, METAL	1	
17	48612-88L00	.NUT	1	
18	48681-87J11	.CIRCLIP	1	
19	48862-87J20	.BOLT, RESERVOIR	4	
20	48862-88L00	.SCREW, PTT MOTOR	4	
21	47225-87J00	COLLAR, TILT CYLINDER LOWER	1	LOWER
22	48121-89J10	SHAFT, TILT CYL LOWER	1	LOWER
23	48321-89J11	SHAFT, TILT CYLINDER UPPER	1	UPPER
24	48325-89J00	BUSH, TILT CYL UPPER	2	UPPER
25	48326-87J00	BUSH, TILT CYLINDER LOWER	1	LOWER
26	09380-12002	SNAP RING	2	
27	09116-10179	BOLT (10X35)	2	
28	55321-87J01	ANODE, PROTECTION	1	
29	09103-06281	BOLT (6X14)	1	

NOTE : (DF40A,DF40ATH,DF50A,DF50ATH):022

FIG.337B

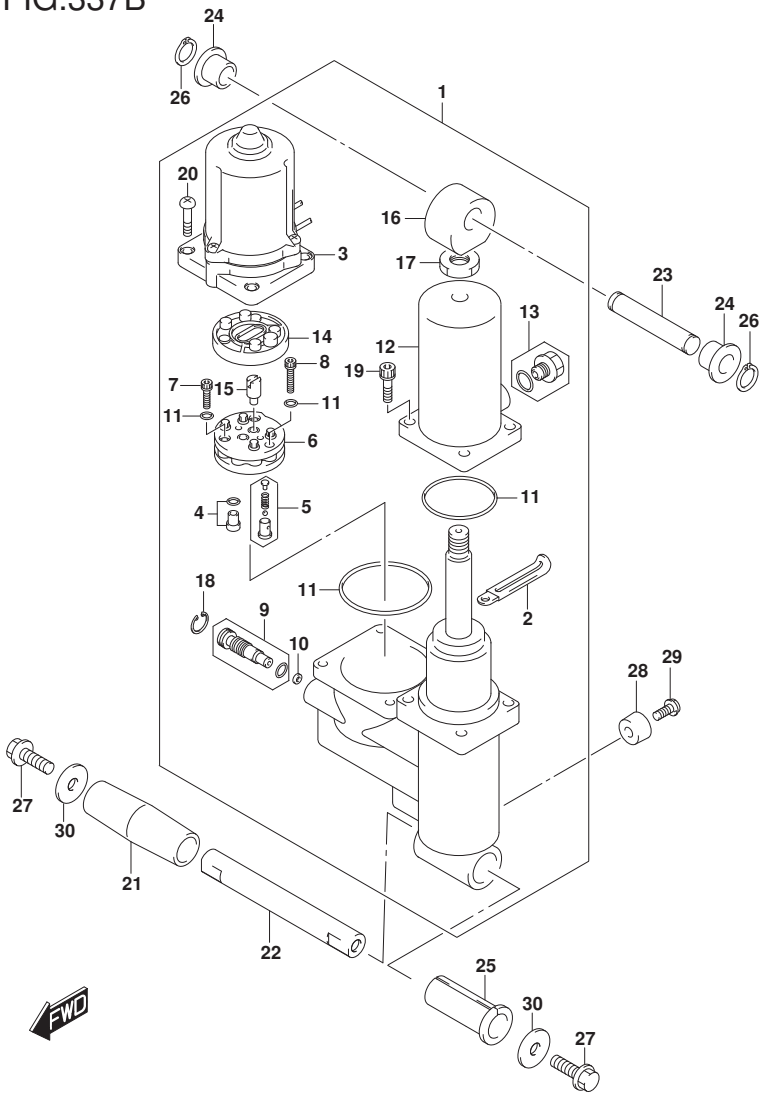


FIG.337B (1-L-3) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	09160-10139	WASHER (10.5X35X3)	2	

NOTE : (DF40A,DF40ATH,DF50A,DF50ATH):022

DF40A E11
DF40ATH E01
DF50A E11
DF50ATH E01

FIG.337C

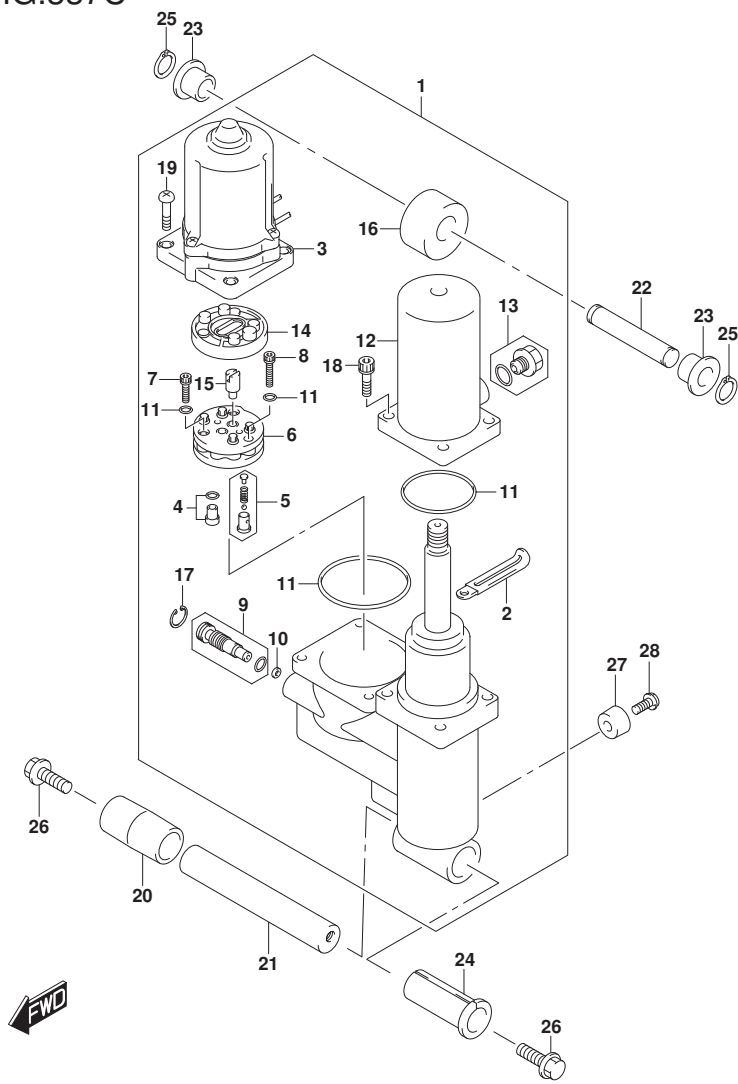


FIG.337C (1-L-4) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-88L18	TRIM ASSY, POWER WITH TILT	1	
2	29404-93J11	.CLAMP (L:65)	1	
3	38100-88L12	.MOTOR ASSY, PTT	1	
4	48320-87J10	.VALVE, UPPER PRESSURE	1	UPPER
5	48330-87J10	.VALVE, DOWN PRESSURE	1	
6	48510-97E00	.PUMP ASSY, GEAR	1	
7	48541-87J10	.BOLT	2	
8	48541-87J20	.BOLT	1	
9	48551-88L00	.VALVE, MANUAL	1	
10	48553-88L00	.SEAL, WASHER	1	
11	48557-87J10	.O RING SET	1	
12	48571-88L01	.TANK, RESERVOIR	1	
13	48572-87L00	.PLUG	1	
14	48582-97E01	.FILTER	1	
15	48583-87J10	.JOINT, DRIVE	1	
16	48611-88L00	.JOINT, METAL	1	
17	48681-87J11	.CIRCLIP	1	
18	48862-87J20	.BOLT, RESERVOIR	4	
19	48862-88L00	.SCREW, PTT MOTOR	4	
20	47225-88L00	COLLAR, TILT CYL LOWER	1	LOWER
21	48121-88L00	SHAFT, TILT CYL LOWER	1	LOWER
22	48321-89J11	SHAFT, TILT CYLINDER UPPER	1	UPPER
23	48325-89J00	BUSH, TILT CYL UPPER	2	UPPER
24	48326-87J00	BUSH, TILT CYLINDER LOWER	1	LOWER
25	09380-12002	SNAP RING	2	
26	09116-10179	BOLT (10X35)	2	
27	55321-87J01	ANODE, PROTECTION	1	

NOTE : (DF40AST,DF60A,DF60ATH):(020,021)

FIG.337C

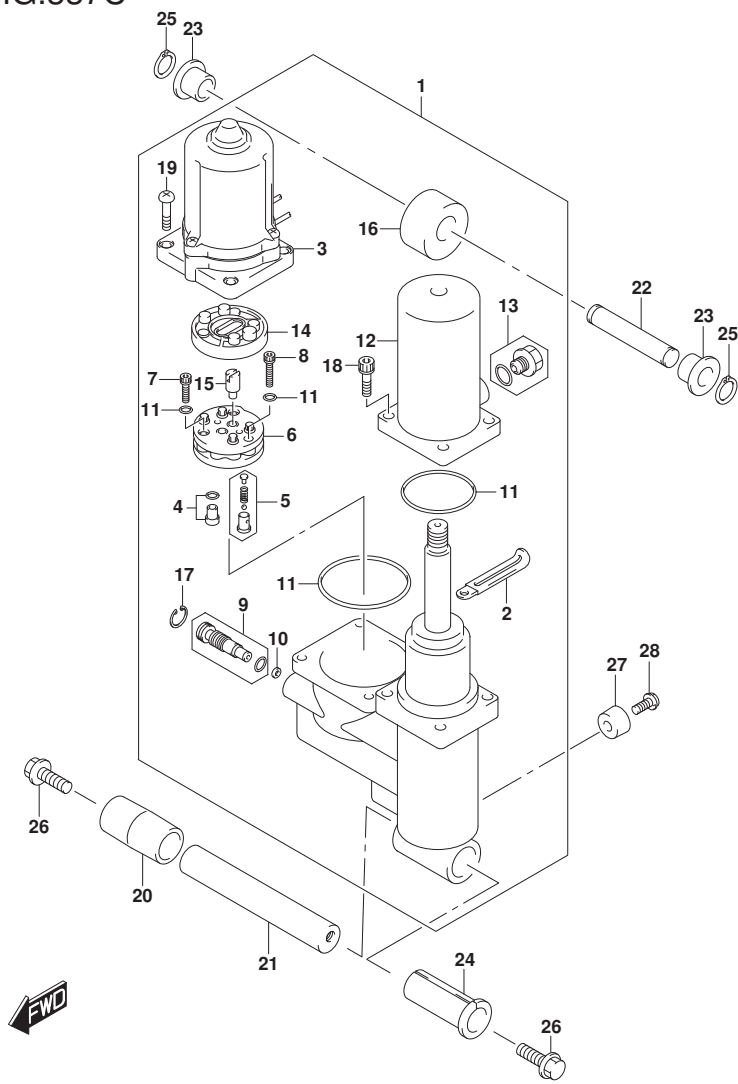


FIG.337C (1-L-5) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	09103-06281	BOLT (6X14)	1	

NOTE : (DF40AST,DF60A,DF60ATH):(020,021)

- DF40AST E34
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60ATH E01
- DF60ATH E40

FIG.337D

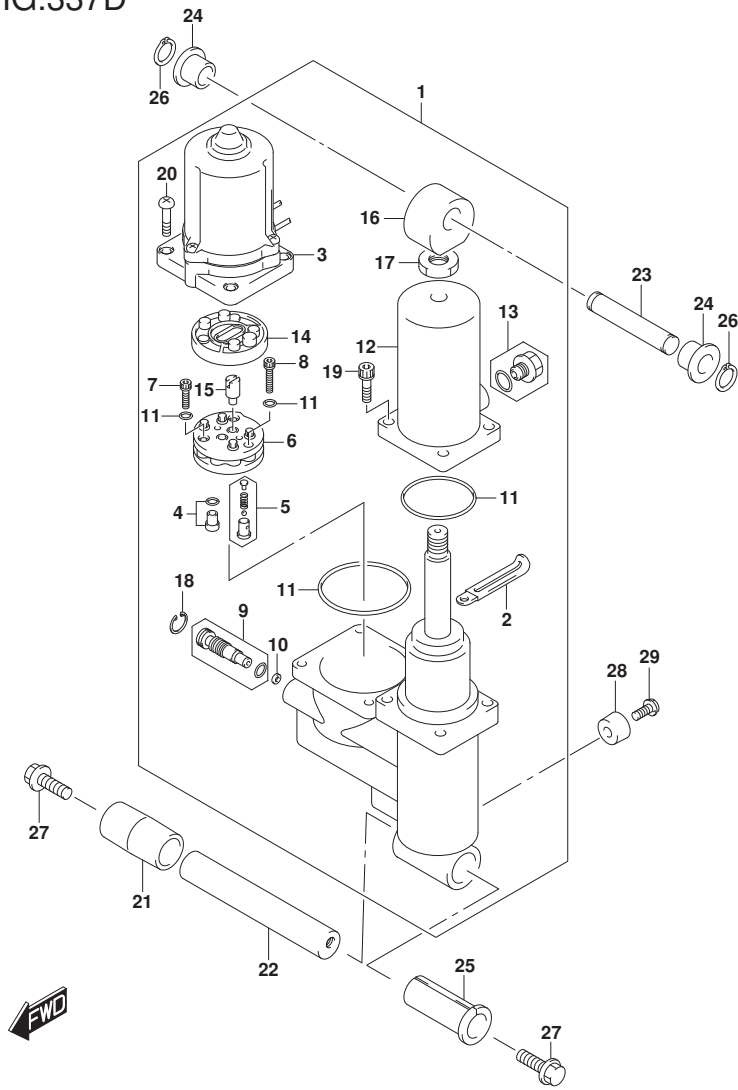


FIG.337D (1-L-6) TRIM CYLINDER ((DF40AST,DF60A,DF60ATH):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-88L30	TRIM ASSY, POWER WITH TILT	1	
2	29404-93J11	.CLAMP (L:65)	1	
3	38100-88L12	.MOTOR ASSY, PTT	1	
4	48320-87J10	.VALVE, UPPER PRESSURE	1	UPPER
5	48330-87J10	.VALVE, DOWN PRESSURE	1	
6	48510-97E00	.PUMP ASSY, GEAR	1	
7	48541-87J10	.BOLT	2	
8	48541-87J20	.BOLT	1	
9	48551-88L00	.VALVE, MANUAL	1	
10	48553-88L00	.SEAL, WASHER	1	
11	48557-87J10	.O RING SET	1	
12	48571-88L01	.TANK, RESERVOIR	1	
13	48572-87L00	.PLUG	1	
14	48582-97E01	.FILTER	1	
15	48583-87J10	.JOINT, DRIVE	1	
16	48611-88L10	.JOINT, METAL	1	
17	48612-88L00	.NUT	1	
18	48681-87J11	.CIRCLIP	1	
19	48862-87J20	.BOLT, RESERVOIR	4	
20	48862-88L00	.SCREW, PTT MOTOR	4	
21	47225-88L00	COLLAR, TILT CYL LOWER	1	LOWER
22	48121-88L00	SHAFT, TILT CYL LOWER	1	LOWER
23	48321-89J11	SHAFT, TILT CYLINDER UPPER	1	UPPER
24	48325-89J00	BUSH, TILT CYL UPPER	2	UPPER
25	48326-87J00	BUSH, TILT CYLINDER LOWER	1	LOWER
26	09380-12002	SNAP RING	2	
27	09116-10179	BOLT (10X35)	2	
28	55321-87J01	ANODE, PROTECTION	1	

FIG.337D


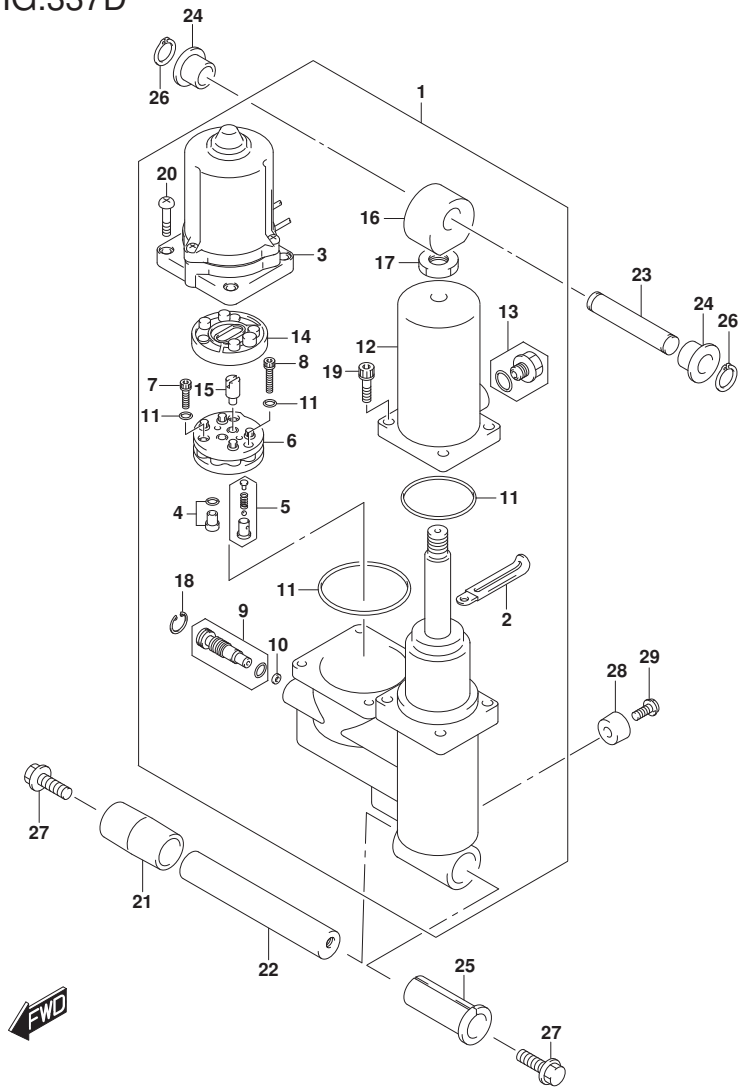


FIG.337D (1-L-7) TRIM CYLINDER ((DF40AST,DF60A,DF60ATH):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	09103-06281	BOLT (6X14)	1	

- DF40AST E34
- DF60A E11
- DF60A E40
- DF60ATH E01
- DF60ATH E40

FIG.337E

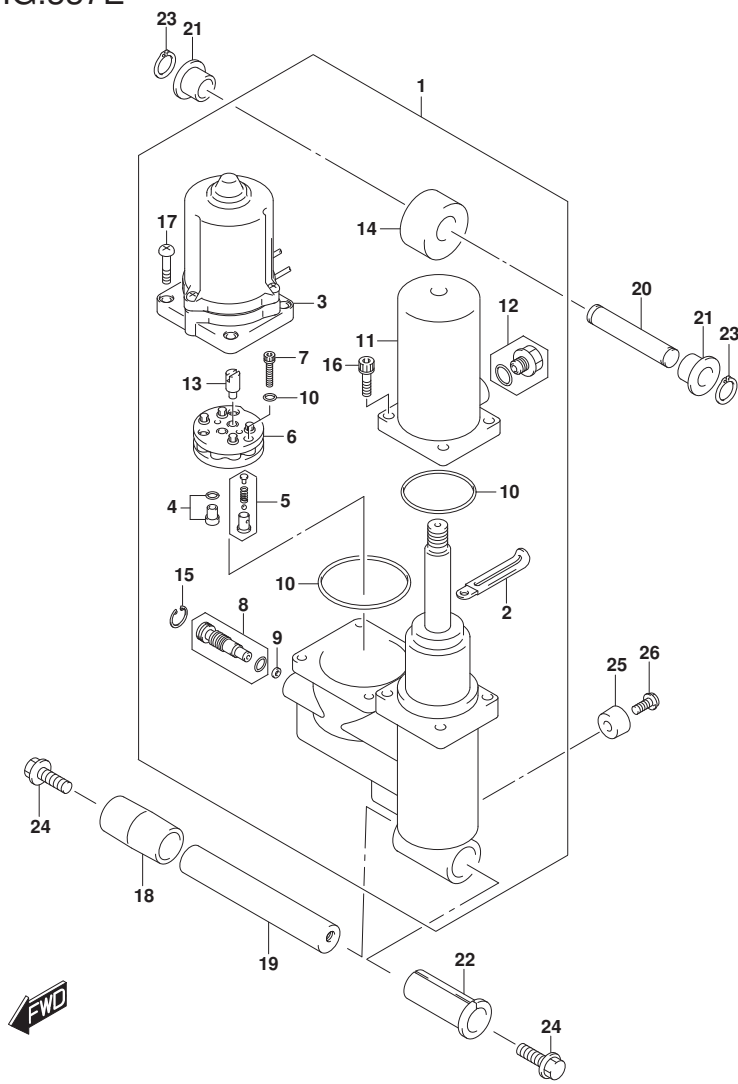

DF60A_E11_022_337E
TRIM CYLINDER

FIG.337E (1-L-8) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-88L22	TRIM ASSY, POWER WITH TILT	1	
2	29404-93J11	.CLAMP (L:65)	1	
3	38100-88L12	.MOTOR ASSY, PTT	1	
4	48320-87J10	.VALVE, UPPER PRESSURE	1	UPPER
5	48330-87J20	.VALVE, DOWN PRESSURE	1	
6	48510-97E10	.PUMP ASSY, GEAR	1	
7	48541-87J20	.BOLT	3	
8	48551-88L10	.VALVE, MANUAL	1	
9	48553-88L00	.SEAL, WASHER	1	
10	48557-87J10	.O RING SET	1	
11	48571-88L01	.TANK, RESERVOIR	1	
12	48572-87L00	.PLUG	1	
13	48583-87J10	.JOINT, DRIVE	1	
14	48611-88L00	.JOINT, METAL	1	
15	48681-87J11	.CIRCLIP	1	
16	48862-87J20	.BOLT, RESERVOIR	4	
17	48862-88L00	.SCREW, PTT MOTOR	4	
18	47225-88L00	COLLAR, TILT CYL LOWER	1	LOWER
19	48121-88L10	SHAFT, TILT CYLINDER LOWER	1	LOWER
20	48321-89J20	SHAFT, TILT CYLINDER UPPER	1	UPPER
21	48325-89J10	BUSH, TILT CYL UPPER	2	UPPER
22	48326-87J00	BUSH, TILT CYLINDER LOWER	1	LOWER
23	09380-12002	SNAP RING	2	
24	09116-10179	BOLT (10X35)	2	
25	55321-87J01	ANODE, PROTECTION	1	

NOTE : (DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH);(020,021)

FIG.337E

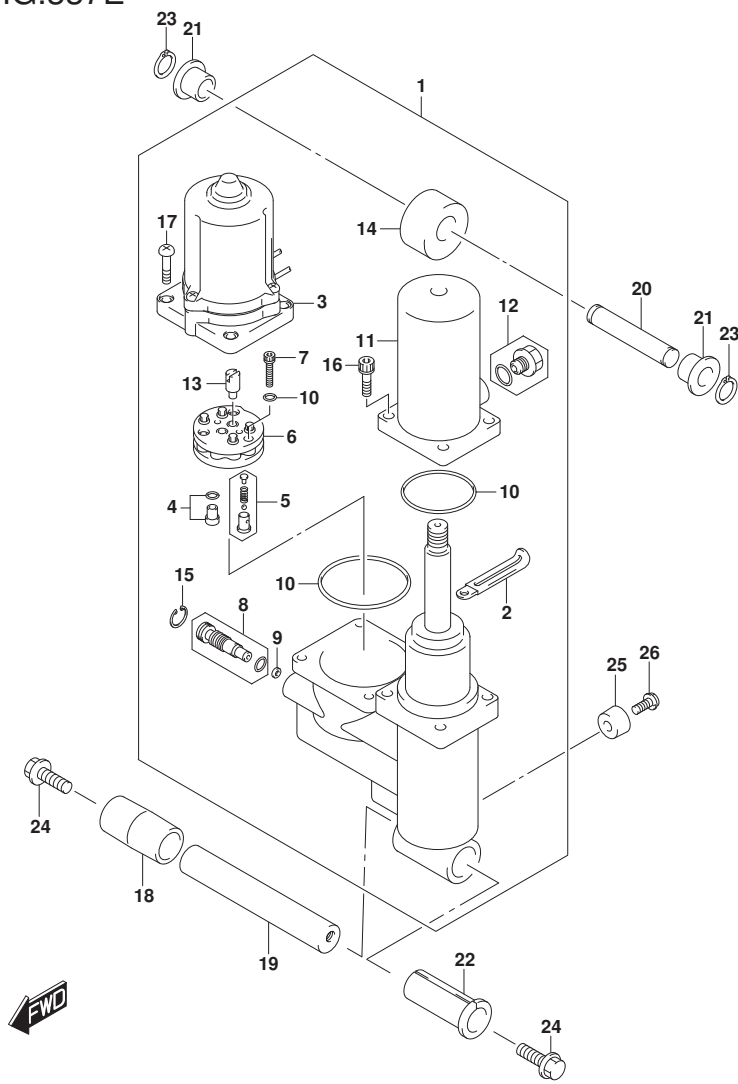


FIG.337E (1-L-9) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
26	09103-06281	BOLT (6X14)	1	

NOTE : (DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH):(020,021)

- DF40ASVT E34
- DF50AVT E03
- DF50AVTH E01
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.337F

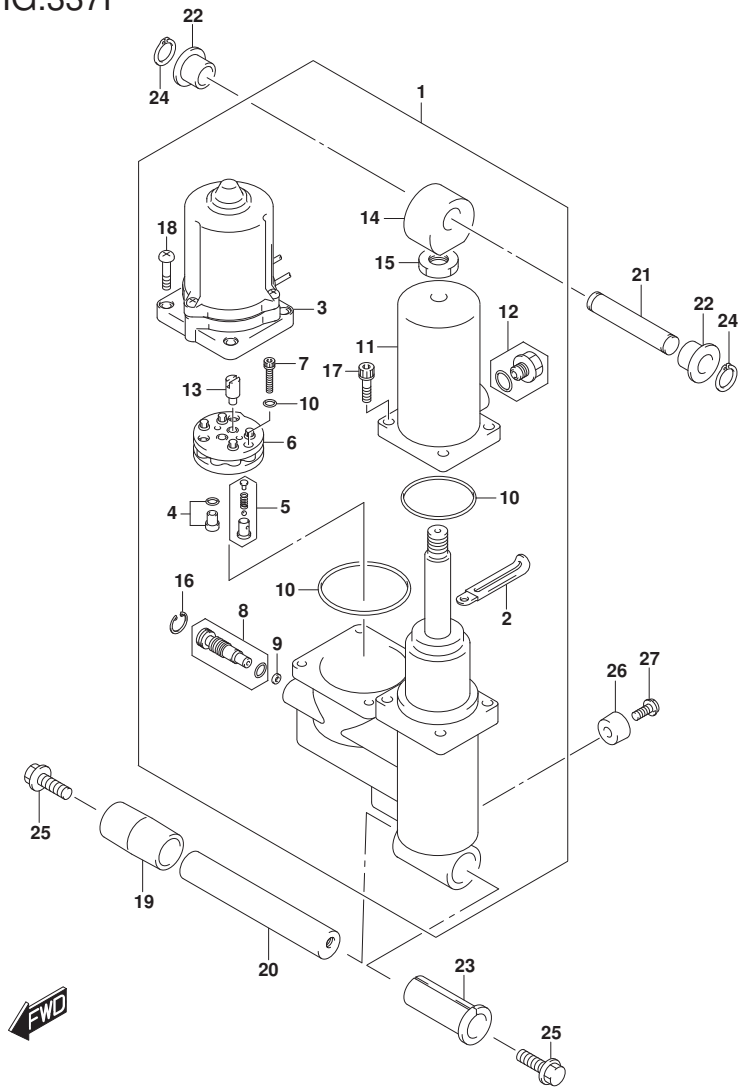


FIG.337F (1-L-10) TRIM CYLINDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-88L40	TRIM ASSY, POWER WITH TILT	1	
2	29404-93J11	.CLAMP (L:65)	1	
3	38100-88L12	.MOTOR ASSY, PTT	1	
4	48320-87J10	.VALVE, UPPER PRESSURE	1	UPPER
5	48330-87J20	.VALVE, DOWN PRESSURE	1	
6	48510-97E10	.PUMP ASSY, GEAR	1	
7	48541-87J20	.BOLT	3	
8	48551-88L10	.VALVE, MANUAL	1	
9	48553-88L00	.SEAL, WASHER	1	
10	48557-87J10	.O RING SET	1	
11	48571-88L01	.TANK, RESERVOIR	1	
12	48572-87L00	.PLUG	1	
13	48583-87J10	.JOINT, DRIVE	1	
14	48611-88L10	.JOINT, METAL	1	
15	48612-88L00	NUT	1	
16	48681-87J11	.CIRCLIP	1	
17	48862-87J20	.BOLT, RESERVOIR	4	
18	48862-88L00	.SCREW, PTT MOTOR	4	
19	47225-88L00	COLLAR, TILT CYL LOWER	1	LOWER
20	48121-88L10	SHAFT, TILT CYLINDER LOWER	1	LOWER
21	48321-89J20	SHAFT, TILT CYLINDER UPPER	1	UPPER
22	48325-89J10	BUSH, TILT CYL UPPER	2	UPPER
23	48326-87J00	BUSH, TILT CYLINDER LOWER	1	LOWER
24	09380-12002	SNAP RING	2	
25	09116-10179	BOLT (10X35)	2	
26	55321-87J01	ANODE, PROTECTION	1	
27	09103-06281	BOLT (6X14)	1	

NOTE : (DF50AVT,DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH):022

DF40ASVT E34
DF50AVT E03
DF60AVT E11
DF60AVTH E40

FIG.339A

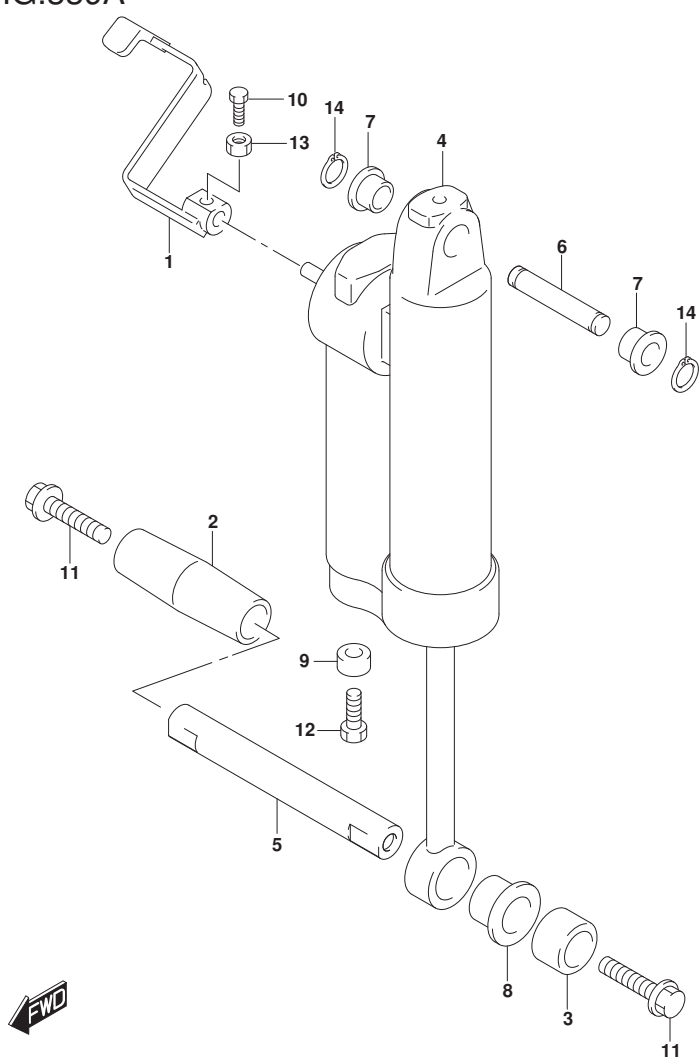


FIG.339A (1-L-11) GAS CYLINDER (DF40AQH,DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	45260-89J01	LEVER, RELEASE	1	
2	47225-89J00	COLLAR, TILT CYL LOWER STBD	1	LOWER,STBD
3	47226-89J00	COLLAR, TILT CYLINDER LOWER	1	LOWER,PORT
4	47400-87J32	CYLINDER ASSY, GAS	1	
5	48121-89J10	SHAFT, TILT CYL LOWER	1	LOWER
6	48321-89J11	SHAFT, TILT CYLINDER UPPER	1	UPPER
7	48325-89J00	BUSH, TILT CYL UPPER	2	UPPER
8	48326-89J00	BUSH, TILT CYL LOWER	1	LOWER
9	55321-87J01	ANODE, PROTECTION	1	
10	09100-06184	BOLT (6X16)	1	
11	09116-10179	BOLT (10X35)	2	
12	09103-06281	BOLT (6X14)	1	
13	09140-06020	NUT	1	
14	09380-12002	SNAP RING	2	

DF40AQH E01
DF60AQH E40

FIG.340A

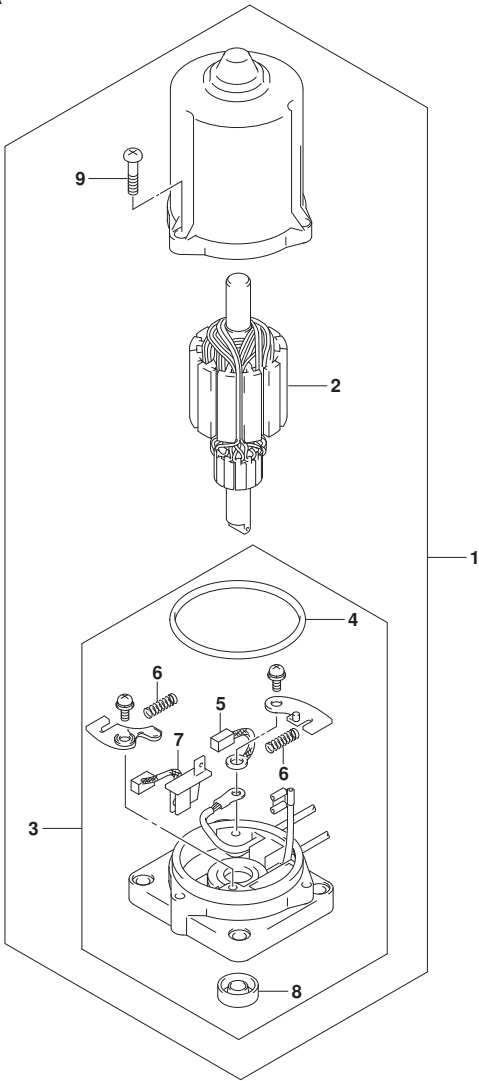


FIG.340A (1-L-12) PTT MOTOR (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38100-88L12	MOTOR ASSY, PTT	1	
2	31311-87J10	.ARMATURE	1	
3	31173-88L12	.HOLDER ASSY, BRUSH	1	
4	31123-97E10	..O RING	1	
5	31133-94910	..BRUSH	1	
6	31135-94900	..SPRING	2	
7	31136-87J11	..BREAKER	1	
8	33799-97E00	..OIL SEAL	1	

NOTE : DF40A,DF40ATH,DF40AST,DF50A,DF50ATH,DF60A,DF60ATH,DF50AVT,
DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH

FIG.340A

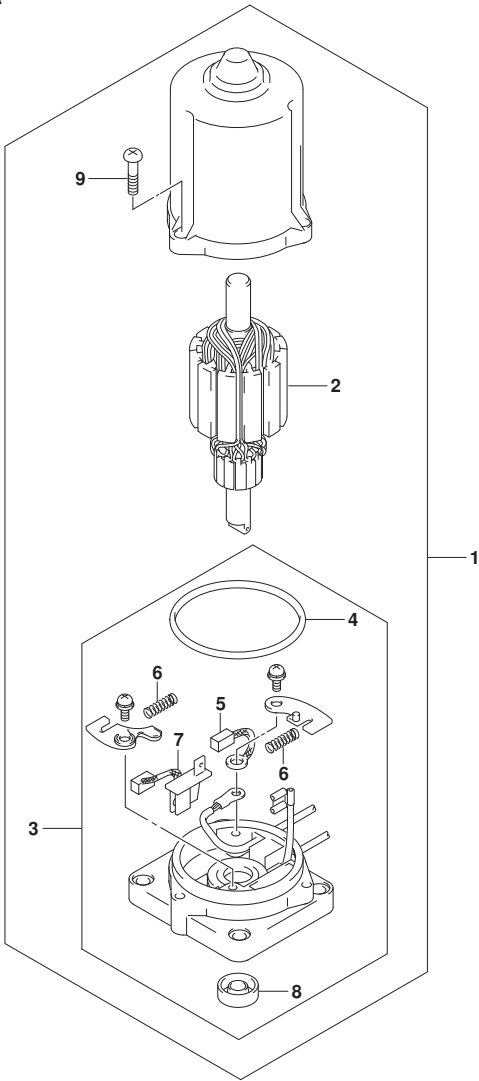



FIG.340A (1-L-13) PTT MOTOR (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9	31111-87J10	.SCREW	3	

NOTE : DF40A,DF40ATH,DF40AST,DF50A,DF50ATH,DF60A,DF60ATH,DF50AVT,
DF50AVTH,DF60AVT,DF40ASVT,DF60AVTH

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AST E34
- DF40ASVT E34
- DF40ATH E01
- DF50A E01
- DF50A E03
- DF50A E11
- DF50ATH E01
- DF50AVT E03
- DF50AVTH E01
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.401A

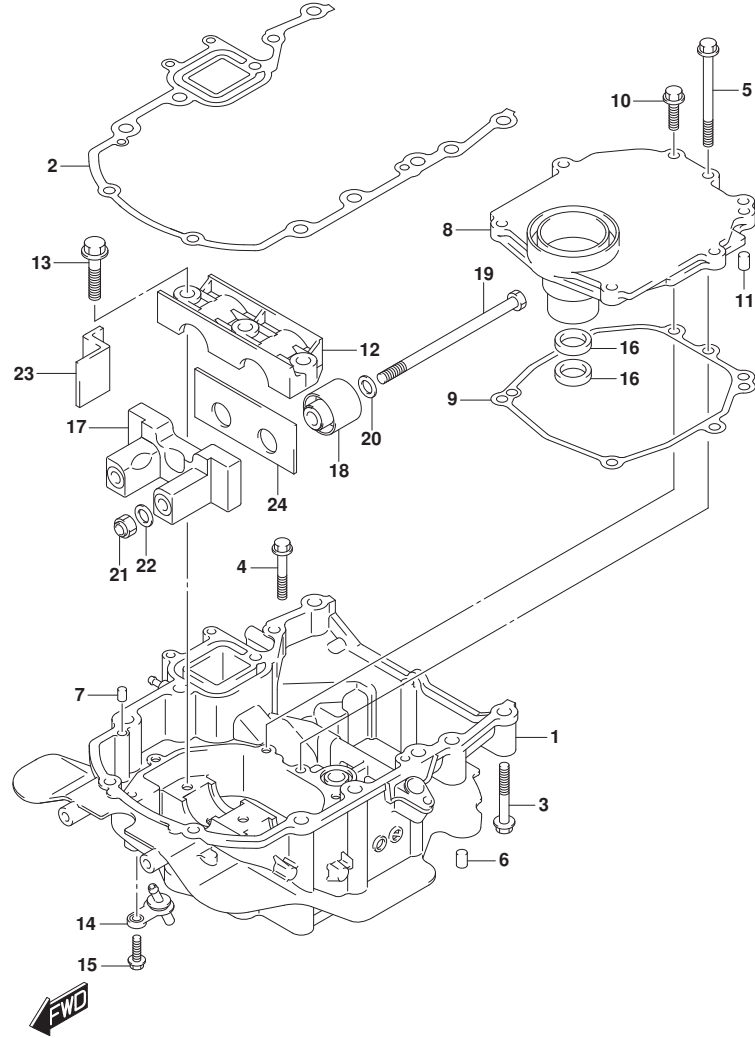

DF60A_E11_022_401A
ENGINE HOLDER

FIG.401A (1-L-14) ENGINE HOLDER (DF40A,DF40AST,DF50A,DF60A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	51110-88L10-YAY	HOLDER, ENGINE (BLACK)	1	
1-2	51110-88L10-Y5S	HOLDER, ENGINE (WHITE)	1	
2	51211-88L00	GASKET, ENGINE HOLDER	1	
3	09116-08159	BOLT (8X55)	8	
4	01550-0845A	BOLT	1	
5	01550-0885A	BOLT	1	
6	09202-08006	PIN (8X12)	2	
7	09202-08006	PIN (8X12)	2	
8	51122-88L00	COVER, MOUNT CASE	1	
9	51123-88L00	GASKET, MOUNT CASE COVER	1	
10	01550-0825A	BOLT	6	
11	09202-08006	PIN (8X12)	2	
12	54137-88L00	COVER, UPPER MOUNT	1	UPPER
13	09116-10181	BOLT (10X44)	3	
14	51170-88L00	BRACKET, WATER INDICATOR	1	
15	29116-93J00	BOLT (6X20)	1	
16	09282-17011	OIL SEAL (16.5X28X6)	2	
17	54124-88L20	BRACKET, UPPER THRUST MOUNT FR	1	UPPER
18	54130-88L00	MOUNT, UPPER	2	UPPER
19	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	UPPER
20	54114-90J10	WASHER, UPPER MOUNT BOLT	2	UPPER
21	09159-12014	NUT (12X17)	2	
22	09160-12110	WASHER (12.5X22X3)	2	
23	54121-88L01	MOUNT, UPR THRUST FR	2	UPPER

DF60A_E11_022

FIG.401A


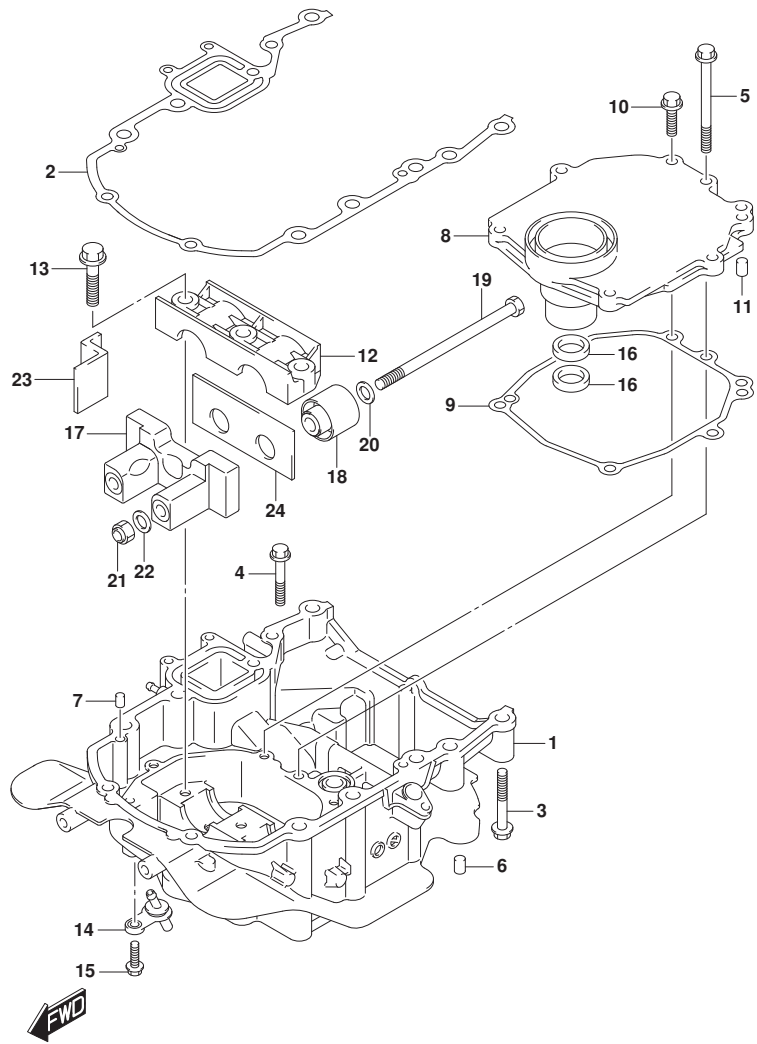


FIG.401A (1-L-15) ENGINE HOLDER (DF40A,DF40AST,DF50A,DF60A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	54123-88L01	MOUNT, UPR THRUST RR	1	UPPER


- DF40A E01
- DF40A E03
- DF40A E11
- DF40AST E34
- DF50A E01
- DF50A E03
- DF50A E11
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40

FIG.401B (2-B-2) ENGINE HOLDER (SEE NOTE)



DF40AQH E01
DF40ATH E01
DF50ATH E01
DF60AQH E40
DF60ATH E01
DF60ATH E40

FIG.401C

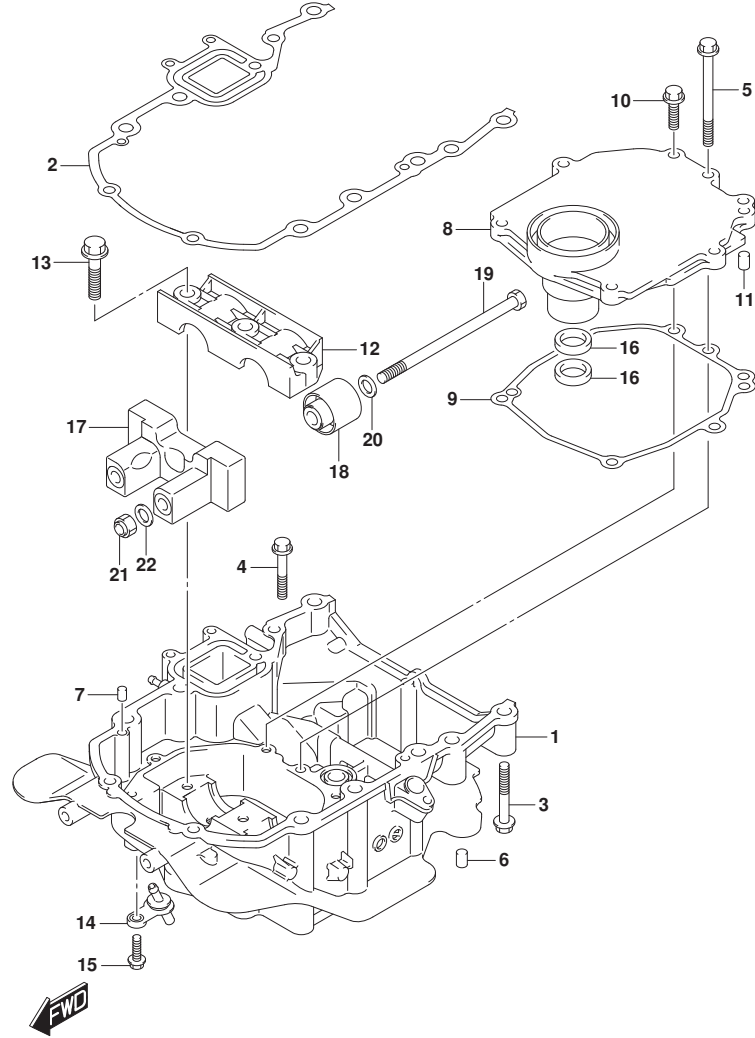

DF60A_E11_022_401C
ENGINE HOLDER

FIG.401C (2-B-3) ENGINE HOLDER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	51110-88L10-YAY	HOLDER, ENGINE (BLACK)	1	
2	51211-88L00	GASKET, ENGINE HOLDER	1	
3	09116-08159	BOLT (8X55)	8	
4	01550-0845A	BOLT	1	
5	01550-0885A	BOLT	1	
6	09202-08006	PIN (8X12)	2	
7	09202-08006	PIN (8X12)	2	
8	51122-88L00	COVER, MOUNT CASE	1	
9	51123-88L00	GASKET, MOUNT CASE COVER	1	
10	01550-0825A	BOLT	6	
11	09202-08006	PIN (8X12)	2	
12	54137-88L00	COVER, UPPER MOUNT	1	UPPER
13	09116-10181	BOLT (10X44)	3	
14	51170-88L00	BRACKET, WATER INDICATOR	1	
15	29116-93J00	BOLT (6X20)	1	
16	09282-17011	OIL SEAL (16.5X28X6)	2	
17	54120-88L01	MOUNT, UPR THRUST	1	UPPER
18	54130-88L00	MOUNT, UPPER	2	UPPER
19	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	UPPER
20	54114-90J10	WASHER, UPPER MOUNT BOLT	2	UPPER
21	09159-12014	NUT (12X17)	2	
22	09160-12110	WASHER (12.5X22X3)	2	

NOTE : DF50AVT,DF50AVTH,DF60AVT,DF60AVTH

- DF50AVT E03
- DF50AVTH E01
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.401D

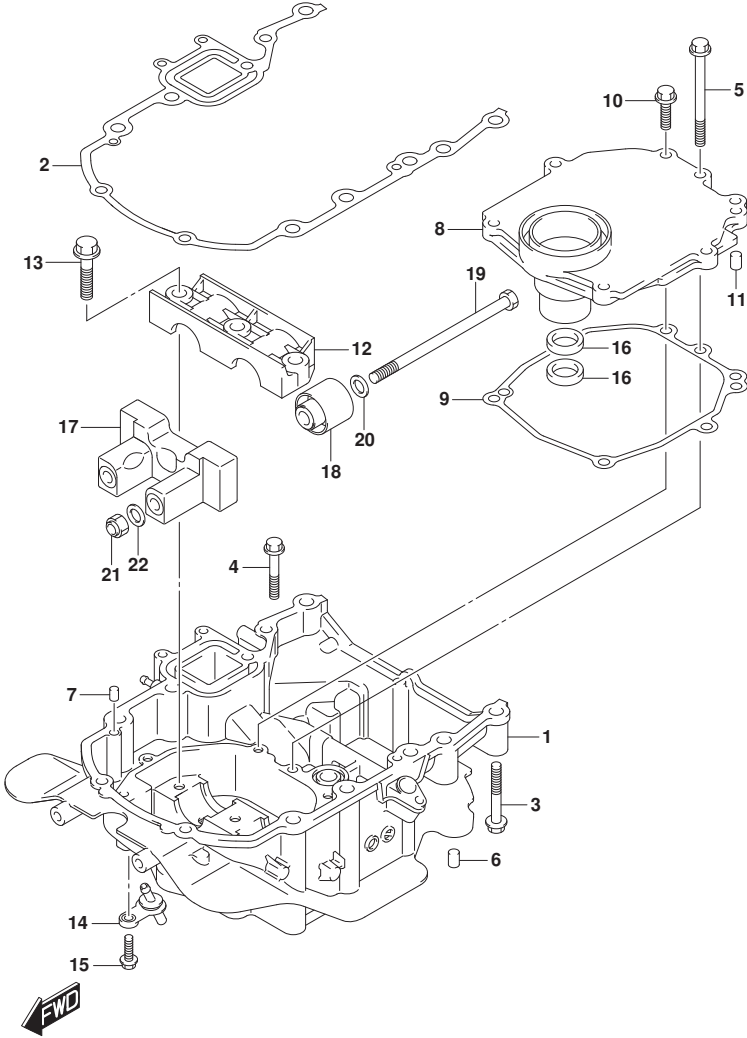


FIG.401D (2-B-4) ENGINE HOLDER (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	51110-88L10-YAY	HOLDER, ENGINE (BLACK)	1	
1-2	51110-88L10-Y5S	HOLDER, ENGINE (WHITE)	1	
2	51211-88L00	GASKET, ENGINE HOLDER	1	
3	09116-08159	BOLT (8X55)	8	
4	01550-0845A	BOLT	1	
5	01550-0885A	BOLT	1	
6	09202-08006	PIN (8X12)	2	
7	09202-08006	PIN (8X12)	2	
8	51122-88L00	COVER, MOUNT CASE	1	
9	51123-88L00	GASKET, MOUNT CASE COVER	1	
10	01550-0825A	BOLT	6	
11	09202-08006	PIN (8X12)	2	
12	54137-88L00	COVER, UPPER MOUNT	1	UPPER
13	09116-10181	BOLT (10X44)	3	
14	51170-88L00	BRACKET, WATER INDICATOR	1	
15	29116-93J00	BOLT (6X20)	1	
16	09282-17011	OIL SEAL (16.5X28X6)	2	
17	54120-88L01	MOUNT, UPR THRUST	1	UPPER
18	54130-88L00	MOUNT, UPPER	2	UPPER
19	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	UPPER
20	54114-90J10	WASHER, UPPER MOUNT BOLT	2	UPPER
21	09159-12014	NUT (12X17)	2	
22	09160-12110	WASHER (12.5X22X3)	2	

DF40ASVT E34

FIG.405A

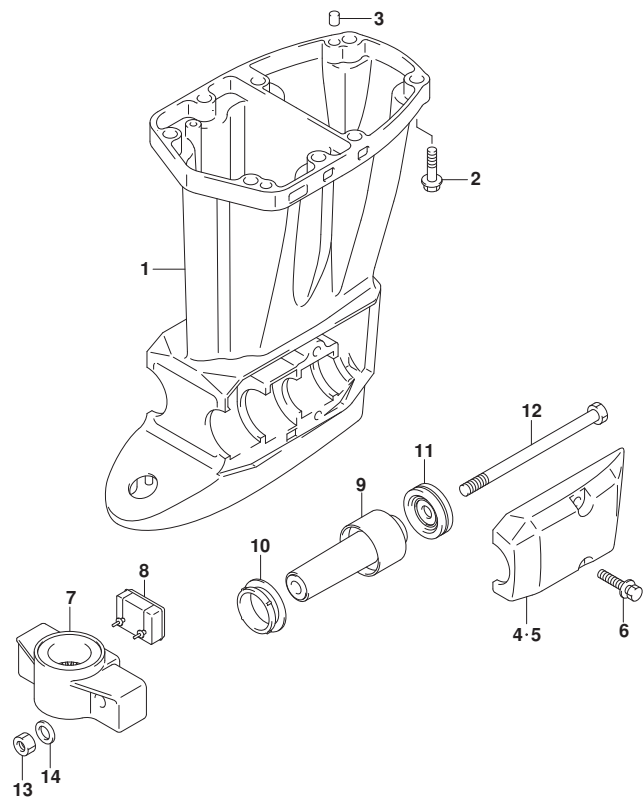


FIG.405A (2-B-5) DRIVE SHAFT HOUSING (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-88L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(DF40A,DF50A):E01:020: W/TRANSOM(S)
1-2	52111-88L00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	(DF40A,DF50A):E01:020: W/TRANSOM(S)
1-3	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(DF40A,DF50A):E01:020: W/TRANSOM(L)
1-4	52111-88L10-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	(DF40A,DF50A):E01:020: W/TRANSOM(L)
1-5	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH, DF60ATH):E01:020:W/TRANSOM(L)
1-6	52111-88L00-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	(DF40A,DF50A):E11:(021,022): W/TRANSOM(S)
1-7	52111-88L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(DF40A,DF50A):E11:(021,022): W/TRANSOM(S)
1-8	52111-88L10-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	(DF40A,DF50A):E11:(021,022): W/TRANSOM(L)
1-9	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(DF40A,DF50A):E11:(021,022): W/TRANSOM(L)
1-10	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH, DF60ATH):E01:(021,022): W/TRANSOM(L)
2	09116-10181	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60ATH):E01,
(DF40A,DF50A):E11



FIG.405A

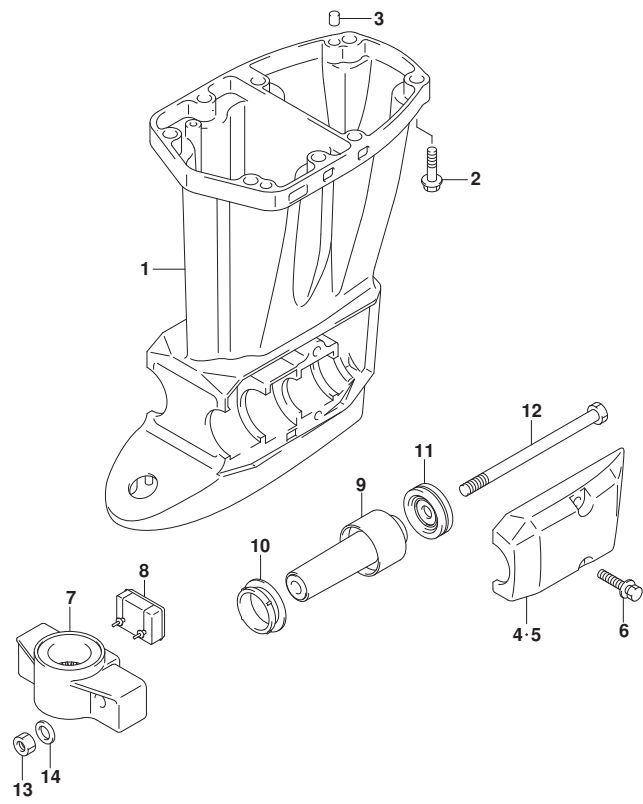


FIG.405A (2-B-6) DRIVE SHAFT HOUSING (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
4-1	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	(DF40A,DF50A):E01:020 LOWER,STBD
4-2	54221-88L20-Y5S	COVER, LOWER MOUNT STBD (WHITE)	1	(DF40A,DF50A):E01:020 LOWER,STBD
4-3	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH,DF60ATH):E01:020 LOWER,STBD
4-4	54221-88L20-QTN	COVER, LOWER MOUNT STBD (WHITE)	1	(DF40A,DF50A):E11:(021,022) LOWER,STBD
4-5	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	(DF40A,DF50A):E11:(021,022) LOWER,STBD
4-6	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH,DF60ATH):E01:(021,022) LOWER,STBD
5-1	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	(DF40A,DF50A):E01:020 LOWER,PORT
5-2	54231-88L10-Y5S	COVER, LOWER MOUNT PORT (WHITE)	1	(DF40A,DF50A):E01:020 LOWER,PORT
5-3	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH,DF60ATH):E01:020 LOWER,PORT
5-4	54231-88L10-QTN	COVER, LOWER MOUNT PORT (WHITE)	1	(DF40A,DF50A):E11:(021,022) LOWER,PORT
5-5	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	(DF40A,DF50A):E11:(021,022) LOWER,PORT
5-6	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH,DF60ATH):E01:(021,022) LOWER,PORT
6	09116-10181	BOLT (10X44)	4	

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60ATH):E01,
(DF40A,DF50A):E11

FIG.405A

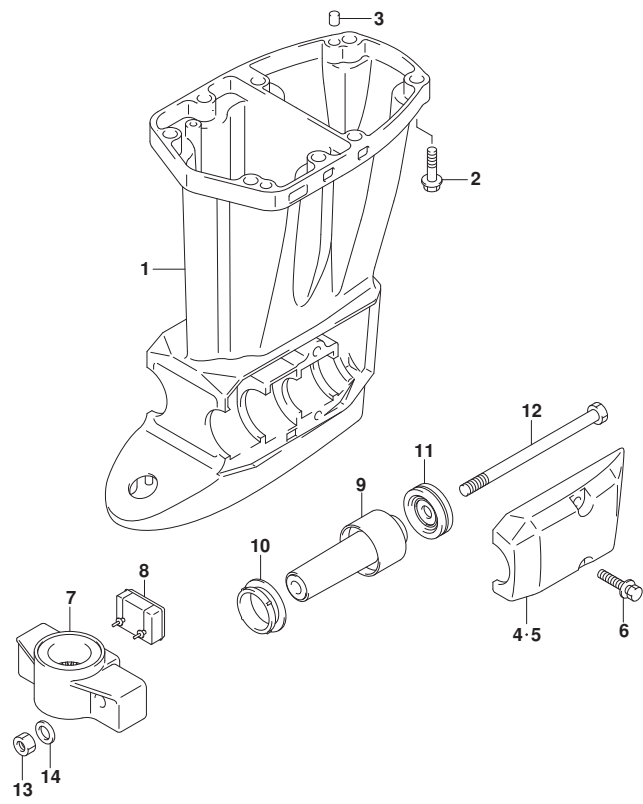


FIG.405A (2-B-7) DRIVE SHAFT HOUSING (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
7-1	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	(DF40A,DF50A):E01:020 LOWER
7-2	54211-87J30-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	(DF40A,DF50A):E01:020 LOWER
7-3	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH, DF60ATH):E01:020 LOWER
7-4	54211-87J30-QTN	BRACKET, LOWER MOUNT (WHITE)	1	(DF40A,DF50A):E11:(021,022) LOWER
7-5	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	(DF40A,DF50A):E11:(021,022) LOWER
7-6	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	(DF40AQH,DF40ATH,DF50ATH, DF60ATH):E01:(021,022) LOWER
8	54151-88L01	MOUNT, LOWER THRUST	1	LOWER
9	54160-88L10	MOUNT, LOWER	2	LOWER
10	54167-87L01	MOUNT, LOWER SIDE	2	LOWER
11	54180-88L01	DAMPER, FORWARD STOPPER	2	
12	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	LOWER
13	09159-12014	NUT (12X17)	2	
14	09160-12110	WASHER (12.5X22X3)	2	

NOTE : (DF40A,DF40AQH,DF40ATH,DF50A,DF50ATH,DF60ATH):E01,
(DF40A,DF50A):E11

- DF40A E01
- DF40A E11
- DF40AQH E01
- DF40ATH E01
- DF50A E01
- DF50A E11
- DF50ATH E01
- DF60ATH E01

FIG.405B (2-B-8) DRIVE SHAFT HOUSING ((DF40A,DF50A,DF60A):E03)



DF40A E03
DF50A E03
DF60A E03

FIG.405C

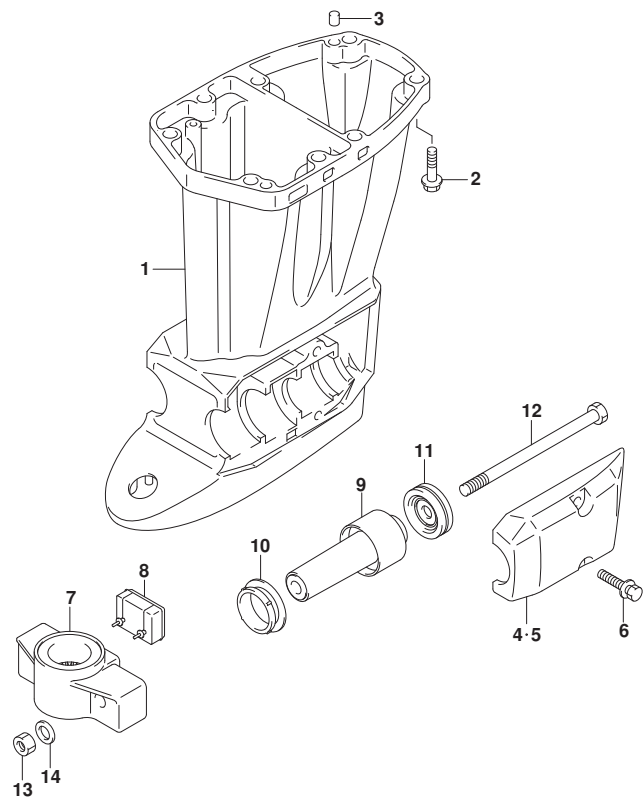


FIG.405C (2-B-9) DRIVE SHAFT HOUSING (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-88L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	020:W/TRANSOM(S)
1-2	52111-88L00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	020:W/TRANSOM(S)
1-3	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	020:W/TRANSOM(L)
1-4	52111-88L10-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	020:W/TRANSOM(L)
1-5	52111-88L00-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	(021,022):W/TRANSOM(S)
1-6	52111-88L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(021,022):W/TRANSOM(S)
1-7	52111-88L10-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	(021,022):W/TRANSOM(L)
1-8	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	(021,022):W/TRANSOM(L)
2	09116-10181	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4-1	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	020 LOWER,STBD
4-2	54221-88L20-Y5S	COVER, LOWER MOUNT STBD (WHITE)	1	020 LOWER,STBD
4-3	54221-88L20-QTN	COVER, LOWER MOUNT STBD (WHITE)	1	021,022 LOWER,STBD
4-4	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	021,022 LOWER,STBD
5-1	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	020 LOWER,PORT
5-2	54231-88L10-Y5S	COVER, LOWER MOUNT PORT (WHITE)	1	020 LOWER,PORT
5-3	54231-88L10-QTN	COVER, LOWER MOUNT PORT (WHITE)	1	021,022 LOWER,PORT
5-4	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	021,022 LOWER,PORT
6	09116-10181	BOLT (10X44)	4	
7-1	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	020 LOWER
7-2	54211-87J30-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	020 LOWER
7-3	54211-87J30-QTN	BRACKET, LOWER MOUNT (WHITE)	1	021,022 LOWER
7-4	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	021,022 LOWER
8	54151-88L01	MOUNT, LOWER THRUST	1	020 LOWER



FIG.405C

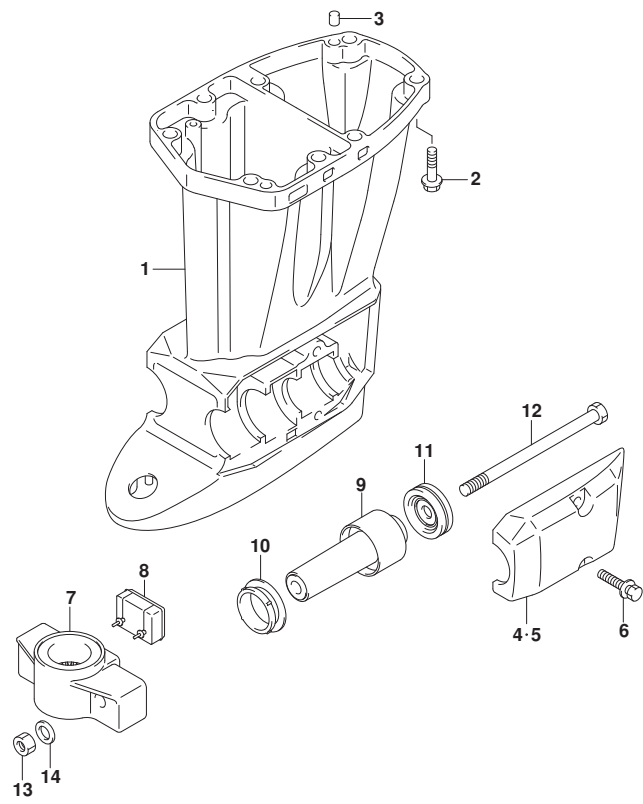



FIG.405C (2-B-10) DRIVE SHAFT HOUSING (DF40AST:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9	54160-88L10	MOUNT, LOWER	2	LOWER
10	54167-87L01	MOUNT, LOWER SIDE	2	LOWER
11	54180-88L01	DAMPER, FORWARD STOPPER	2	
12	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	LOWER
13	09159-12014	NUT (12X17)	2	
14	09160-12110	WASHER (12.5X22X3)	2	

DF40AST E34



FIG.405D

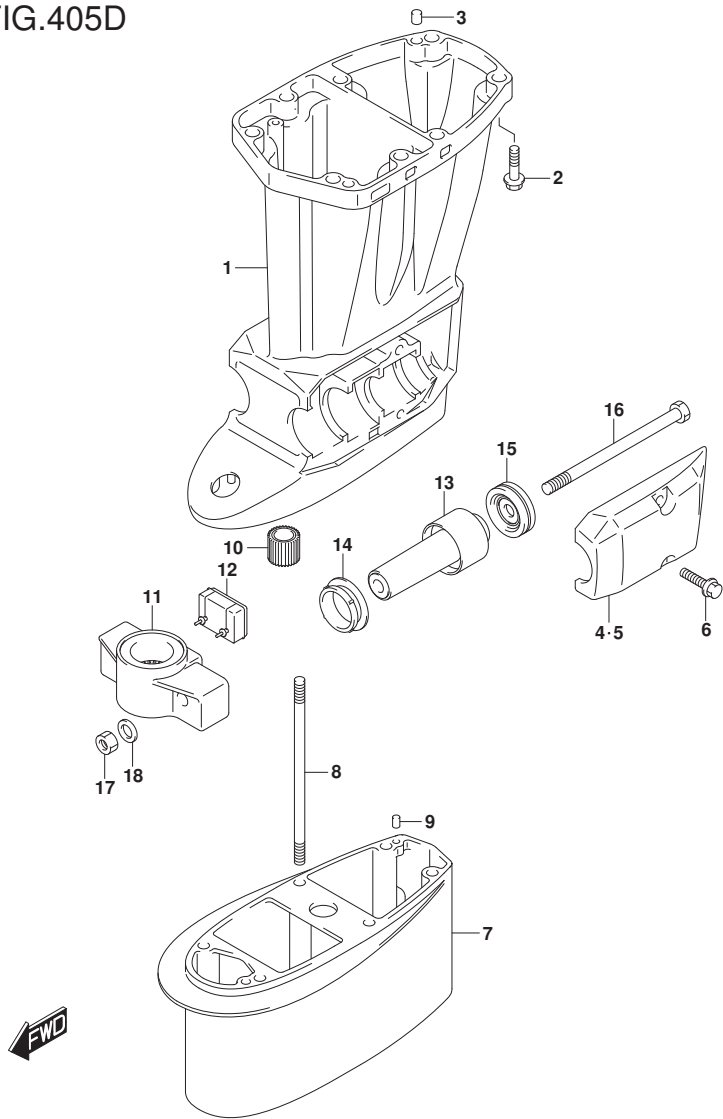

DF60A_E11_022_405D
DRIVE SHAFT HOUSING

FIG.405D (2-B-11) DRIVE SHAFT HOUSING (DF60A:(E01,E11))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-88L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	E01:W/TRANSOM(S)
1-2	52111-88L00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	E01:W/TRANSOM(S)
1-3	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	E01:W/TRANSOM(L)
1-4	52111-88L10-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	E01:W/TRANSOM(L)
1-5	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	E01:W/TRANSOM(X)
1-6	52111-88L10-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	E01:W/TRANSOM(X)
1-7	52111-88L00-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	E11:W/TRANSOM(S)
1-8	52111-88L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	E11:W/TRANSOM(S)
1-9	52111-88L10-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	E11:W/TRANSOM(L)
1-10	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	E11:W/TRANSOM(L)
1-11	52111-88L10-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	E11:W/TRANSOM(X)
1-12	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	E11:W/TRANSOM(X)
2	09116-10181	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4-1	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	E01 LOWER,STBD
4-2	54221-88L20-Y5S	COVER, LOWER MOUNT STBD (WHITE)	1	E01 LOWER,STBD
4-3	54221-88L20-QTN	COVER, LOWER MOUNT STBD (WHITE)	1	E11 LOWER,STBD
4-4	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	E11 LOWER,STBD
5-1	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	E01 LOWER,PORT
5-2	54231-88L10-Y5S	COVER, LOWER MOUNT PORT (WHITE)	1	E01 LOWER,PORT
5-3	54231-88L10-QTN	COVER, LOWER MOUNT PORT (WHITE)	1	E11 LOWER,PORT
5-4	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	E11 LOWER,PORT
6	09116-10181	BOLT (10X44)	4	
7-1	52131-88L00-YAY	CASE, EXTENSION (BLACK)	1	E01:W/TRANSOM(X)
7-2	52131-88L00-Y5S	CASE, EXTENSION (WHITE)	1	E01:W/TRANSOM(X)
7-3	52131-88L00-QTN	CASE, EXTENSION (WHITE)	1	E11:W/TRANSOM(X)
7-4	52131-88L00-YAY	CASE, EXTENSION (BLACK)	1	E11:W/TRANSOM(X)
8	09108-08254	STUD BOLT (8X162)	6	W/TRANSOM(X)

DF60A_E11_022

FIG.405D


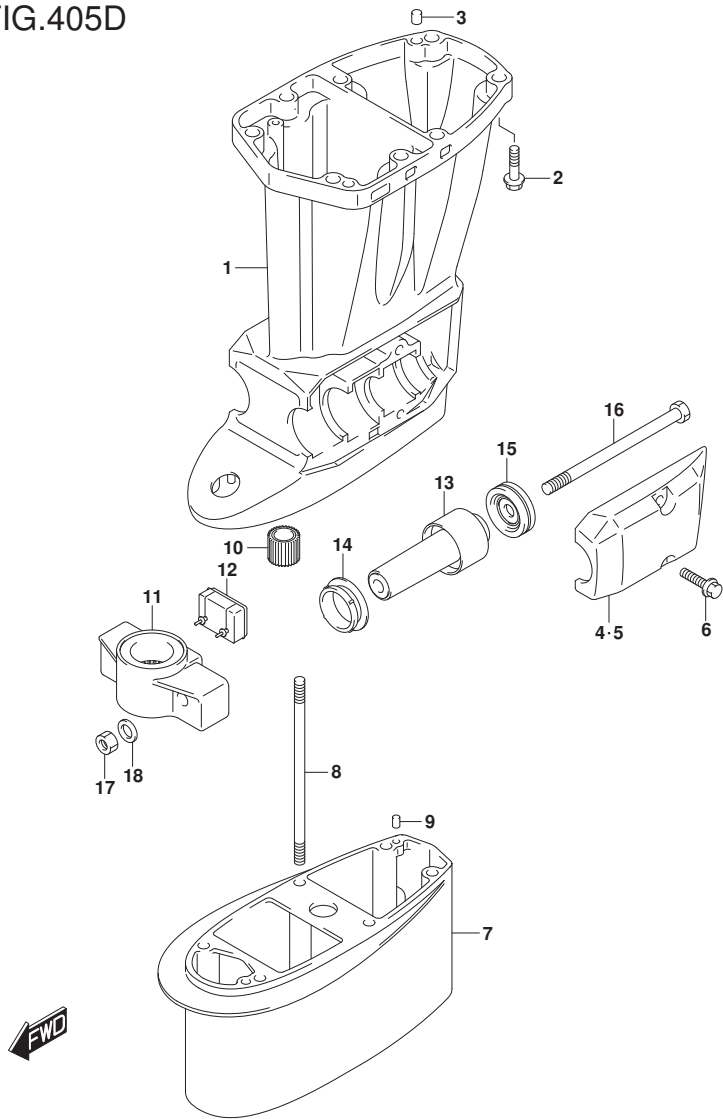


FIG.405D (2-B-12) DRIVE SHAFT HOUSING (DF60A:(E01,E11))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9	09202-06023	PIN (6X10)	2	W/TRANSOM(X)
10	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(X)
11-1	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	E01 LOWER
11-2	54211-87J30-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	E01 LOWER
11-3	54211-87J30-QTN	BRACKET, LOWER MOUNT (WHITE)	1	E11 LOWER
11-4	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	E11 LOWER
12	54151-88L01	MOUNT, LOWER THRUST	1	LOWER
13	54160-88L10	MOUNT, LOWER	2	LOWER
14	54167-87L01	MOUNT, LOWER SIDE	2	LOWER
15	54180-88L01	DAMPER, FORWARD STOPPER	2	
16	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	LOWER
17	09159-12014	NUT (12X17)	2	
18	09160-12110	WASHER (12.5X22X3)	2	

DF60A E01
DF60A E11

FIG.405E

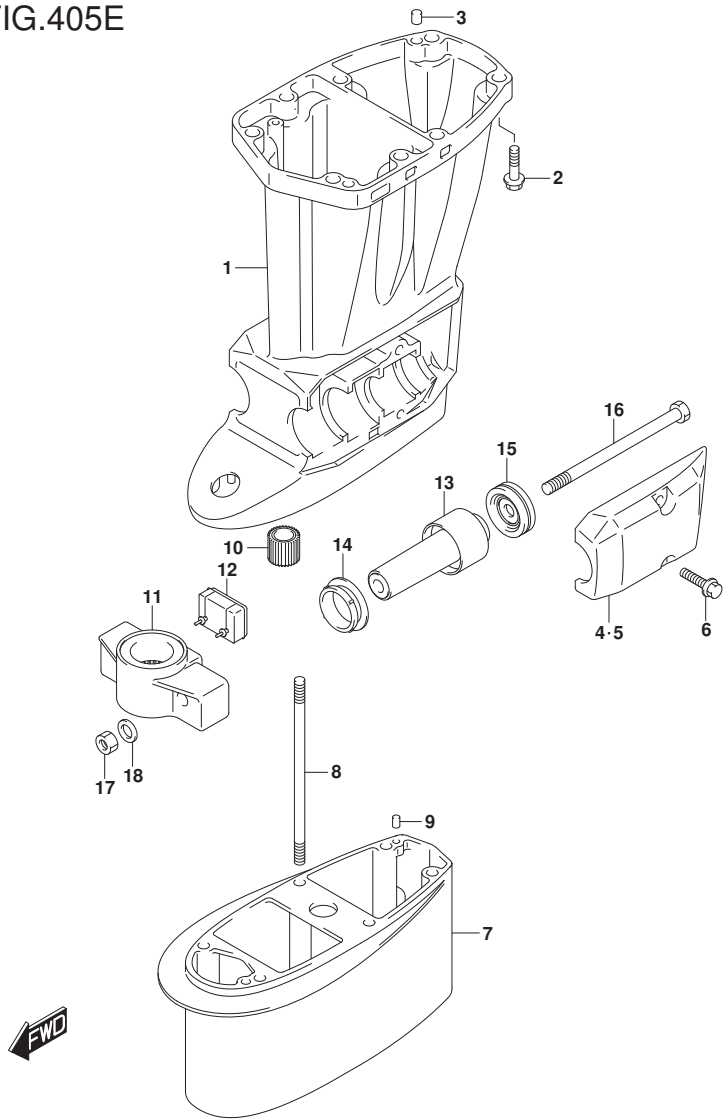

DF60A_E11_022_405E
DRIVE SHAFT HOUSING

FIG.405E (2-B-13) DRIVE SHAFT HOUSING (DF60A:E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	020	
1-2	52111-88L10-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	020	
1-3	52111-88L10-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	021,022	
1-4	52111-88L10-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	021,022	
2	09116-10181	BOLT (10X44)	8		
3	09202-08006	PIN (8X12)	2		
4-1	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	020	LOWER,STBD
4-2	54221-88L20-Y5S	COVER, LOWER MOUNT STBD (WHITE)	1	020	LOWER,STBD
4-3	54221-88L20-QTN	COVER, LOWER MOUNT STBD (WHITE)	1	021,022	LOWER,STBD
4-4	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	021,022	LOWER,STBD
5-1	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	020	LOWER,PORT
5-2	54231-88L10-Y5S	COVER, LOWER MOUNT PORT (WHITE)	1	020	LOWER,PORT
5-3	54231-88L10-QTN	COVER, LOWER MOUNT PORT (WHITE)	1	021,022	LOWER,PORT
5-4	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	021,022	LOWER,PORT
6	09116-10181	BOLT (10X44)	4		
7-1	52131-88L00-YAY	CASE, EXTENSION (BLACK)	1	020:W/TRANSOM(X)	
7-2	52131-88L00-Y5S	CASE, EXTENSION (WHITE)	1	020:W/TRANSOM(X)	
7-3	52131-88L00-QTN	CASE, EXTENSION (WHITE)	1	(021,022):W/TRANSOM(X)	
7-4	52131-88L00-YAY	CASE, EXTENSION (BLACK)	1	(021,022):W/TRANSOM(X)	
8	09108-08254	STUD BOLT (8X162)	6	W/TRANSOM(X)	
9	09202-06023	PIN (6X10)	2	W/TRANSOM(X)	
10	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(X)	

DF60A_E11_022

FIG.405E (2-B-14) DRIVE SHAFT HOUSING (DF60A:E40)

DF60A E40

FIG.405F (2-C-2) DRIVE SHAFT HOUSING ((DF60AQH,DF60ATH):E40)



DF60AQH E40
DF60ATH E40

FIG.405G

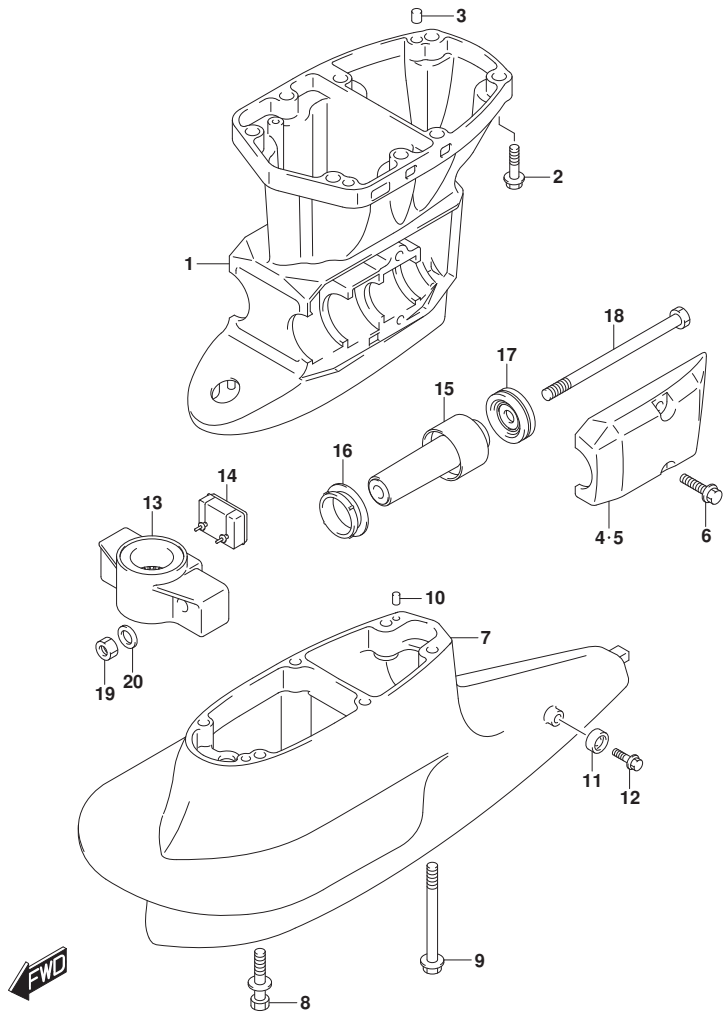


FIG.405G (2-C-3) DRIVE SHAFT HOUSING (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	52111-88L20-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	
2	09116-10181	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	LOWER,STBD
5	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	LOWER,PORT
6	09116-10181	BOLT (10X44)	4	
7	52131-88L12-YAY	CASE, EXTENSION (BLACK)	1	
8	09116-08131	BOLT (8X45)	4	
9	09116-10134	BOLT (10X115)	2	
10	09202-06031	PIN (6X12)	2	
11	55321-87J01	ANODE, PROTECTION	1	
12	09103-06281	BOLT (6X14)	1	
13	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	LOWER
14	54151-88L01	MOUNT, LOWER THRUST	1	LOWER
15	54160-88L10	MOUNT, LOWER	2	LOWER
16	54167-87L01	MOUNT, LOWER SIDE	2	LOWER
17	54180-88L01	DAMPER, FORWARD STOPPER	2	
18	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	LOWER
19	09159-12014	NUT (12X17)	2	
20	09160-12110	WASHER (12.5X22X3)	2	

NOTE : DF50AVTH:E01,(DF50AVT,DF60AVT):E03

DF50AVT E03
DF50AVTH E01
DF60AVT E03

FIG.405H

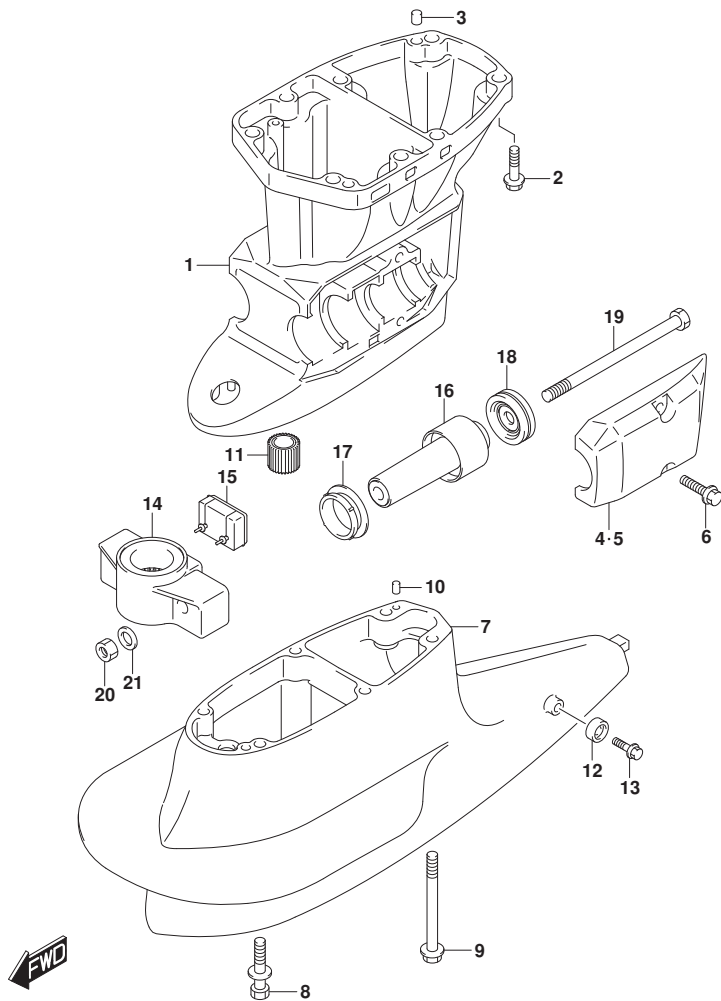



FIG.405H (2-C-4) DRIVE SHAFT HOUSING (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-88L20-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	W/TRANSOM(L)
1-2	52111-88L30-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	W/TRANSOM(X)
2	09116-10181	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	LOWER,STBD
5	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	LOWER,PORT
6	09116-10181	BOLT (10X44)	4	
7	52131-88L12-YAY	CASE, EXTENSION (BLACK)	1	
8	09116-08131	BOLT (8X45)	4	
9	09116-10134	BOLT (10X115)	2	
10	09202-06031	PIN (6X12)	2	
11	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(X)
12	55321-87J01	ANODE, PROTECTION	1	
13	09103-06281	BOLT (6X14)	1	
14	54211-87J30-YAY	BRACKET, LOWER MOUNT (BLACK)	1	LOWER
15	54151-88L01	MOUNT, LOWER THRUST	1	LOWER
16	54160-88L10	MOUNT, LOWER	2	LOWER
17	54167-87L01	MOUNT, LOWER SIDE	2	LOWER
18	54180-88L01	DAMPER, FORWARD STOPPER	2	
19	54166-95J02	BOLT, LOWER MOUNT (12X200)	2	LOWER
20	09159-12014	NUT (12X17)	2	
21	09160-12110	WASHER (12.5X22X3)	2	

NOTE : DF60AVT:(E01,E11),(DF60AVT,DF60AVTH):E40

DF60AVT E01
DF60AVT E11
DF60AVT E40
DF60AVTH E40

FIG.405J

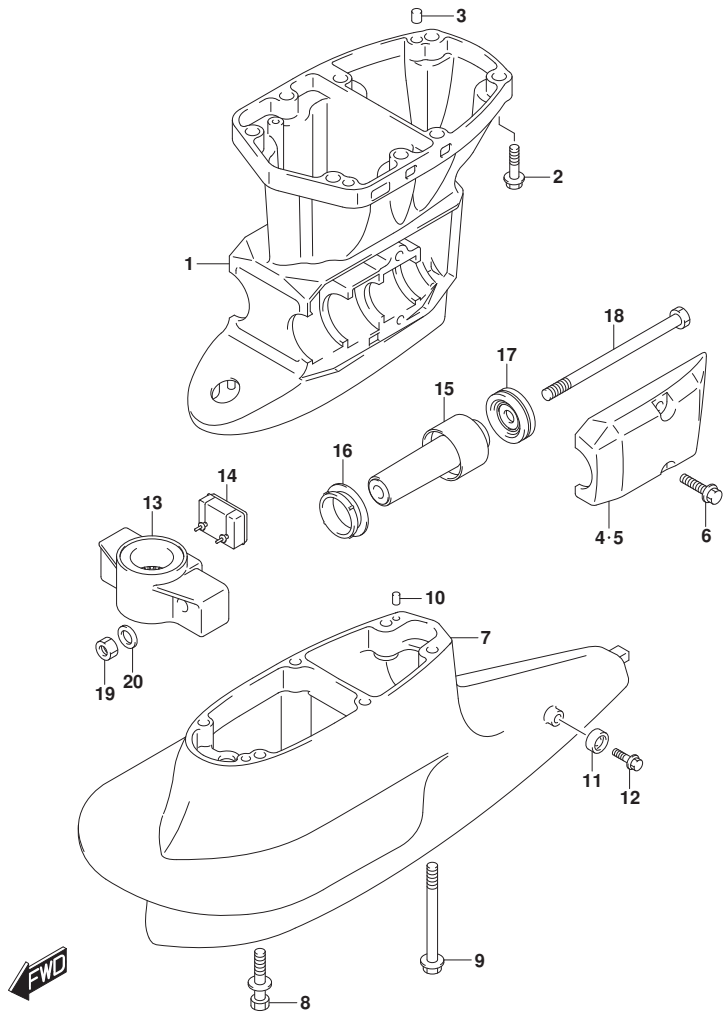


DF60A_E11_022_405J
DRIVE SHAFT HOUSING

FIG.405J (2-C-5) DRIVE SHAFT HOUSING (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	52111-88L20-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	020	
1-2	52111-88L20-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	020	
1-3	52111-88L20-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	021,022	
1-4	52111-88L20-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	021,022	
2	09116-10181	BOLT (10X44)	8		
3	09202-08006	PIN (8X12)	2		
4-1	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	020	LOWER,STBD
4-2	54221-88L20-Y5S	COVER, LOWER MOUNT STBD (WHITE)	1	020	LOWER,STBD
4-3	54221-88L20-QTN	COVER, LOWER MOUNT STBD (WHITE)	1	021,022	LOWER,STBD
4-4	54221-88L20-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	021,022	LOWER,STBD
5-1	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	020	LOWER,PORT
5-2	54231-88L10-Y5S	COVER, LOWER MOUNT PORT (WHITE)	1	020	LOWER,PORT
5-3	54231-88L10-QTN	COVER, LOWER MOUNT PORT (WHITE)	1	021,022	LOWER,PORT
5-4	54231-88L10-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	021,022	LOWER,PORT
6	09116-10181	BOLT (10X44)	4		
7-1	52131-88L12-YAY	CASE, EXTENSION (BLACK)	1	020	
7-2	52131-88L12-Y5S	CASE, EXTENSION (WHITE)	1	020	
7-3	52131-88L12-QTN	CASE, EXTENSION (WHITE)	1	021,022	
7-4	52131-88L12-YAY	CASE, EXTENSION (BLACK)	1	021,022	
8	09116-08131	BOLT (8X45)	4		
9	09116-10134	BOLT (10X115)	2		
10	09202-06031	PIN (6X12)	2		
11	55321-87J01	ANODE, PROTECTION	1		
12	09103-06281	BOLT (6X14)	1		

DF60A_E11_022

FIG.405J (2-C-6) DRIVE SHAFT HOUSING (DF40ASVT:E34)

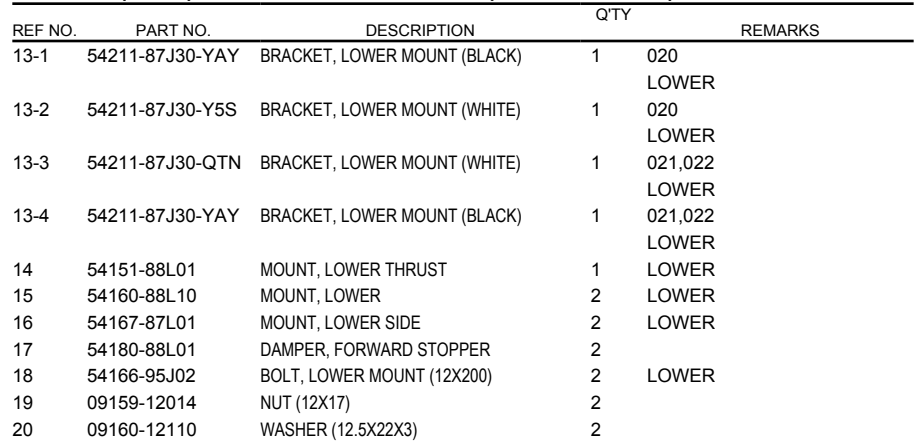

DF60A_E11_022

FIG.407A

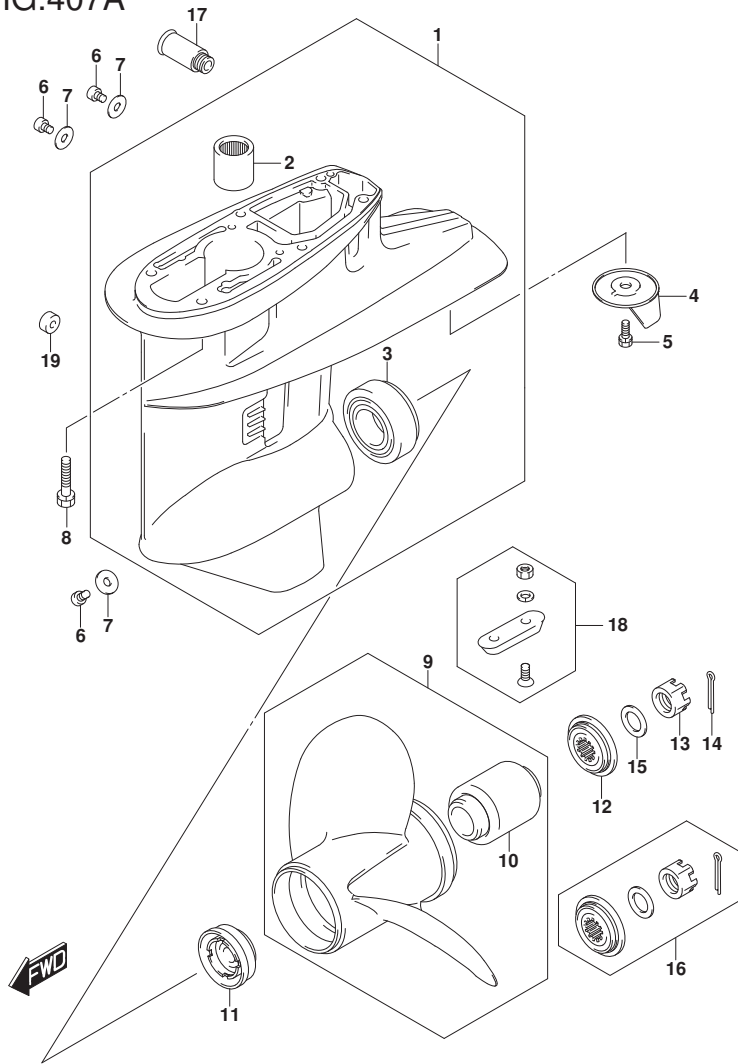


FIG.407A (2-C-7) GEAR CASE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-87J50-YAY	CASE, GEAR (BLACK)	1	E01:020
1-2	55100-87J50-Y5S	CASE, GEAR (WHITE)	1	E01:020
1-3	55100-87J50-YAY	CASE, GEAR (BLACK)	1	E03:020
1-4	55100-87J50-Y5S	CASE, GEAR (WHITE)	1	E03:020
1-5	55100-87J50-YAY	CASE, GEAR (BLACK)	1	E34:020
1-6	55100-87J50-Y5S	CASE, GEAR (WHITE)	1	E34:020
1-7	55100-87J50-QTN	CASE, GEAR (WHITE)	1	E11:(021,022)
1-8	55100-87J50-YAY	CASE, GEAR (BLACK)	1	E11:(021,022)
1-9	55100-87J50-QTN	CASE, GEAR (WHITE)	1	E34:(021,022)
1-10	55100-87J50-YAY	CASE, GEAR (BLACK)	1	E34:(021,022)
2	09263-22039	.BEARING (22X30X30)	1	
3	09265-30004	.BEARING (30X62X17.25)	1	
4	55125-94400	TAB, TRIM	1	
5	09117-08109	BOLT (8X16)	1	
6	09248-10008	PLUG (10X7.5)	3	
7	09168-10022	GASKET (10X17X1.5)	3	
8	09116-08131	BOLT (8X45)	6	
9-1	58100-88LC0-019	PROPELLER (3X11-1/2X9)	1	
9-2	58100-88LD0-019	PROPELLER (3X11-1/2X10)	1	
9-3	58100-88LE0-019	PROPELLER (3X11-1/2X11)	1	
9-4	58100-88LA0-019	PROPELLER (3X11-5/8X12)	1	
9-5	58100-88LB0-019	PROPELLER (3X11-1/2X13)	1	
9-6	58100-88L52-019	PROPELLER (3X11-3/8X14)	1	
9-7	58100-88L62-019	PROPELLER (3X11-1/4X15)	1	
9-8	58100-88L72-019	PROPELLER (3X11-1/8X16)	1	
9-9	58100-88LF0-019	PROPELLER (3X11X17)	1	
9-10	58200-88L30	PROPELLER (3X11-1/2X16)	1	OPT
10	58120-88L01	.BUSH, PROPELLER	1	
11	57632-95320	STOPPER, PROPELLER BUSH	1	
12	57633-94301	SPACER, PROPELLER NUT	1	
13	09141-18005	NUT (M18)	1	

NOTE : (DF40A,DF50A):E01,(DF40A,DF50A,DF60A):E03,
(DF40A,DF50A):E11,DF40AST:E34

FIG.407A

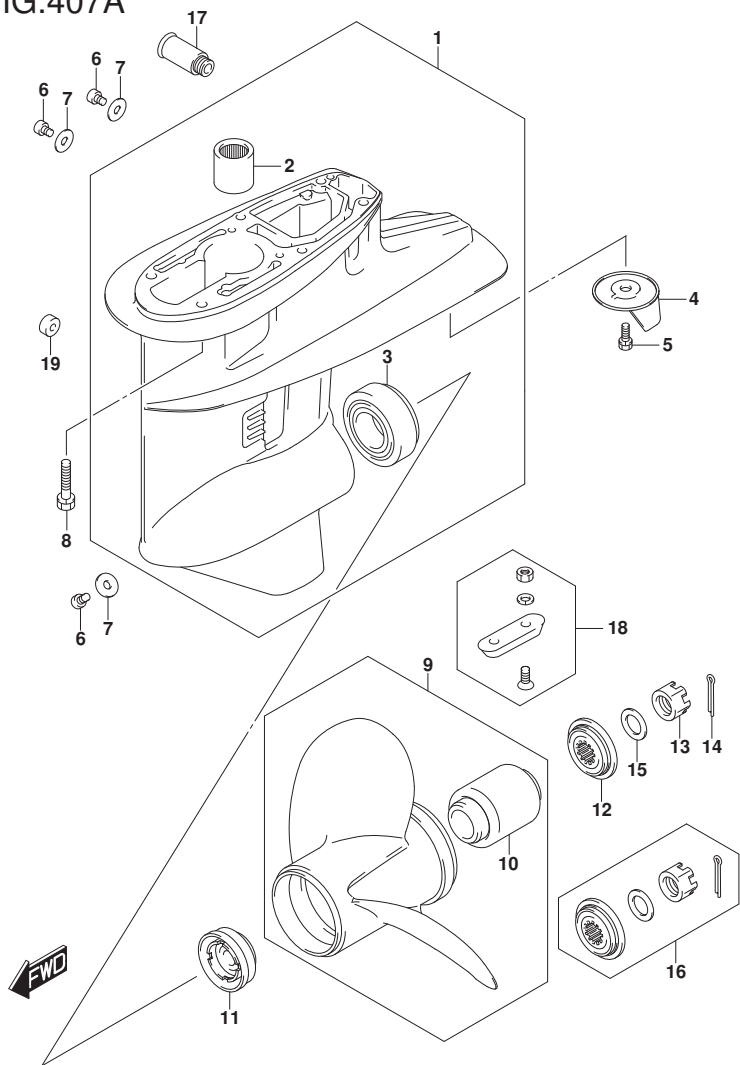


FIG.407A (2-C-8) GEAR CASE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14	09204-03003	PIN (D:3.6,L:25)	1	
15	09160-18028	WASHER (18.5X31X1.0)	1	
16	57630-94301	KIT, PROPELLER NUT	1	OPT
17	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
18	55300-95500	ZINC ASSY, PROTECTION	1	OPT
19	55321-87J11	ANODE	1	OPT
20	25700-88L03	KIT, GEAR CASE	1	OPT,NOT ILLUSTRATED

NOTE : (DF40A,DF50A):E01,(DF40A,DF50A,DF60A):E03,
(DF40A,DF50A):E11,DF40AST:E34

DF40A E01
DF40A E03
DF40A E11
DF40AST E34
DF50A E01
DF50A E03
DF50A E11
DF60A E03

FIG.407B

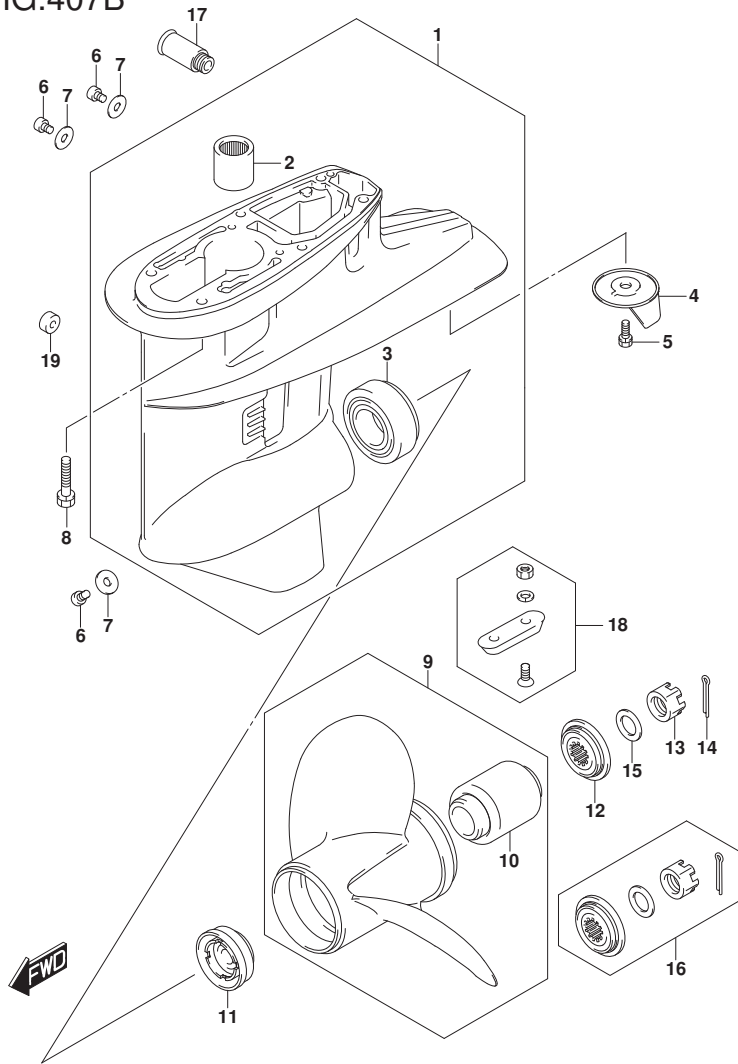


FIG.407B (2-C-9) GEAR CASE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-87J50-YAY	CASE ASSY, GEAR (BLACK)	1	
2	09263-22039	.BEARING (22X30X30)	1	
3	09265-30004	.BEARING (30X62X17.25)	1	
4	55125-94400	TAB, TRIM	1	
5	09117-08109	BOLT (8X16)	1	
6	09248-10008	PLUG (10X7.5)	3	
7	09168-10022	GASKET (10X17X1.5)	3	
8	09116-08131	BOLT (8X45)	6	
9-1	58100-88LC0-019	PROPELLER (3X11-1/2X9)	1	
9-2	58100-88LD0-019	PROPELLER (3X11-1/2X10)	1	
9-3	58100-88LE0-019	PROPELLER (3X11-1/2X11)	1	
9-4	58100-88LA0-019	PROPELLER (3X11-5/8X12)	1	
9-5	58100-88LB0-019	PROPELLER (3X11-1/2X13)	1	
9-6	58100-88L52-019	PROPELLER (3X11-3/8X14)	1	
9-7	58100-88L62-019	PROPELLER (3X11-1/4X15)	1	
9-8	58100-88L72-019	PROPELLER (3X11-1/8X16)	1	
9-9	58100-88LF0-019	PROPELLER (3X11X17)	1	
9-10	58200-88L30	PROPELLER (3X11-1/2X16)	1	OPT
10	58120-88L01	.BUSH, PROPELLER	1	
11	57632-95320	STOPPER, PROPELLER BUSH	1	
12	57633-94301	SPACER, PROPELLER NUT	1	
13	09141-18005	NUT (M18)	1	
14	09204-03003	PIN (D:3.6,L:25)	1	
15	09160-18028	WASHER (18.5X31X1.0)	1	
16	57630-94301	KIT, PROPELLER NUT	1	OPT
17	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
18	55300-95500	ZINC ASSY, PROTECTION	1	OPT
19	55321-87J11	ANODE	1	OPT

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60ATH):E01

FIG.407B

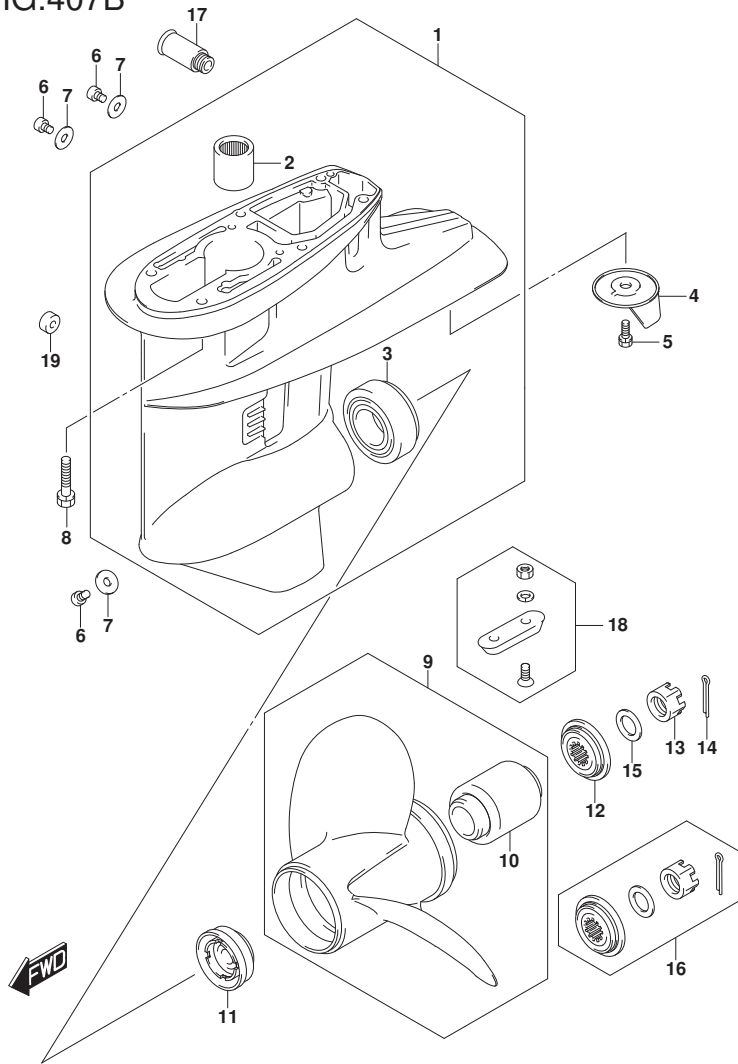


FIG.407B (2-C-10) GEAR CASE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	25700-88L03	KIT, GEAR CASE	1	OPT,NOT ILLUSTRATED

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60ATH):E01

DF40AQH E01
DF40ATH E01
DF50ATH E01
DF60ATH E01

FIG.407C

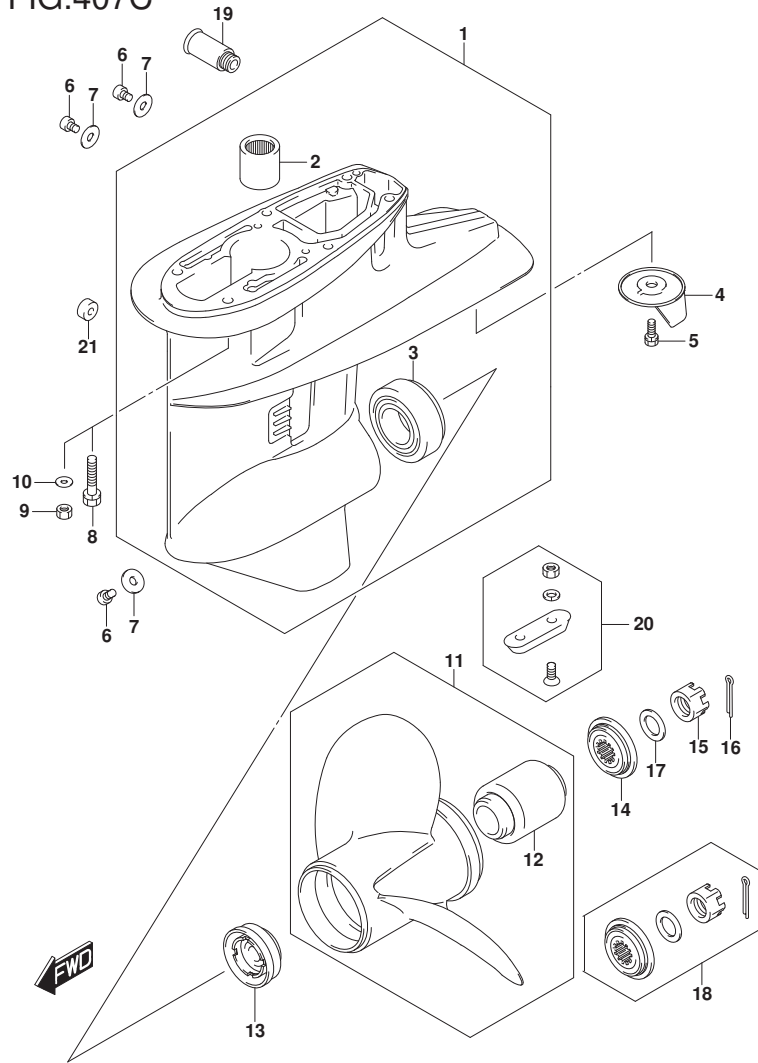


FIG.407C (2-C-11) GEAR CASE (DF60A:(E01,E11))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-87J50-YAY	CASE, GEAR (BLACK)	1	E01
1-2	55100-87J50-Y5S	CASE, GEAR (WHITE)	1	E01
1-3	55100-87J50-QTN	CASE, GEAR (WHITE)	1	E11
1-4	55100-87J50-YAY	CASE, GEAR (BLACK)	1	E11
2	09263-22039	.BEARING (22X30X30)	1	
3	09265-30004	.BEARING (30X62X17.25)	1	
4	55125-94400	TAB, TRIM	1	
5	09117-08109	BOLT (8X16)	1	
6	09248-10008	PLUG (10X7.5)	3	
7	09168-10022	GASKET (10X17X1.5)	3	
8-1	09116-08131	BOLT (8X45)	6	W/TRANSOM(S)
8-2	09116-08131	BOLT (8X45)	6	W/TRANSOM(L)
9	09140-08016	NUT	6	W/TRANSOM(X)
10	09160-08082	WASHER (8.5X16X1.2)	6	W/TRANSOM(X)
11-1	58100-88LC0-019	PROPELLER (3X11-1/2X9)	1	
11-2	58100-88LD0-019	PROPELLER (3X11-1/2X10)	1	
11-3	58100-88LE0-019	PROPELLER (3X11-1/2X11)	1	
11-4	58100-88LA0-019	PROPELLER (3X11-5/8X12)	1	
11-5	58100-88LB0-019	PROPELLER (3X11-1/2X13)	1	
11-6	58100-88L52-019	PROPELLER (3X11-3/8X14)	1	
11-7	58100-88L62-019	PROPELLER (3X11-1/4X15)	1	
11-8	58100-88L72-019	PROPELLER (3X11-1/8X16)	1	
11-9	58100-88LF0-019	PROPELLER (3X11X17)	1	
11-10	58200-88L30	PROPELLER (3X11-1/2X16)	1	OPT
12	58120-88L01	.BUSH, PROPELLER	1	
13	57632-95320	STOPPER, PROPELLER BUSH	1	
14	57633-94301	SPACER, PROPELLER NUT	1	
15	09141-18005	NUT (M18)	1	
16	09204-03003	PIN (D:3.6,L:25)	1	
17	09160-18028	WASHER (18.5X31X1.0)	1	
18	57630-94301	KIT, PROPELLER NUT	1	OPT
19	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
20	55300-95500	ZINC ASSY, PROTECTION	1	OPT
21	55321-87J11	ANODE	1	OPT

FIG.407C

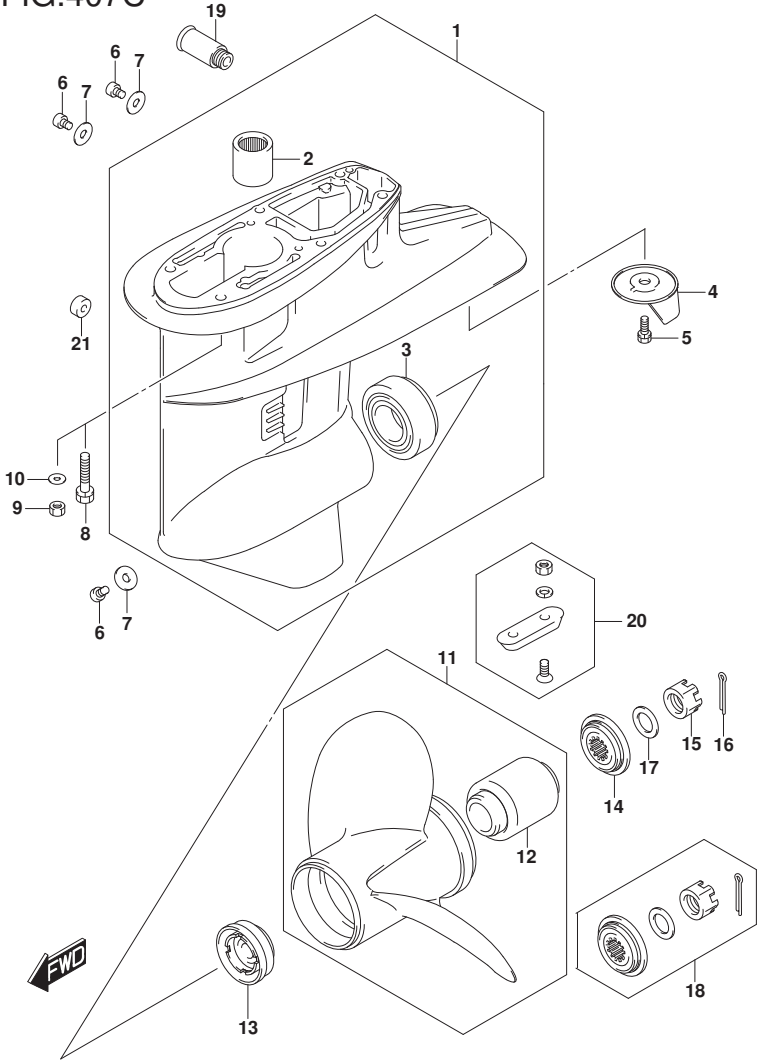


FIG.407C (2-C-12) GEAR CASE (DF60A:(E01,E11))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	25700-88L03	KIT, GEAR CASE	1	OPT,NOT ILLUSTRATED

DF60A E01
DF60A E11

FIG.407D

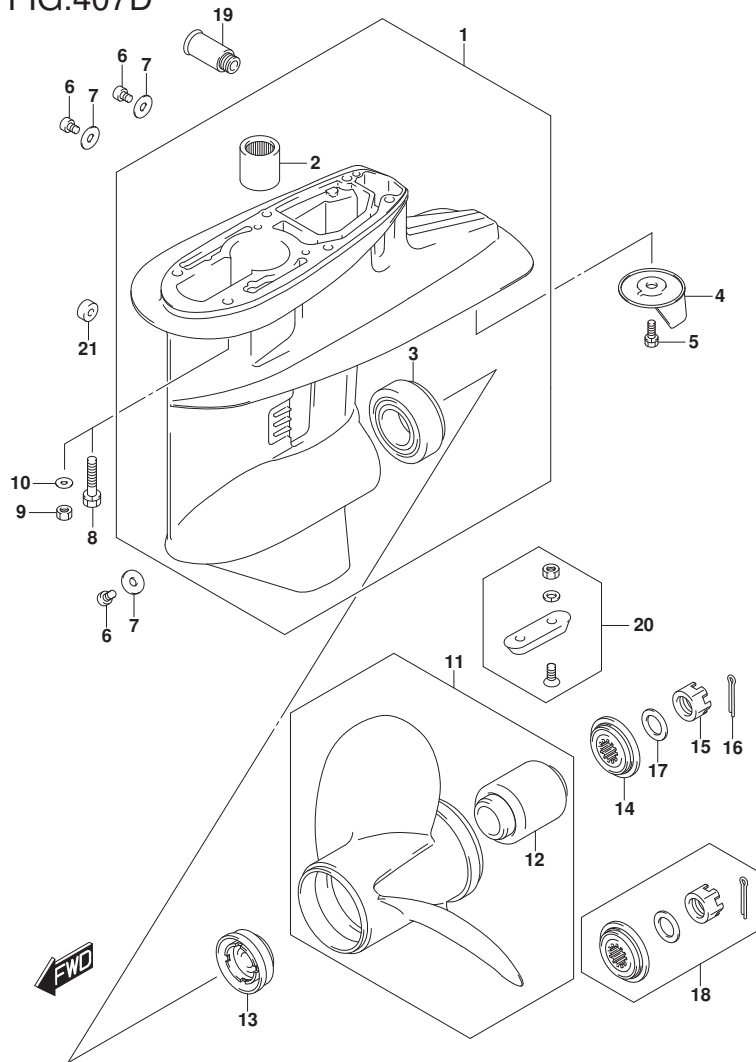


FIG.407D (2-C-13) GEAR CASE (DF60A:E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-87J50-YAY	CASE, GEAR (BLACK)	1	020
1-2	55100-87J50-Y5S	CASE, GEAR (WHITE)	1	020
1-3	55100-87J50-QTN	CASE, GEAR (WHITE)	1	021,022
1-4	55100-87J50-YAY	CASE, GEAR (BLACK)	1	021,022
2	09263-22039	.BEARING (22X30X30)	1	
3	09265-30004	.BEARING (30X62X17.25)	1	
4	55125-94400	TAB, TRIM	1	
5	09117-08109	BOLT (8X16)	1	
6	09248-10008	PLUG (10X7.5)	3	
7	09168-10022	GASKET (10X17X1.5)	3	
8	09116-08131	BOLT (8X45)	6	W/TRANSOM(L)
9	09140-08016	NUT	6	W/TRANSOM(X)
10	09160-08082	WASHER (8.5X16X1.2)	6	W/TRANSOM(X)
11-1	58100-88LC0-019	PROPELLER (3X11-1/2X9)	1	
11-2	58100-88LD0-019	PROPELLER (3X11-1/2X10)	1	
11-3	58100-88LE0-019	PROPELLER (3X11-1/2X11)	1	
11-4	58100-88LA0-019	PROPELLER (3X11-5/8X12)	1	
11-5	58100-88LB0-019	PROPELLER (3X11-1/2X13)	1	
11-6	58100-88L52-019	PROPELLER (3X11-3/8X14)	1	
11-7	58100-88L62-019	PROPELLER (3X11-1/4X15)	1	
11-8	58100-88L72-019	PROPELLER (3X11-1/8X16)	1	
11-9	58100-88LF0-019	PROPELLER (3X11X17)	1	
11-10	58200-88L30	PROPELLER (3X11-1/2X16)	1	OPT
12	58120-88L01	.BUSH, PROPELLER	1	
13	57632-95320	STOPPER, PROPELLER BUSH	1	
14	57633-94301	SPACER, PROPELLER NUT	1	
15	09141-18005	NUT (M18)	1	
16	09204-03003	PIN (D:3.6,L:25)	1	
17	09160-18028	WASHER (18.5X31X1.0)	1	
18	57630-94301	KIT, PROPELLER NUT	1	OPT
19	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
20	55300-95500	ZINC ASSY, PROTECTION	1	OPT
21	55321-87J11	ANODE	1	OPT

FIG.407D

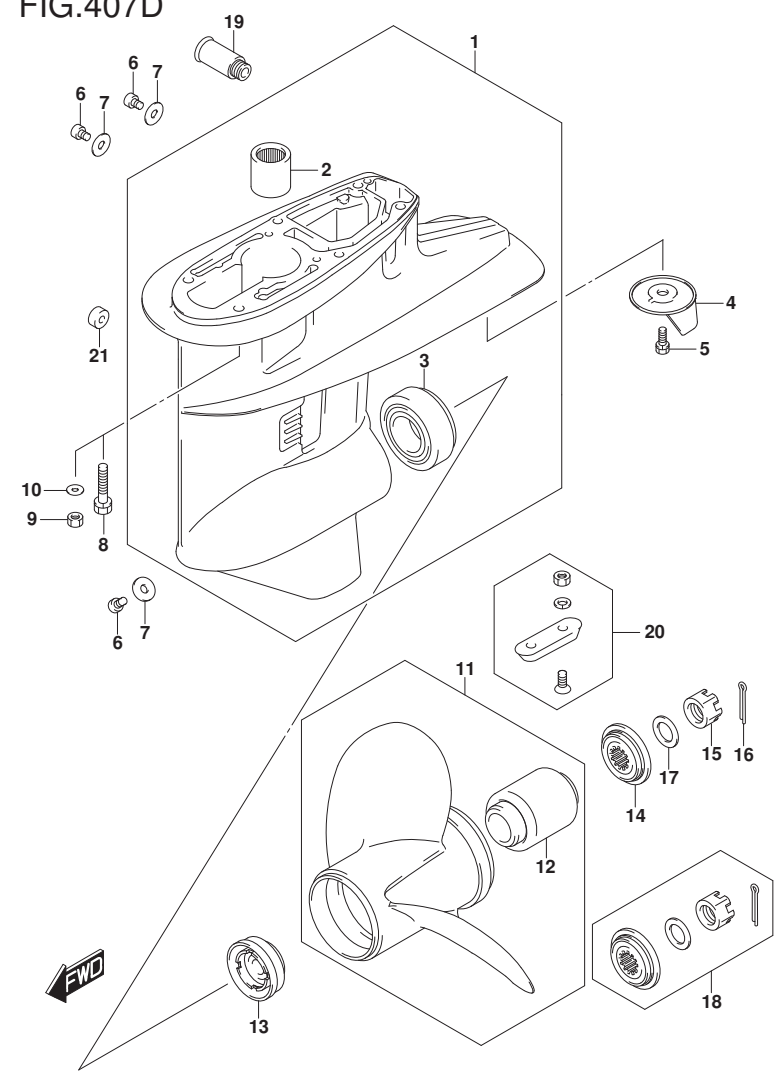


FIG.407D (2-C-14) GEAR CASE (DF60A:E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	25700-88L03	KIT, GEAR CASE	1	OPT,NOT ILLUSTRATED

DF60A E40

FIG.407E

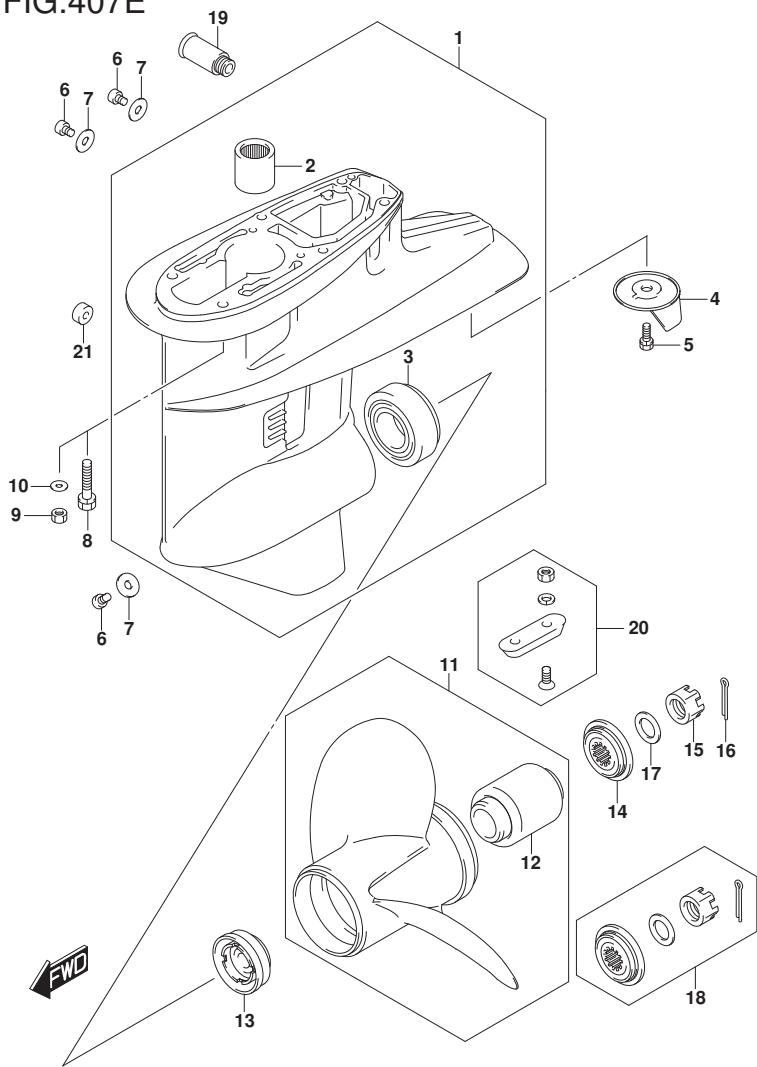


FIG.407E (2-D-2) GEAR CASE ((DF60AQH,DF60ATH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-87J50-YAY	CASE ASSY, GEAR (BLACK)	1	
2	09263-22039	.BEARING (22X30X30)	1	
3	09265-30004	.BEARING (30X62X17.25)	1	
4	55125-94400	TAB, TRIM	1	
5	09117-08109	BOLT (8X16)	1	
6	09248-10008	PLUG (10X7.5)	3	
7	09168-10022	GASKET (10X17X1.5)	3	
8	09116-08131	BOLT (8X45)	6	W/TRANSOM(L)
9	09140-08016	NUT	6	W/TRANSOM(X)
10	09160-08082	WASHER (8.5X16X1.2)	6	W/TRANSOM(X)
11-1	58100-88LC0-019	PROPELLER (3X11-1/2X9)	1	
11-2	58100-88LD0-019	PROPELLER (3X11-1/2X10)	1	
11-3	58100-88LE0-019	PROPELLER (3X11-1/2X11)	1	
11-4	58100-88LA0-019	PROPELLER (3X11-5/8X12)	1	
11-5	58100-88LB0-019	PROPELLER (3X11-1/2X13)	1	
11-6	58100-88L52-019	PROPELLER (3X11-3/8X14)	1	
11-7	58100-88L62-019	PROPELLER (3X11-1/4X15)	1	
11-8	58100-88L72-019	PROPELLER (3X11-1/8X16)	1	
11-9	58100-88LF0-019	PROPELLER (3X11X17)	1	
11-10	58200-88L30	PROPELLER (3X11-1/2X16)	1	OPT
12	58120-88L01	.BUSH, PROPELLER	1	
13	57632-95320	STOPPER, PROPELLER BUSH	1	
14	57633-94301	SPACER, PROPELLER NUT	1	
15	09141-18005	NUT (M18)	1	
16	09204-03003	PIN (D:3.6,L:25)	1	
17	09160-18028	WASHER (18.5X31X1.0)	1	
18	57630-94301	KIT, PROPELLER NUT	1	OPT
19	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
20	55300-95500	ZINC ASSY, PROTECTION	1	OPT
21	55321-87J11	ANODE	1	OPT

FIG.407E

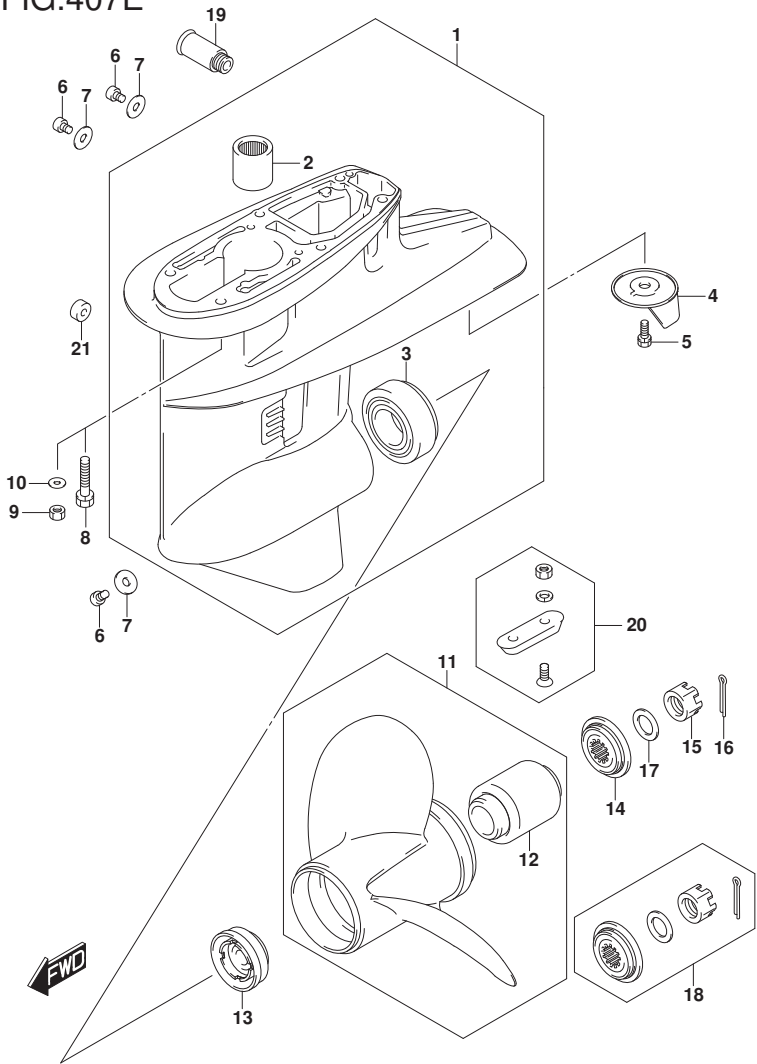


FIG.407E (2-D-3) GEAR CASE ((DF60AQH,DF60ATH):E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	25700-88L03	KIT, GEAR CASE	1	OPT,NOT ILLUSTRATED

DF60AQH E40
DF60ATH E40

FIG.407F

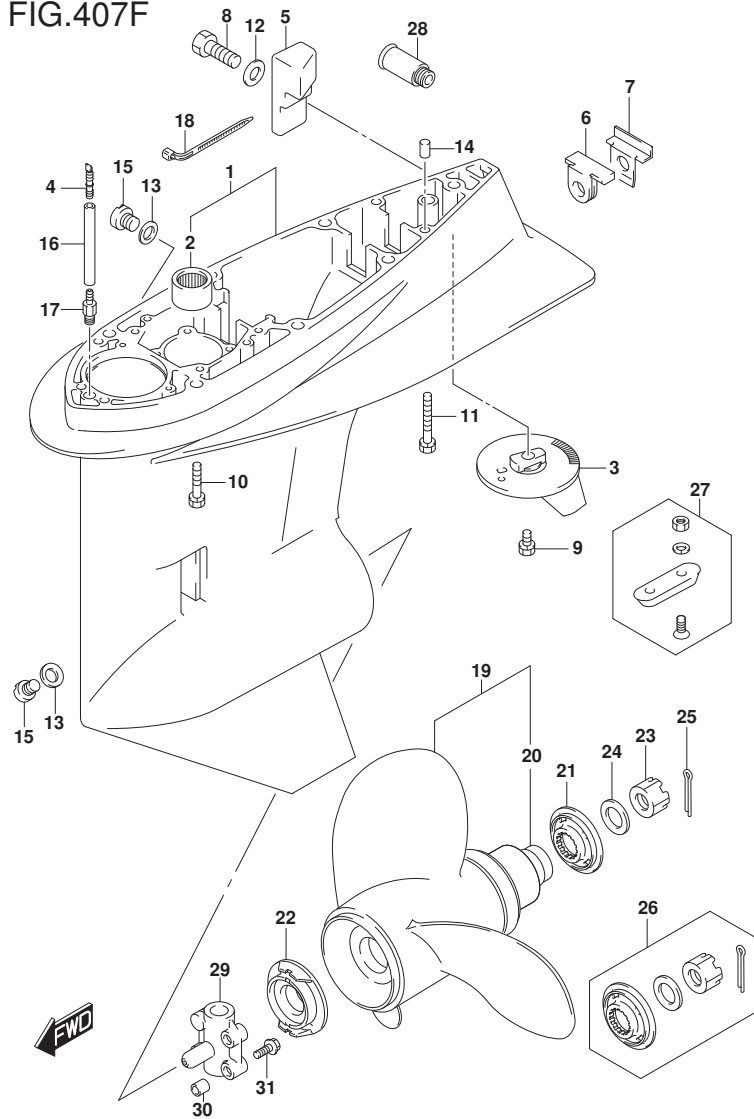


FIG.407F (2-D-4) GEAR CASE (DF50AVT,DF50AVTH,DF60AVT,DF60AVTH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55110-90J16-YAY	CASE, GEAR (BLACK)	1	
2	09263-28016	.BEARING (28.6X38X31.8)	1	
3	55125-90J01	TAB, TRIM	1	
4	55127-87D00	UNION, SPEEDOMETER HOSE	1	
5	55321-90J01	ANODE, GEAR CASE	1	
6	55332-87D12	RUBBER, EXHAUST SEAL	1	
7	55333-87D10	PLATE, EXHAUST SEAL	1	
8	09100-06131	BOLT (6X12)	1	
9	09116-08137	BOLT (8X22)	1	
10	09116-10150	BOLT (10X55)	6	
11	09117-10039	BOLT (10X80)	1	
12	09160-06085	WASHER (6.5X15X1.0)	1	
13	09168-10022	GASKET (10X17X1.5)	2	
14	09202-08006	PIN (8X12)	2	
15	09248-10008	PLUG (10X7.5)	2	
16	09355-40805-600	HOSE (4X8X600)	1	L:600->70
17	09362-09008	UNION	1	
18	09407-10404	CLAMP (L:100)	2	
19-1	58100-87LA0-019	PROPELLER (3X14X13)	1	
19-2	58100-87LB0-019	PROPELLER (3X13.875X15)	1	
19-3	58100-87LC0-019	PROPELLER (3X13.75X17)	1	
19-4	58100-87LJ0-019	PROPELLER (3X13.75X12)	1	
19-5	58100-87LH0-019	PROPELLER (3X14X11)	1	
19-6	58100-87LG1-019	PROPELLER (3X14X9)	1	
20	58105-90J00	.BUSH SET, PROPELLER	1	
21	57633-90J02	SPACER, PROPELLER NUT	1	
22	57635-90J01	STOPPER, PROPELLER BUSH	1	
23	09141-18005	NUT (M18)	1	
24	09160-18028	WASHER (18.5X31X1.0)	1	
25	09204-03003	PIN (D:3.6,L:25)	1	
26	57630-90J00	KIT, PROPELLER NUT	1	OPT
27	55300-95500	ZINC ASSY, PROTECTION	1	OPT
28	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
29	56145-99E01	HOUSING, SHIFT CAM	1	
30	09206-09012	PIN (7.4X9X10)	2	
31	01550-0630C	BOLT	3	

FIG.407F


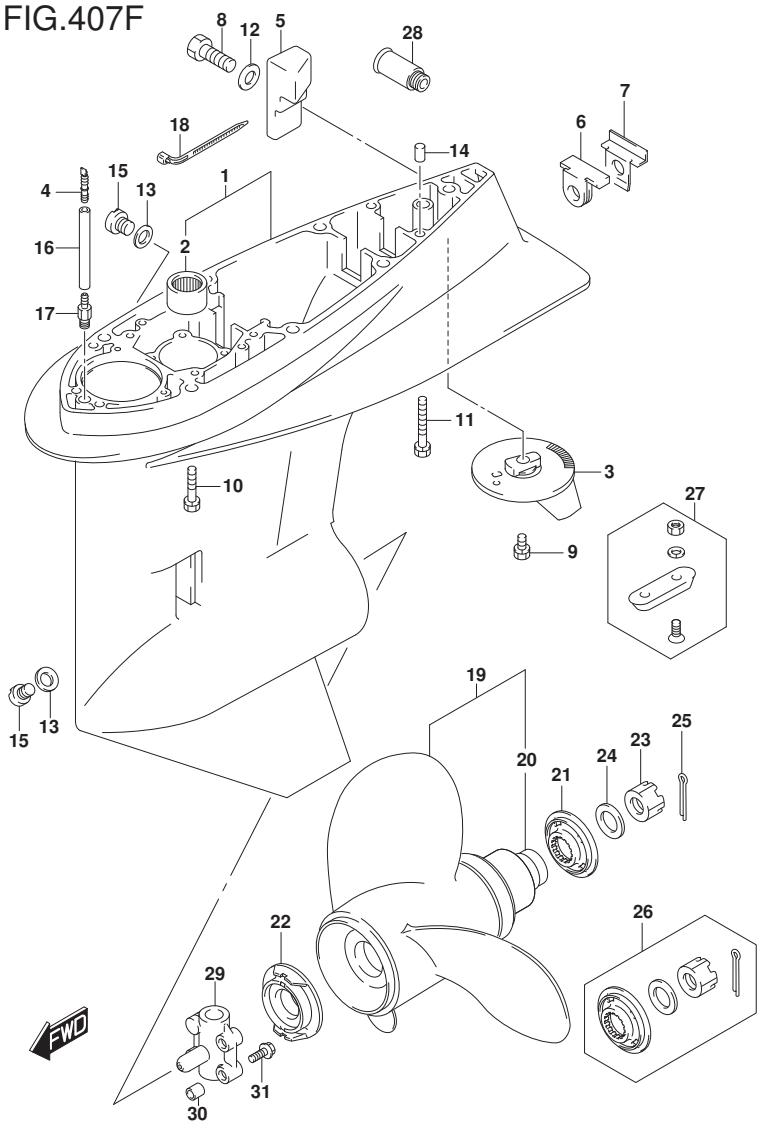


FIG.407F (2-D-5) GEAR CASE (DF50AVT,DF50AVTH,DF60AVT,DF60AVTH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	25700-99E00	SEALING KIT, GEAR CASE	1	OPT,NOT ILLUSTRATED

- DF50AVT E03
- DF50AVTH E01
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.407G

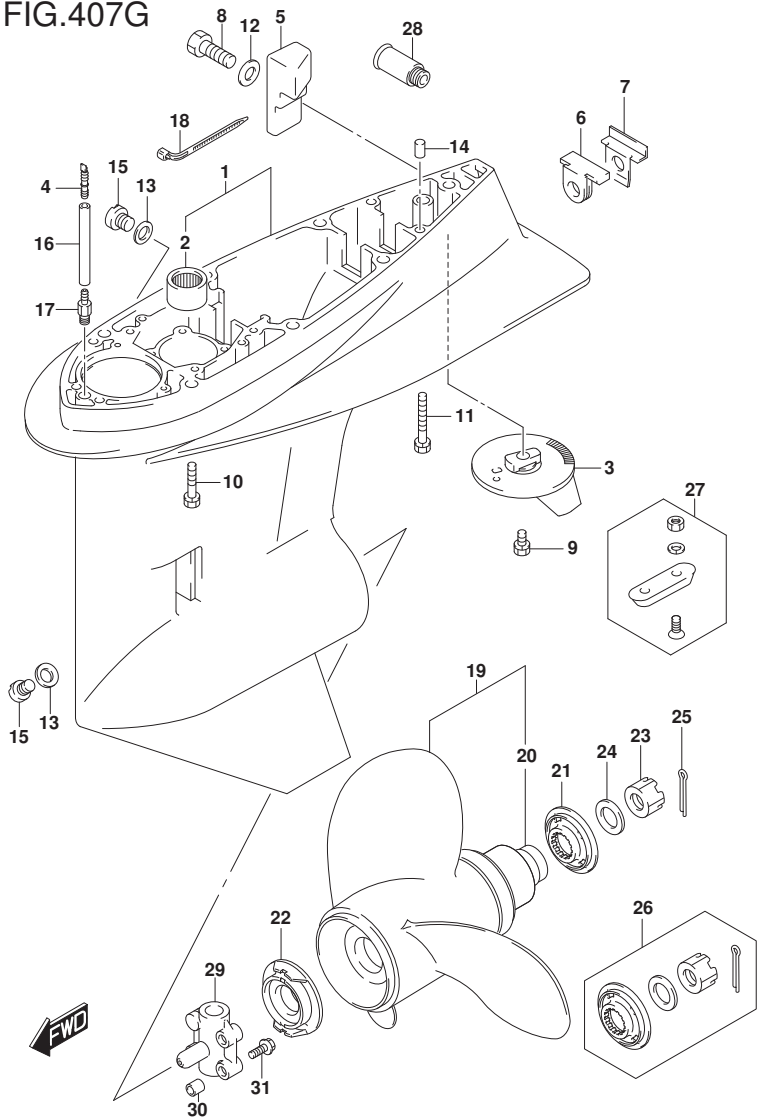

DF60A_E11_022_407G
GEAR CASE

FIG.407G (2-D-6) GEAR CASE (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55110-90J16-YAY	CASE, GEAR (BLACK)	1	020
1-2	55110-90J16-Y5S	CASE, GEAR (WHITE)	1	020
1-3	55110-90J16-QTN	CASE, GEAR (WHITE)	1	021,022
1-4	55110-90J16-YAY	CASE, GEAR (BLACK)	1	021,022
2	09263-28016	.BEARING (28.6X38X31.8)	1	
3	55125-90J01	TAB, TRIM	1	
4	55127-87D00	UNION, SPEEDOMETER HOSE	1	
5	55321-90J01	ANODE, GEAR CASE	1	
6	55332-87D12	RUBBER, EXHAUST SEAL	1	
7	55333-87D10	PLATE, EXHAUST SEAL	1	
8	09100-06131	BOLT (6X12)	1	
9	09116-08137	BOLT (8X22)	1	
10	09116-10150	BOLT (10X55)	6	
11	09117-10039	BOLT (10X80)	1	
12	09160-06085	WASHER (6.5X15X1.0)	1	
13	09168-10022	GASKET (10X17X1.5)	2	
14	09202-08006	PIN (8X12)	2	
15	09248-10008	PLUG (10X7.5)	2	
16	09355-40805-600	HOSE (4X8X600)	1	L:600->70
17	09362-09008	UNION	1	
18	09407-10404	CLAMP (L:100)	2	
19-1	58100-87LA0-019	PROPELLER (3X14X13)	1	
19-2	58100-87LB0-019	PROPELLER (3X13.875X15)	1	
19-3	58100-87LC0-019	PROPELLER (3X13.75X17)	1	
19-4	58100-87LJ0-019	PROPELLER (3X13.75X12)	1	
19-5	58100-87LH0-019	PROPELLER (3X14X11)	1	
19-6	58100-87LG1-019	PROPELLER (3X14X9)	1	
20	58105-90J00	.BUSH SET, PROPELLER	1	
21	57633-90J02	SPACER, PROPELLER NUT	1	
22	57635-90J01	STOPPER, PROPELLER BUSH	1	
23	09141-18005	NUT (M18)	1	
24	09160-18028	WASHER (18.5X31X1.0)	1	
25	09204-03003	PIN (D:3.6,L:25)	1	
26	57630-90J00	KIT, PROPELLER NUT	1	OPT
27	55300-95500	ZINC ASSY, PROTECTION	1	OPT
28	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT

DF60A_E11_022

FIG.407G

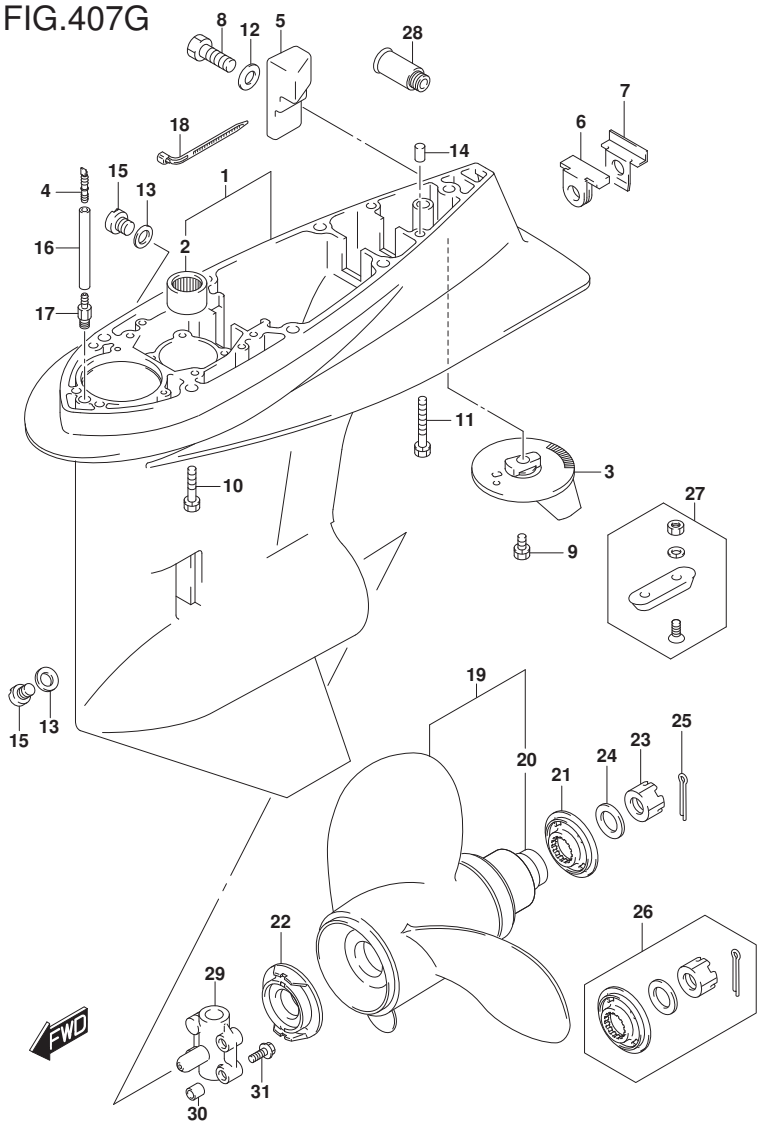


FIG.407G (2-D-7) GEAR CASE (DF40ASVT:E34)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	56145-99E01	HOUSING, SHIFT CAM	1	
30	09206-09012	PIN (7.4X9X10)	2	
31	01550-0630C	BOLT	3	
32	25700-99E00	SEALING KIT, GEAR CASE	1	OPT,NOT ILLUSTRATED

DF40ASVT E34

Diagram illustrating the assembly of a boat's transom (stern) component, showing various parts and their assembly sequence:

- 1: Transom plate
- 2: Motor bracket
- 3: Transom plate (inner)
- 4: Motor bracket (inner)
- 5: Bolt
- 6: Bolt
- 7: Motor bracket (lower)
- 8: Bolt
- 9: Bolt
- 10: Bolt
- 11: Bolt
- 12: Bolt
- 13: Bolt
- 14: Bolt
- 15: Bolt
- 16: Bolt
- 17: Bolt
- 18: Bolt
- 19: Bolt
- 20: Bolt
- 21: Bolt
- 22: Bolt
- 23: Bolt
- 24: Bolt
- 25: Bolt

Assembly instructions are provided for each part, detailing the sequence and location of installation. A 'FWD' arrow indicates the forward direction.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61112-88L10	RUBBER, SIDE COVER	1	
2	61134-88L11	SEAL, SIDE COVER	1	
3-1	61811-88L30-YAY	COVER, SIDE STBD (BLACK)	1	020:W/TRANSOM(S) STBD
3-2	61811-88L30-Y5S	COVER, SIDE STBD (WHITE)	1	020:W/TRANSOM(S) STBD
3-3	61811-88L20-YAY	COVER, SIDE STBD (BLACK)	1	020:W/TRANSOM(L) STBD
3-4	61811-88L20-Y5S	COVER, SIDE STBD (WHITE)	1	020:W/TRANSOM(L) STBD
3-5	61811-88L20-YAY	COVER, SIDE STBD (BLACK)	1	020:W/TRANSOM(X) STBD
3-6	61811-88L20-Y5S	COVER, SIDE STBD (WHITE)	1	020:W/TRANSOM(X) STBD
3-7	61811-88L30-QTN	COVER, SIDE STBD (WHITE)	1	(021,022):W/TRANSOM(S) STBD
3-8	61811-88L30-YAY	COVER, SIDE STBD (BLACK)	1	(021,022):W/TRANSOM(S) STBD
3-9	61811-88L20-QTN	COVER, SIDE STBD (WHITE)	1	(021,022):W/TRANSOM(L) STBD
3-10	61811-88L20-YAY	COVER, SIDE STBD (BLACK)	1	(021,022):W/TRANSOM(L) STBD
3-11	61811-88L20-QTN	COVER, SIDE STBD (WHITE)	1	(021,022):W/TRANSOM(X) STBD
3-12	61811-88L20-YAY	COVER, SIDE STBD (BLACK)	1	(021,022):W/TRANSOM(X) STBD

DF60A_E11_022

Diagram illustrating the assembly of the transom plate (1) and transom support (2) onto the hull (3). The diagram shows various components and their assembly points:

- 1: Transom plate
- 2: Transom support
- 3: Hull
- 4: Transom plate (bottom view)
- 5: Bolt
- 6: Bolt
- 7: Transom support bracket
- 8: Bolt
- 9: Bolt
- 10: Bolt
- 11: Bolt
- 12: Bolt
- 13: Bolt
- 14: Bolt
- 15: Bolt
- 16: Transom support bracket
- 17: Bolt
- 18: Bolt
- 19: Bolt
- 20: Bolt
- 21: Bolt
- 22: Bolt
- 23: Bolt
- 24: Bolt
- 25: Bolt

A "FWD" arrow indicates the forward direction.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
4-1	61821-88L30-YAY	COVER, SIDE PORT (BLACK)	1	020:W/TRANSOM(S) PORT
4-2	61821-88L30-Y5S	COVER, SIDE PORT (WHITE)	1	020:W/TRANSOM(S) PORT
4-3	61821-88L20-YAY	COVER, SIDE PORT (BLACK)	1	020:W/TRANSOM(L) PORT
4-4	61821-88L20-Y5S	COVER, SIDE PORT (WHITE)	1	020:W/TRANSOM(L) PORT
4-5	61821-88L20-YAY	COVER, SIDE PORT (BLACK)	1	020:W/TRANSOM(X) PORT
4-6	61821-88L20-Y5S	COVER, SIDE PORT (WHITE)	1	020:W/TRANSOM(X) PORT
4-7	61821-88L30-QTN	COVER, SIDE PORT (WHITE)	1	(021,022):W/TRANSOM(S) PORT
4-8	61821-88L30-YAY	COVER, SIDE PORT (BLACK)	1	(021,022):W/TRANSOM(S) PORT
4-9	61821-88L20-QTN	COVER, SIDE PORT (WHITE)	1	(021,022):W/TRANSOM(L) PORT
4-10	61821-88L20-YAY	COVER, SIDE PORT (BLACK)	1	(021,022):W/TRANSOM(L) PORT
4-11	61821-88L20-QTN	COVER, SIDE PORT (WHITE)	1	(021,022):W/TRANSOM(X) PORT
4-12	61821-88L20-YAY	COVER, SIDE PORT (BLACK)	1	(021,022):W/TRANSOM(X) PORT
5-1	09136-06148	SCREW (6X35)	9	W/TRANSOM(S)
5-2	09136-06148	SCREW (6X35)	10	W/TRANSOM(L)
5-3	09136-06148	SCREW (6X35)	10	W/TRANSOM(X)
6	61151-88L01	CUSHION, SIDE COVER	1	

DF60A_E11_022

FIG.410A

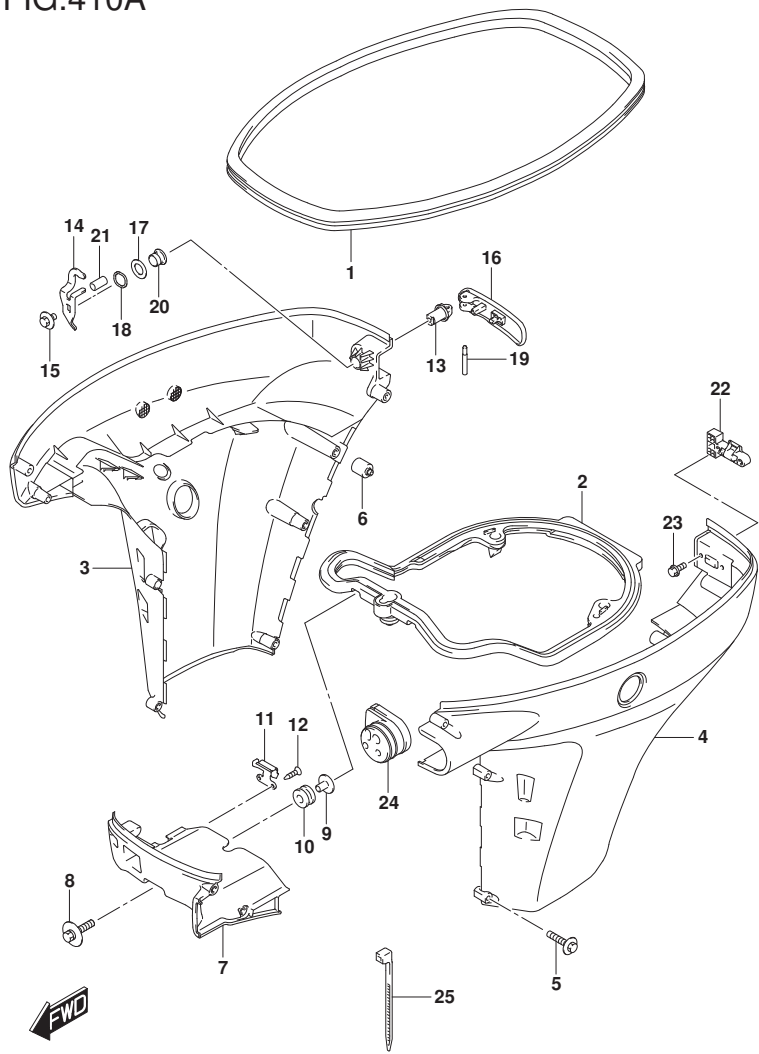


FIG.410A (2-D-10) SIDE COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
7-1	61831-88L10-YAY	PANEL, FRONT (BLACK)	1	020	
7-2	61831-88L10-Y5S	PANEL, FRONT (WHITE)	1	020	
7-3	61831-88L10-QTN	PANEL, FRONT (WHITE)	1	021,022	
7-4	61831-88L10-YAY	PANEL, FRONT (BLACK)	1	021,022	
8	09116-08174	BOLT (8X38)	2		
9	09169-08050	WASHER (ID:8.5)	2		
10	09320-11023	CUSHION	2		
11	61412-88L00	HOOK, FRONT PANEL	1		
12	03542-05169	SCREW	2		
13	61632-93J00	SHAFT, ENGINE COVER HOOK	1		
14	61641-88L00	HOOK, ENGINE COVER	1		
15	09116-06127	BOLT (6X12)	1		
16	61633-88L00	LEVER, HOOK REAR	1		
17	09160-13014	WASHER (13.2X25X1)	1		
18	09164-14008	WASHER	1		
19	09202-04022	PIN	1		
20	09306-13007	BUSH	1		
21	09352-50901-600	HOSE (5X9X600)	1	L:600->20	
22	61673-93J11	LATCH, HOOK LEVER	1		
23	09103-05026	BOLT (5X10)	2		
24	61124-88L11	GROMMET, R/CON CABLE	1		

NOTE : DF40A,DF40AQH,DF40ATH,DF40AST,DF50A,DF50ATH,DF60A,DF60AQH,
DF60ATH,DF40ASVT

FIG.410A

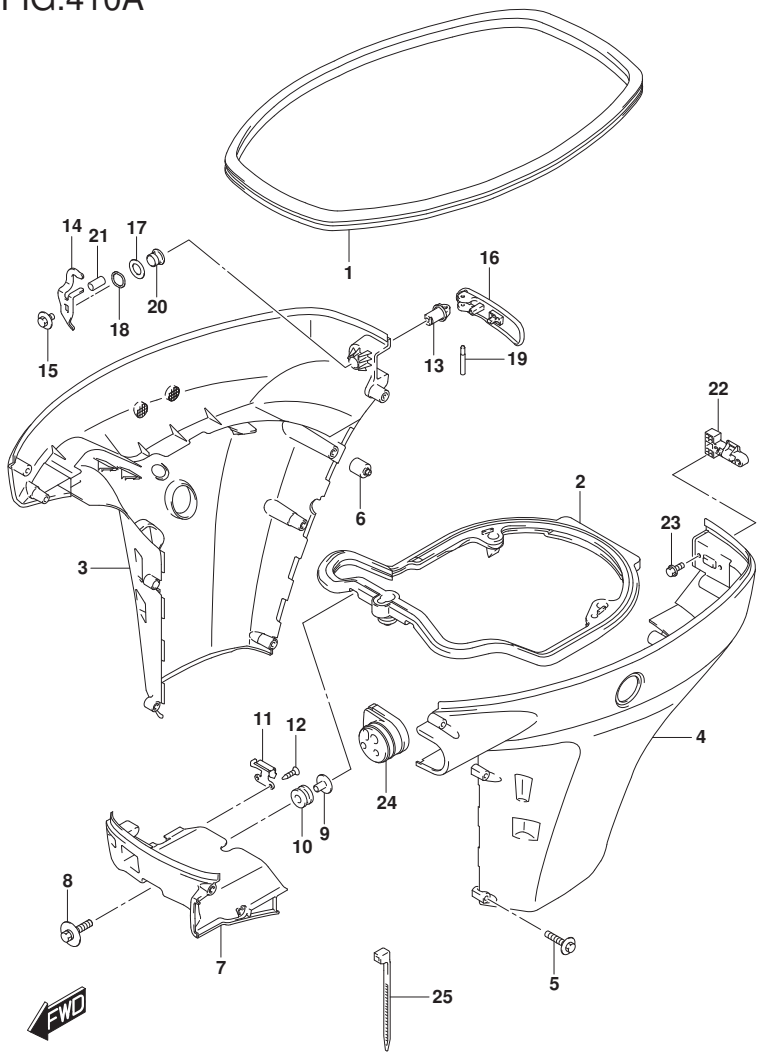


FIG.410A (2-D-11) SIDE COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	09407-25402	CLAMP (L:250)	1	

NOTE : DF40A,DF40AQH,DF40ATH,DF40AST,DF50A,DF50ATH,DF60A,DF60AQH,
DF60ATH,DF40ASVT

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AQH E01
- DF40AST E34
- DF40ASVT E34
- DF40ATH E01
- DF50A E01
- DF50A E03
- DF50A E11
- DF50ATH E01
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40

FIG.410B

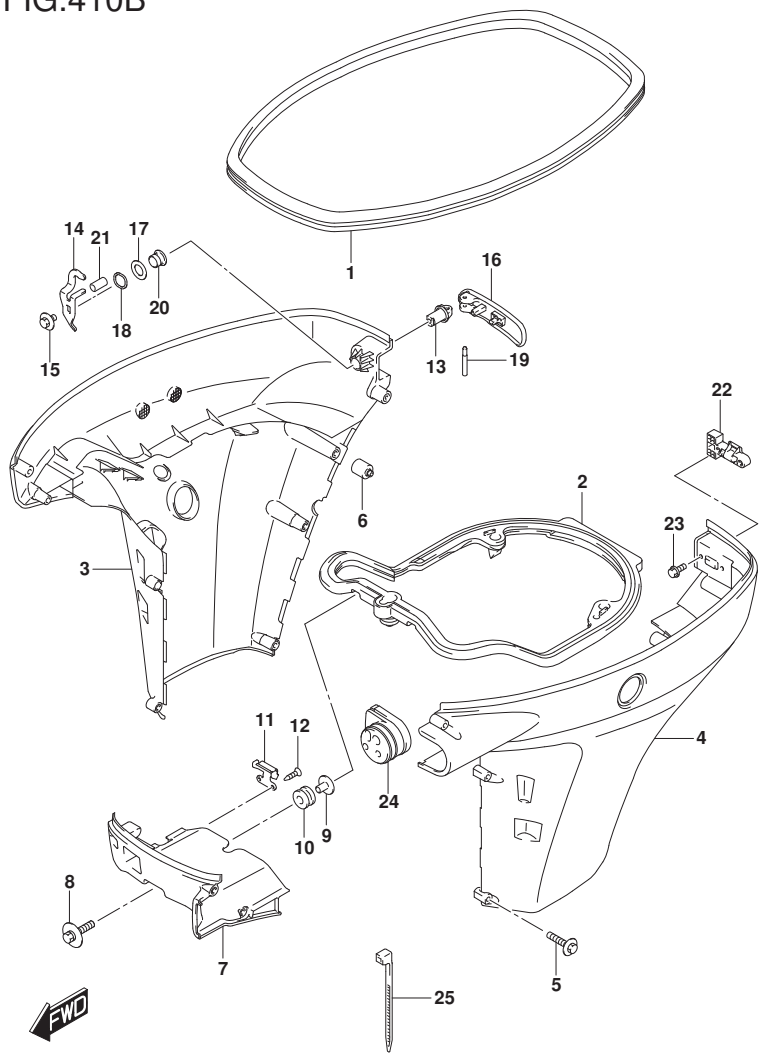


FIG.410B (2-D-12) SIDE COVER (DF50AVT,DF50AVTH,DF60AVT,DF60AVTH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61112-88L10	RUBBER, SIDE COVER	1	
2	61134-88L11	SEAL, SIDE COVER	1	
3-1	61811-88L30-YAY	COVER, SIDE STBD (BLACK)	1	W/TRANSOM(L) STBD
3-2	61811-88L20-YAY	COVER, SIDE STBD (BLACK)	1	W/TRANSOM(X) STBD
4-1	61821-88L30-YAY	COVER, SIDE PORT (BLACK)	1	W/TRANSOM(L) PORT
4-2	61821-88L20-YAY	COVER, SIDE PORT (BLACK)	1	W/TRANSOM(X) PORT
5-1	09136-06148	SCREW (6X35)	9	W/TRANSOM(L)
5-2	09136-06148	SCREW (6X35)	10	W/TRANSOM(X)
6	61151-88L01	CUSHION, SIDE COVER	1	
7	61831-88L10-YAY	PANEL, FRONT (BLACK)	1	
8	09116-08174	BOLT (8X38)	2	
9	09169-08050	WASHER (ID:8.5)	2	
10	09320-11023	CUSHION	2	
11	61412-88L00	HOOK, FRONT PANEL	1	
12	03542-05169	SCREW	2	
13	61632-93J00	SHAFT, ENGINE COVER HOOK	1	
14	61641-88L00	HOOK, ENGINE COVER	1	
15	09116-06127	BOLT (6X12)	1	
16	61633-88L00	LEVER, HOOK REAR	1	
17	09160-13014	WASHER (13.2X25X1)	1	
18	09164-14008	WASHER	1	
19	09202-04022	PIN	1	
20	09306-13007	BUSH	1	
21	09352-50901-600	HOSE (5X9X600)	1	L:600->20
22	61673-93J11	LATCH, HOOK LEVER	1	
23	09103-05026	BOLT (5X10)	2	
24	61124-88L11	GROMMET, R/CON CABLE	1	

FIG.410B

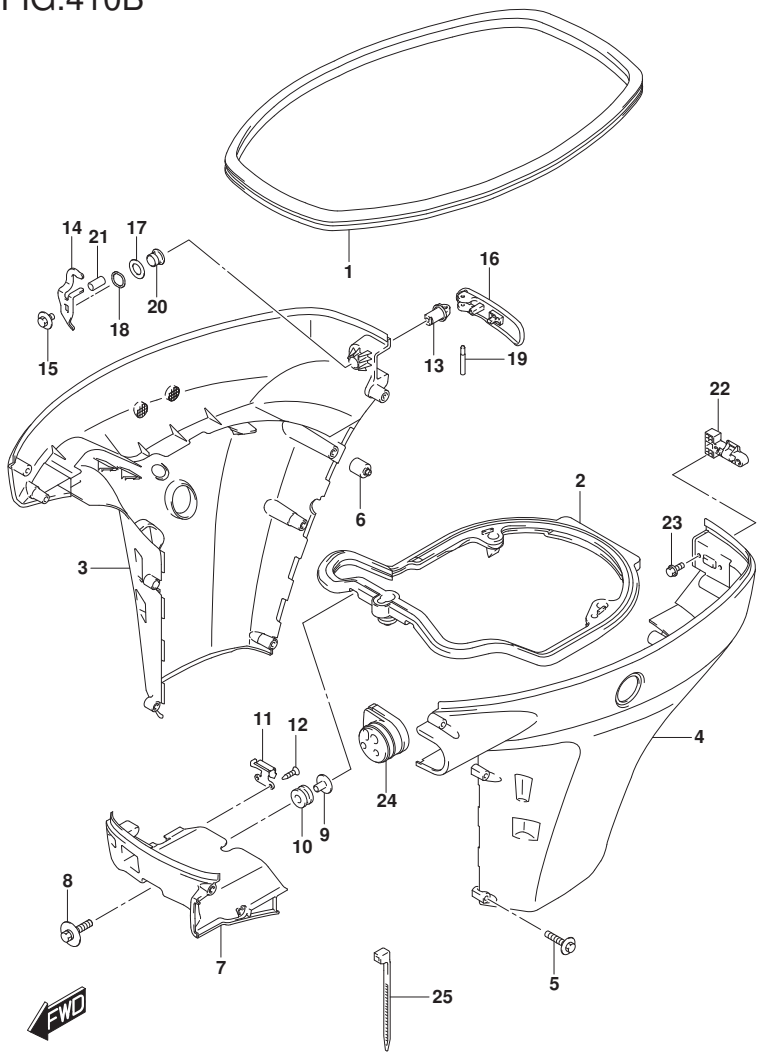


FIG.410B (2-D-13) SIDE COVER (DF50AVT,DF50AVTH,DF60AVT,DF60AVTH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	09407-25402	CLAMP (L:250)	1	

- DF50AVT E03
- DF50AVTH E01
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.420A

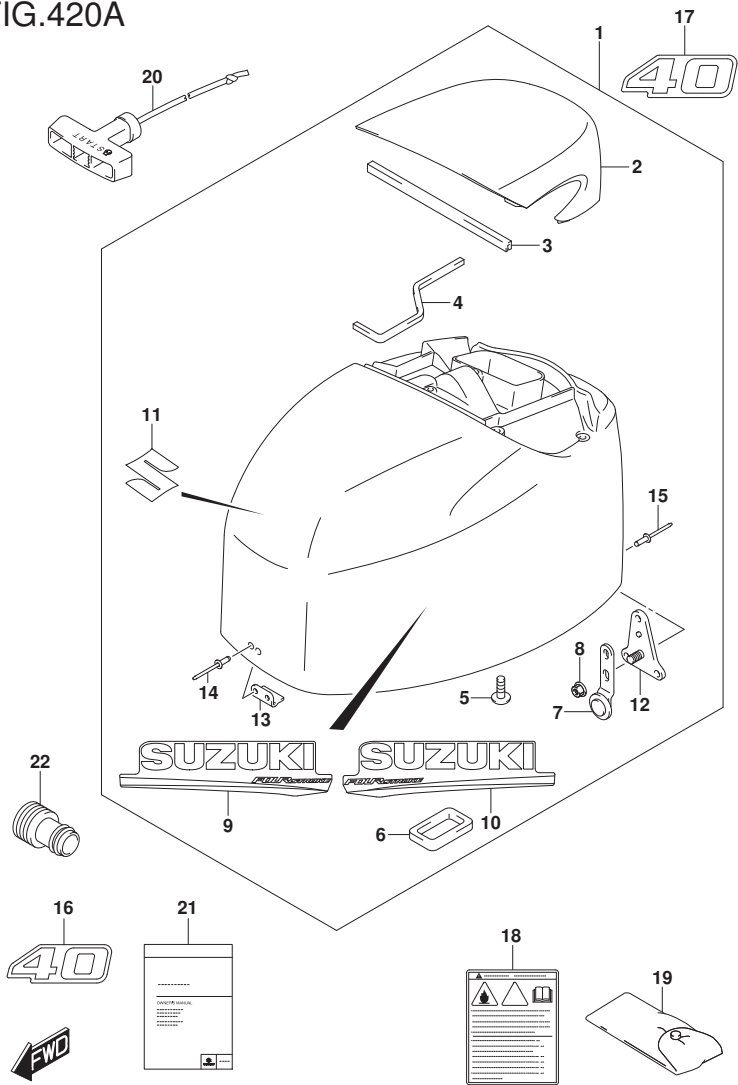


FIG.420A (2-D-14) ENGINE COVER ((DF40A,DF40AQH,DF40ATH):E01:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L30	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L60	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L60	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88L90	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21-1	99011-88L92-054	MANUAL, OWNER'S	1	
21-2	99011-88L91-059	MANUAL, OWNER'S	1	

FIG.420A

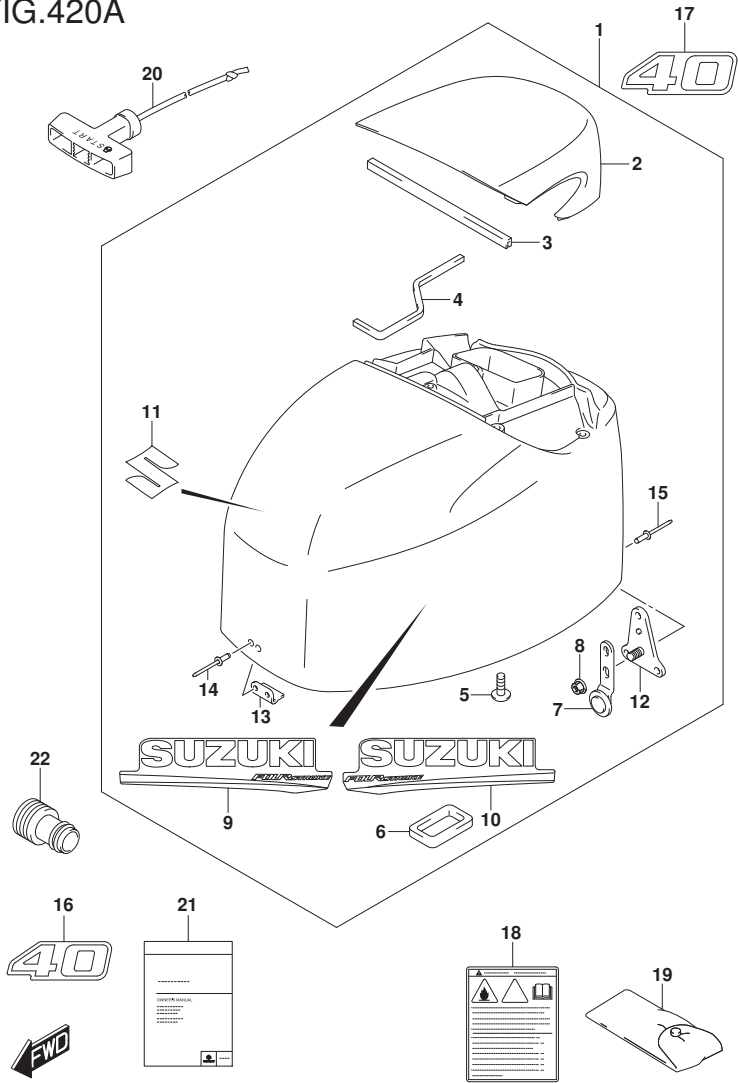


FIG.420A (2-D-15) ENGINE COVER ((DF40A,DF40AQH,DF40ATH):E01:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF40A E01
DF40AQH E01
DF40ATH E01

FIG.420B

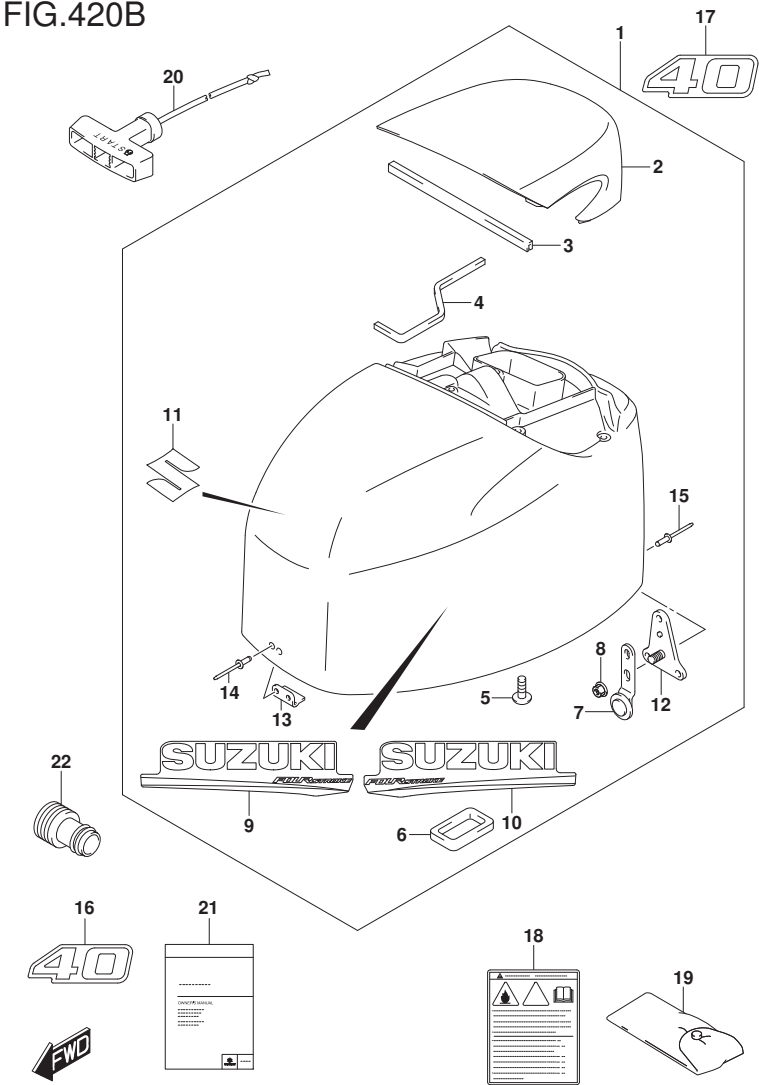


FIG.420B (2-E-2) ENGINE COVER (DF40A:E03:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L30	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L60	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L60	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88L90	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21-1	99011-88L92-054	MANUAL, OWNER'S	1	
21-2	99011-88L91-03B	MANUAL, OWNER'S	1	

FIG.420B

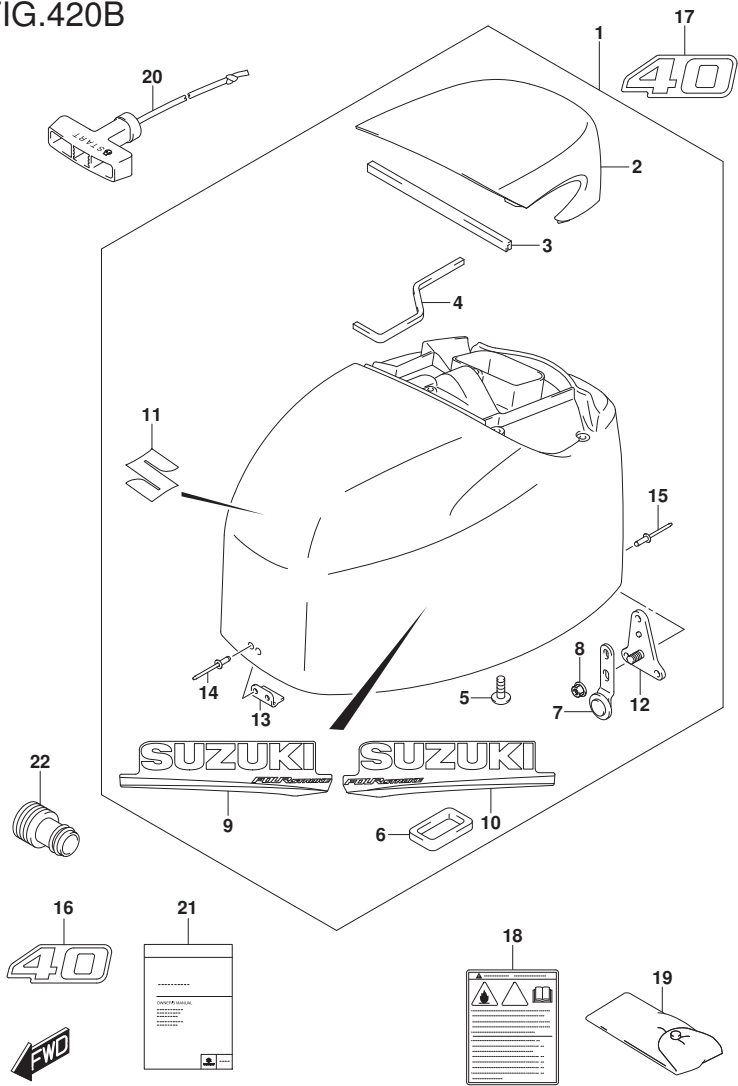


FIG.420B (2-E-3) ENGINE COVER (DF40A:E03:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF40A E03

FIG.420C

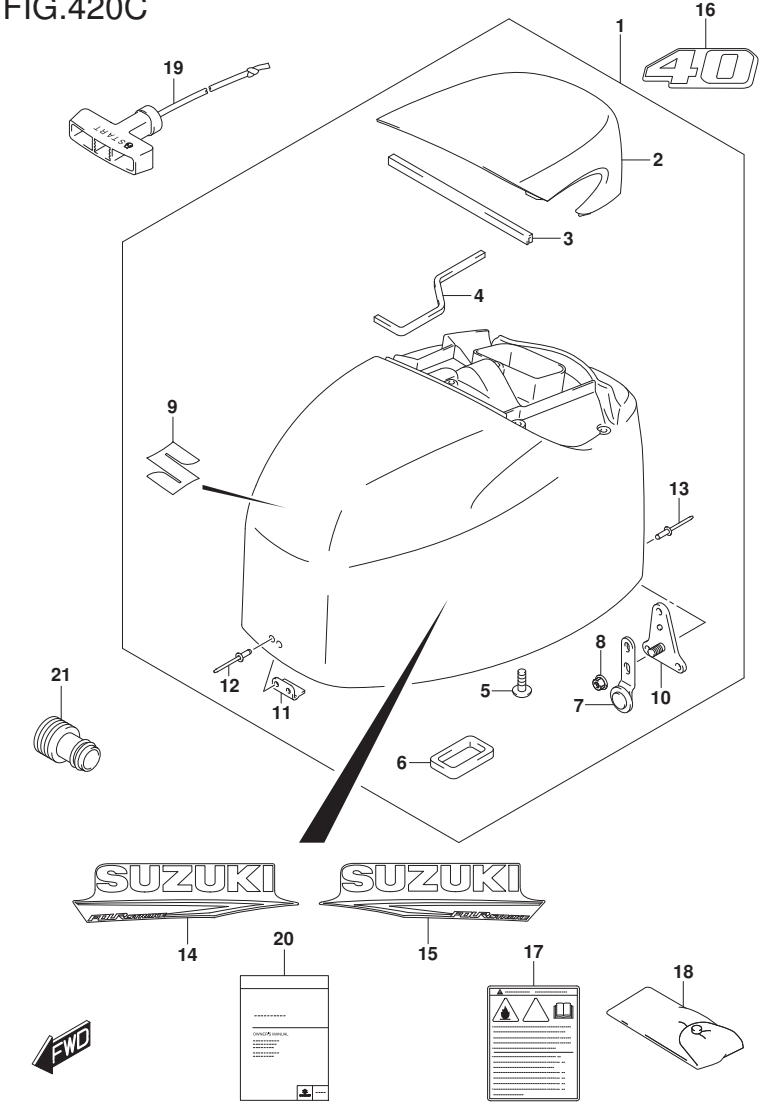


FIG.420C (2-E-4) ENGINE COVER (DF40A:E11:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88850-QTN	COVER SET, ENGINE (WHITE)	1	
1-2	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2-1	61431-88L10-QTN	.HANDLE, TILT UP (WHITE)	1	
2-2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14-1	61443-88L50	.STRIPE, ENGINE COVER STBD	1	STBD FOR QTN
14-2	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
15-1	61453-88L50	.STRIPE, ENGINE COVER PORT	1	PORT FOR QTN
15-2	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
16-1	61435-88LD0	MARK, EMBLEM REAR	1	FOR QTN
16-2	61435-88LC0	MARK, EMBLEM REAR	1	FOR YAY
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L92-054	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-054	MANUAL, OWNER'S	1	022
20-3	99011-88L91-059	MANUAL, OWNER'S	1	021
20-4	99011-88LA0-059	MANUAL, OWNER'S	1	022
20-5	99011-88L91-03B	MANUAL, OWNER'S	1	021
20-6	99011-88LA0-03B	MANUAL, OWNER'S	1	022

FIG.420C

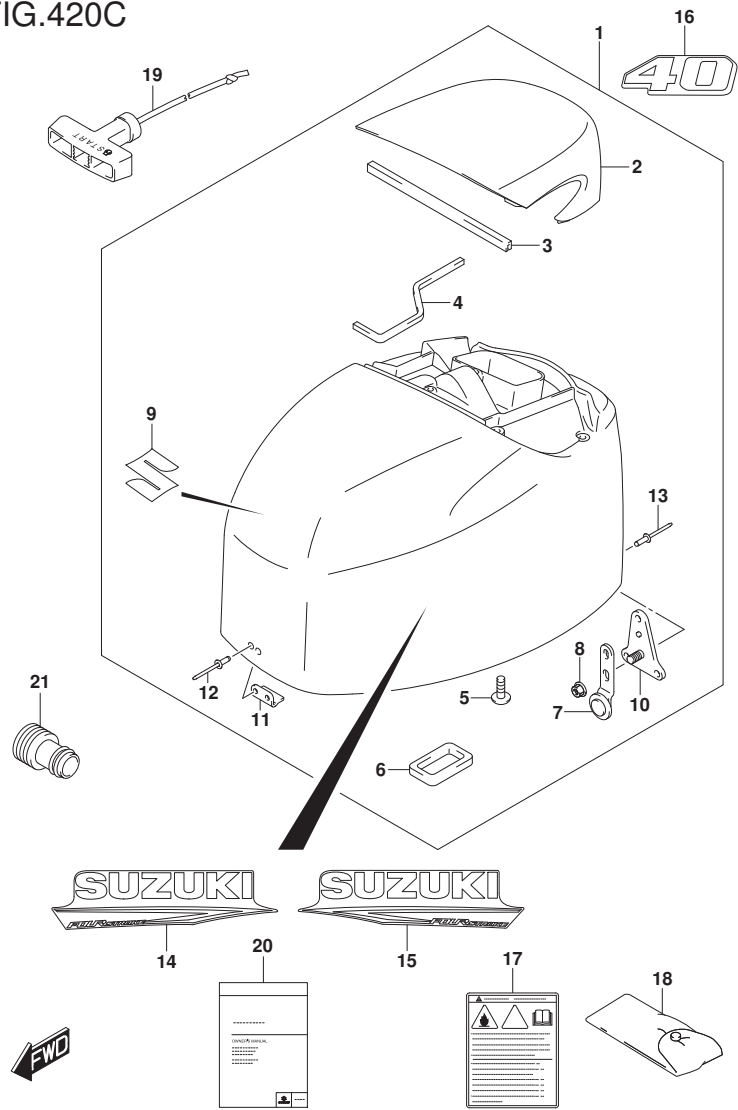


FIG.420C (2-E-5) ENGINE COVER (DF40A:E11:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF40A E11

FIG.420D

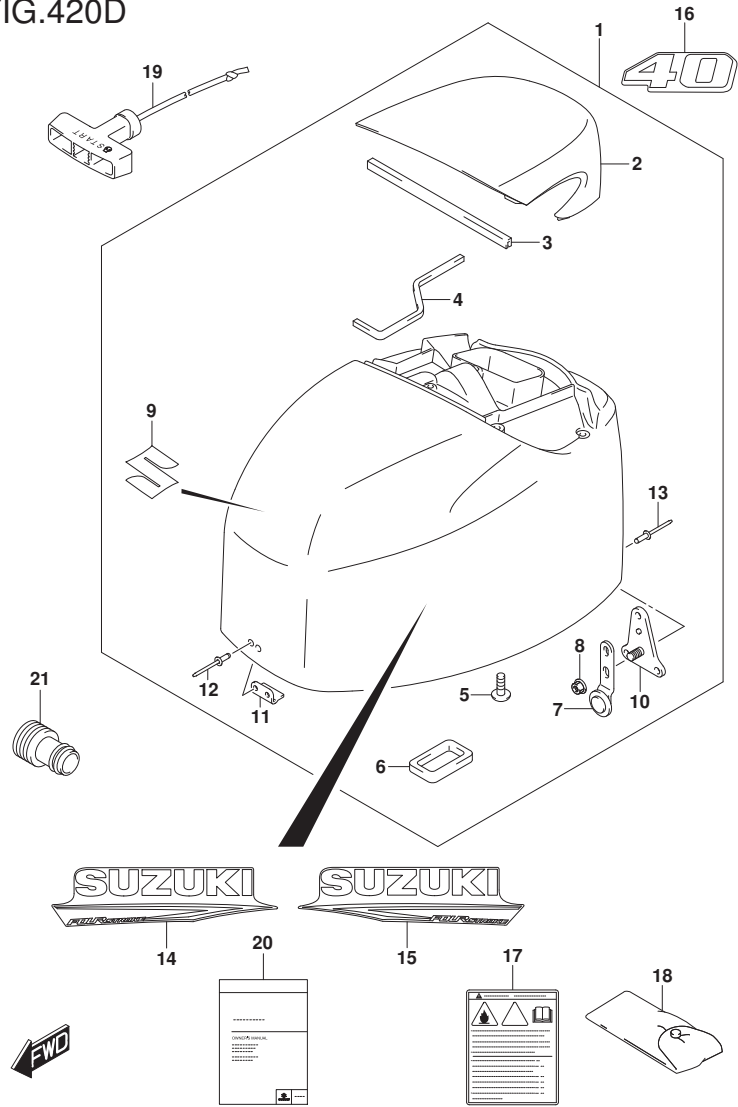


FIG.420D (2-E-6) ENGINE COVER ((DF40AQH,DF40ATH):E01:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD
15	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT
16	61435-88LC0	MARK, EMBLEM REAR	1	
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L92-054	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-054	MANUAL, OWNER'S	1	022
20-3	99011-88L91-059	MANUAL, OWNER'S	1	021
20-4	99011-88LA0-059	MANUAL, OWNER'S	1	022
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF40AQH E01
DF40ATH E01

FIG.420E

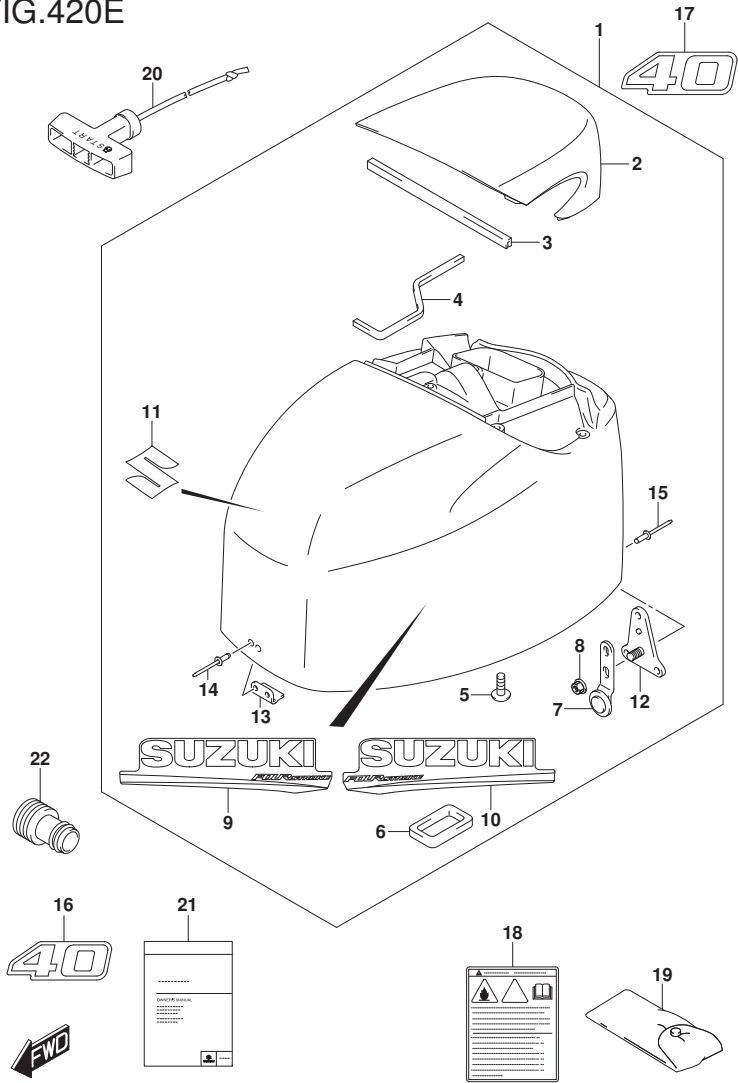


FIG.420E (2-E-7) ENGINE COVER ((DF40AST,DF40ASVT):E34:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L30	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L60	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L60	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88L90	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21	99011-88L92-054	MANUAL, OWNER'S	1	

FIG.420E

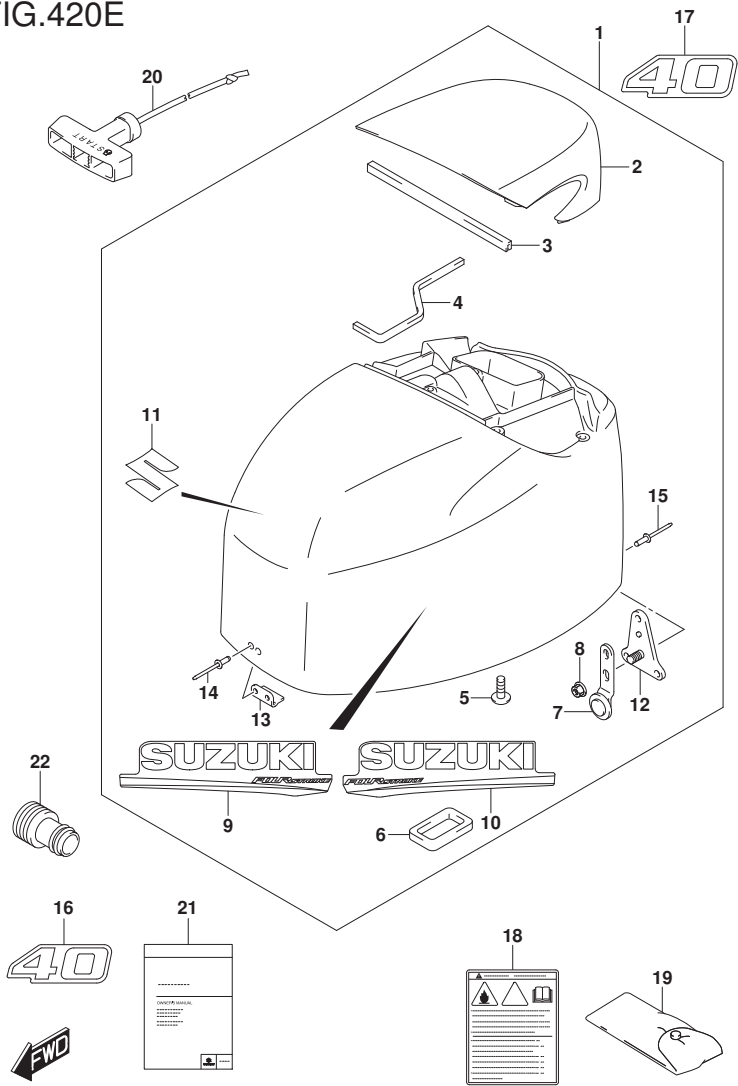


FIG.420E (2-E-8) ENGINE COVER ((DF40AST,DF40ASVT):E34:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF40AST E34
DF40ASVT E34


DF60A_E11_022_420F
ENGINE COVER



DF60A_E11_022

NOTE : (DF40AST,DF40ASVT):E34:021,DF40AST:E34:022

FIG.420F (2-E-10) ENGINE COVER (SEE NOTE)



DF40AST E34
DF40ASVT E34

FIG.420G

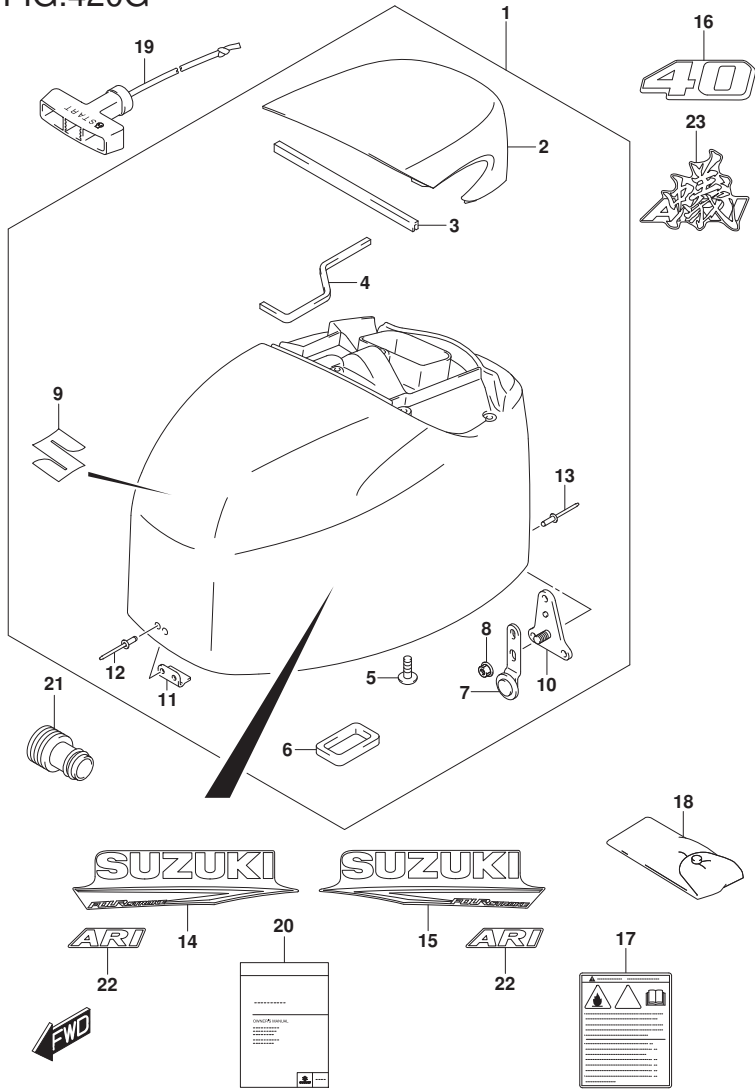


FIG.420G (2-E-11) ENGINE COVER (DF40ASVT:E34:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88850-QTN	COVER SET, ENGINE (WHITE)	1	
1-2	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2-1	61431-88L10-QTN	.HANDLE, TILT UP (WHITE)	1	
2-2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14-1	61443-88L50	.STRIPE, ENGINE COVER STBD	1	STBD FOR QTN
14-2	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
15-1	61453-88L50	.STRIPE, ENGINE COVER PORT	1	PORT FOR QTN
15-2	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
16-1	61435-88LD0	MARK, EMBLEM REAR	1	FOR QTN
16-2	61435-88LC0	MARK, EMBLEM REAR	1	FOR YAY
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20	99011-88LA0-054	MANUAL, OWNER'S	1	
21	17917-87L00	CONNECTOR, FLUSH WATER	1	
22-1	61447-88L00	MARK	2	FOR YAY
22-2	61447-88L10	MARK	2	FOR QTN

FIG.420G

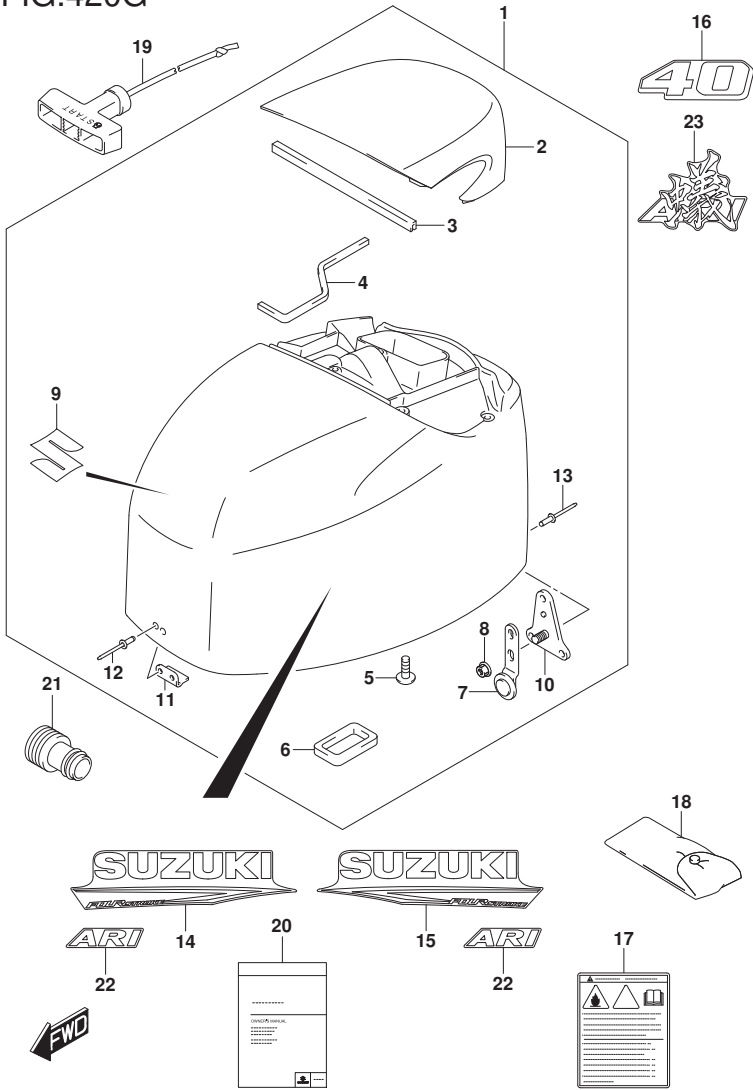


FIG.420G (2-E-12) ENGINE COVER (DF40ASVT:E34:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
23-1	61446-88L00	DECAL	1	FOR YAY
23-2	61446-88L10	DECAL	1	FOR QTN

DF40ASVT E34

FIG.420H

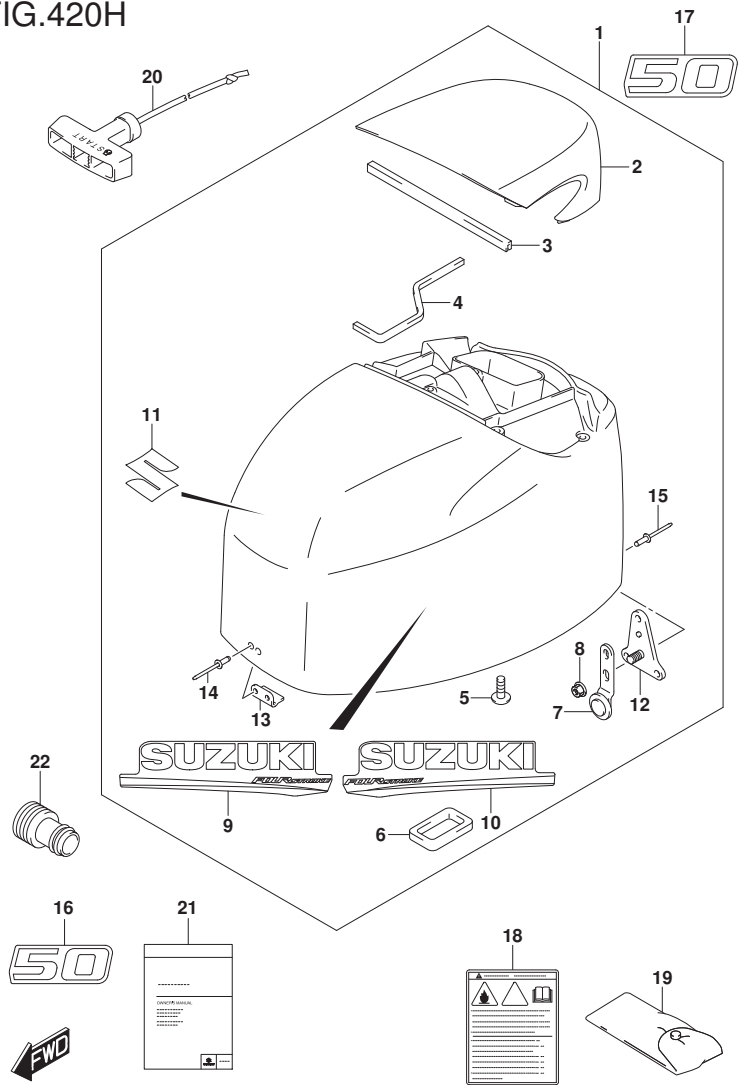


FIG.420H (2-E-13) ENGINE COVER ((DF50A,DF50ATH,DF50AVTH):E01:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L40	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L70	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L70	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88LA0	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21-1	99011-88L92-054	MANUAL, OWNER'S	1	
21-2	99011-88L91-059	MANUAL, OWNER'S	1	

FIG.420H

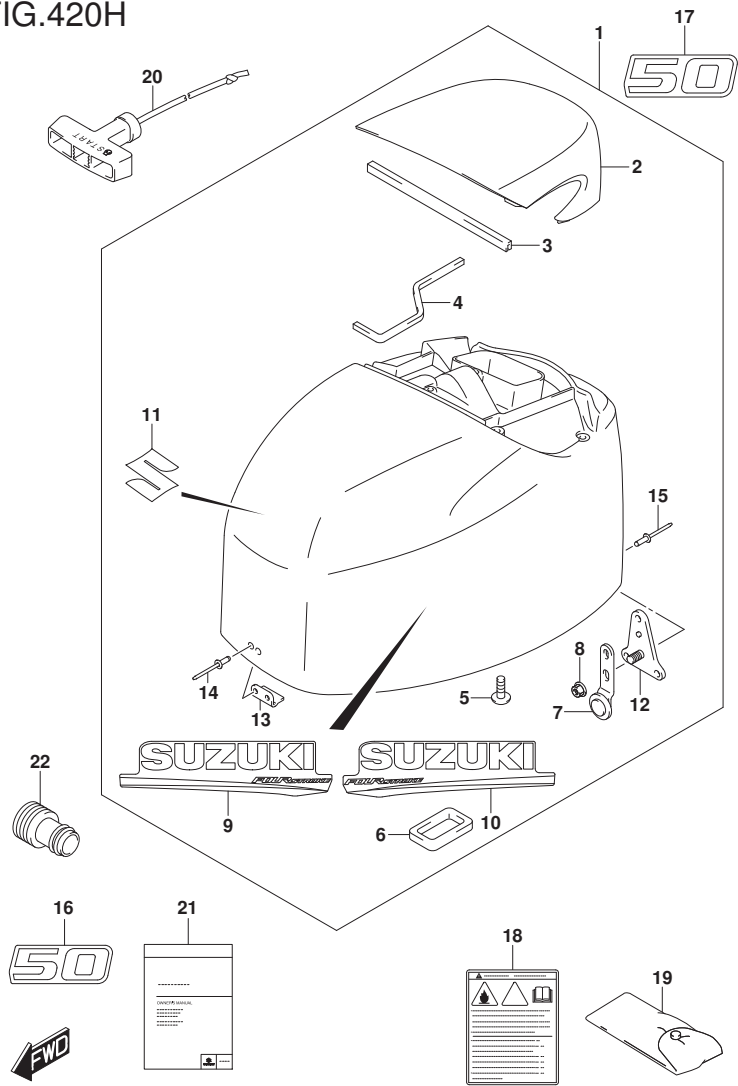


FIG.420H (2-E-14) ENGINE COVER ((DF50A,DF50ATH,DF50AVTH):E01:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF50A E01
DF50ATH E01
DF50AVTH E01

FIG.420J

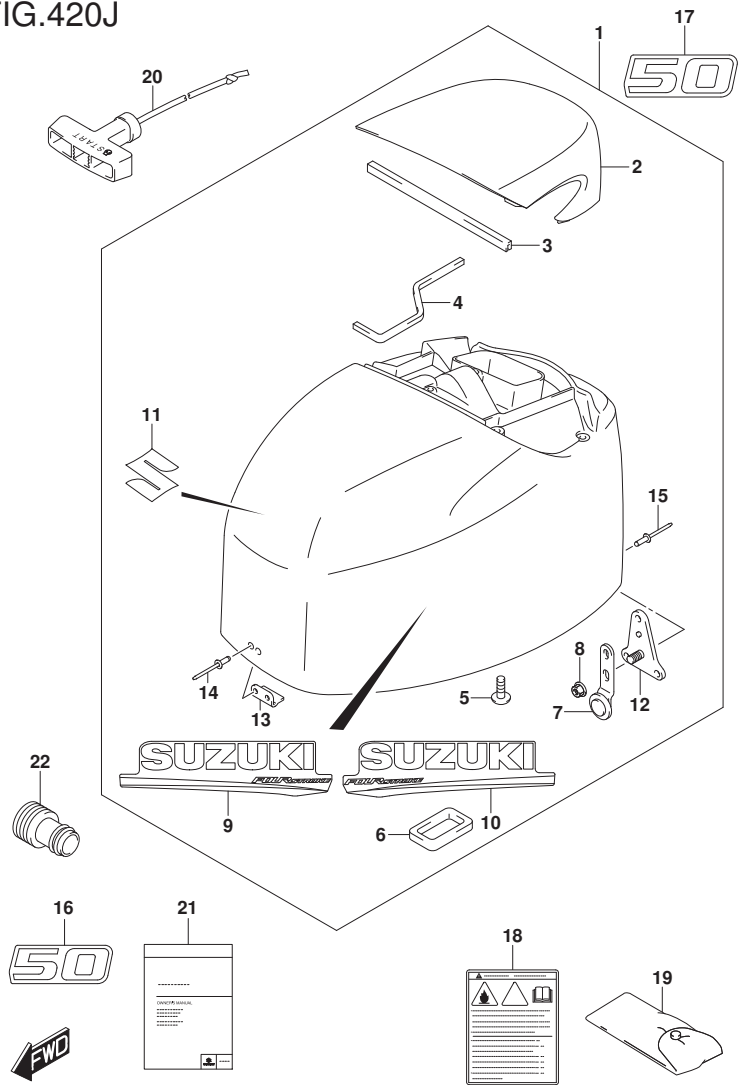


FIG.420J (2-F-2) ENGINE COVER ((DF50A,DF50AVT):E03:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L40	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L70	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L70	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88LA0	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21-1	99011-88L92-054	MANUAL, OWNER'S	1	
21-2	99011-88L91-03B	MANUAL, OWNER'S	1	

FIG.420J

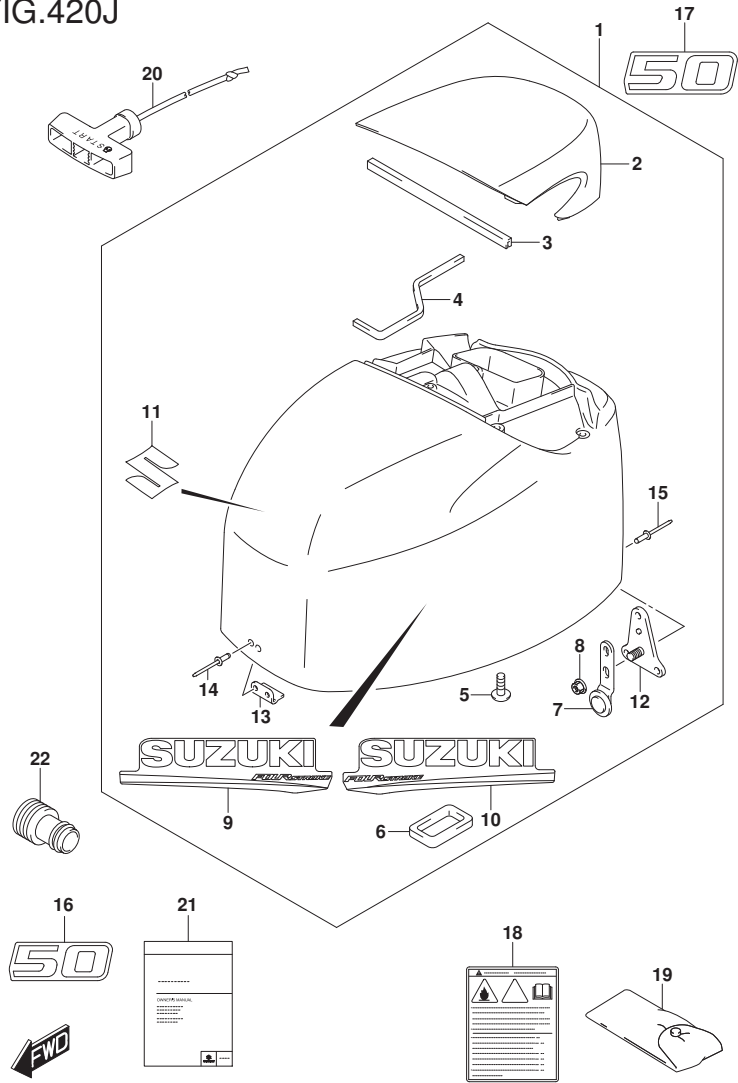


FIG.420J (2-F-3) ENGINE COVER ((DF50A,DF50AVT):E03:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF50A E03
DF50AVT E03

FIG.420K

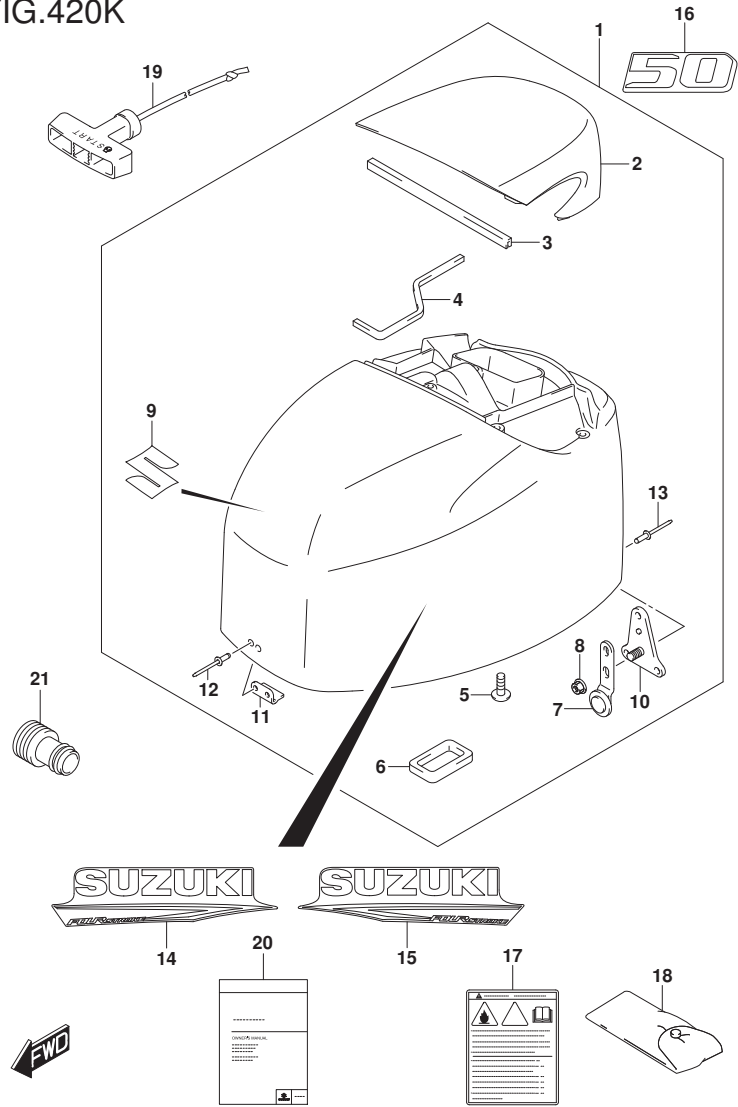


FIG.420K (2-F-4) ENGINE COVER (DF50A:E11:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88850-QTN	COVER SET, ENGINE (WHITE)	1	
1-2	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2-1	61431-88L10-QTN	.HANDLE, TILT UP (WHITE)	1	
2-2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14-1	61443-88L50	.STRIPE, ENGINE COVER STBD	1	STBD FOR QTN
14-2	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
15-1	61453-88L50	.STRIPE, ENGINE COVER PORT	1	PORT FOR QTN
15-2	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
16-1	61435-88LF0	MARK, EMBLEM REAR	1	FOR QTN
16-2	61435-88LE0	MARK, EMBLEM REAR	1	FOR YAY
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L92-054	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-054	MANUAL, OWNER'S	1	022
20-3	99011-88L91-059	MANUAL, OWNER'S	1	021
20-4	99011-88LA0-059	MANUAL, OWNER'S	1	022
20-5	99011-88L91-03B	MANUAL, OWNER'S	1	021
20-6	99011-88LA0-03B	MANUAL, OWNER'S	1	022

FIG.420K

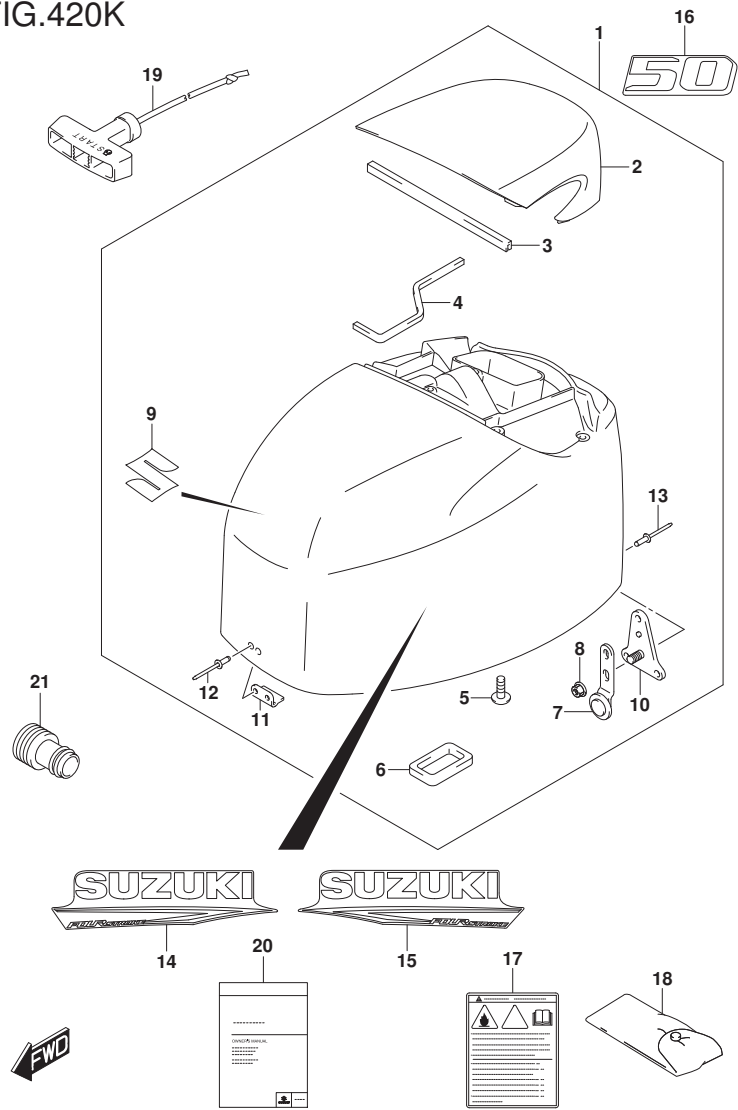


FIG.420K (2-F-5) ENGINE COVER (DF50A:E11:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF50A E11

FIG.420L

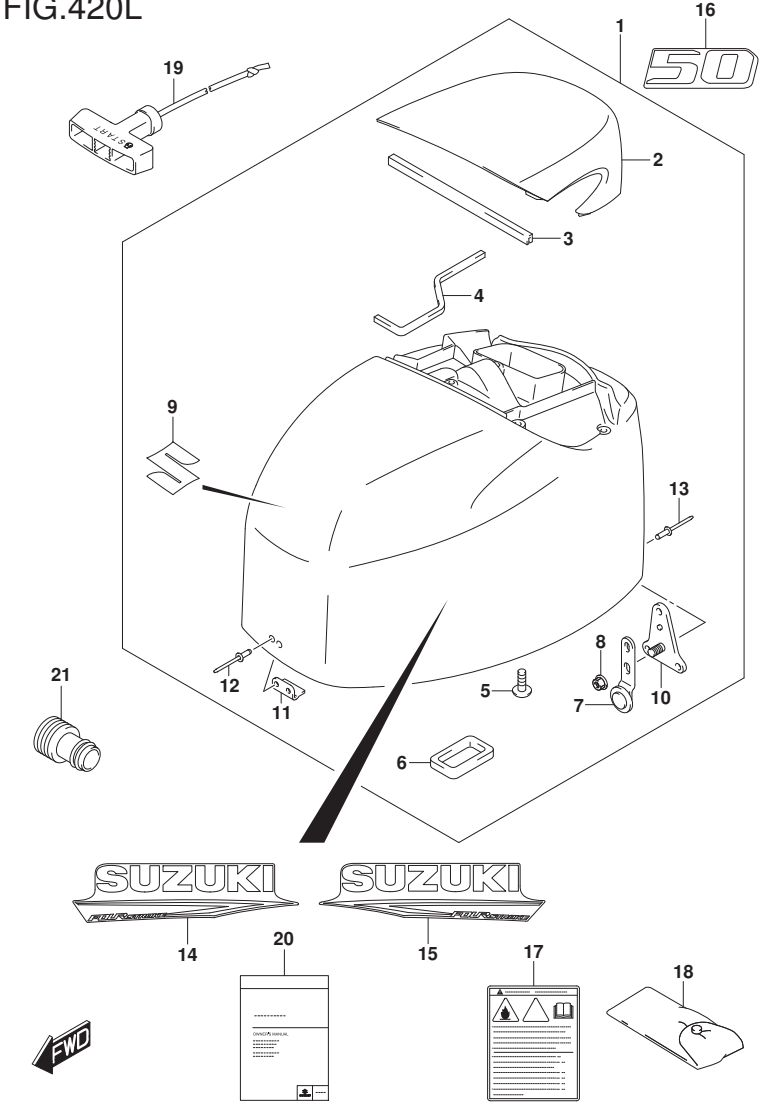


FIG.420L (2-F-6) ENGINE COVER (DF50ATH:E01:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD
15	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT
16	61435-88LE0	MARK, EMBLEM REAR	1	
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L92-054	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-054	MANUAL, OWNER'S	1	022
20-3	99011-88L91-059	MANUAL, OWNER'S	1	021
20-4	99011-88LA0-059	MANUAL, OWNER'S	1	022
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF50ATH E01

FIG.420M

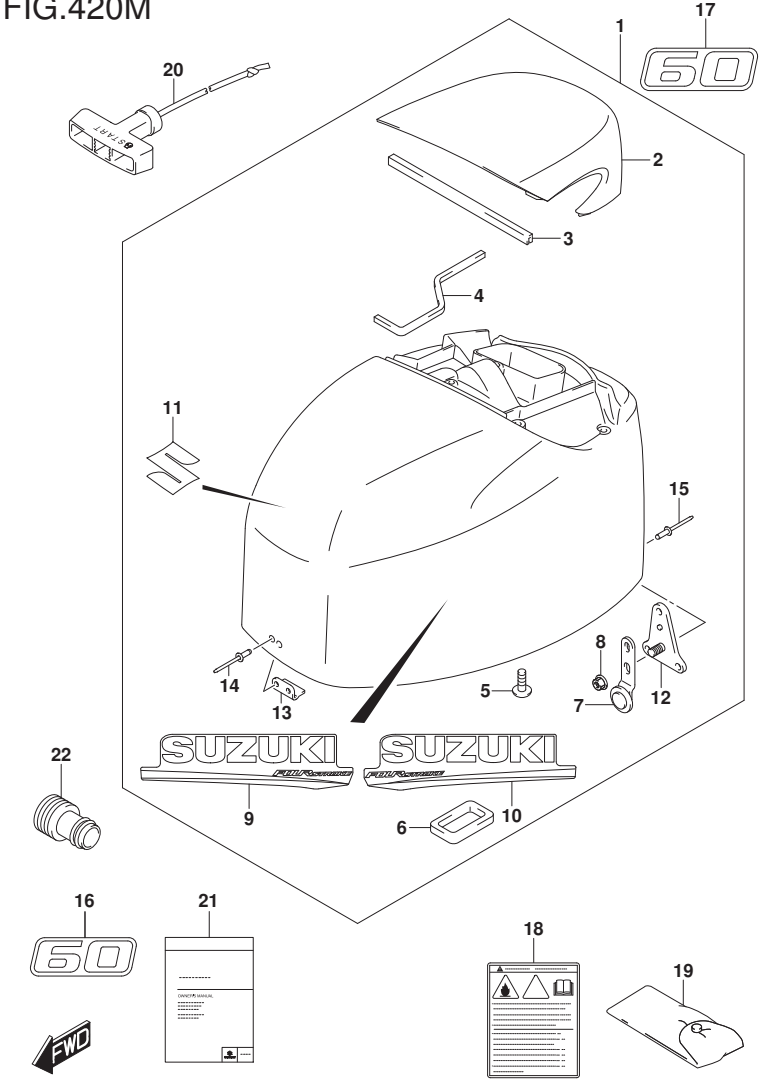


FIG.420M (2-F-7) ENGINE COVER ((DF60A,DF60ATH,DF60AVT):E01:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L50	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L80	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L80	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88LB0	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21-1	99011-88L92-054	MANUAL, OWNER'S	1	
21-2	99011-88L91-059	MANUAL, OWNER'S	1	

FIG.420M

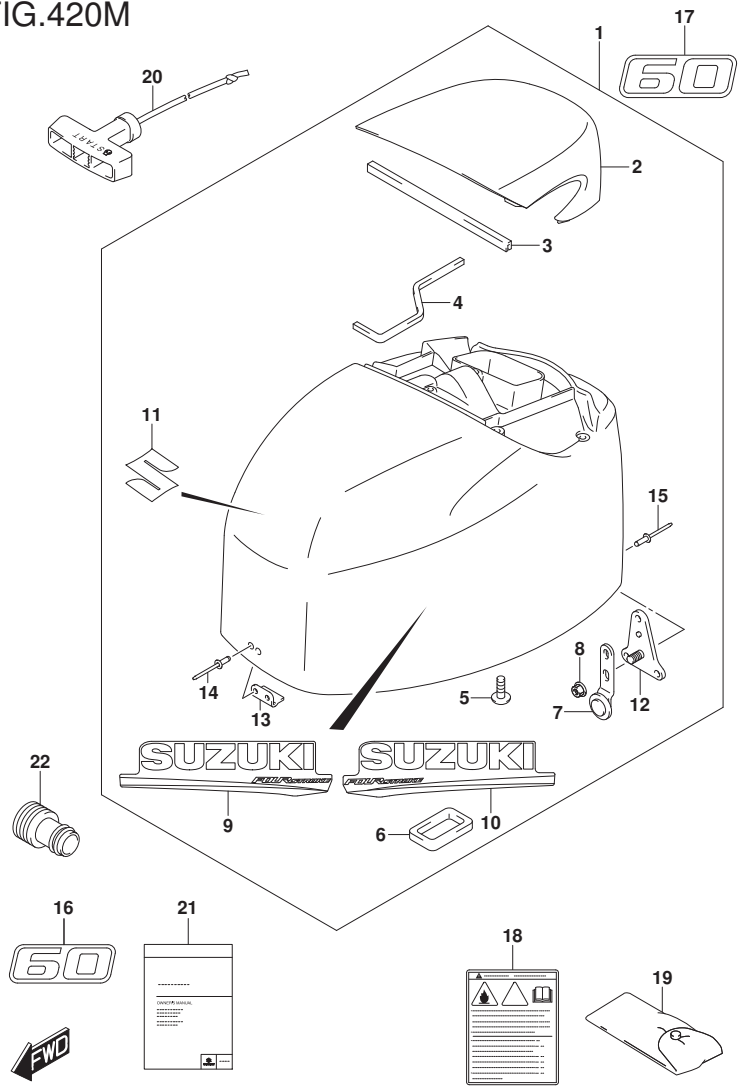


FIG.420M (2-F-8) ENGINE COVER ((DF60A,DF60ATH,DF60AVT):E01:020)				
REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF60A E01
DF60ATH E01
DF60AVT E01

FIG.420N

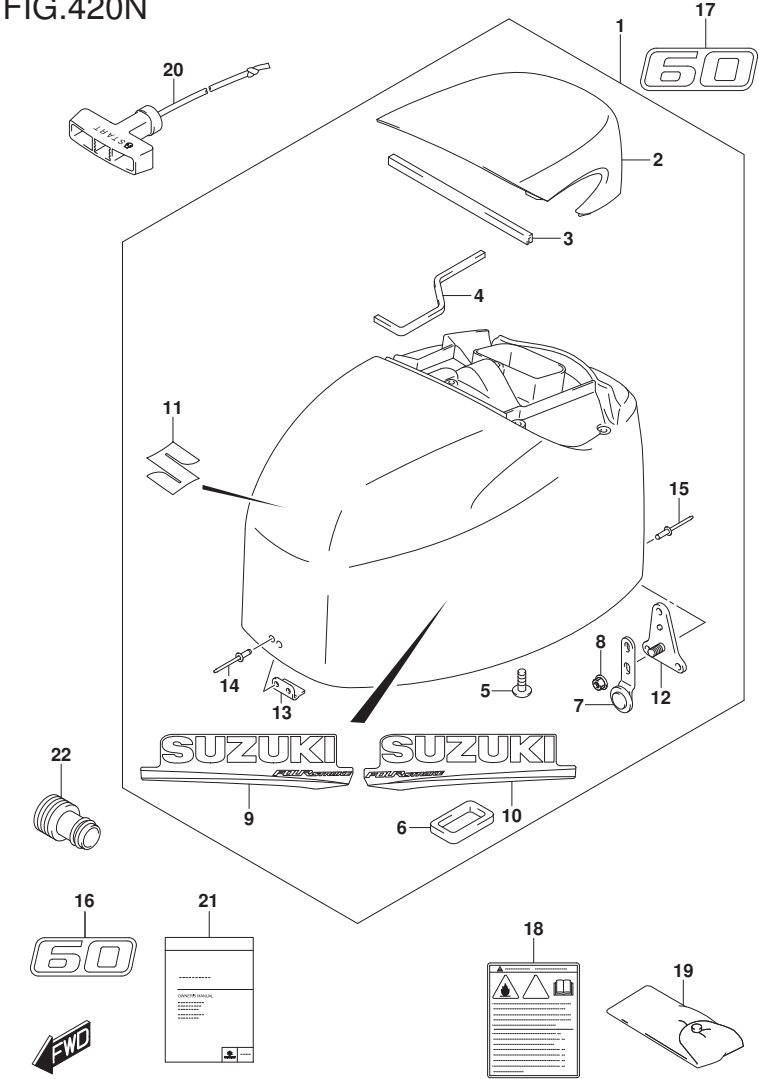


FIG.420N (2-F-9) ENGINE COVER ((DF60A,DF60AVT):E03:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L50	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L80	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L80	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88LB0	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21-1	99011-88L92-054	MANUAL, OWNER'S	1	
21-2	99011-88L91-03B	MANUAL, OWNER'S	1	

FIG.420N

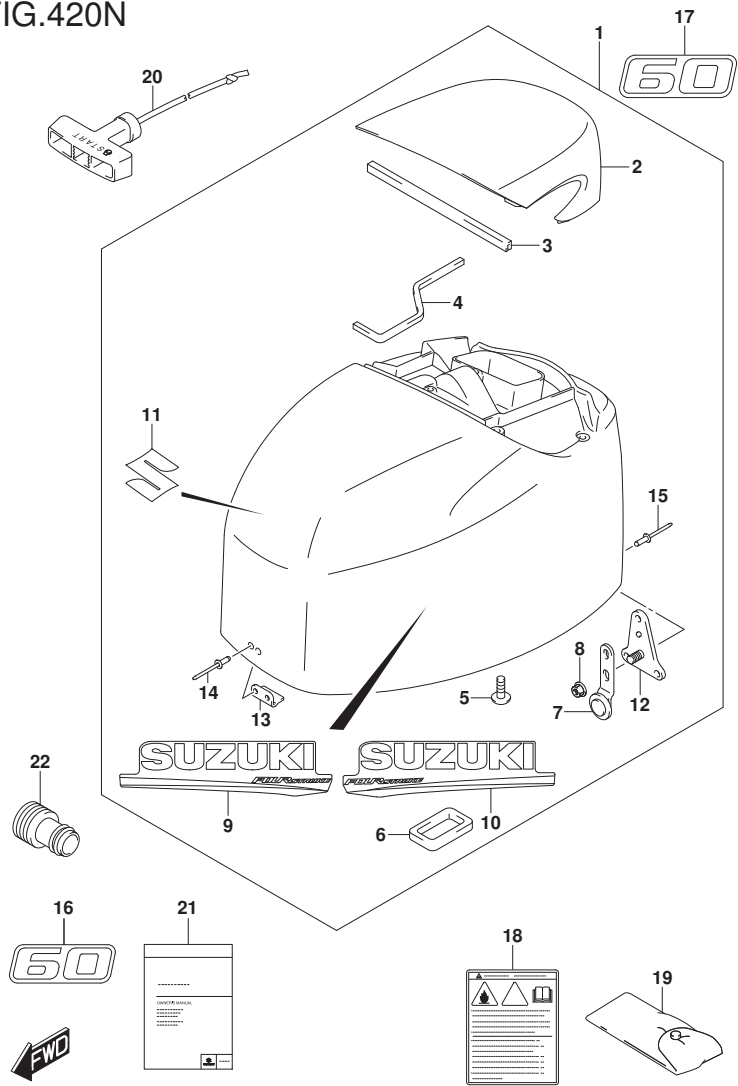


FIG.420N (2-F-10) ENGINE COVER ((DF60A,DF60AVT):E03:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF60A E03
DF60AVT E03

FIG.420P

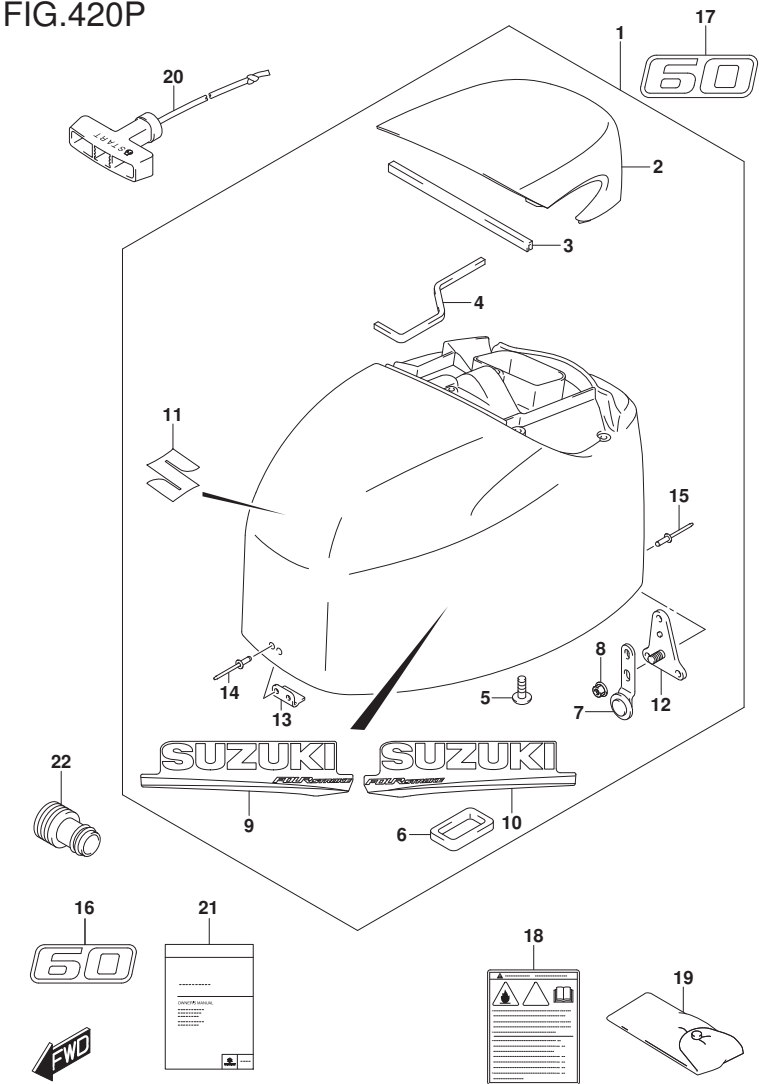


FIG.420P (2-F-11) ENGINE COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88822-YAY	COVER SET, ENGINE (BLACK)	1	
1-2	61400-88832-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
2-2	61431-88L10-Y5S	.HANDLE, TILT UP (WHITE)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9-1	61443-88L20	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
9-2	61443-88L30	.STRIPE, ENGINE COVER STBD	1	STBD FOR Y5S
10-1	61453-88L20	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
10-2	61453-88L30	.STRIPE, ENGINE COVER PORT	1	PORT FOR Y5S
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16-1	61422-88L50	MARK, EMBLEM FRONT	1	FOR YAY
16-2	61422-88L80	MARK, EMBLEM FRONT	1	FOR Y5S
17-1	61435-88L80	MARK, EMBLEM REAR	1	FOR YAY
17-2	61435-88LB0	MARK, EMBLEM REAR	1	FOR Y5S
18	61458-90J01	LABEL, ENGINE COVER	1	
19	09800-81812	TOOL ASSY	1	
20	18210-88L00	KNOB ASSY, STARTER	1	
21	99011-88L91-059	MANUAL, OWNER'S	1	

NOTE : (DF60A,DF60AQH,DF60ATH,DF60AVT,DF60AVTH):E40:020

FIG.420P

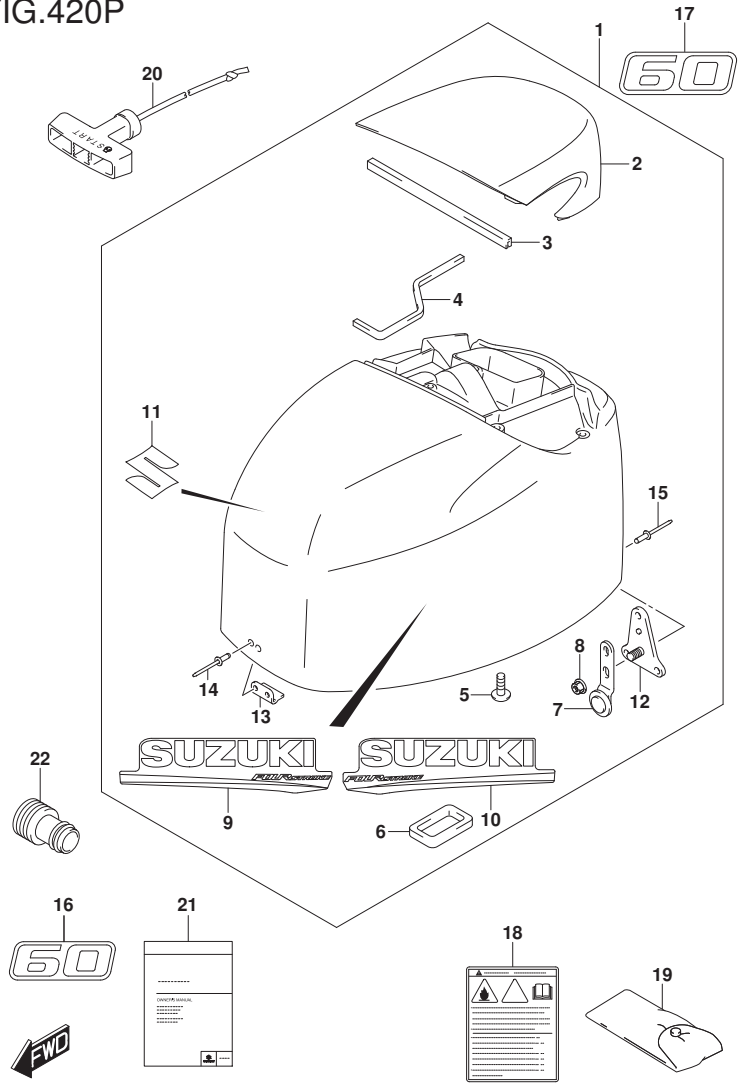


FIG.420P (2-F-12) ENGINE COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

NOTE : (DF60A,DF60AQH,DF60ATH,DF60AVT,DF60AVTH):E40:020

- DF60A E40
- DF60AQH E40
- DF60ATH E40
- DF60AVT E40
- DF60AVTH E40

FIG.420R

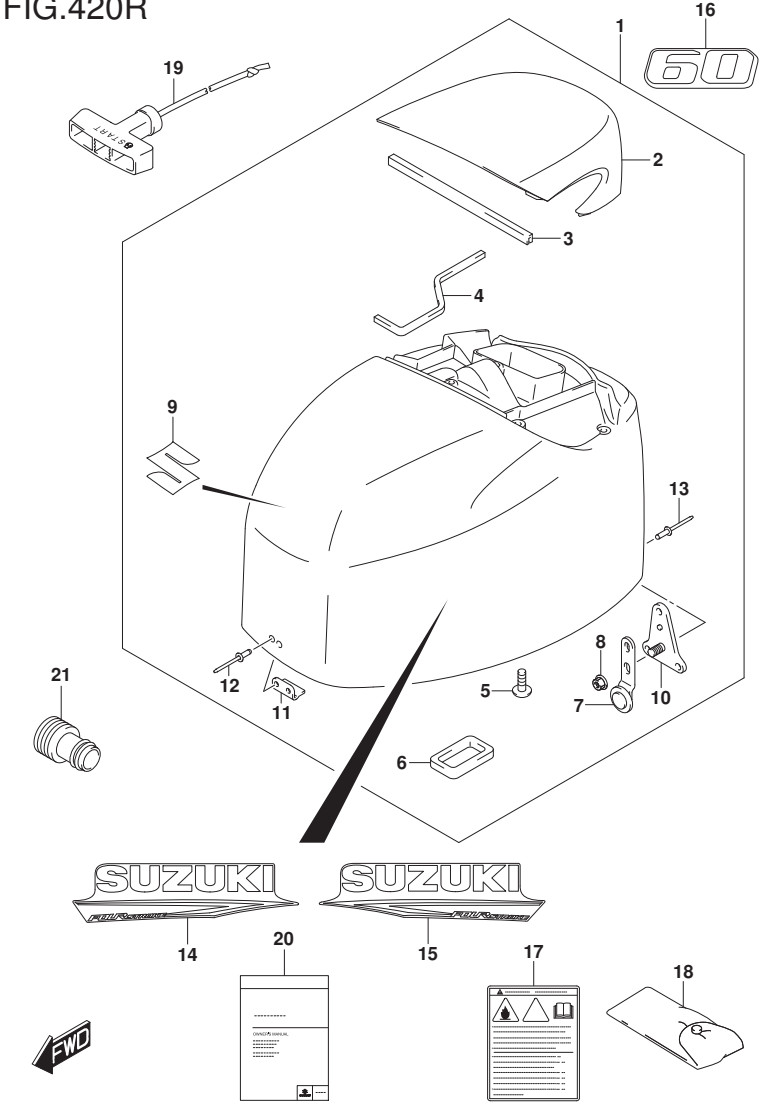


FIG.420R (2-F-13) ENGINE COVER ((DF60A,DF60AVT):E11:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88850-QTN	COVER SET, ENGINE (WHITE)	1	
1-2	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2-1	61431-88L10-QTN	.HANDLE, TILT UP (WHITE)	1	
2-2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14-1	61443-88L50	.STRIPE, ENGINE COVER STBD	1	STBD FOR QTN
14-2	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
15-1	61453-88L50	.STRIPE, ENGINE COVER PORT	1	PORT FOR QTN
15-2	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
16-1	61435-88LH0	MARK, EMBLEM REAR	1	FOR QTN
16-2	61435-88LG0	MARK, EMBLEM REAR	1	FOR YAY
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L92-054	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-054	MANUAL, OWNER'S	1	022
20-3	99011-88L91-059	MANUAL, OWNER'S	1	021
20-4	99011-88LA0-059	MANUAL, OWNER'S	1	022
20-5	99011-88L91-03B	MANUAL, OWNER'S	1	021
20-6	99011-88LA0-03B	MANUAL, OWNER'S	1	022

FIG.420R

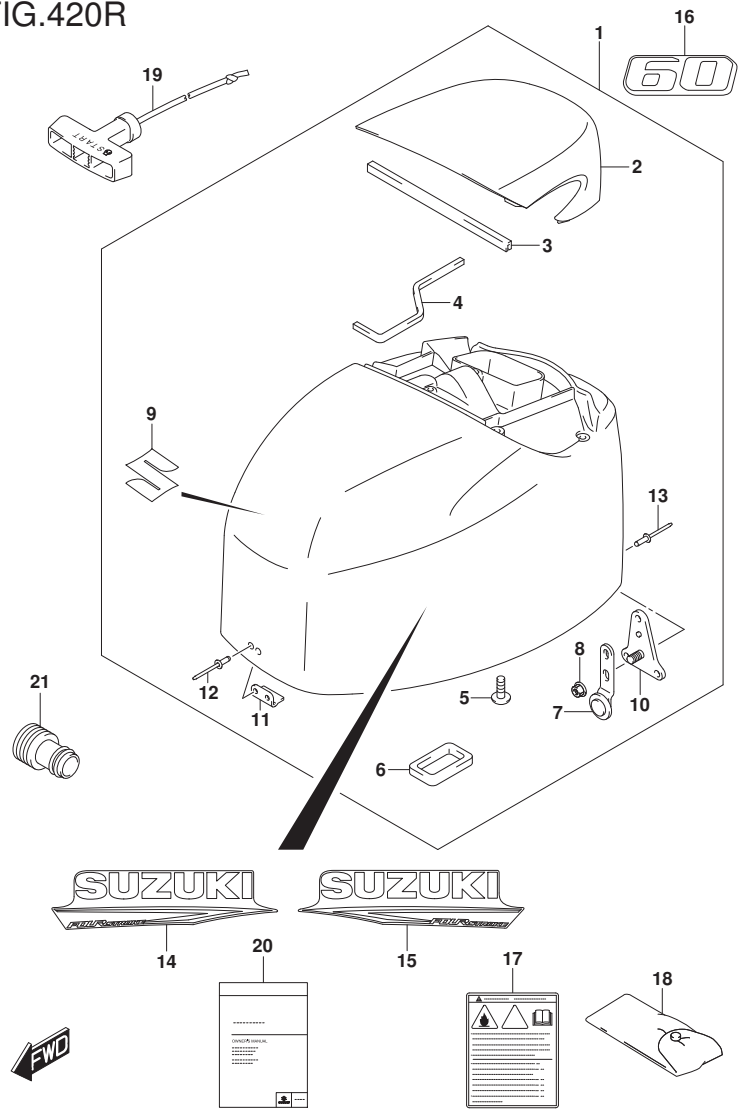


FIG.420R (2-F-14) ENGINE COVER ((DF60A,DF60AVT):E11:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF60A E11
DF60AVT E11

FIG.420S

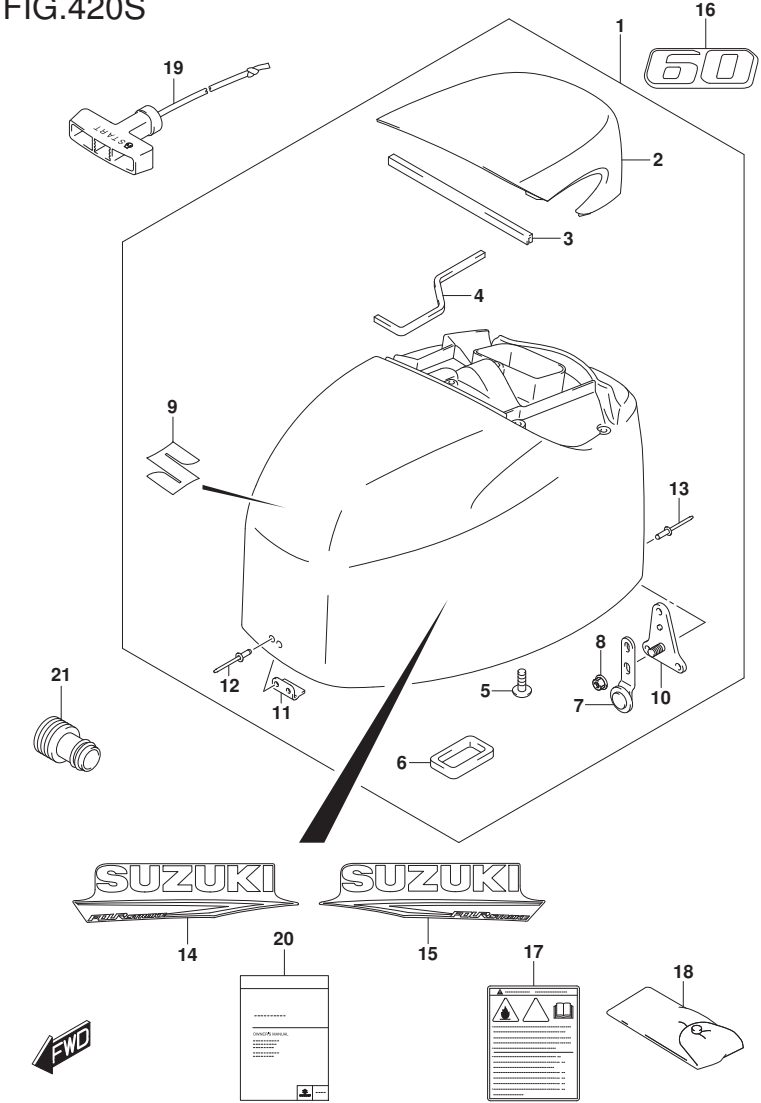


FIG.420S (2-G-2) ENGINE COVER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-88850-QTN	COVER SET, ENGINE (WHITE)	1	
1-2	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2-1	61431-88L10-QTN	.HANDLE, TILT UP (WHITE)	1	
2-2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14-1	61443-88L50	.STRIPE, ENGINE COVER STBD	1	STBD FOR QTN
14-2	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD FOR YAY
15-1	61453-88L50	.STRIPE, ENGINE COVER PORT	1	PORT FOR QTN
15-2	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT FOR YAY
16-1	61435-88LH0	MARK, EMBLEM REAR	1	FOR QTN
16-2	61435-88LG0	MARK, EMBLEM REAR	1	FOR YAY
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L91-059	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-059	MANUAL, OWNER'S	1	022

NOTE : (DF60A,DF60AQH,DF60ATH,DF60AVTH):E40:(021,022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF60A E40
DF60AQH E40
DF60ATH E40
DF60AVTH E40

FIG.420T

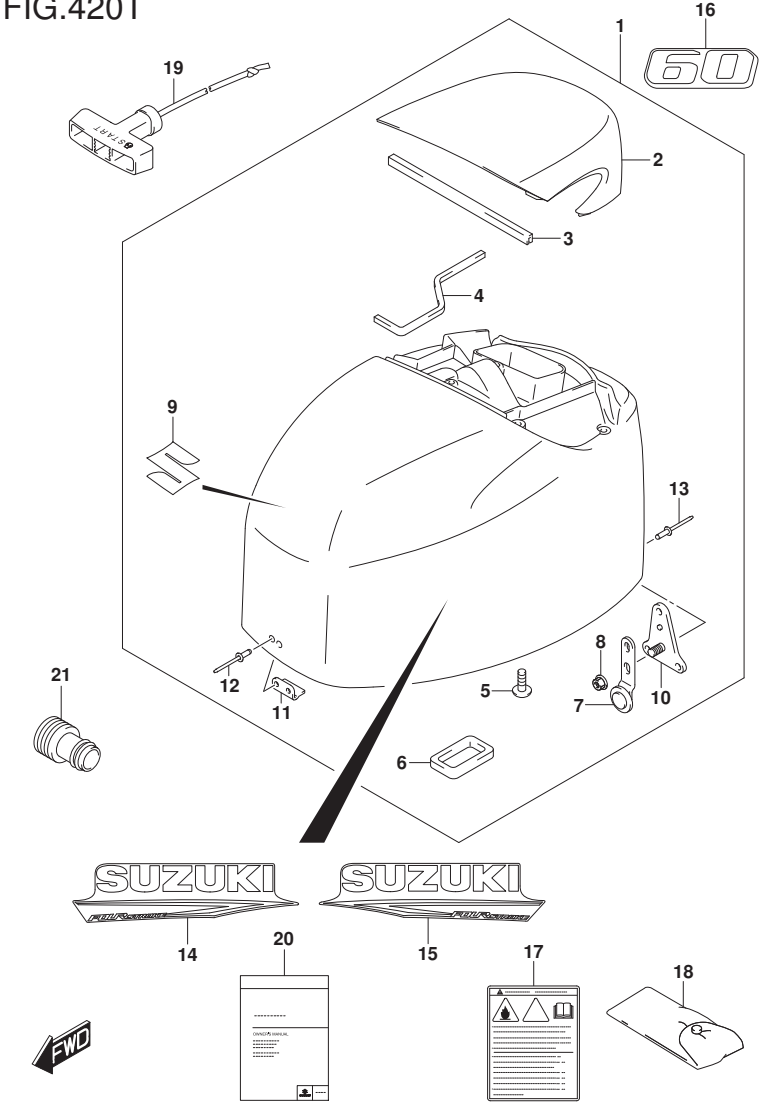


FIG.420T (2-G-4) ENGINE COVER (DF60ATH:E01:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD
10	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT
11	68111-88L10	.EMBLEM, S	1	
12	61620-95J00	.BRACKET, REAR FASTENER	1	
13	61631-88L10	.HOOK, FRONT	1	
14	09229-04018	.RIVET	2	
15	09229-04005	.RIVET	2	
16	61435-88LG0	MARK, EMBLEM REAR	1	
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L92-054	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-054	MANUAL, OWNER'S	1	022
20-3	99011-88L91-059	MANUAL, OWNER'S	1	021
20-4	99011-88LA0-059	MANUAL, OWNER'S	1	022
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF60ATH E01

FIG.420U

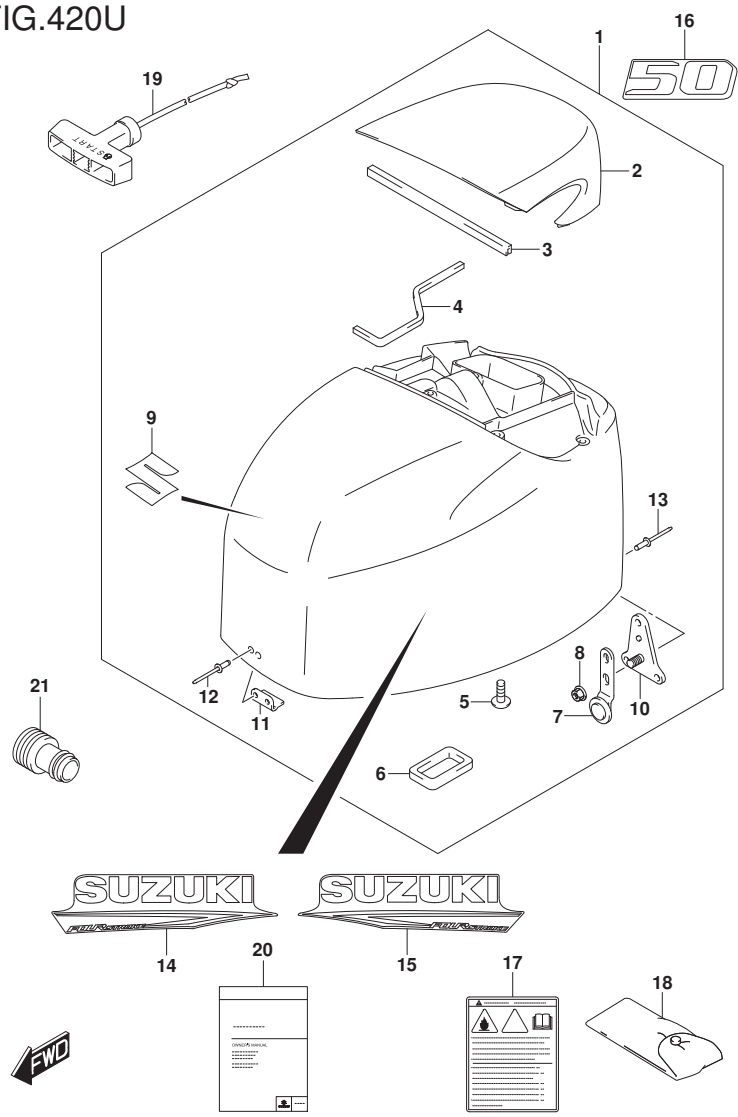


FIG.420U (2-G-5) ENGINE COVER (DF50AVT:E03:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-88840-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-88L10-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61438-88L01	.SEAL, TILT UP HANDLE NO.1	1	
4	61439-88L01	.SEAL, TILT UP HANDLE NO.2	1	
5	03542-06169	.SCREW	5	
6	61476-88L00	.SEAL, AIR VENT	1	
7	61610-95J00	.FASTENER, REAR	1	
8	09159-06084	.NUT (M6)	1	
9	68111-88L10	.EMBLEM, S	1	
10	61620-95J00	.BRACKET, REAR FASTENER	1	
11	61631-88L10	.HOOK, FRONT	1	
12	09229-04018	.RIVET	2	
13	09229-04005	.RIVET	2	
14	61443-88L40	.STRIPE, ENGINE COVER STBD	1	STBD
15	61453-88L40	.STRIPE, ENGINE COVER PORT	1	PORT
16	61435-88LE0	MARK, EMBLEM REAR	1	
17	61458-90J01	LABEL, ENGINE COVER	1	
18	09800-81812	TOOL ASSY	1	
19	18210-88L00	KNOB ASSY, STARTER	1	
20-1	99011-88L92-054	MANUAL, OWNER'S	1	021
20-2	99011-88LA0-054	MANUAL, OWNER'S	1	022
20-3	99011-88L91-03B	MANUAL, OWNER'S	1	021
20-4	99011-88LA0-03B	MANUAL, OWNER'S	1	022
21	17917-87L00	CONNECTOR, FLUSH WATER	1	

DF50AVT E03

FIG.430A

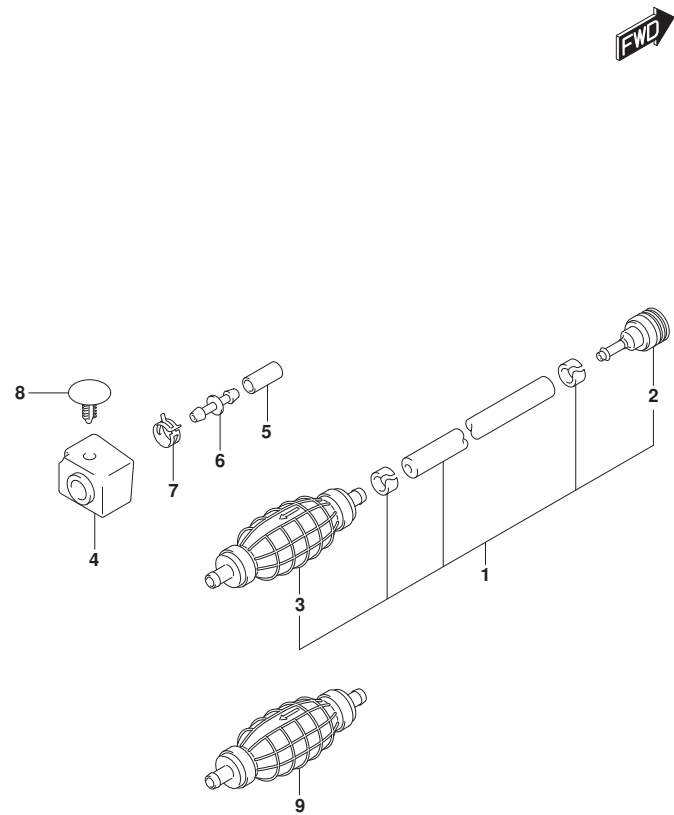


FIG.430A (2-G-6) FUEL HOSE (E03,E11)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65700-88L06	HOSE, FUEL	1	
2	65750-95501	.SOCKET, FUEL HOSE	1	
3	65770-90J04	.PUMP, SQUEEZE	1	
4	61188-88L01	GROMMET, FUEL HOSE	1	
5	09251-07003	CAP (OD:11.5)	1	
6	09367-08001	JOINT	1	
7	09401-11423	CLIP	1	
8	09409-05312-6GS	CLIP (GRAY)	1	
9	65770-90J04	PUMP, SQUEEZE	1	N/HOSE FUEL

DF40A E03
DF40A E11
DF50A E03
DF50A E11
DF50AVT E03
DF60A E03
DF60A E11
DF60AVT E03
DF60AVT E11

FIG.432A

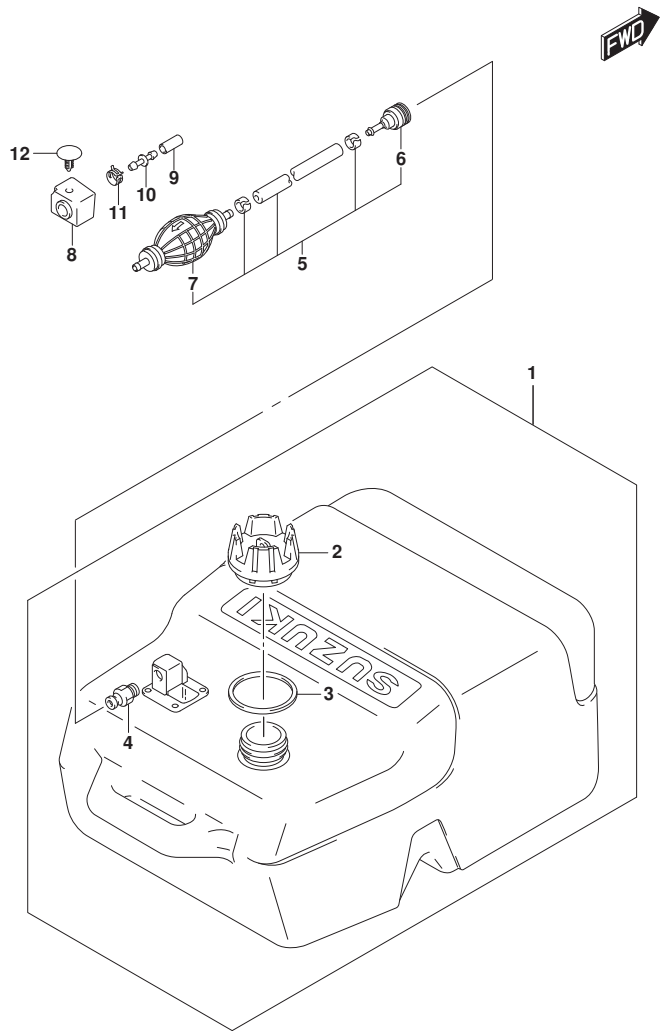


FIG.432A (2-G-7) FUEL TANK (E01,E11,E34,E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-94L10	TANK ASSY, FUEL (25L)	1	
2	65520-99100	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65700-90J18	HOSE, FUEL	1	TANK TO CONN
6	65750-95501	.SOCKET, FUEL HOSE	1	
7	65770-90J13	.PUMP, SQUEEZE	1	
8	61188-88L01	GROMMET, FUEL HOSE	1	
9	09251-07003	CAP (OD:11.5)	1	
10	09367-08001	JOINT	1	
11	09401-11006	CLIP	1	
12	09409-05312-6GS	CLIP (GRAY)	1	

- DF40A E01
- DF40A E11
- DF40AQH E01
- DF40AST E34
- DF40ASVT E34
- DF40ATH E01
- DF50A E01
- DF50A E11
- DF50ATH E01
- DF50AVTH E01
- DF60A E01
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVT E01
- DF60AVT E11
- DF60AVT E40
- DF60AVTH E40

FIG.442A

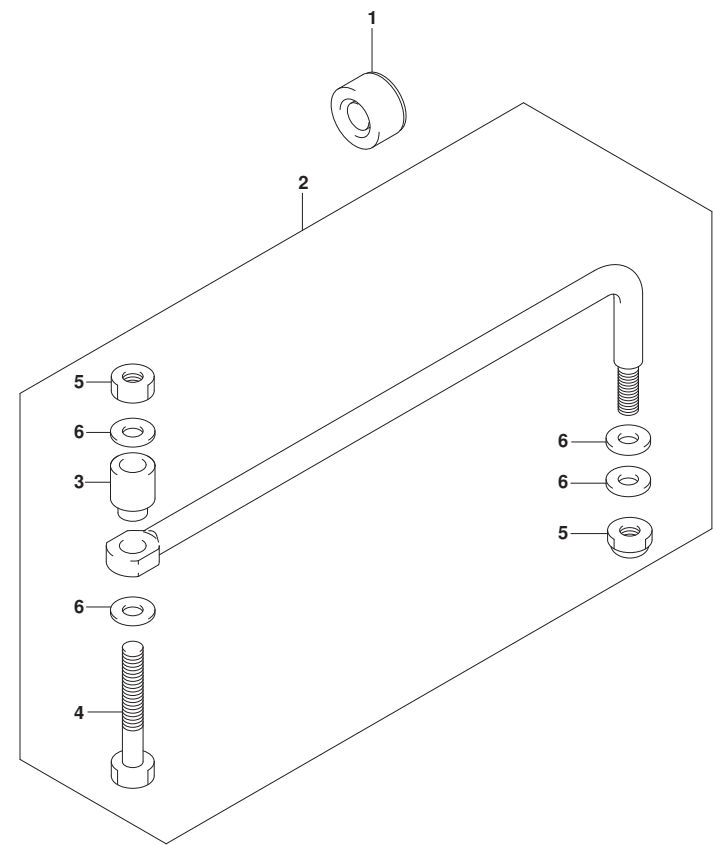



FIG.442A (2-G-8) DRAG LINK (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41161-94400	SEAL, STEERING CABLE	1	
2	67701-87J11	LINK ASSY, DRAG	1	
3	67721-87J00	.SPACER	1	
4	67725-99E00	.BOLT, DRAG LINK	1	
5	67726-99E00	.NUT, LOCK	2	
6	67728-99E00	.WASHER	4	

NOTE : DF40A,DF40AST,DF50A,DF50AVT,DF60A,DF60AVT,DF40ASVT

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AST E34
- DF40ASVT E34
- DF50A E01
- DF50A E03
- DF50A E11
- DF50AVT E03
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40

FIG.444A

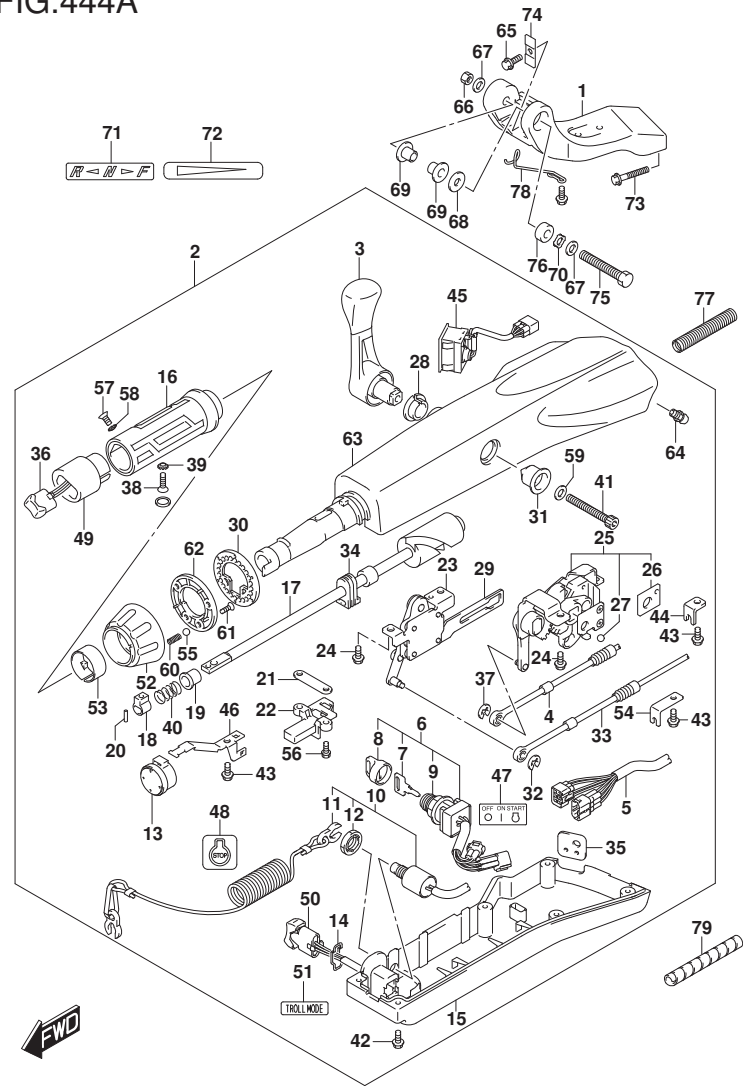


DF60A_E11_022_444A
TILLER HANDLE

FIG.444A (2-G-9) TILLER HANDLE (DF40AQH,DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43761-88L01-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
2-1	63110-88L34-YAY	HANDLE ASSY, TILLER (BLACK)	1	
2-2	63110-88L35-YAY	HANDLE ASSY, TILLER (BLACK)	1	SEE NOTE
3	21110-88L00	..LEVER, SHIFT	1	
4	23230-88L00	..CABLE, SHIFT	1	
5	36620-88L11	..WIRE ASSY, HANDLE	1	
6	37110-87L02	..SWITCH ASSY, IGNITION	1	
7-1	37141-99E00	..KEY (931)	1	
7-2	37141-99E10	..KEY (932)	1	
7-3	37141-99E20	..KEY (933)	1	
7-4	37141-99E30	..KEY (934)	1	
7-5	37141-99E40	..KEY (935)	1	
7-6	37141-99E50	..KEY (936)	1	
7-7	37141-99E60	..KEY (937)	1	
7-8	37141-99E70	..KEY (938)	1	
7-9	37141-99E80	..KEY (939)	1	
7-10	37141-99E90	..KEY (940)	1	
7-11	37141-99EA0	..KEY (941)	1	
7-12	37141-99EB0	..KEY (942)	1	
8	37143-99E01	..CAP, KEY	1	
9	37149-93J00	..CAP, CYLINDER BODY	1	
10	37820-87L11	..SWITCH ASSY, EMERGENCY	1	
11	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
12	37826-92J10	..NUT	1	
13	38500-93J90	..BUZZER, WARNING	1	
14	37852-87J00	..PLATE, TRIM SWITCH	1	
15	63121-88L10	..COVER, UNDER	1	
16	63210-88L00	..GRIP, HANDLE	1	
17	63221-88L00	..SHAFT, THROTTLE	1	

NOTE : FROM 04003F-141090, FROM 06002F-142205

FIG.444A

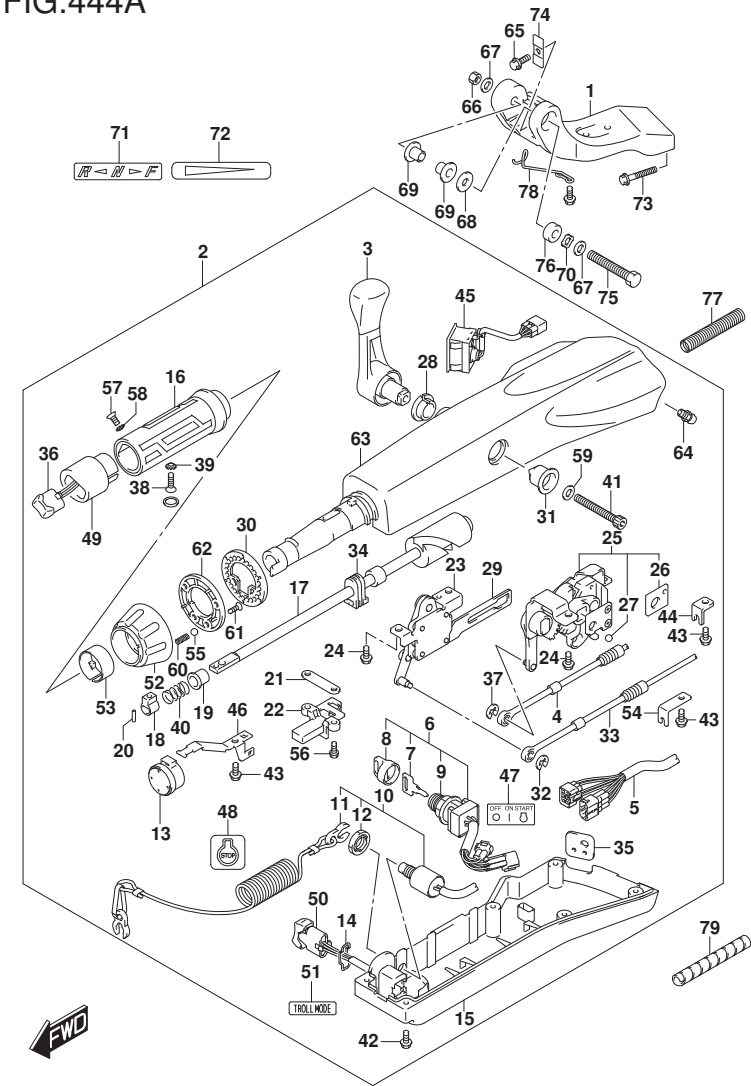

DF60A_E11_022_444A
TILLER HANDLE

FIG.444A (2-G-10) TILLER HANDLE (DF40AQH,DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	63223-92D00	.STOPPER, HANDLE ROD	1	
19	63225-88L00	.BUSH, HANDLE ROD	1	
20	63227-93200	.PIN, HANDLE ROD (L:14)	1	
21	63235-88L00	.PLATE, THROTTLE SHAFT	1	
22	63246-88L00	.STOPPER, THROTTLE ADJUST	1	
23	63250-88L00	.ARM ASSY, THROTTLE	1	
24	63251-87J00	.BOLT, SHIFT GEAR ASSY (6X12)	4	
25	63260-88L00	.GEAR ASSY, SHIFT	1	
26	63272-87J00	.PLATE, BALL GUIDE	1	
27	63273-87J00	.BALL	1	
28	63262-87J00	.BUSH, SHIFT LEVER	1	
29	63271-87J00	.PLATE, LOCK	1	
30	63248-99J00	.PLATE, THROTTLE ADJ NOTCH	1	
31	63261-87J00	.BUSH, SHIFT GEAR	1	
32	63274-87J00	.E RING	1	
33	63610-88L00	.CABLE, THROTTLE	1	
34	37853-88L90	.GROMMET, PTT SW LEAD	1	
35	63626-88L00	.GROMMET, CABLE	1	
36	67263-88L00	.CAP, SWITCH	1	
37	67292-87J00	.E RING	2	
38	09126-06015	.SCREW (6X23)	1	
39	09163-06001	.LOCK WASHER (6.4X12X0.5)	1	
40	09440-12027	.SPRING	1	
41	21112-88L10	.BOLT, SHIFT LEVER	1	
42	09125-05047	.SCREW (5X14)	6	
43	63611-88L00	.BOLT, CLAMP BRACKET	3	
44	63612-87J00	.BRACKET, CLAMP	1	
45	34200-87L00	.TACHOMETER ASSY, WITH MONITOR	1	
46	36617-88L90	.CLAMP, MAIN HARNESS	1	
47	37112-88L91	.LABEL, IGNITION SW	1	
48	37835-91J00-YAY	.LABEL, STOP (BLACK)	1	
49	37851-88L90	.BASE, PTT SW	1	
50	37861-87L11	.SWITCH, TROLLING CONTROL	1	
51	37864-88L91	.LABEL, TROLL MODE	1	
52	63244-99J00	.KNOB, THROTTLE ADJ	1	
53	63245-99J00	.BUSH, THROTTLE ADJ	1	

DF60A_E11_022

FIG.444A

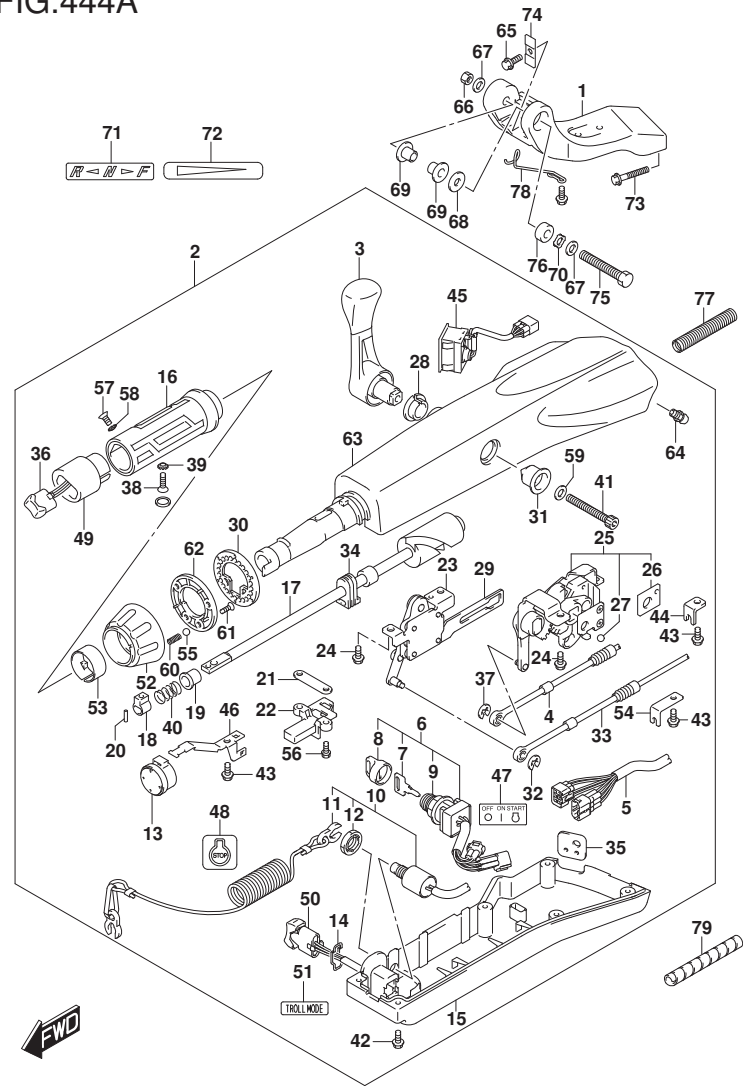


FIG.444A (2-G-11) TILLER HANDLE (DF40AQH,DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
54	63612-88L10	.BRACKET, CLAMP SHIFT	1	
55	09260-10006	.BALL	1	
56	63251-88L90	.BOLT	2	
57	37855-88L90	.SCREW, THROTTLE GRIP	1	
58	37854-88L90	.WASHER, THROTTLE GRIP	1	
59	63258-88L00	.WASHER	1	
60	09440-06037	.SPRING	1	
61	03522-05169	.SCREW	3	
62	63247-99J00	.PLATE, THROTTLE ADJ KNOB	1	
63	63111-88L01-YAY	.HOUSING, TILLER HANDLE (BLACK)	1	
64	22511-99011	.NIPPLE, GREASE	1	SEE NOTE
65	09116-08137	BOLT (8X22)	1	
66	09159-12014	NUT (12X17)	1	
67	09160-12066	WASHER (12.5X22X2.5)	2	
68	09160-12124	WASHER (12.5X32X1.5)	1	
69	63115-88L01	BUSH, TILLER HANDLE PIVOT	2	
70	09164-13010	WASHER	1	
71	21131-88L02	MARK, CLUTCH SHIFT	1	
72	63215-93110	MARK, HANDLE GRIP	1	
73	09116-10150	BOLT (10X55)	2	
74	63132-88L00	STOPPER, TILLER HANDLE	1	
75	43762-88L00	BOLT, TILLER HANDLE PIVOT	1	
76	43768-88L00	SPACER, TILLER HANDLE	1	
77	33834-88L00	TUBE, CABLE PROTECTOR	1	
78	65793-88L00	HOLDER, FUEL HOSE	1	

NOTE : FROM 04003F-141090, FROM 06002F-142205

FIG.444A

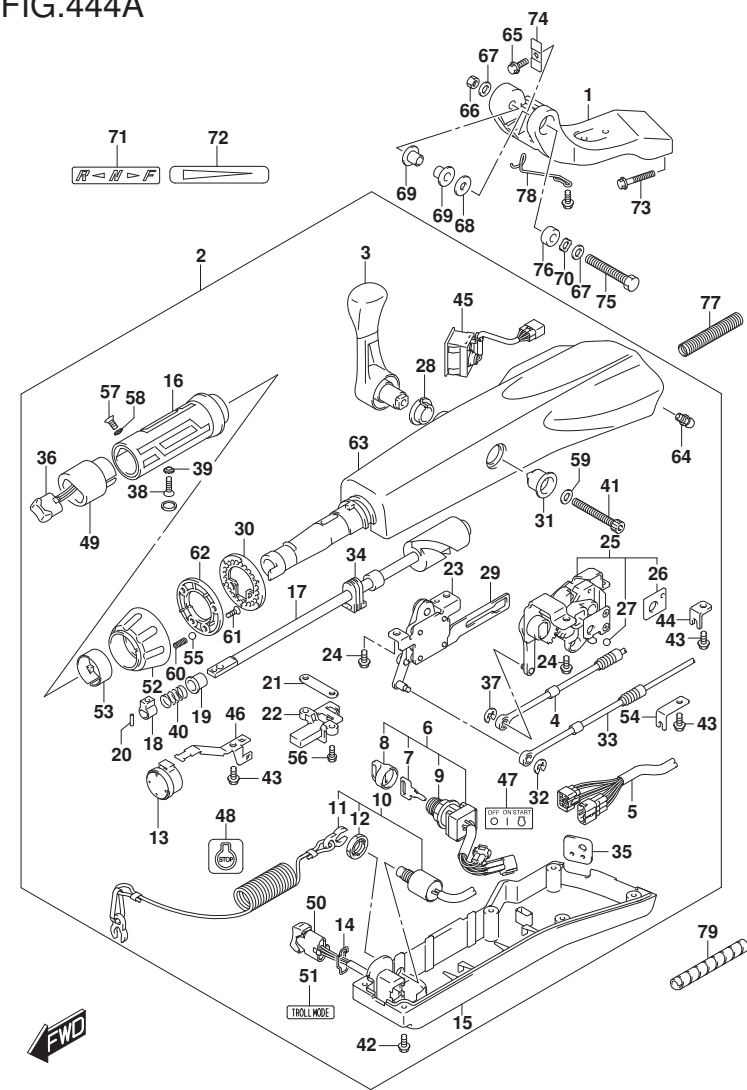


FIG.444A (2-G-12) TILLER HANDLE (DF40AQH,DF60AQH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
79	33833-91J00	TUBE, SWITCH LEAD (L:250)	1	L:250->150

DF40AQH E01
DF60AQH E40

FIG.444B


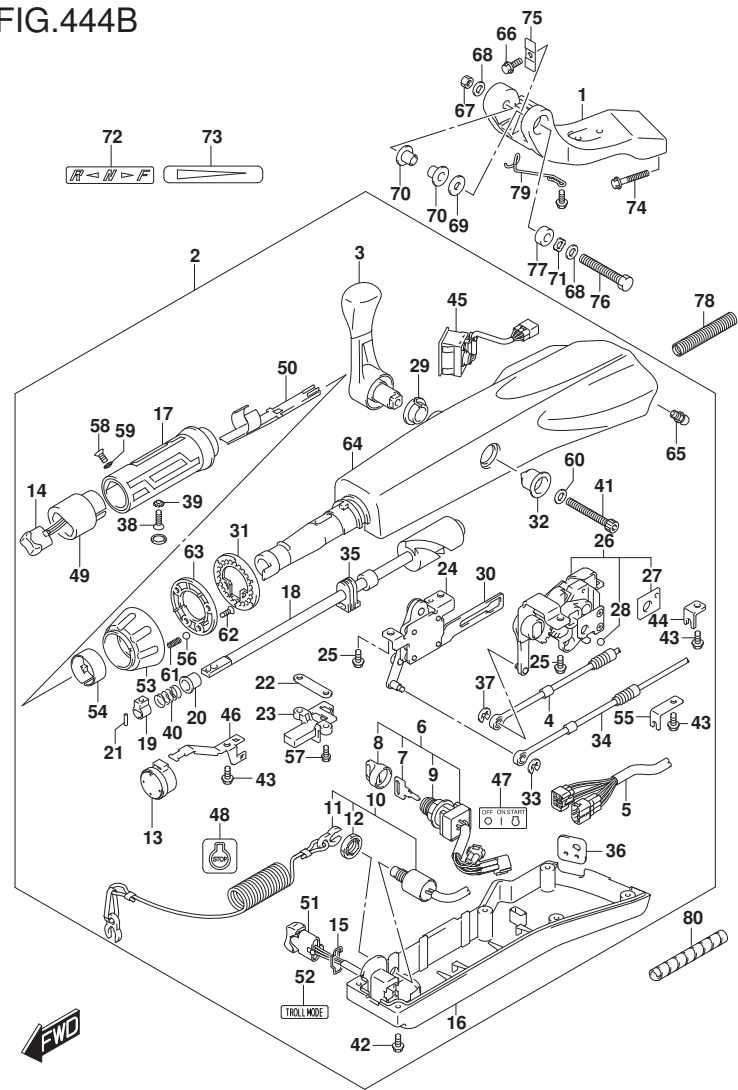


FIG.444B (2-G-13) TILLER HANDLE (DF40ATH,DF50ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43761-88L01-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
2-1	63110-88L25-YAY	HANDLE ASSY, TILLER (BLACK)	1	
2-2	63110-88L26-YAY	HANDLE ASSY, TILLER (BLACK)	1	SEE NOTE
3	21110-88L00	.LEVER, SHIFT	1	
4	23230-88L00	.CABLE, SHIFT	1	
5	36620-88L11	.WIRE ASSY, HANDLE	1	
6	37110-87L02	.SWITCH ASSY, IGNITION	1	
7-1	37141-99E00	..KEY (931)	1	
7-2	37141-99E10	..KEY (932)	1	
7-3	37141-99E20	..KEY (933)	1	
7-4	37141-99E30	..KEY (934)	1	
7-5	37141-99E40	..KEY (935)	1	
7-6	37141-99E50	..KEY (936)	1	
7-7	37141-99E60	..KEY (937)	1	
7-8	37141-99E70	..KEY (938)	1	
7-9	37141-99E80	..KEY (939)	1	
7-10	37141-99E90	..KEY (940)	1	
7-11	37141-99EA0	..KEY (941)	1	
7-12	37141-99EB0	..KEY (942)	1	
8	37143-99E01	..CAP, KEY	1	
9	37149-93J00	..CAP, CYLINDER BODY	1	
10	37820-87L11	.SWITCH ASSY, EMERGENCY	1	
11	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
12	37826-92J10	..NUT	1	
13	38500-93J90	..BUZZER, WARNING	1	
14	37850-87L01	.SWITCH ASSY, PTT	1	
15	37852-87J00	.PLATE, TRIM SWITCH	1	
16	63121-88L10	.COVER, UNDER	1	
17	63210-88L00	.GRIP, HANDLE	1	

NOTE : FROM 04003F-141090, FROM 05003F-141319

FIG.444B

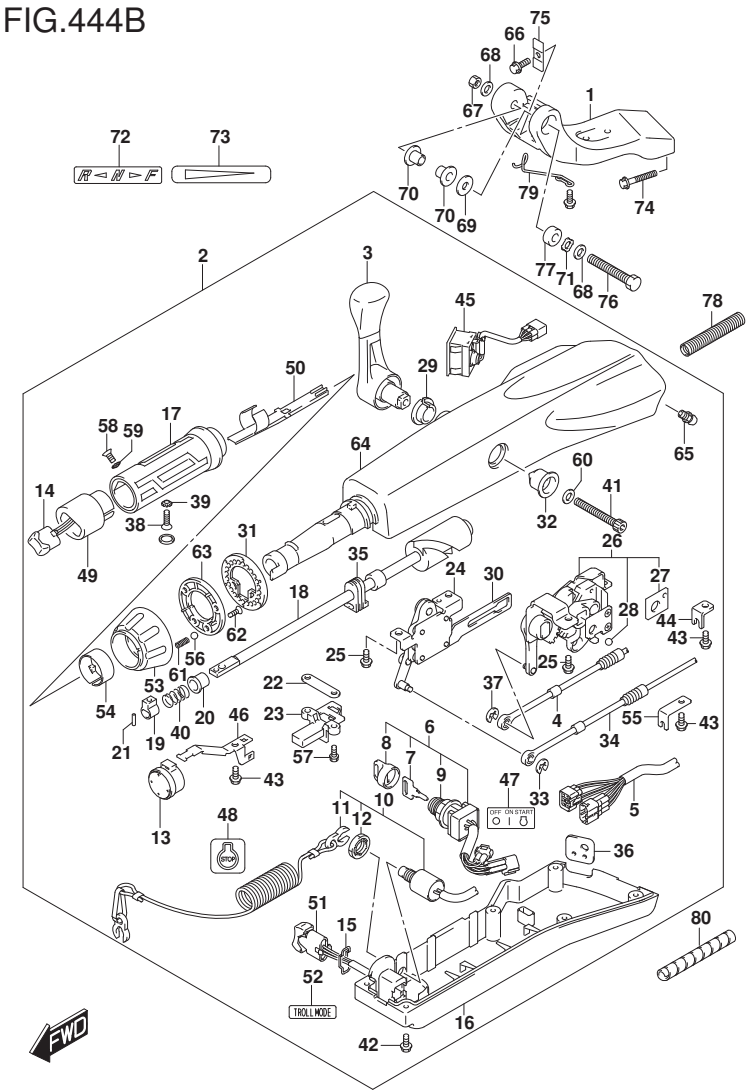

DF60A_E11_022_444B
TILLER HANDLE

FIG.444B (2-G-14) TILLER HANDLE (DF40ATH,DF50ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	63221-88L00	.SHAFT, THROTTLE	1	
19	63223-92D00	.STOPPER, HANDLE ROD	1	
20	63225-88L00	.BUSH, HANDLE ROD	1	
21	63227-93200	.PIN, HANDLE ROD (L:14)	1	
22	63235-88L00	.PLATE, THROTTLE SHAFT	1	
23	63246-88L00	.STOPPER, THROTTLE ADJUST	1	
24	63250-88L00	ARM ASSY, THROTTLE	1	
25	63251-87J00	.BOLT, SHIFT GEAR ASSY (6X12)	4	
26	63260-88L00	.GEAR ASSY, SHIFT	1	
27	63272-87J00	.PLATE, BALL GUIDE	1	
28	63273-87J00	.BALL	1	
29	63262-87J00	.BUSH, SHIFT LEVER	1	
30	63271-87J00	.PLATE, LOCK	1	
31	63248-99J00	.PLATE, THROTTLE ADJ NOTCH	1	
32	63261-87J00	.BUSH, SHIFT GEAR	1	
33	63274-87J00	.E RING	1	
34	63610-88L00	.CABLE, THROTTLE	1	
35	37853-88L90	.GROMMET, PTT SW LEAD	1	
36	63626-88L00	.GROMMET, CABLE	1	
37	67292-87J00	.E RING	2	
38	09126-06015	.SCREW (6X23)	1	
39	09163-06001	.LOCK WASHER (6.4X12X0.5)	1	
40	09440-12027	.SPRING	1	
41	21112-88L00	.BOLT, SHIFT LEVER	1	
42	09125-05047	.SCREW (5X14)	6	
43	63611-88L00	.BOLT, CLAMP BRACKET	3	
44	63612-87J00	.BRACKET, CLAMP	1	
45	34200-87L00	.TACHOMETER ASSY, WITH MONITOR	1	
46	36617-88L90	.CLAMP, MAIN HARNESS	1	
47	37112-88L91	.LABEL, IGNITION SW	1	
48	37835-91J00-YAY	.LABEL, STOP (BLACK)	1	
49	37851-88L90	.BASE, PTT SW	1	
50	37852-88L90	.HARNESS GUIDE	1	
51	37861-87L11	.SWITCH, TROLLING CONTROL	1	
52	37864-88L91	.LABEL, TROLL MODE	1	
53	63244-99J00	.KNOB, THROTTLE ADJ	1	

DF60A_E11_022

FIG.444B

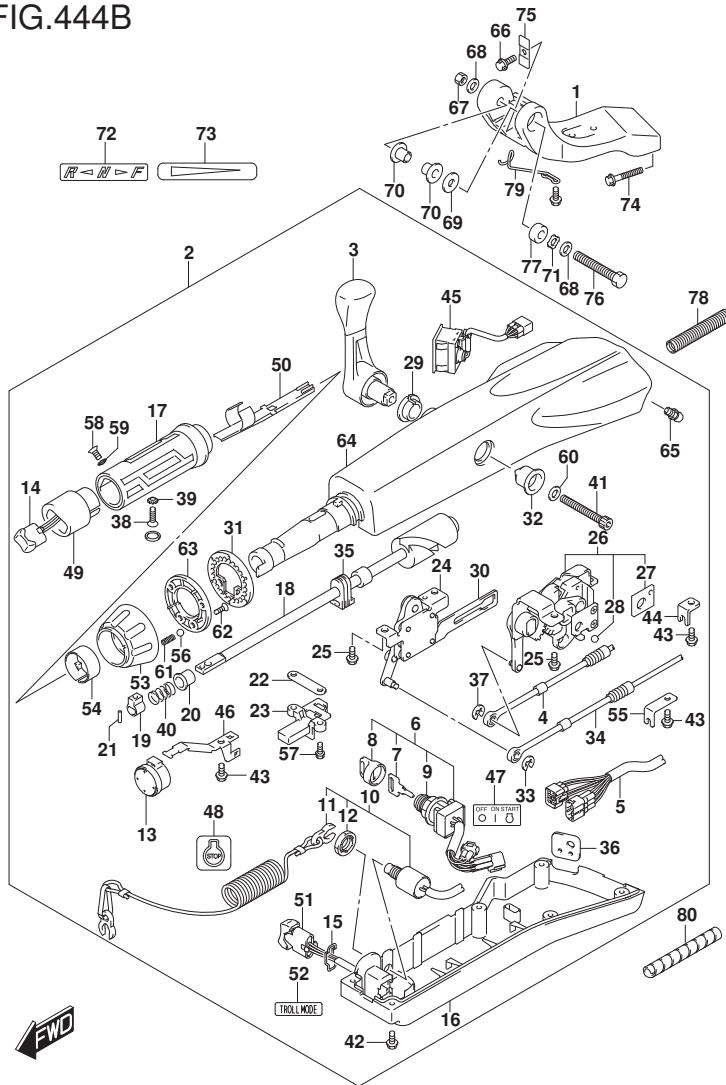


FIG.444B (2-G-15) TILLER HANDLE (DF40ATH,DF50ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
54	63245-99J00	.BUSH, THROTTLE ADJ	1	
55	63612-88L10	.BRACKET, CLAMP SHIFT	1	
56	09260-10006	.BALL	1	
57	63251-88L90	.BOLT	2	
58	37855-88L90	.SCREW, THROTTLE GRIP	1	
59	37854-88L90	.WASHER, THROTTLE GRIP	1	
60	63258-88L00	.WASHER	1	
61	09440-06037	.SPRING	1	
62	03522-05169	.SCREW	3	
63	63247-99J00	.PLATE, THROTTLE ADJ KNOB	1	
64	63111-88L01-YAY	.HOUSING, TILLER HANDLE (BLACK)	1	
65	22511-99011	.NIPPLE, GREASE	1	SEE NOTE
66	09116-08137	BOLT (8X22)	1	
67	09159-12014	NUT (12X17)	1	
68	09160-12066	WASHER (12.5X22X2.5)	2	
69	09160-12124	WASHER (12.5X32X1.5)	1	
70	63115-88L01	BUSH, TILLER HANDLE PIVOT	2	
71	09164-13010	WASHER	1	
72	21131-88L02	MARK, CLUTCH SHIFT	1	
73	63215-93110	MARK, HANDLE GRIP	1	
74	09116-10150	BOLT (10X55)	2	
75	63132-88L00	STOPPER, TILLER HANDLE	1	
76	43762-88L00	BOLT, TILLER HANDLE PIVOT	1	
77	43768-88L00	SPACER, TILLER HANDLE	1	
78	33834-88L00	TUBE, CABLE PROTECTOR	1	
79	65793-88L00	HOLDER, FUEL HOSE	1	

NOTE : FROM 04003F-141090, FROM 05003F-141319

FIG.444B


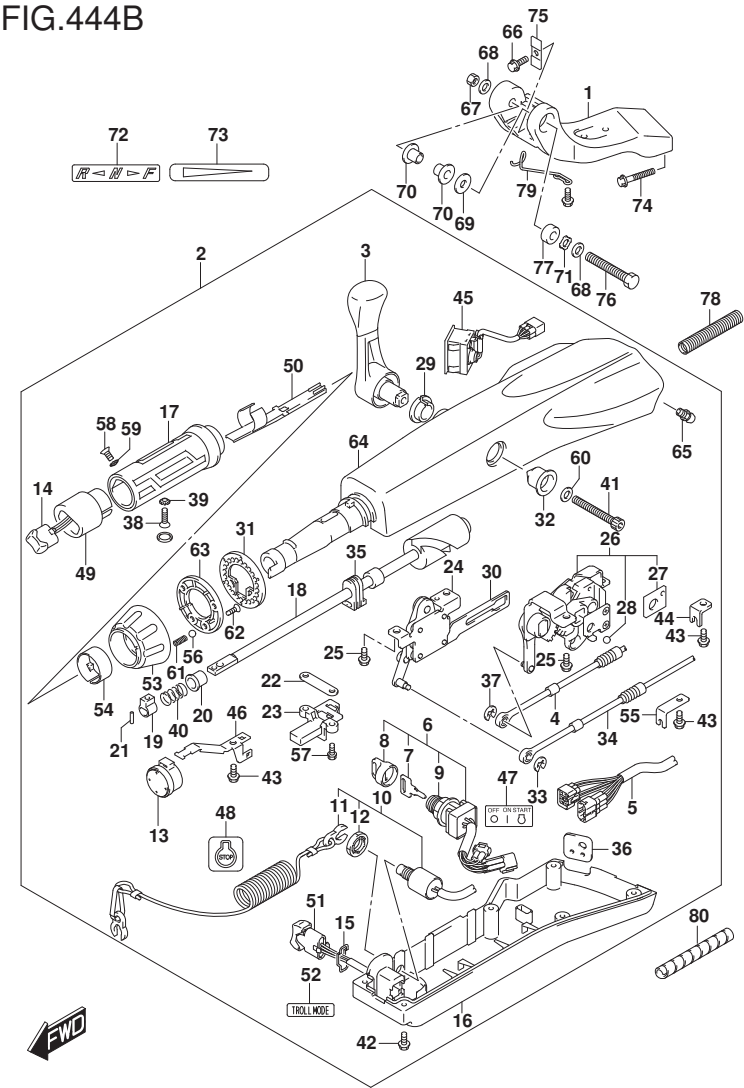


FIG.444B (2-H-2) TILLER HANDLE (DF40ATH,DF50ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
80	33833-91J00	TUBE, SWITCH LEAD (L:250)	1	L:250->150

DF40ATH E01
DF50ATH E01

FIG.444C

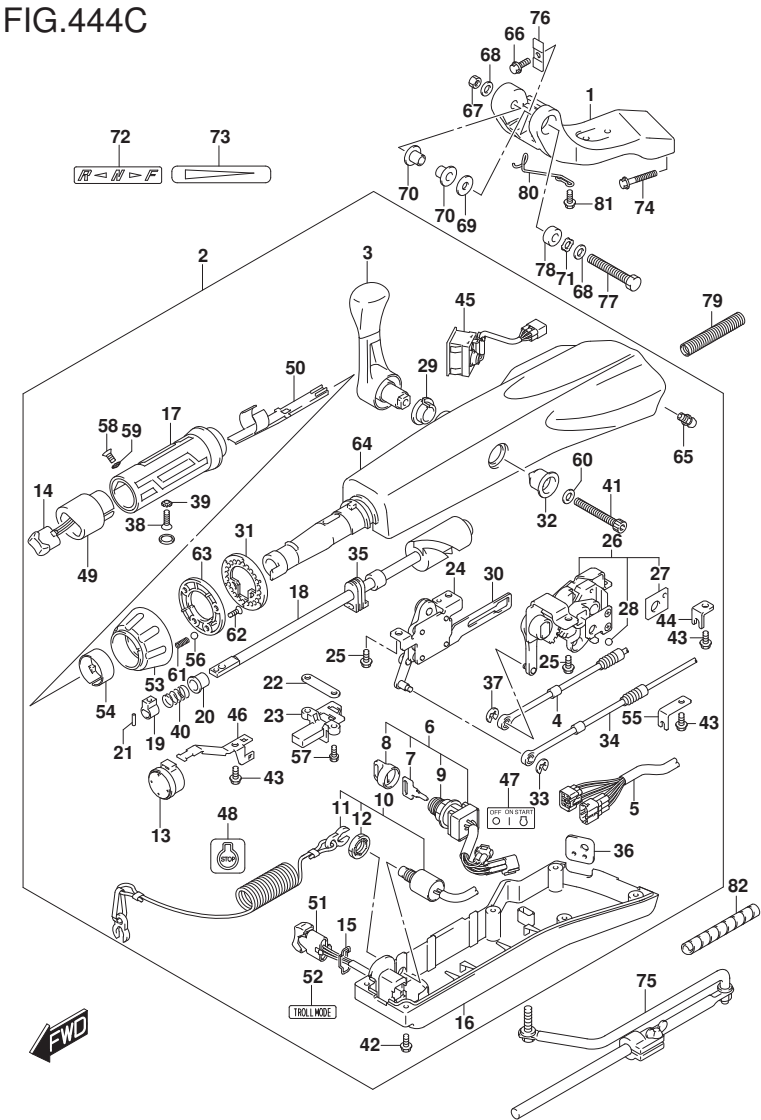

DF60A_E11_022_444C
TILLER HANDLE

FIG.444C (2-H-3) TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43761-88L01-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
2-1	63110-88L25-YAY	HANDLE ASSY, TILLER (BLACK)	1	
2-2	63110-88L26-YAY	HANDLE ASSY, TILLER (BLACK)	1	SEE NOTE 2
3	21110-88L00	.LEVER, SHIFT	1	
4	23230-88L00	.CABLE, SHIFT	1	
5	36620-88L11	.WIRE ASSY, HANDLE	1	
6	37110-87L02	.SWITCH ASSY, IGNITION	1	
7-1	37141-99E00	..KEY (931)	1	
7-2	37141-99E10	..KEY (932)	1	
7-3	37141-99E20	..KEY (933)	1	
7-4	37141-99E30	..KEY (934)	1	
7-5	37141-99E40	..KEY (935)	1	
7-6	37141-99E50	..KEY (936)	1	
7-7	37141-99E60	..KEY (937)	1	
7-8	37141-99E70	..KEY (938)	1	
7-9	37141-99E80	..KEY (939)	1	
7-10	37141-99E90	..KEY (940)	1	
7-11	37141-99EA0	..KEY (941)	1	
7-12	37141-99EB0	..KEY (942)	1	
8	37143-99E01	..CAP, KEY	1	
9	37149-93J00	..CAP, CYLINDER BODY	1	
10	37820-87L11	.SWITCH ASSY, EMERGENCY	1	
11	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
12	37826-92J10	..NUT	1	
13	38500-93J90	.BUZZER, WARNING	1	
14	37850-87L01	.SWITCH ASSY, PTT	1	
15	37852-87J00	.PLATE, TRIM SWITCH	1	
16	63121-88L10	.COVER, UNDER	1	

NOTE 1 : DF60ATH,DF50AVTH,DF60AVTH,DF50AVT

NOTE 2 : FROM 05004F-140056, FROM 06002F-142205,
FROM 06003F-140202

FIG.444C

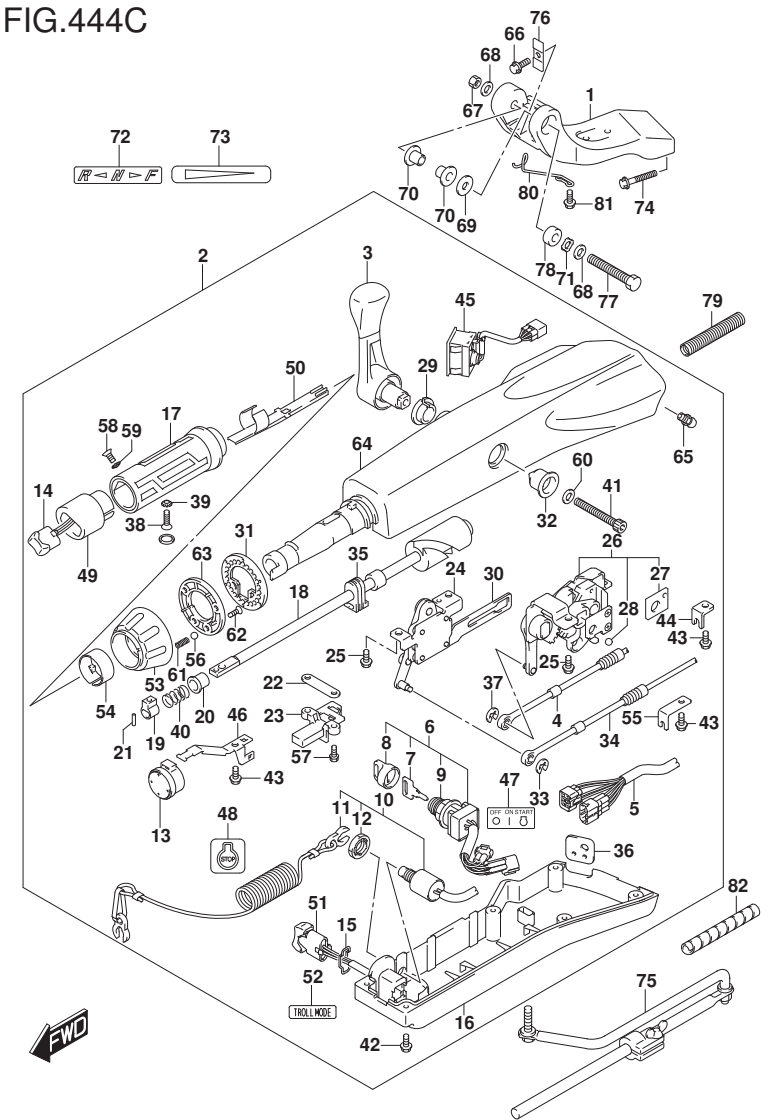


FIG.444C (2-H-4) TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
17	63210-88L00	.GRIP, HANDLE	1	
18	63221-88L00	.SHAFT, THROTTLE	1	
19	63223-92D00	.STOPPER, HANDLE ROD	1	
20	63225-88L00	.BUSH, HANDLE ROD	1	
21	63227-93200	.PIN, HANDLE ROD (L:14)	1	
22	63235-88L00	.PLATE, THROTTLE SHAFT	1	
23	63246-88L00	.STOPPER, THROTTLE ADJUST	1	
24	63250-88L00	.ARM ASSY, THROTTLE	1	
25	63251-87J00	.BOLT, SHIFT GEAR ASSY (6X12)	4	
26	63260-88L00	.GEAR ASSY, SHIFT	1	
27	63272-87J00	.PLATE, BALL GUIDE	1	
28	63273-87J00	.BALL	1	
29	63262-87J00	.BUSH, SHIFT LEVER	1	
30	63271-87J00	.PLATE, LOCK	1	
31	63248-99J00	.PLATE, THROTTLE ADJ NOTCH	1	
32	63261-87J00	.BUSH, SHIFT GEAR	1	
33	63274-87J00	.E RING	1	
34	63610-88L00	.CABLE, THROTTLE	1	
35	37853-88L90	.GROMMET, PTT SW LEAD	1	
36	63626-88L00	.GROMMET, CABLE	1	
37	67292-87J00	.E RING	2	
38	09126-06015	.SCREW (6X23)	1	
39	09163-06001	.LOCK WASHER (6.4X12X0.5)	1	
40	09440-12027	.SPRING	1	
41	21112-88L00	.BOLT, SHIFT LEVER	1	
42	09125-05047	.SCREW (5X14)	6	
43	63611-88L00	.BOLT, CLAMP BRACKET	3	
44	63612-87J00	.BRACKET, CLAMP	1	
45	34200-87L00	.TACHOMETER ASSY, WITH MONITOR	1	
46	36617-88L90	.CLAMP, MAIN HARNESS	1	
47	37112-88L91	.LABEL, IGNITION SW	1	
48	37835-91J00-YAY	.LABEL, STOP (BLACK)	1	

NOTE 1 : DF60ATH,DF50AVTH,DF60AVTH,DF50AVT

FIG.444C

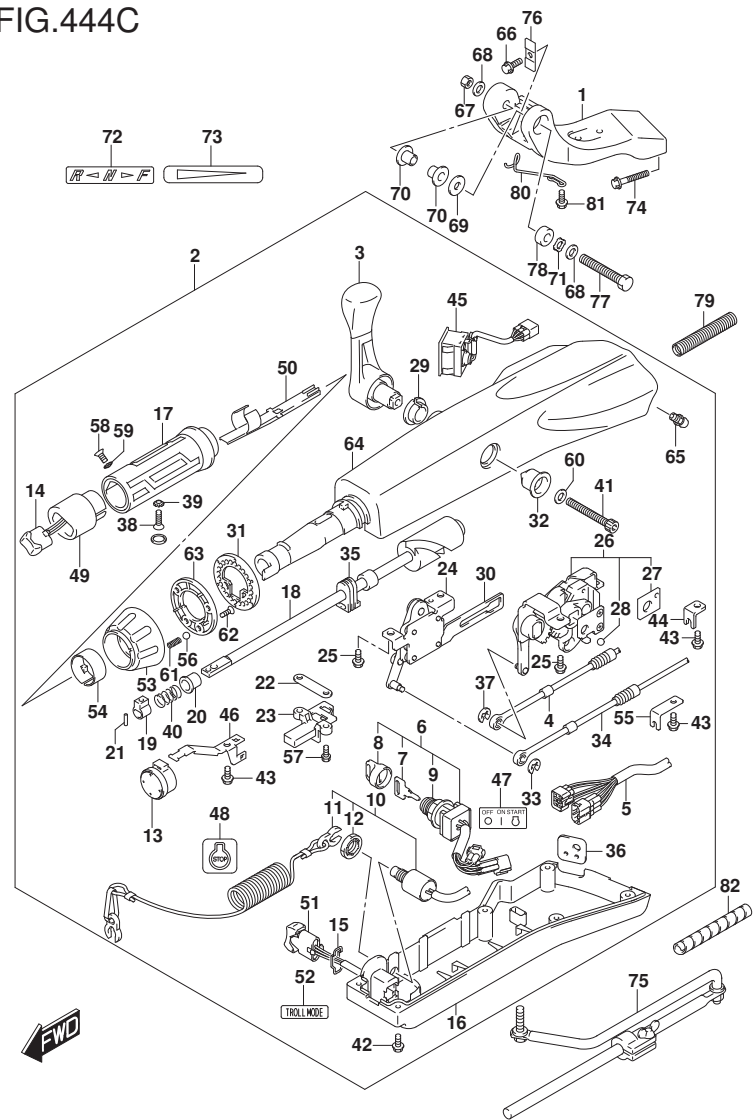


FIG.444C (2-H-5) TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
49	37851-88L90	.BASE, PTT SW	1	
50	37852-88L90	.HARNES GUIDE	1	
51	37861-87L11	.SWITCH, TROLLING CONTROL	1	
52	37864-88L91	.LABEL, TROLL MODE	1	
53	63244-99J00	.KNOB, THROTTLE ADJ	1	
54	63245-99J00	.BUSH, THROTTLE ADJ	1	
55	63612-88L10	.BRACKET, CLAMP SHIFT	1	
56	09260-10006	.BALL	1	
57	63251-88L90	.BOLT	2	
58	37855-88L90	.SCREW, THROTTLE GRIP	1	
59	37854-88L90	.WASHER, THROTTLE GRIP	1	
60	63258-88L00	.WASHER	1	
61	09440-06037	.SPRING	1	
62	03522-05169	.SCREW	3	
63	63247-99J00	.PLATE, THROTTLE ADJ KNOB	1	
64	63111-88L01-YAY	.HOUSING, TILLER HANDLE (BLACK)	1	
65	22511-99011	.NIPPLE, GREASE	1	
66	09116-08137	BOLT (8X22)	1	
67	09159-12014	NUT (12X17)	1	
68	09160-12066	WASHER (12.5X22X2.5)	2	
69	09160-12124	WASHER (12.5X32X1.5)	1	
70	63115-88L01	BUSH, TILLER HANDLE PIVOT	2	
71	09164-13010	WASHER	1	
72	21131-88L02	MARK, CLUTCH SHIFT	1	
73	63215-93110	MARK, HANDLE GRIP	1	
74	09116-10150	BOLT (10X55)	2	
75	43770-99E03	ADJUSTER ASSY, STEERING	1	
76	63132-88L00	STOPPER, TILLER HANDLE	1	
77	43762-88L00	BOLT, TILLER HANDLE PIVOT	1	
78	43768-88L00	SPACER, TILLER HANDLE	1	
79	33834-88L00	TUBE, CABLE PROTECTOR	1	

NOTE 1 : DF60ATH,DF50AVTH,DF60AVTH,DF50AVT

FIG.444C

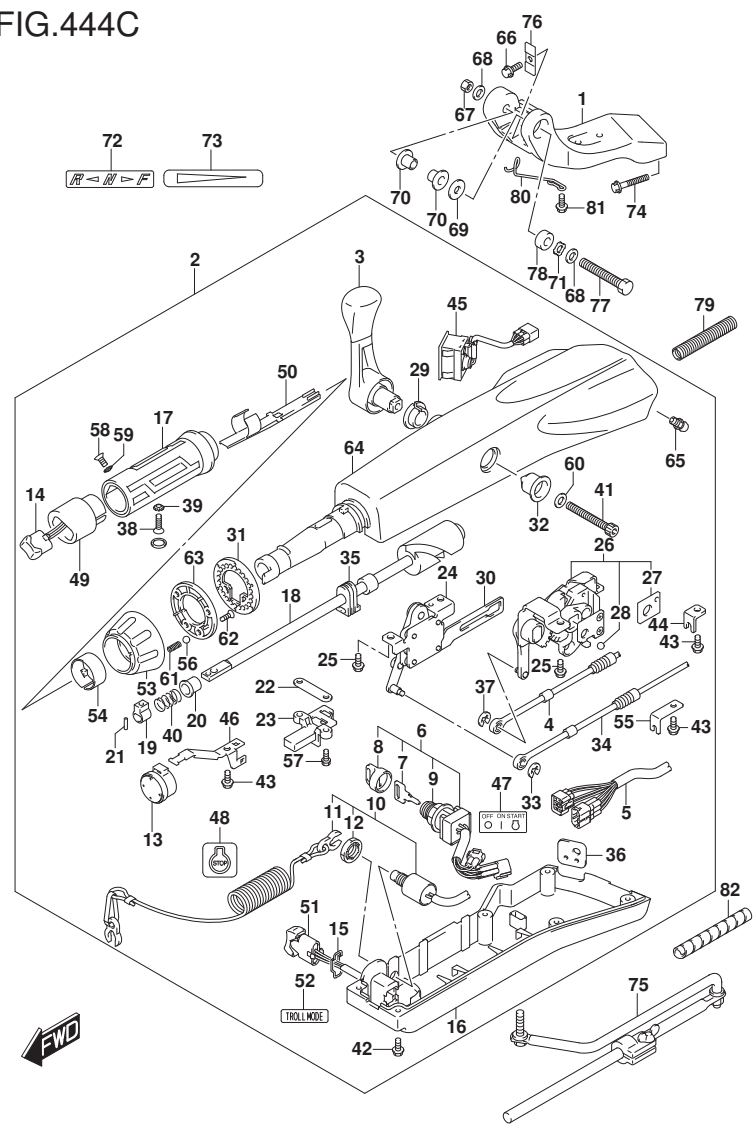


FIG.444C (2-H-6) TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
80	65793-88L00	HOLDER, FUEL HOSE	1	
81	09116-06237	BOLT (6X15)	2	
82	33833-91J00	TUBE, SWITCH LEAD (L:250)	1	L:250->150

NOTE 1 : DF60ATH,DF50AVTH,DF60AVTH,DF50AVT

DF50AVT E03
DF50AVTH E01
DF60ATH E01
DF60ATH E40
DF60AVTH E40

FIG.501A

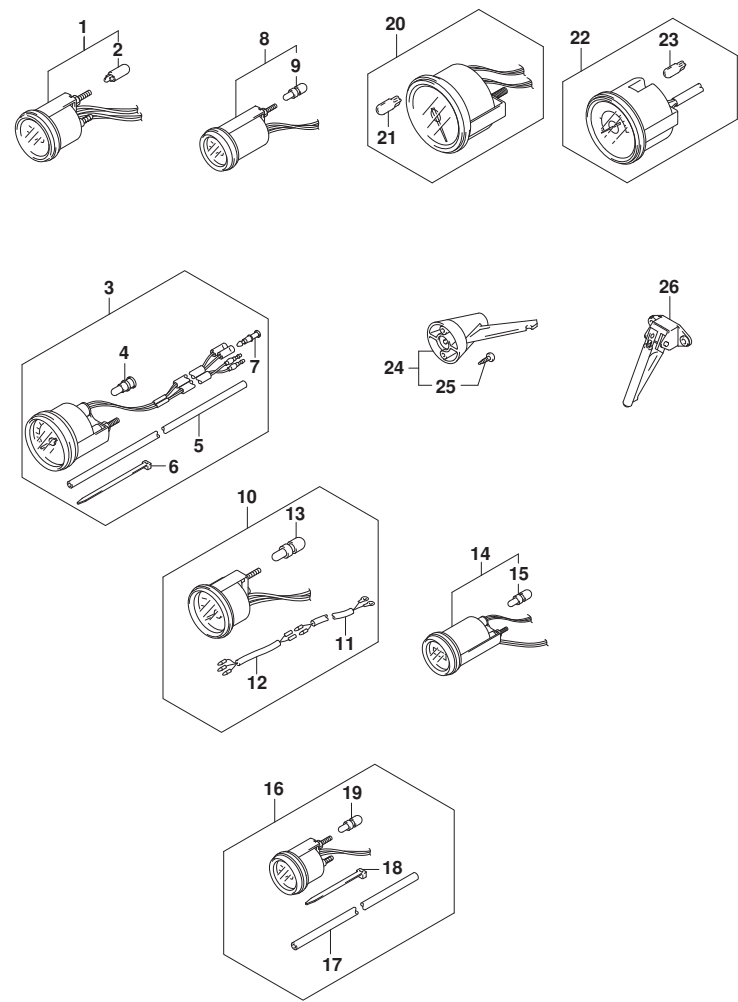


FIG.501A (2-H-7) OPT:METER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34800-93J02	METER ASSY, TRIM	1	BLACK
1-2	34800-93J13	METER ASSY, TRIM	1	WHITE
2	09471-12108	.BULB (12V1.7W,T6.5)	1	
3-1	34100-93J02	SPEEDOMETER ASSY (MAX 130KM/H)	1	BLACK
3-2	34100-93J13	SPEEDOMETER ASSY (MAX 130KM/H)	1	WHITE
3-3	34100-93J22	SPEEDOMETER ASSY (MAX 80KM/H)	1	BLACK
3-4	34100-93J33	SPEEDOMETER ASSY (MAX 80KM/H)	1	WHITE
3-5	34100-93J42	SPEEDOMETER ASSY (MAX 45KNOTS)	1	BLACK
3-6	34100-93J53	SPEEDOMETER ASSY (MAX 45KNOTS)	1	WHITE
3-7	34100-93J62	SPEEDOMETER ASSY (MAX 65KNOTS)	1	WHITE
4	09471-12028	.BULB (12V3.4W,T10)	1	
5	34191-92E00	.TUBE	1	
6	09407-14407	.CLAMP (L:145)	2	
7	36615-96300	.TERMINAL	2	
8-1	34600-93J02	METER ASSY, VOLTAGE	1	BLACK
8-2	34600-93J13	METER ASSY, VOLTAGE	1	WHITE
9	09471-12103	.BULB (12V3W,T6.5)	1	
10-1	34300-93J03	GAUGE ASSY, FUEL	1	BLACK
10-2	34300-93J14	GAUGE ASSY, FUEL	1	WHITE
11	34310-92E01	.LEAD ASSY, FUEL GAUGE	1	
12	34360-92E00	ADAPTER, FUEL GAUGE	1	
13	09471-12103	.BULB (12V3W,T6.5)	1	
14-1	34500-93J02	METER ASSY, HOUR	1	BLACK
14-2	34500-93J13	METER ASSY, HOUR	1	WHITE
15	09471-12103	.BULB (12V3W,T6.5)	1	
16-1	34650-93J22	GAUGE ASSY, WATER PRESS 15PSI	1	15PSI BLACK
16-2	34650-93J33	GAUGE ASSY, WATER PRESS 15PSI	1	15PSI WHITE
17	34191-92E00	.TUBE	1	
18	09407-14407	.CLAMP (L:145)	2	
19	09471-12103	.BULB (12V3W,T6.5)	1	
20-1	34200-93J02	TACHOMETER ASSY, WITH MONITOR	1	BLACK
20-2	34200-93J14	TACHOMETER ASSY, WITH MONITOR	1	WHITE

NOTE : DF40A,DF40AST,DF50A,DF50AVT,DF60A,DF60AVT,DF40ASVT

FIG.501A

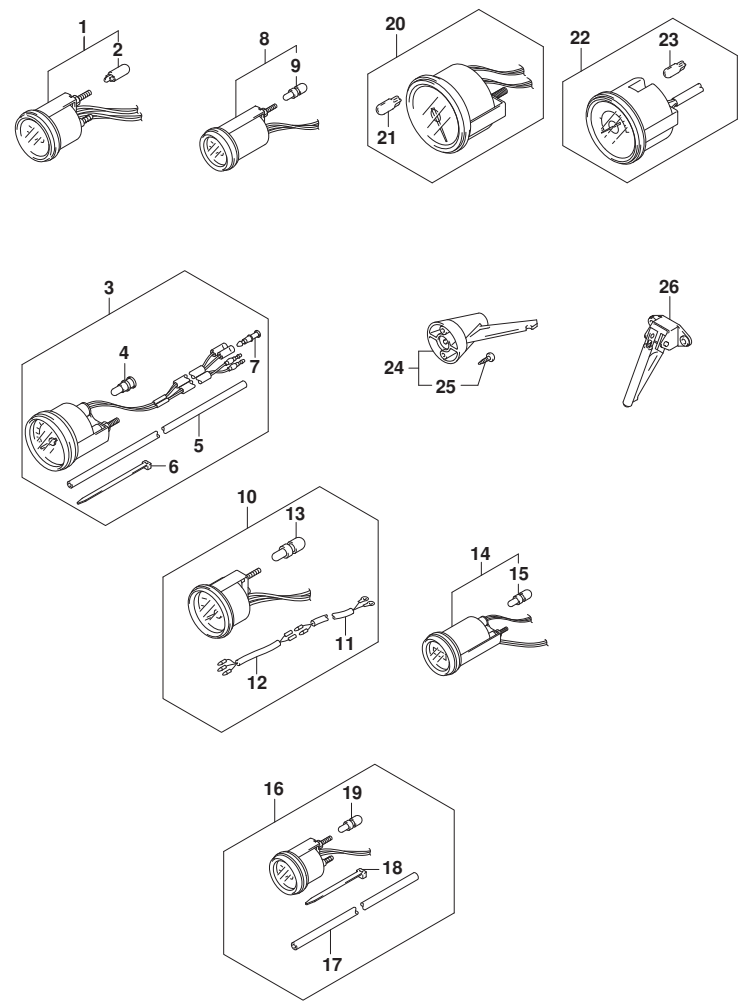


FIG.501A (2-H-8) OPT:METER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	09471-12077	.BULB (12V1.7W,T10)	1	
22-1	34200-93J43	TACHOMETER ASSY, WITH MONITOR	1	BLACK
22-2	34200-93J54	TACHOMETER ASSY, WITH MONITOR	1	WHITE
23	09471-12077	.BULB (12V1.7W,T10)	1	
24	34190-95500	SENDER, SPEEDOMETER	1	
25	03112-0630B	.SCREW	2	
26	34190-87D00	SENDER, SPEEDOMETER	1	

NOTE : DF40A,DF40AST,DF50A,DF50AVT,DF60A,DF60AVT,DF40ASVT

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AST E34
- DF40ASVT E34
- DF50A E01
- DF50A E03
- DF50A E11
- DF50AVT E03
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40

FIG.501B

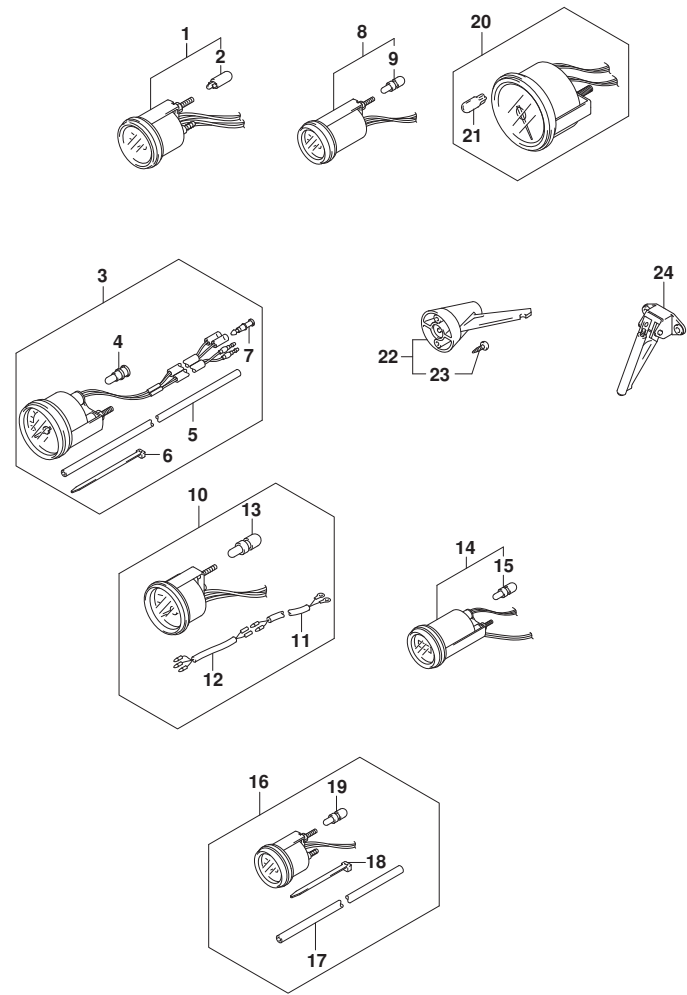


FIG.501B (2-H-9) OPT:METER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34800-93J02	METER ASSY, TRIM	1	BLACK
1-2	34800-93J13	METER ASSY, TRIM	1	WHITE
2	09471-12108	.BULB (12V1.7W,T6.5)	1	
3-1	34100-93J02	SPEEDOMETER ASSY (MAX 130KM/H)	1	BLACK
3-2	34100-93J13	SPEEDOMETER ASSY (MAX 130KM/H)	1	WHITE
3-3	34100-93J22	SPEEDOMETER ASSY (MAX 80KM/H)	1	BLACK
3-4	34100-93J33	SPEEDOMETER ASSY (MAX 80KM/H)	1	WHITE
3-5	34100-93J42	SPEEDOMETER ASSY (MAX 45KNOTS)	1	BLACK
3-6	34100-93J53	SPEEDOMETER ASSY (MAX 45KNOTS)	1	WHITE
3-7	34100-93J62	SPEEDOMETER ASSY (MAX 65KNOTS)	1	WHITE
4	09471-12028	.BULB (12V3.4W,T10)	1	
5	34191-92E00	.TUBE	1	
6	09407-14407	.CLAMP (L:145)	2	
7	36615-96300	.TERMINAL	2	
8-1	34600-93J02	METER ASSY, VOLTAGE	1	BLACK
8-2	34600-93J13	METER ASSY, VOLTAGE	1	WHITE
9	09471-12103	.BULB (12V3W,T6.5)	1	
10-1	34300-93J03	GAUGE ASSY, FUEL	1	BLACK
10-2	34300-93J14	GAUGE ASSY, FUEL	1	WHITE
11	34310-92E01	.LEAD ASSY, FUEL GAUGE	1	
12	34360-92E00	ADAPTER, FUEL GAUGE	1	
13	09471-12103	.BULB (12V3W,T6.5)	1	
14-1	34500-93J02	METER ASSY, HOUR	1	BLACK
14-2	34500-93J13	METER ASSY, HOUR	1	WHITE
15	09471-12103	.BULB (12V3W,T6.5)	1	
16-1	34650-93J22	GAUGE ASSY, WATER PRESS 15PSI	1	15PSI BLACK
16-2	34650-93J33	GAUGE ASSY, WATER PRESS 15PSI	1	15PSI WHITE
17	34191-92E00	.TUBE	1	
18	09407-14407	.CLAMP (L:145)	2	
19	09471-12103	.BULB (12V3W,T6.5)	1	
20-1	34200-93J02	TACHOMETER ASSY, WITH MONITOR	1	BLACK
20-2	34200-93J14	TACHOMETER ASSY, WITH MONITOR	1	WHITE

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVTH,DF60AVTH

FIG.501B

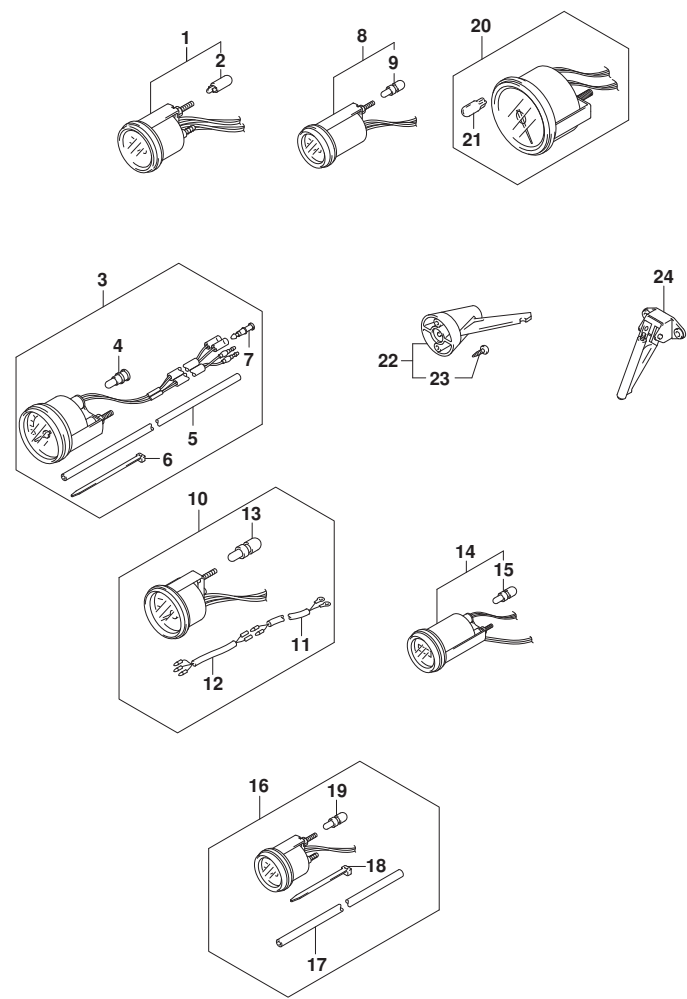


FIG.501B (2-H-10) OPT:METER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	09471-12077	.BULB (12V1.7W,T10)	1	
22	34190-95500	SENDER, SPEEDOMETER	1	
23	03112-0630B	.SCREW	2	
24	34190-87D00	SENDER, SPEEDOMETER	1	

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVTH,DF60AVTH

- DF40AQH E01
- DF40ATH E01
- DF50ATH E01
- DF50AVTH E01
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVTH E40

FIG.507A

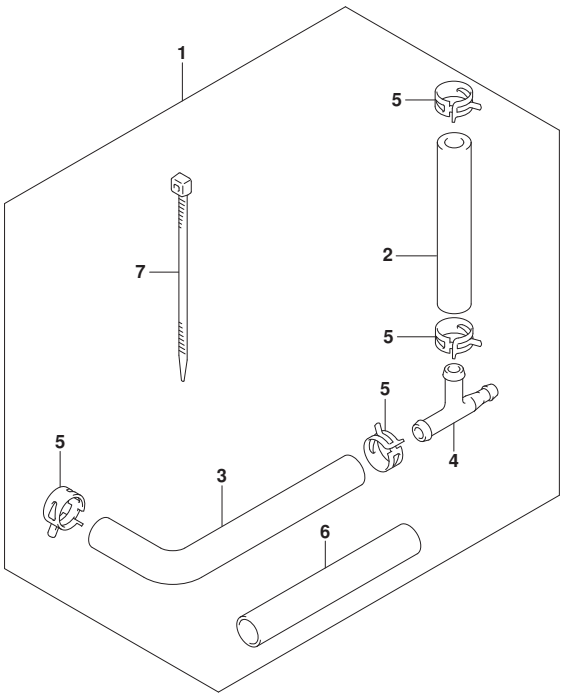


FIG.507A (2-H-11) OPT:WATER PRESSURE GAUGE SUB KIT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34660-90J04	KIT, WATER PRESS GAUGE SUB	1	
2	09352-50006-600	.HOSE (5X9X600)	1	L:600->160
3	09352-50006-600	.HOSE (5X9X600)	1	L:600->210
4	09367-06006	.3 WAY	1	
5	09401-08413	.CLIP	4	
6	18498-99EA1	.PROTECTOR (L:80)	1	
7	09407-25402	.CLAMP (L:250)	1	

FIG. 508A is an exploded perspective view of a device assembly. The main housing (1) is shown with various internal components and external parts. Key components include: a handle (33), a trigger (30), a trigger guard (29), a trigger mechanism (24), a trigger spring (25), a trigger button (26), a trigger switch (27), a trigger lever (28), a trigger arm (23), a trigger pin (22), a trigger nut (21), a trigger cap (20), a trigger lock (19), a trigger bolt (18), a trigger pin (17), a trigger nut (16), a trigger cap (15), a trigger lock (14), a trigger bolt (13), a trigger pin (12), a trigger nut (11), a trigger cap (10), a trigger lock (9), a trigger bolt (8), a trigger pin (7), a trigger nut (6), a trigger cap (5), a trigger lock (4), a trigger bolt (3), a trigger pin (2), a trigger nut (1), a trigger cap (55), a trigger lock (54), a trigger bolt (53), a trigger pin (52), a trigger nut (51), a trigger cap (50), a trigger lock (49), a trigger bolt (48), a trigger pin (47), a trigger nut (46), a trigger cap (45), a trigger lock (44), a trigger bolt (43), a trigger pin (42), a trigger nut (41), a trigger cap (40), a trigger lock (39), a trigger bolt (38), a trigger pin (37), a trigger nut (36), a trigger cap (35), a trigger lock (34), a trigger bolt (33), a trigger pin (32), a trigger nut (31), a trigger cap (30), a trigger lock (29), a trigger bolt (28), a trigger pin (27), a trigger nut (26), a trigger cap (25), a trigger lock (24), a trigger bolt (23), a trigger pin (22), a trigger nut (21), a trigger cap (20), a trigger lock (19), a trigger bolt (18), a trigger pin (17), a trigger nut (16), a trigger cap (15), a trigger lock (14), a trigger bolt (13), a trigger pin (12), a trigger nut (11), a trigger cap (10), a trigger lock (9), a trigger bolt (8), a trigger pin (7), a trigger nut (6), a trigger cap (5), a trigger lock (4), a trigger bolt (3), a trigger pin (2), a trigger nut (1).

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J61	REMOTE CONTROL ASSY	1	
2	36628-92E01	.GROMMET, WIRING HARNESS	1	
3	37110-93J12	.SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E01	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37721-93J91	.SWITCH ASSY, NEUTRAL	1	
8	37820-93J11	.SWITCH ASSY, EMERGENCY	1	
9	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
10	37826-92J10	..NUT	1	
11	37850-96L00	.SWITCH ASSY, PTT	1	
12	38500-93J90	.BUZZER, WARNING	1	
13	67212-95600	.WASHER	1	
14	67296-92E11	.SCREW, NEUTRAL SWITCH (3X15)	2	
15	67220-95630	.PLATE ASSY	1	
16	67223-99E10	.KNOB, BRAKE ADJUST	1	
17	67229-95600	.ROLLER	1	
18	67232-95600	.BUSH	1	
19	67238-87D00	.GEAR, DRIVE	1	

DF60A_E11_022_508A
OPT:REMOTE CONTROL

FIG.508A

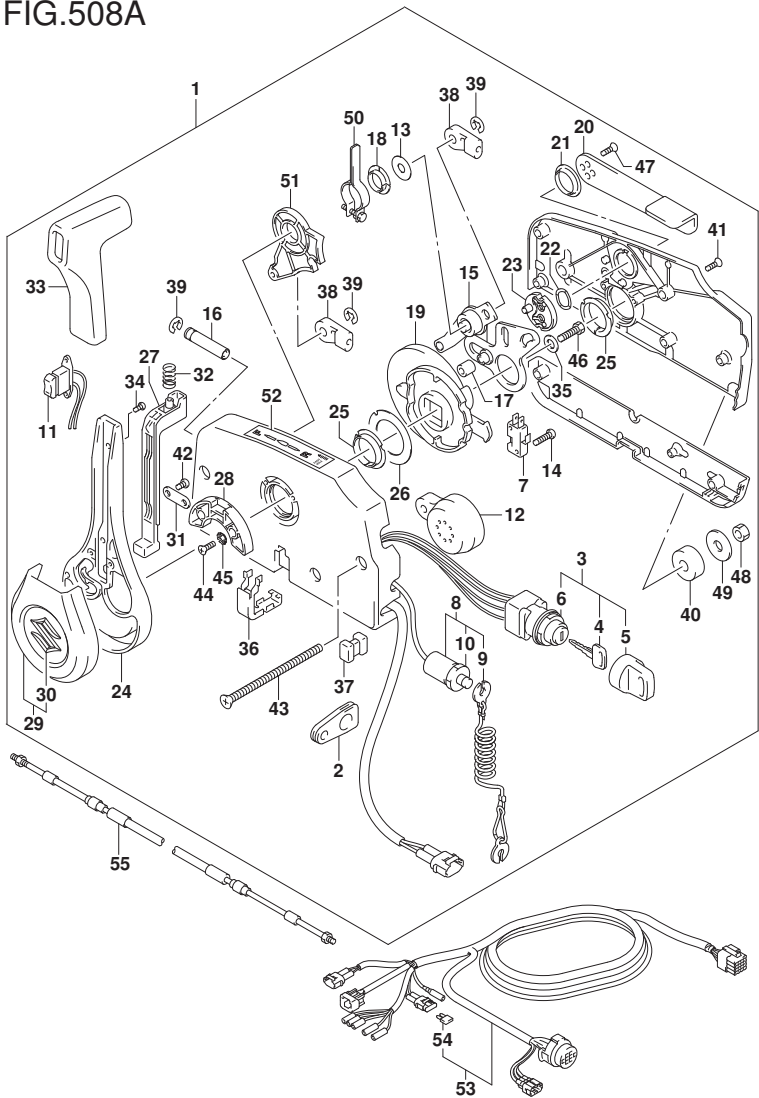


FIG.508A (2-H-13) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	67241-99E11	.LEVER, FREE THROTTLE	1	
21	67243-95600	.BUSH	1	
22	67244-95600	.WAVE WASHER	1	
23	67245-95600	.DRUM, FREE THROTTLE	1	
24	67251-96L00	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-96L00	.NEUTRAL LOCK ARM	1	
28	67256-95600	.HOLDER, NEUTRAL LOCK	1	
29	67257-96L00	.CAP ASSY, LEVER	1	
30	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
31	67258-99E00	.BRACKET	1	
32	67259-87D00	.SPRING, NEUTRAL ARM	1	
33	67261-96L00	.GRIP	1	
34	67296-96L10	.SCREW	2	
35	67264-95600	.WASHER	1	
36	67267-96L00	.COVER, WIRE SUB ASSY	1	
37	67273-95601	.SPACER	1	
38	67275-95600	.END, CABLE	2	
39	67292-94300	.E RING	3	
40	67294-95600	.SPACER	3	
41	67296-90J20	.SCREW	5	
42	67296-96L00	.SCREW	2	
43	67296-95630	.SCREW	3	
44	67296-95610	.SCREW	2	
45	67297-95600	.WASHER	2	
46	09100-08232	.BOLT (8X30)	1	
47	67269-96L10	.SCREW (5X12)	2	
48	09140-06020	.NUT	3	
49	67288-94320	.WAHSER (6.5X24X2)	3	
50	67224-96L00	.ARM, BRAKE ASSY	1	

NOTE : (DF40A:E01,DF40AST:E34,DF50A:E01,DF60A:(E01,E40),
DF60AVT:(E01,E40),DF40ASVT:E34):020

FIG.508A

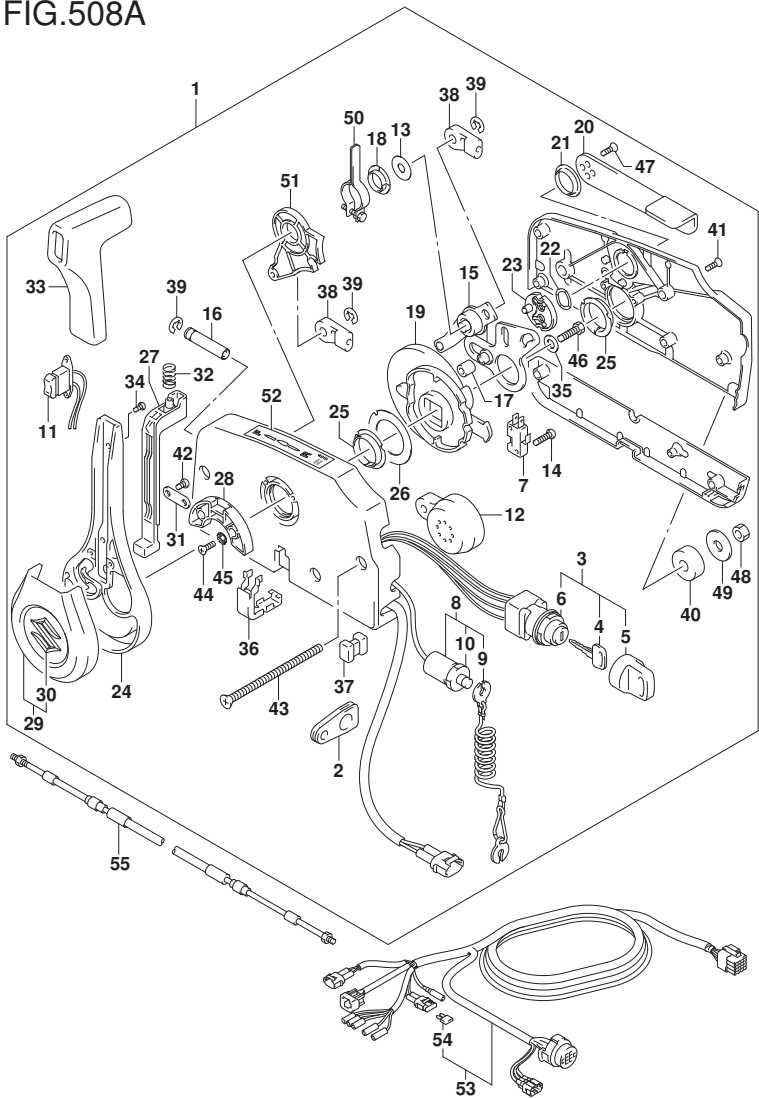


FIG.508A (2-H-14) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
51	67238-96L00	.GEAR, SHIFT ASSY	1	
52	67284-94L10	.MARK, HANDLE LEVER	1	
53-1	36620-93J03	WIRE ASSY, REMOTE CONTROL (L:5000)	1	
53-2	36620-93J53	WIRE ASSY, REMOTE CONTROL (L:3500)	1	
53-3	36620-93J63	WIRE ASSY, REMOTE CONTROL (L:6500)	1	
54	09481-10501	.FUSE (10A)	1	
55-1	67320-93J00	CABLE ASSY, REMOCON (2.4M)	2	
55-2	67320-93J10	CABLE ASSY, REMOCON (3.1M)	2	
55-3	67320-93J20	CABLE ASSY, REMOCON (3.7M)	2	
55-4	67320-93J30	CABLE ASSY, REMOCON (4.2M)	2	
55-5	67320-93J40	CABLE ASSY, REMOCON (4.8M)	2	
55-6	67320-93J50	CABLE ASSY, REMOCON (5.4M)	2	
55-7	67320-93J60	CABLE ASSY, REMOCON (6.1M)	2	
55-8	67320-93J70	CABLE ASSY, REMOCON (6.7M)	2	
55-9	67320-93J80	CABLE ASSY, REMOCON (7.3M)	2	

NOTE : (DF40A:E01,DF40AST:E34,DF50A:E01,DF60A:(E01,E40),
DF60AVT:(E01,E40),DF40ASVT:E34):020

DF40A E01
DF40AST E34
DF40ASVT E34
DF50A E01
DF60A E01
DF60A E40
DF60AVT E01
DF60AVT E40

FIG.508B

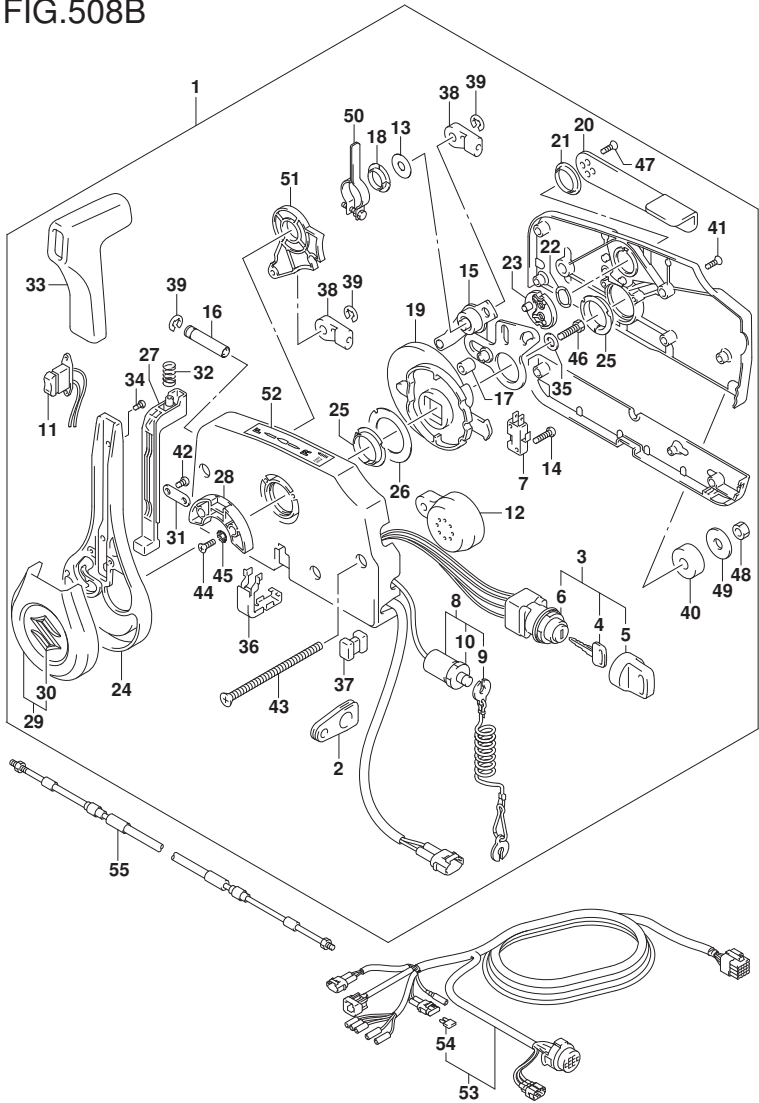


FIG.508B (2-I-2) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J61	REMOTE CONTROL ASSY	1	
2	36628-92E01	.GROMMET, WIRING HARNESS	1	
3	37110-93J12	.SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E01	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37721-93J91	.SWITCH ASSY, NEUTRAL	1	
8	37820-93J11	.SWITCH ASSY, EMERGENCY	1	
9	37823-92E02	..PLATE ASSY, EMERGENCY SW	1	
		LOCK		
10	37826-92J10	..NUT	1	
11	37850-96L00	.SWITCH ASSY, PTT	1	
12	38500-93J90	.BUZZER, WARNING	1	
13	67212-95600	.WASHER	1	
14	67296-92E11	.SCREW, NEUTRAL SWITCH (3X15)	2	
15	67220-95630	.PLATE ASSY	1	
16	67223-99E10	.KNOB, BRAKE ADJUST	1	
17	67229-95600	.ROLLER	1	
18	67232-95600	.BUSH	1	
19	67238-87D00	.GEAR, DRIVE	1	

NOTE : (DF40A:E11,DF40AST:E34,DF50A:E11,DF60A:(E11,E40),DF60AVT:
E11,DF40ASVT:E34):021

FIG.508B

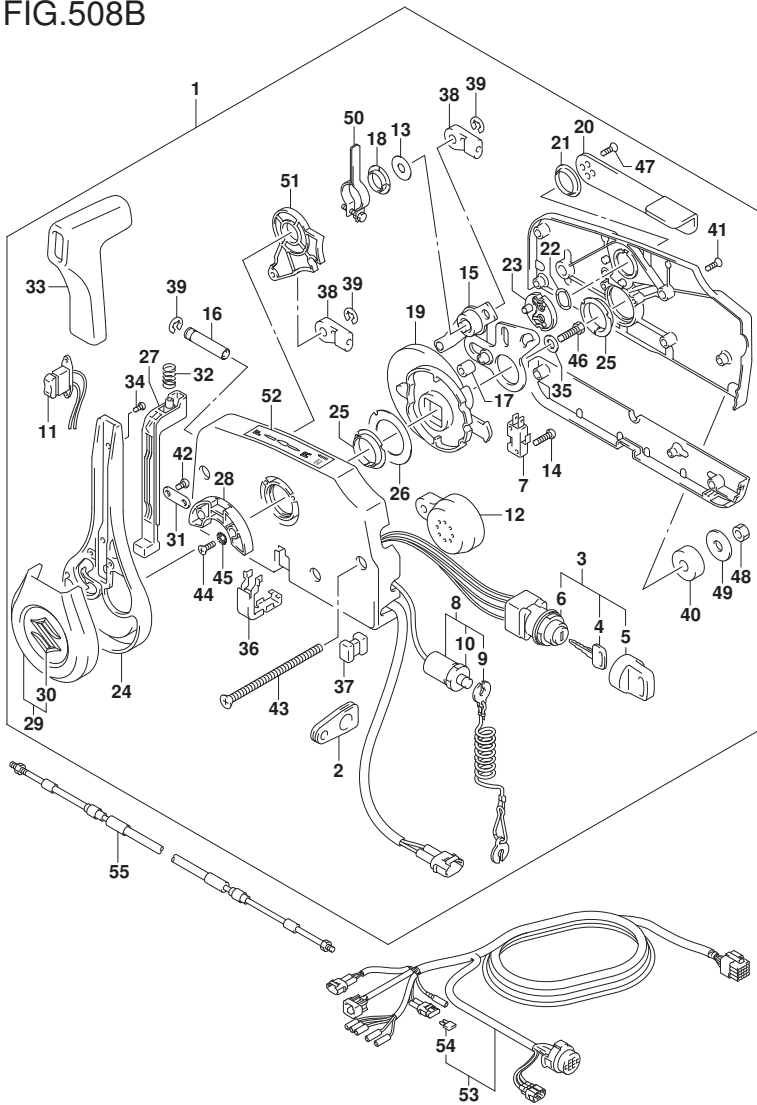


FIG.508B (2-I-3) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	67241-99E11	.LEVER, FREE THROTTLE	1	
21	67243-95600	.BUSH	1	
22	67244-95600	.WAVE WASHER	1	
23	67245-95600	.DRUM, FREE THROTTLE	1	
24	67251-96L00	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-96L00	.NEUTRAL LOCK ARM	1	
28	67256-95600	.HOLDER, NEUTRAL LOCK	1	
29	67257-96L00	.CAP ASSY, LEVER	1	
30	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
31	67258-99E00	.BRACKET	1	
32	67259-87D00	.SPRING, NEUTRAL ARM	1	
33	67261-96L00	.GRIP	1	
34	67296-96L10	.SCREW	2	
35	67264-95600	.WASHER	1	
36	67267-96L00	.COVER, WIRE SUB ASSY	1	
37	67273-95601	.SPACER	1	
38	67275-95600	.END, CABLE	2	
39	67292-94300	.E RING	3	
40	67294-95600	.SPACER	3	
41	67296-90J20	.SCREW	5	
42	67296-96L00	.SCREW	2	
43	67296-95630	.SCREW	3	
44	67296-95610	.SCREW	2	
45	67297-95600	.WASHER	2	
46	09100-08232	.BOLT (8X30)	1	
47	67269-96L10	.SCREW (5X12)	2	
48	09140-06020	.NUT	3	
49	67288-94320	.WAHSER (6.5X24X2)	3	
50	67224-96L00	.ARM, BRAKE ASSY	1	

NOTE : (DF40A:E11,DF40AST:E34,DF50A:E11,DF60A:(E11,E40),DF60AVT:E11,DF40ASVT:E34):021

FIG.508B

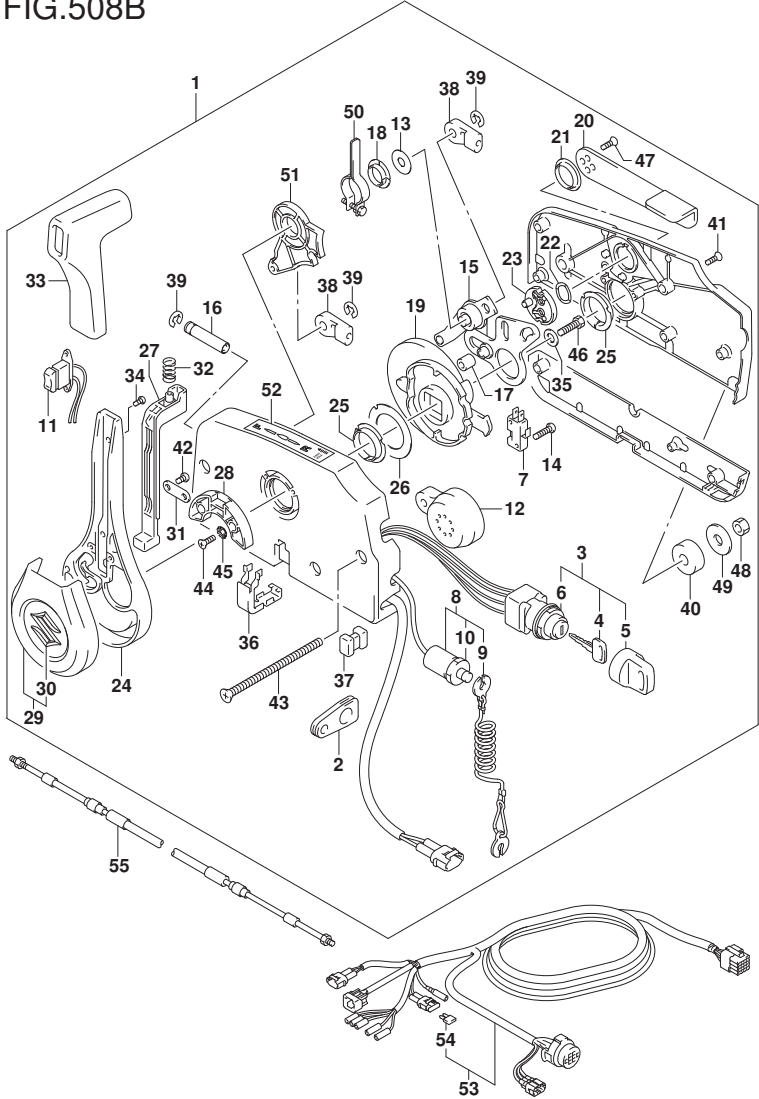


FIG.508B (2-I-4) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
51	67238-96L00	.GEAR, SHIFT ASSY	1	
52	67284-94L10	.MARK, HANDLE LEVER	1	
53-1	36620-93J03	WIRE ASSY, REMOTE CONTROL (L:5000)	1	
53-2	36620-93J53	WIRE ASSY, REMOTE CONTROL (L:3500)	1	
53-3	36620-93J63	WIRE ASSY, REMOTE CONTROL (L:6500)	1	
54	09481-10501	.FUSE (10A)	1	
55-1	67320-93J00	CABLE ASSY, REMOCON (2.4M)	2	
55-2	67320-93J10	CABLE ASSY, REMOCON (3.1M)	2	
55-3	67320-93J20	CABLE ASSY, REMOCON (3.7M)	2	
55-4	67320-93J30	CABLE ASSY, REMOCON (4.2M)	2	
55-5	67320-93J40	CABLE ASSY, REMOCON (4.8M)	2	
55-6	67320-93J50	CABLE ASSY, REMOCON (5.4M)	2	
55-7	67320-93J60	CABLE ASSY, REMOCON (6.1M)	2	
55-8	67320-93J70	CABLE ASSY, REMOCON (6.7M)	2	
55-9	67320-93J80	CABLE ASSY, REMOCON (7.3M)	2	

NOTE : (DF40A:E11,DF40AST:E34,DF50A:E11,DF60A:(E11,E40),DF60AVT:
E11,DF40ASVT:E34):021

DF40A E11
DF40AST E34
DF40ASVT E34
DF50A E11
DF60A E11
DF60A E40
DF60AVT E11

FIG.508C

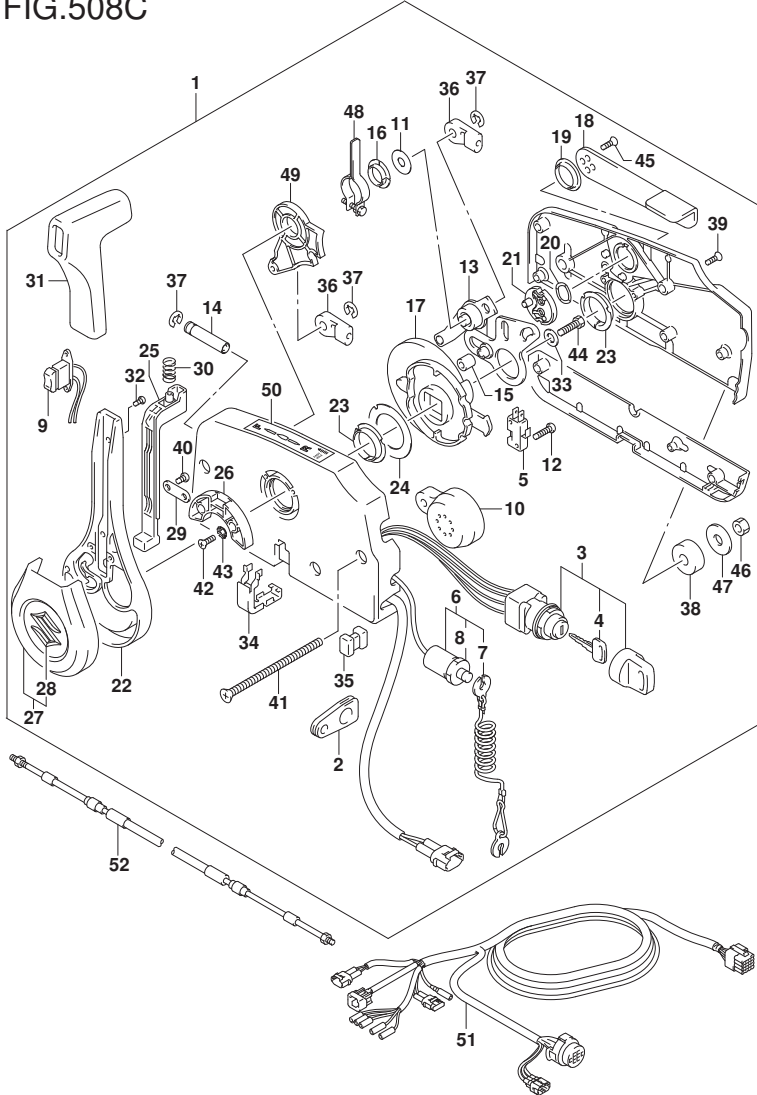


FIG.508C (2-I-5) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J70	REMOTE CONTROL ASSY	1	
2	36628-92E01	.GROMMET, WIRING HARNESS	1	
3	37110-93J20	.SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37721-93J91	.SWITCH ASSY, NEUTRAL	1	
6	37820-93J11	.SWITCH ASSY, EMERGENCY	1	
7	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
8	37826-92J10	..NUT	1	
9	37850-96L00	.SWITCH ASSY, PTT	1	
10	38500-93J90	.BUZZER, WARNING	1	
11	67212-95600	.WASHER	1	
12	67296-92E11	.SCREW, NEUTRAL SWITCH (3X15)	2	
13	67220-95630	.PLATE ASSY	1	
14	67223-99E10	.KNOB, BRAKE ADJUST	1	
15	67229-95600	.ROLLER	1	
16	67232-95600	.BUSH	1	
17	67238-87D00	.GEAR, DRIVE	1	
18	67241-99E11	.LEVER, FREE THROTTLE	1	
19	67243-95600	.BUSH	1	

NOTE : (DF40A:E11,DF40AST:E34,DF50A:E11,DF60A:(E11,E40),DF60AVT:
E11,DF40ASVT:E34):022

FIG.508C

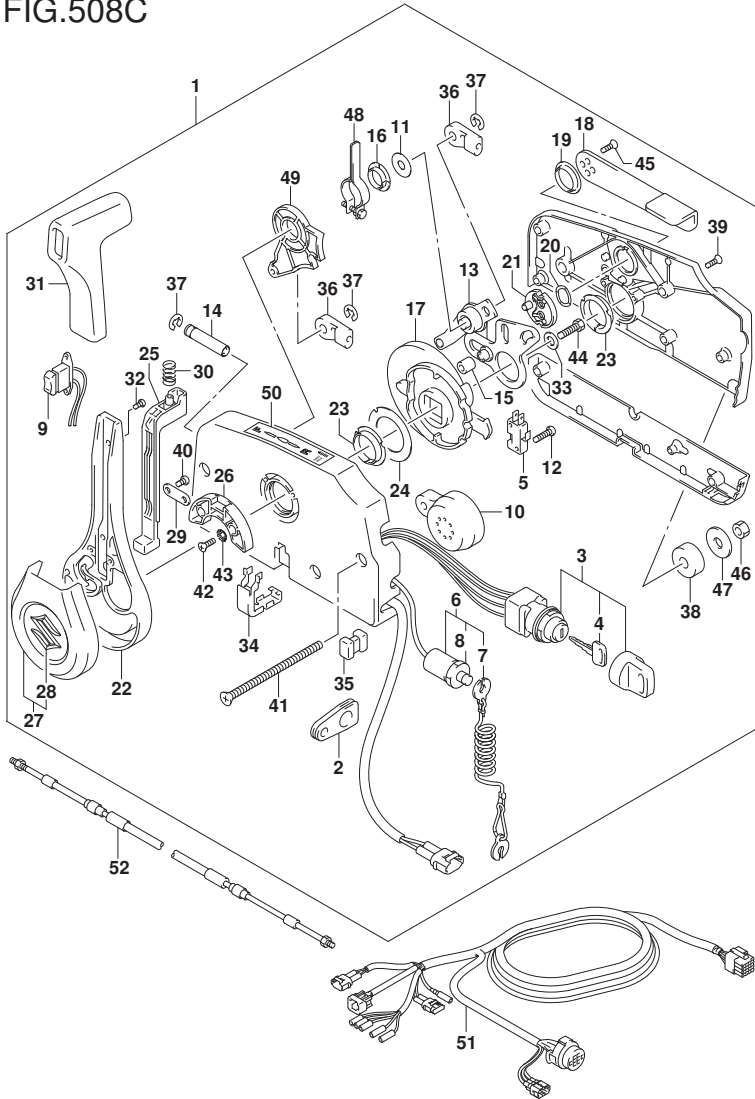


FIG.508C (2-I-6) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	67244-95600	.WAVE WASHER	1	
21	67245-95600	.DRUM, FREE THROTTLE	1	
22	67251-96L00	.LEVER, HANDLE	1	
23	67252-95600	.BUSH	2	
24	67253-95600	.WASHER	1	
25	67255-96L00	.NEUTRAL LOCK ARM	1	
26	67256-95600	.HOLDER, NEUTRAL LOCK	1	
27	67257-96L00	.CAP ASSY, LEVER	1	
28	77811-54GB0-0PG	.EMBLEM, RR MARK S (CHROME)	1	
29	67258-99E00	.BRACKET	1	
30	67259-87D00	.SPRING, NEUTRAL ARM	1	
31	67261-96L00	.GRIP	1	
32	67296-96L10	.SCREW	2	
33	67264-95600	.WASHER	1	
34	67267-96L00	.COVER, WIRE SUB ASSY	1	
35	67273-95601	.SPACER	1	
36	67275-95600	.END, CABLE	2	
37	67292-94300	.E RING	3	
38	67294-95600	.SPACER	3	
39	67296-90J20	.SCREW	5	
40	67296-96L00	.SCREW	2	
41	67296-95630	.SCREW	3	
42	67296-95610	.SCREW	2	
43	67297-95600	.WASHER	2	
44	09100-08232	.BOLT (8X30)	1	
45	67269-96L10	.SCREW (5X12)	2	
46	09140-06020	.NUT	3	
47	67288-94320	.WAHSER (6.5X24X2)	3	
48	67224-96L00	.ARM, BRAKE ASSY	1	
49	67238-96L00	.GEAR, SHIFT ASSY	1	
50	67284-94L10	.MARK, HANDLE LEVER	1	

NOTE : (DF40A:E11,DF40AST:E34,DF50A:E11,DF60A:(E11,E40),DF60AVT:
E11,DF40ASVT:E34):022

FIG.508C

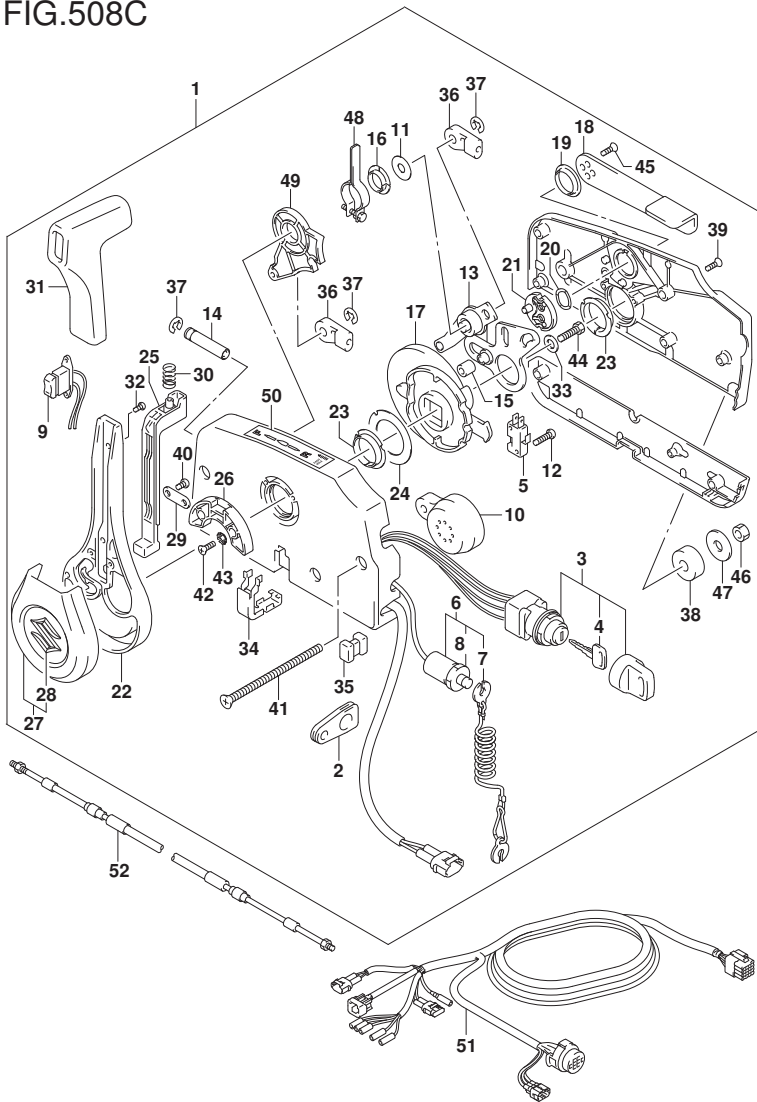


FIG.508C (2-I-7) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
51-1	36620-93J70	WIRE ASSY, REMOTE CONTROL (L:5000)	1	
51-2	36620-93J80	WIRE ASSY, REMOTE CONTROL (L:3500)	1	
51-3	36620-93J90	WIRE ASSY, REMOTE CONTROL (L:6500)	1	
52-1	67320-93J00	CABLE ASSY, REMOCON (2.4M)	2	
52-2	67320-93J10	CABLE ASSY, REMOCON (3.1M)	2	
52-3	67320-93J20	CABLE ASSY, REMOCON (3.7M)	2	
52-4	67320-93J30	CABLE ASSY, REMOCON (4.2M)	2	
52-5	67320-93J40	CABLE ASSY, REMOCON (4.8M)	2	
52-6	67320-93J50	CABLE ASSY, REMOCON (5.4M)	2	
52-7	67320-93J60	CABLE ASSY, REMOCON (6.1M)	2	
52-8	67320-93J70	CABLE ASSY, REMOCON (6.7M)	2	
52-9	67320-93J80	CABLE ASSY, REMOCON (7.3M)	2	

NOTE : (DF40A:E11,DF40AST:E34,DF50A:E11,DF60A:(E11,E40),DF60AVT:
E11,DF40ASVT:E34):022

DF40A E11
DF40AST E34
DF40ASVT E34
DF50A E11
DF60A E11
DF60A E40
DF60AVT E11

FIG.515A


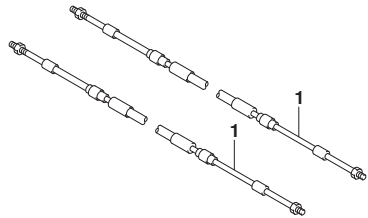


FIG.515A (2-I-8) OPT:REMOCON CABLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	67320-93J00	CABLE ASSY, REMOCON (2.4M)	2	
1-2	67320-93J10	CABLE ASSY, REMOCON (3.1M)	2	
1-3	67320-93J20	CABLE ASSY, REMOCON (3.7M)	2	
1-4	67320-93J30	CABLE ASSY, REMOCON (4.2M)	2	
1-5	67320-93J40	CABLE ASSY, REMOCON (4.8M)	2	
1-6	67320-93J50	CABLE ASSY, REMOCON (5.4M)	2	
1-7	67320-93J60	CABLE ASSY, REMOCON (6.1M)	2	
1-8	67320-93J70	CABLE ASSY, REMOCON (6.7M)	2	
1-9	67320-93J80	CABLE ASSY, REMOCON (7.3M)	2	

FIG.517A

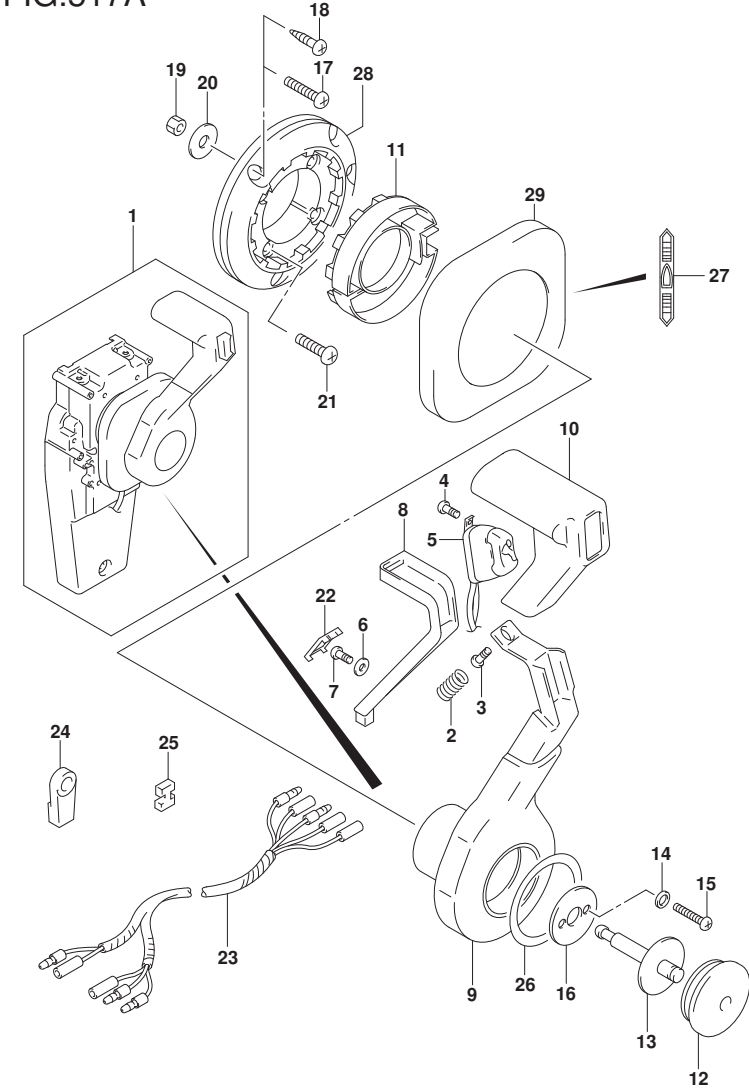

DF60A_E11_022_517A
OPT:CONCEALED REMOCON (1)

FIG.517A (2-I-9) OPT:CONCEALED REMOCON (1) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J34	REMOTE CONTROL ASSY, CONCEAL	1	
2	67298-92E50	.SPRING	1	
3	67296-94310	.SCREW	1	
4	67295-92E10	.SCREW	2	
5	37850-92E27	.SWITCH ASSY, PTT	1	
6	67288-92E60	.WASHER	1	
7	09125-04021	.SCREW	1	
8	67255-92E50	.ARM, NEUTRAL LOCK	1	
9	67251-92E50	.LEVER, HANDLE	1	
10	67261-92E50	.GRIP	1	
11	67256-92E50	.HOLDER, NEUTRAL LOCK	1	
12	67257-92E00	.CAP, LEVER	1	
13	67242-92E50	.SHAFT, FREE ACC	1	
14	67288-92E20	.WASHER	6	
15	67296-88D10	.SCREW (5X16)	4	
16	67288-92E70	.WASHER	1	
17	67296-88D20	.SCREW	3	
18	67295-92E50	.SCREW	3	
19	67287-92E50	.NUT	3	
20	09160-06104	.WASHER	3	
21	67296-88D30	.SCREW	4	
22	67254-92E50	.COVER, LOCK ARM	1	
23	36890-93J01	.WIRE, NEUTRAL & PTT SW	1	
24	67275-95600	.END, CABLE	2	
25	67273-95601	.SPACER	1	
26	67283-92E50	.DECAL, LEVER	1	
27	67284-92E50	.DECAL, CLUTCH	1	
28	67274-92E50	.BASE	1	

NOTE : (DF40A,DF50A,DF60A,DF40AST,DF50AVT,DF60AVT):(021,022)

FIG.517A

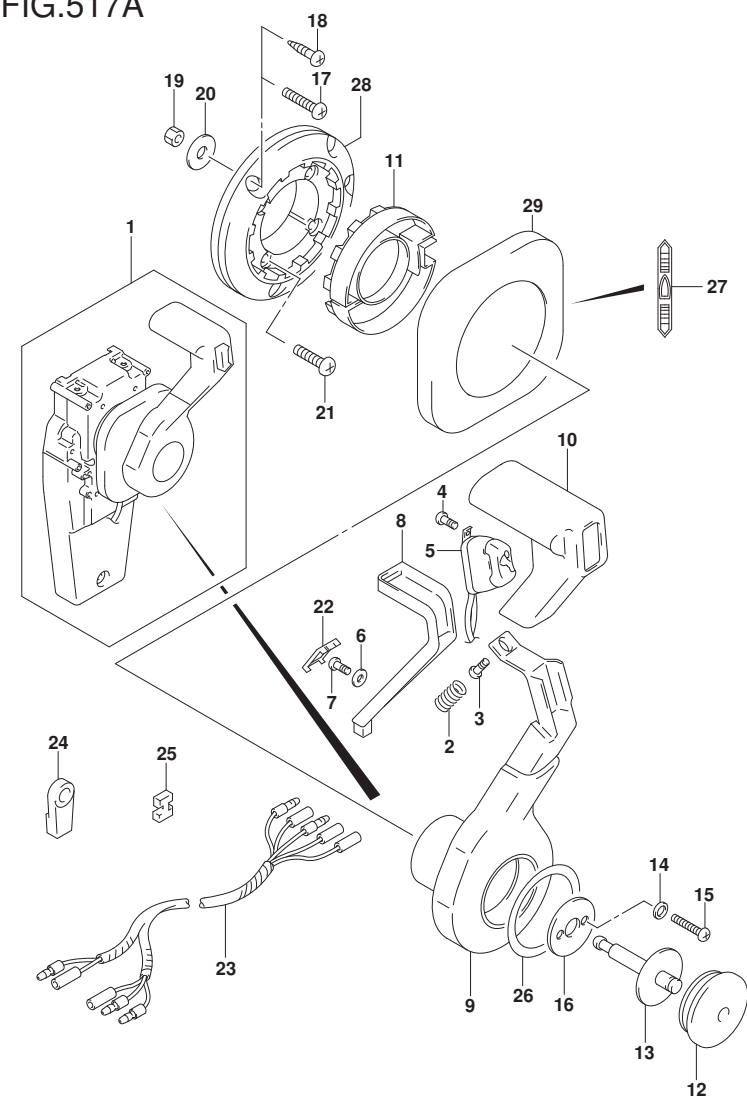


FIG.517A (2-I-10) OPT:CONCEALED REMOCON (1) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	67211-92E50	.COVER	1	

NOTE : (DF40A,DF50A,DF60A,DF40AST,DF50AVT,DF60AVT):(021,022)

- DF40A E11
- DF40AST E34
- DF50A E11
- DF50AVT E03
- DF60A E11
- DF60A E40
- DF60AVT E11

FIG.518A

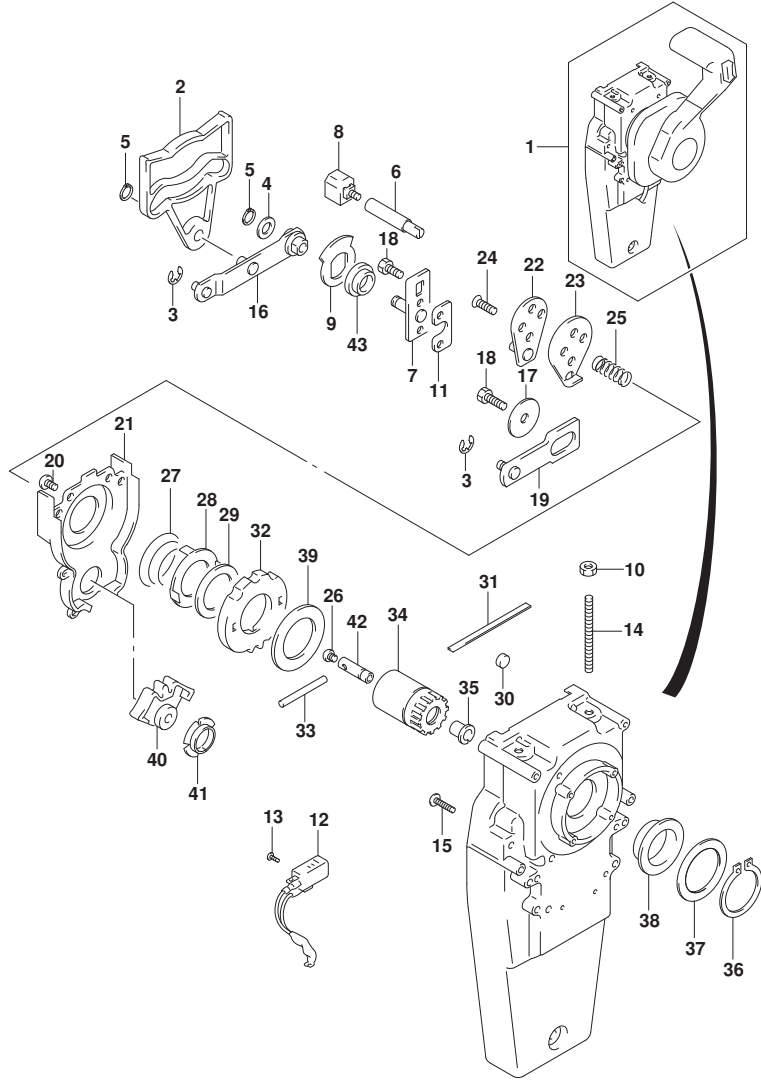


FIG.518A (2-I-11) OPT:CONCEALED REMOCON (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J34	REMOTE CONTROL ASSY, CONCEAL	1	
2	67222-92E50	.DUEL PLATE	1	
3	67292-94300	.E RING	3	
4	67288-92E10	.WASHER	1	
5	67291-92E00	.SNAP RING	2	
6	67223-92E50	.BRAKE ADJUST	1	
7	67221-92E50	.HOLDER ASSY	1	
8	67224-92E50	.BRAKE SHOE ASSY	1	
9	67225-92E50	.DISC, BRAKE	1	
10	09140-06020	.NUT	2	
11	67294-92E00	.SPACER	1	
12	37721-95500	.SWITCH ASSY, NEUTRAL	1	
13	67296-92E11	.SCREW, NEUTRAL SWITCH (3X15)	2	
14	67226-92E10	.BOLT, STOPPER	2	
15	67296-92E20	.SCREW (5X25)	2	
16	67240-92E50	.THROTTLE ARM ASSY	1	
17	67228-92E00	.WASHER	1	
18	67286-92E00	.BOLT (6X18)	3	
19	67230-92E00	.SHIFT ARM ASSY	1	
20	09125-05042	.SCREW (5X10)	11	
21	67234-92E00	.CASE, GEAR	1	
22	67245-92E00	.LEVER ASSY, THROTTLE	1	
23	67227-92E00	.STOPPER	1	
24	67296-88D10	.SCREW (5X16)	2	
25	67225-92E00	.SPRING	1	
26	09125-04004	.SCREW	1	
27	67233-92E00	.SPRING	1	
28	67235-92E00	.PLATE, SHIFT LOCK	1	
29	67239-92E10	.PLATE, SHIFT PIN	1	
30	67236-92E00	.ROLLER	1	
31	67237-92E01	.SPRING	5	
32	67238-92E50	.GEAR, DRIVE	1	

NOTE : (DF40A,DF50A,DF60A,DF40AST,DF50AVT,DF60AVT):(021,022)

FIG.518A

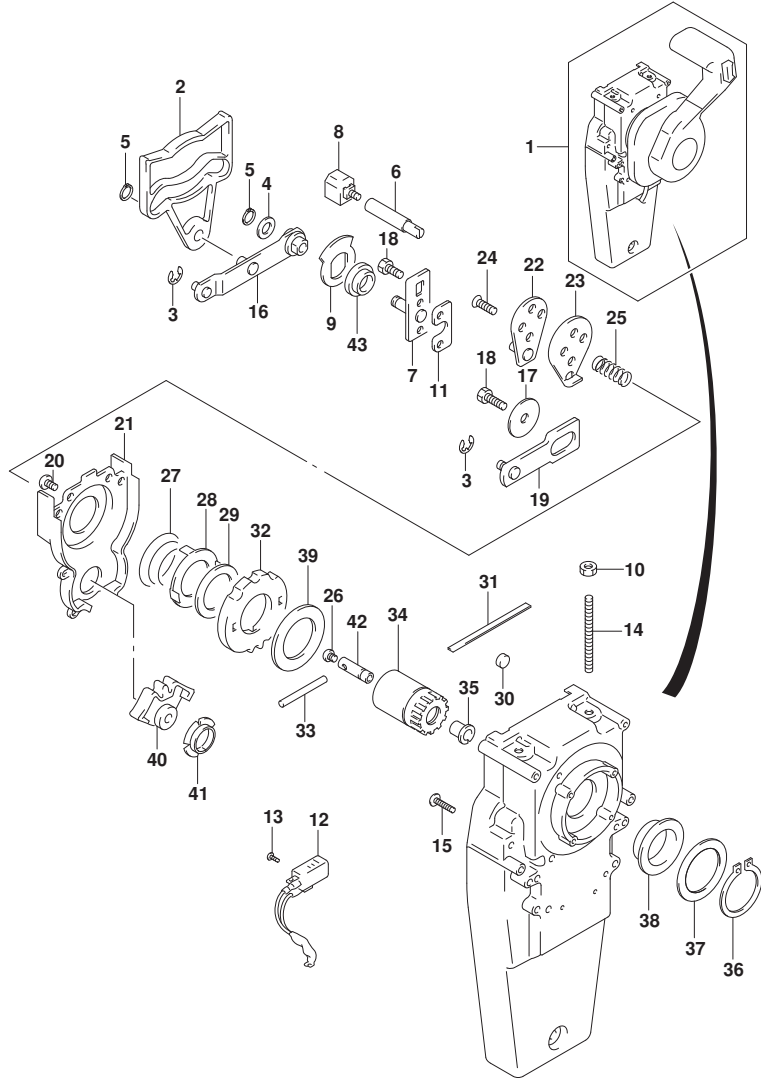


FIG.518A (2-I-12) OPT:CONCEALED REMOCON (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	67239-92E00	.PIN	1	
34	67246-92E50	.SHAFT, DRIVE	1	
35	67252-92E00	.BUSH	1	
36	67291-92E10	.SNAP RING	1	
37	67253-92E10	.WASHER	1	
38	67252-92E10	.BUSH	1	
39	67253-95600	.WASHER	1	
40	67231-92E00	.GEAR, SHIFT	1	
41	67232-95600	.BUSH	1	
42	67241-92E50	.ROD, FREE ACC	1	
43	67232-92E50	.BUSH	1	

NOTE : (DF40A,DF50A,DF60A,DF40AST,DF50AVT,DF60AVT):(021,022)

DF40A E11
DF40AST E34
DF50A E11
DF50AVT E03
DF60A E11
DF60A E40
DF60AVT E11

FIG.521A

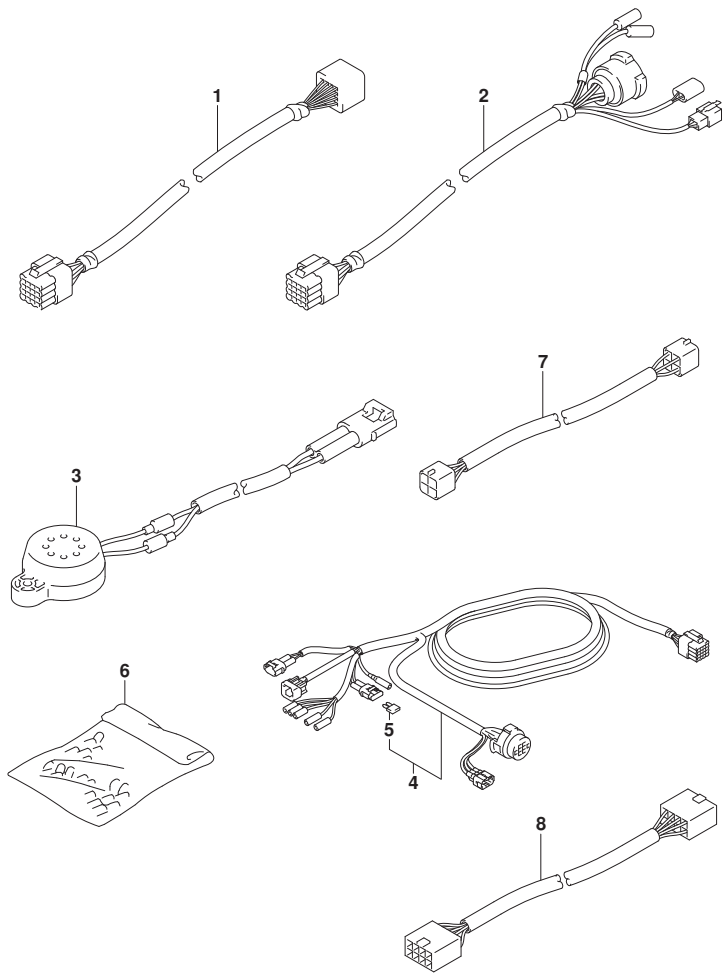


FIG.521A (2-I-13) OPT:HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36620-93J12	WIRE ASSY, REMOTE CONTROL (L:2000)	1	
1-2	36620-93J42	WIRE ASSY, REMOTE CONTROL (L:3000)	1	
2	36620-93J31	WIRE ASSY, REMOTE CONTROL (L:2000)	1	
3	38500-93J90	BUZZER, WARNING	1	
4-1	36620-93J03	WIRE ASSY, REMOTE CONTROL (L:5000)	1	
4-2	36620-93J53	WIRE ASSY, REMOTE CONTROL (L:3500)	1	
4-3	36620-93J63	WIRE ASSY, REMOTE CONTROL (L:6500)	1	
5	09481-10501	.FUSE (10A)	1	
6	36990-87D00	TERMINAL & SLEEVE SET	1	
7	36682-92E00	WIRE, TRIM METER EXT (L:6500)	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):
(020,021)

FIG.521A

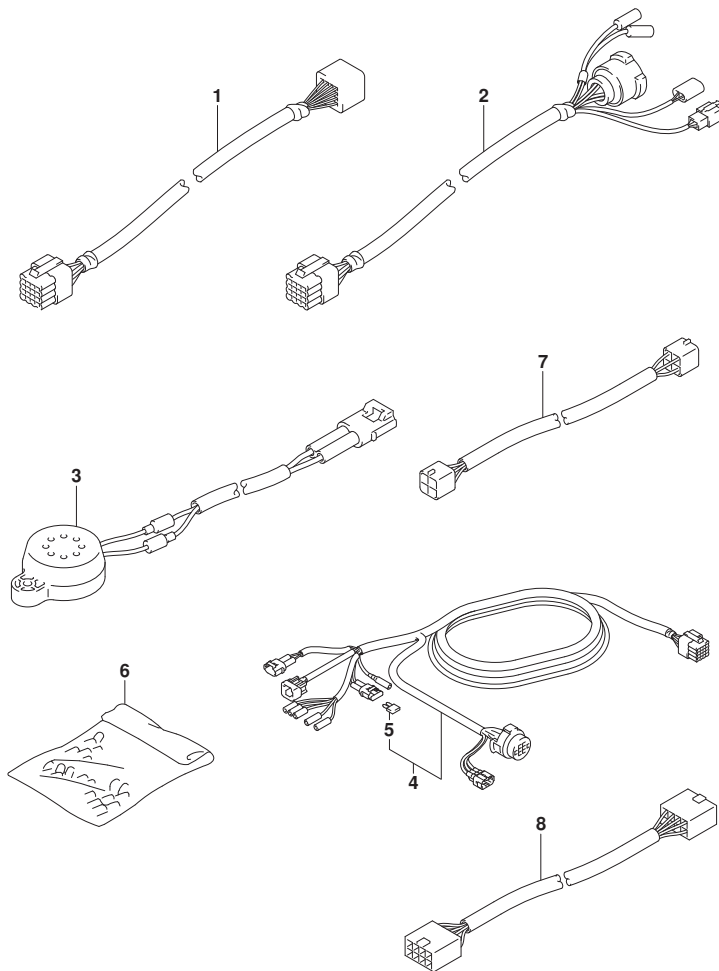


FIG.521A (2-I-14) OPT:HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
8	36667-96L20	WIRE, GAUGE EXT	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):
(020,021)

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AST E34
- DF40ASVT E34
- DF50A E01
- DF50A E03
- DF50A E11
- DF50AVT E03
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40

FIG.521B

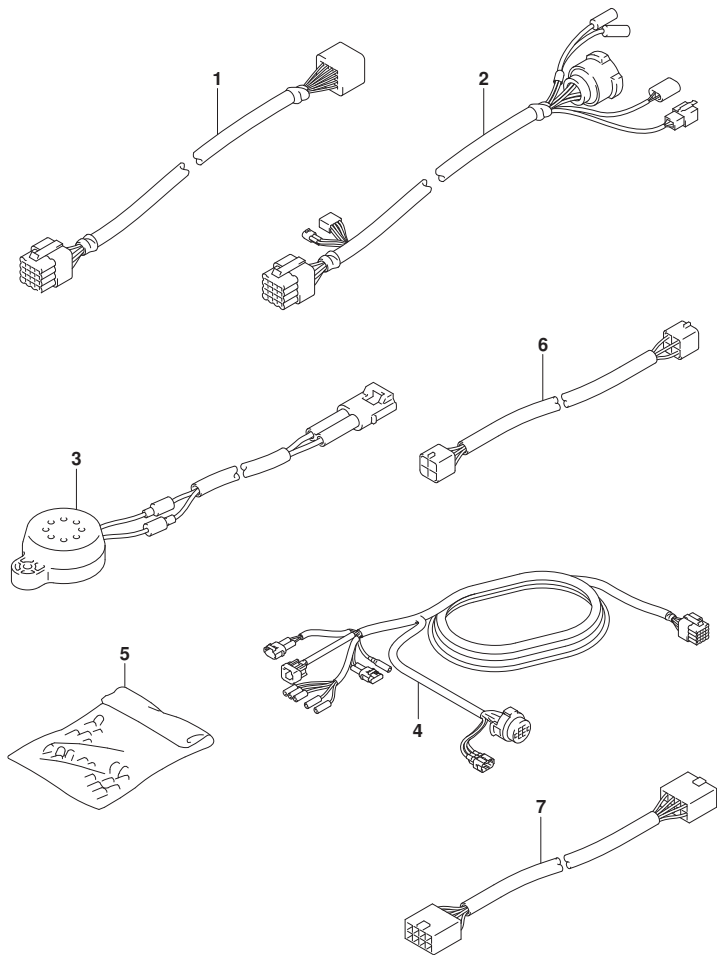


FIG.521B (2-J-2) OPT:HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36620-93J12	WIRE ASSY, REMOTE CONTROL (L:2000)	1	
1-2	36620-93J42	WIRE ASSY, REMOTE CONTROL (L:3000)	1	
2	36621-93J00	WIRE, R/CON ADAPTER	1	
3	38500-93J90	BUZZER, WARNING	1	
4-1	36620-93J70	WIRE ASSY, REMOTE CONTROL (L:5000)	1	
4-2	36620-93J80	WIRE ASSY, REMOTE CONTROL (L:3500)	1	
4-3	36620-93J90	WIRE ASSY, REMOTE CONTROL (L:6500)	1	
5	36990-87D00	TERMINAL & SLEEVE SET	1	
6	36682-92E00	WIRE, TRIM METER EXT (L:6500)	1	
7	36667-96L20	WIRE, GAUGE EXT	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):022

- DF40A E11
- DF40AST E34
- DF40ASVT E34
- DF50A E11
- DF50AVT E03
- DF60A E11
- DF60A E40
- DF60AVT E11

FIG.521C

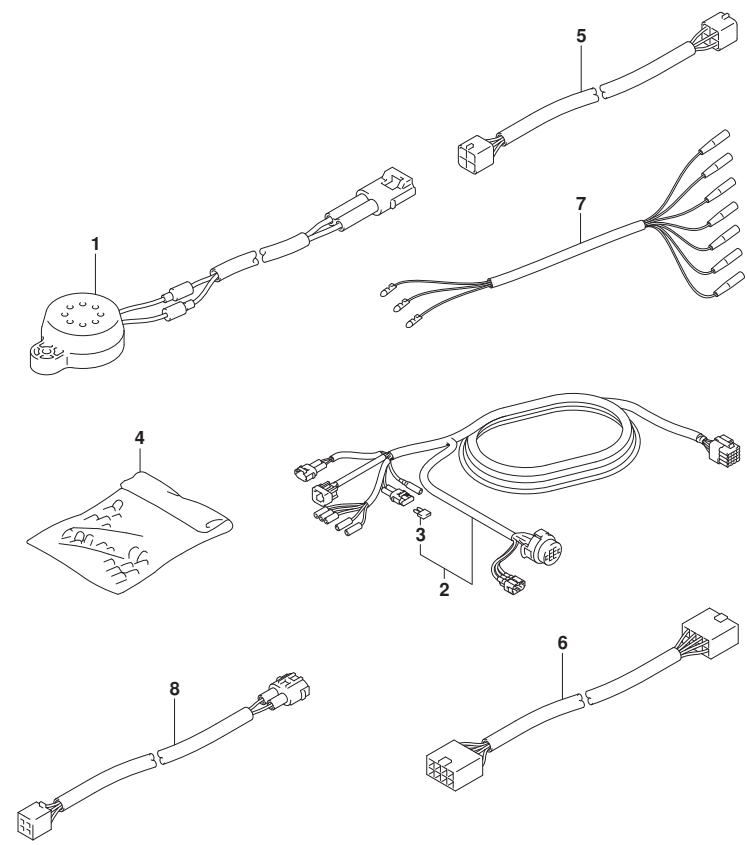


FIG.521C (2-J-3) OPT:HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38500-93J90	BUZZER, WARNING	1	
2-1	36620-93J03	WIRE ASSY, REMOTE CONTROL (L:5000)	1	
2-2	36620-93J53	WIRE ASSY, REMOTE CONTROL (L:3500)	1	
2-3	36620-93J63	WIRE ASSY, REMOTE CONTROL (L:6500)	1	
3	09481-10501	.FUSE (10A)	1	
4	36990-87D00	TERMINAL & SLEEVE SET	1	
5	36682-92E00	WIRE, TRIM METER EXT (L:6500)	2	
6	36667-96L20	WIRE, GAUGE EXT	1	
7	36630-92E00	WIRE ASSY, INSTRUMENT	1	
8	36660-94480	WIRE, SENDER EXT (L:2000)	1	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVTH,DF60AVTH):
(020,021)

- DF40AQH E01
- DF40ATH E01
- DF50ATH E01
- DF50AVTH E01
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVTH E40

FIG.521D

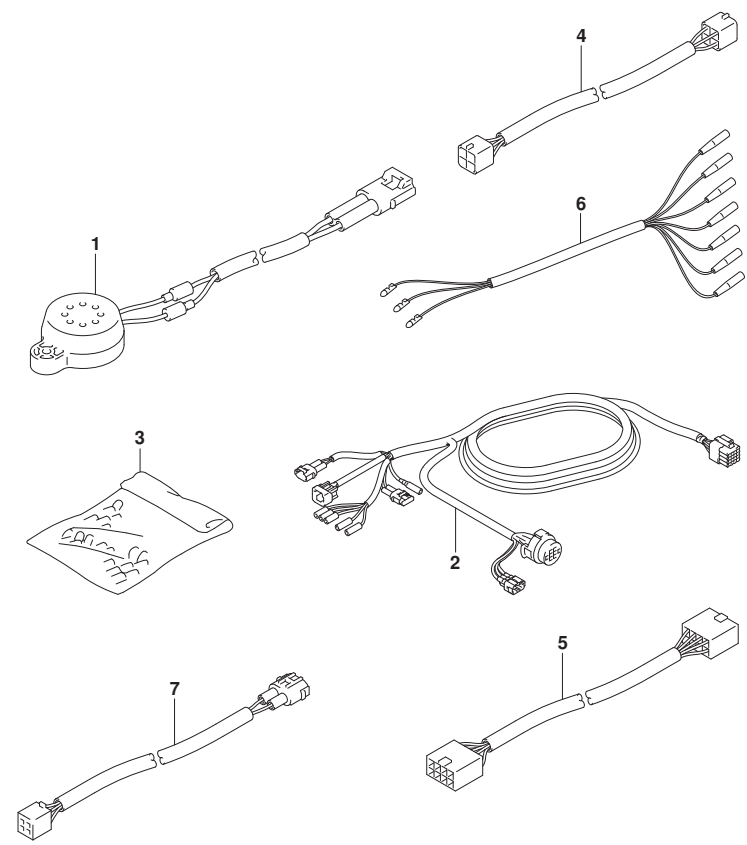


FIG.521D (2-J-4) OPT:HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38500-93J90	BUZZER, WARNING	1	
2-1	36620-93J70	WIRE ASSY, REMOTE CONTROL (L:5000)	1	
2-2	36620-93J80	WIRE ASSY, REMOTE CONTROL (L:3500)	1	
2-3	36620-93J90	WIRE ASSY, REMOTE CONTROL (L:6500)	1	
3	36990-87D00	TERMINAL & SLEEVE SET	1	
4	36682-92E00	WIRE, TRIM METER EXT (L:6500)	2	
5	36667-96L20	WIRE, GAUGE EXT	1	
6	36630-92E00	WIRE ASSY, INSTRUMENT	1	
7	36660-94480	WIRE, SENDER EXT (L:2000)	1	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVTH,DF60AVTH):
022

- DF40AQH E01
- DF40ATH E01
- DF50ATH E01
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVTH E40

FIG.530A


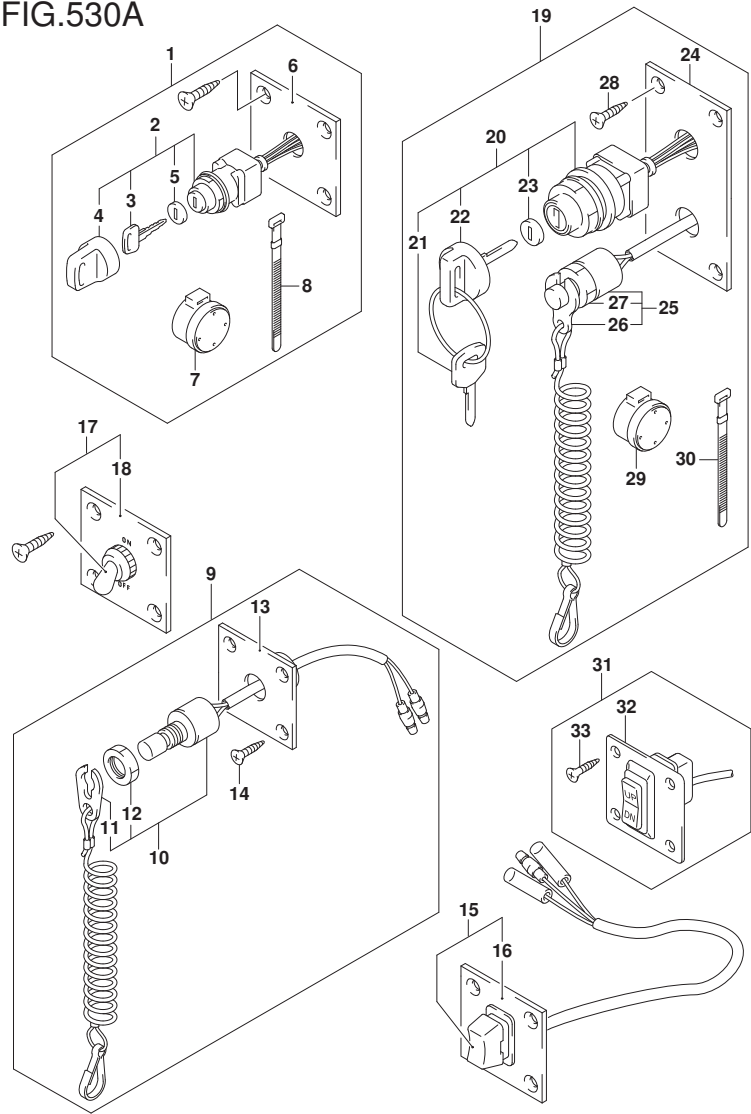


FIG.530A (2-J-5) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-96J01	PANEL ASSY, IGNITION SWITCH	1	
2	37110-93J02	.SWITCH ASSY, IGNITION	1	
3-1	37141-99E00	..KEY (931)	2	
3-2	37141-99E10	..KEY (932)	2	
3-3	37141-99E20	..KEY (933)	2	
3-4	37141-99E30	..KEY (934)	2	
3-5	37141-99E40	..KEY (935)	2	
3-6	37141-99E50	..KEY (936)	2	
3-7	37141-99E60	..KEY (937)	2	
3-8	37141-99E70	..KEY (938)	2	
3-9	37141-99E80	..KEY (939)	2	
3-10	37141-99E90	..KEY (940)	2	
3-11	37141-99EA0	..KEY (941)	2	
3-12	37141-99EB0	..KEY (942)	2	
4	37143-99E01	..CAP, KEY	1	
5	37149-93J00	..CAP, CYLINDER BODY	1	
6	37139-99E00	.PANEL, IGNITION SW	1	
7	38500-93J90	.BUZZER, WARNING	1	
8	09407-08401	.CLAMP (L:80)	1	
9	37803-93J06	PANEL ASSY, EMERGENCY SW	1	
10	37820-93J11	.SWITCH ASSY, EMERGENCY	1	
11	37823-92E02	..PLATE ASSY, EMERGENCY SW	1	
		LOCK		
12	37826-92J10	..NUT	1	
13	37825-99E10	.PANEL, EMERGENCY STOP SW	1	
14	03122-05169	.SCREW	4	
15	37805-93J00	PANEL ASSY, PTT SW	1	
16	37855-99E00	.PANEL, PTT SW	1	
17	37210-93J00	PANEL ASSY, LIGHTING SW	1	
18	37212-93J00	.PANEL, LIGHTING SW	1	
19	37100-96J27	PANEL ASSY, ENGINE SWITCH	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):
(020,021)

FIG.530A

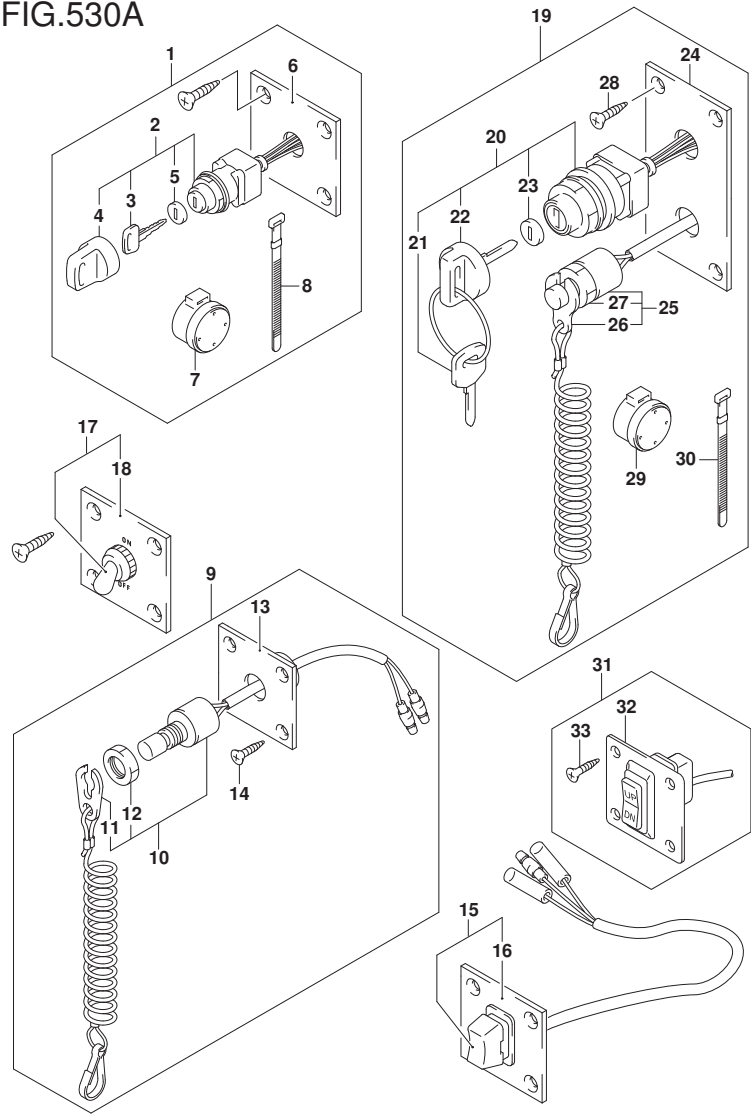

DF60A_E11_022_530A
OPT:SWITCH

FIG.530A (2-J-6) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	37110-93J02	..SWITCH ASSY, IGNITION	1	
21-1	37141-99E00	..KEY (931)	2	
21-2	37141-99E10	..KEY (932)	2	
21-3	37141-99E20	..KEY (933)	2	
21-4	37141-99E30	..KEY (934)	2	
21-5	37141-99E40	..KEY (935)	2	
21-6	37141-99E50	..KEY (936)	2	
21-7	37141-99E60	..KEY (937)	2	
21-8	37141-99E70	..KEY (938)	2	
21-9	37141-99E80	..KEY (939)	2	
21-10	37141-99E90	..KEY (940)	2	
21-11	37141-99EA0	..KEY (941)	2	
21-12	37141-99EB0	..KEY (942)	2	
22	37143-99E01	..CAP, KEY	1	
23	37149-93J00	..CAP, CYLINDER BODY	1	
24	37139-99E40	..PANEL, IGNITION SWITCH	1	
25	37820-93J11	..SWITCH ASSY, EMERGENCY	1	
26	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
27	37826-92J10	..NUT	1	
28	03121-0516A	..SCREW	4	
29	38500-93J90	..BUZZER, WARNING	1	
30	09407-08401	..CLAMP (L:80)	1	
31	37860-87L00	PANEL ASSY, TROLLING CONTROL SW	1	
32	37862-87L00	..PANEL	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):
(020,021)

FIG.530A

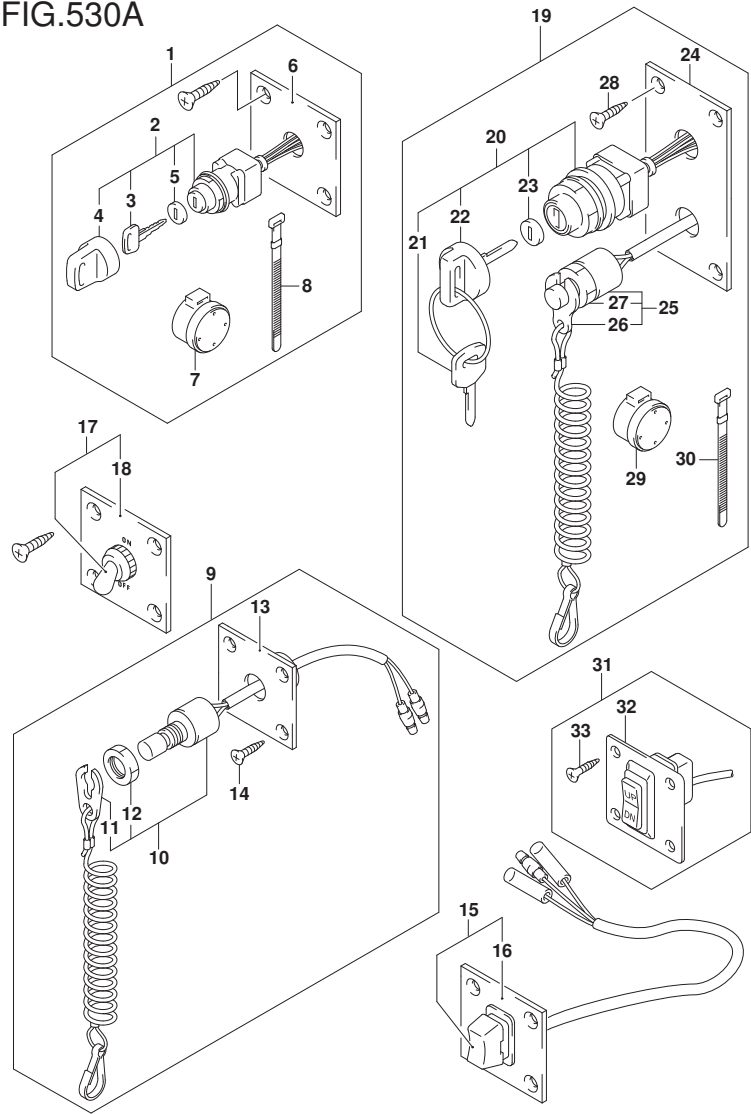


FIG.530A (2-J-7) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	09131-05004	.SCREW (5X16)	4	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):
(020,021)

- DF40A E01
- DF40A E03
- DF40A E11
- DF40AST E34
- DF40ASVT E34
- DF50A E01
- DF50A E03
- DF50A E11
- DF50AVT E03
- DF60A E01
- DF60A E03
- DF60A E11
- DF60A E40
- DF60AVT E01
- DF60AVT E03
- DF60AVT E11
- DF60AVT E40

FIG.530B

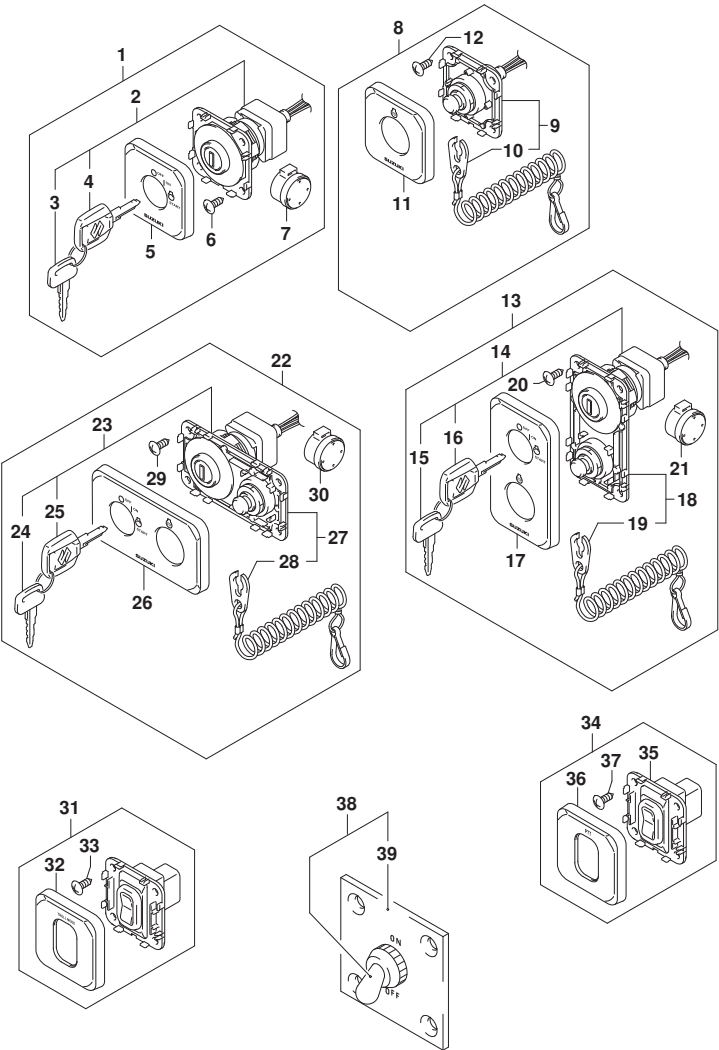


FIG.530B (2-J-8) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98L00	PANEL ASSY, MAIN SWITCH	1	
2	37110-98L00	..SWITCH ASSY, MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
3-7	37141-99E60	..KEY (937)	1	
3-8	37141-99E70	..KEY (938)	1	
3-9	37141-99E80	..KEY (939)	1	
3-10	37141-99E90	..KEY (940)	1	
3-11	37141-99EA0	..KEY (941)	1	
3-12	37141-99EB0	..KEY (942)	1	
4-1	37141-98L00	..KEY (931)	1	
4-2	37141-98L10	..KEY (932)	1	
4-3	37141-98L20	..KEY (933)	1	
4-4	37141-98L30	..KEY (934)	1	
4-5	37141-98L40	..KEY (935)	1	
4-6	37141-98L50	..KEY (936)	1	
4-7	37141-98L60	..KEY (937)	1	
4-8	37141-98L70	..KEY (938)	1	
4-9	37141-98L80	..KEY (939)	1	
4-10	37141-98L90	..KEY (940)	1	
4-11	37141-98LA0	..KEY (941)	1	
4-12	37141-98LB0	..KEY (942)	1	
5	37138-98L00	..COVER, MAIN SW PANEL	1	
6	03142-05169	..SCREW	4	
7	38500-93J90	..BUZZER, WARNING	1	
8	37803-98L00	PANEL ASSY, EMERGENCY SW	1	
9	37820-98L00	..SWITCH ASSY, EMERGENCY	1	
10	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):022

FIG.530B

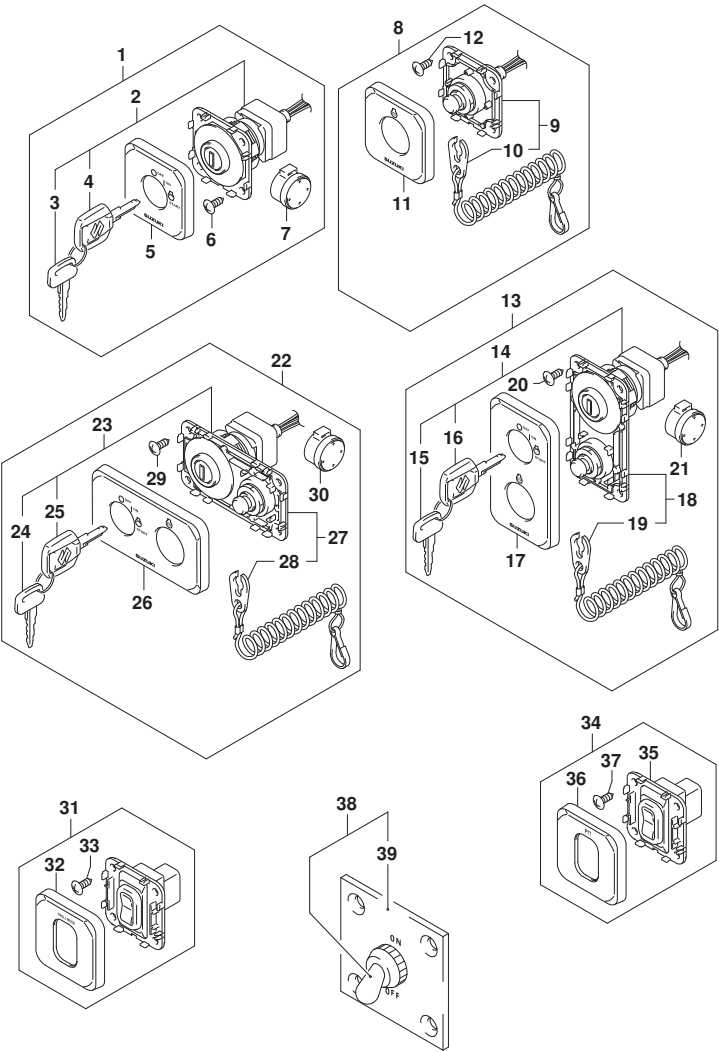


FIG.530B (2-J-9) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
11	37832-98L00	.COVER, EMERGENCY SW PANEL	1	
12	03142-05169	.SCREW	4	
13	37100-98L10	PANEL ASSY, MAIN SWITCH	1	
14	37110-98L00	.SWITCH ASSY, MAIN	1	
15-1	37141-99E00	..KEY (931)	1	
15-2	37141-99E10	..KEY (932)	1	
15-3	37141-99E20	..KEY (933)	1	
15-4	37141-99E30	..KEY (934)	1	
15-5	37141-99E40	..KEY (935)	1	
15-6	37141-99E50	..KEY (936)	1	
15-7	37141-99E60	..KEY (937)	1	
15-8	37141-99E70	..KEY (938)	1	
15-9	37141-99E80	..KEY (939)	1	
15-10	37141-99E90	..KEY (940)	1	
15-11	37141-99EA0	..KEY (941)	1	
15-12	37141-99EB0	..KEY (942)	1	
16-1	37141-98L00	..KEY (931)	1	
16-2	37141-98L10	..KEY (932)	1	
16-3	37141-98L20	..KEY (933)	1	
16-4	37141-98L30	..KEY (934)	1	
16-5	37141-98L40	..KEY (935)	1	
16-6	37141-98L50	..KEY (936)	1	
16-7	37141-98L60	..KEY (937)	1	
16-8	37141-98L70	..KEY (938)	1	
16-9	37141-98L80	..KEY (939)	1	
16-10	37141-98L90	..KEY (940)	1	
16-11	37141-98LA0	..KEY (941)	1	
16-12	37141-98LB0	..KEY (942)	1	
17	37138-98L10	.COVER, MAIN SW PANEL VERT	1	
18	37820-98L00	.SWITCH ASSY, EMERGENCY	1	
19	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	
20	03142-05169	.SCREW	4	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):022

FIG.530B

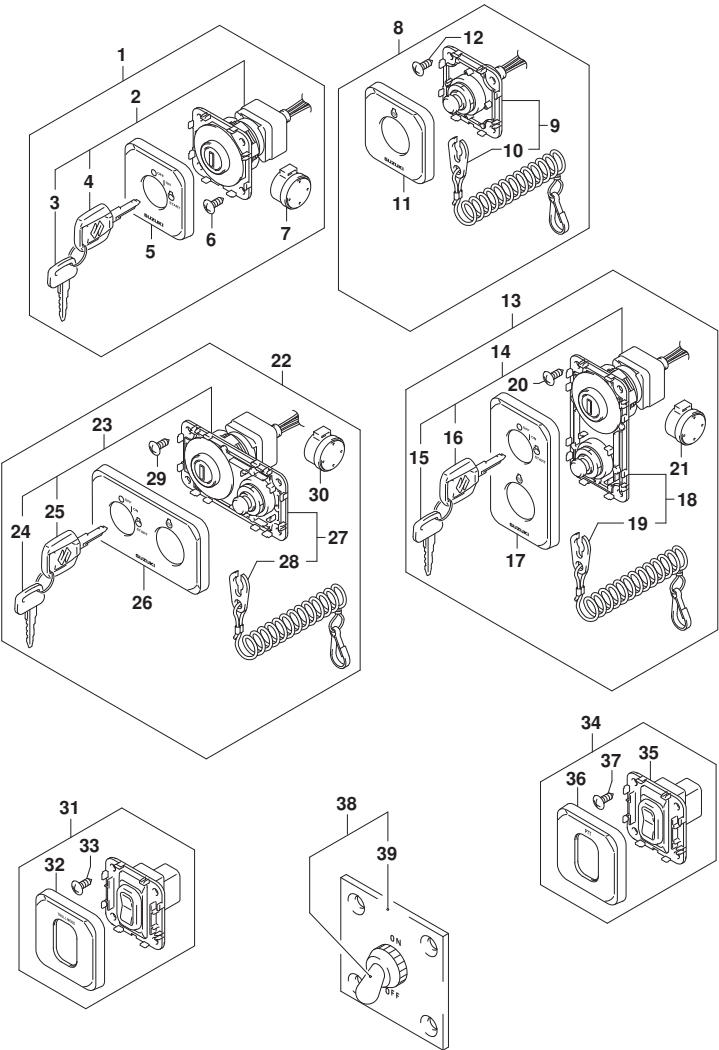


FIG.530B (2-J-10) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	38500-93J90	.BUZZER, WARNING	1	
22	37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ	1	
23	37110-98L00	.SWITCH ASSY, MAIN	1	
24-1	37141-99E00	..KEY (931)	1	
24-2	37141-99E10	..KEY (932)	1	
24-3	37141-99E20	..KEY (933)	1	
24-4	37141-99E30	..KEY (934)	1	
24-5	37141-99E40	..KEY (935)	1	
24-6	37141-99E50	..KEY (936)	1	
24-7	37141-99E60	..KEY (937)	1	
24-8	37141-99E70	..KEY (938)	1	
24-9	37141-99E80	..KEY (939)	1	
24-10	37141-99E90	..KEY (940)	1	
24-11	37141-99EA0	..KEY (941)	1	
24-12	37141-99EB0	..KEY (942)	1	
25-1	37141-98L00	..KEY (931)	1	
25-2	37141-98L10	..KEY (932)	1	
25-3	37141-98L20	..KEY (933)	1	
25-4	37141-98L30	..KEY (934)	1	
25-5	37141-98L40	..KEY (935)	1	
25-6	37141-98L50	..KEY (936)	1	
25-7	37141-98L60	..KEY (937)	1	
25-8	37141-98L70	..KEY (938)	1	
25-9	37141-98L80	..KEY (939)	1	
25-10	37141-98L90	..KEY (940)	1	
25-11	37141-98LA0	..KEY (941)	1	
25-12	37141-98LB0	..KEY (942)	1	
26	37138-98L20	.COVER, MAIN SW PANEL HORIZ	1	
27	37820-98L00	.SWITCH ASSY, EMERGENCY	1	
28	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	
29	03142-05169	.SCREW	4	
30	38500-93J90	.BUZZER, WARNING	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):022

FIG.530B

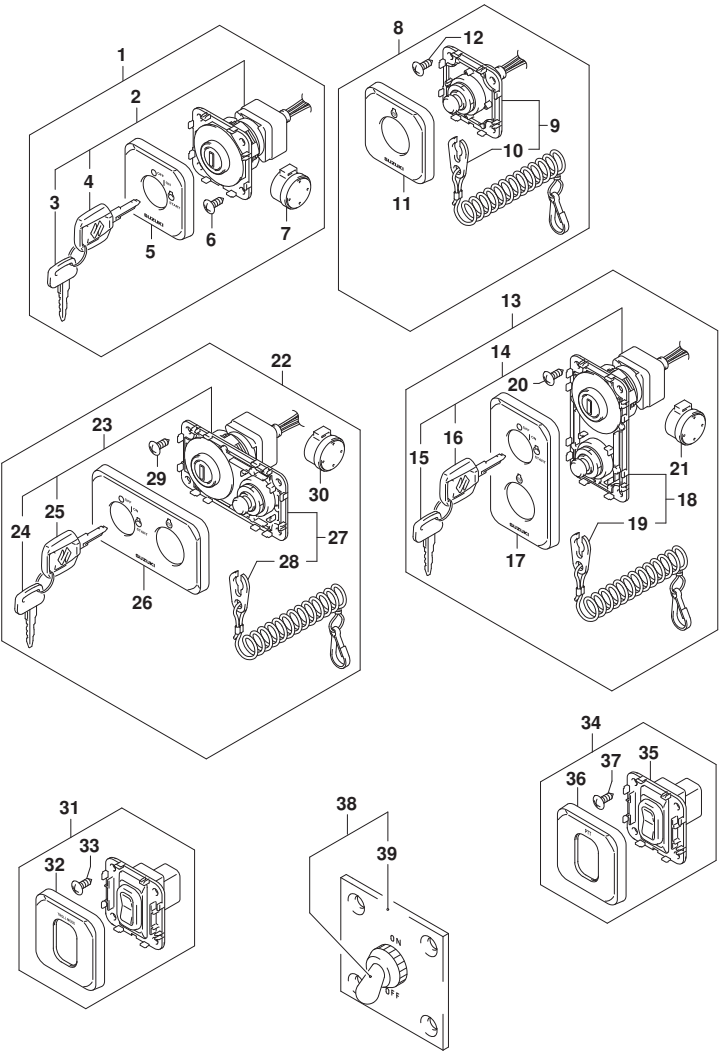


FIG.530B (2-J-11) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
31	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1	
32	37865-98L00	.COVER, TROLLING CONTROL SW	1	
33	03142-05169	.SCREW	4	
34	37805-88L00	PANEL ASSY, PTT SW	1	
35	37850-88L40	.SWITCH, PTT	1	
36	37865-88L00	.COVER, PTT SW	1	
37	03142-05169	.SCREW	4	
38	37210-93J00	PANEL ASSY, LIGHTING SW	1	
39	37212-93J00	.PANEL, LIGHTING SW	1	

NOTE : (DF40A,DF40AST,DF50A,DF60A,DF50AVT,DF60AVT,DF40ASVT):022

- DF40A E11
- DF40AST E34
- DF40ASVT E34
- DF50A E11
- DF50AVT E03
- DF60A E11
- DF60A E40
- DF60AVT E11

FIG.530C

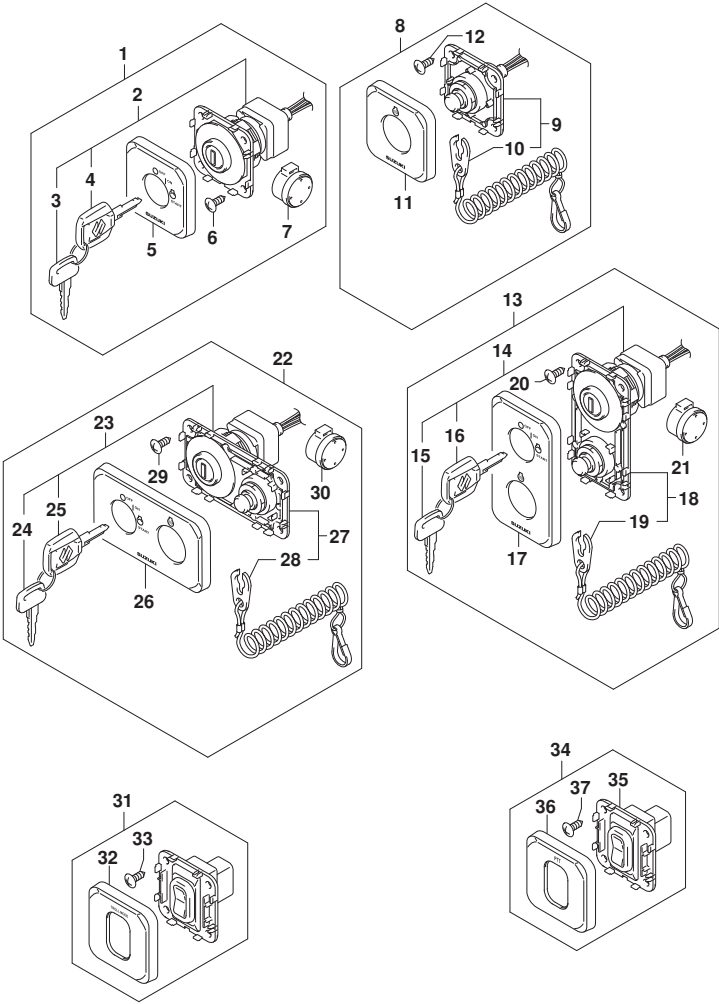


FIG.530C (2-J-12) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98L00	PANEL ASSY, MAIN SWITCH	1	
2	37110-98L00	.SWITCH ASSY, MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
3-7	37141-99E60	..KEY (937)	1	
3-8	37141-99E70	..KEY (938)	1	
3-9	37141-99E80	..KEY (939)	1	
3-10	37141-99E90	..KEY (940)	1	
3-11	37141-99EA0	..KEY (941)	1	
3-12	37141-99EB0	..KEY (942)	1	
4-1	37141-98L00	..KEY (931)	1	
4-2	37141-98L10	..KEY (932)	1	
4-3	37141-98L20	..KEY (933)	1	
4-4	37141-98L30	..KEY (934)	1	
4-5	37141-98L40	..KEY (935)	1	
4-6	37141-98L50	..KEY (936)	1	
4-7	37141-98L60	..KEY (937)	1	
4-8	37141-98L70	..KEY (938)	1	
4-9	37141-98L80	..KEY (939)	1	
4-10	37141-98L90	..KEY (940)	1	
4-11	37141-98LA0	..KEY (941)	1	
4-12	37141-98LB0	..KEY (942)	1	
5	37138-98L00	.COVER, MAIN SW PANEL	1	
6	03142-05169	.SCREW	4	
7	38500-93J90	.BUZZER, WARNING	1	
8	37803-98L00	PANEL ASSY, EMERGENCY SW	1	
9	37820-98L00	.SWITCH ASSY, EMERGENCY	1	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60A,DF50AVT,DF60AQH,DF60ATH,DF60AVTH):022

FIG.530C


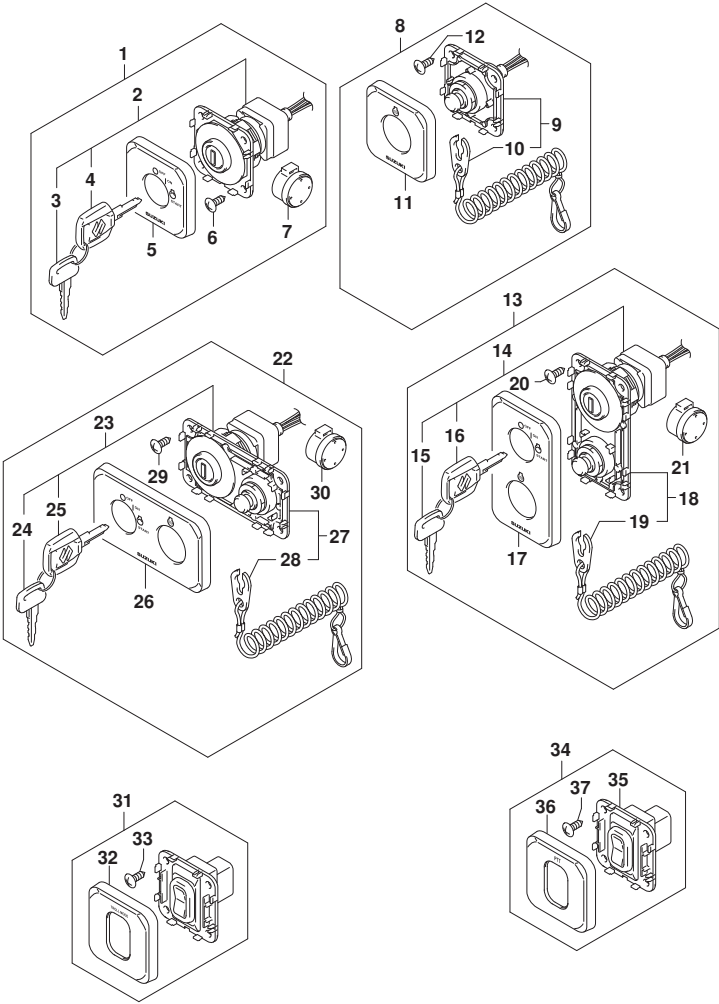


FIG.530C (2-J-13) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
10	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	
11	37832-98L00	..COVER, EMERGENCY SW PANEL	1	
12	03142-05169	..SCREW	4	
13	37100-98L10	PANEL ASSY, MAIN SWITCH	1	
14	37110-98L00	..SWITCH ASSY, MAIN	1	
15-1	37141-99E00	..KEY (931)	1	
15-2	37141-99E10	..KEY (932)	1	
15-3	37141-99E20	..KEY (933)	1	
15-4	37141-99E30	..KEY (934)	1	
15-5	37141-99E40	..KEY (935)	1	
15-6	37141-99E50	..KEY (936)	1	
15-7	37141-99E60	..KEY (937)	1	
15-8	37141-99E70	..KEY (938)	1	
15-9	37141-99E80	..KEY (939)	1	
15-10	37141-99E90	..KEY (940)	1	
15-11	37141-99EA0	..KEY (941)	1	
15-12	37141-99EB0	..KEY (942)	1	
16-1	37141-98L00	..KEY (931)	1	
16-2	37141-98L10	..KEY (932)	1	
16-3	37141-98L20	..KEY (933)	1	
16-4	37141-98L30	..KEY (934)	1	
16-5	37141-98L40	..KEY (935)	1	
16-6	37141-98L50	..KEY (936)	1	
16-7	37141-98L60	..KEY (937)	1	
16-8	37141-98L70	..KEY (938)	1	
16-9	37141-98L80	..KEY (939)	1	
16-10	37141-98L90	..KEY (940)	1	
16-11	37141-98LA0	..KEY (941)	1	
16-12	37141-98LB0	..KEY (942)	1	
17	37138-98L10	..COVER, MAIN SW PANEL VERT	1	
18	37820-98L00	..SWITCH ASSY, EMERGENCY	1	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60A,DF50AVT,DF60AQH,DF60ATH,DF60AVTH):022

FIG.530C

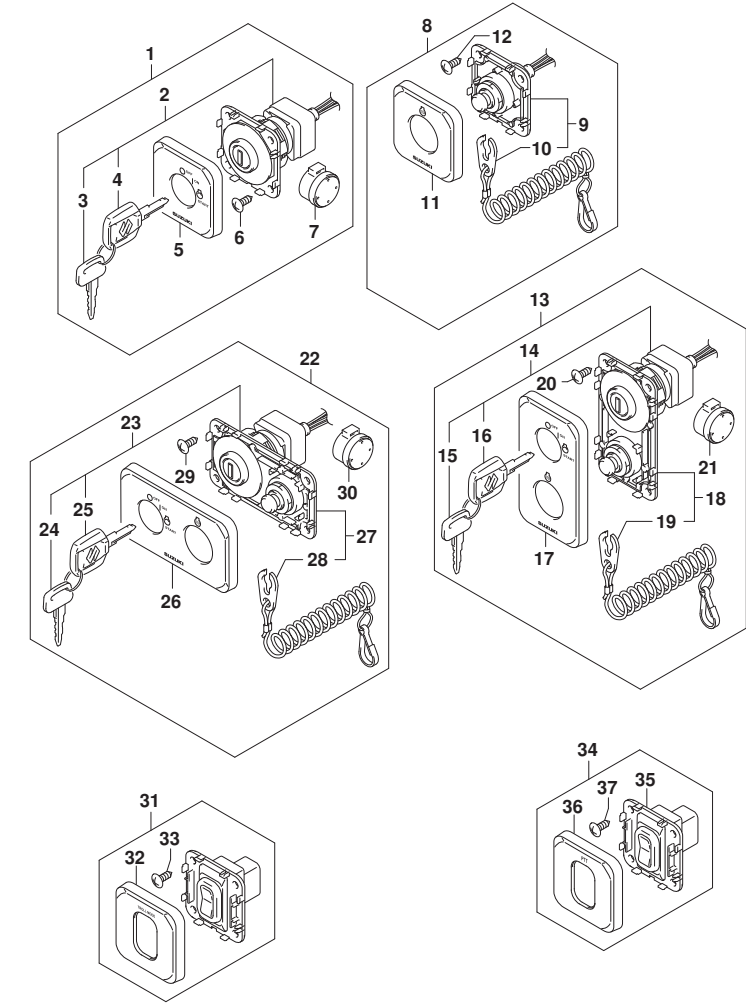

DF60A_E11_022_530C
OPT:SWITCH

FIG.530C (2-J-14) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	
20	03142-05169	..SCREW	4	
21	38500-93J90	..BUZZER, WARNING	1	
22	37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ	1	
23	37110-98L00	..SWITCH ASSY, MAIN	1	
24-1	37141-99E00	..KEY (931)	1	
24-2	37141-99E10	..KEY (932)	1	
24-3	37141-99E20	..KEY (933)	1	
24-4	37141-99E30	..KEY (934)	1	
24-5	37141-99E40	..KEY (935)	1	
24-6	37141-99E50	..KEY (936)	1	
24-7	37141-99E60	..KEY (937)	1	
24-8	37141-99E70	..KEY (938)	1	
24-9	37141-99E80	..KEY (939)	1	
24-10	37141-99E90	..KEY (940)	1	
24-11	37141-99EA0	..KEY (941)	1	
24-12	37141-99EB0	..KEY (942)	1	
25-1	37141-98L00	..KEY (931)	1	
25-2	37141-98L10	..KEY (932)	1	
25-3	37141-98L20	..KEY (933)	1	
25-4	37141-98L30	..KEY (934)	1	
25-5	37141-98L40	..KEY (935)	1	
25-6	37141-98L50	..KEY (936)	1	
25-7	37141-98L60	..KEY (937)	1	
25-8	37141-98L70	..KEY (938)	1	
25-9	37141-98L80	..KEY (939)	1	
25-10	37141-98L90	..KEY (940)	1	
25-11	37141-98LA0	..KEY (941)	1	
25-12	37141-98LB0	..KEY (942)	1	
26	37138-98L20	..COVER, MAIN SW PANEL HORIZ	1	
27	37820-98L00	..SWITCH ASSY, EMERGENCY	1	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60A,DF50AVT,DF60AQH,DF60ATH,
DF60AVTH):022

FIG.530C

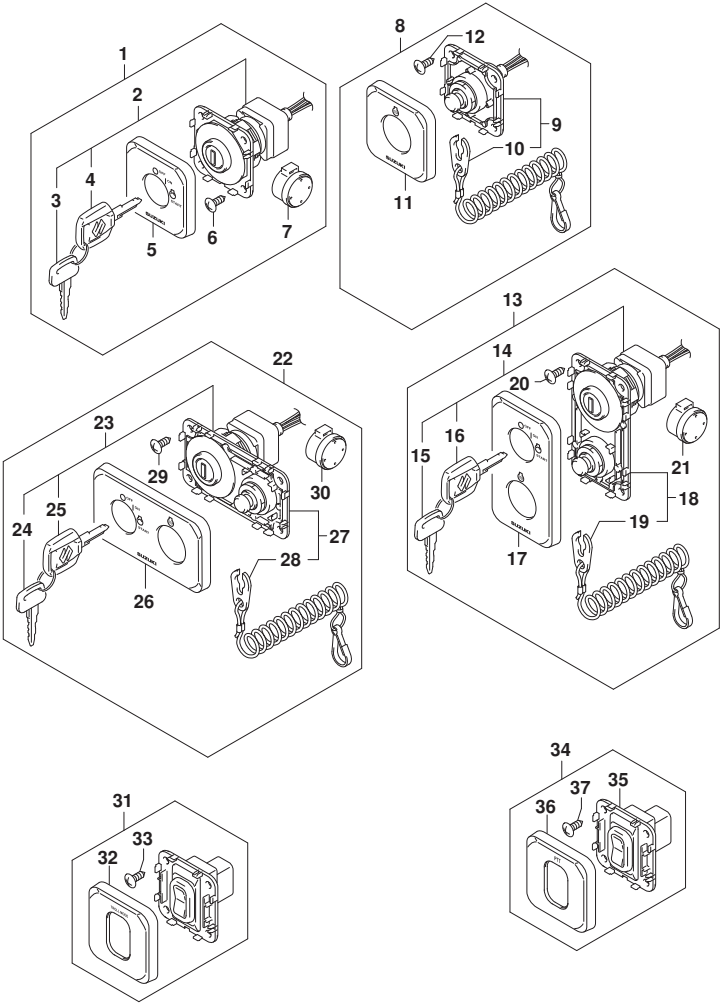


FIG.530C (2-J-15) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	
29	03142-05169	..SCREW	4	
30	38500-93J90	..BUZZER, WARNING	1	
31	37860-98L00	PANEL ASSY, TROLLING CONTROL SW	1	
32	37865-98L00	..COVER, TROLLING CONTROL SW	1	
33	03142-05169	..SCREW	4	
34	37805-88L00	PANEL ASSY, PTT SW	1	
35	37850-88L40	..SWITCH, PTT	1	
36	37865-88L00	..COVER, PTT SW	1	
37	03142-05169	..SCREW	4	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60A,DF50AVT,DF60AQH,DF60ATH,DF60AVTH):022

- DF40AQH E01
- DF40ATH E01
- DF50ATH E01
- DF50AVT E03
- DF60A E11
- DF60A E40
- DF60AQH E40
- DF60ATH E01
- DF60ATH E40
- DF60AVTH E40

FIG.544A

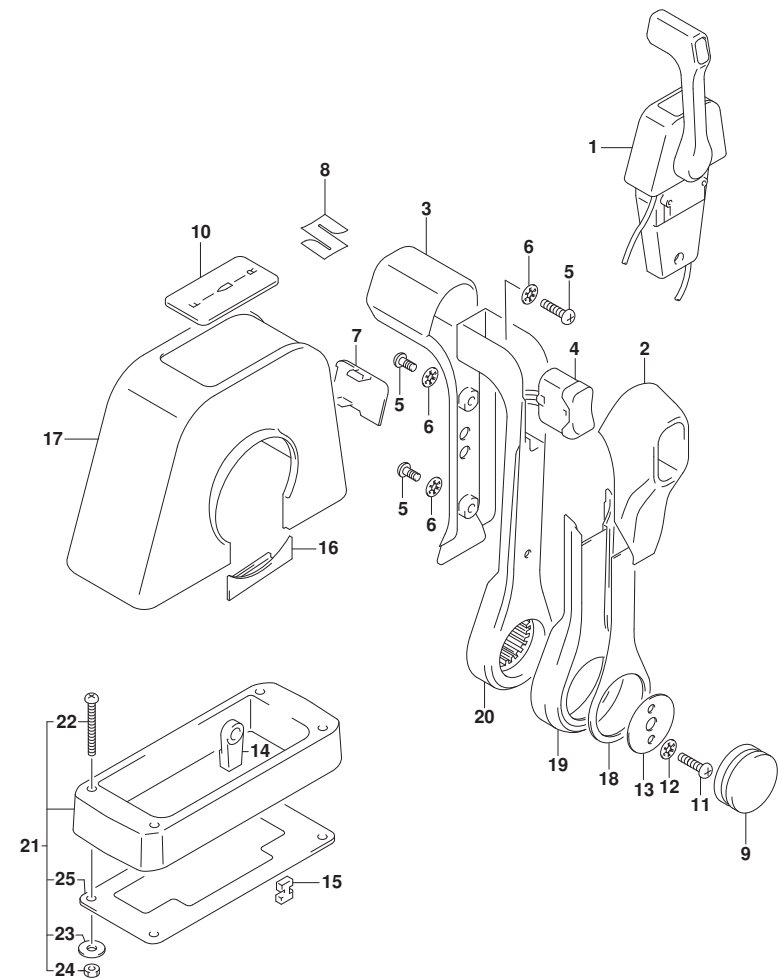


FIG.544A (2-K-2) OPT:REMOTE CONTROL ASSY SINGLE (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67261-88L10	.GRIP, REMOCON NO.2	1	
3	67261-88L00	.GRIP, REMOCON NO.1	1	
4	37850-88L00	.SWITCH ASSY, GRIP PTT	1	
5	67296-88L00	.SCREW	3	
6	67288-92E20	.WASHER	3	
7	67212-88L00	.COVER, PLUG	1	
8	68111-88L00	.EMBLEM, MARK	1	
9	67257-88L00	.CAP, REMOCON LEVER	1	
10	67281-88L00	.DECAL	1	
11	67296-92E60	.SCREW	2	
12	67288-92E60	.WASHER	2	
13	67253-92E00	.WASHER	1	
14	67275-95600	.END, CABLE	2	
15	67273-95601	.SPACER	1	
16	67271-88L10	.COVER, REMOCON LEVER LOWER	1	LOWER
17	67211-88L00	.COVER	1	
18	67264-88L00	.COVER, LEVER DESIGN	1	
19	67264-88L10	.COVER, LEVER PLATING	1	
20	67251-88L00	.LEVER, HANDLE	1	
21	67500-88L00	KIT, R/CON SPACER SINGLE	1	
22	09125-05135	.SCREW (5X65)	4	
23	09160-05029	.WASHER (5.5X12X0.8)	4	
24	09140-05005	.NUT (M5)	4	
25	67273-88L00	.GROMMET, R/CON SINGLE	1	

FIG.545A

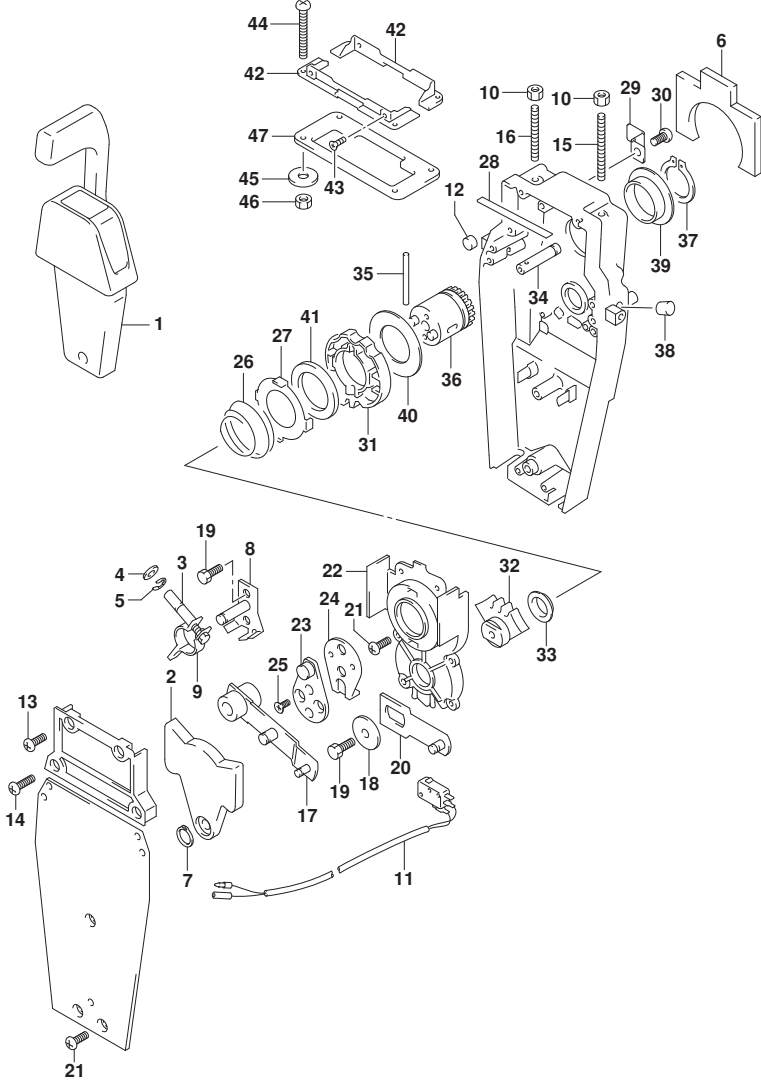


FIG.545A (2-K-3) OPT:REMOTE CONTROL ASSY SINGLE (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67222-92E00	.DUEL PLATE	1	
3	67223-92E00	.BRAKE ADJUST	1	
4	67288-92E00	.WASHER	1	
5	67292-94300	.E RING	4	
6	67272-88L00	.GOM SEAL, WATERPROOF	1	
7	67291-92E00	.SNAP RING	1	
8	67221-92E00	.SHIFT ASSY	1	
9	67224-92E00	.BRAKE ARM ASSY	1	
10	09140-06020	.NUT	2	
11	37721-88L01	.SWITCH ASSY, NEUTRAL	1	
12	67236-92E00	.ROLLER	1	
13	67296-88D10	.SCREW (5X16)	2	
14	67296-92E20	.SCREW (5X25)	2	
15	67226-92E00	.BOLT, STOPPER	1	
16	67226-92E10	.BOLT, STOPPER	1	
17	67240-92E00	.THROTTLE ARM ASSY	1	
18	67228-92E00	.WASHER	1	
19	67286-92E00	.BOLT (6X18)	3	
20	67230-88L00	ARM ASSY, REMOCON SHIFT	1	
21	09125-05042	.SCREW (5X10)	10	
22	67234-88L00	.CASE, REMOCON GEAR	1	
23	67245-92E00	.LEVER ASSY, THROTTLE	1	
24	67227-92E00	.STOPPER	1	
25	09126-06006	.SCREW (6X20)	2	
26	67233-92E00	.SPRING	1	
27	67235-92E00	.PLATE, SHIFT LOCK	1	
28	67237-92E01	.SPRING	5	
29	67269-92E01	.BRACKET	1	
30	67296-88D10	.SCREW (5X16)	1	
31	67238-88L00	.GEAR, REMOCON DRIVE	1	
32	67231-88L00	.GEAR, REMOCON SHIFT	1	
33	67232-88L00	.BUSH, SHIFT GEAR	1	
34	67241-88L00	.ROD, REMOCON FREE ACCEL	1	
35	67239-92E00	.PIN	1	
36	67246-88L00	.SHAFT, REMOCON DRIVE	1	

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or motor. The components are numbered 1 through 47. The main housing (1) is shown on the left. The internal assembly includes a shaft (35) with a pulley (36) and a gear (31). The gear is connected to a motor (34) which is mounted on a base (28). The motor is secured with a nut (38) and a washer (39). The base is also secured with a nut (37) and a washer (30). The internal components are held together by various bolts (10, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47) and washers (45, 46). The diagram shows the relationship between the parts and how they fit together.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
37	67291-92E10	.SNAP RING	1	
38	67243-92E00	.CAP, HOLE	1	
39	67252-88L00	.BUSH, REMOCON DRIVE SHAFT	1	
40	67253-88L00	.WASHER, REMOCON DRIVE SHAFT	1	
41	67239-92E10	.PLATE, SHIFT PIN	1	
42	67274-88L00	.FLANGE, COVER BASE	2	
43	67296-95610	.SCREW	4	
44	67296-92E30	.SCREW	4	
45	09160-05024	.WASHER (5.5X16X1.5)	4	
46	67287-92E00	.NUT (M5)	4	
47	67273-88L00	.GROMMET, R/CON SINGLE	1	

FIG.570A

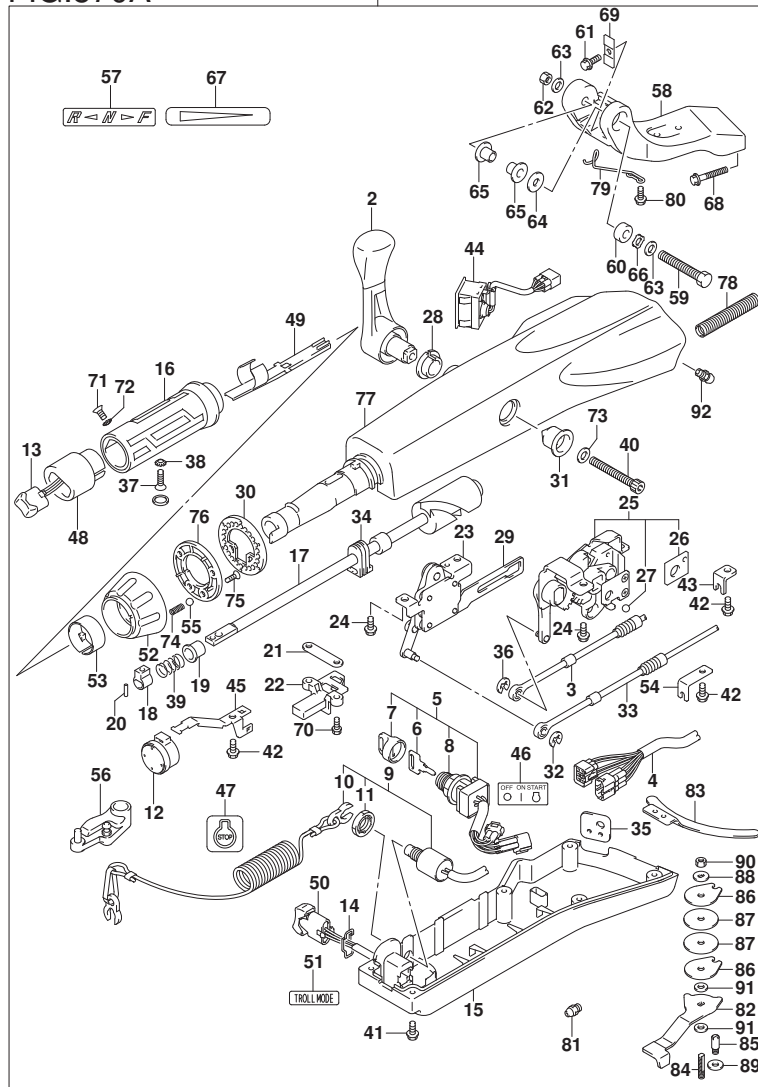


FIG.570A (2-K-5) OPT:TILLER HANDLE (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	63002-88L28-YAY	KIT, TILLER HANDLE (BLACK)	1	
1-2	63002-88L29-YAY	KIT, TILLER HANDLE (BLACK)	1	SEE NOTE
2	21110-88L00	..LEVER, SHIFT	1	
3	23230-88L00	..CABLE, SHIFT	1	
4	36620-88L11	..WIRE ASSY, HANDLE	1	
5	37110-87L02	..SWITCH ASSY, IGNITION	1	
6-1	37141-99E00	..KEY (931)	1	
6-2	37141-99E10	..KEY (932)	1	
6-3	37141-99E20	..KEY (933)	1	
6-4	37141-99E30	..KEY (934)	1	
6-5	37141-99E40	..KEY (935)	1	
6-6	37141-99E50	..KEY (936)	1	
6-7	37141-99E60	..KEY (937)	1	
6-8	37141-99E70	..KEY (938)	1	
6-9	37141-99E80	..KEY (939)	1	
6-10	37141-99E90	..KEY (940)	1	
6-11	37141-99EA0	..KEY (941)	1	
6-12	37141-99EB0	..KEY (942)	1	
7	37143-99E01	..CAP, KEY	1	
8	37149-93J00	..CAP, CYLINDER BODY	1	
9	37820-87L11	..SWITCH ASSY, EMERGENCY	1	
10	37823-92E02	..PLATE ASSY, EMERGENCY SW	1	
		LOCK		
11	37826-92J10	..NUT	1	
12	38500-93J90	..BUZZER, WARNING	1	
13	37850-87L01	..SWITCH ASSY, PTT	1	

NOTE : FROM 04003F-141090, FROM 05003F-141319

DF40A E01

DF40A E03


DF40A E11

DF50A E01

DF50A E03

DF50A E11

FIG.570A

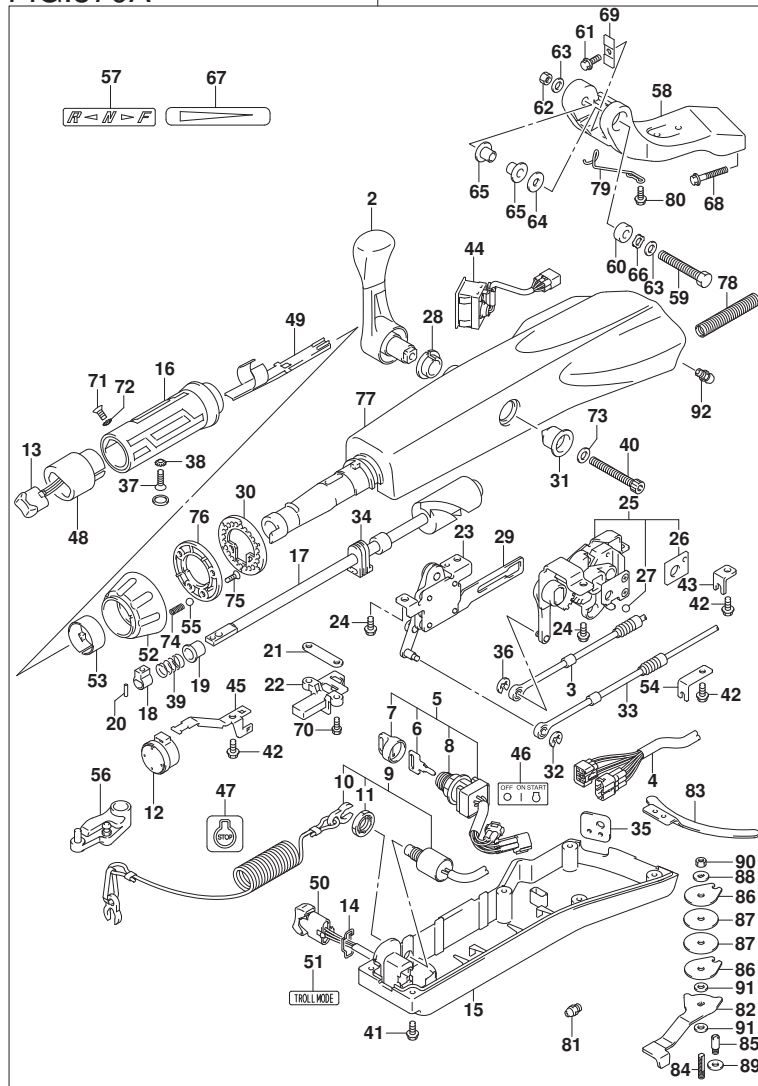

DF60A_E11_022_570A
OPT:TILLER HANDLE

FIG.570A (2-K-6) OPT:TILLER HANDLE (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14	37852-87J00	.PLATE, TRIM SWITCH	1	
15	63121-88L10	.COVER, UNDER	1	
16	63210-88L00	.GRIP, HANDLE	1	
17	63221-88L00	.SHAFT, THROTTLE	1	
18	63223-92D00	.STOPPER, HANDLE ROD	1	
19	63225-88L00	.BUSH, HANDLE ROD	1	
20	63227-93200	.PIN, HANDLE ROD (L:14)	1	
21	63235-88L00	.PLATE, THROTTLE SHAFT	1	
22	63246-88L00	.STOPPER, THROTTLE ADJUST	1	
23	63250-88L00	ARM ASSY, THROTTLE	1	
24	63251-87J00	.BOLT, SHIFT GEAR ASSY (6X12)	4	
25	63260-88L00	.GEAR ASSY, SHIFT	1	
26	63272-87J00	..PLATE, BALL GUIDE	1	
27	63273-87J00	..BALL	1	
28	63262-87J00	.BUSH, SHIFT LEVER	1	
29	63271-87J00	.PLATE, LOCK	1	
30	63248-99J00	.PLATE, THROTTLE ADJ NOTCH	1	
31	63261-87J00	.BUSH, SHIFT GEAR	1	
32	63274-87J00	E RING	1	
33	63610-88L00	.CABLE, THROTTLE	1	
34	37853-88L90	.GROMMET, PTT SW LEAD	1	
35	63626-88L00	.GROMMET, CABLE	1	
36	67292-87J00	E RING	2	
37	09126-06015	.SCREW (6X23)	1	
38	09163-06001	.LOCK WASHER (6.4X12X0.5)	1	
39	09440-12027	.SPRING	1	
40	21112-88L00	.BOLT, SHIFT LEVER	1	
41	09125-05047	.SCREW (5X14)	6	
42	63611-88L00	.BOLT, CLAMP BRACKET	3	
43	63612-87J00	.BRACKET, CLAMP	1	
44	34200-87L00	.TACHOMETER ASSY, WITH MONITOR	1	
45	36617-88L90	.CLAMP, MAIN HARNESS	1	
46	37112-88L91	.LABEL, IGNITION SW	1	
47	37835-91J00-YAY	.LABEL, STOP (BLACK)	1	
48	37851-88L90	.BASE, PTT SW	1	
49	37852-88L90	.HARNESS GUIDE	1	

DF60A_E11_022

FIG.570A

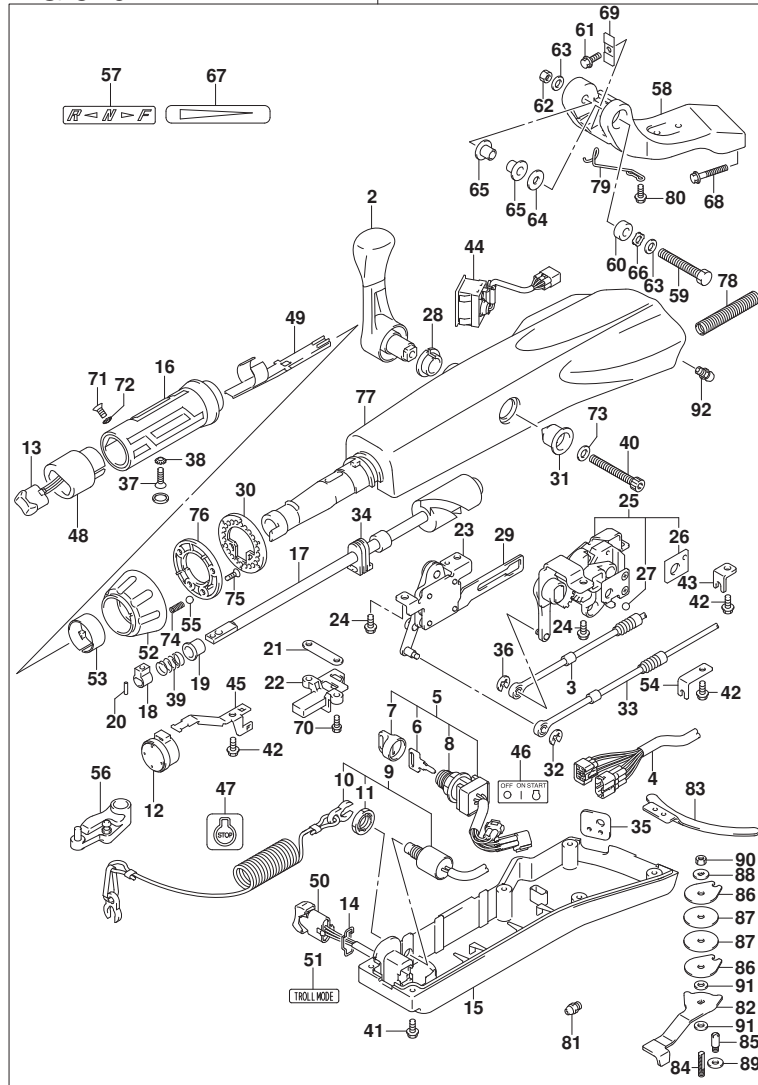


FIG.570A (2-K-7) OPT:TILLER HANDLE (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
50	37861-87L11	.SWITCH, TROLLING CONTROL	1	
51	37864-88L91	.LABEL, TROLL MODE	1	
52	63244-99J00	.KNOB, THROTTLE ADJ	1	
53	63245-99J00	.BUSH, THROTTLE ADJ	1	
54	63612-88L10	.BRACKET, CLAMP SHIFT	1	
55	09260-10006	.BALL	1	
56	19120-88L12	.LEVER, THROTTLE	1	
57	21131-88L02	.MARK, CLUTCH SHIFT	1	
58	43761-88L01-YAY	.BRACKET, TILLER HANDLE (BLACK)	1	
59	43762-88L00	.BOLT, TILLER HANDLE PIVOT	1	
60	43768-88L00	.SPACER, TILLER HANDLE	1	
61	09116-08137	.BOLT (8X22)	1	
62	09159-12014	.NUT (12X17)	1	
63	09160-12066	.WASHER (12.5X22X2.5)	2	
64	09160-12124	.WASHER (12.5X32X1.5)	1	
65	63115-88L01	.BUSH, TILLER HANDLE PIVOT	2	
66	09164-13010	.WASHER	1	
67	63215-93110	.MARK, HANDLE GRIP	1	
68	09116-10150	.BOLT (10X55)	2	
69	63132-88L00	.STOPPER, TILLER HANDLE	1	
70	63251-88L90	.BOLT	2	
71	37855-88L90	.SCREW, THROTTLE GRIP	1	
72	37854-88L90	.WASHER, THROTTLE GRIP	1	
73	63258-88L00	.WASHER	1	
74	09440-06037	.SPRING	1	
75	03522-05169	.SCREW	3	
76	63247-99J00	.PLATE, THROTTLE ADJ KNOB	1	
77	63111-88L01-YAY	.HOUSING, TILLER HANDLE (BLACK)	1	
78	33834-88L00	.TUBE, CABLE PROTECTOR	1	
79	65793-88L00	.HOLDER, FUEL HOSE	1	
80	09116-06237	.BOLT (6X15)	2	
81	22511-99011	.NIPPLE, GREASE	1	
82	43411-88L01	.ADJUSTER, STEERING	1	
83	43415-88L00	.PLATE, STEERING ADJUSTER	1	

FIG.570A

1

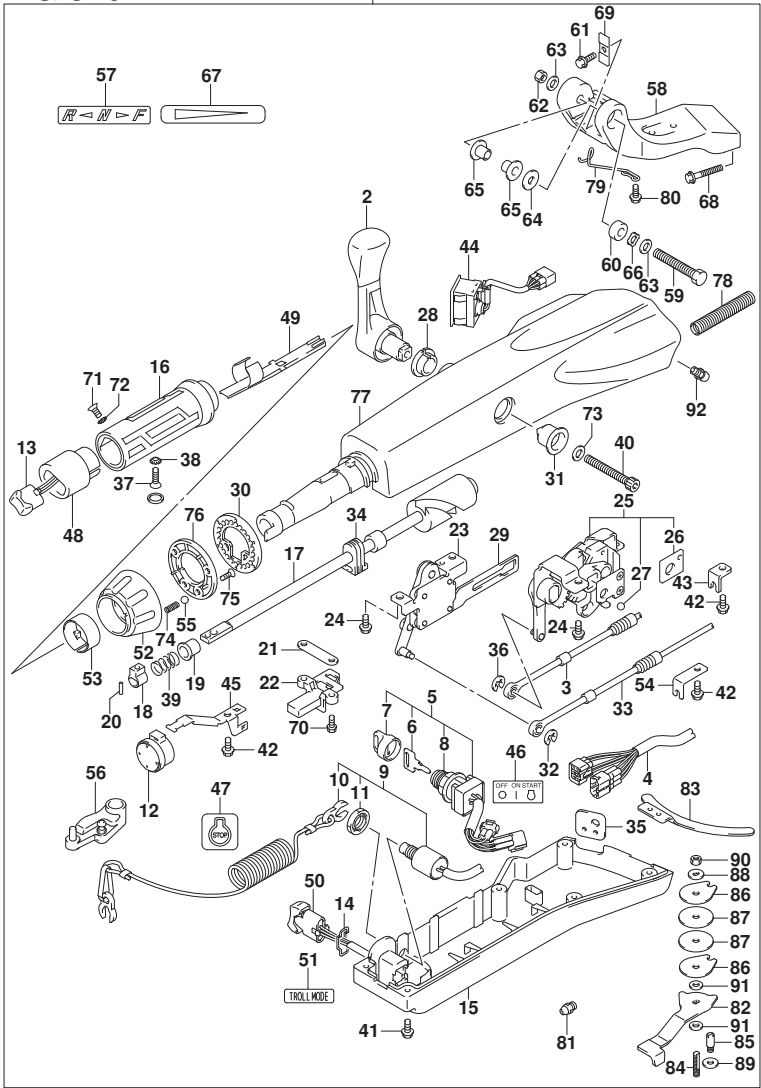


FIG.570A (2-K-8) OPT:TILLER HANDLE (DF40A,DF50A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
84	43512-88L00	.SHAFT, STRG ADJUSTER THREAD	1	
85	43513-88L00	.BOLT, STEERING ADJUSTER	1	
86	43514-88L00	.PLATE, STRG ADJUSTER FRICTION	2	
87	43515-88L00	.WASHER, STRG ADJ FRICTION	2	
		PLATE		
88	43516-88L00	.WASHER, STRG ADJUSTER FRICTION	1	
89	43517-88L00	.SPACER, STEERING ADJUSTER	1	
90	09159-08059	.NUT (M8)	1	
91	09161-08011	.WASHER (8.2X18X1.2)	2	
92	22511-99011	.NIPPLE, GREASE	1	SEE NOTE

NOTE : FROM 04003F-141090, FROM 05003F-141319

DF40A E01
DF40A E03
DF40A E11
DF50A E01
DF50A E03
DF50A E11

FIG.570B

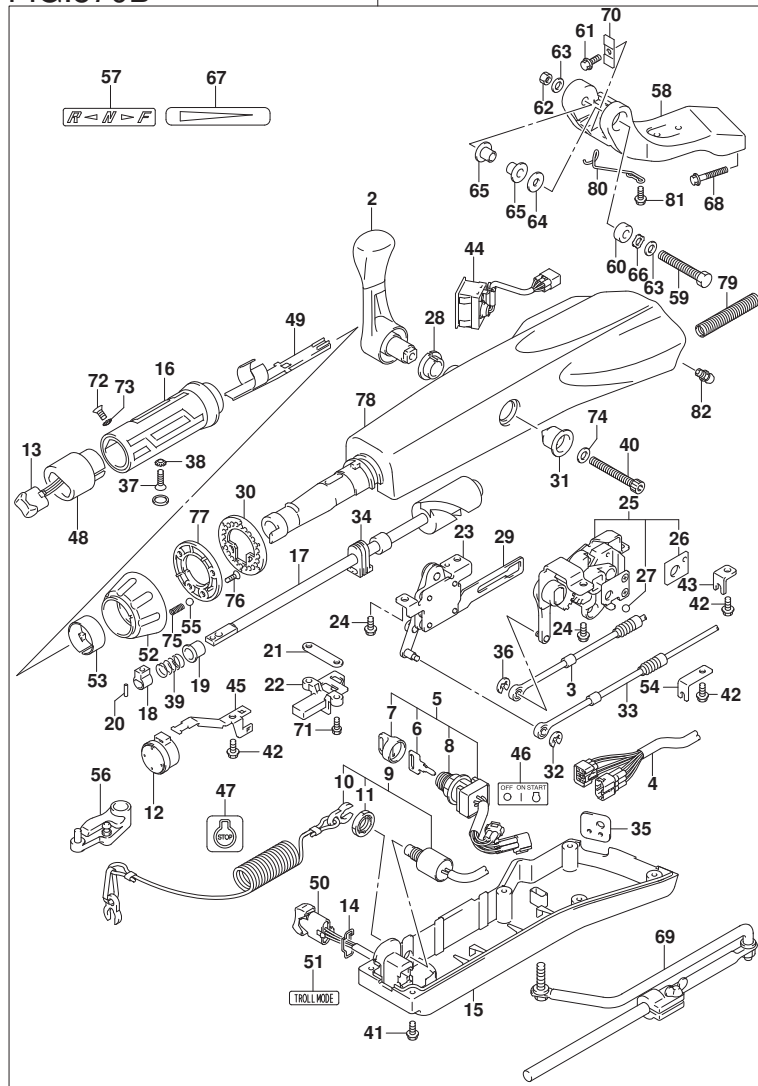


FIG.570B (2-K-9) OPT:TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	63002-88L17-YAY	KIT, TILLER HANDLE (BLACK)	1	
1-2	63002-88L18-YAY	KIT, TILLER HANDLE (BLACK)	1	SEE NOTE 2
2	21110-88L00	..LEVER, SHIFT	1	
3	23230-88L00	..CABLE, SHIFT	1	
4	36620-88L11	..WIRE ASSY, HANDLE	1	
5	37110-87L02	..SWITCH ASSY, IGNITION	1	
6-1	37141-99E00	..KEY (931)	1	
6-2	37141-99E10	..KEY (932)	1	
6-3	37141-99E20	..KEY (933)	1	
6-4	37141-99E30	..KEY (934)	1	
6-5	37141-99E40	..KEY (935)	1	
6-6	37141-99E50	..KEY (936)	1	
6-7	37141-99E60	..KEY (937)	1	
6-8	37141-99E70	..KEY (938)	1	
6-9	37141-99E80	..KEY (939)	1	
6-10	37141-99E90	..KEY (940)	1	
6-11	37141-99EA0	..KEY (941)	1	
6-12	37141-99EB0	..KEY (942)	1	
7	37143-99E01	..CAP, KEY	1	
8	37149-93J00	..CAP, CYLINDER BODY	1	
9	37820-87L11	..SWITCH ASSY, EMERGENCY	1	
10	37823-92E02	..PLATE ASSY, EMERGENCY SW	1	
		LOCK		
11	37826-92J10	..NUT	1	
12	38500-93J90	..BUZZER, WARNING	1	
13	37850-87L01	..SWITCH ASSY, PTT	1	
14	37852-87J00	..PLATE, TRIM SWITCH	1	
15	63121-88L10	..COVER, UNDER	1	

NOTE 1 : DF40AST,DF60A,DF50AVT,DF60AVT,DF40ASVT

NOTE 2 : FROM 04004F-140214, FROM 04005F-140360,
FROM 05004F-140056, FROM 06002F-142205,
FROM 06003F-140202

FIG.570B

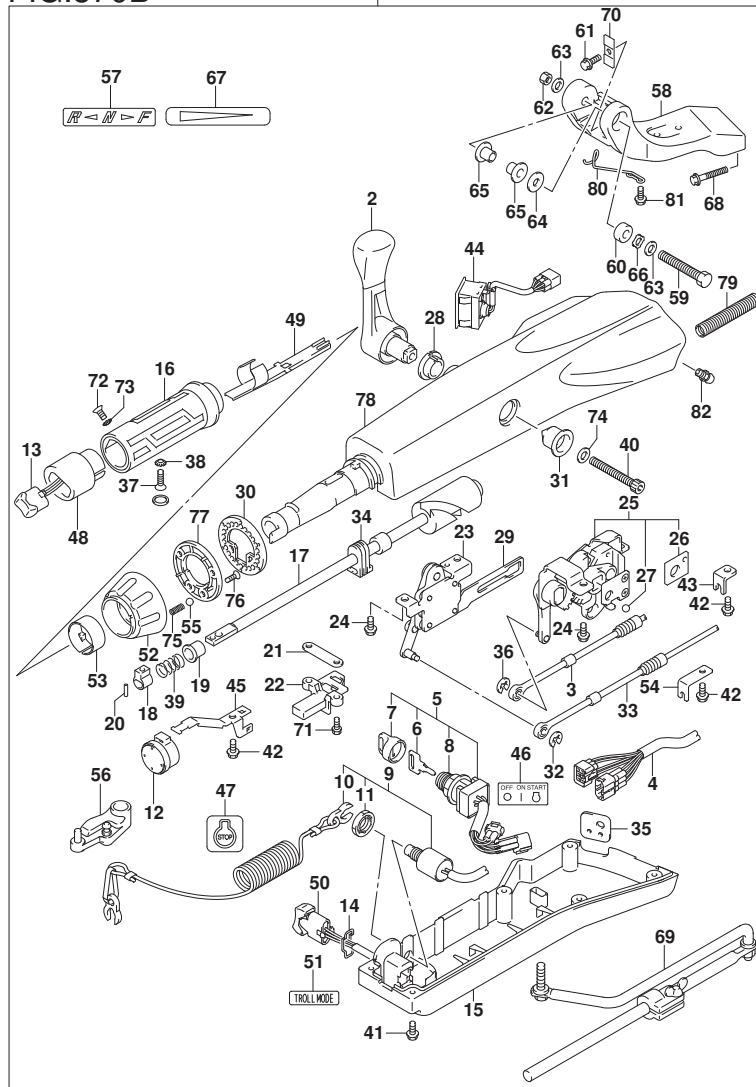


FIG.570B (2-K-10) OPT:TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
16	63210-88L00	.GRIP, HANDLE	1	
17	63221-88L00	.SHAFT, THROTTLE	1	
18	63223-92D00	.STOPPER, HANDLE ROD	1	
19	63225-88L00	.BUSH, HANDLE ROD	1	
20	63227-93200	.PIN, HANDLE ROD (L:14)	1	
21	63235-88L00	.PLATE, THROTTLE SHAFT	1	
22	63246-88L00	.STOPPER, THROTTLE ADJUST	1	
23	63250-88L00	.ARM ASSY, THROTTLE	1	
24	63251-87J00	.BOLT, SHIFT GEAR ASSY (6X12)	4	
25	63260-88L00	.GEAR ASSY, SHIFT	1	
26	63272-87J00	.PLATE, BALL GUIDE	1	
27	63273-87J00	.BALL	1	
28	63262-87J00	.BUSH, SHIFT LEVER	1	
29	63271-87J00	.PLATE, LOCK	1	
30	63248-99J00	.PLATE, THROTTLE ADJ NOTCH	1	
31	63261-87J00	.BUSH, SHIFT GEAR	1	
32	63274-87J00	.E RING	1	
33	63610-88L00	.CABLE, THROTTLE	1	
34	37853-88L90	.GROMMET, PTT SW LEAD	1	
35	63626-88L00	.GROMMET, CABLE	1	
36	67292-87J00	.E RING	2	
37	09126-06015	.SCREW (6X23)	1	
38	09163-06001	.LOCK WASHER (6.4X12X0.5)	1	
39	09440-12027	.SPRING	1	
40	21112-88L00	.BOLT, SHIFT LEVER	1	
41	09125-05047	.SCREW (5X14)	6	
42	63611-88L00	.BOLT, CLAMP BRACKET	3	
43	63612-87J00	.BRACKET, CLAMP	1	
44	34200-87L00	.TACHOMETER ASSY, WITH MONITOR	1	
45	36617-88L90	.CLAMP, MAIN HARNESS	1	
46	37112-88L91	.LABEL, IGNITION SW	1	
47	37835-91J00-YAY	.LABEL, STOP (BLACK)	1	

NOTE 1 : DF40AST,DF60A,DF50AVT,DF60AVT,DF40ASVT

FIG.570B

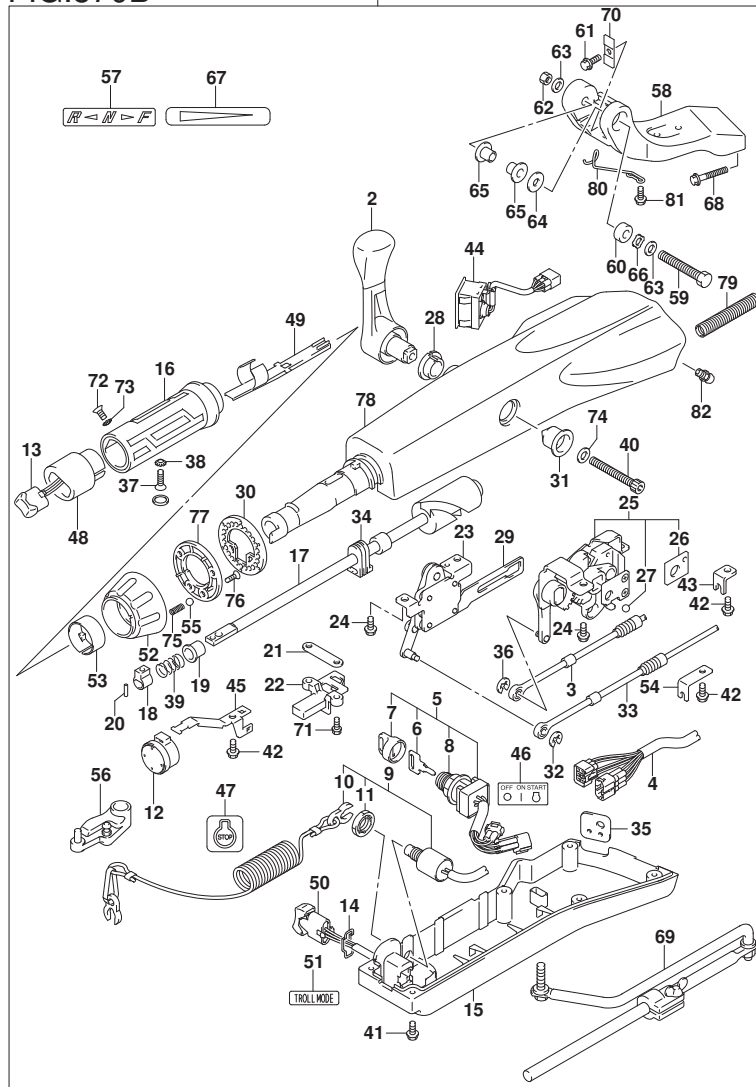


FIG.570B (2-K-11) OPT:TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
48	37851-88L90	.BASE, PTT SW	1	
49	37852-88L90	.HARNES GUIDE	1	
50	37861-87L11	.SWITCH, TROLLING CONTROL	1	
51	37864-88L91	.LABEL, TROLL MODE	1	
52	63244-99J00	.KNOB, THROTTLE ADJ	1	
53	63245-99J00	.BUSH, THROTTLE ADJ	1	
54	63612-88L10	.BRACKET, CLAMP SHIFT	1	
55	09260-10006	.BALL	1	
56	19120-88L12	.LEVER, THROTTLE	1	
57	21131-88L02	.MARK, CLUTCH SHIFT	1	
58	43761-88L01-YAY	.BRACKET, TILLER HANDLE (BLACK)	1	
59	43762-88L00	.BOLT, TILLER HANDLE PIVOT	1	
60	43768-88L00	.SPACER, TILLER HANDLE	1	
61	09116-08137	.BOLT (8X22)	1	
62	09159-12014	.NUT (12X17)	1	
63	09160-12066	.WASHER (12.5X22X2.5)	2	
64	09160-12124	.WASHER (12.5X32X1.5)	1	
65	63115-88L01	.BUSH, TILLER HANDLE PIVOT	2	
66	09164-13010	.WASHER	1	
67	63215-93110	.MARK, HANDLE GRIP	1	
68	09116-10150	.BOLT (10X55)	2	
69	43770-99E03	.ADJUSTER ASSY, STEERING	1	
70	63132-88L00	.STOPPER, TILLER HANDLE	1	
71	63251-88L90	.BOLT	2	
72	37855-88L90	.SCREW, THROTTLE GRIP	1	
73	37854-88L90	.WASHER, THROTTLE GRIP	1	
74	63258-88L00	.WASHER	1	
75	09440-06037	.SPRING	1	
76	03522-05169	.SCREW	3	
77	63247-99J00	.PLATE, THROTTLE ADJ KNOB	1	

NOTE 1 : DF40AST,DF60A,DF50AVT,DF60AVT,DF40ASVT

FIG.570B

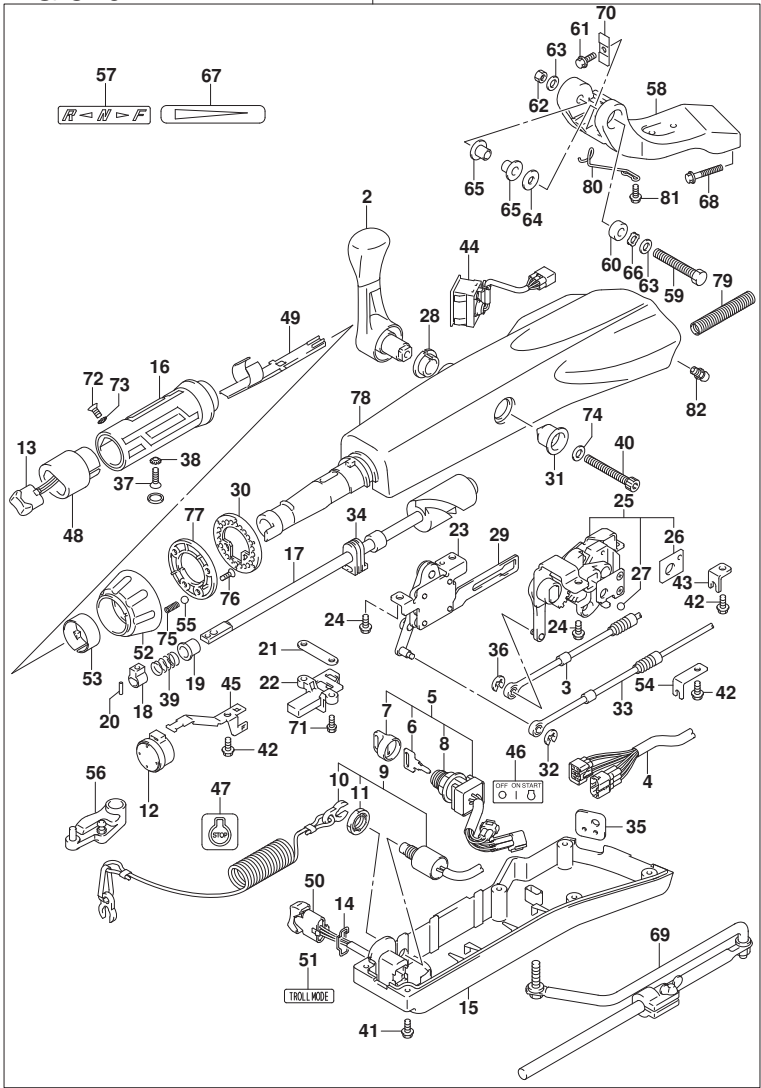


FIG.570B (2-K-12) OPT:TILLER HANDLE (SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
78	63111-88L01-YAY	.HOUSING, TILLER HANDLE (BLACK)	1	
79	33834-88L00	.TUBE, CABLE PROTECTOR	1	
80	65793-88L00	.HOLDER, FUEL HOSE	1	
81	09116-06237	.BOLT (6X15)	2	
82	22511-99011	.NIPPLE, GREASE	1	SEE NOTE 2

NOTE 1 : DF40AST,DF60A,DF50AVT,DF60AVT,DF40ASVT

NOTE 2 : FROM 04004F-140214, FROM 04005F-140360,
FROM 05004F-140056, FROM 06002F-142205,
FROM 06003F-140202

FIG.575A


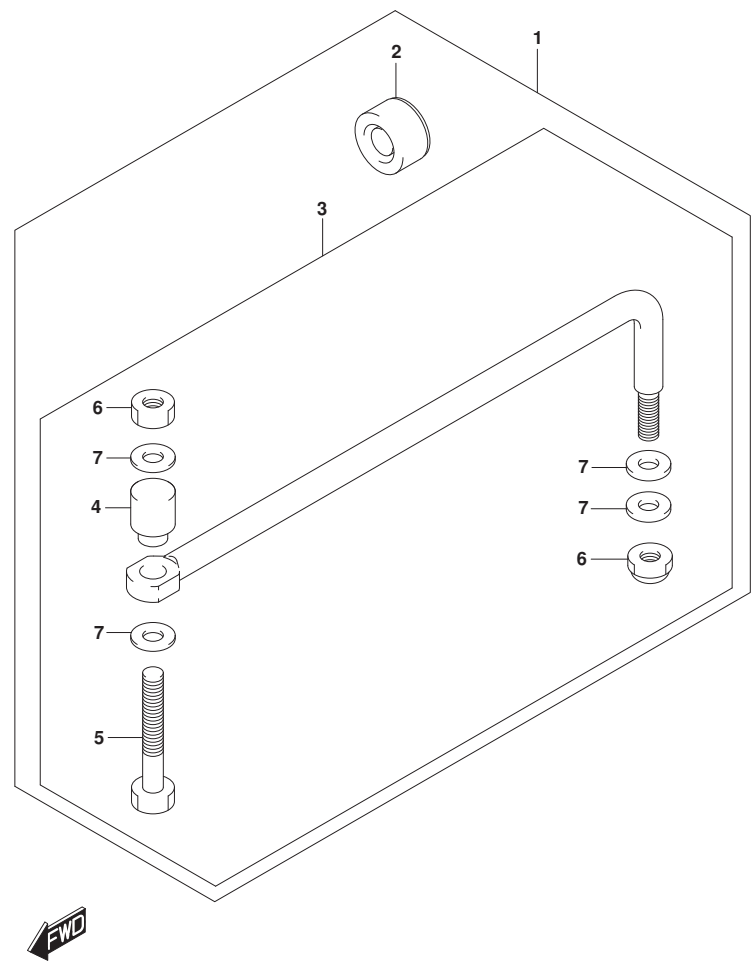


FIG.575A (2-K-13) OPT:DRAG LINK (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67700-93J00	LINK SET, DRAG	1	
2	41161-94400	.SEAL, STEERING CABLE	1	
3	67701-87J11	.LINK ASSY, DRAG	1	
4	67721-87J00	..SPACER	1	
5	67725-99E00	..BOLT, DRAG LINK	1	
6	67726-99E00	..NUT, LOCK	2	
7	67728-99E00	..WASHER	4	

NOTE : DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVTH,DF60AVTH

FIG.585A

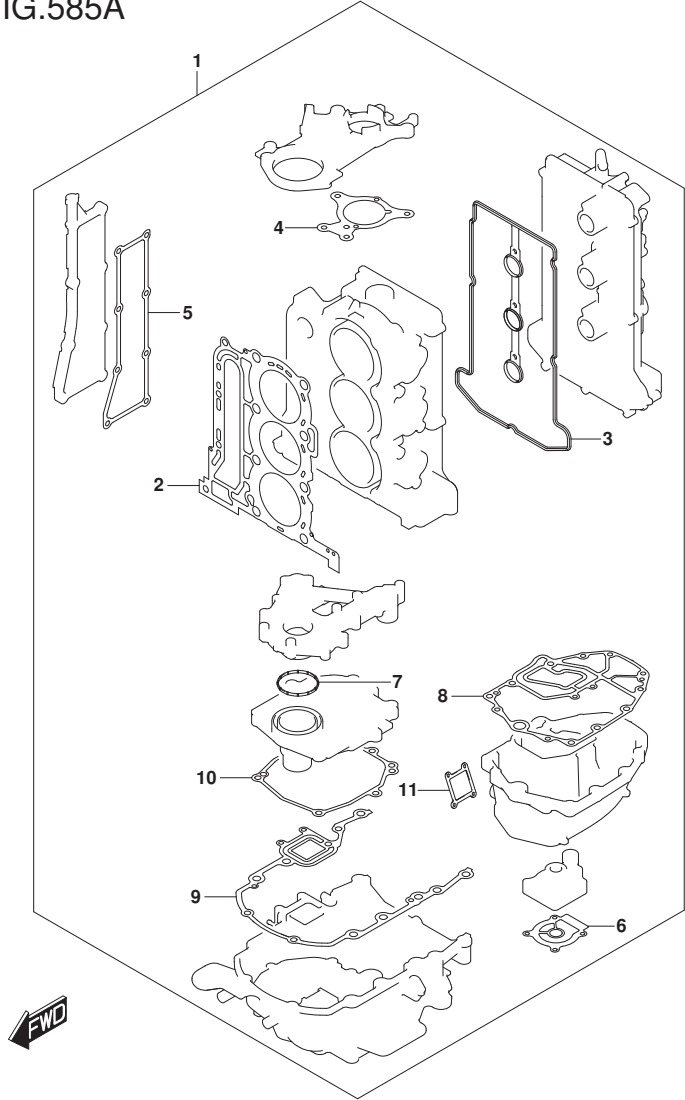

DF60A_E11_022_585A
OPT:GASKET SET

FIG.585A (2-K-14) OPT:GASKET SET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11400-88872	GASKET SET	1	
2	11141-88L00	.GASKET, CYLINDER HEAD	1	
3	11189-88L00	.GASKET, CYLINDER HEAD COVER	1	
4	11413-88L00	.GASKET, UPPER OIL SEAL HSG	1	UPPER
5	14151-88L00	.GASKET, EXH COVER	1	
6	17472-96304	.GASKET, PUMP CASE UNDER	1	
7	11433-88L00	.GASKET, UNDER OIL SEAL	1	
8	11489-88L01	.GASKET, OIL PAN	1	
9	51211-88L00	.GASKET, ENGINE HOLDER	1	
10	51123-88L00	.GASKET, MOUNT CASE COVER	1	
11	11552-88L00	.GASKET, OIL PAN WTR JKT COVER	1	

DF60A_E11_022_600A
OPT:MULTI FUNCTION GAUGE



NOTE : (DF40A,DF40AST,DF50A,DF50AVT,DF60A,DF60AVT,DF40ASVT):
(020,021)

DF60A_E11_022

FIG.600B

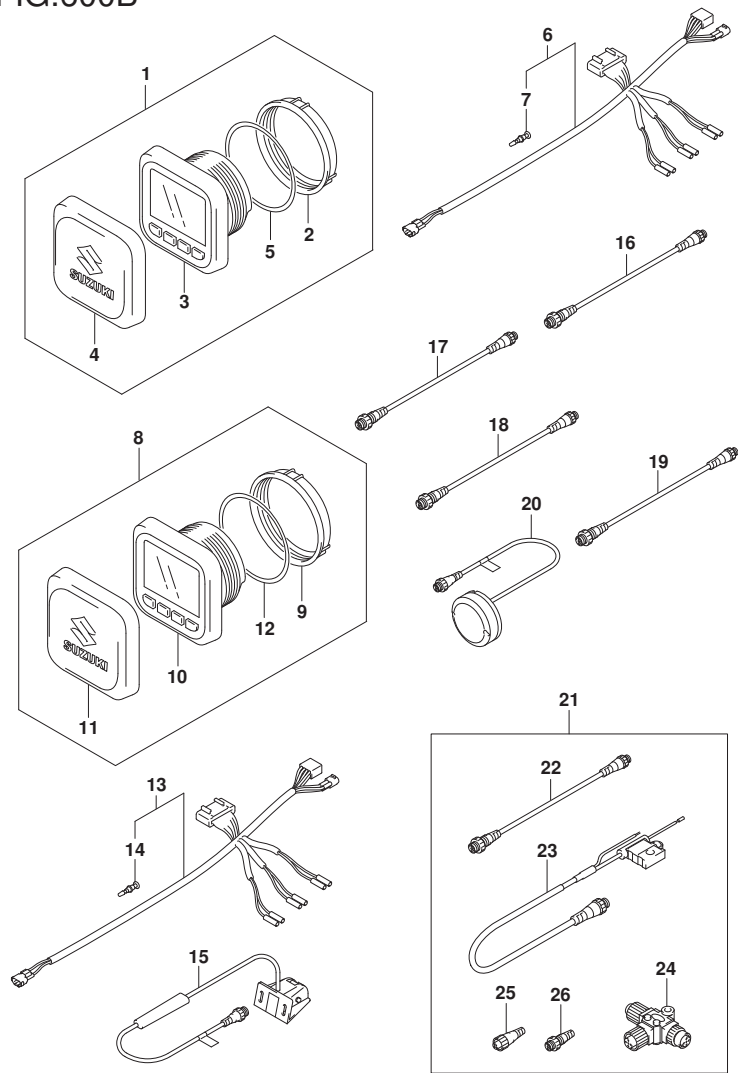


FIG.600B (2-L-3) OPT: MULTI FUNCTION GAUGE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34011-96L40	GAUGE SET, MULTI	1	
2	34112-96L00	.NUT, GAUGE	1	
3	34193-96L00	.BEZEL, GAUGE	1	
4	34211-96L00	.COVER, GAUGE	1	
5	34825-96L00	.PACKING, GAUGE	1	
6	36661-96L30	ADAPTER, GAUGE	1	
7	36615-96300	.TERMINAL	5	
8	34011-96L50	GAUGE SET, MULTI	1	
9	34112-96L00	.NUT, GAUGE	1	
10	34193-96L00	.BEZEL, GAUGE	1	
11	34211-96L00	.COVER, GAUGE	1	
12	34825-96L00	.PACKING, GAUGE	1	
13	36661-96L30	ADAPTER, GAUGE	1	
14	36615-96300	.TERMINAL	5	
15	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
16	36662-88L10	WIRE, 2 EXTENSION	1	
17	36662-88L20	WIRE, 6 EXTENSION	1	
18	36662-88L30	WIRE, 15 EXTENSION	1	
19	36662-88L00	WIRE, 25 EXTENSION	1	
20	39950-88L02	MODULE ASSY, GPS RECEIVER	1	
21	36001-88L00	SET, WIRE	1	
22	36662-88L10	.WIRE, 2 EXTENSION	1	
23	36663-88L00	.HARNESS ASSY, NETWORK POWER	1	
24	36664-88L00	.CONNECTOR, BRANCH	1	
25	36665-88L00	.UNIT, RESISTOR FEMALE	1	
26	36665-88L10	.UNIT, RESISTOR MALE	1	

NOTE : (DF40A,DF40AST,DF50A,DF50AVT,DF60A,DF60AVT,DF40ASVT):022

FIG.600C

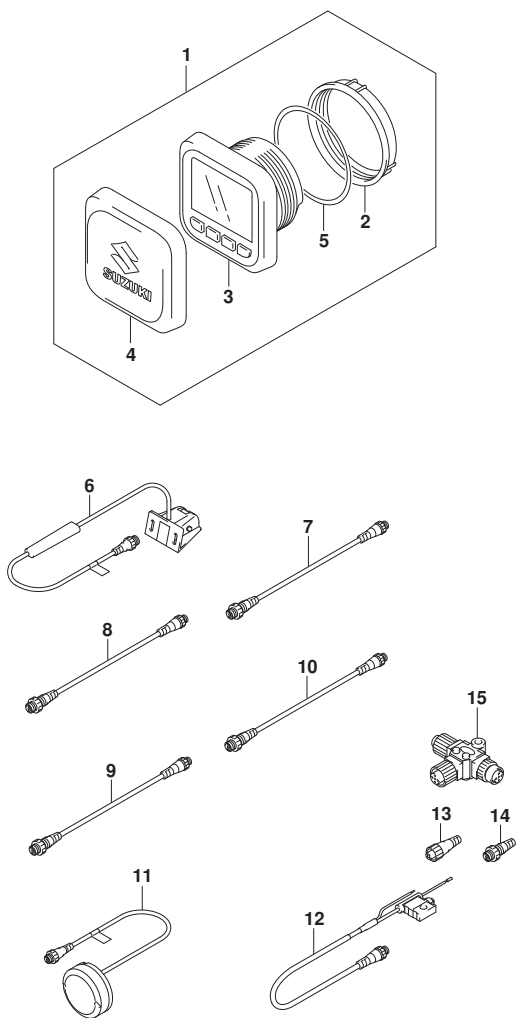


FIG.600C (2-L-4) OPT:MULTI FUNCTION GAUGE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34011-96L16	GAUGE SET, MULTI	1	
2	34112-96L00	.NUT, GAUGE	1	
3	34193-96L00	.BEZEL, GAUGE	1	
4	34211-96L00	.COVER, GAUGE	1	
5	34825-96L00	.PACKING, GAUGE	1	
6	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
7	36662-88L10	WIRE, 2 EXTENSION	1	
8	36662-88L20	WIRE, 6 EXTENSION	1	
9	36662-88L30	WIRE, 15 EXTENSION	1	
10	36662-88L00	WIRE, 25 EXTENSION	1	
11	39950-88L02	MODULE ASSY, GPS RECEIVER	1	
12	36663-88L00	HARNESS ASSY, NETWORK POWER	1	
13	36665-88L00	UNIT, RESISTOR FEMALE	1	
14	36665-88L10	UNIT, RESISTOR MALE	1	
15	36664-88L00	CONNECTOR, BRANCH	1	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVTH,DF60AVTH):
(020,021)

FIG.600D

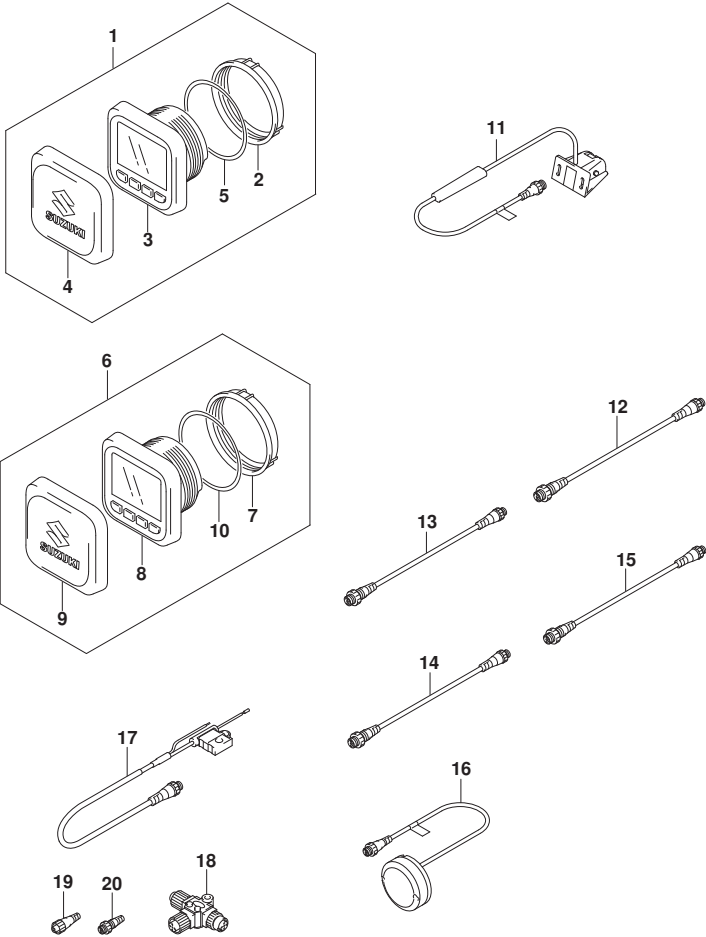


FIG.600D (2-L-5) OPT:MULTI FUNCTION GAUGE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34011-96L40	GAUGE SET, MULTI	1	
2	34112-96L00	.NUT, GAUGE	1	
3	34193-96L00	.BEZEL, GAUGE	1	
4	34211-96L00	.COVER, GAUGE	1	
5	34825-96L00	.PACKING, GAUGE	1	
6	34011-96L50	GAUGE SET, MULTI	1	
7	34112-96L00	.NUT, GAUGE	1	
8	34193-96L00	.BEZEL, GAUGE	1	
9	34211-96L00	.COVER, GAUGE	1	
10	34825-96L00	.PACKING, GAUGE	1	
11	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
12	36662-88L10	WIRE, 2 EXTENSION	1	
13	36662-88L20	WIRE, 6 EXTENSION	1	
14	36662-88L30	WIRE, 15 EXTENSION	1	
15	36662-88L00	WIRE, 25 EXTENSION	1	
16	39950-88L02	MODULE ASSY, GPS RECEIVER	1	
17	36663-88L00	HARNESS ASSY, NETWORK POWER	1	
18	36664-88L00	CONNECTOR, BRANCH	1	
19	36665-88L00	UNIT, RESISTOR FEMALE	1	
20	36665-88L10	UNIT, RESISTOR MALE	1	

NOTE : (DF40AQH,DF40ATH,DF50ATH,DF60AQH,DF60ATH,DF50AVT,DF60AVTH):
022

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		111B-14	12741-88L00	121A-3	
		111C-14	12761-88L00	119A-1	
		585A-1	12771-87J00	119A-2	
		11411-88L00	12776-85FA0	119A-3	
		11413-88L00	12811-88L00	119A-4	
11100-88L10	111A-1	585A-4	12812-73G10	119A-7	
	111B-1	11433-88L00	12813-73G00	119A-8	
11100-88L20	111C-1	585A-7	12821-88L00	119A-11	
11112-88L00	113A-7	11489-88L01	12831-90J02	119A-9	
	113B-7	180B-1	12891-73G01	121A-7	
11115-73G01-001	111A-2	585A-8	12892-73G01-218	121A-8-1	
	111A-29	11501-88L01-QTN	12892-73G01-220	121A-8-2	
	111B-2	11501-88L01-Y5S	12892-73G01-222	121A-8-3	
	111B-29	11501-88L01-YAY	12892-73G01-224	121A-8-4	
	111C-2	180A-2-4	12892-73G01-226	121A-8-5	
	111C-29	180A-2-5	12892-73G01-228	121A-8-6	
11117-89J20	113A-4	180B-2	12892-73G01-230	121A-8-7	
	113B-4	11510-88L00	12892-73G01-232	121A-8-8	
11119-87J00	111A-10	11514-88L00	12892-73G01-234	121A-8-9	
	111B-10	11543-88L01	12892-73G01-236	121A-8-10	
	111C-10	180B-11	12892-73G01-238	121A-8-11	
11141-88L00	111A-11	11551-88L00-QTN	12892-73G01-240	121A-8-12	
	111B-11	11551-88L00-Y5S	12892-73G01-242	121A-8-13	
	111C-11	11551-88L00-YAY	12892-73G01-244	121A-8-14	
	585A-2	180A-6-4	12892-73G01-246	121A-8-15	
11170-88L10	111A-16	180B-6	12892-73G01-248	121A-8-16	
	111B-16	11552-88L00	12892-73G01-250	121A-8-17	
	111C-16	180B-7	12892-73G01-252	121A-8-18	
11173-88L00	111A-20	585A-11	12892-73G01-254	121A-8-19	
	111B-20	12100-51810-0A0	12892-73G01-256	121A-8-20	
	111C-20	12100-51810-0B0	12892-73G01-258	121A-8-21	
11174-88L01	111A-22	12100-51810-0C0	12892-73G01-260	121A-8-22	
	111B-22	12100-51810-0D0	12892-73G01-262	121A-8-23	
	111C-22	12100-51810-0E0	12892-73G01-264	121A-8-24	
11189-88L00	111A-17	12100-88L01-050	12892-73G01-266	121A-8-25	
	111B-17	12111-88L00	12892-73G01-268	121A-8-26	
	111C-17	12140-88L01	12892-73G01-270	121A-8-27	
11194-88L10	585A-3	12140-88L01-050	12892-73G01-272	121A-8-28	
	111A-26	12151-54A50	12892-73G01-274	121A-8-29	
	111B-26	12160-88L01	12892-73G01-276	121A-8-30	
	111C-26	12163-69J00	12892-73G01-278	121A-8-31	
11196-88L00	162A-8	12220-88L00	12892-73G01-280	121A-8-32	
11261-93J00	111A-5	12281-87J00	12892-73G01-282	121A-8-33	
	111B-5	12340-75F00-0C0	12892-73G01-284	121A-8-34	
	111C-5	12340-75F00-0D0	12892-73G01-286	121A-8-35	
11291-88L00	113A-1	12340-75F00-0E0	12892-73G01-288	121A-8-36	
11291-88L10	113B-1	12340-75FA0-A0A	12892-73G01-290	121A-8-37	
11301-88L20	113A-3	12340-75FA0-0B0	12892-73G01-292	121A-8-38	
	113B-3	12710-88L00	12892-73G01-294	121A-8-39	
11382-93J00	111A-14	12720-88L00	12892-73G01-296	121A-8-40	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
12892-73G01-298	121A-8-41	13815-88L10	163C-13	15641-88L31	143A-18
12892-73G01-300	121A-8-42	13820-88L01	124A-11		143B-18
12911-88L00	121A-9		124B-11	15641-88L51	143A-19
12915-73G20	121A-10	13820-88L11	124E-11		143B-19
12921-87J11	121A-11		124F-11	15642-88L00	143A-8
12931-78G00	121A-12	14141-88L00	124A-13		143B-8
12932-24400	121A-13		124C-13	15642-88L10	143A-20
12933-51E00	121A-14		124E-13		143B-20
13110-88L00	124A-1	14141-88L10	124B-13	15643-88L10	143A-17
	124B-1		124D-13		143B-17
	124C-1		124F-13	15644-88L00	143A-13
	124D-1	14151-88L00	124A-14		143B-13
	124E-1		124B-14	15645-88L00	143A-14
	124F-1		124C-14		143B-14
13119-88L00	124A-2		124D-14	15650-99E00	143A-9
	124B-2		124E-14		143B-9
	124C-2		124F-14	15654-88L00	143A-10
	124D-2		585A-5		143B-10
	124E-2	15100-90J11	146A-1	15681-88L10	144A-7
	124F-2	15191-88L20	146A-10		144B-7
13125-88L00	124A-3	15192-88L20	146A-11	15683-87J00	143A-11
	124B-3	15197-88L00	146A-15		143B-11
	124C-3	15200-88L00	143A-3	15710-85K00	144A-1
	124D-3	15200-88L10	143B-3		144B-1
	124E-3	15410-88L00	146A-4	15716-65DT0	144A-2
	124F-3	15419-87J00	146A-5		144B-2
13300-88L02	163A-1	15421-88L00	146A-8	15750-88L10	144A-4
	163B-1	15422-96J01	146A-7	15750-88L20	144B-4
	163C-1	15600-88L05	143A-1	15760-88L00	143A-12
13315-88L00	163A-3	15600-88L14	143B-1		143B-12
	163B-3	15610-88L01	143A-25	16400-88L00	175A-2
	163C-3		143B-25	16510-87J01	175A-9
13353-99E00	163A-2	15612-88L00	143A-21	16519-87L00	175A-8
	163B-2		143B-21	16520-88L00	175A-5
	163C-2	15613-88L00	143A-22	16910-88L00	180A-14
13370-88L00	143A-2		143B-22		180B-14
13370-88L10	143B-2	15613-92J00	143A-23	16930-88L00	180A-15
13510-88L00	163A-7		143B-23		180B-15
	163B-7	15614-88L00	143A-24	17400-88L01	160A-21
	163C-7		143B-24		160B-21
13614-89J00	143B-15	15620-88L00	143A-26		160C-21
13614-93J00	143B-16	15620-88L10	143B-26		160D-21
13810-88L00	124A-10	15626-88L01	143A-4	17400-99E12	160E-20
	124B-10	15626-88L10	143B-4		160F-20
	124C-10	15628-99E00	143A-5		160G-21
	124D-10		143B-5	17410-88L00	160A-1
	124E-10	15629-99E10	143A-6		160B-1
	124F-10		143B-6		160C-1
13813-88L01	124C-11	15641-88L00	143A-7		160D-1
	124D-11	15641-88L10	143B-7	17410-99E10	160E-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
17413-95J00	160F-1	17560-88L40	160E-5-2	17670-93955	162A-5
	160G-1	17562-87L01	160G-5-2	17681-88L00	162A-6
	160A-2		160A-13	17712-88L01	162A-11
	160B-2		160A-14-1	17913-93J00	180A-9
17413-95J10	160C-2		160A-14-2		180B-9
	160D-2		160B-13	17914-93J01	180A-10
	17413-99E11		160B-14		180B-10
	160E-18		160C-13	17917-87L00	420A-22
17413-99E21	160F-18		160C-14		420B-22
	160G-17		160D-13		420C-21
	17416-95J00		160D-14		420D-21
	160A-3		160E-6		420E-22
17416-99E11	160B-3		160E-7		420F-21
	160C-3		160F-6		420G-21
	160D-3		160F-7		420H-22
	160E-19		160G-6		420J-22
17461-87E12	160F-19	17564-87D00	160G-7		420K-21
	160G-18		160E-8		420L-21
	160E-2		160F-8		420M-22
	160F-2		160G-8		420N-22
17461-96312	160G-2	17564-88L01	160A-4		420P-22
	160A-9		160B-4		420R-21
	160B-9		160C-4		420S-21
	160C-9		160D-4		420T-21
17471-95J01	160D-9		162A-1		420U-21
	160A-10	17611-90J00	160E-9	18137-88L02	124A-8
	160B-10	17631-90J00	160F-9		124B-8
	160C-10		160G-9		124C-8
17471-95J10	160D-10		160A-16		124D-8
	17471-99E00	17631-96320	160B-16		124E-8
	160E-3		160C-16		124F-8
	160F-3		160D-16	18210-88L00	420A-20
17471-99E10	160G-3		160E-10		420B-20
	17472-87E10	17632-90J00	160F-10		420C-19
	160E-4		160G-10		420D-19
	160F-4		160A-18-1		420E-20
17472-96304	160G-4	17635-87E00	160B-18-1		420F-19
	160A-11		160C-18-1		420G-19
	160B-11		160D-18-1		420H-20
	160C-11	17635-87E10	160A-18-2		420J-20
17560-88L00	160D-11		160B-18-2		420K-19
	585A-6		160C-18-2		420L-19
	160A-12-1		160D-18-2		420M-20
	160A-12-2		160E-21		420N-20
17560-88L10	160C-12-1		160F-21		420P-20
	160A-12-3		160G-19		420R-19
	160B-12	17635-90J00	160E-11		420S-19
	160C-12-2		160F-11		420T-19
17560-88L20	160D-12-1		160G-11		420U-19
	160A-12-4		162A-2	18498-88L11	143A-33
	160D-12-2				
	17560-88L30				
17560-88L30	160E-5-1				
	160F-5				
	160G-5-1				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
18498-90J51	143B-33		204D-2		204F-9
	146A-13		204E-2		204G-9
	18498-94J11		204F-2	23213-89J01	204A-12
	18498-96J31		204G-2		204B-12
18498-99EA1	507A-6	21210-88L01	204A-5		204C-12
	19120-88L01		163A-8		204D-12
			163C-8		204E-12
	19120-88L12		163B-8		204F-12
19131-95502	570A-56		204E-5		204G-12
	570B-56		204F-5	23214-89J00	204A-13
	163A-9	22511-99011	204G-5		204B-13
	163B-9		336A-5		204C-13
20000	163C-9		336B-5		204D-13
			336B-33		204E-13
			336C-5		204F-13
			336D-5		204G-13
21110-88L00	444A-3		336E-5	23230-88L00	444A-4
	444B-3		336F-5		444B-4
	444C-3		336G-5		444C-4
	570A-2		336H-5		570A-3
21112-88L00	570B-2		444A-64		570B-3
	444B-41		444B-65	23311-95J00	204A-15
	444C-41		444C-65		204B-15
	570A-40		570A-81		204C-15
21112-88L10	570B-40	23111-88L01	570A-92		204D-15
	444A-41		570B-82		204E-15
	206A-13		204A-6-1		204F-15
	206B-13		204C-6-1		204G-15
21121-93300	206C-13		204E-6-1	25111-88L00	206A-1-1
	206D-13		204F-6		206C-1-1
	210A-1	23111-88L11	204G-6-1	25111-88L10	206A-1-2
	204A-1		204A-6-2		206B-1
21126-88L00	204B-1		204A-6-3		206C-1-2
	204B-1		204B-6		206D-1-1
	204C-1		204C-6-2	25111-88L20	206A-1-3
	204D-1		204D-6		206D-1-2
21131-88L02	204E-1	23115-88L00	204E-6-2	25111-88L30	210A-2-1
	204F-1		204G-6-2		210A-2-2
	204G-1		204A-8	25141-99E03	210A-3
	444A-71		204B-8	25205-94501	210A-4
21151-88L00	444B-72		204C-8	25211-87J00	206A-2
	444C-72		204D-8		206B-2
	570A-57		204E-8		206C-2
	570B-57		204F-8		206D-2
23210-88L00	204A-2		204G-8	25211-94501	210A-5
	204B-2		204A-9	25212-94401	206A-5
	204C-2		204B-9		206B-5
			204C-9		206C-5
			204D-9		206D-5
			204E-9	25223-94400	206A-9-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
25223-96J00	206A-9-2	29162-93J00	160A-6	33410-87L00	310A-7
	206B-9		160B-6	33634-96J00	322A-4
	206C-9-1		160C-6		322B-4
	206D-9-1		160D-6		322C-4
	206A-9-3		315A-12		322D-4
25230-94300	206C-9-2	29404-93J11	337A-2		322E-4
	206D-9-2		337B-2	33799-97E00	340A-8
	210A-6		337C-2	33810-88L10	322A-1
	206A-10		337D-2		322B-1
	206B-10		337E-2		322C-1
25311-88L00	206C-10		337F-2		322D-1
	206D-10				322E-1
	206A-11			33833-91J00	444A-79
	206B-11				444B-80
	206C-11				444C-82
25311-94510	206D-11			33834-88L00	444A-77
	210A-7	30000			444B-78
	407A-20				444C-79
	407B-20				570A-78
	407C-22				570B-79
25700-99E00	407D-22	31100-89L00	301A-1	33925-88L10	326A-10
	407E-22	31111-87J10	340A-9		326B-10
	407F-32	31123-97E10	340A-4		326C-7
	407G-32	31133-94910	340A-5		326D-10
	315C-12	31135-94900	340A-6		326E-10
29103-93J00	315C-18	31136-87J11	340A-7		326F-10
	401A-15	31150-98L00	301A-2		326G-10
	401B-15	31170-89L00	301A-3		326H-10
	401C-15	31173-88L12	340A-3		326J-7
	401D-15	31173-98L00	301A-4		326K-10
29116-93J10	160E-12	31191-63J00	301A-5		326L-10
	160F-12	31192-92J00	301A-8		326M-10
	160G-12	31220-89L00	301A-6		326N-10
	160A-5	31261-75F10	301A-9		326P-10
	160B-5	31311-63J00	301A-7		326R-10
29141-93J00	160C-5	31311-87J10	340A-2	33940-88L00	326F-9
	160D-5	31313-86030	301A-11	33940-88LH0	326H-9-1
	204A-7	31320-89L00	301A-12		326J-6-1
	204B-7	31340-89L00	301A-10	33940-88LJ0	326A-9
	204C-7	31341-89L00	301A-13		326C-6-1
29141-93J00	204D-7	31343-63J00	301A-14	33940-88LK0	326D-9-1
	204E-7	31344-63J00	301A-15	33940-88LL0	326E-9
	204F-7	31912-88L00	301A-16	33940-88LM0	326L-9
	204G-7	31918-92J01	301A-17	33940-88LN0	326N-9
	336C-26	32102-88L01	303A-1	33940-88LP0	326K-9
336D-26	336D-22	32120-88L00	303A-5	33940-88LQ0	326R-9-1
	336E-22	32160-88L01	303A-6	33950-88L00	326G-9
	336F-26	32800-88L01	310A-1	33950-88L10	326H-9-2
	336G-22	32890-88L01	310A-3		326J-6-2
	336H-26	33220-64L10	303A-8	33950-88L20	326D-9-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
33950-88L30	326M-9	34200-87L00	444A-45		315C-1
33950-88L40	326P-9		444B-45	34840-98J03	315A-2
33950-88L50	326R-9-2		444C-45	34840-98J11	315C-2
33950-88L60	326B-9		570A-44	34841-87L10	315C-5
	326C-6-2		570B-44	34841-88L01	315A-10
34000-96L46	600A-1	34200-93J02	501A-20-1	34842-88L10	315C-6
34011-96L16	600A-2		501B-20-1	34843-87L00	315C-7
	600C-1	34200-93J14	501A-20-2	34845-88L02	315A-11
34011-96L40	600B-1		501B-20-2	34845-88L10	315C-8
	600D-1	34200-93J43	501A-22-1	34846-87L00	315C-4
34011-96L50	600B-8	34200-93J54	501A-22-2	36001-88L00	600A-9
	600D-6	34211-96L00	600A-5		600B-21
34100-93J02	501A-3-1		600B-4	36610-88LL1	322B-3
	501B-3-1		600B-11	36610-88LM1	322A-3
34100-93J13	501A-3-2		600C-4	36610-88LN1	322C-3
	501B-3-2		600D-4	36610-88LP1	322E-3
34100-93J22	501A-3-3		600D-9	36610-88LQ1	322D-3
	501B-3-3	34300-93J03	501A-10-1	36611-88L00	322C-17
34100-93J33	501A-3-4		501B-10-1		322D-17
	501B-3-4	34300-93J14	501A-10-2	36612-96J01	322A-15
34100-93J42	501A-3-5		501B-10-2		322B-15
	501B-3-5	34310-92E01	501A-11		322C-15
34100-93J53	501A-3-6		501B-11		322D-15
	501B-3-6	34360-92E00	501A-12		322E-15
34100-93J62	501A-3-7		501B-12	36615-96300	501A-7
	501B-3-7	34500-93J02	501A-14-1		501B-7
34112-96L00	600A-3		501B-14-1		600A-8
	600B-2	34500-93J13	501A-14-2		600B-7
	600B-9		501B-14-2		600B-14
	600C-2	34600-93J02	501A-8-1	36617-88L00	315C-11
	600D-2		501B-8-1		322A-21
34190-87D00	600D-7	34600-93J13	501A-8-2		322B-21
	501A-26		501B-8-2		322C-22
	501B-24	34650-93J22	501A-16-1		322D-22
34190-88L00	600A-15		501B-16-1		322E-21
	600B-15	34650-93J33	501A-16-2	36617-88L20	322A-25
	600C-6		501B-16-2		322B-25
	600D-11	34660-90J04	507A-1		322C-26
34190-95500	501A-24	34800-93J02	501A-1-1		322D-26
	501B-22		501B-1-1		322E-25
34191-92E00	501A-5	34800-93J13	501A-1-2	36617-88L90	444A-46
	501A-17		501B-1-2		444B-46
	501B-5	34825-96L00	600A-6		444C-46
	501B-17		600B-5		570A-45
34193-96L00	600A-4		600B-12		570B-45
	600B-3		600C-5	36617-93J10	322A-22
	600B-10		600D-5		322B-22
	600C-3	34830-87J20	600D-10		322C-23
	600D-3		315A-1		322D-23
	600D-8		315B-1		322E-22

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
36618-43410	322A-16 322B-16 322C-16 322D-16 322E-16	36662-88L00	600A-19 600B-19 600C-10 600D-15 600A-10	36721-98L00	521D-4 322A-8 322B-8 322C-8 322D-8
36620-88L11	444A-5 444B-5 444C-5 570A-4 570B-4	36662-88L10	600A-16 600B-16 600B-22 600C-7 600D-12	36737-98L00	322E-8 322A-7 322B-7 322C-7 322D-7
36620-93J03	508A-53-1 508B-53-1 521A-4-1 521C-2-1	36662-88L20	600A-17 600B-17 600C-8 600D-13	36738-98L00	322E-7 322A-9 322B-9 322C-9
36620-93J12	521A-1-1 521B-1-1	36662-88L30	600A-18 600B-18		322D-9 322E-9
36620-93J31	521A-2		600C-9	36890-93J01	517A-23
36620-93J42	521A-1-2 521B-1-2	36663-88L00	600D-14 600A-11	36894-87D00	336C-6 336D-6
36620-93J53	508A-53-2 508B-53-2 521A-4-2 521C-2-2		600A-21 600B-23 600C-12 600D-17		336E-6 336F-6 336G-6 336H-6
36620-93J63	508A-53-3 508B-53-3 521A-4-3 521C-2-3	36664-88L00	600A-12 600A-24 600B-24	36894-95201	336A-6 336B-6 336A-7
36620-93J70	508C-51-1 521B-4-1 521D-2-1	36665-88L00	600C-15 600D-18 600A-13 600A-22	36895-87D01	336A-8 336B-7 336B-8 336C-7
36620-93J80	508C-51-2 521B-4-2 521D-2-2		600B-25 600C-13 600D-19		336C-8 336D-7 336D-8
36620-93J90	508C-51-3 521B-4-3 521D-2-3	36665-88L10	600A-14 600A-23		336E-7 336E-8 336F-7
36621-93J00	521B-2		600B-26 600C-14		336F-8
36628-92E01	508A-2 508B-2 508C-2	36667-96L20	600D-20 521A-8 521B-7		336G-7 336G-8 336H-7
36630-92E00	521C-7 521D-6		521C-6 521D-5	36990-87D00	336H-8 521A-6
36656-88L00	315A-8 315C-15	36668-87L00	322A-5 322B-5		521B-5 521C-4
36656-88L10	315B-3		322C-5		521D-3
36660-94480	521C-8 521D-7		322D-5 322E-5	37100-96J01	530A-1
36661-96L30	600A-7 600B-6 600B-13	36682-92E00	521A-7 521B-6 521C-5	37100-96J27	530A-19
				37100-98L00	530B-1
				37100-98L10	530C-1 530B-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37100-98L20	530C-13 530B-22 530C-22	37141-98L30	530B-4-4 530B-16-4 530C-25-4 530C-4-4		530B-25-12 530C-4-12 530C-16-12 530C-25-12
37110-87L02	444A-6 444B-6 444C-6		530C-16-4 530C-25-4	37141-99E00	444A-7-1 444B-7-1
37110-93J02	570A-5 570B-5 530A-2 530A-20	37141-98L40	530B-4-5 530B-16-5 530B-25-5 530C-4-5		444C-7-1 508A-4-1 508B-4-1 508C-4-1
37110-93J12	508A-3 508B-3		530C-16-5 530C-25-5		530A-3-1 530A-21-1
37110-93J20	508C-3	37141-98L50	530B-4-6 530B-16-6		530B-3-1 530B-15-1
37110-98L00	530B-2 530B-14 530B-23		530B-25-6 530C-4-6		530B-24-1 530C-3-1
	530C-2 530C-14 530C-23		530C-16-6 530C-25-6		530C-15-1 530C-24-1
37112-88L91	444A-47 444B-47 444C-47	37141-98L60	530B-4-7 530B-16-7		570A-6-1 570B-6-1
	570A-46 570B-46		530C-16-7 530C-25-7	37141-99E10	444A-7-2 444B-7-2 444C-7-2
37138-98L00	530B-5 530C-5	37141-98L70	530B-4-8 530B-16-8		508A-4-2 508B-4-2 508C-4-2
37138-98L10	530B-17 530C-17		530B-25-8 530C-4-8		530A-3-2 530A-21-2
37138-98L20	530B-26 530C-26		530C-16-8 530C-25-8		530B-3-2 530B-15-2
37139-99E00	530A-6	37141-98L80	530B-4-9 530B-16-9		530B-24-2 530C-3-2
37139-99E40	530A-24		530B-25-9 530C-4-9		530C-15-2 530C-24-2
37141-98L00	530B-4-1 530B-16-1 530B-25-1		530C-16-9 530C-25-9		570A-6-2 570B-6-2
	530C-4-1 530C-16-1 530C-25-1	37141-98L90	530B-4-10 530B-16-10	37141-99E20	444A-7-3 444B-7-3
37141-98L10	530B-4-2 530B-16-2		530B-25-10 530C-4-10		444C-7-3 508A-4-3
	530B-25-2 530C-4-2 530C-16-2	37141-98LA0	530C-16-10 530B-4-11 530B-16-11		508B-4-3 508C-4-3 530A-3-3
37141-98L20	530C-25-2 530B-4-3 530B-16-3		530C-25-10 530B-4-11 530B-16-11		530A-21-3 530B-3-3
	530C-25-3 530C-4-3 530C-16-3		530C-4-11 530C-16-11 530C-25-11		530B-15-3 530B-24-3
	530C-25-3	37141-98LB0	530B-4-12 530B-16-12		530C-3-3 530C-15-3 530C-24-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	508B-5		326N-3		508C-8
	530A-4		326P-3		530A-12
	530A-22		326R-3		530A-27
	570A-7	37803-93J06	530A-9		570A-11
	570B-7	37803-98L00	530B-8		570B-11
37149-93J00	444A-9		530C-8	37832-98L00	530B-11
	444B-9	37805-88L00	530B-34		530C-11
	444C-9		530C-34	37835-91J00-YAY	444A-48
	508A-6	37805-93J00	530A-15		444B-48
	508B-6	37820-87L11	444A-10		444C-48
	530A-5		444B-10		570A-47
	530A-23		444C-10		570B-47
	570A-8		570A-9	37850-87L01	444B-14
	570B-8		570B-9		444C-14
37210-93J00	530A-17	37820-93J11	508A-8		570A-13
	530B-38		508B-8		570B-13
37212-93J00	530A-18		508C-6	37850-88L00	544A-4
	530B-39		530A-10	37850-88L40	530B-35
37721-88L01	545A-11		530A-25		530C-35
37721-93J00	326A-1	37820-98L00	530B-9	37850-92E27	517A-5
	326B-1		530B-18	37850-92J00	326A-11
	326C-1		530B-27		326B-11
	326D-1		530C-9		326D-11
	326E-1		530C-18		326E-11
	326F-1		530C-27		326F-11
	326G-1	37820-99E02	315A-6		326G-11
	326H-1		315B-2		326H-11
	326J-1		315C-10		326K-11
	326K-1	37823-92E02	444A-11		326L-11
	326L-1		444B-11		326M-11
	326M-1		444C-11		326N-11
	326N-1		508A-9		326P-11
	326P-1		508B-9	37850-96L00	326R-11
	326R-1		508C-7		508A-11
37721-93J91	508A-7		530A-11		508B-11
	508B-7		530A-26		508C-9
37721-95500	508C-5		570A-10	37851-88L90	444A-49
37725-88L00	518A-12		570B-10		444B-49
	326A-3	37823-98L00	530B-10		444C-49
	326B-3		530B-19		570A-48
	326C-3		530B-28		570B-48
	326D-3		530C-10	37852-87J00	444A-14
	326E-3		530C-19		444B-15
	326F-3		530C-28		444C-15
	326G-3	37825-99E10	530A-13		570A-14
	326H-3	37826-92J10	444A-12		570B-14
	326J-3		444B-12	37852-88L90	444B-50
	326K-3		444C-12		444C-50
	326L-3		508A-10		570A-49
	326M-3		508B-10		570B-49

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37853-88L90	444A-34	37862-87L00	530A-32		521B-3
	444B-35	37864-88L91	444A-51		521C-1
	444C-35		444B-52		521D-1
	570A-34		444C-52		530A-7
	570B-34		570A-51		530A-29
37854-88L90	444A-58	37865-88L00	570B-51		530B-7
	444B-59		530B-36		530B-21
	444C-59		530C-36		530B-30
	570A-72		530B-32		530C-7
	570B-73		530C-32		530C-21
37855-88L90	444A-57	38100-88L12	337A-3	38860-76F01	530C-30
	444B-58		337B-3		570A-12
	444C-58		337C-3		570B-12
	570A-71		337D-3		322A-10
	570B-72		337E-3		322A-11
37855-99E00	530A-16	38410-93J12	337F-3		322B-10
37856-92J00	326A-12		340A-1		322B-11
	326B-12		326A-6		322C-10
	326D-12		326B-6		322C-11
	326E-12		326D-6		322D-10
	326F-12		326E-6	39950-88L02	322D-11
	326G-12		326F-6		322E-10
	326H-12		326G-6		322E-11
	326K-12		326H-6		600A-20
	326L-12		326K-6		600B-20
	326M-12		326L-6		600C-11
	326N-12		326M-6		600D-16
	326P-12		326N-6		
	326R-12		326P-6		
		326A-13			326R-6
37857-92J01	326B-13	38415-93J00	326A-7	40000	
	326D-13		326B-7		
	326E-13		326D-7		
	326F-13		326E-7		
	326G-13		326F-7		
	326H-13		326G-7	41111-88L11-QTN	335D-1-3
	326K-13		326H-7		335G-1-3
	326L-13		326K-7		335D-1-2
	326M-13		326L-7		335G-1-2
	326N-13		326M-7		335D-1-1
	326P-13		326N-7	41111-88L11-YAY	335D-1-4
	326R-13		326P-7		335F-1
	37860-87L00	530A-31	326R-7		335G-1-1
	37860-98L00	530B-31	444A-13		335G-1-4
		530C-31	444B-13		335A-1-3
37861-87L11	444A-50		444C-13	41111-88L20-QTN	335A-1-2
	444B-51		508A-12		335A-1-1
	444C-51		508B-12		335A-1-4
	570A-50		508C-10		335C-1
	570B-50		521A-3		335E-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
41111-89J21-YAY	335B-1		336D-27		336H-1-2
41121-88L01-QTN	335D-2-3		336E-23	43111-88L50-YAY	336C-1-1
41121-88L01-Y5S	335G-2-3		336F-27		336C-1-6
	335D-2-2		336G-23		336D-1-1
	335G-2-2		336H-27		336D-1-8
	335D-2-1	41234-88L00	336C-28		336F-1-1
41121-88L01-YAY	335D-2-4		336D-28		336G-1-1
	335F-2		336E-24		336H-1-1
	335G-2-1		336F-28		336H-1-4
	335G-2-4		336G-24	43112-99E00	180A-12
41121-88L10-QTN	335A-2-3		336H-28		180B-12
41121-88L10-Y5S	335A-2-2	41270-89J11	336A-20	43114-88L00	336C-14
41121-88L10-YAY	335A-2-1		336B-16		336D-14
	335A-2-4		336C-24		336E-14
	335C-2		336D-24		336F-14
	335E-2		336E-20		336G-14
41121-89J15-YAY	335B-2		336F-24	43119-88L00	336H-14
	335A-3		336G-20		336C-11
	335B-3		336H-24		336D-11
	335C-3	41280-89J04	336A-21		336E-11
	335E-3		336B-17		336F-11
41130-88L10	335D-3		336A-1-7	43119-88L10	336G-11
	335F-3		336A-1-4		336H-11
	335G-3		336A-1-3		336C-12
	335A-15		336A-1-8		336D-12
	335B-15		336B-1		336E-12
	335C-15	43111-88L31-QTN	336A-1-5		336F-12
	335D-4		336A-1-2		336G-12
	335E-15		336A-1-1		336H-12
	335F-4		336A-1-6		336A-2
	335G-4		336C-1-7		336B-2
41161-94400	442A-1	43111-88L40-QTN	336D-1-9	43211-88L00	336C-2
	575A-2		336D-1-11		336D-2
41221-88L00	336C-23		336C-1-4		336E-2
	336D-23		336D-1-4		336F-2
	336E-19		336D-1-6		336G-2
41224-88L00	336F-23	43111-88L40-YAY	336C-1-3	43241-87J00	336H-2
	336G-19		336C-1-8		335B-16
	336H-23		336D-1-3		335E-16
	336C-25		336D-1-5		336B-22
	336D-25		336D-1-10		570A-82
	336E-21		336D-1-12	43415-88L00	336B-23
	336F-25		336E-1		570A-83
	336G-21		336F-1-2		336B-24
	336H-25		336G-1-2		570A-84
41226-97E00	336A-19	43111-88L50-QTN	336C-1-5		336B-25
	336B-15		336D-1-7	43513-88L00	570A-85
41230-97E10	336A-24		336H-1-3		336B-26
	336B-20		336C-1-2		570A-86
	336C-27		336D-1-2		336B-27
41231-88L01					

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
43516-88L00	570A-87	43755-88L00	336H-4-4	48000-88L40	337F-1
	336B-28		336A-11	48121-88L00	337C-21
	570A-88		336C-19		337B-8
43517-88L00	336B-29		336D-19	48121-88L10	337E-19
	570A-89		336F-19		337F-20
43711-89J10	336A-3	43761-88L01-YAY	336H-19	48121-89J10	337A-21
43711-97E11	336B-3		444A-1		337B-22
	336C-3		444B-1		339A-5
	336D-3		444C-1	48320-87J10	337A-4
	336E-3		570A-58		337B-4
43750-88L22-QTN	336F-3	43762-88L00	570B-58		337C-4
	336G-3		444A-75		337D-4
	336H-3		444B-76		337E-4
	336A-4-7		444C-77		337F-4
	336C-4-7		570A-59	48321-89J11	337A-22
	336D-4-9		570B-59		337B-23
43750-88L22-Y5S	336D-4-11	43768-88L00	444A-76		337C-22
	336A-4-4		444B-77		337D-23
	336C-4-4		444C-78		339A-6
	336D-4-4		570A-60	48321-89J20	337E-20
43750-88L22-YAY	336D-4-6		570B-60		337F-21
	336A-4-3	43770-99E03	444C-75	48325-89J00	337A-23
	336A-4-8		570B-69		337B-24
	336B-4	45260-89J01	339A-1		337C-23
	336C-4-3	45421-89J00	335A-4		337D-24
	336C-4-8		335B-4		339A-7
	336D-4-3		335C-4	48325-89J10	337E-21
	336D-4-5		335E-4		337F-22
	336D-4-10	45731-96312	336A-22	48326-87J00	337A-24
	336D-4-12		336B-18		337B-25
43750-88L32-QTN	336E-4		336C-29		337C-24
	336F-4-2		336D-29		337D-25
	336G-4-2		336E-25		337E-22
	336A-4-5		336F-29		337F-23
	336C-4-5		336G-25	48326-89J00	339A-8
43750-88L32-Y5S	336D-4-7		336H-29	48330-87J10	337A-5
	336H-4-3	47225-87J00	337A-20		337B-5
	336A-4-2		337B-21		337D-5
	336C-4-2	47225-88L00	337C-20		337E-5
	336D-4-2		337D-21	48330-87J20	337F-5
43750-88L32-YAY	336H-4-2		337E-18		337F-5
	336A-4-1		337F-19	48510-97E00	337A-6
	336A-4-6	47225-89J00	339A-2		337B-6
	336C-4-1	47226-89J00	339A-3		337C-6
	336C-4-6	47400-87J32	339A-4		337D-6
	336D-4-1	48000-88L18	337A-1	48510-97E10	337E-6
	336D-4-8		337C-1		337F-6
	336F-4-1	48000-88L22	337E-1	48541-87J10	337A-7
	336G-4-1	48000-88L30	337B-1		337B-7
	336H-4-1		337D-1		337C-7

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
48541-87J20	337D-7	48611-88L10	337B-16		401B-2
	337A-8		337D-16		401C-2
	337B-8		337F-14		401D-2
	337C-8	48612-88L00	337B-17		585A-9
	337D-8		337D-17	52111-88L00-QTN	405A-1-6
48551-88L00	337E-7		337F-15		405C-1-5
	337F-7	48681-87J11	337A-17		405D-1-7
	337A-9		337B-18	52111-88L00-Y5S	405A-1-2
	337B-9		337C-17		405C-1-2
	337C-9		337D-18		405D-1-2
	337D-9		337E-15	52111-88L00-YAY	405A-1-1
48551-88L10	337E-8		337F-16		405A-1-7
48553-88L00	337F-8	48862-87J20	337A-18		405C-1-1
	337A-10		337B-19		405C-1-6
	337B-10		337C-18		405D-1-1
	337C-10		337D-19		405D-1-8
	337D-10		337E-16	52111-88L10-QTN	405A-1-8
	337E-9		337F-17		405C-1-7
	337F-9	48862-88L00	337A-19		405D-1-9
48557-87J10	337A-11		337B-20		405D-1-11
	337B-11		337C-19		405E-1-3
	337C-11		337D-20	52111-88L10-Y5S	405A-1-4
	337D-11		337E-17		405B-1-2
	337E-10		337F-18		405C-1-4
	337F-10				405D-1-4
48571-88L01	337A-12	50000	337B-12	52111-88L10-YAY	405D-1-6
	337B-12		337C-12		405E-1-2
	337C-12		337D-12		405A-1-3
	337E-11				405A-1-9
	337F-11		51110-88L10-Y5S	401A-1-2	405A-1-10
48572-87L00	337A-13		401D-1-2		405B-1-1
	337B-13	51110-88L10-YAY	401A-1-1		405C-1-3
	337C-13		401B-1		405C-1-8
	337D-13		401C-1		405D-1-3
	337E-12		401D-1-1		405D-1-5
48582-97E01	337F-12	51122-88L00	401A-8		405D-1-10
	337A-14		401B-8		405D-1-12
	337B-14		401C-8		405E-1-1
	337C-14		401D-8		405E-1-4
	337D-14	51123-88L00	401A-9		405F-1
48583-87J10	337A-15		401B-9	52111-88L20-QTN	405J-1-3
	337B-15		401C-9	52111-88L20-Y5S	405J-1-2
	337C-15		401D-9	52111-88L20-YAY	405G-1
	337D-15		585A-10		405H-1-1
	337E-13	51170-88L00	401A-14		405J-1-1
	337F-13		401B-14		405J-1-4
48611-88L00	337A-16		401C-14	52111-88L30-YAY	405H-1-2
	337C-16		401D-14	52131-88L00-QTN	405D-7-3
	337E-14	51211-88L00	401A-2		405E-7-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
52131-88L00-Y5S	405D-7-2	54166-95J02	405J-15		405D-11-1
	405E-7-2		401A-19		405D-11-4
52131-88L00-YAY	405D-7-1		401B-19		405E-11-1
	405D-7-4		401C-19		405E-11-4
	405E-7-1		401D-19		405F-11
	405E-7-4		405A-12		405G-13
	405F-7		405B-12		405H-14
52131-88L12-QTN	405J-7-3		405C-12		405J-13-1
52131-88L12-Y5S	405J-7-2		405D-16		405J-13-4
52131-88L12-YAY	405G-7		405E-16	54221-88L20-QTN	405A-4-4
	405H-7		405F-16		405C-4-3
	405J-7-1		405G-18		405D-4-3
	405J-7-4		405H-19		405E-4-3
54114-90J10	401A-20		405J-18		405J-4-3
	401B-20		405A-10	54221-88L20-Y5S	405A-4-2
	401C-20	54167-87L01	405B-10		405B-4-2
	401D-20		405C-10		405C-4-2
54120-88L01	401C-17		405D-14		405D-4-2
	401D-17		405E-14		405E-4-2
54121-88L01	401A-23		405F-14		405J-4-2
	401B-23		405G-16	54221-88L20-YAY	405A-4-1
54123-88L01	401A-24		405H-17		405A-4-3
	401B-24		405J-16		405A-4-5
54124-88L20	401A-17		405A-11		405A-4-6
	401B-17		405B-11		405B-4-1
54130-88L00	401A-18	54180-88L01	405C-11		405C-4-1
	401B-18		405D-15		405C-4-4
	401C-18		405E-15		405D-4-1
	401D-18		405F-15		405D-4-4
54137-88L00	401A-12		405G-17		405E-4-1
	401B-12	54211-87J30-QTN	405H-18		405E-4-4
	401C-12		405J-17		405F-4
	401D-12		405A-7-4		405G-4
54151-88L01	405A-8		405C-7-3		405H-4
	405B-8		405D-11-3		405J-4-1
	405C-8	54211-87J30-Y5S	405E-11-3	54231-88L10-QTN	405J-4-4
	405D-12		405J-13-3		405A-5-4
	405E-12		405A-7-2		405C-5-3
	405F-12		405B-7-2		405D-5-3
	405G-14		405C-7-2		405E-5-3
	405H-15		405D-11-2	54231-88L10-Y5S	405J-5-3
	405J-14		405E-11-2		405A-5-2
54160-88L10	405A-9		405J-13-2		405B-5-2
	405B-9		405A-7-1		405C-5-2
	405C-9		405A-7-3		405D-5-2
	405D-13	54211-87J30-YAY	405A-7-5	54231-88L10-YAY	405E-5-2
	405E-13		405A-7-6		405J-5-2
	405F-13		405B-7-1		405A-5-1
	405G-15		405C-7-1		405A-5-3
	405H-16		405C-7-4		405A-5-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	405A-5-6	55181-95200	143B-38	55321-90J01	407F-5
	405B-5-1		407F-4		407G-5
	405C-5-1		407G-4	55332-87D12	407F-6
	405C-5-4		407A-17		407G-6
	405D-5-1		407B-17	55333-87D10	407F-7
	405D-5-4		407C-19		407G-7
	405E-5-1		407D-19	56120-90J02-QTN	220H-19-3
	405E-5-4		407E-19	56120-90J02-Y5S	220H-19-2
	405F-5		407F-28	56120-90J02-YAY	220E-19
	405G-5		407G-28		220F-19
	405H-5	55300-95500	407A-18		220G-19
	405J-5-1		407B-18		220H-19-1
	405J-5-4		407C-20		220H-19-4
55100-87J50-QTN	407A-1-7		407D-20	56120-94321-QTN	220A-20-3
	407A-1-9		407E-20		220C-20-3
	407C-1-3	55320-94900	407F-27		220D-20-3
	407D-1-3		407G-27	56120-94321-Y5S	220A-20-2
55100-87J50-Y5S	407A-1-2		335D-11		220B-20-2
	407A-1-4		335F-11		220C-20-2
	407A-1-6		111A-7-1		220D-20-2
	407C-1-2	55321-87J01	111B-7-1	56120-94321-YAY	220A-20-1
	407D-1-2		111C-7-1		220B-20-1
55100-87J50-YAY	407A-1-1		113A-8		220C-20-1
	407A-1-3		113B-8		220C-20-4
	407A-1-5		335A-6		220D-20-1
	407A-1-8		335B-6		220D-20-4
	407A-1-10		335C-6	56123-90J00	220E-20
	407B-1		335E-6		220F-20
	407C-1-1		335G-11		220G-20
	407C-1-4		337A-27		220H-20
	407D-1-1	55110-90J16-QTN	337B-28	56130-87E00	220E-27
	407D-1-4		337C-27		220F-27
	407E-1		337D-28		220G-27
	407G-1-3		337E-25		220H-27
55110-90J16-Y5S	407G-1-2		337F-26	56130-87J12-QTN	220A-26-3
55110-90J16-YAY	407F-1	55321-87J11	339A-9		220C-26-3
	407G-1-1		405G-11		220D-26-3
	407G-1-4		405H-12	56130-87J12-Y5S	220A-26-2
55122-88L00	220A-29		405J-11		220B-26-2
	220B-29		111A-7-2		220C-26-2
	220C-29	55125-90J01	111B-7-2		220D-26-2
	220D-29		111C-7-2	56130-87J12-YAY	220A-26-1
	407F-3		160E-22		220B-26-1
	407G-3		160F-22		220C-26-1
55125-94400	407A-4		160G-20		220C-26-4
	407B-4		407A-19		220D-26-1
	407C-4		407B-19		220D-26-4
	407D-4		407C-21	56145-99E01	407F-29
	407E-4		407D-21		407G-29
55127-87D00	143A-38		407E-21	57110-88L02	220A-1-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
57110-88L12	220C-1-1	57630-90J00	220F-12	58100-88L62-019	407C-11-6
	220A-1-2		220G-12		407D-11-6
	220B-1		220H-12		407E-11-6
	220C-1-2		407F-26		407A-9-7
57110-88L22	220D-1-1	57630-94301	407G-26	58100-88L72-019	407B-9-7
	220A-1-3		407A-16		407C-11-7
	220D-1-2		407B-16		407D-11-7
	220E-1-1		407C-18		407E-11-7
57110-88L30	220F-1	57631-95303	407D-18	58100-88LA0-019	407A-9-8
	220G-1-1		407E-18		407B-9-8
	220H-1		220A-19		407C-11-8
	220E-1-2		220B-19		407D-11-8
57130-94301	220G-1-2	57631-99E01	220C-19	58100-88LB0-019	407E-11-8
	405D-10		220D-19		407A-9-4
	405E-10		220E-14		407B-9-4
	405F-10		220F-14		407C-11-4
57133-88L01	405H-11	57632-95320	220G-14	58100-88LC0-019	407D-11-4
	220A-2		220H-14		407E-11-4
	220B-2		407A-11		407A-9-5
	220C-2		407B-11		407B-9-5
57133-90J02	220D-2	57633-90J02	407C-13	58100-88LD0-019	407C-11-5
	220E-2		407D-13		407D-11-5
	220F-2		407E-13		407E-11-5
	220G-2		407F-21		407A-9-1
57133-94400	220H-2	57633-94301	407G-21	58100-88LE0-019	407B-9-1
	220A-3		407A-12		407C-11-1
	220B-3		407B-12		407D-11-1
	220C-3		407C-14		407E-11-1
57300-88810	220D-3	57634-88L00	407D-14	58100-88LF0-019	407A-9-2
	220A-6		407E-14		407B-9-2
	220B-6		220A-16		407C-11-2
	220D-6		220B-16		407D-11-2
57300-88820	220C-6	57635-90J01	220C-16	58100-88LE0-019	407E-11-2
	220E-4		220D-16		407A-9-3
	220F-4		407F-22		407B-9-3
	220G-4		407G-22		407C-11-3
57610-88L10	220H-4	58100-87LA0-019	407F-19-1	58100-88LF0-019	407D-11-3
	220E-11		407G-19-1		407E-11-3
	220F-11		407F-19-2		407A-9-9
	220G-11		407G-19-2		407B-9-9
57610-94403	220H-11	58100-87LC0-019	407F-19-3	58105-90J00	407C-11-9
	220A-13		407G-19-3		407D-11-9
	220B-13		407F-19-6		407E-11-9
	220C-13		407G-19-6		407F-20
57621-87J03	220D-13	58100-87LH0-019	407F-19-5	58120-88L01	407G-20
	220A-14		407G-19-5		407A-10
	220B-14		407F-19-4		407B-10
	220C-14		407G-19-4		407C-12
57621-88L00	220D-14	58100-88L52-019	407A-9-6		407D-12
	220E-12		407B-9-6		407E-12

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
58200-88L30	407A-9-10	61412-88L00	420R-1-1	61435-88L60	420T-2
	407B-9-10		420S-1-1		420U-2
	407C-11-10		410A-11		420A-17-1
	407D-11-10		410B-11		420B-17-1
60000	407E-11-10	61422-88L30	420A-16-1	61435-88L70	420E-17-1
			420B-16-1		420H-17-1
			420E-16-1		420J-17-1
			420H-16-1		420M-17-1
61112-88L10	410A-1	61422-88L40	420J-16-1	61435-88L80	420N-17-1
	410B-1		420M-16-1		420P-17-1
	410A-24		420N-16-1		420A-17-2
	410B-24		420B-16-1		420B-17-2
61124-88L11	410A-2	61422-88L60	420A-16-2	61435-88LA0	420E-17-2
	410B-2		420B-16-2		420H-17-2
	410A-6		420H-16-2		420M-17-2
	410B-6		420J-16-2		420N-17-2
61134-88L11	430A-4	61422-88L70	420M-16-2	61435-88LB0	420P-17-2
	432A-8		420N-16-2		420C-16-2
	420A-1-1		420P-16-2		420D-16
	420B-1-1		420C-2-1		420F-16-2
61151-88L01	420E-1-1	61431-88L10-QTN	420F-2-1	61435-88LD0	420G-16-2
	420H-1-1		420G-2-1		420C-16-1
	420J-1-1		420K-2-1		420F-16-1
	420M-1-1		420R-2-1		420G-16-1
61188-88L01	420N-1-1	61431-88L10-Y5S	420S-2-1	61435-88LE0	420K-16-2
	420P-1-1		420A-2-2		420L-16
	420A-1-2		420B-2-2		420U-16
	420B-1-2		420E-2-2		420K-16-1
61400-88832-Y5S	420H-1-2	61431-88L10-YAY	420H-2-2	61435-88LF0	420R-16-2
	420J-1-2		420J-2-2		420S-16-2
	420M-1-2		420M-2-2		420T-16
	420N-1-2		420N-2-2		420R-16-1
61400-88840-YAY	420P-1-2	61438-88L01	420P-2-2	61435-88LH0	420S-16-1
	420C-1-2		420A-2-1		420A-3
	420D-1		420B-2-1		420B-3
	420F-1-2		420C-2-2		420C-3
61400-88850-QTN	420G-1-2	61438-88L01	420D-2	61438-88L01	420D-3
	420H-1-2		420E-2-1		420E-3
	420L-1		420F-2-2		420F-3
	420R-1-2		420G-2-2		420G-3
61400-88850-QTN	420S-1-2	61438-88L01	420H-2-1	61438-88L01	420H-3
	420T-1		420J-2-1		420J-3
	420U-1		420K-2-2		420K-3
	420C-1-1		420L-2		420L-3
61400-88850-QTN	420F-1-1	61438-88L01	420M-2-1	61438-88L01	420M-3
	420G-1-1		420N-2-1		420N-3
	420K-1-1		420P-2-1		420P-3
			420R-2-2		420R-3
			420S-2-2		420S-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61439-88L01	420T-3	61446-88L00	420R-14-1	61472-88L01	420N-18
	420U-3		420S-14-1		420P-18
	420A-4		420G-23-1		420R-17
	420B-4		420G-23-2		420S-17
	420C-4		420G-22-1		420T-17
	420D-4	61447-88L10	420G-22-2	61476-88L00	420U-17
	420E-4		420A-10-1		136A-10
	420F-4		420B-10-1		420A-6
	420G-4		420E-10-1		420B-6
	420H-4		420H-10-1		420C-6
	420J-4	61453-88L30	420J-10-1		420D-6
	420K-4		420M-10-1		420E-6
	420L-4		420N-10-1		420F-6
	420M-4		420P-10-1		420G-6
	420N-4		420A-10-2		420H-6
	420P-4		420B-10-2		420J-6
	420R-4		420E-10-2		420K-6
	420S-4		420H-10-2		420L-6
	420T-4		420J-10-2		420M-6
	420U-4		420M-10-2		420N-6
61443-88L20	420A-9-1	61453-88L40	420N-10-2		420P-6
	420B-9-1		420P-10-2		420R-6
	420E-9-1		420C-15-2		420S-6
	420H-9-1		420D-15		420T-6
	420J-9-1		420F-15-2		420U-6
	420M-9-1		420G-15-2	61494-88L02	136A-12
	420N-9-1		420K-15-2		420A-7
	420P-9-1		420L-15		420B-7
	420A-9-2		420R-15-2		420C-7
	420B-9-2		420S-15-2		420D-7
	420E-9-2	61453-88L50	420T-10		420E-7
	420H-9-2		420U-15		420F-7
	420J-9-2		420C-15-1		420G-7
	420M-9-2		420F-15-1		420H-7
	420N-9-2		420G-15-1		420J-7
61443-88L40	420P-9-2		420K-15-1		420K-7
	420C-14-2		420R-15-1		420L-7
	420D-14		420S-15-1		420M-7
	420F-14-2		420A-18		420N-7
	420G-14-2		420B-18		420P-7
	420K-14-2	61458-90J01	420C-17		420R-7
	420L-14		420D-17		420S-7
	420R-14-2		420E-18		420T-7
	420S-14-2		420F-17		420U-7
	420T-9		420G-17		420A-12
61443-88L50	420U-14		420H-18	61620-95J00	420B-12
	420C-14-1		420J-18		420C-10
	420F-14-1		420K-17		420D-10
	420G-14-1		420L-17		420E-12
	420K-14-1		420M-18		420F-10

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	420G-10	61821-88L20-QTN	410A-3-8	63210-88L00	570B-70
	420H-12		410B-3-1		444A-16
	420J-12		410A-4-9		444B-17
	420K-10		410A-4-11		444C-17
	420L-10		410A-4-4		570A-16
	420M-12	61821-88L20-Y5S	410A-4-6	63215-93110	570B-16
	420N-12		410A-4-3		444A-72
	420P-12		410A-4-5		444B-73
	420R-10		410A-4-10		444C-73
	420S-10		410A-4-12		570A-67
61631-88L10	420T-12	61821-88L30-QTN	410B-4-2	63221-88L00	570B-67
	420U-10		410A-4-7		444A-17
	420A-13		410A-4-2		444B-18
	420B-13		410A-4-1		444C-18
	420C-11		410A-4-8		570A-17
	420D-11	61831-88L10-QTN	410B-4-1	63223-92D00	570B-17
	420E-13		410A-7-3		444A-18
	420F-11		410A-7-2		444B-19
	420G-11		410A-7-1		444C-19
	420H-13		410A-7-4		570A-18
	420J-13	63002-88L17-YAY	410B-7	63225-88L00	570B-18
	420K-11		570B-1-1		444A-19
	420L-11		570B-1-2		444B-20
	420M-13		570A-1-1		444C-20
	420N-13		570A-1-2		570A-19
	420P-13	63110-88L25-YAY	444B-2-1	63227-93200	570B-19
	420R-11		444C-2-1		444A-20
	420S-11		444B-2-2		444B-21
	420T-13		444C-2-2		444C-21
	420U-11		444A-2-1		570A-20
61632-93J00	410A-13	63110-88L35-YAY	444A-2-2	63235-88L00	570B-20
	410B-13		444A-63		444A-21
	410A-16		444B-64		444B-22
	410B-16		444C-64		444C-22
	410A-14		570A-77		570A-21
61641-88L00	410B-14	63115-88L01	570B-78	63244-99J00	570B-21
	410A-22		444A-69		444A-52
	410B-22		444B-70		444B-53
	410A-3-9		444C-70		444C-53
	410A-3-11		570A-65		570A-52
61811-88L20-Y5S	410A-3-4	63121-88L10	570B-65	63245-99J00	570B-52
	410A-3-6		444A-15		444A-53
	410A-3-3		444B-16		444B-54
	410A-3-5		444C-16		444C-54
	410A-3-10		570A-15		570A-53
	410A-3-12	63132-88L00	570B-15	63246-88L00	570B-53
	410B-3-2		444A-74		444A-22
	410A-3-7		444B-75		444B-23
	410A-3-2		444C-76		444C-23
	410A-3-1		570A-69		570A-22

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
63247-99J00	570B-22	63272-87J00	570B-29	65770-90J13	430A-9
	444A-62		444A-26		432A-7
	444B-63		444B-27		444A-78
	444C-63		444C-27		444B-79
63248-99J00	570A-76	63273-87J00	570A-26	67200-88L01	444C-80
	570B-77		570B-26		570A-79
	444A-30		444A-27		570B-80
	444B-31		444B-28		544A-1
63250-88L00	444C-31	63274-87J00	444C-28	67200-93J34	545A-1
	570A-30		570A-27		517A-1
	570B-30		570B-27		518A-1
	444A-23		444A-32		508A-1
63251-87J00	444B-24	63610-88L00	444B-33	67200-93J70	508B-1
	444C-24		444C-33		508C-1
	570A-23		570A-32		544A-17
	570B-23		570B-32		517A-29
63251-88L90	444A-24	63611-88L00	444A-33	67220-95630	544A-7
	444B-25		444B-34		508A-13
	444C-25		444C-34		508B-13
	570A-24		570A-33		508C-11
63258-88L00	570B-24	63612-87J00	570B-33	67221-92E00	508A-15
	444A-56		444A-43		508B-15
	444B-57		444B-43		508C-13
	444C-57		444C-43		545A-8
63260-88L00	570A-70	63612-88L10	570A-42	67222-92E50	518A-7
	570B-71		570B-42		545A-2
	444A-59		444A-44		518A-2
	444B-60		444B-44		545A-3
63261-87J00	444C-60	63626-88L00	444C-44	67222-92E50	518A-6
	570A-73		570A-43		508A-16
	570B-74		570B-43		508B-16
	444A-25		444A-54		508C-14
63262-87J00	444B-26	65000-94L10	444B-55	67224-92E00	545A-9
	444C-26		444C-55		518A-8
	570A-25		570A-54		508A-50
	570B-25		570B-54		508B-50
63262-87J00	444A-31	65520-99I00	444A-35	67225-92E00	508C-48
	444B-32		444B-36		518A-25
	444C-32		444C-36		518A-9
	570A-31		570A-35		545A-15
63271-87J00	570B-31	65561-95D00	570B-35	67226-92E00	518A-14
	444A-28		432A-1		545A-16
	444B-29		432A-2		518A-23
	444C-29		432A-3		545A-24
63271-87J00	570A-28	65700-88L06	430A-1	67227-92E00	518A-17
	570B-28		432A-5		545A-18
	444A-29		432A-4		508A-17
	444B-30		430A-2		508B-17
63271-87J00	444C-30	65750-95501	432A-6	67228-92E00	508C-15
	570A-29		430A-3		545A-20

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67230-92E00	518A-19	67246-88L00	508C-21	67264-95600	508A-35
	545A-32		545A-36		508B-35
	518A-40		518A-34		508C-33
	545A-33		544A-20		508A-36
67231-92E00	518A-43	67251-88L00	517A-9	67267-96L00	508B-36
	508A-18		508A-24		508C-34
	508B-18		508B-24		545A-29
	508C-16		508C-22		508A-47
67232-92E50	518A-41	67251-92E50	545A-39	67269-92E01	508B-47
	508A-18		518A-35		508C-45
	508B-18		518A-38		544A-16
	508C-16		508A-25		545A-6
67232-95600	518A-27	67252-88L00	508B-23	67269-96L10	544A-25
	545A-26		508C-25		545A-47
	545A-22		508C-22		508A-37
	518A-21		545A-40		508B-37
67233-92E00	518A-28	67252-92E10	544A-13	67271-88L10	508C-35
	545A-27		518A-37		517A-25
	508A-30		508A-26		544A-15
	545A-12		508B-24		545A-42
67236-92E00	518A-31	67253-88L00	518A-39	67272-88L00	517A-28
	545A-28		517A-22		508A-38
	508B-19		517A-8		508B-38
	508C-17		508A-27		508C-36
67237-92E01	545A-31	67253-92E00	508B-27	67275-95600	517A-24
	545A-28		508C-25		544A-14
	508A-19		517A-11		544A-10
	508B-19		508A-28		517A-26
67238-88L00	508C-17	67254-92E50	508B-28	67281-88L00	517A-27
	545A-31		508C-26		508A-52
	518A-32		544A-9		508B-52
	508A-51		517A-12		508C-50
67238-96L00	508B-51	67255-96L00	508A-29	67286-92E00	518A-18
	508C-49		508B-29		545A-19
	518A-33		508C-27		545A-46
	545A-35		508A-31		517A-19
67239-92E00	518A-29	67257-88L00	508B-31	67287-92E00	517A-14
	545A-41		508C-18		544A-6
	545A-17		508A-32		517A-6
	518A-16		508B-32		544A-12
67241-88L00	545A-34	67257-92E00	508C-30	67288-92E00	517A-16
	518A-42		544A-3		508A-49
	508A-20		544A-2		508B-49
	508B-20		517A-10		508C-47
67241-99E11	508C-18	67261-88L00	508B-33	67288-94320	518A-5
	517A-13		508C-31		545A-7
	545A-38		444A-36		518A-36
	508A-21		544A-18		545A-37
67243-95600	508B-21	67261-92E50	508A-33	67291-92E00	
	508C-19		508B-33		
	508A-22		508C-31		
	508B-22		508B-33		
67244-95600	508C-20	67261-96L00	508B-33	67291-92E10	
	518A-22		508C-31		
	545A-23		444A-36		
	508A-23		544A-18		
67245-95600	508B-23	67264-88L00	544A-19	67291-92E10	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67292-87J00	444A-37 444B-37 444C-37 570A-36 570B-36	67298-92E50 67320-93J00	508C-43 517A-2 508A-55-1 508B-55-1 508C-52-1	67467-89J01	204F-18 204G-18 204A-21 204B-21 204C-21
67292-94300	508A-39 508B-39 508C-37 518A-3 545A-5	67320-93J10	515A-1-1 508A-55-2 508B-55-2 508C-52-2 515A-1-2	67500-88L00	204D-21 204E-21 204F-21 204G-21 544A-21
67294-92E00 67294-95600	518A-11 508A-40 508B-40 508C-38	67320-93J20	508A-55-3 508B-55-3 508C-52-3 515A-1-3	67700-93J00 67701-87J11	575A-1 442A-2 575A-3 442A-3
67295-92E10 67295-92E50 67296-88D10	517A-4 517A-18 517A-15 518A-24 545A-13 545A-30	67320-93J30	508A-55-4 508B-55-4 508C-52-4 515A-1-4	67721-87J00 67725-99E00	575A-4 442A-4 575A-5 442A-5
67296-88D20 67296-88D30 67296-88L00 67296-90J20	517A-17 517A-21 544A-5 508A-41 508B-41 508C-39	67320-93J50	508A-55-5 508B-55-5 508C-52-6 515A-1-6	67726-99E00 67728-99E00	575A-6 442A-6 575A-7 544A-8
67296-92E11	508B-14 508C-12 518A-13	67320-93J60	508A-55-6 508B-55-6 508C-52-7 515A-1-7	68111-88L00 68111-88L10	544A-11 420A-11 420B-11 420C-9
67296-92E20	518A-15 545A-14	67320-93J70	420D-9 508A-55-7 508B-55-7 508C-52-8		420E-11 420F-9 420G-9 420H-11
67296-92E30 67296-92E60 67296-94310 67296-95610	545A-44 544A-11 517A-3 508A-44 508B-44 508C-42	67320-93J80	508A-55-8 508B-55-8 508C-52-8 515A-1-8		420J-11 420K-9 420L-9 420M-11
67296-95630	508A-42 545A-43 508B-43 508C-41	67341-88L01	508A-55-9 508B-55-9 508C-52-9 515A-1-9		420N-11 420P-11 420R-9 420S-9
67296-96L00	508A-42 508B-42 508C-40		204A-16 204B-16 204C-16 204D-16 204E-16 204F-16 204G-16	69711-93E11	420T-11 420U-9 136A-11
67296-96L10	508A-34 508B-34 508C-32	67343-88L01	204A-18 204B-18 204C-18	70000	
67297-95600	508A-45 508B-45		204D-18 204E-18		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
77811-54GB0-0PG	508A-30 508B-30 508C-28		420G-20 420K-20-2 420L-20-2 420R-20-2 420T-20-2		326N-8 326P-8 326R-8 119A-12 111A-25
90000		99011-88LA0-059	420U-20-2 420C-20-4 420D-20-4 420K-20-4 420L-20-4	01550-0612A 01550-0612C	111B-25 111C-25 146A-16 180A-17 180B-17
99011-88L91-03B	420B-21-2 420C-20-5 420J-21-2 420K-20-5		420R-20-4 420S-20-2 420T-20-4		204A-14 204B-14 204C-14 204D-14
99011-88L91-059	420N-21-2 420R-20-5 420U-20-3 420A-21-2 420C-20-3 420D-20-3	00000			204E-14 204F-14 204G-14 322A-23 322B-23 322C-24
	420H-21-2 420K-20-3 420L-20-3 420M-21-2 420P-21 420R-20-3	01421-08607	124A-4 124B-4 124C-4 124D-4 124E-4 124F-4		322D-24 322E-23 301A-18 111A-27 111B-27 111C-27
99011-88L92-054	420S-20-1 420T-20-3 420A-21-1 420B-21-1 420C-20-1 420D-20-1	01547-0616C	124A-12 124B-12 124C-12 124D-12 124E-12 124F-12	01550-06167 01550-0616C	163A-5 163B-5 163C-5 204A-3 204A-17
	420E-21 420F-20-1 420H-21-1 420J-21-1 420K-20-1 420L-20-1	01547-0625C	111A-18 111B-18 111C-18		204B-3 204B-17 204C-3
	420M-21-1 420N-21-1 420R-20-1 420T-20-1 420U-20-1	01547-0640A 01547-0645C	175A-3 111A-19 111B-19 111C-19		204C-17 204D-3 204D-17 204E-3
99011-88LA0-03B	420S-9 420T-11 420U-9 136A-11	01550-06127	303A-11 326A-8 326B-8 326D-8 326E-8 326F-8		204F-17 204G-3 204G-17 303A-9
99011-88LA0-054	420R-20-6 420U-20-4 420C-20-2 420D-20-2 420F-20-2		326G-8 326H-8 326K-8 326L-8 326M-8	01550-0620A 01550-0620C	119A-10 124A-15 124B-15 124C-15 124D-15

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01550-0625C	124E-15	01550-08457	124E-6	03522-05169	530C-29
	124F-15		124F-6		530C-33
	162A-7		111A-12		530C-37
	310A-8		111B-12		444A-61
01550-0630C	136A-8	01550-0845A	111C-12	03542-05169	444B-62
	146A-2		401A-4		444C-62
	310A-2		401B-4		570A-75
	136A-2		401C-4		570B-76
	143A-27	01550-0885A	401D-4	03542-06169	410A-12
	143B-27		401A-5		410B-12
	204A-4		401B-5		420A-5
	204B-4		401C-5		420B-5
	204C-4	01570-06167	401D-5		420C-5
	204D-4		204A-20		420D-5
	204E-4		204B-20		420E-5
	204F-4		204C-20		420F-5
01550-0640C	204G-4		204D-20		420G-5
	407F-31		204E-20		420H-5
	407G-31		204F-20		420J-5
	163A-12		204G-20		420K-5
01550-0645C	163B-12	01570-0616A	175A-7		420L-5
	163C-12	02112-0408A	143A-15		420M-5
	163A-4	02112-0612A	111C-21		420N-5
	163B-4	02112-06307	303A-12		420P-5
01550-0820C	163C-4	02112-34167	124A-9		420R-5
	111A-9		124B-9		420S-5
	111B-9		124C-9		420T-5
	111C-9		124D-9		420U-5
	113A-2	02142-0408B	124E-9	03542-06209	136A-4
	113B-2		124F-9		175A-4
	163A-6		143A-16		111A-13
	163B-6		111A-21		111B-13
01550-0825A	163C-6	03112-0630B	111B-21	04221-04089	111C-13
	401A-10		501A-25		116A-7
	401B-10		501B-23		136A-9
	401C-10		530A-28		121A-6
01550-0830C	401D-10	03122-05169	530A-14	08113-62090	144A-5
	124A-5	03142-04309	160A-17		144B-5
	124B-5		160B-17		220E-24
	124C-5		160C-17		220F-24
	124D-5	03142-05169	160D-17	08211-20263	220G-24
	124E-5		530B-6		220H-24
	124F-5		530B-12		220A-12
	301A-19		530B-20		220B-12
01550-08407	113A-6		530B-29		220C-12
	113B-6		530B-33		220D-12
	124A-6		530B-37		220A-10-6
	124B-6		530C-6		220B-10-6
01550-0840C	124C-6		530C-12	08211-35451	220C-10-6
	124D-6		530C-20		220D-10-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
08221-35455	220A-10-1	09100-12093	335F-7-2	09108-08254	405D-8
	220B-10-1		335G-7-2		405E-8
	220C-10-1		335A-8-1		405F-8
	220D-10-1		335B-8-1		336A-12
08221-35456	220A-10-4		335C-8-1		336C-20
	220B-10-4		335D-7-1		336D-20
	220C-10-4		335E-8-1		336F-20
	220D-10-4		335F-7-1		336H-20
08310-00067	322A-17	09103-05026	335G-7-1	09116-06121	162A-3
	322B-17		410A-23		180A-8
	322C-18		410B-23		180B-8
	322D-18		315A-5		335D-12
08316-10087	322E-17	09103-06093	315C-9	09116-06127	335F-12
	322A-2		111A-3		410A-15
	322B-2		111B-3		410B-15
	322C-2		111C-3		310A-4
	322D-2	09103-06281	111A-8	09116-06202	160A-15
	322E-2		111B-8		160B-15
	124A-7		111C-8		160C-15
	124B-7		113A-9		160D-15
	124C-7		113B-9	09116-06237	160E-14
	124D-7		335A-7		160F-14
	124E-7		335B-7		336A-23
	124F-7		335C-7		336B-19
08321-01067	322A-18		335E-7	09116-08122	336B-30
	322B-18		335G-12		444C-81
	322C-19		337A-28		570A-80
	322D-19		337B-29		570B-81
08331-3115A	322E-18		337C-28		220A-25
	206A-12		337D-29		220B-25
	206B-12		337E-26		220C-25
	206C-12		337F-27		220D-25
	206D-12	08331-41309	339A-12	09116-08131	220E-26
	210A-20		405G-12		220F-26
	220A-28		405H-13		220G-26
	220B-28		405J-12		220H-26
	220C-28	09103-10189	121A-4		405G-8
	220D-28		303A-2		405H-8
	407F-8		303A-7		405J-8
	407G-8		335D-13		407A-8
09100-06184	339A-10	09106-10065	335F-13		407B-8
	508A-46		335G-13		407C-8-1
	508B-46		160A-7		407C-8-2
	508C-44		160B-7		407D-8
09100-08232	119A-5	09108-06143	160C-7		407E-8
	335A-8-2		160D-7		335D-5
	335B-8-2		160A-8		335F-5
	335C-8-2		160B-8		335G-5
09100-08260	335D-7-2	09108-06144	160C-8	09116-08137	407F-9
	335E-8-2		160D-8		407G-9

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	444A-65		405H-2		336E-26
	444B-66		405H-6		336F-9
	444C-66		405J-2		336F-30
	570A-61		405J-6		336G-9
	570B-61	09117-06031	210A-8		336G-26
09116-08159	401A-3	09117-08109	407A-5		336H-9
	401B-3		407B-5	09125-06067	336H-30
	401C-3		407C-5		336C-13
	401D-3		407D-5		336D-13
09116-08174	410A-8		407E-5		336E-13
	410B-8	09117-08110	220E-30		336F-13
09116-08178	180A-3		220F-30		336G-13
	180B-3		220G-30		336H-13
09116-10124	180A-13		220H-30	09126-06006	545A-25
	180B-13	09117-10039	407F-11	09126-06015	444A-38
09116-10134	405G-9		407G-11		444B-38
	405H-9	09125-04004	518A-26		444C-38
	405J-9	09125-04021	517A-7		570A-37
09116-10150	407F-10	09125-05042	518A-20		570B-37
	407G-10		545A-21	09131-05004	530A-33
	444A-73	09125-05046	160A-19	09132-04034	160E-17
	444B-74		160B-19		160F-17
	444C-74		160C-19		160G-16
	570A-68		160D-19	09136-06148	410A-5-1
	570B-68		160E-13		410A-5-2
09116-10179	337A-26		160F-13		410A-5-3
	337B-27		160G-13		410B-5-1
	337C-26		315C-3		410B-5-2
	337D-27	09125-05047	444A-42	09137-04004	326A-2
	337E-24		444B-42		326B-2
	337F-25		444C-42		326C-2
09116-10181	339A-11		570A-41		326D-2
	401A-13		570B-41		326E-2
	401B-13	09125-05048	315A-3		326F-2
	401C-13	09125-05050	336A-10		326G-2
	401D-13		336B-10		326H-2
	405A-2		336C-10		326J-2
	405A-6		336D-10		326K-2
	405B-2		336E-10		326L-2
	405B-6		336F-10		326M-2
	405C-2		336G-10		326N-2
	405C-6		336H-10		326P-2
	405D-2	09125-05135	544A-22		326R-2
	405D-6	09125-06063	336A-9	09140-05005	163A-10
	405E-2		336B-9		163B-10
	405E-6		336C-9		163C-10
	405F-2		336C-30		544A-24
	405F-6		336D-9	09140-06020	339A-13
	405G-2		336D-30		508A-48
	405G-6		336E-9		508B-48

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	508C-46	09159-12014	335A-9		204G-10
	518A-10		335B-9		204G-22
09140-08016	545A-10		335C-9	09160-06084	143A-29
	407C-9		335D-8		143B-29
	407D-9		335E-9	09160-06085	407F-12
	407E-9		335F-8		407G-12
09140-12034	220A-7		335G-8	09160-06094	124A-16
	220B-7		401A-21		124B-16
	220C-7		401B-21		124C-16
	220D-7		401C-21		124D-16
09140-14024	220E-5		401D-21		124E-16
	220F-5		405A-13		124F-16
	220G-5		405B-13	09160-06104	517A-20
	220H-5		405C-13	09160-08082	407C-10
09141-18005	407A-13		405D-17		407D-10
	407B-13		405E-17		407E-10
	407C-15		405F-17	09160-08122	210A-11
	407D-15		405G-19	09160-08123	119A-6
	407E-15		405H-20	09160-09010	210A-10
	407F-23		405J-19	09160-09015	210A-9
	407G-23		444A-66	09160-10082	335A-14
09159-06084	420A-8		444B-67		335B-14
	420B-8		444C-67		335C-14
	420C-8		570A-62		335D-14
	420D-8		570B-62		335E-14
	420E-8	09159-22006	335A-10		335F-14
	420F-8		335B-10		335G-14
	420G-8		335C-10	09160-10093	121A-5
	420H-8		335D-6	09160-10139	337A-29
	420J-8		335E-10		337B-30
	420K-8		335F-6	09160-10165	336A-14
	420L-8		335G-6		336C-22
	420M-8	09160-05024	545A-45		336D-22
	420N-8	09160-05029	315A-4		336F-22
	420P-8		544A-23		336H-22
	420R-8	09160-06047	163A-11	09160-12066	335A-5
	420S-8		163B-11		335B-5
	420T-8		163C-11		335C-5
	420U-8	09160-06055	204A-10		335E-5
09159-08059	336B-31		204A-22		444A-67
	570A-90		204B-10		444B-68
09159-10050	335A-13		204B-22		444C-68
	335B-13		204C-10		570A-63
	335C-13		204C-22		570B-63
	335E-13		204D-10	09160-12110	401A-22
	336A-13		204D-22		401B-22
	336C-21		204E-10		401C-22
	336D-21		204E-22		401D-22
	336F-21		204F-10		405A-14
	336H-21		204F-22		405B-14

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	405C-14		220C-11-4		407G-13
	405D-18		220D-11-4	09168-12012	180A-4
	405E-18	09160-22022	220A-11-5		180B-4
	405F-18		220B-11-5	09169-06062	310A-5
	405G-20		220C-11-5	09169-06075	143A-28
	405H-21		220D-11-5		143B-28
09160-12124	405J-20	09160-22023	220A-11-6	09169-08050	410A-9
	444A-68		220B-11-6		410B-9
	444B-69		220C-11-6	09169-31001	220E-32
	444C-69		220D-11-6		220F-32
09160-12126	570A-64	09160-39002	336A-17		220G-32
	570B-64		336B-13		220H-32
	335A-12		336C-17	09180-06198	144A-6
	335B-12		336D-17		144B-6
	335C-12		336E-17	09181-25030	220E-17
	335D-9		336F-17		220F-17
	335E-12		336G-17		220G-17
	335F-9		336H-17		220H-17
	335G-9	09160-39003	336A-15	09181-28015	220E-10-1
09160-12128	335A-11		336B-11		220F-10-1
	335B-11		336C-15		220G-10-1
	335C-11		336D-15		220H-10-1
	335D-10		336E-15	09181-28016	220E-10-2
	335E-11		336F-15		220F-10-2
	335F-10		336G-15		220G-10-2
	335G-10		336H-15		220H-10-2
09160-13014	410A-17	09161-08011	336B-32	09181-28017	220E-10-3
	410B-17		570A-91		220F-10-3
09160-14065	303A-3	09163-06001	444A-39		220G-10-3
09160-18028	407A-15		444B-39		220H-10-3
	407B-15		444C-39	09181-28018	220E-10-4
	407C-17		570A-38		220F-10-4
	407D-17		570B-38		220G-10-4
	407E-17	09164-13010	444A-70		220H-10-4
	407F-24		444B-71	09181-28019	220E-10-5
	407G-24		444C-71		220F-10-5
09160-22018	220A-11-1		570A-66		220G-10-5
	220B-11-1		570B-66		220H-10-5
	220C-11-1	09164-14008	410A-18	09181-28020	220E-10-6
	220D-11-1		410B-18		220F-10-6
09160-22019	220A-11-2	09164-31001	220E-33		220G-10-6
	220B-11-2		220F-33		220H-10-6
	220C-11-2		220G-33	09181-30186	220A-9-1
	220D-11-2		220H-33		220B-9-1
09160-22020	220A-11-3	09168-10022	407A-7		220C-9-1
	220B-11-3		407B-7		220D-9-1
	220C-11-3		407C-7	09181-30187	220A-9-2
	220D-11-3		407D-7		220B-9-2
09160-22021	220A-11-4		407E-7		220C-9-2
	220B-11-4		407F-13		220D-9-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-30188	220A-9-3		220C-8-10	09181-41006	220E-6-6
	220B-9-3		220D-8-10		220F-6-6
	220C-9-3	09181-35101	220A-8-1		220G-6-6
	220D-9-3		220B-8-1		220H-6-6
09181-30190	220A-9-4		220C-8-1	09181-41008	220E-6-8
	220B-9-4		220D-8-1		220F-6-8
	220C-9-4	09181-35110	220A-8-11		220G-6-8
	220D-9-4		220B-8-11		220H-6-8
09181-30192	220A-9-5		220C-8-11	09181-41009	220E-6-9
	220B-9-5		220D-8-11		220F-6-9
	220C-9-5	09181-35131	220A-10-2		220G-6-9
	220D-9-5		220B-10-2		220H-6-9
09181-31001	220E-31		220C-10-2	09181-41010	220E-6-10
	220F-31		220D-10-2		220F-6-10
	220G-31	09181-35132	220A-10-3		220G-6-10
	220H-31		220B-10-3		220H-6-10
09181-33001	220A-8-2		220C-10-3	09181-41012	220E-6-12
	220B-8-2		220D-10-3		220F-6-12
	220C-8-2	09181-35136	220A-10-5		220G-6-12
	220D-8-2		220B-10-5		220H-6-12
09181-33002	220A-8-3		220C-10-5	09181-41013	220E-6-13
	220B-8-3		220D-10-5		220F-6-13
	220C-8-3	09181-40186	220E-6-1		220G-6-13
	220D-8-3		220F-6-1		220H-6-13
09181-33003	220A-8-4		220G-6-1	09181-41014	220E-6-14
	220B-8-4		220H-6-1		220F-6-14
	220C-8-4	09181-40190	220E-6-7		220G-6-14
	220D-8-4		220F-6-7		220H-6-14
09181-33004	220A-8-5		220G-6-7	09181-45003	220E-9-1
	220B-8-5		220H-6-7		220F-9-1
	220C-8-5	09181-40195	220E-6-11		220G-9-1
	220D-8-5		220F-6-11		220H-9-1
09181-33005	220A-8-6		220G-6-11	09181-45004	220E-9-2
	220B-8-6		220H-6-11		220F-9-2
	220C-8-6	09181-41002	220E-6-2		220G-9-2
	220D-8-6		220F-6-2		220H-9-2
09181-33006	220A-8-7		220G-6-2	09181-45005	220E-9-3
	220B-8-7		220H-6-2		220F-9-3
	220C-8-7	09181-41003	220E-6-3		220G-9-3
	220D-8-7		220F-6-3		220H-9-3
09181-33007	220A-8-8		220G-6-3	09181-45006	220E-9-4
	220B-8-8		220H-6-3		220F-9-4
	220C-8-8	09181-41004	220E-6-4		220G-9-4
	220D-8-8		220F-6-4		220H-9-4
09181-33008	220A-8-9		220G-6-4	09181-45007	220E-9-5
	220B-8-9		220H-6-4		220F-9-5
	220C-8-9	09181-41005	220E-6-5		220G-9-5
	220D-8-9		220F-6-5		220H-9-5
09181-33009	220A-8-10		220G-6-5	09181-45008	220E-9-6
	220B-8-10		220H-6-5		220F-9-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-45009	220G-9-6	09202-06023	220C-15	09205-02004	407E-16
	220H-9-6		220D-15		407F-25
	220E-9-7		405D-9		407G-25
	220F-9-7		405E-9		206A-8
	220G-9-7		405F-9		206B-8
09181-50020	220H-9-7	09202-06025	220A-30	09205-02006 09205-02013	206C-8
	220E-8-1		220B-30		206D-8
	220F-8-1		220C-30		210A-12
	220G-8-1		220D-30		206A-6
	220H-8-1		220A-31		206B-6
09181-50021	220E-8-2	09202-06027	220B-31	09205-03019	206C-6
	220F-8-2		220C-31		206D-6
	220G-8-2		220D-31		220A-4
	220H-8-2		160E-15		220B-4
	220E-8-3		160F-15		220C-4
09181-50022	220F-8-3	09202-06031	160G-14	09205-03021	220D-4
	220G-8-3		405G-10		206A-7
	220H-8-3		405H-10		206B-7
	220E-8-4		405J-10		206C-7
	220F-8-4		220E-13		206D-7
09181-50023	220G-8-4	09202-07002	220F-13	09205-03051	210A-13
	220H-8-4		220G-13		336A-25
	220E-8-5		220H-13		336B-21
	220F-8-5		401A-6		111A-4
	220G-8-5		401A-7		111B-4
09181-50024	220H-8-5	09202-08006	401A-11	09206-08001	111C-4
	220E-8-6		401B-6		407F-30
	220F-8-6		401B-7		407G-30
	220G-8-6		401B-11		113A-5
	220H-8-6		401C-6		113B-5
09181-50025	220E-8-7	09202-08006	401C-7	09206-13019	220E-16
	220F-8-7		401C-11		220F-16
	220G-8-7		401D-6		220G-16
	220H-8-7		401D-7		220H-16
	220E-8-8		401D-11		420A-15
09181-50026	220F-8-8	09209-12007	405A-3	09229-04005	420B-15
	220G-8-8		405B-3		420C-13
	220H-8-8		405C-3		420D-13
	220E-8-9		405D-3		420E-15
	220F-8-9		405E-3		420F-13
09181-50027	220G-8-9	09202-04005	405F-3	09229-04005	420G-13
	220H-8-9		405G-3		420H-15
	220E-8-10		405H-3		420J-15
	220F-8-10		405J-3		420K-13
	220G-8-10		407F-14		420L-13
09181-50028	220H-8-10	09204-03003	407G-14	09229-04005	420M-15
	410A-19		407A-14		420N-15
	410B-19		407B-14		420P-15
	220A-15		407C-16		420R-13
	220B-15		407D-16		420S-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09229-04018	420T-15	09263-22039	220D-21	09280-46004	220E-28
	420U-13		407A-2		220F-28
	420A-14		407B-2		220G-28
	420B-14		407C-2		220H-28
	420C-12		407D-2		210A-17
09229-04018	420D-12	09263-28016	407E-2	09280-69001 09280-75001	220A-24
	420E-14		407F-2		220B-24
	420F-12		407G-2		220C-24
	420G-12		220E-21		220D-24
	420H-14		220F-21		220E-22
09229-04018	420J-14	09263-28047	220G-21	09280-97001	220F-22
	420K-12		220H-21		220G-22
	420L-12		220A-5		220H-22
	420M-14		220B-5		220A-27
	420N-14		220C-5		220B-27
09229-04018	420P-14	09265-20015	220D-5	09282-17005	220C-27
	420R-12		220E-3		220D-27
	420S-12		220F-3		401A-16
	420T-14		220G-3		401B-16
	420U-12		220H-3		401C-16
09248-10008	407A-6	09265-25046	407A-3	09282-17011	401D-16
	407B-6		407B-3		220E-29
	407C-6		407C-3		220F-29
	407D-6		407D-3		220G-29
	407E-6		407E-3		220H-29
09248-10008	407F-15	09265-30004	220E-7	09282-22007	220E-23
	407G-15		220F-7		220F-23
	180A-5		220G-7		220G-23
	180B-5		220H-7		220H-23
	326C-8		206A-3		336A-16
09248-12009	326J-8	09280-08005	206B-3	09282-39001	336B-12
	430A-5		206C-3		336C-16
	432A-9		206D-3		336D-16
	206A-14		210A-15		336E-16
	206B-14		180A-16		336F-16
09250-40002	206C-14	09280-09008	180B-16	09282-28002	336G-16
	206D-14		206A-4		336H-16
	210A-14		206B-4		116A-11
	444A-55		206C-4		210A-18
	444B-56		206D-4		121A-15
09251-07003	444C-56	09280-11001	175A-6	09289-05012 09289-22007	220A-22
	570A-55		210A-16		220B-22
	570B-55		111A-6		220C-22
	220A-23		111B-6		220D-22
	220B-23		111C-6		410A-20
09260-10005	220C-23	09280-12008	146A-3	09306-13007	410B-20
	220D-23		111A-15		144A-3
	220A-21		111B-15		144B-3
	220B-21		111C-15		322A-6
	220C-21		162A-4		322B-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09320-08517	322C-6	09385-06012	204A-11		326G-4
	322D-6		204A-23		326H-4
	322E-6		204B-11		326J-4
	143A-34		204B-23		326K-4
	143B-34		204C-11		326L-4
09320-09016	310A-6		204C-23	09407-14403	326M-4
09320-09059	143A-30		204D-11		326N-4
	143B-30		204D-23		326P-4
09320-09501	136A-3		204E-11		326R-4
09320-11023	410A-10		204E-23		407F-18
	410B-10		204F-11		407G-18
09343-70503-080	146A-12		204F-23		322A-19
09352-50003-770	143A-31		204G-11		322B-19
	143B-31		204G-23		322C-20
09352-50006-600	162A-12		220E-25		322D-20
	507A-2	09387-52001	220F-25	09407-14407	322E-19
	507A-3		220G-25		315A-9
09352-50901-600	410A-21		220H-25		315C-16
	410B-21		143A-32		322A-20
09352-70104-600	204A-19		143B-32		322B-20
	204B-19	09401-08412	162A-14		322C-21
	204C-19		507A-5		322D-21
	204D-19		162A-15		322E-20
	204E-19		432A-11		326A-14
	204F-19		146A-6		326B-14
	204G-19	09401-08413	146A-18		326D-14
09355-40805-600	407F-16		430A-7		326E-14
	407G-16		144A-8		326F-14
09359-50901-980	162A-13		144B-8		326G-14
09362-09008	407F-17		111A-23		326H-14
	407G-17	09401-15414	111B-23		326K-14
09367-06006	507A-4		111C-23		326L-14
09367-08001	430A-6		162A-9		326M-14
	432A-10		315A-7		326N-14
09380-12002	337A-25		315C-13		326P-14
	337B-26	09403-11320	146A-17		326R-14
	337C-25		315C-14		501A-6
	337D-26		315C-17		501A-18
	337E-23		303A-10		501B-6
	337F-24		111A-24		501B-18
	339A-14	09403-11321	111B-24	09407-18402	322A-24
09380-38003	336A-18		111C-24		322B-24
	336B-14		530A-8		322C-25
	336C-18		530A-30		322D-25
	336D-18		326A-4		322E-24
	336E-18	09407-08401	326B-4	09407-25402	410A-25
	336F-18		326C-4		410B-25
	336G-18		326D-4		507A-7
	336H-18		326E-4		143A-35
09381-18002	116A-4		326F-4		143B-35

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09408-00121	143A-36	09440-12027	220H-15		322B-13
09408-00145	143B-36		444A-40		322C-13
	143A-37		444B-40		322D-13
	143B-37		444C-40		322E-13
	146A-19		570A-39		111A-28
09408-00174	144A-9	09440-40002	570B-39	09482-00446	111B-28
	144B-9		220A-18		111C-28
09408-00175	162A-16		220B-18		420A-19
09408-00184	326A-5		220C-18		420B-19
	326B-5		220D-18		420C-18
	326C-5	09440-49004	220E-18		420D-18
	326D-5		220F-18		420E-19
	326E-5		220G-18		420F-18
	326F-5		220H-18		420G-18
	326G-5		336C-31		420H-19
	326H-5	09443-10043	336D-31		420J-19
	326J-5		336E-27		420K-18
	326K-5		336F-31		420L-18
	326L-5		336G-27		420M-19
	326M-5		336H-31		420N-19
	326N-5	09471-12028	501A-4		420P-19
	326P-5		501B-4		420R-18
09409-05312-6GS	326R-5		501A-21		420S-18
	430A-8		501A-23		420T-18
	432A-12		501B-21		420U-18
09420-04006	160A-20	09471-12103	501A-9		
	160B-20		501A-13		
	160C-20		501A-15		
	160D-20		501A-19		
	303A-4		501B-9		
09420-04008	160E-16		501B-13		
09420-04009	160F-16		501B-15		
	160G-15		501B-19		
09440-06037	444A-60		501A-2		
	444B-61		501B-2		
	444C-61	09481-10501	508A-54		
	570A-74		508B-54		
	570B-75		521A-5		
09440-07033	210A-19		521C-3		
09440-07078	206A-15		322A-12		
	206B-15	09481-15504	322B-12		
	206C-15		322C-12		
	206D-15		322D-12		
09440-08043	220A-17		322E-12		
	220B-17		322A-14		
	220C-17	09481-30403	322B-14		
	220D-17		322C-14		
09440-11020	220E-15		322D-14		
	220F-15		322E-14		
	220G-15		322A-13		

SUZUKI DF40A/DF50A/DF60A PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material Development Group, Automobile & Motorcycle Service Engineering Dept.
300 Takatsuka, Minami, Hamamatsu, Japan

SUZUKI MOTOR CORPORATION