

SUZUKI

PARTS CATALOGUE

DF350A/325A /300B

DF350A
DF325A
DF300B



OUTBOARD MOTOR

020 021 022

2021-5

E11/E40/E03/E01

E11 – NORGE

1ST EDITION

This part catalogue supersedes all the following part catalogue with immediate effect

Model of catalogue	Parts catalogue No.
DF350A/325A/300B_021	9900B-45468

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF350A/325A/300B production start from 2019 to 2021.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	X, XX	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 35001F-123456	PTT	: Power trim and tilt
123456~	: From E. NO. 35001F-123456		

12 x 34 x 5.6..... Figures in the description column
| | | show the dimensions of parts.
ID OD T(or W, L)

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

↔12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE No.
DF350A_020	E01	35001F	X, XX	YAY, Y5S	35001F-040001~
DF350A_020	E03	35001F	X, XX	YAY, Y5S	35001F-040001~
DF350A_021	E11	35001F	X, XX	YAY, QTN, QUA	35001F-140001~
DF350A_022	E11	35001F	X, XX	YAY, QTN	35001F-240001~
DF325A_020	E01, E40	32501F	X, XX	YAY, Y5S	32501F-040001~
DF325A_021	E01, E40	32501F	X, XX	YAY, QTN	32501F-140001~
DF325A_022	E01, E40	32501F	X, XX	YAY, QTN	32501F-240001~
DF300B_020	E11	30003F	X, XX	YAY, Y5S	30003F-040001~
DF300B_021	E11	30003F	X, XX	YAY, QTN	30003F-140001~
DF300B_022	E11	30003F	X, XX	YAY, QTN	30003F-240001~

PREFACE

Quand il devient nécessaire de remplacer des pièces sur SUZUKI MOTEURS HORSBOARD toujours utiliser les PIECES D'ORIGINE SUZUKI qui ont été soumises à des contrôles de qualité sévères leur garantissant qualité et performance impeccables.

Ce catalogue de pièces détachées couvre la liste de toutes les pièces de rechange pour SUZUKI DF350A/325A/300B production start from 2019 to 2021.

INSTRUCTIONS POUR UTILISER LE CATALOGUE

1. DIMENSIONS

Les dimensions des pièces dans ce catalogue sont indiquées en unités de millimètres.

2. ABREVIATIONS

Les abréviations utilisées dans ce catalogue sont les suivantes:

AR	: Comme requis	NT	: Nombre de dents
ASSY	: Assemblage	OPT	: Sur option
E. NO.	: Numéro du moteur	OS	: Sur-dimensionné
F. NO.	: Numéro du chfssis	T	: Epaisseur
ID	: Diamètre intérieur	US	: Sous-dimensionné
OD	: Diamètre extérieur	W	: Largeur
L	: Longueur		

LH(PORT) : Côté gauche

RH(STBD) : Côté droit

~123456 : Jusqu'à E. NO. 35001F-123456

123456~ : Depuis E. NO. 35001F-123456

12 x 34 x 5.6..... Les chiffres dans la colonne

| | | remarques montrent les dimensions

ID OD T(or W, L) des pièces comme suit.

-12345-56781 (N° de pièces) : indique que le numéro des pièces a été échangé en 12345-56781 et que les nouvelles pièces sont interchangeables avec les anciennes, mais que celles-ci ne sont pas interchangeables avec les nouvelles.

-12345-56781 (N° de pièces) : indique que les anciennes et nouvelles pièces sont interchangeables les unes avec les autres et sont utilisables chacune.

3. PIECES INTERNES DE L'ASSEMBLAGE

Les numéros de pièces qui comportent un point (.) avant la désignation de pièce détachée indique la pièce interne se rapportant à l'assemblage.

4. AVIS DE MODIFICATION

Un bulletin de pièces détachées vous sera envoyé à tout moment opportun quand des changements de pièces ont lieu, y compris les modifications de pièces interchangeables entre les nouvelles et anciennes pièces.

5. A NOTER

5-1. Il existe certaines pièces différentes de celles de rechange pour les modèles de production vu des raisons administratives et dont l'usage est commun avec celles d'autres modèles.

5-2. Concernant les durites en caoutchouc et les tuyaux en vinyle, ne pas manquer de les couper à la bonne longueur comme indiqué dans le catalogue des pièces détachées ou selon ce qui est utile pour le véhicule affecté.

5-3. Noter que les dessins à la page d'illustration servent à titre de référence pour les numéros de pièces détachées, et non pas comme référence pour l'assemblage. Pour cette dernière opération, se reporter au "MANUEL D'ENTRETIEN SUZUKI".

6. NOM DU MODELE / NUMERO DE SERIE DU MOTEUR

MODELE	DESTINATION	TYPE	HOUTEUR DE BARRE D'ARCASE	COULEUR	N° DELA MOTEUR
DF350A_020	E01	35001F	X, XX	YAY, Y5S	35001F-040001~
DF350A_020	E03	35001F	X, XX	YAY, Y5S	35001F-040001~
DF350A_021	E11	35001F	X, XX	YAY, QTN, QUA	35001F-140001~
DF350A_022	E11	35001F	X, XX	YAY, QTN	35001F-240001~
DF325A_020	E01, E40	32501F	X, XX	YAY, Y5S	32501F-040001~
DF325A_021	E01, E40	32501F	X, XX	YAY, QTN	32501F-140001~
DF325A_022	E01, E40	32501F	X, XX	YAY, QTN	32501F-240001~
DF300B_020	E11	30003F	X, XX	YAY, Y5S	30003F-040001~
DF300B_021	E11	30003F	X, XX	YAY, QTN	30003F-140001~
DF300B_022	E11	30003F	X, XX	YAY, QTN	30003F-240001~

COLOR CHART
TABLEAU DES COULEURS

[illegible][illegible]

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.111A

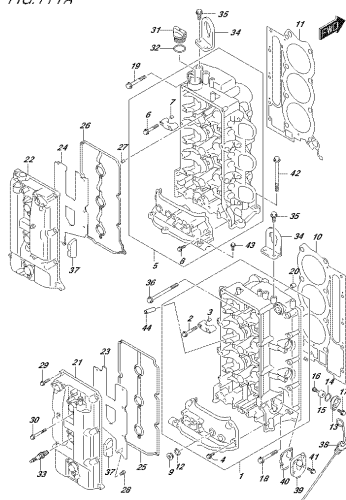


OPPOBA, E11, GSE, 111A
CYLINDERHEAD

FIG.113A

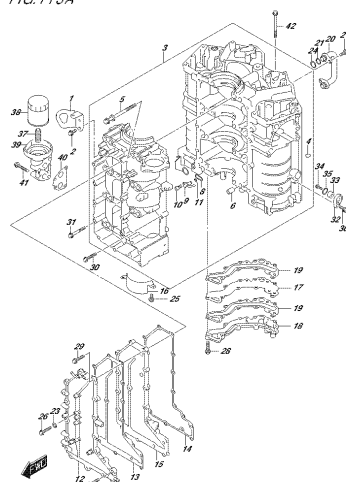


OPPOBA, E11, GSE, 113A
CYLINDERBLOCK

FIG.116A

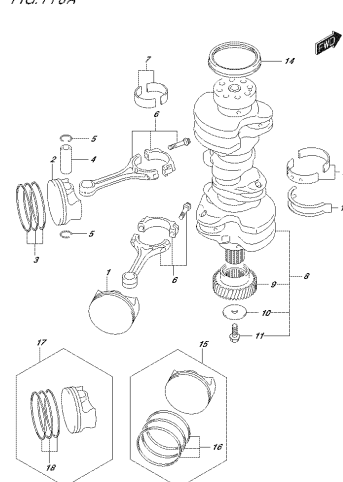


OPPOBA, E11, GSE, 116A
CRANKSHAFT

FIG.116B

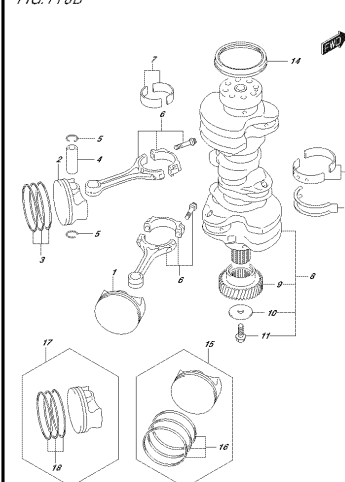


OPPOBA, E11, GSE, 116B
CRANKSHAFT

FIG.119A

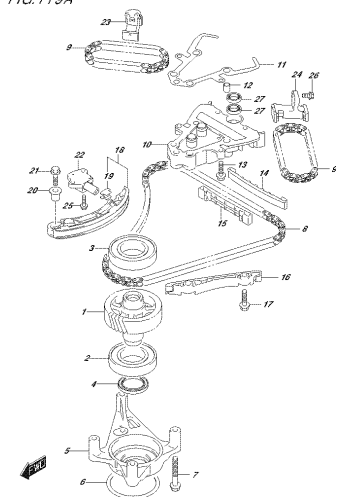


OPPOBA, E11, GSE, 119A
CRANKSHAFT

FIG.121A

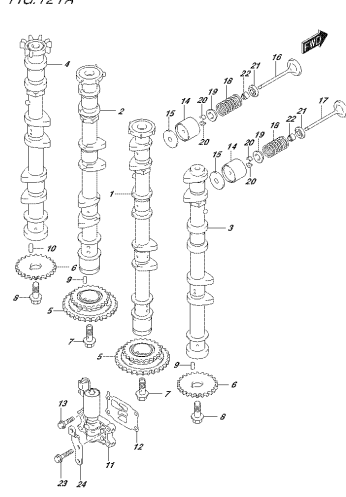


OPPOBA, E11, GSE, 121A
CRANKSHAFT

FIG.121B

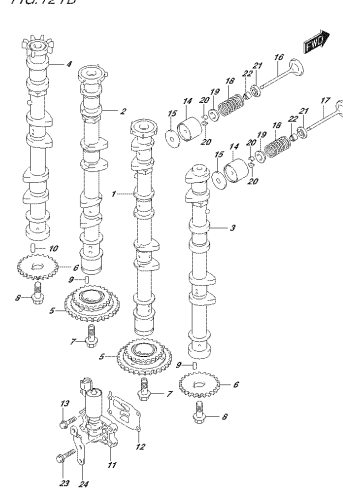


OPPOBA, E11, GSE, 121B
CRANKSHAFT

FIG.121C

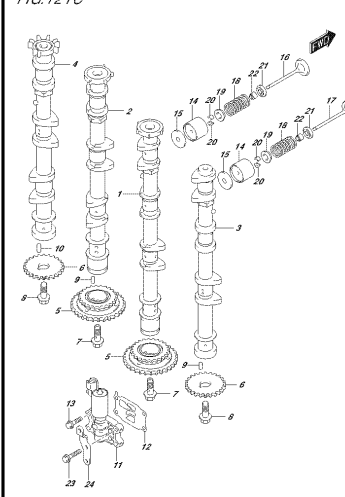


OPPOBA, E11, GSE, 121C
CRANKSHAFT

FIG.121D

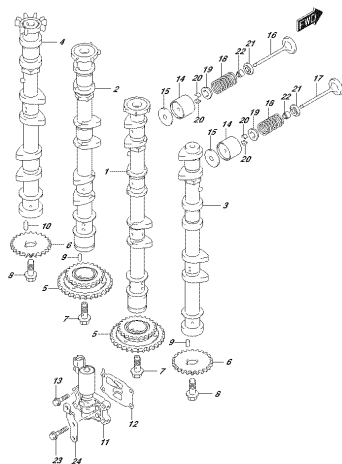


OPPOBA, E1, 002, 121D
CARBONATI

FIG.122A

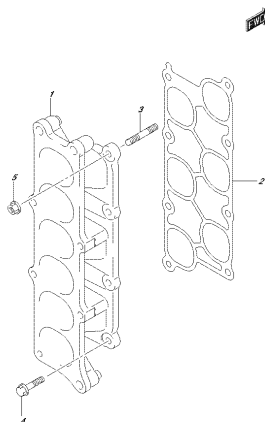


OPPOBA, E1, 002, 122A
NITROGEN CARBIDE

FIG.136A

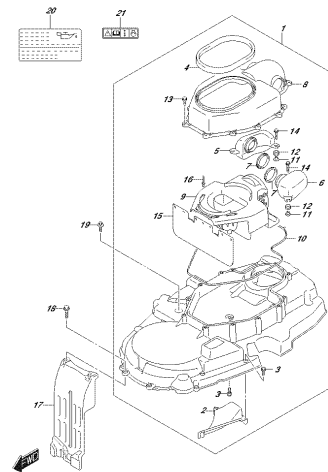


OPPOBA, E1, 002, 136A
NITROGEN CARBIDE

FIG.140A

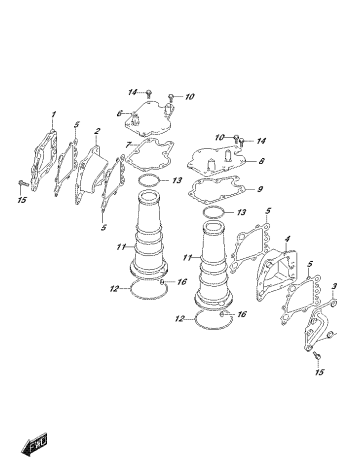


OPPOBA, E1, 002, 140A
NITROGEN CARBIDE

FIG.144A

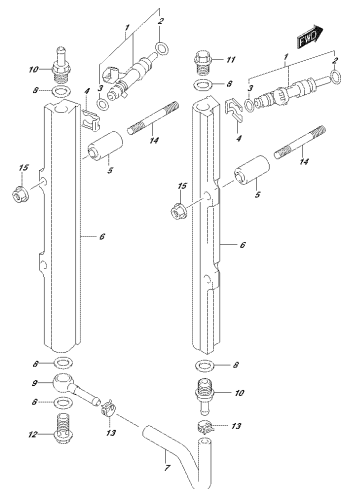


OPPOBA, E1, 002, 144A
FUEL INJECTOR

FIG.144B

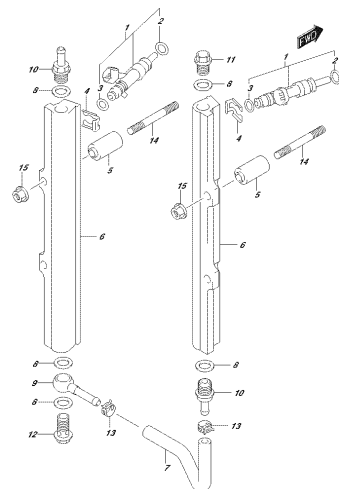


OPPOBA, E1, 002, 144B
FUEL INJECTOR

FIG.147A

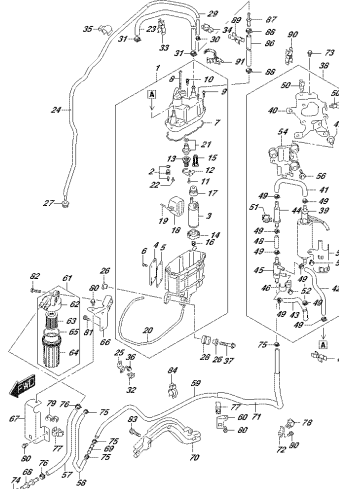


OPPOBA, E1, 002, 147A
FUEL INJECTOR

FIG.147B

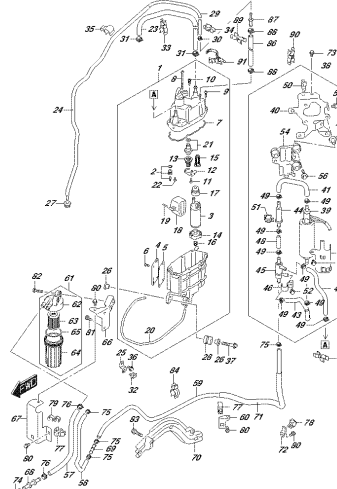


OPPOBA, E1, 002, 147B
FUEL INJECTOR

FIG.160A

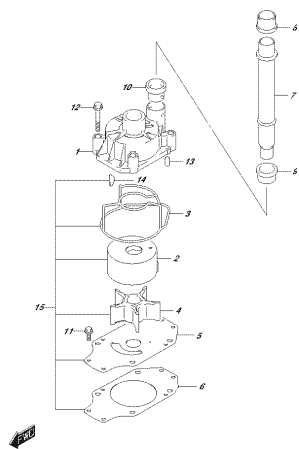


OP3804, E1 L, 022, 160A
HAKERPLAAT

FIG.160B

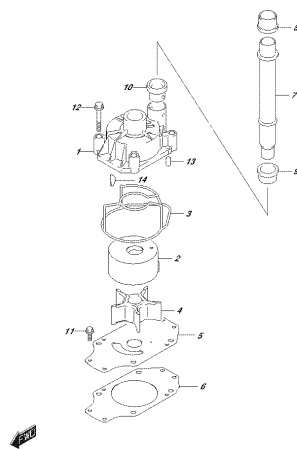


OP3804, E1 L, 022, 160B
HAKERPLAAT

FIG.162A

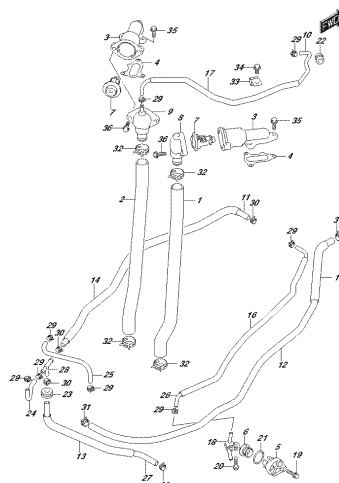


OP3804, E1 L, 022, 162A
PERSBOSCH

FIG.162B

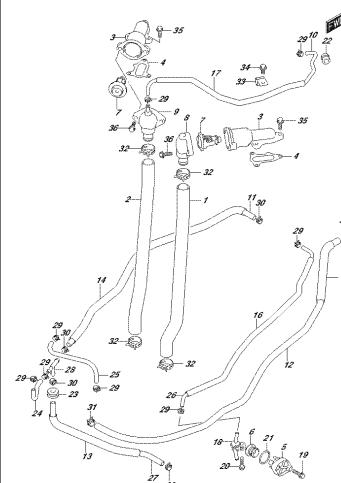


OP3804, E1 L, 022, 162B
PERSBOSCH

FIG.163A

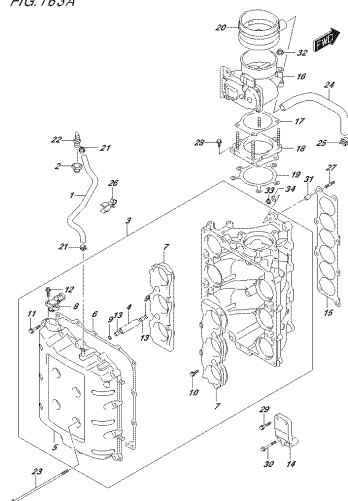


OP3804, E1 L, 022, 163A
PARTELEBOED

FIG.163B

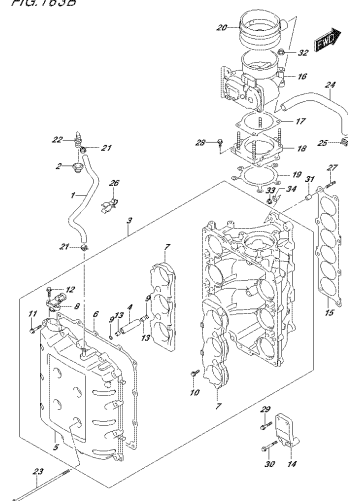


OP3804, E1 L, 022, 163B
PARTELEBOED

FIG.175A

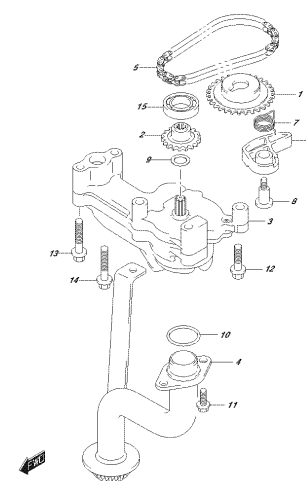


OP3804, E1 L, 022, 175A
DE POMP

FIG.180A

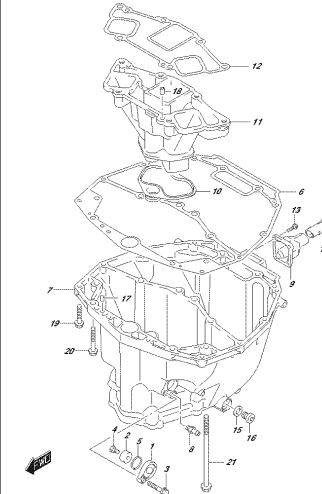


OP3804, E1 L, 022, 180A
DE PAV

FIG.204A

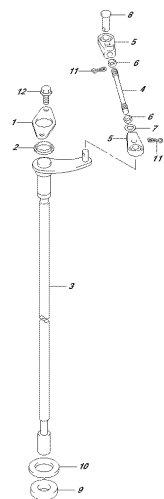


OP30304_E1_L_002_204A
CLUTCH RELEASE

FIG.206A

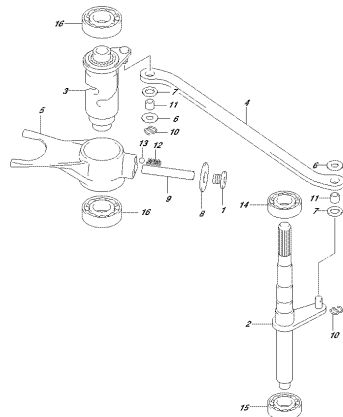


OP30304_E1_L_002_206A
CLUTCH RELEASE

FIG.220A

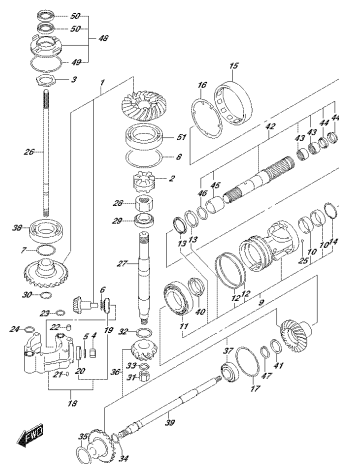


OP30304_E1_L_002_220A
STARTER MOTOR

FIG.220B

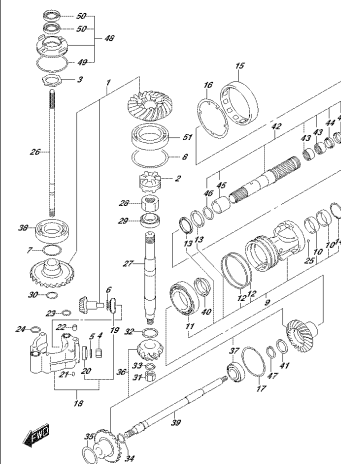


OP30304_E1_L_002_220B
STARTER MOTOR

FIG.301A

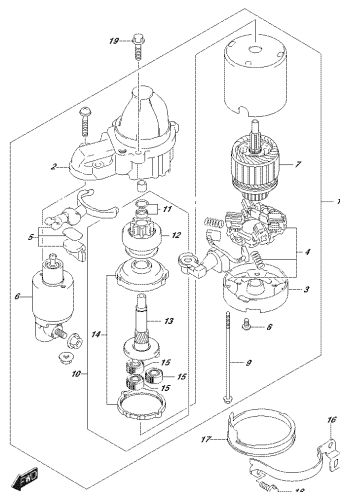


OP30304_E1_L_002_301A
STARTER MOTOR

FIG.303A

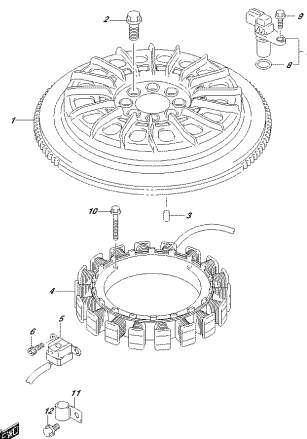


OP30304_E1_L_002_303A
STARTER MOTOR

FIG.303B

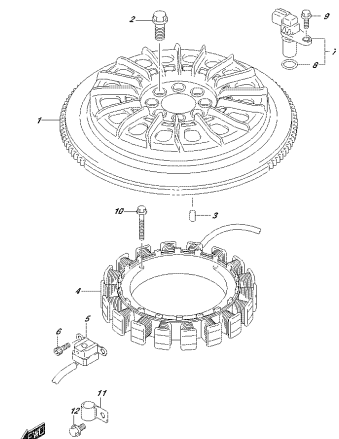


OP30304_E1_L_002_303B
STARTER MOTOR

FIG.310A

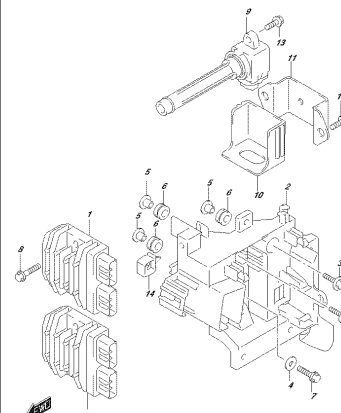


OP30304_E1_L_002_310A
RECLINATION COIL

FIG.326D

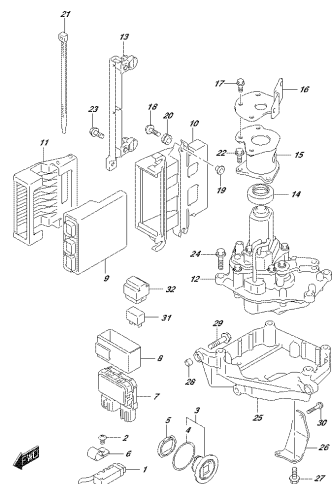


OPTIONAL E1, Q22, S340
PITCH/HEAVE CONTROL UNIT

FIG.331A

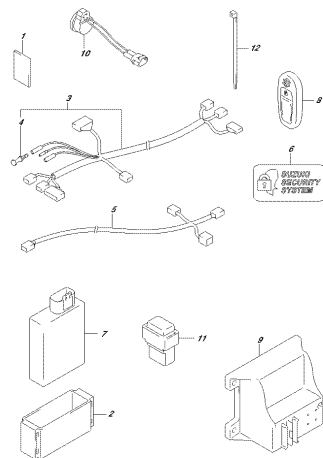


OPTIONAL E1, Q22, S314
KEYLESS ENTRY

FIG.335A

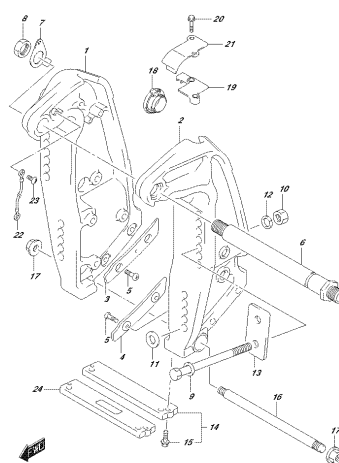


OPTIONAL E1, Q22, S354
CLAMP/SWITCH

FIG.336A

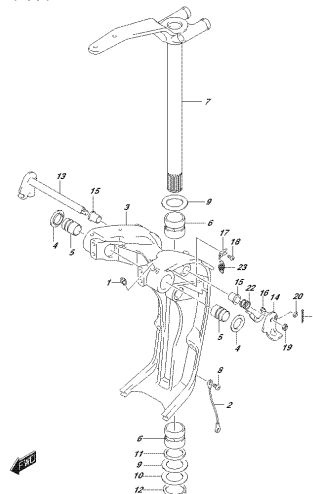


OPTIONAL E1, Q22, S364
SHOCK SPRING

FIG.337A

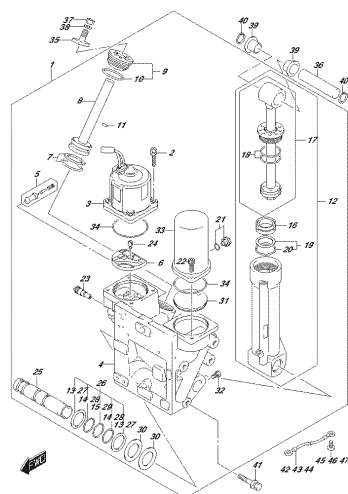


OPTIONAL E1, Q22, S374
TRANCYLINDER

FIG.337B

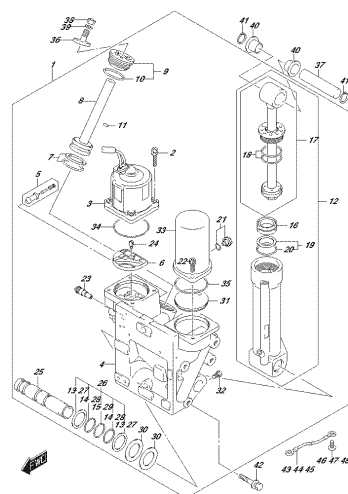


OPTIONAL E1, Q22, S378
TRANCYLINDER

FIG.337C

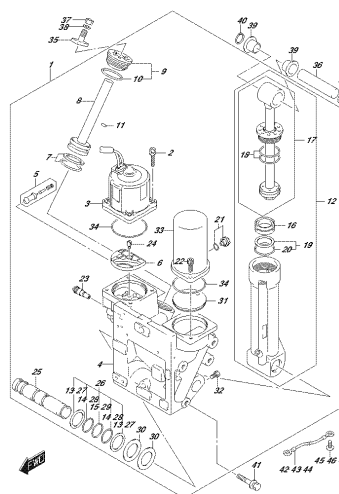


OPTIONAL E1, Q22, S37C
TRANCYLINDER

FIG.340A

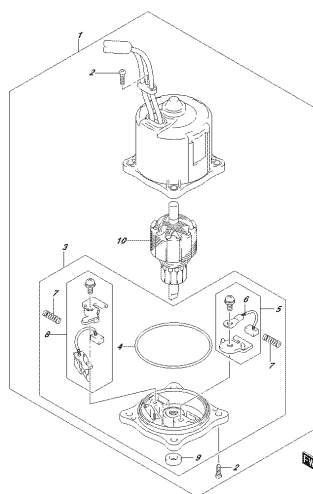


OPTIONAL E1, Q22, S404
PITCH MOTOR

FIG.401A

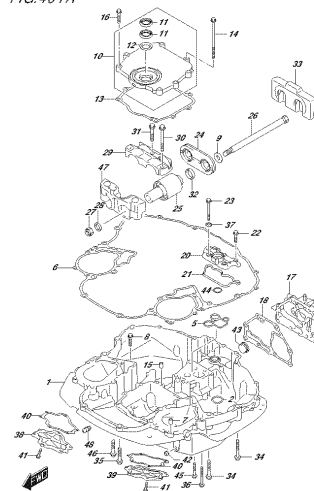


OPTIONAL E11, 002, 401A
ENGINE COVER

FIG.405A

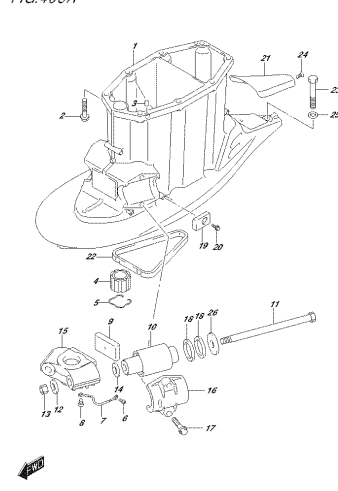


OPTIONAL E11, 002, 405A
ENGINE COVER

FIG.405B

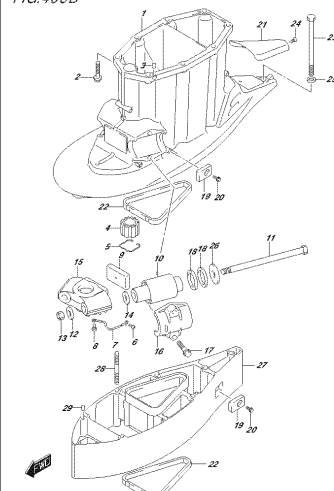


OPTIONAL E11, 002, 405B
ENGINE COVER

FIG.407A

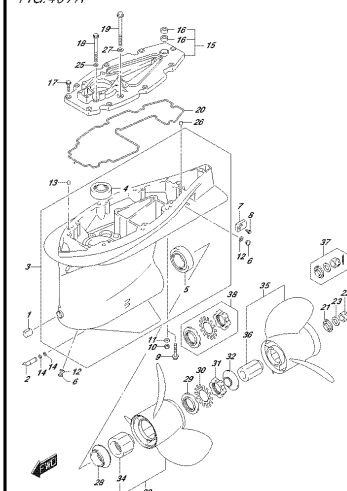


OPTIONAL E11, 002, 407A
ENGINE COVER

FIG.407B

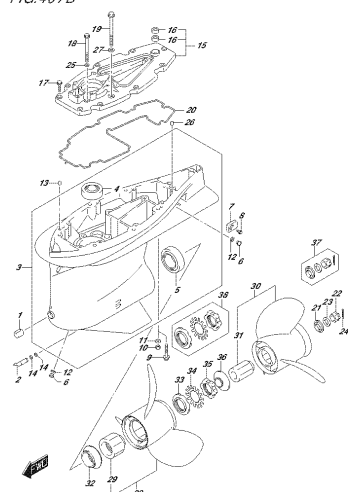


OPTIONAL E11, 002, 407B
ENGINE COVER

FIG.410A

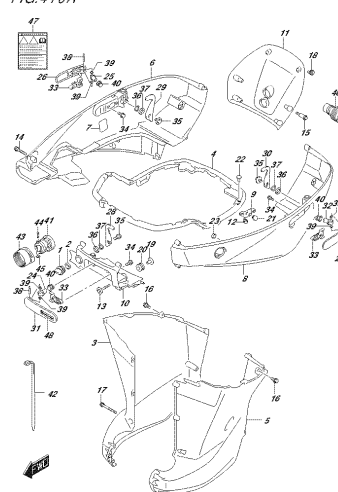


OPTIONAL E11, 002, 410A
ENGINE COVER

FIG.420A

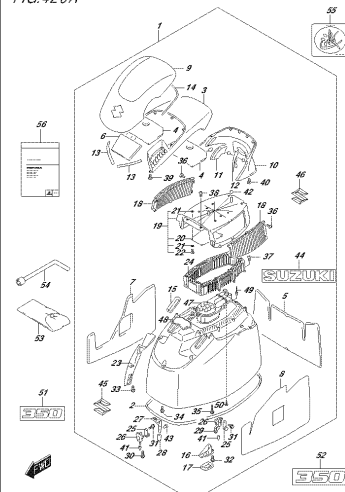


OPTIONAL E11, 002, 420A
ENGINE COVER

FIG.420B

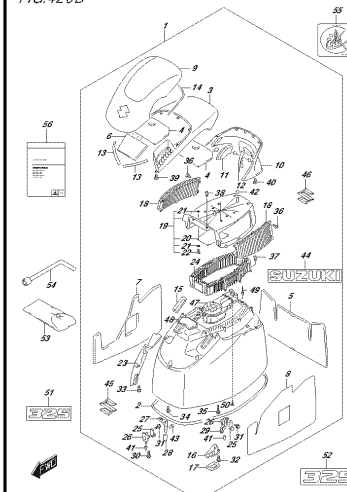


OPTIONAL E11, 002, 420B
ENGINE COVER

FIG.420C

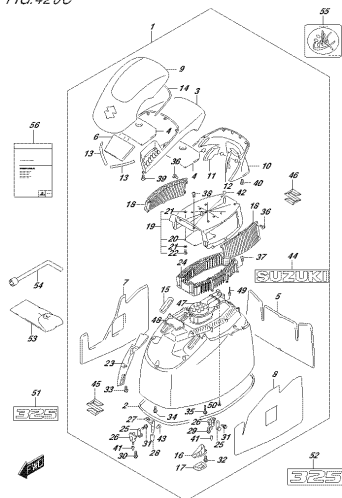


OPTIONAL E11, 002, 430C
CRUISE CONTROL

FIG.420D

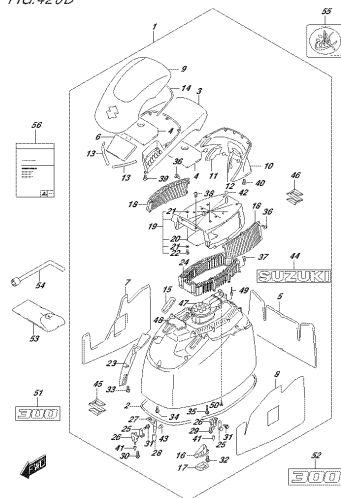


OPTIONAL E11, 002, 430D
CRUISE CONTROL

FIG.430A

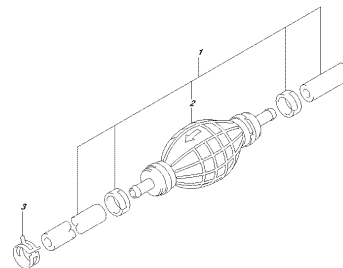


OPTIONAL E11, 002, 430A
FUEL VALVE

FIG.475A

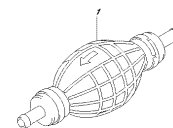


OPTIONAL E11, 002, 475A
FUEL VALVE

FIG.520A

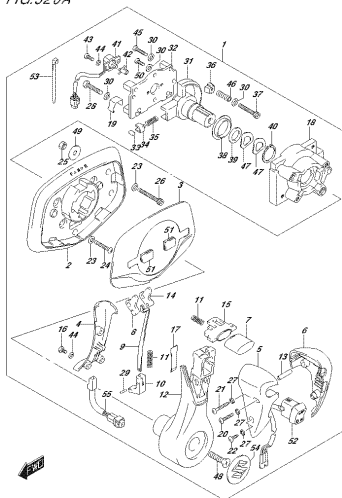


OPTIONAL E11, 002, 510A
OPTIONAL INLET REMOVAL

FIG.520B

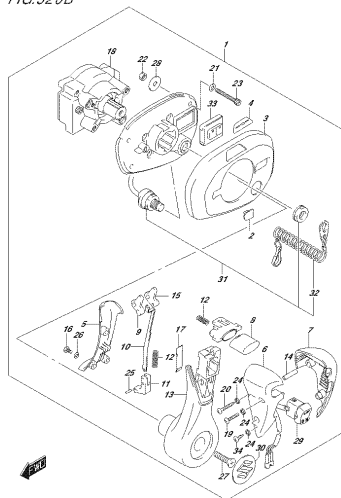


OPTIONAL E11, 002, 510B
OPTIONAL INLET REMOVAL

FIG.522A

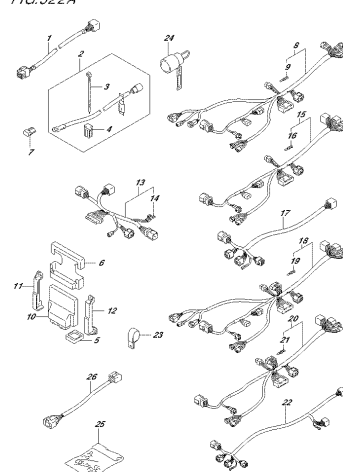


OPTIONAL E11, 002, 510A
OPTIONAL INLET REMOVAL

FIG.522B

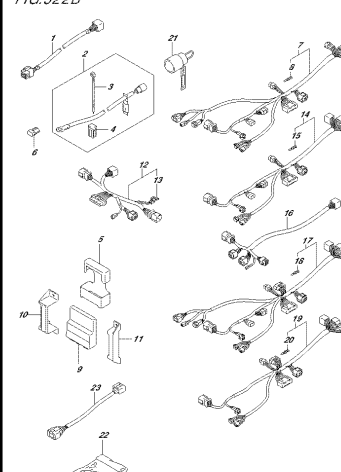


OPTIONAL E11, 002, 510B
OPTIONAL INLET REMOVAL

FIG.523A

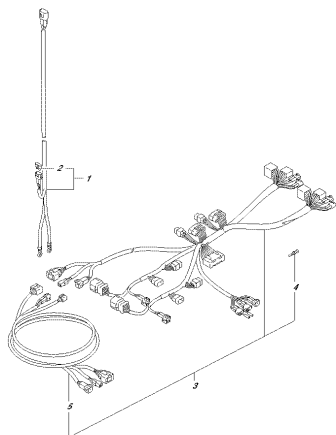


OPTIONAL E1, GSE_S104
OPTIONAL E2012

FIG.523B

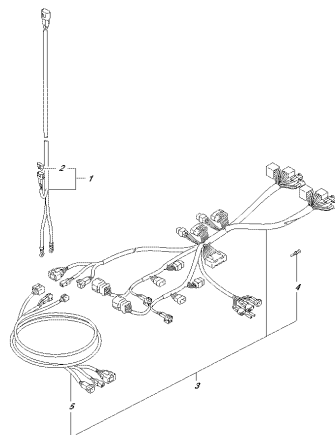


OPTIONAL E1, GSE_S109
OPTIONAL E2012

FIG.530A

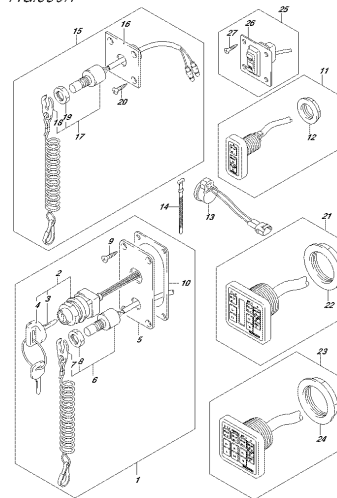


OPTIONAL E1, GSE_S104
OPTIONAL E2012

FIG.530B

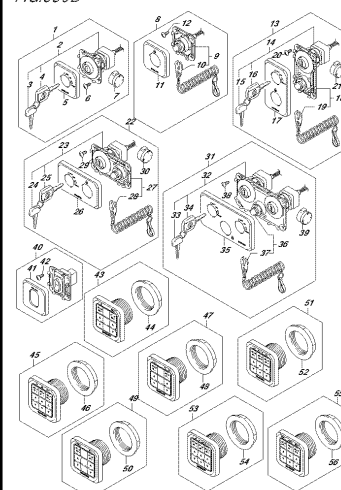


OPTIONAL E1, GSE_S109
OPTIONAL E2012

FIG.535A

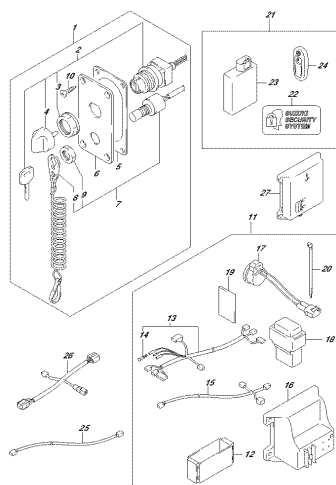


OPTIONAL E1, GSE_S104
OPTIONAL E2012

FIG.535B

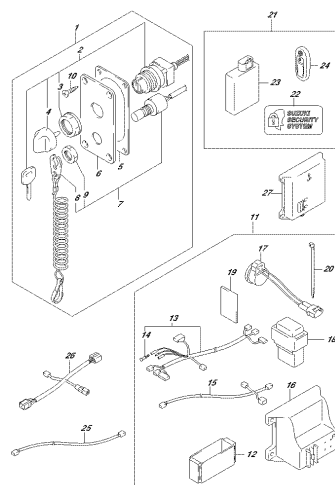


OPTIONAL E1, GSE_S109
OPTIONAL E2012

FIG.535C

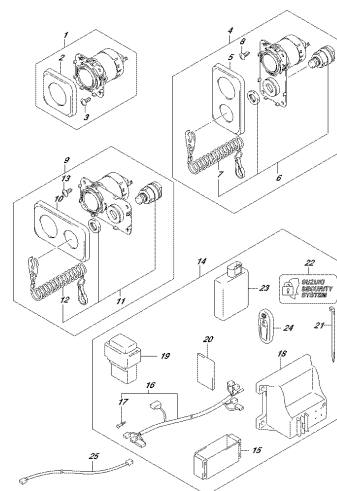


OPTIONAL E1, GSE_S104
OPTIONAL E2012

FIG.540A

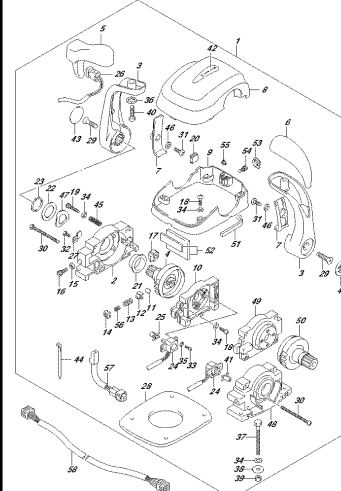


OPTIONAL E1, GSE_S104
OPTIONAL E2012

FIG.540B

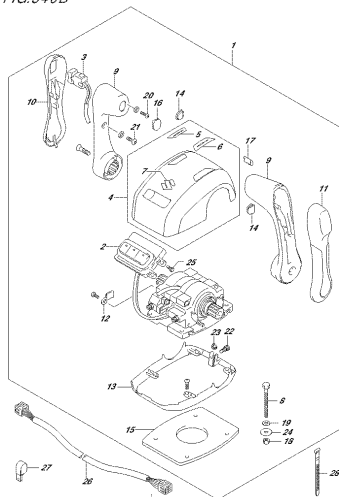


OP3004 E1 C, 002_8409
OPTIMATE CONTROL A00124C

FIG.543A

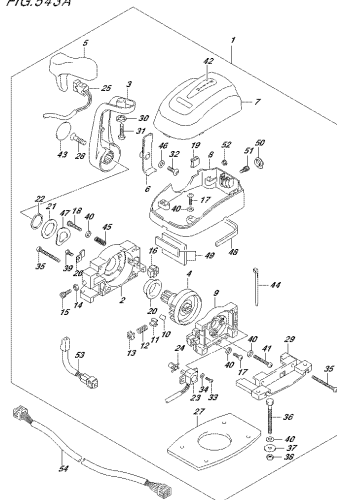


OP3004 E1 C, 002_8434
OPTIMATE CONTROL A00124LE

FIG.543B

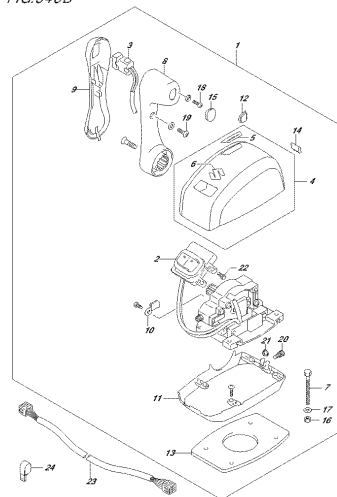


OP3004 E1 C, 002_8439
OPTIMATE CONTROL A00124LE

FIG.585A

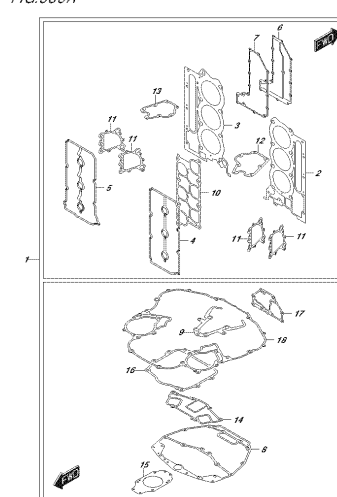


OP3004 E1 C, 002_8454
OPTIMATE CONTROL

FIG.601A

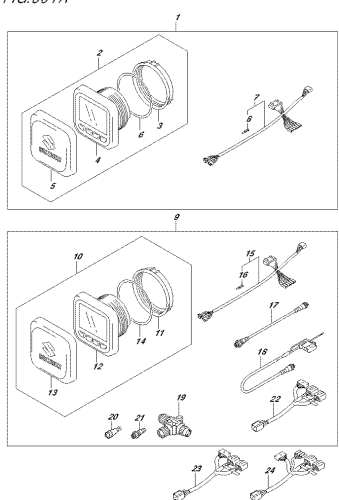


OP3004 E1 C, 002_8014
OPTALEX FUNCTION GA00124C

FIG.601B

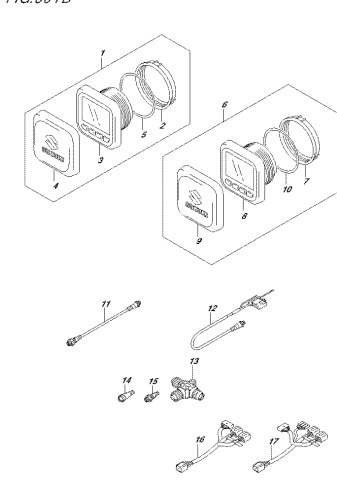


OP3004 E1 C, 002_8019
OPTALEX FUNCTION GA00124C

FIG.602A

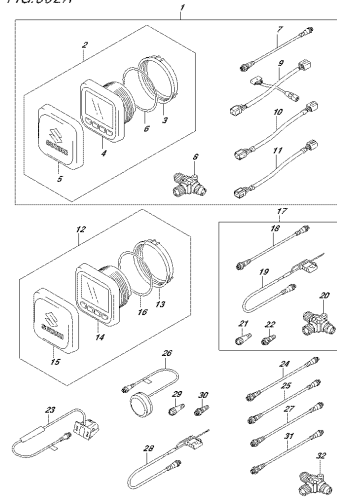

OP3004 E1 C, 002_8039
OPTALEX FUNCTION GA00124C

FIG.602B

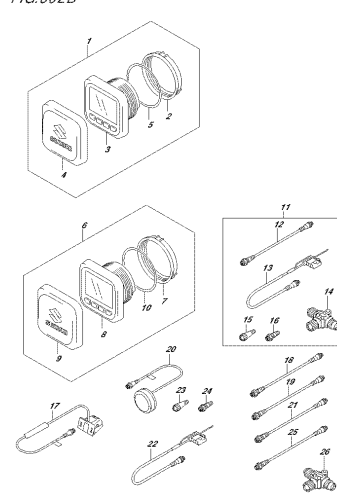

OP3004 E1 C, 002_8039
OPTALEX FUNCTION GA00124C

FIG.111A

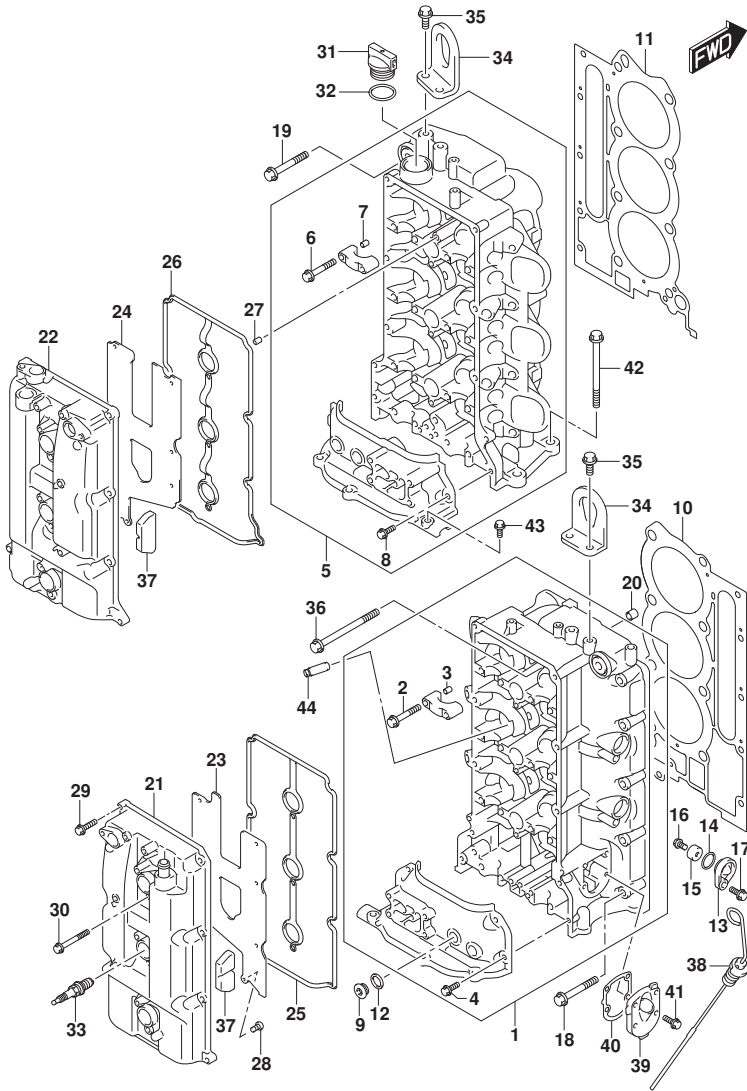


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	11101-98L11	HEAD ASSY,CYLINDER STBD	1	020,021 STBD
1-2	11101-98L20	HEAD ASSY,CYLINDER STBD	1	022 STBD
2	09103-06266	.BOLT (6X40)	16	
3	09206-08001	.PIN (8X11)	14	
4	01547-06207	.BOLT (6X20)	4	
5-1	11103-98L11	HEAD ASSY,CYLINDER PORT	1	020,021 PORT
5-2	11103-98L20	HEAD ASSY,CYLINDER PORT	1	022 PORT
6	09103-06266	.BOLT (6X40)	16	
7	09206-08001	.PIN (8X11)	14	
8	01547-06207	.BOLT (6X20)	2	
9	11116-93J01	PLUG	4	
10	11141-98L00	GASKET,CYLINDER HEAD STBD	1	STBD
11	11142-98L00	GASKET,CYLINDER HEAD PORT	1	PORT
12	11216-98L10	GASKET	4	
13	11261-93J00	COVER,PROTECTION ANODE	4	
14	09280-22019	O RING (D:1.9,ID:21.8)	4	
15	55321-87J01	ANODE,PROTECTION	4	
16	09103-06281	BOLT (6X14)	4	
17	01550-0820C	BOLT (8X20)	4	
18	01550-08607	BOLT	6	STBD
19	01550-08607	BOLT	5	PORT
20	09206-15001	PIN (12.4X15X17)	4	
21	11170-93J01	COVER,CYLINDER HEAD STBD	1	STBD
22	11180-98L00	COVER,CYLINDER HEAD PORT	1	PORT
23	11173-93J00	PLATE,BREATHER STBD	1	STBD
24	11183-93J00	PLATE,BREATHER PORT	1	PORT
25	11179-93J00	GASKET,CYL HEAD COVER STBD	1	STBD
26	11189-93J00	GASKET,CYL HEAD COVER PORT	1	PORT
27	09206-08001	PIN (8X11)	1	
28	02142-0612A	SCREW	14	
29	01547-0625C	BOLT	16	

FIG.111A

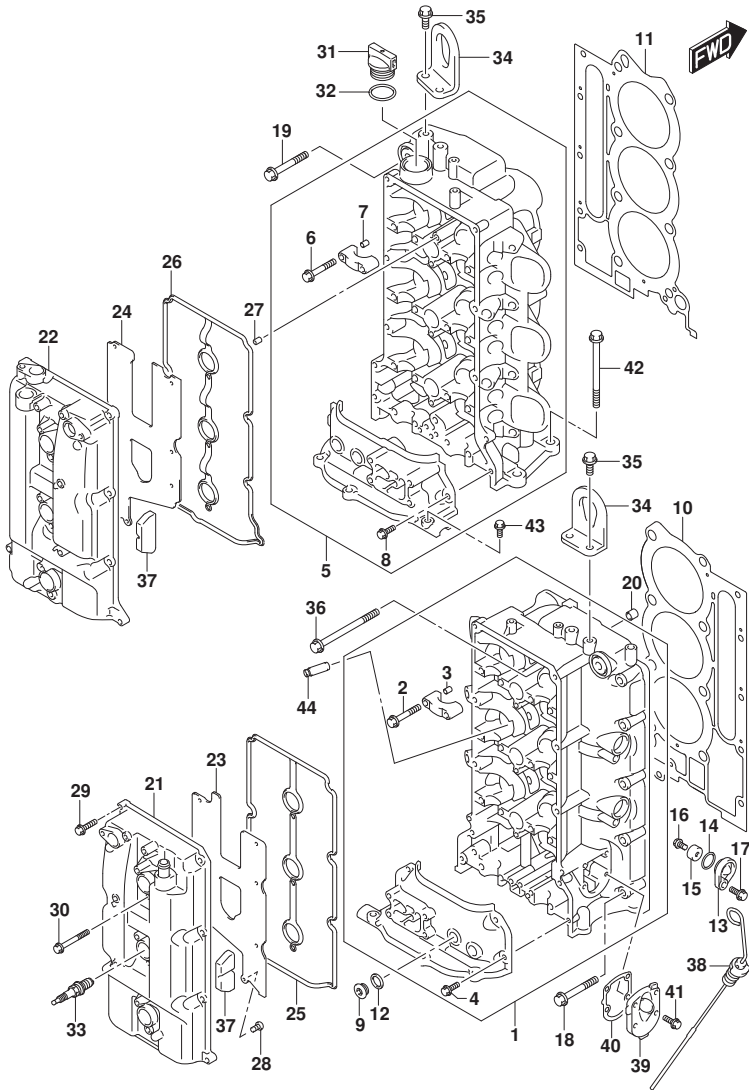


FIG.111A (1-B-3) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	01547-0650C	BOLT	6	
31	11382-93J00	CAP,OIL FILLER	1	
32	09280-26006	O RING (D:3.1,ID:26.4)	1	
33	09482-00642	PLUG,SPARK (ILZKR7D8)	6	NGK
34	11291-98L00	HOOK,ENGINE	2	
35	01550-0820C	BOLT (8X20)	4	
36	11119-98L00	BOLT,CYLINDER HEAD	16	
37	11186-15501	SEPARATOR,OIL BRTHR COVER	2	
38	16910-98L00	GAUGE,OIL LEVEL	1	
39	16931-98L00	GUIDE,OIL LEVEL GAUGE	1	
40	16941-98L00	GASKET,OIL LEVEL GAUGE GUIDE	1	
41	01550-0625C	BOLT (6X25)	4	
42	09116-10146	BOLT (10X195)	2	
43	01550-0830C	BOLT	6	
44	11115-98L00-001	GUIDE,VALVE OS (OS:0.5)	24	OPT

FIG.113A

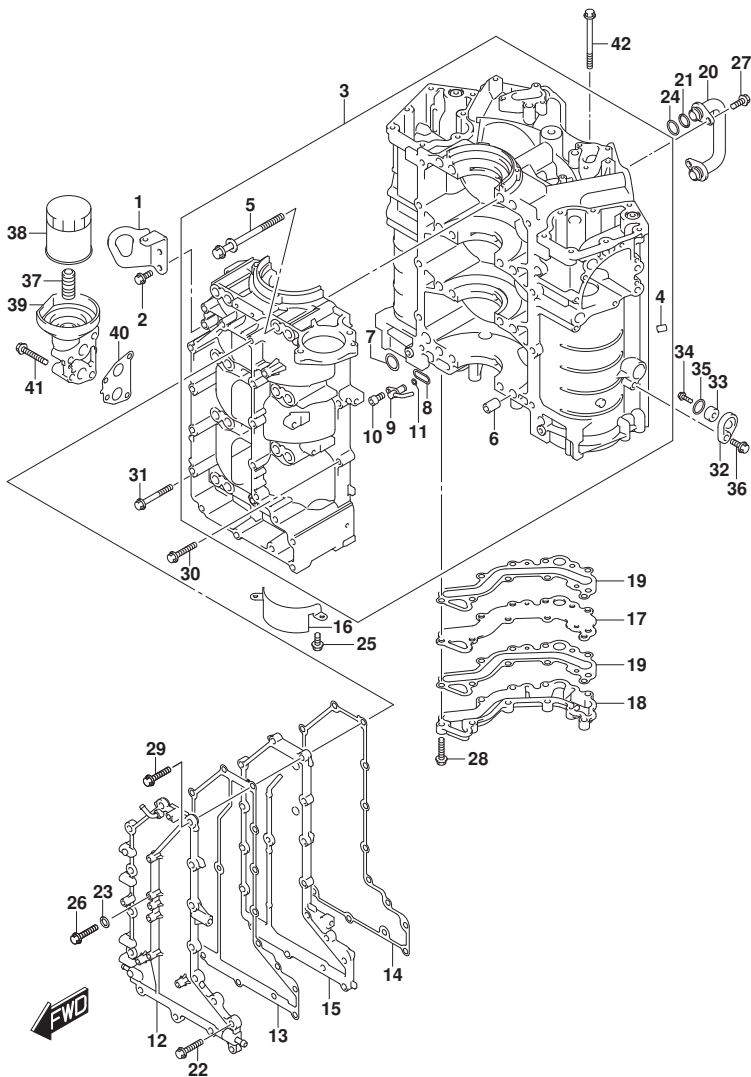


FIG.113A (1-B-4) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11293-98L00	HOOK,ENGINE FRONT	1	
2	01550-0820C	BOLT (8X20)	2	
3	11301-98L10	BLOCK SET,CYLINDER	1	
4	11112-93J00	.PLUG,OIL VENTURI	2	
5	11117-98L00	.BOLT,CRANKCASE	16	
6	09206-14004	.PIN (14X11.4X23)	5	
7	11318-98L00	.GASKET,OIL GALLERY NO.1	1	
8	11319-98L00	.GASKET,OIL GALLERY NO.2	1	
9	11390-98L00	.JET,PISTON COOLING	6	
10	09106-06075	.BOLT (6X12)	6	
11	09280-05007	.O RING (D:1.2,ID:4.7)	6	
12	11330-98L00	COVER,CRANKCASE WTR JKT	1	
13	11332-98L00	GASKET,CRANKCASE WTR JKT COVER	1	
14	11333-98L00	GASKET,CRANKCASE OIL COVER	1	
15	11334-98L00	COVER,OIL GALLERY CRANKCASE	1	
16	12247-98L00	PLATE,OIL GUARD	1	
17	16431-98L00	PLATE,OIL GALLERY	1	
18	16432-98L00	COVER,OIL GALLERY	1	
19	16433-98L00	GASKET,OIL GALLERY	2	
20	16480-98L00	PIPE,OIL GALLERY	1	
21	16485-98L00	RING,BACK UP OIL GALLERY	2	
22	09103-08379	BOLT (8X165)	1	
23	09168-06023	GASKET (5.8X13X1.2)	1	
24	09280-18004	O-RING (D:2.4,ID:17.8)	2	
25	01550-0612A	BOLT (6X12)	2	
26	01550-06357	BOLT (6X35)	1	
27	01550-0820C	BOLT (8X20)	2	
28	01550-0835A	BOLT (8X35)	9	
29	01550-0840C	BOLT	13	
30	01550-08457	BOLT (8X45)	7	
31	01550-08657	BOLT	1	
32	11261-93J00	COVER,PROTECTION ANODE	2	
33	55321-87J01	ANODE,PROTECTION	2	
34	09103-06281	BOLT (6X14)	2	
35	09280-22019	O RING (D:1.9,ID:21.8)	2	

FIG.113A


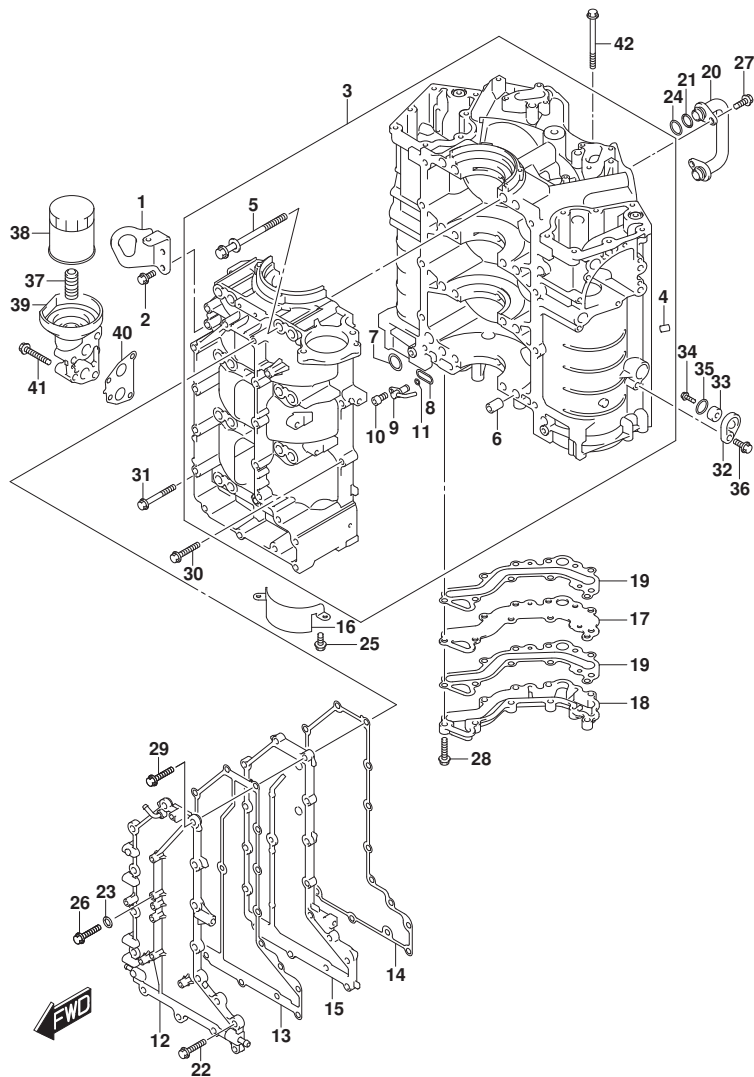


FIG.113A (1-B-5) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
36	01550-0820C	BOLT (8X20)	2	
37	11241-86FA0	STAND,OIL FILTER	1	
38	16510-96J10	FILTER ASSY,OIL	1	
39	16531-98L00	CASE,OIL FILTER ADAPTER	1	
40	16539-98L10	GASKET,OIL FILTER ADAPTER CASE	1	
41	01550-0850C	BOLT	4	
42	09116-10134	BOLT (10X115)	1	

FIG.116A

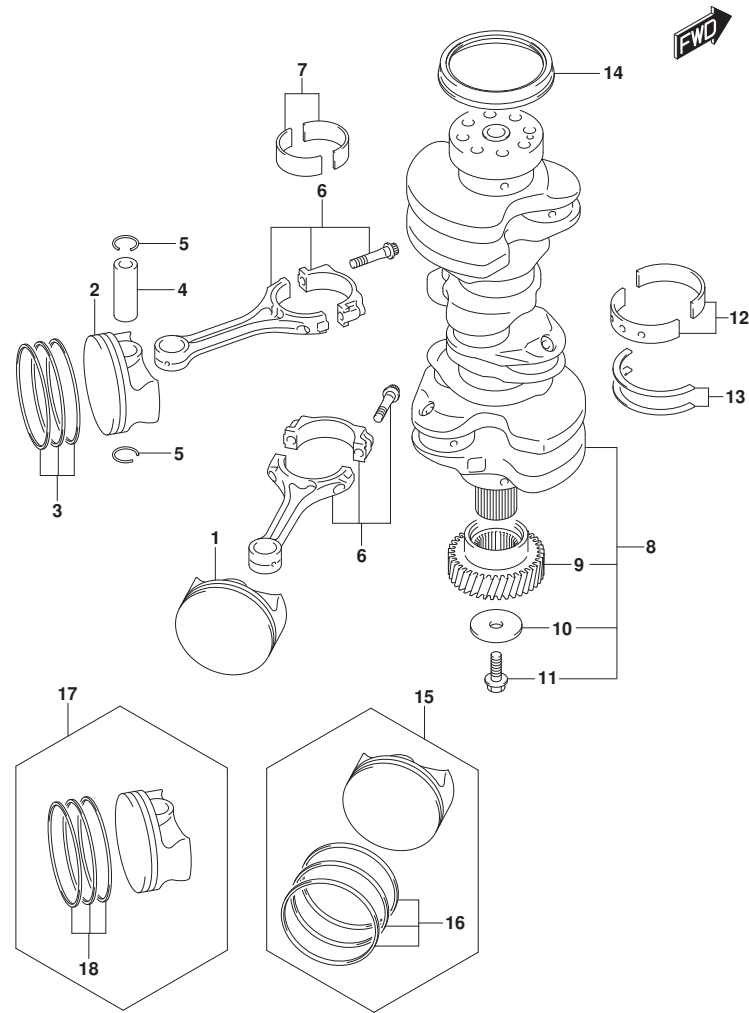

DF350A_E11_022_116A
CRANKSHAFT

FIG.116A (1-B-6) CRANKSHAFT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-98L00-0B0	PISTON,STBD	3	STBD
2	12121-98L00-0B0	PISTON,PORT	3	PORT
3	12140-98J10	RING SET,PISTON	6	
4	12151-98L00	PIN,PISTON	6	
5	09381-22010	CIRCLIP	12	
6	12160-98L00	CONNROD ASSY	6	
7-1	12100-98810-0A0	BEARING SET,CONNROD (STD)	6	GREEN
7-2	12100-98810-025	BEARING SET,CONNROD US (US:0.2 5)	6	OPT
8	12200-98L00	CRANKSHAFT ASSY	1	
9	12242-98J00	.GEAR,DRIVE (NT:32)	1	
10	09160-10104	.WASHER (10.5X50X3.2)	1	
11	01550-1025A	.BOLT	1	
12-1	12340-98L01-0A0	BEARING SUB SET,CRANKSHAFT	4	BLACK
12-2	12340-98L01-0B0	BEARING SUB SET,CRANKSHAFT	4	NON
12-3	12340-98L01-0C0	BEARING SUB SET,CRANKSHAFT	4	YELLOW
12-4	12340-98L01-0D0	BEARING SUB SET,CRANKSHAFT	4	BLUE
12-5	12340-98L01-0E0	BEARING SUB SET,CRANKSHAFT	4	PINK
12-6	12300-98841-0AA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/BLACK
12-7	12300-98841-0BA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED
12-8	12300-98841-0CA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/YELLOW
12-9	12300-98841-0DA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/BLUE
12-10	12300-98841-0EA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/PINK
13-1	12300-98830	BEARING SET,CRANK THRUST	1	
13-2	12300-98830-012	BEARING SET,CRANK THRUST OS (O S:0.125)	1	OPT
14	09283-91001	SEAL,OIL (91X109X10)	1	
15	12101-98L20-050	PISTON SET,STBD OS (OS:0.50)	3	OPT,STBD
16	12140-98J10-050	.RING SET,PISTON OS (OS:0.50)	3	OPT
17	12102-98L20-050	PISTON SET,PORT OS (OS:0.50)	3	OPT,PORT

DF350A_E11_022

FIG.116A

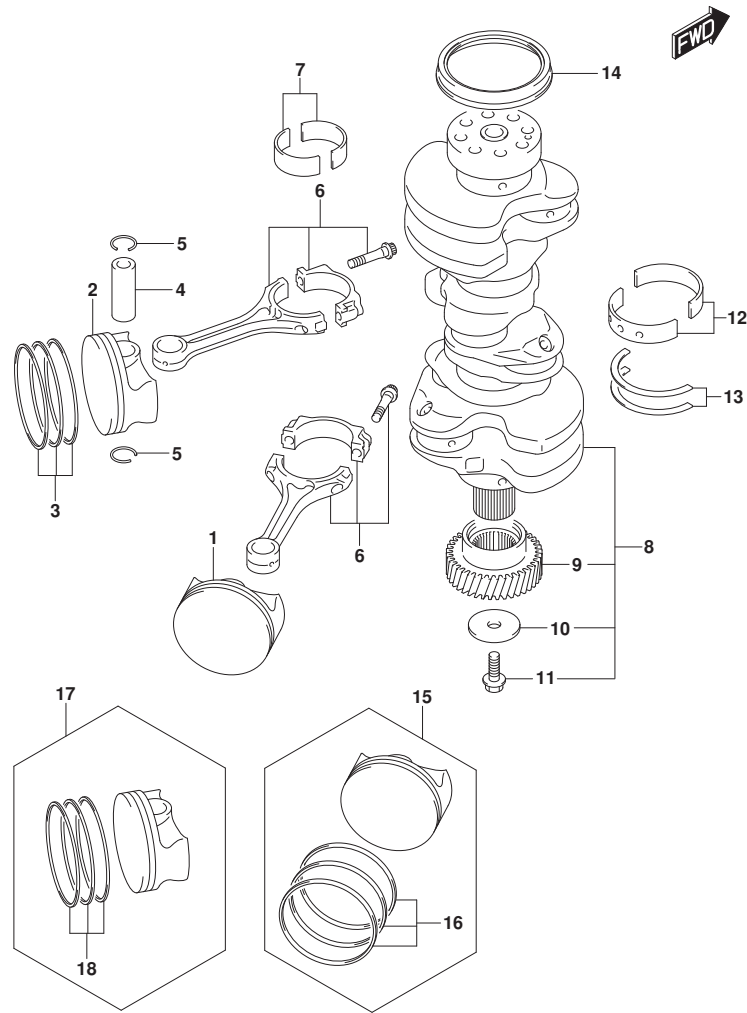


FIG.116A (1-B-7) CRANKSHAFT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	12140-98J10-050	.RING SET,PISTON OS (OS:0.50)	3	OPT

FIG.116B

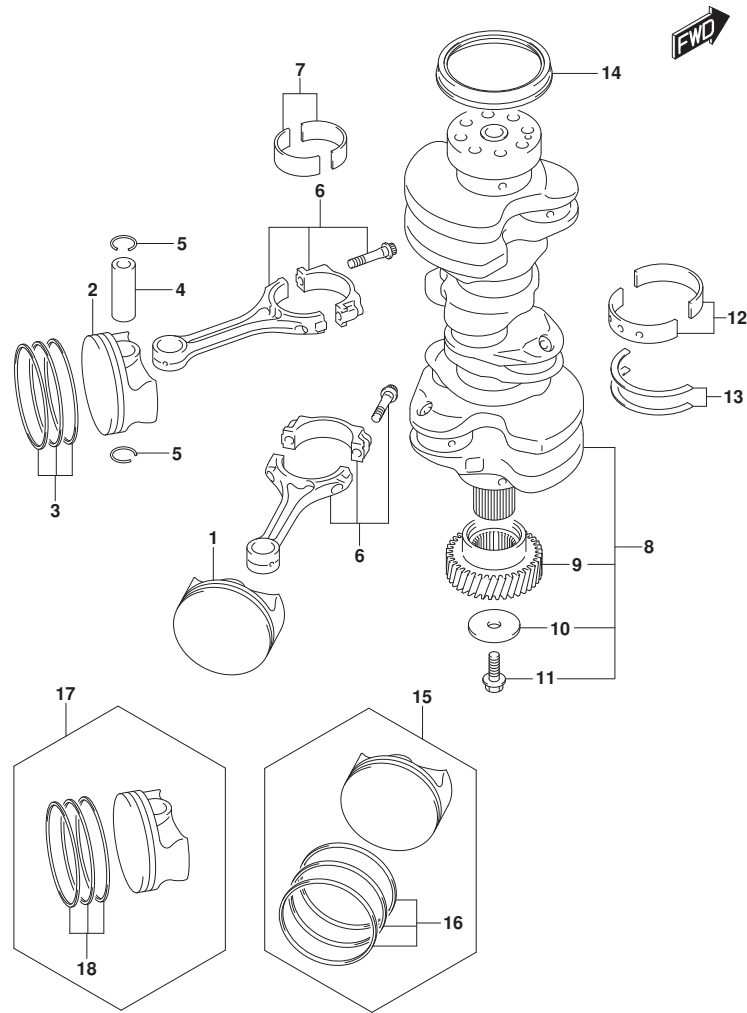


FIG.116B (1-B-8) CRANKSHAFT (DF325A,DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-98L10-0B0	PISTON,STBD	3	STBD
2	12121-98L10-0B0	PISTON,PORT	3	PORT
3	12140-98J10	RING SET,PISTON	6	
4	12151-98L00	PIN,PISTON	6	
5	09381-22010	CIRCLIP	12	
6	12160-98L00	CONNROD ASSY	6	
7-1	12100-98810-0A0	BEARING SET,CONNROD (STD)	6	GREEN
7-2	12100-98810-025	BEARING SET,CONNROD US (US:0.2 5)	6	OPT
8	12200-98L00	CRANKSHAFT ASSY	1	
9	12242-98J00	.GEAR,DRIVE (NT:32)	1	
10	09160-10104	.WASHER (10.5X50X3.2)	1	
11	01550-1025A	.BOLT	1	
12-1	12340-98L01-0A0	BEARING SUB SET,CRANKSHAFT	4	BLACK
12-2	12340-98L01-0B0	BEARING SUB SET,CRANKSHAFT	4	NON
12-3	12340-98L01-0C0	BEARING SUB SET,CRANKSHAFT	4	YELLOW
12-4	12340-98L01-0D0	BEARING SUB SET,CRANKSHAFT	4	BLUE
12-5	12340-98L01-0E0	BEARING SUB SET,CRANKSHAFT	4	PINK
12-6	12300-98841-0AA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/BLACK
12-7	12300-98841-0BA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED
12-8	12300-98841-0CA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/YELLOW
12-9	12300-98841-0DA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/BLUE
12-10	12300-98841-0EA	BEARING SET,CRANKSHAFT (US:0.2 5)	4	OPT,RED/PINK
13-1	12300-98830	BEARING SET,CRANK THRUST	1	
13-2	12300-98830-012	BEARING SET,CRANK THRUST OS (O S:0.125)	1	OPT
14	09283-91001	SEAL,OIL (91X109X10)	1	
15	12101-98L30-050	PISTON SET,STBD OS (OS:0.50)	3	OPT,STBD
16	12140-98J10-050	.RING SET,PISTON OS (OS:0.50)	3	OPT
17	12102-98L30-050	PISTON SET,PORT OS (OS:0.50)	3	OPT,PORT

FIG.116B

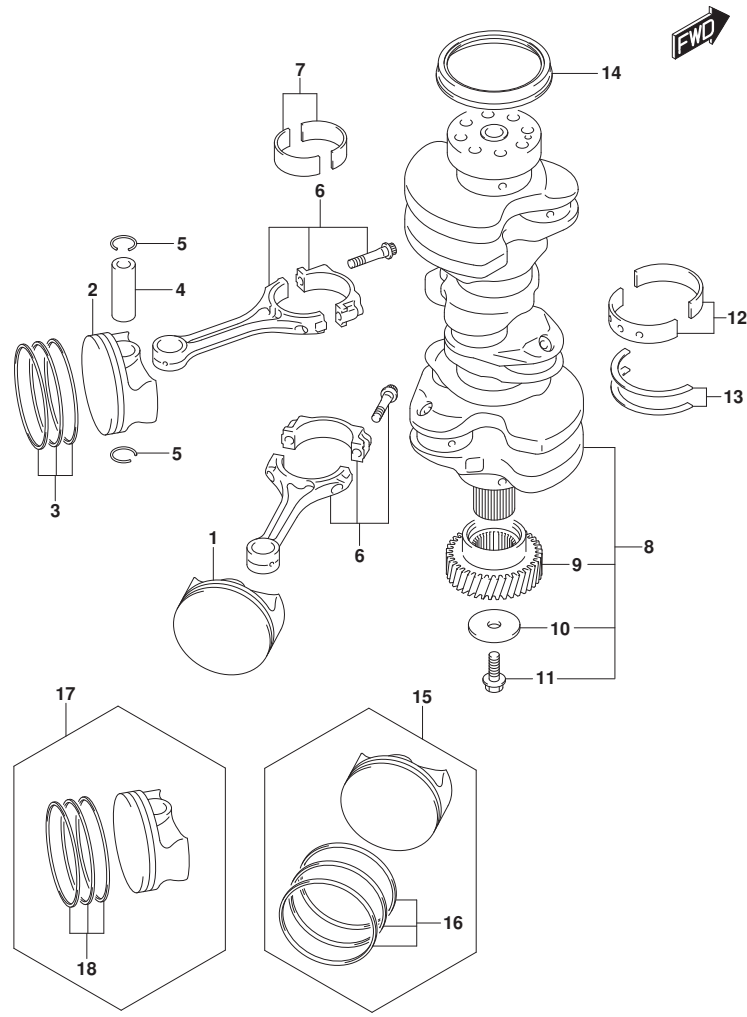


FIG.116B (1-B-9) CRANKSHAFT (DF325A,DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	12140-98J10-050	.RING SET,PISTON OS (OS:0.50)	3	OPT

FIG.119A

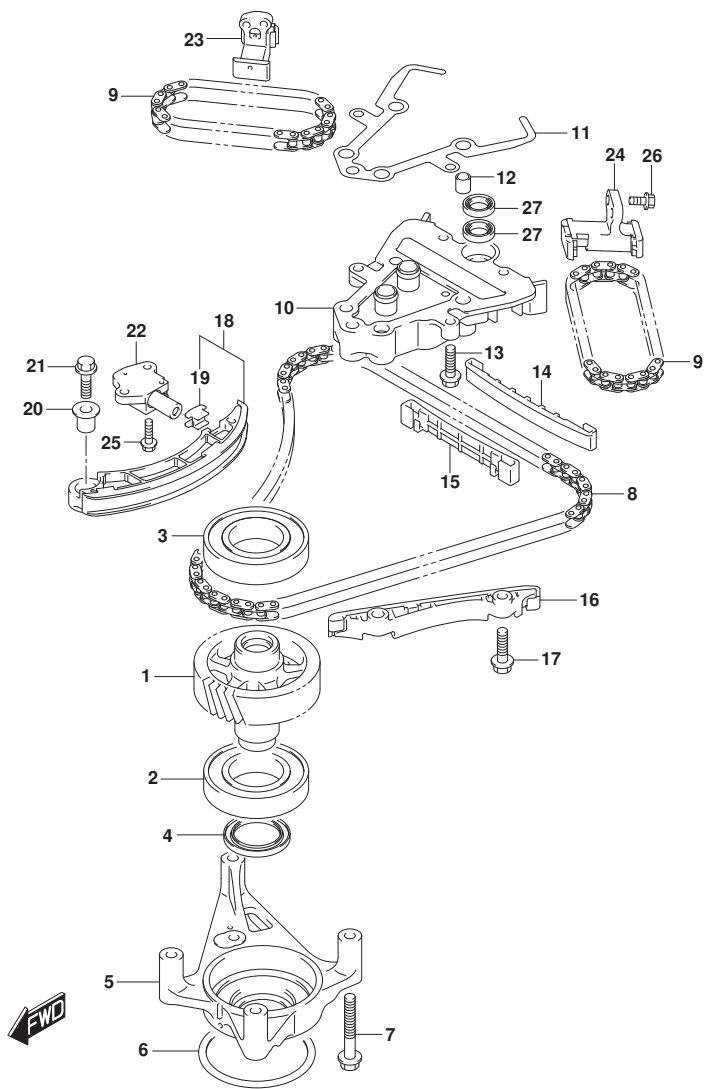


FIG.119A (1-B-10) TIMING CHAIN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12730-98J02	GEAR,DRIVEN (NT:40)	1	
2	09262-40021	BEARING (40X80X18)	1	LOWER
3	09262-40017	BEARING (40X80X18)	1	UPPER
4	09283-32044	OIL SEAL (32X47X6)	1	
5	12734-98L00	HOLDER,DRIVEN GEAR	1	
6	09280-70012	O-RING (D:5.7,ID:69.6)	1	
7	01550-0855A	BOLT	4	
8	12761-98L00	CHAIN,TIMING 1ST	1	
9	12762-93J00	CHAIN,TIMING 2ND	2	
10	12770-98L00	BASE,TIMING CHAIN GUIDE NO.1	1	
11	12778-98L00	GASKET,TIMING CHAIN GUIDE BASE	1	
12	04211-13149	PIN (13X14)	2	
13	01550-0830A	BOLT (8X30)	2	
14	12771-93J00	SHOE,TIMING CHAIN UPPER	1	UPPER
15	12775-93J00	SHOE,TIMING CHAIN LOWER	1	LOWER
16	12772-98L00	GUIDE,TIMING CHAIN NO.2	1	
17	01550-0830A	BOLT (8X30)	2	
18	12810-93J00	TENSIONER ASSY,TIMING CHAIN	1	
19	12813-73G00	.PAD,TIMING CHAIN TENSIONER	1	
20	12812-90J00	SPACER,TIMING CHAIN TENSIONER	1	
21	01550-0830A	BOLT (8X30)	1	
22	12831-93J01	ADJUSTER ASSY,TENSIONER NO.1	1	
23	12832-93J00	TENSIONER ASSY,STBD	1	STBD
24	12833-93J00	TENSIONER ASSY,PORT	1	PORT
25	01550-0620A	BOLT	2	
26	01550-0620A	BOLT	4	
27	09282-17011	SEAL,OIL (16.5X28X6)	2	

FIG.121A


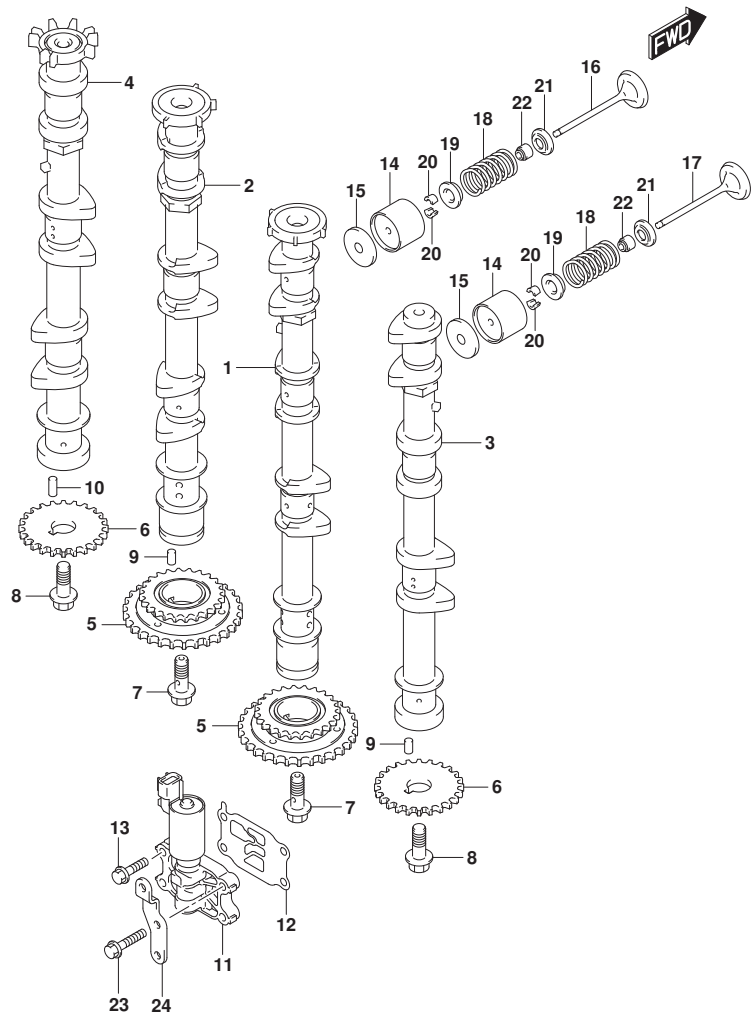


FIG.121A (1-B-11) CAMSHAFT ((DF350A,DF325A):(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98L00	CAMSHAFT,INTK STBD	1	STBD
2	12705-98L00	CAMSHAFT,INTK PORT	1	PORT
3	12721-98L30	CAMSHAFT,EXH STBD	1	STBD
4	12729-98L30	CAMSHAFT,EXH PORT	1	PORT
5	12740-98L00	SPROCKET ASSY,CAM TIMING (NT:2 2/32)	2	
6	12748-93J00	SPROCKET,CAMSHAFT (NT:22)	2	
7	12753-93J00	BOLT,INTK CAMSHAFT	2	
8	12749-93J00	BOLT,CAMSHAFT	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE,OIL CONTROL	2	
12	16555-93J01	GASKET,OCV	2	
13	01550-0625C	BOLT (6X25)	6	
14	12891-93J00	TAPPET	24	
15-1	12892-93J00-218	SHIM,TAPPET (T:2.175)	AR	
15-2	12892-93J00-220	SHIM,TAPPET (T:2.200)	AR	
15-3	12892-93J00-223	SHIM,TAPPET (T:2.225)	AR	
15-4	12892-93J00-225	SHIM,TAPPET (T:2.250)	AR	
15-5	12892-93J00-228	SHIM,TAPPET (T:2.275)	AR	
15-6	12892-93J00-230	SHIM,TAPPET (T:2.300)	AR	
15-7	12892-93J00-233	SHIM,TAPPET (T:2.325)	AR	
15-8	12892-93J00-235	SHIM,TAPPET (T:2.350)	AR	
15-9	12892-93J00-238	SHIM,TAPPET (T:2.375)	AR	
15-10	12892-93J00-240	SHIM,TAPPET (T:2.400)	AR	
15-11	12892-93J00-243	SHIM,TAPPET (T:2.425)	AR	
15-12	12892-93J00-245	SHIM,TAPPET (T:2.450)	AR	
15-13	12892-93J00-248	SHIM,TAPPET (T:2.475)	AR	
15-14	12892-93J00-250	SHIM,TAPPET (T:2.500)	AR	
15-15	12892-93J00-253	SHIM,TAPPET (T:2.525)	AR	
15-16	12892-93J00-255	SHIM,TAPPET (T:2.550)	AR	
15-17	12892-93J00-258	SHIM,TAPPET (T:2.575)	AR	
15-18	12892-93J00-260	SHIM,TAPPET (T:2.600)	AR	
15-19	12892-93J00-263	SHIM,TAPPET (T:2.625)	AR	
15-20	12892-93J00-265	SHIM,TAPPET (T:2.650)	AR	

FIG.121A

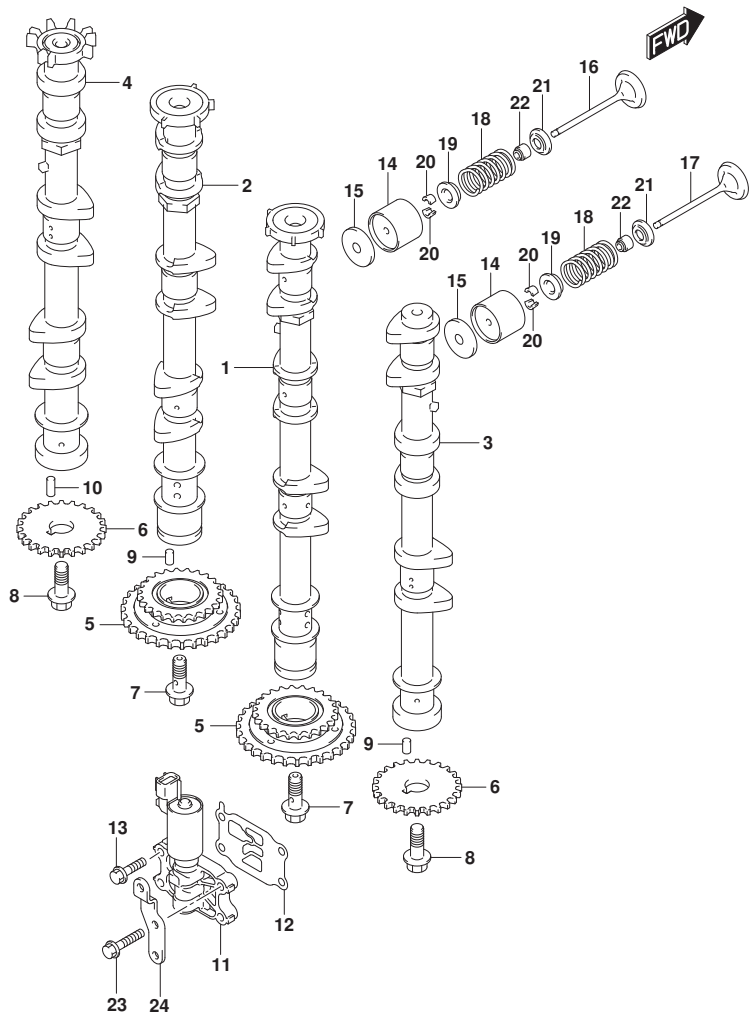

DF350A_E11_022_121A
CAMSHAFT

FIG.121A (1-B-12) CAMSHAFT ((DF350A,DF325A):(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-21	12892-93J00-268	SHIM,TAPPET (T:2.675)	AR	
15-22	12892-93J00-270	SHIM,TAPPET (T:2.700)	AR	
15-23	12892-93J00-273	SHIM,TAPPET (T:2.725)	AR	
15-24	12892-93J00-275	SHIM,TAPPET (T:2.750)	AR	
15-25	12892-93J00-278	SHIM,TAPPET (T:2.775)	AR	
15-26	12892-93J00-280	SHIM,TAPPET (T:2.800)	AR	
15-27	12892-93J00-283	SHIM,TAPPET (T:2.825)	AR	
15-28	12892-93J00-285	SHIM,TAPPET (T:2.850)	AR	
15-29	12892-93J00-288	SHIM,TAPPET (T:2.875)	AR	
15-30	12892-93J00-290	SHIM,TAPPET (T:2.900)	AR	
15-31	12892-93J00-293	SHIM,TAPPET (T:2.925)	AR	
15-32	12892-93J00-295	SHIM,TAPPET (T:2.950)	AR	
15-33	12892-93J00-298	SHIM,TAPPET (T:2.975)	AR	
15-34	12892-93J00-300	SHIM,TAPPET (T:3.000)	AR	
16	12911-98L00	VALVE,INTK	12	
17	12915-98L00	VALVE,EXH	12	
18	12921-98L00	SPRING,VALVE	24	
19	12931-78G00	RETAINER,VALVE SPRING	24	
20	12932-24400	COTTER,VALVE	48	
21	12933-69G10	SEAT,VALVE SPRING	24	
22	09289-05012	SEAL,OIL (5.5X11.5X9.3)	24	
23	01550-0630C	BOLT (6X30)	2	
24	36617-98L40	BRACKET,HARNESS	1	

DF350A_E11_022

Exploded view diagram of a mechanical assembly, likely a transmission or drive system, showing various components numbered 1 through 24. The components are arranged in three main vertical sections and two horizontal sections.

- Vertical Section 1 (Left):** Includes a shaft (1), a gear (5), a gear (6), a bolt (8), a bolt (7), a bolt (9), and a bolt (10).
- Vertical Section 2 (Middle):** Includes a shaft (2), a gear (5), a gear (6), a bolt (8), a bolt (7), a bolt (9), and a bolt (10).
- Vertical Section 3 (Right):** Includes a shaft (3), a gear (5), a gear (6), a bolt (8), a bolt (7), a bolt (9), and a bolt (10).
- Horizontal Section 1 (Top):** Includes a shaft (16), a spring (18), a washer (15), a washer (20), a washer (19), a washer (22), a washer (21), and a bolt (17).
- Horizontal Section 2 (Bottom):** Includes a shaft (17), a spring (18), a washer (15), a washer (20), a washer (19), a washer (22), a washer (21), and a bolt (16).
- Other Components:** Includes a bolt (13), a bolt (14), a bolt (15), a bolt (16), a bolt (17), a bolt (18), a bolt (19), a bolt (20), a bolt (21), a bolt (22), a bolt (23), and a bolt (24).

An arrow labeled "FWD" points towards the top right, indicating the forward direction of the assembly.

DF350A_E11_022_121B
CAMSHAFT

DF350A_E11_022

FIG.121B

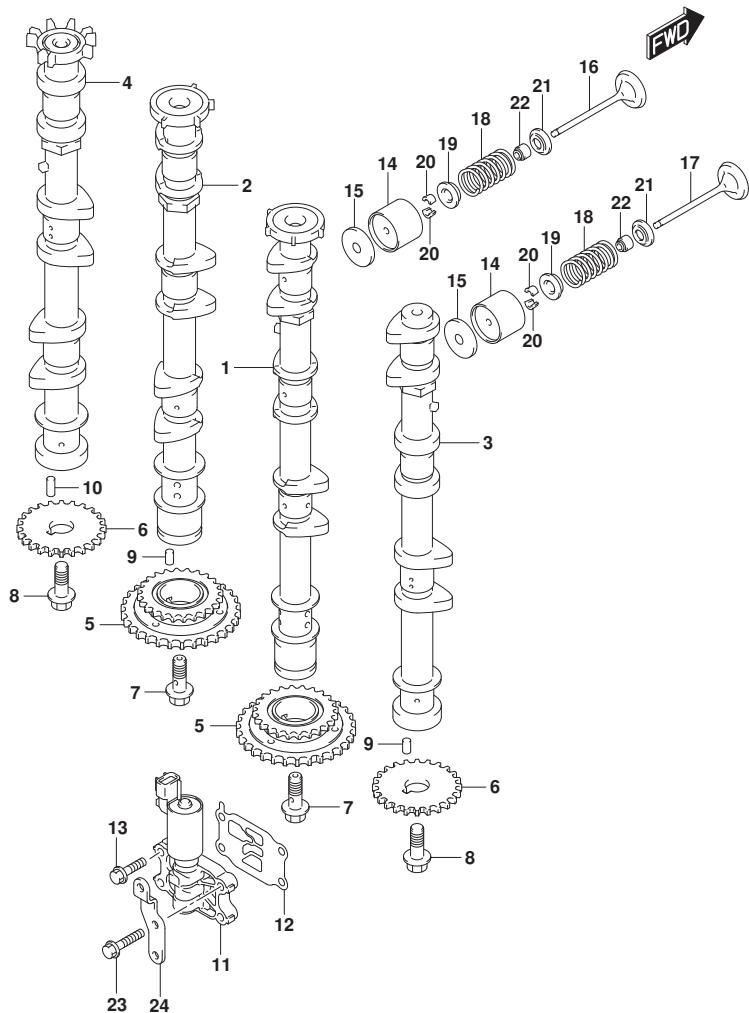


FIG.121B (1-B-14) CAMSHAFT ((DF350A,DF325A):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-21	12892-93J10-268	SHIM,TAPPET (T:2.675)	AR	
15-22	12892-93J10-270	SHIM,TAPPET (T:2.700)	AR	
15-23	12892-93J10-273	SHIM,TAPPET (T:2.725)	AR	
15-24	12892-93J10-275	SHIM,TAPPET (T:2.750)	AR	
15-25	12892-93J10-278	SHIM,TAPPET (T:2.775)	AR	
15-26	12892-93J10-280	SHIM,TAPPET (T:2.800)	AR	
15-27	12892-93J10-283	SHIM,TAPPET (T:2.825)	AR	
15-28	12892-93J10-285	SHIM,TAPPET (T:2.850)	AR	
15-29	12892-93J10-288	SHIM,TAPPET (T:2.875)	AR	
15-30	12892-93J10-290	SHIM,TAPPET (T:2.900)	AR	
15-31	12892-93J10-293	SHIM,TAPPET (T:2.925)	AR	
15-32	12892-93J10-295	SHIM,TAPPET (T:2.950)	AR	
15-33	12892-93J10-298	SHIM,TAPPET (T:2.975)	AR	
15-34	12892-93J10-300	SHIM,TAPPET (T:3.000)	AR	
16	12911-98L00	VALVE,INTK	12	
17	12915-98L00	VALVE,EXH	12	
18	12921-98L00	SPRING,VALVE	24	
19	12931-78G00	RETAINER,VALVE SPRING	24	
20	12932-24400	COTTER,VALVE	48	
21	12933-69G10	SEAT,VALVE SPRING	24	
22	09289-05012	SEAL,OIL (5.5X11.5X9.3)	24	
23	01550-0630C	BOLT (6X30)	2	
24	36617-98L40	BRACKET,HARNESS	1	

FIG.121C

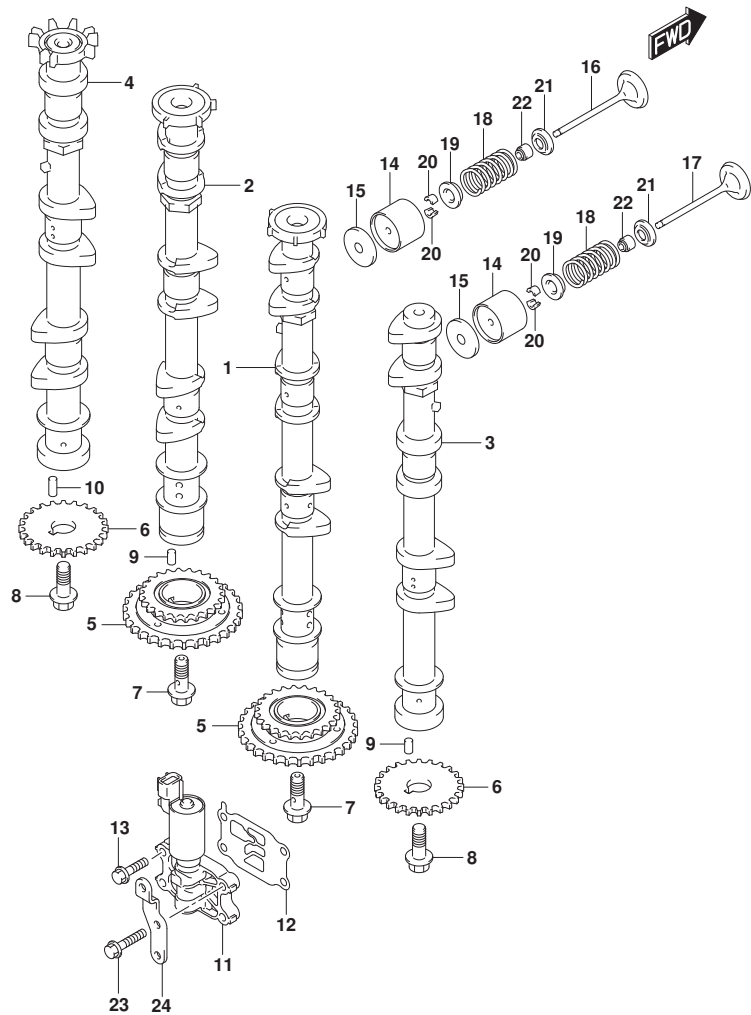


FIG.121C (1-B-15) CAMSHAFT (DF300B:(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98L40	CAMSHAFT,INTK STBD	1	
2	12705-98L00	CAMSHAFT,INTK PORT	1	
3	12721-98L30	CAMSHAFT,EXH STBD	1	
4	12729-98L30	CAMSHAFT,EXH PORT	1	
5	12740-98L00	SPROCKET ASSY,CAM TIMING (NT:2 2/32)	2	
6	12748-93J00	SPROCKET,CAMSHAFT (NT:22)	2	
7	12753-93J00	BOLT,INTK CAMSHAFT	2	
8	12749-93J00	BOLT,CAMSHAFT	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE,OIL CONTROL	2	
12	16555-93J01	GASKET,OCV	2	
13	01550-0625C	BOLT (6X25)	6	
14	12891-93J00	TAPPET	24	
15-1	12892-93J00-218	SHIM,TAPPET (T:2.175)	AR	
15-2	12892-93J00-220	SHIM,TAPPET (T:2.200)	AR	
15-3	12892-93J00-223	SHIM,TAPPET (T:2.225)	AR	
15-4	12892-93J00-225	SHIM,TAPPET (T:2.250)	AR	
15-5	12892-93J00-228	SHIM,TAPPET (T:2.275)	AR	
15-6	12892-93J00-230	SHIM,TAPPET (T:2.300)	AR	
15-7	12892-93J00-233	SHIM,TAPPET (T:2.325)	AR	
15-8	12892-93J00-235	SHIM,TAPPET (T:2.350)	AR	
15-9	12892-93J00-238	SHIM,TAPPET (T:2.375)	AR	
15-10	12892-93J00-240	SHIM,TAPPET (T:2.400)	AR	
15-11	12892-93J00-243	SHIM,TAPPET (T:2.425)	AR	
15-12	12892-93J00-245	SHIM,TAPPET (T:2.450)	AR	
15-13	12892-93J00-248	SHIM,TAPPET (T:2.475)	AR	
15-14	12892-93J00-250	SHIM,TAPPET (T:2.500)	AR	
15-15	12892-93J00-253	SHIM,TAPPET (T:2.525)	AR	
15-16	12892-93J00-255	SHIM,TAPPET (T:2.550)	AR	
15-17	12892-93J00-258	SHIM,TAPPET (T:2.575)	AR	
15-18	12892-93J00-260	SHIM,TAPPET (T:2.600)	AR	
15-19	12892-93J00-263	SHIM,TAPPET (T:2.625)	AR	
15-20	12892-93J00-265	SHIM,TAPPET (T:2.650)	AR	

FIG.121C

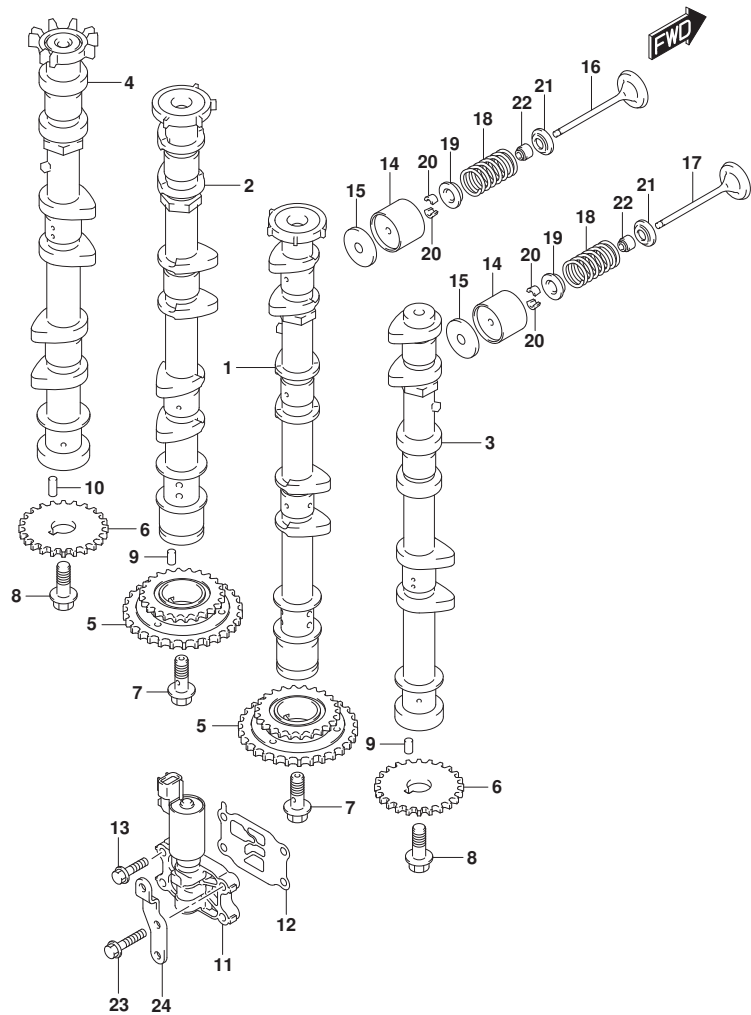


FIG.121C (1-B-16) CAMSHAFT (DF300B:(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-21	12892-93J00-268	SHIM,TAPPET (T:2.675)	AR	
15-22	12892-93J00-270	SHIM,TAPPET (T:2.700)	AR	
15-23	12892-93J00-273	SHIM,TAPPET (T:2.725)	AR	
15-24	12892-93J00-275	SHIM,TAPPET (T:2.750)	AR	
15-25	12892-93J00-278	SHIM,TAPPET (T:2.775)	AR	
15-26	12892-93J00-280	SHIM,TAPPET (T:2.800)	AR	
15-27	12892-93J00-283	SHIM,TAPPET (T:2.825)	AR	
15-28	12892-93J00-285	SHIM,TAPPET (T:2.850)	AR	
15-29	12892-93J00-288	SHIM,TAPPET (T:2.875)	AR	
15-30	12892-93J00-290	SHIM,TAPPET (T:2.900)	AR	
15-31	12892-93J00-293	SHIM,TAPPET (T:2.925)	AR	
15-32	12892-93J00-295	SHIM,TAPPET (T:2.950)	AR	
15-33	12892-93J00-298	SHIM,TAPPET (T:2.975)	AR	
15-34	12892-93J00-300	SHIM,TAPPET (T:3.000)	AR	
16	12911-98L00	VALVE,INTK	12	
17	12915-98L00	VALVE,EXH	12	
18	12921-98L00	SPRING,VALVE	24	
19	12931-78G00	RETAINER,VALVE SPRING	24	
20	12932-24400	COTTER,VALVE	48	
21	12933-69G10	SEAT,VALVE SPRING	24	
22	09289-05012	SEAL,OIL (5.5X11.5X9.3)	24	
23	01550-0630C	BOLT (6X30)	2	
24	36617-98L40	BRACKET,HARNESS	1	

FIG.121D


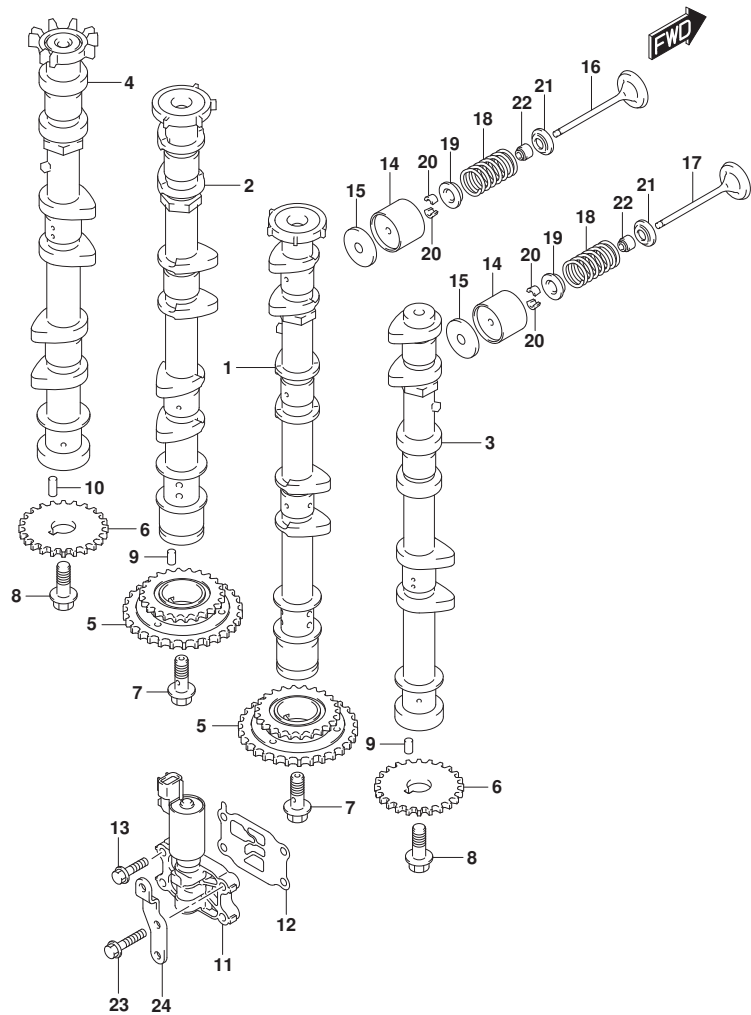


FIG.121D (1-C-2) CAMSHAFT (DF300B:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98L40	CAMSHAFT,INTK STBD	1	
2	12705-98L00	CAMSHAFT,INTK PORT	1	
3	12721-98L30	CAMSHAFT,EXH STBD	1	
4	12729-98L30	CAMSHAFT,EXH PORT	1	
5	12740-98L00	SPROCKET ASSY,CAM TIMING (NT:2 2/32)	2	
6	12748-93J00	SPROCKET,CAMSHAFT (NT:22)	2	
7	12753-93J00	BOLT,INTK CAMSHAFT	2	
8	12749-93J00	BOLT,CAMSHAFT	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE,OIL CONTROL	2	
12	16555-93J01	GASKET,OCV	2	
13	01550-0625C	BOLT (6X25)	6	
14	12891-93J10	TAPPET	24	
15-1	12892-93J10-218	SHIM,TAPPET (T:2.175)	AR	
15-2	12892-93J10-220	SHIM,TAPPET (T:2.200)	AR	
15-3	12892-93J10-223	SHIM,TAPPET (T:2.225)	AR	
15-4	12892-93J10-225	SHIM,TAPPET (T:2.250)	AR	
15-5	12892-93J10-228	SHIM,TAPPET (T:2.275)	AR	
15-6	12892-93J10-230	SHIM,TAPPET (T:2.300)	AR	
15-7	12892-93J10-233	SHIM,TAPPET (T:2.325)	AR	
15-8	12892-93J10-235	SHIM,TAPPET (T:2.350)	AR	
15-9	12892-93J10-238	SHIM,TAPPET (T:2.375)	AR	
15-10	12892-93J10-240	SHIM,TAPPET (T:2.400)	AR	
15-11	12892-93J10-243	SHIM,TAPPET (T:2.425)	AR	
15-12	12892-93J10-245	SHIM,TAPPET (T:2.450)	AR	
15-13	12892-93J10-248	SHIM,TAPPET (T:2.475)	AR	
15-14	12892-93J10-250	SHIM,TAPPET (T:2.500)	AR	
15-15	12892-93J10-253	SHIM,TAPPET (T:2.525)	AR	
15-16	12892-93J10-255	SHIM,TAPPET (T:2.550)	AR	
15-17	12892-93J10-258	SHIM,TAPPET (T:2.575)	AR	
15-18	12892-93J10-260	SHIM,TAPPET (T:2.600)	AR	
15-19	12892-93J10-263	SHIM,TAPPET (T:2.625)	AR	
15-20	12892-93J10-265	SHIM,TAPPET (T:2.650)	AR	

FIG.121D

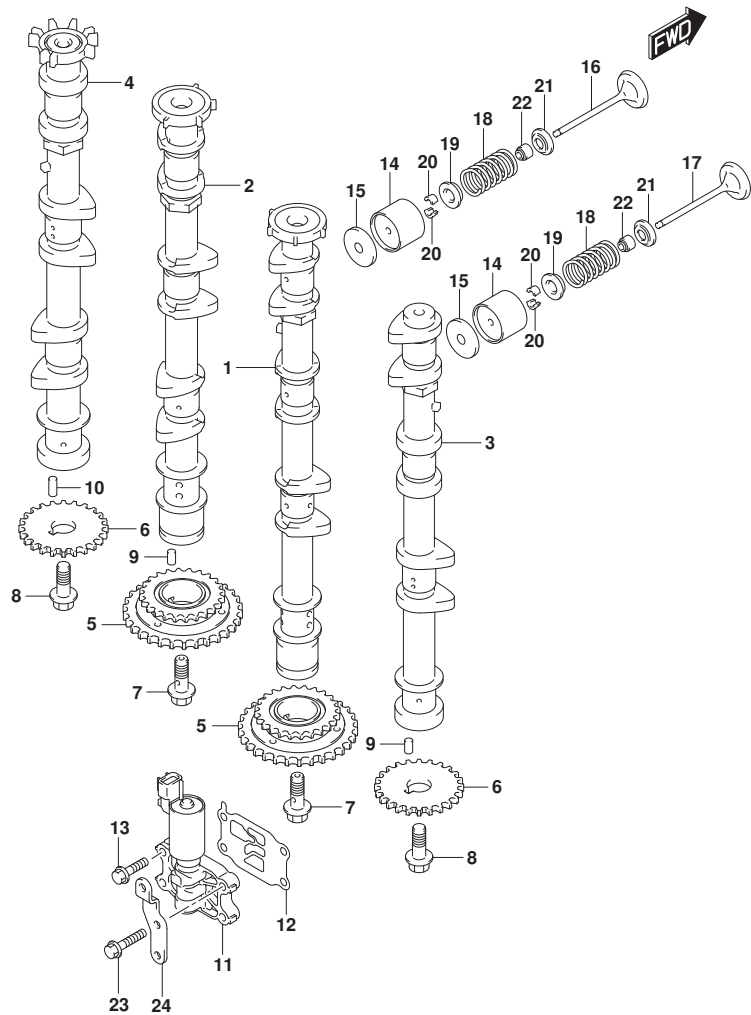

DF350A_E11_022_121D
CAMSHAFT

FIG.121D (1-C-3) CAMSHAFT (DF300B:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-21	12892-93J10-268	SHIM,TAPPET (T:2.675)	AR	
15-22	12892-93J10-270	SHIM,TAPPET (T:2.700)	AR	
15-23	12892-93J10-273	SHIM,TAPPET (T:2.725)	AR	
15-24	12892-93J10-275	SHIM,TAPPET (T:2.750)	AR	
15-25	12892-93J10-278	SHIM,TAPPET (T:2.775)	AR	
15-26	12892-93J10-280	SHIM,TAPPET (T:2.800)	AR	
15-27	12892-93J10-283	SHIM,TAPPET (T:2.825)	AR	
15-28	12892-93J10-285	SHIM,TAPPET (T:2.850)	AR	
15-29	12892-93J10-288	SHIM,TAPPET (T:2.875)	AR	
15-30	12892-93J10-290	SHIM,TAPPET (T:2.900)	AR	
15-31	12892-93J10-293	SHIM,TAPPET (T:2.925)	AR	
15-32	12892-93J10-295	SHIM,TAPPET (T:2.950)	AR	
15-33	12892-93J10-298	SHIM,TAPPET (T:2.975)	AR	
15-34	12892-93J10-300	SHIM,TAPPET (T:3.000)	AR	
16	12911-98L00	VALVE,INTK	12	
17	12915-98L00	VALVE,EXH	12	
18	12921-98L00	SPRING,VALVE	24	
19	12931-78G00	RETAINER,VALVE SPRING	24	
20	12932-24400	COTTER,VALVE	48	
21	12933-69G10	SEAT,VALVE SPRING	24	
22	09289-05012	SEAL,OIL (5.5X11.5X9.3)	24	
23	01550-0630C	BOLT (6X30)	2	
24	36617-98L40	BRACKET,HARNESS	1	

DF350A_E11_022

FIG.122A

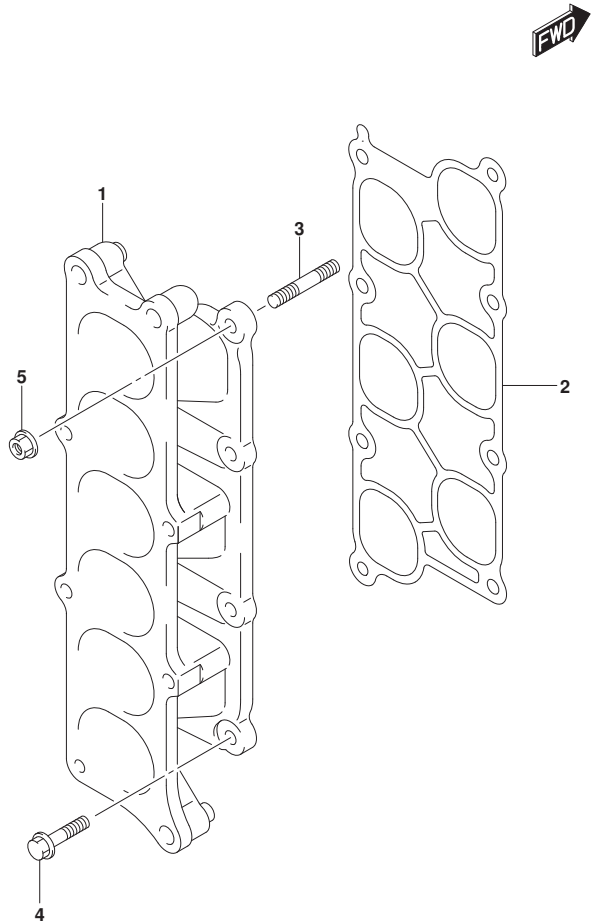


FIG.122A (1-C-4) INTAKE MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-98L00	MANIFOLD,INTAKE	1	
2	13119-98L00	GASKET,INTAKE MANIFOLD	1	
3	09108-08143	BOLT,STUD (L:35)	2	
4	09116-08175	BOLT (8X35)	6	
5	08316-1008C	NUT	2	

FIG.136A

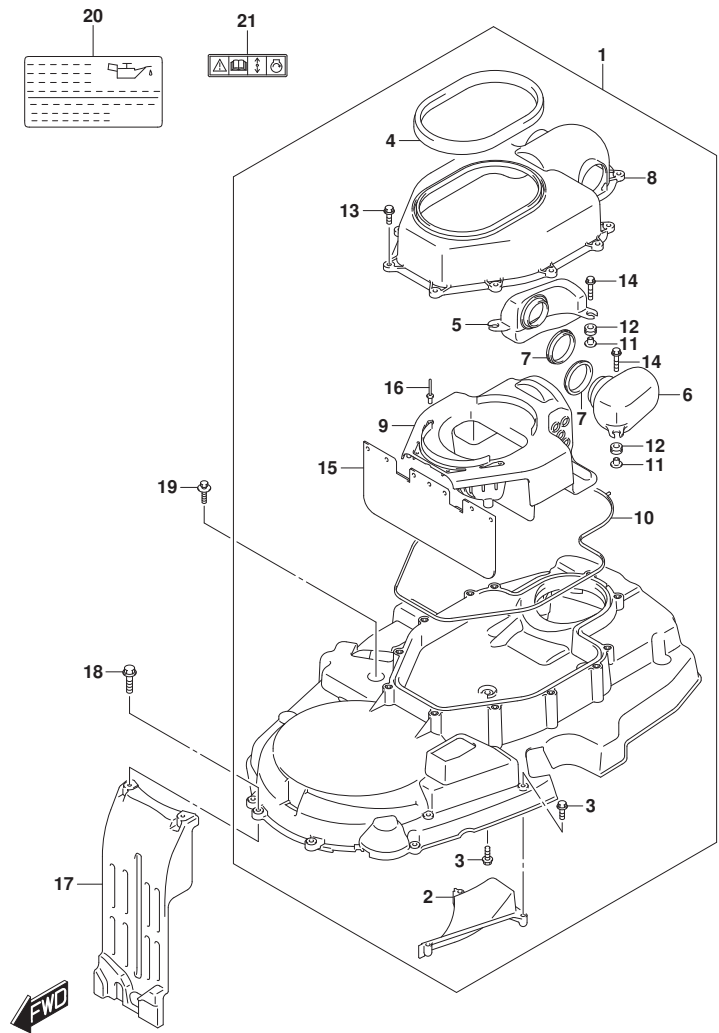


FIG.136A (1-C-5) RING GEAR COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11510-98L10	COVER,RING GEAR	1	
2	11514-98J00	.PLATE,RING GEAR COVER	1	
3	11517-98J00	.SCREW	6	
4	11531-98L00	.SEAL,SILENCER UPPER	1	UPPER
5	13761-98L00	.RESONATOR,STBD	1	STBD
6	13762-98L00	.RESONATOR,PORT	1	PORT
7	13766-98L00	.GROMMET,RESONATOR	2	
8	13811-98L00	.SILENCER,UPPER COVER	1	UPPER
9	13812-98L01	.SILENCER,INNER	1	
10	13851-98L00	.SEAL,SILENCER	1	
11	09169-06062	.WASHER (6.3X17X1.6)	4	
12	09320-09016	.CUSHION (9X18X9.5)	4	
13	01550-0620C	.BOLT (6X20)	8	
14	01550-0630C	.BOLT (6X30)	4	
15	13824-98L00	.SILENCER,INNER FRONT	1	
16	09229-04055	.RIVET	4	
17	11522-98L01	COVER,RING GEAR FRONT	1	
18	01550-0625C	BOLT (6X25)	4	
19-1	09116-06215	BOLT (6X30)	4	020
19-2	09103-06551	BOLT (6X30)	4	021,022
20	61494-93J01	LABEL,OIL & CLEARANCE	1	
21	69711-93E11	LABEL,S.I.G.P (S.I.G.P.)	1	

FIG.140A

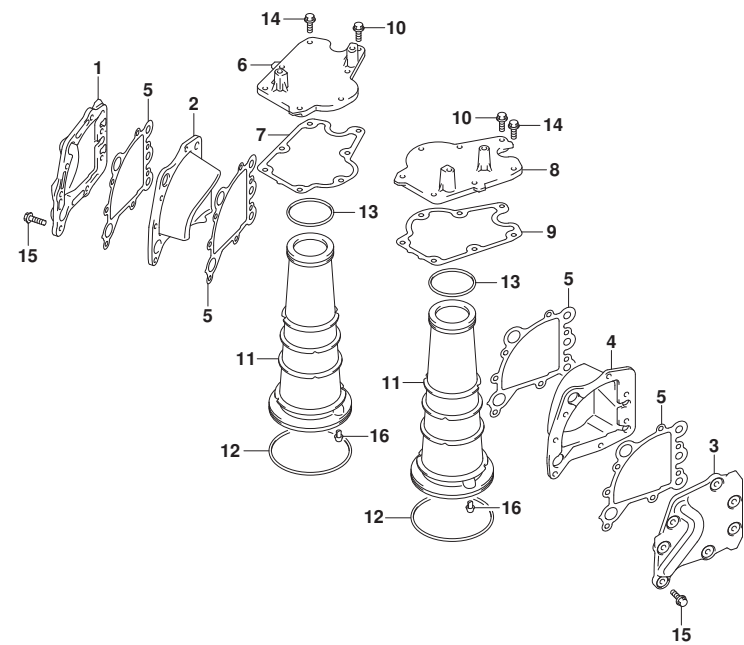


FIG.140A (1-C-6) EXHAUST COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1	14141-98L00	COVER,EXHAUST OUTER STBD	1	STBD	
2	14161-98L00	COVER,EXHAUST INNER STBD	1	STBD	
3	14142-98L00	COVER,EXHAUST OUTER PORT	1	PORT	
4	14162-98L00	COVER,EXHAUST INNER PORT	1	PORT	
5	14151-98L00	GASKET,EXH COVER	4		
6	14171-98L00	COVER,EXHAUST UPPER STBD	1	STBD	
7	14181-98L01	GASKET,EXH UPPER COVER STBD	1	STBD	
8	14172-98L00	COVER,EXHAUST UPPER PORT	1	PORT	
9	14182-98L01	GASKET,EXH UPPER COVER PORT	1	PORT	
10	09116-06228	BOLT (6X20)	2		
11	14111-98L01	PIPE,EXHAUST INNER	2		
12	09280-00049	O-RING (D:3.5,ID:99.6)	2		
13	09280-55001	O-RING (D:3.5,ID:54.4)	2		
14	01550-0620C	BOLT (6X20)	12		
15	01550-0625C	BOLT (6X25)	14		
16	14112-98L00	CUSHION,EXH PIPE	4		



FIG.144A

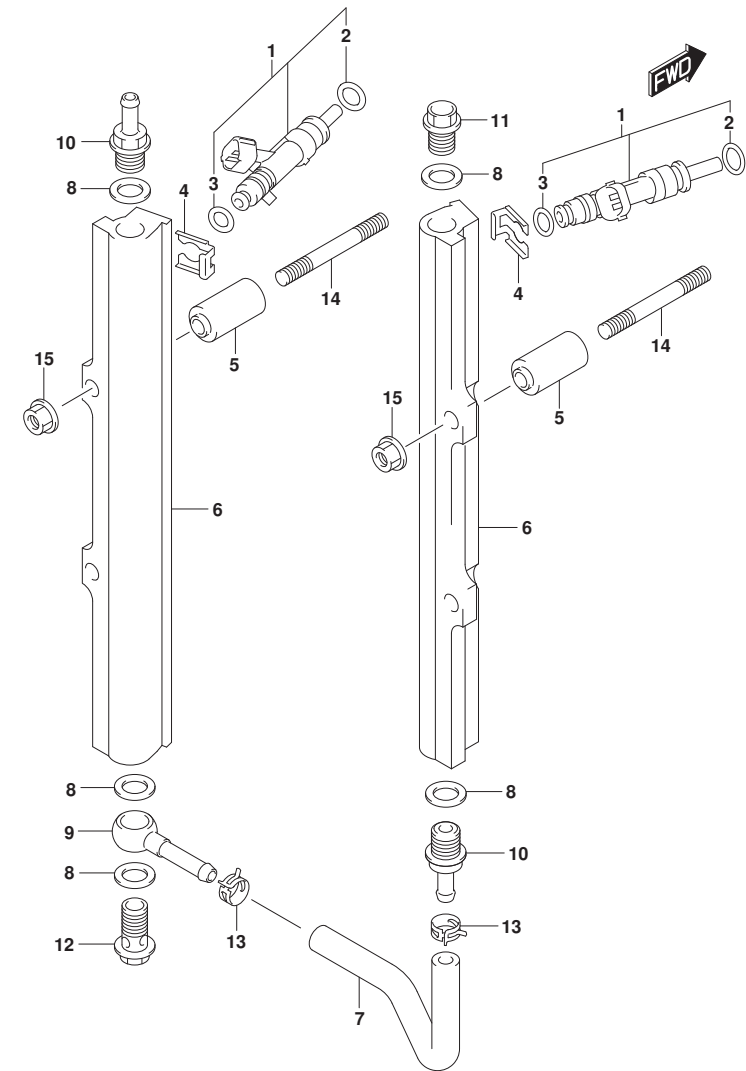


FIG.144A (1-C-7) FUEL INJECTOR (E01,E03,E11)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15710-98L10	INJECTOR ASSY,FUEL	12	
2	15716-82M00	.O-RING	12	LOWER
3	15717-82M00	.O-RING	12	UPPER
4	15715-98L00	CLIP,INJECTOR	12	
5	15735-98L00	INSULATOR,DELIVERY PIPE	4	
6	15751-98L00	PIPE,DELIVERY	2	
7	15756-98L00	HOSE,FUEL	1	DLVY TO DLVY
8	15762-93J00	GASKET,DELIVERY PIPE	5	
9	15830-77EA0	JOINT,FUEL MAIN	1	
10	15831-93J00	UNION,DELIVERY PIPE	2	
11	09247-14041	PLUG (14X14)	1	
12	09360-14009	UNION (14X27)	1	
13	09401-11425	CLIP	2	
14	09108-08189	BOLT,STUD (L:55)	4	
15	08316-1008C	NUT	4	

FIG.144B

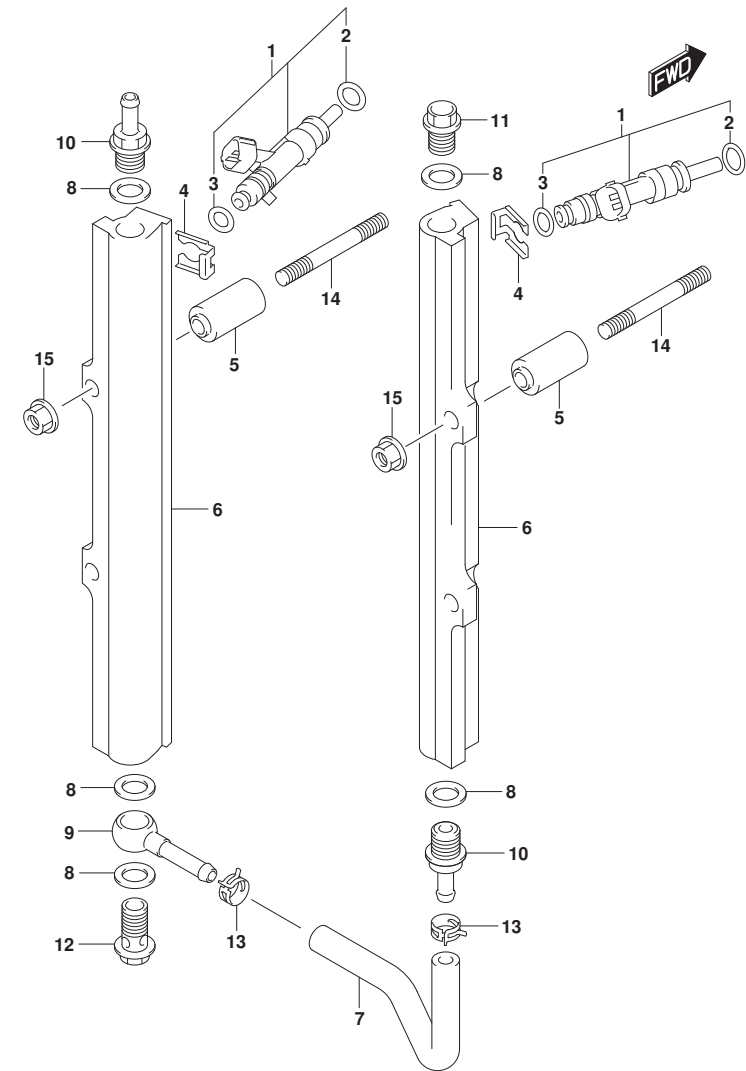


FIG.144B (1-C-8) FUEL INJECTOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15710-98L10	INJECTOR ASSY,FUEL	12	
2	15716-82M00	.O-RING	12	LOWER
3	15717-82M00	.O-RING	12	UPPER
4	15715-98L00	CLIP,INJECTOR	12	
5	15735-98L00	INSULATOR,DELIVERY PIPE	4	
6	15751-98L00	PIPE,DELIVERY	2	
7	15756-98L00	HOSE,FUEL	1	DLVY TO DLVY
8	15762-93J10	GASKET,DELIVERY PIPE	5	
9	15832-93J00	UNION,DELIVERY PIPE	1	
10	15831-93J00	UNION,DELIVERY PIPE	2	
11	09247-14042	PLUG (14X14)	1	
12	09360-14014	UNION	1	
13	09401-11425	CLIP	2	
14	09108-08189	BOLT,STUD (L:55)	4	
15	08316-1008C	NUT	4	

FIG.147A


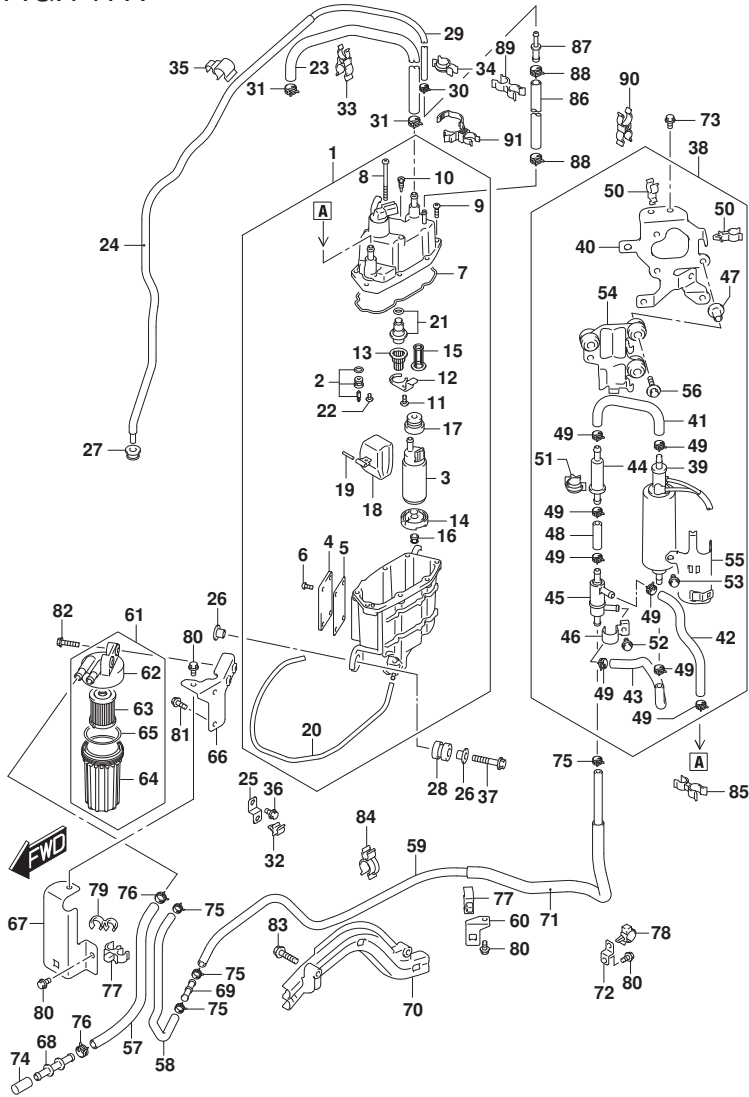


FIG.147A (1-C-9) FUEL PUMP/FUEL VAPOR SEPARATOR (E01,E03,E11)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-98L21	SEPARATOR ASSY,FUEL VAPOR	1	
2	13370-93J10	.VALVE ASSY,NEEDLE	1	
3	15200-98L00	.PUMP ASSY,FUEL	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J00	.GASKET,SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW,DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L01	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L00	.BUSH,FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE,DRAIN	1	
21	15760-98L00	.REGULATOR,FUEL PRESSURE	1	
22	02142-0408B	.SCREW	1	
23	15681-98L00	HOSE,FUEL	1	
24	18498-98L21	PROTECTOR,EVAP HOSE (9.5X11.5X 825)	1	
25	36617-93J10	BRACKET,HARNESS	1	
26	09169-08042	WASHER (8.5X22X2)	6	
27	09320-08520	CUSHION	1	
28	09320-12094	CUSHION	3	
29	09352-50003-06A	HOSE (5X8.2X1060)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP (D1:12,D2:8)	1	
34	09408-00142	CLIP	1	

FIG.147A

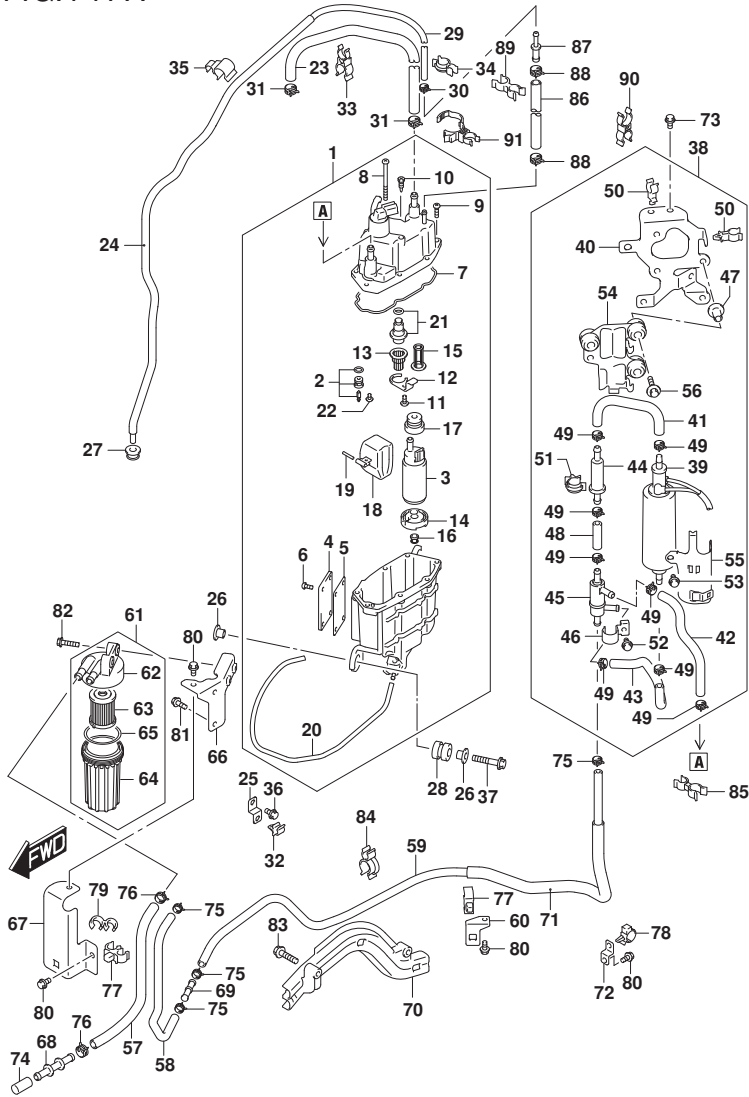

DF350A_E11_022_147A
FUELPUMP/FUELVAPOR SEPARATOR

FIG.147A (1-C-10) FUEL PUMP/FUEL VAPOR SEPARATOR (E01,E03,E11)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	.CLAMP	3	
36	01550-0612C	.BOLT (6X12)	1	
37	01550-0840C	.BOLT	3	
38	15100-98L13	.PUMP SET,FUEL	1	
39	15100-98J00	.PUMP ASSY,FUEL	1	
40	15116-98L10	.BRACKET,FUEL PUMP	1	
41	15632-98L10	.HOSE,FUEL	1	
42	15635-98L01	.HOSE,FUEL	1	
43	15637-98L10	.HOSE,FUEL	1	
44	15643-98L00	.FILTER,FUEL	1	
45	15645-93J10	.VALVE,CHECK	1	
46	15674-98L01	.CLIP,CHECK VALVE	1	
47	09169-06093	.WASHER	3	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	8	
50	09403-13310	.CLAMP	2	
51	09403-16307	.CLAMP	1	
52	01550-0612C	.BOLT (6X12)	1	
53	01570-06127	.BOLT	1	
54	15114-93J00	.BRACKET COMP,FUEL PUMP NO.1	1	
55	15115-93J02	.BRACKET,FUEL PUMP NO.2	1	
56	09116-06524	.BOLT (M6)	3	
57	15191-98L20	.HOSE,FUEL	1	
58	15192-98L00	.HOSE,FUEL	1	
59	15193-98L00	.HOSE,FUEL	1	
60	15198-98L00	.BRACKET,FUEL HOSE	1	
61	15410-98L00	.FILTER,FUEL	1	
62	15411-93J10	.CAP,FUEL FILTER	1	
63	15412-93J10	.FILTER ASSY,FUEL	1	
64	15413-98L00	.CASE ASSY,FUEL FILTER	1	
65	15415-93J10	.SEAL,FUEL FILTER NO.1	1	
66	15421-98L00	.BRACKET,FUEL FILTER	1	
67	15423-98L00	.GUARD,FUEL HOSE	1	
68	15830-98J01	.JOINT,FUEL HOSE	1	
69	15831-96J00	.UNION,2 WAY FUEL HOSE	1	

DF350A_E11_022

FIG.147A

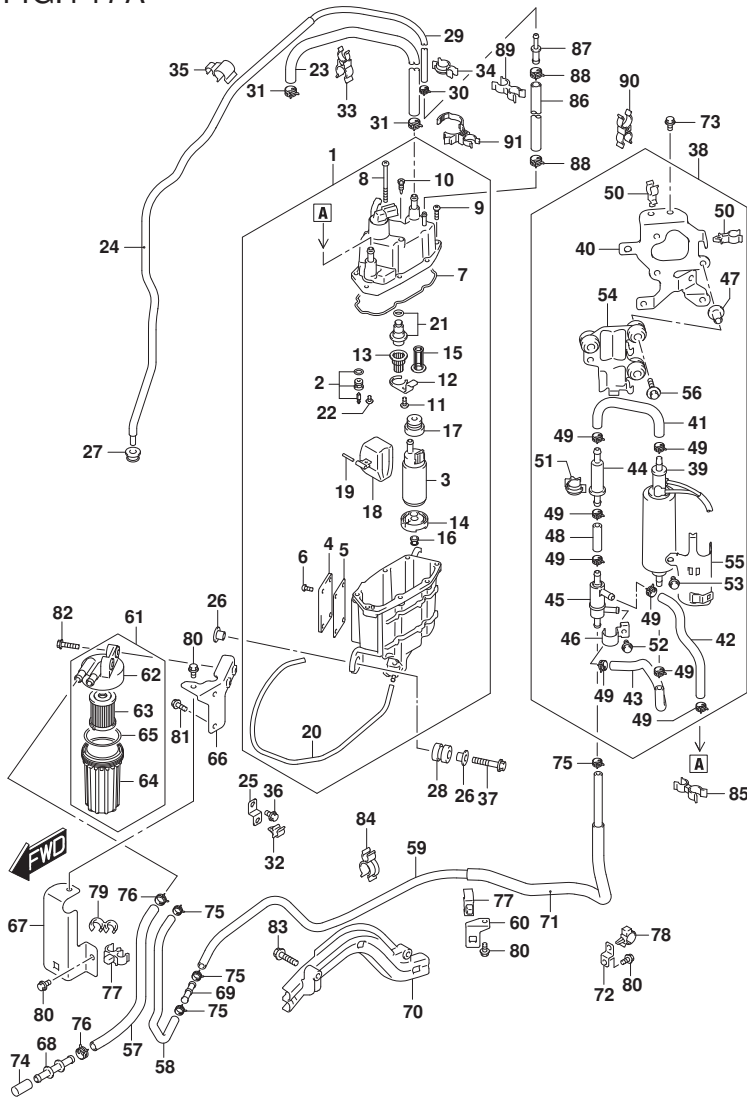


FIG.147A (1-C-11) FUEL PUMP/FUEL VAPOR SEPARATOR (E01,E03,E11)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
70	15852-98L00	GUIDE,FUEL HOSE	1	
71	18498-99E11	PROTECTOR,FUEL HOSE (L:610)	1	L:610->450
72	36617-93J10	BRACKET,HARNESS	1	
73	09103-06267	BOLT (6X18)	2	
74	09251-09009	PLUG (OD:13.6)	1	
75	09401-11423	CLIP	4	
76	09401-14409	CLIP	2	
77	09403-13308	CLAMP	2	
78	09403-17403	CLAMP	1	
79	09408-00121	CLAMP	1	
80	01550-0612C	BOLT (6X12)	4	
81	01550-0616C	BOLT (6X16)	2	
82	01550-0625C	BOLT (6X25)	2	
83	01550-0630C	BOLT (6X30)	2	
84	09408-00142	CLIP	1	
85	09408-00054	CLAMP	1	
86	09343-70503-600	HOSE (7X12X600)	1	L:600->240
87	15695-98L00	UNION,EVAPORATION	1	
88	09401-11423	CLIP	2	
89	09408-00050	CLIP (ID:12X2)	1	
90	09408-00173	CLAMP	2	
91	09408-00337	CLAMP,FUEL HOSE	1	

FIG.147B

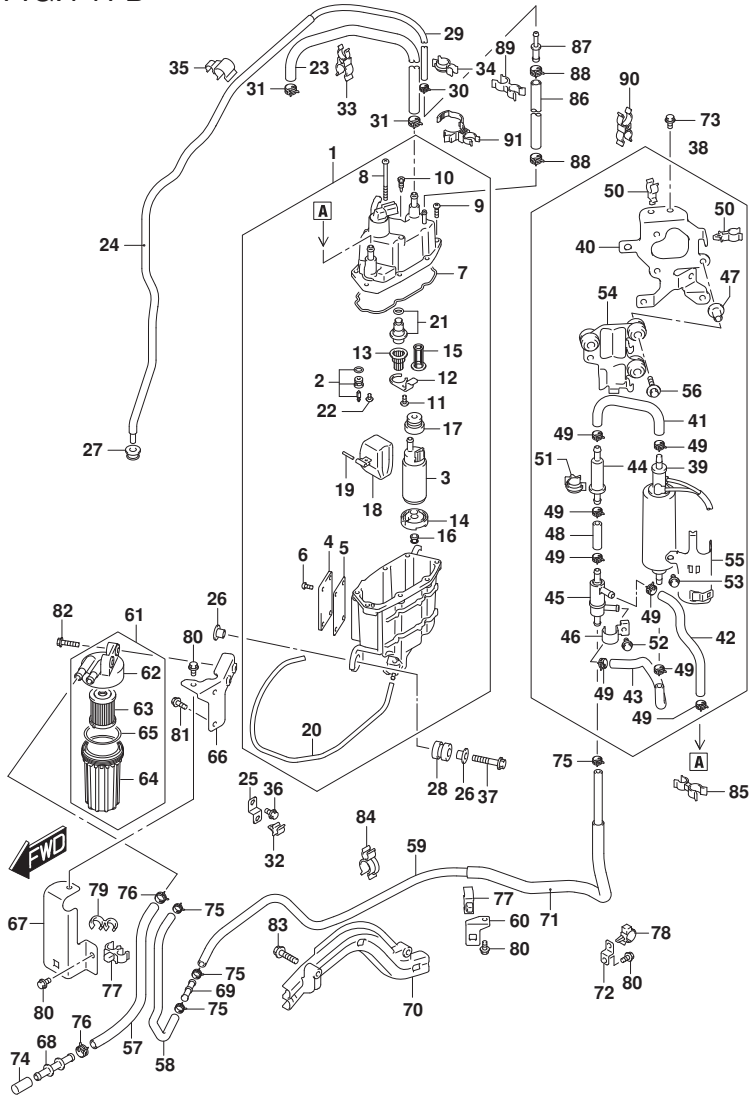


FIG.147B (1-C-12) FUEL PUMP/FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-98L10	SEPARATOR ASSY,FUEL VAPOR	1	
2	13370-93J10	.VALVE ASSY,NEEDLE	1	
3	15200-98L10	.PUMP ASSY,FUEL	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J10	.GASKET,SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW,DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L10	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L10	.BUSH,FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE,DRAIN	1	
21	15760-98L00	.REGULATOR,FUEL PRESSURE	1	
22	13614-93J00	.SCREW	1	
23	15681-98L00	HOSE,FUEL	1	
24	18498-98L21	PROTECTOR,EVAP HOSE (9.5X11.5X 825)	1	
25	36617-93J10	BRACKET,HARNESS	1	
26	09169-08042	WASHER (8.5X22X2)	6	
27	09320-08520	CUSHION	1	
28	09320-12094	CUSHION	3	
29	09352-50003-06A	HOSE (5X8.2X1060)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP (D1:12,D2:8)	1	
34	09408-00142	CLIP	1	

FIG.147B

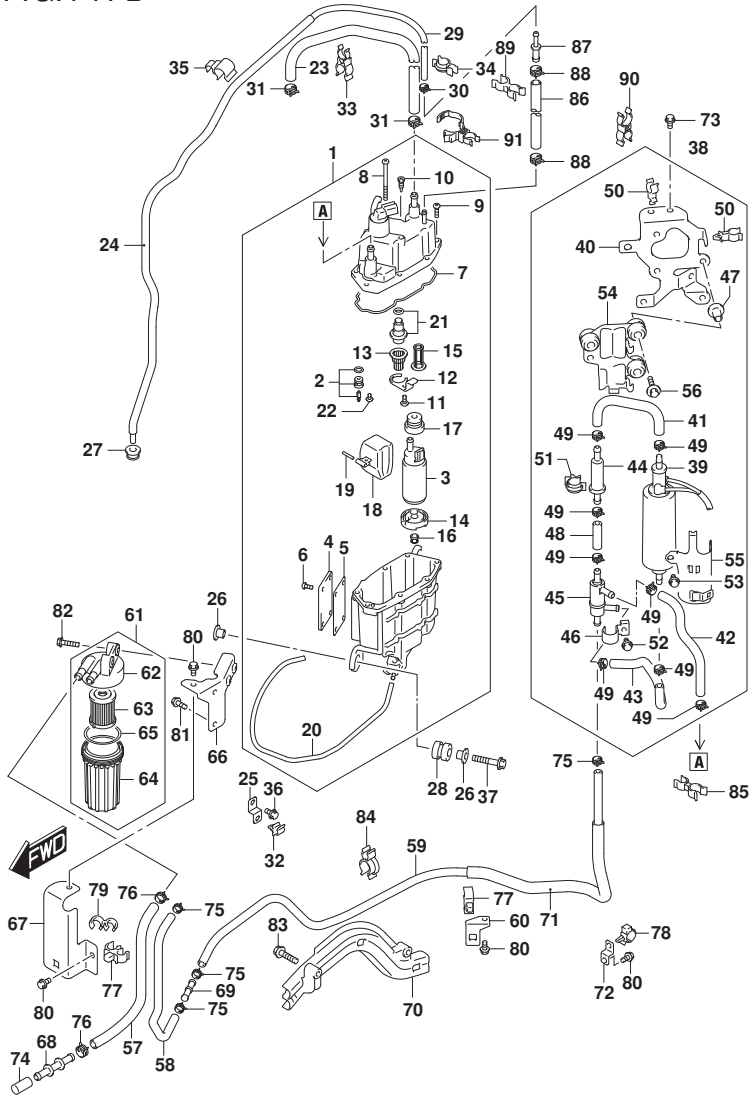


FIG.147B (1-C-13) FUEL PUMP/FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	.CLAMP	3	
36	01550-0612C	.BOLT (6X12)	1	
37	01550-0840C	.BOLT	3	
38	15100-98L13	.PUMP SET,FUEL	1	
39	15100-98J00	.PUMP ASSY,FUEL	1	
40	15116-98L10	.BRACKET,FUEL PUMP	1	
41	15632-98L10	.HOSE,FUEL	1	
42	15635-98L01	.HOSE,FUEL	1	
43	15637-98L10	.HOSE,FUEL	1	
44	15643-98L00	.FILTER,FUEL	1	
45	15645-93J10	.VALVE,CHECK	1	
46	15674-98L01	.CLIP,CHECK VALVE	1	
47	09169-06093	.WASHER	3	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	8	
50	09403-13310	.CLAMP	2	
51	09403-16307	.CLAMP	1	
52	01550-0612C	.BOLT (6X12)	1	
53	01570-06127	.BOLT	1	
54	15114-93J00	.BRACKET COMP,FUEL PUMP NO.1	1	
55	15115-93J02	.BRACKET,FUEL PUMP NO.2	1	
56	09116-06524	.BOLT (M6)	3	
57	15191-98L20	.HOSE,FUEL	1	
58	15192-98L00	.HOSE,FUEL	1	
59	15193-98L00	.HOSE,FUEL	1	
60	15198-98L00	.BRACKET,FUEL HOSE	1	
61	15410-98L00	.FILTER,FUEL	1	
62	15411-93J10	.CAP,FUEL FILTER	1	
63	15412-93J10	.FILTER ASSY,FUEL	1	
64	15413-98L00	.CASE ASSY,FUEL FILTER	1	
65	15415-93J10	.SEAL,FUEL FILTER NO.1	1	
66	15421-98L00	.BRACKET,FUEL FILTER	1	
67	15423-98L00	.GUARD,FUEL HOSE	1	
68	15830-98J01	.JOINT,FUEL HOSE	1	
69	15831-96J00	.UNION,2 WAY FUEL HOSE	1	

FIG.147B

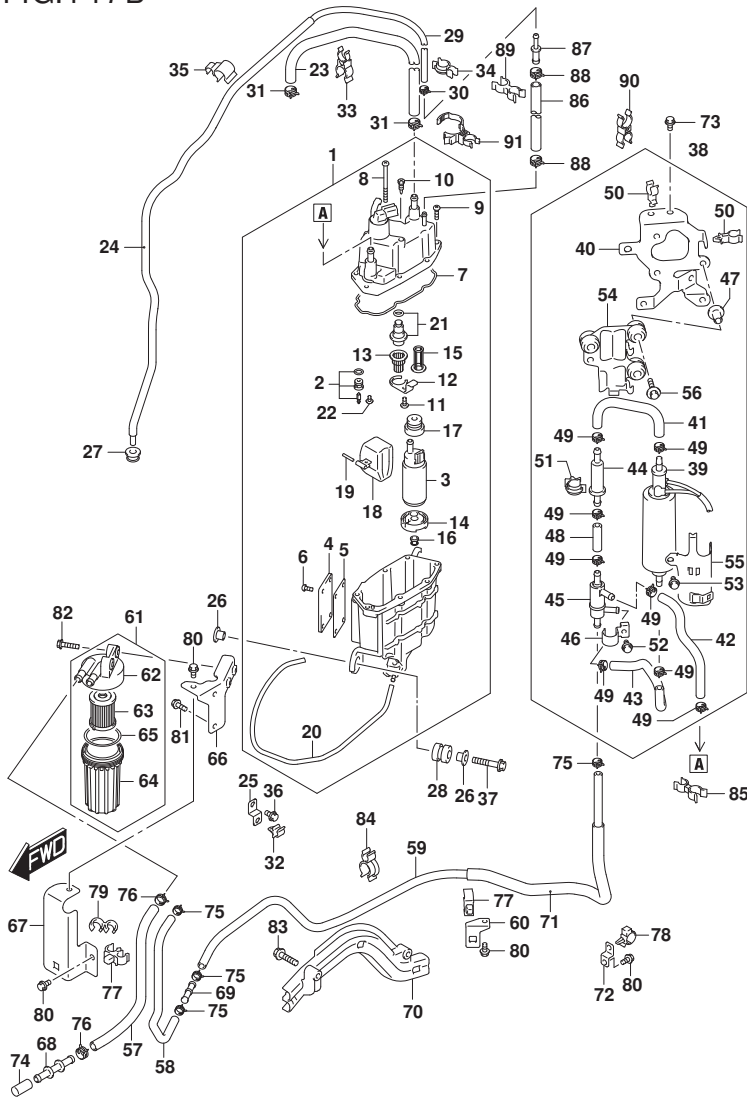


FIG.147B (1-C-14) FUEL PUMP/FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
70	15852-98L00	GUIDE,FUEL HOSE	1	
71	18498-99E11	PROTECTOR,FUEL HOSE (L:610)	1	L:610->450
72	36617-93J10	BRACKET,HARNESS	1	
73	09103-06267	BOLT (6X18)	2	
74	09251-09009	PLUG (OD:13.6)	1	
75	09401-11423	CLIP	4	
76	09401-14409	CLIP	2	
77	09403-13308	CLAMP	2	
78	09403-17403	CLAMP	1	
79	09408-00121	CLAMP	1	
80	01550-0612C	BOLT (6X12)	4	
81	01550-0616C	BOLT (6X16)	2	
82	01550-0625C	BOLT (6X25)	2	
83	01550-0630C	BOLT (6X30)	2	
84	09408-00142	CLIP	1	
85	09408-00054	CLAMP	1	
86	09343-70503-600	HOSE (7X12X600)	1	L:600->240
87	15695-98L00	UNION,EVAPORATION	1	
88	09401-11423	CLIP	2	
89	09408-00050	CLIP (ID:12X2)	1	
90	09408-00173	CLAMP	2	
91	09408-00337	CLAMP,FUEL HOSE	1	

FIG.160A

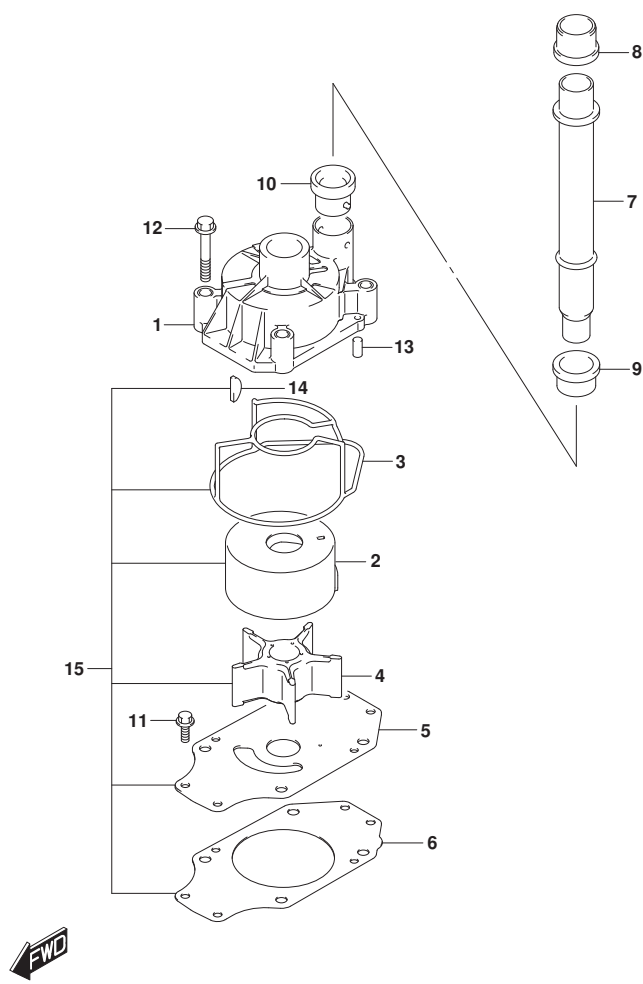


FIG.160A (1-C-15) WATER PUMP (E01,E03,E11)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE,WATER PUMP	1	
2	17413-93J02	SLEEVE,WATER PUMP CASE	1	
3	17416-93J01	SEAL,WATER PUMP CASE	1	
4	17461-93J00	IMPELLER,WATER PUMP	1	
5	17471-98L00	PANEL,PUMP CASE UNDER	1	
6	17472-98L00	GASKET,PUMP CASE PANEL	1	
7-1	17560-98L00	TUBE,WATER	1	X-TRANSOM
7-2	17560-98L10	TUBE,WATER	1	XX-TRANSOM
8	17562-98L00	BUSH,WATER TUBE UPPER	1	UPPER
9	17563-98L00	BUSH,WATER TUBE LOWER	1	LOWER
10	17564-93J01	BUSH,WATER PUMP CASE	1	
11	29116-93J00	BOLT (6X20)	4	
12	09116-08131	BOLT (8X45)	4	
13	09202-06031	PIN (6X12)	2	
14	09420-05009	KEY	1	
15	17400-98L02	KIT,WATER PUMP REPAIR	1	OPT

FIG.160B


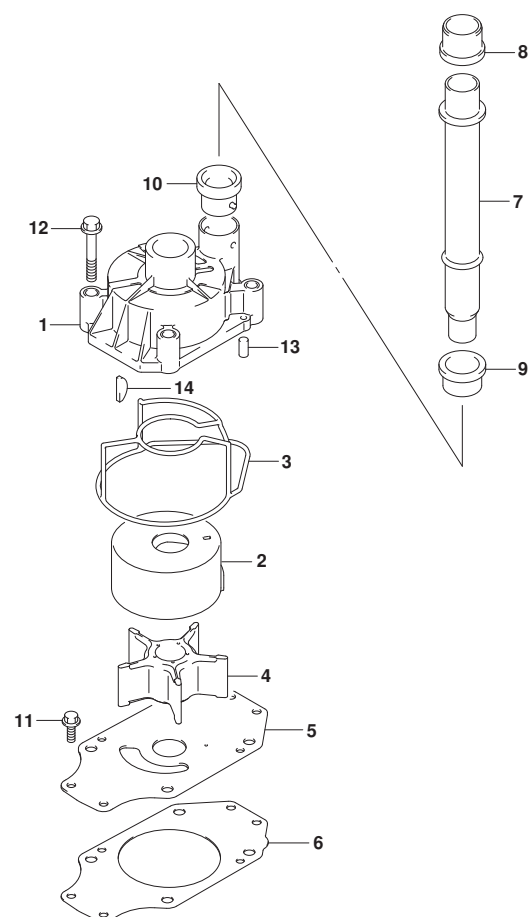


FIG.160B (1-C-16) WATER PUMP (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE,WATER PUMP	1	
2	17413-93J12	SLEEVE,WATER PUMP CASE	1	
3	17416-93J01	SEAL,WATER PUMP CASE	1	
4	17461-93J00	IMPELLER,WATER PUMP	1	
5	17471-98L10	PANEL,PUMP CASE UNDER	1	
6	17472-98L00	GASKET,PUMP CASE PANEL	1	
7-1	17560-98L00	TUBE,WATER	1	X-TRANSOM
7-2	17560-98L10	TUBE,WATER	1	XX-TRANSOM
8	17562-98L00	BUSH,WATER TUBE UPPER	1	UPPER
9	17563-98L00	BUSH,WATER TUBE LOWER	1	LOWER
10	17564-93J01	BUSH,WATER PUMP CASE	1	
11	29116-93J00	BOLT (6X20)	4	
12	09116-08131	BOLT (8X45)	4	
13	09202-06031	PIN (6X12)	2	
14	09420-05009	KEY	1	

FIG.162A

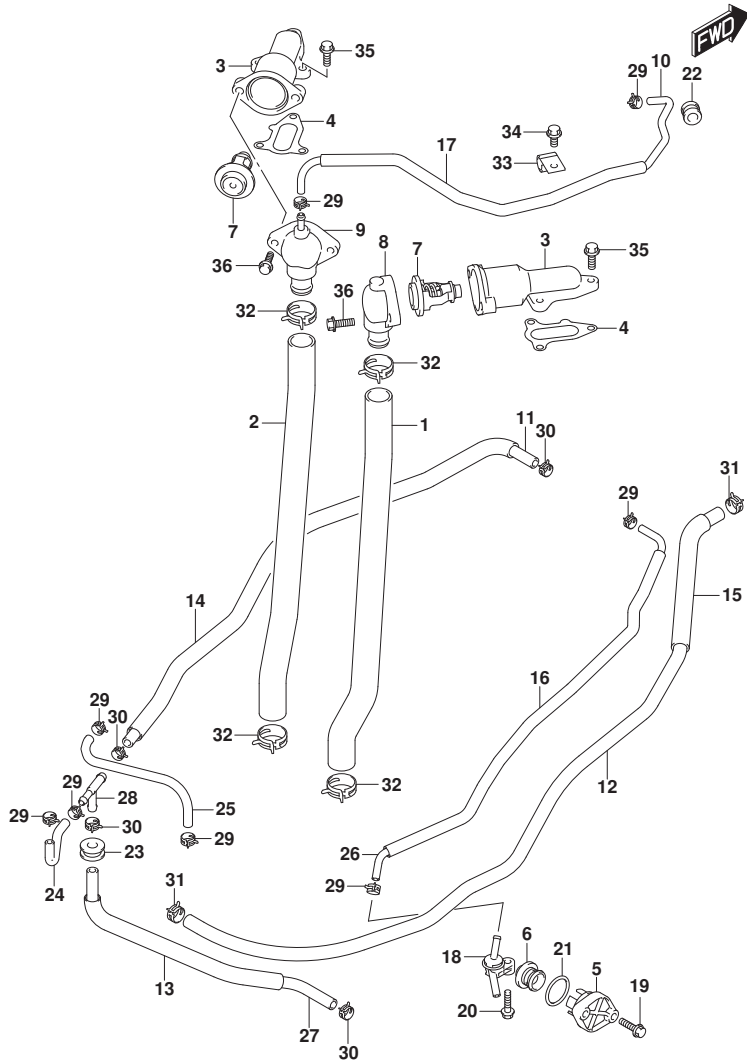

DF350A_E11_022_162A
THERMOSTAT

FIG.162A (1-D-2) THERMOSTAT (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11196-98L00	HOSE,WATER RETURN STBD	1	STBD
2	11197-98L00	HOSE,WATER RETURN PORT	1	PORT
3	17581-98L00	PIPE,WATER OUTLET	2	
4	17582-93J00	GASKET,WTR OUTLET PIPE	2	
5	17611-90J00	COVER,WTR PRESS VALVE	1	
6	17660-98L01	VALVE,WATER PRESSURE	1	
7-1	17670-98L20	THERMOSTAT,WATER (60C)	2	
7-2	17670-98L10	THERMOSTAT,WATER (70C)	2	OPT
8	17680-98L00	COVER,THERMOSTAT	1	STBD
9	17680-98L10	COVER,THERMOSTAT	1	PORT
10	17712-98L00	HOSE,WATER	1	
11	17714-98L00	HOSE,WATER	1	
12	17915-98L00	HOSE,WATER FLUSH	1	
13	18498-99E11	PROTECTOR,FUEL HOSE (L:610)	1	L:610->320
14	18498-99E11	PROTECTOR,FUEL HOSE (L:610)	1	L:610->540
15	18498-87J51	PROTECTOR,EVAP HOSE (L:160)	1	
16	18498-96L50	PROTECTOR,HOSE (10.2X11.8X520)	1	
17	18498-96L41	PROTECTOR (10.2X11.8X430)	1	
18	51170-98L00	BRACKET,WATER INDICATOR	1	
19	09116-06121	BOLT (6X25)	2	
20	09116-06121	BOLT (6X25)	1	
21	09280-26006	O RING (D:3.1,ID:26.4)	1	
22	09320-09059	CUSHION (9X18X14)	1	
23	09320-10076	CUSHION (10X24X11)	1	
24	09352-50006-600	HOSE (5X9X600)	1	3WAY TO VST,L:600->110
25	09352-50006-600	HOSE (5X9X600)	1	VST TO E/H COVER,L:600->170
26	09352-50006-600	HOSE (5X9X600)	1	CASE JKT TO W/I,L:600->580
27	09352-70119-600	HOSE (7X11X600)	1	OILPAN TO 3WAY,L:600->400
28	09367-08005	3 WAY	1	
29	09401-08413	CLIP	8	
30	09401-11424	CLIP	4	
31	09401-13425	CLIP	2	
32	09401-25406	CLIP	4	
33-1	09403-13413	CLAMP	2	020
33-2	09403-13414	CLAMP	2	021,022

DF350A_E11_022

FIG.162A


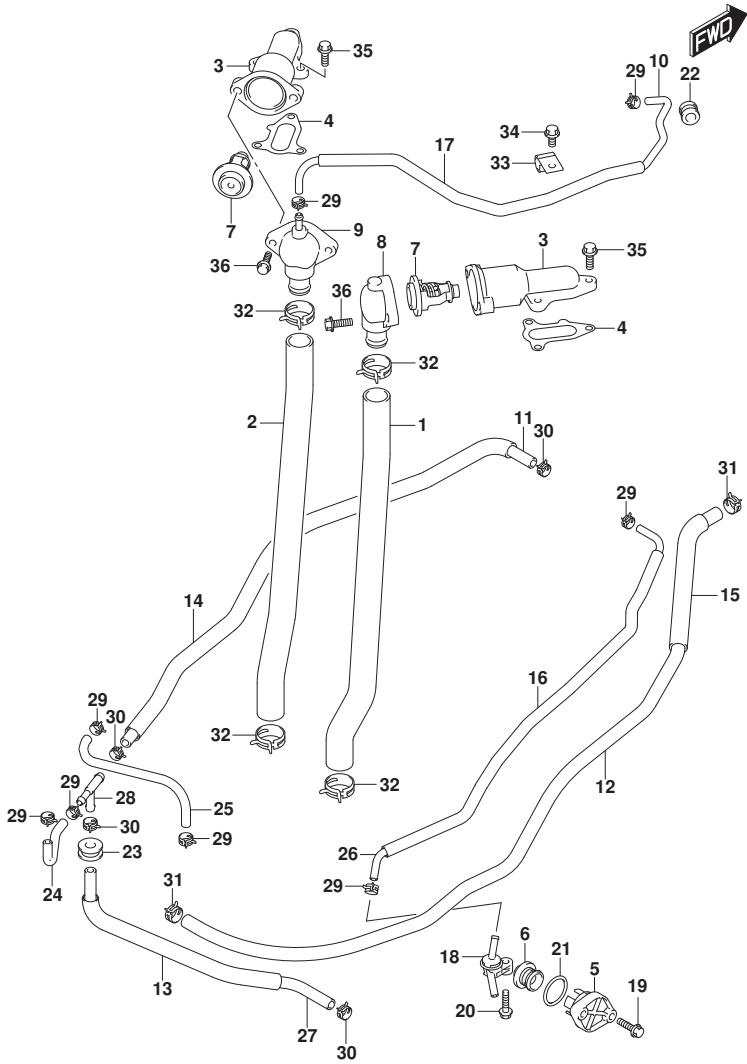


FIG.162A (1-D-3) THERMOSTAT (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	01550-0612C	BOLT (6X12)	2	
35	01550-0620C	BOLT (6X20)	6	
36	01550-0620C	BOLT (6X20)	4	

FIG.162B

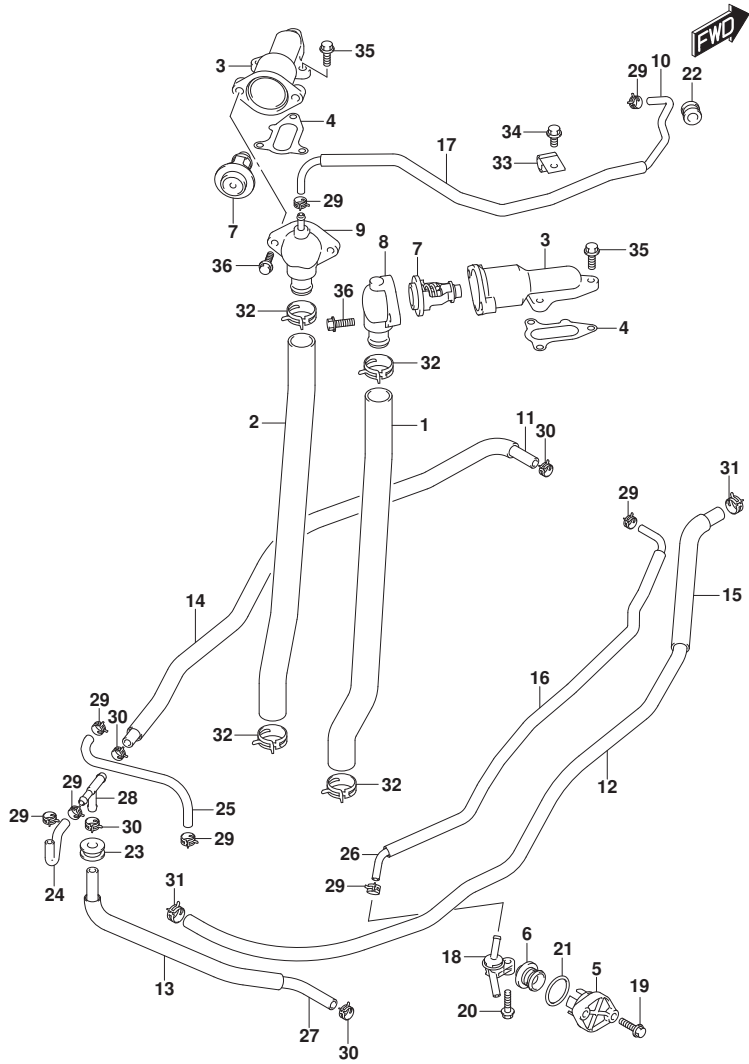

DF350A_E11_022_162B
THERMOSTAT

FIG.162B (1-D-4) THERMOSTAT (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11196-98L00	HOSE,WATER RETURN STBD	1	
2	11197-98L00	HOSE,WATER RETURN PORT	1	
3	17581-98L00	PIPE,WATER OUTLET	2	
4	17582-93J00	GASKET,WTR OUTLET PIPE	2	
5	17611-90J00	COVER,WTR PRESS VALVE	1	
6	17660-98L01	VALVE,WATER PRESSURE	1	
7-1	17670-98L20	THERMOSTAT,WATER (60C)	2	
7-2	17670-98L10	THERMOSTAT,WATER (70C)	2	OPT
8	17680-98L00	COVER,THERMOSTAT	1	
9	17680-98L10	COVER,THERMOSTAT	1	
10	17712-98L00	HOSE,WATER	1	CASE JKT TO THERMO
11	17714-98L00	HOSE,WATER	1	3WAY TO CASE JKT
12	17915-98L00	HOSE,WATER FLUSH	1	
13	18498-99E11	PROTECTOR,FUEL HOSE (L:610)	1	L:610->320
14	18498-99E11	PROTECTOR,FUEL HOSE (L:610)	1	L:610->540
15	18498-87J51	PROTECTOR,EVAP HOSE (L:160)	1	
16	18498-96L50	PROTECTOR,HOSE (10.2X11.8X520)	1	
17	18498-96L41	PROTECTOR (10.2X11.8X430)	1	
18	51170-98L00	BRACKET,WATER INDICATOR	1	
19	09116-06121	BOLT (6X25)	2	
20	09116-06121	BOLT (6X25)	1	
21	09280-26006	O RING (D:3.1,ID:26.4)	1	
22	09320-09059	CUSHION (9X18X14)	1	
23	09320-10076	CUSHION (10X24X11)	1	
24	09352-50006-600	HOSE (5X9X600)	1	3WAY TO VST,L:600->110
25	09352-50006-600	HOSE (5X9X600)	1	VST TO E/H COVER,L:600->170
26	09352-50006-600	HOSE (5X9X600)	1	CASE JKT TO W/I,L:600->580
27	09352-70119-600	HOSE (7X11X600)	1	OIL PAN TO 3WAY,L:600->400
28	09367-08005	3 WAY	1	
29	09401-08413	CLIP	8	
30	09401-11424	CLIP	4	
31	09401-13425	CLIP	2	
32	09401-25406	CLIP	4	
33	09403-13414	CLAMP	2	
34	01550-0612C	BOLT (6X12)	2	

DF350A_E11_022

FIG.162B


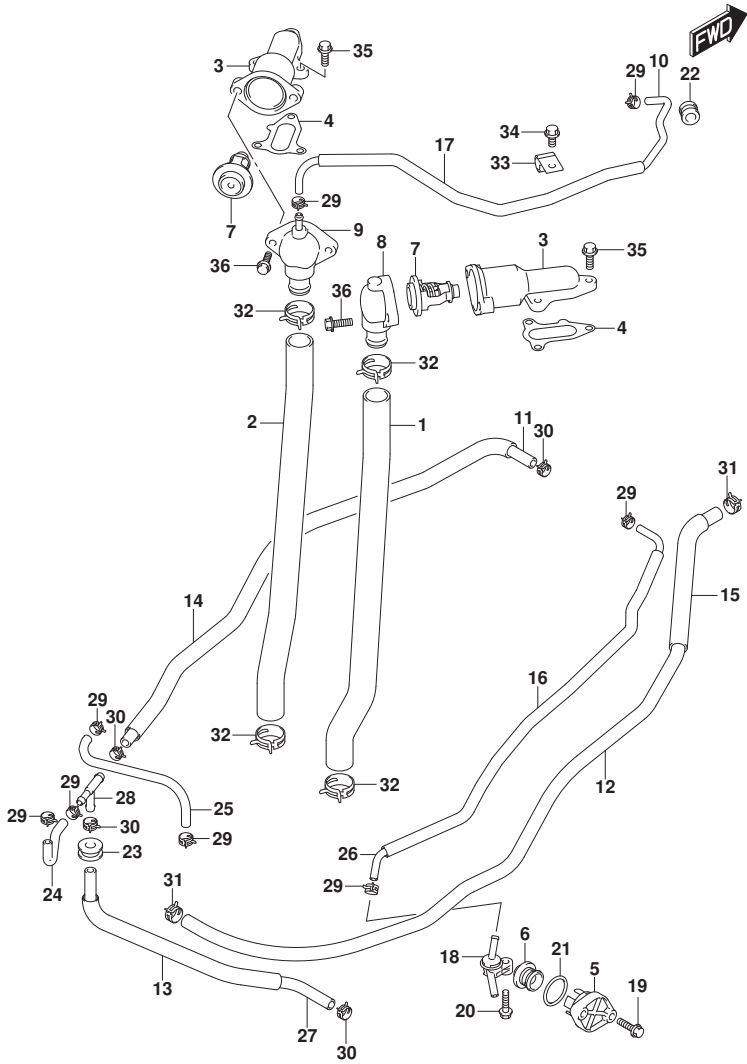


FIG.162B (1-D-5) THERMOSTAT (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01550-0620C	BOLT (6X20)	6	
36	01550-0620C	BOLT (6X20)	4	

FIG.163A

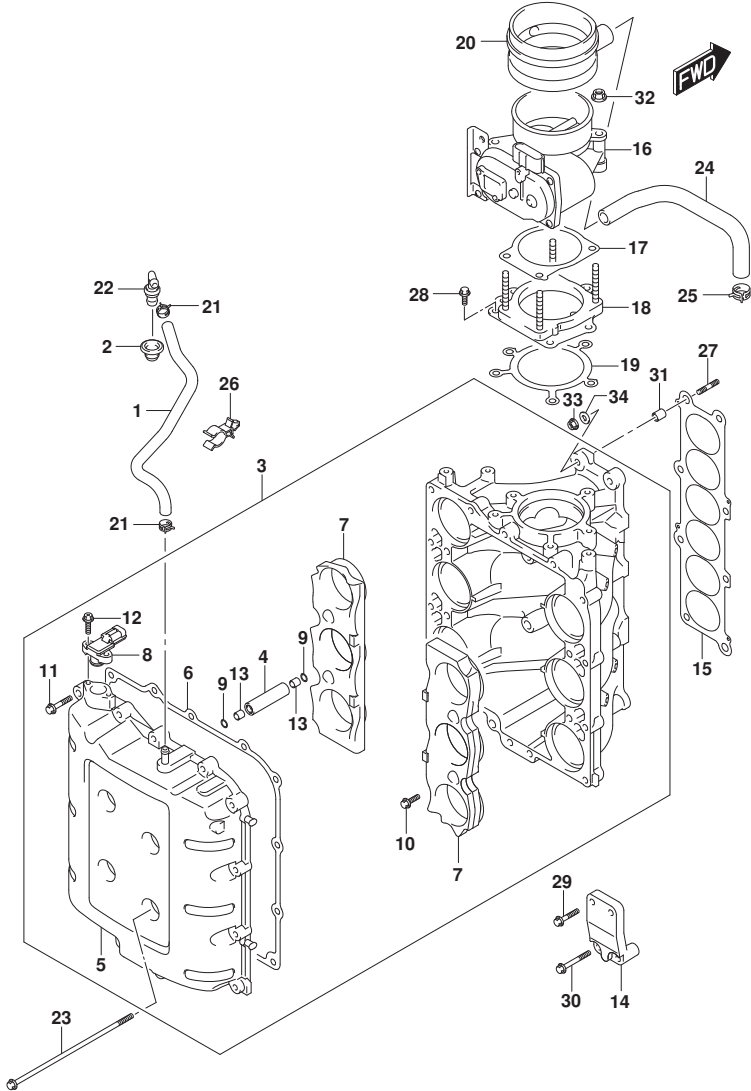


DF350A_E11_022_163A
THROTTLE BODY

FIG.163A (1-D-6) THROTTLE BODY (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11193-98J01	HOSE,PCV	1	
2	11198-98L00	SEAL,PCV VALVE	1	
3	13100-98L01	COLLECTOR,ASSY	1	
4	13137-98J00	.SPACER,COLLECTOR	4	
5	13140-98L00	.COVER,COLLECTOR	1	
6	13147-98J00	.GASKET,COLLECTOR COVER	1	
7	13180-98J01	.FUNNEL,AIR COLLECTOR	2	
8	18590-68H00	.SENSOR,PRESSURE	1	
9	09280-10009	.O-RING (D:1.3,ID:9.8)	8	
10	01550-0816C	.BOLT	4	
11	01550-0835C	.BOLT	10	
12	02162-05207	.SCREW	2	
13	04211-11129	.PIN (11X12)	8	
14	13134-98J00	BRACKET,COLLECTOR	1	
15	13139-98J01	GASKET,COLLECTOR	1	
16	13300-98L00	BODY ASSY,THROTTLE	1	
17	13343-98J10	GASKET,THROTTLE BODY	1	
18	13315-98J11	DAMPER,THROTTLE BODY	1	
19	13421-98L00	GASKET,THROTTLE BODY	1	
20	13813-98L01	GROMMET,THROTTLE BODY	1	
21	09401-13423	CLIP	2	
22	18118-93J00	VALVE,PCV	1	
23	09103-08370	BOLT (8X250)	6	
24	11174-98L01	HOSE,BREATHER	1	
25	09401-18410	CLIP	1	
26	09403-13310	CLAMP	1	
27	01421-0835C	BOLT,STUD	2	
28	01550-0816C	BOLT	5	
29	01550-0835C	BOLT	2	
30	01550-0860C	BOLT	2	
31	04211-11129	PIN (11X12)	2	
32	09159-08136	NUT (M8)	4	
33	08316-1008C	NUT	2	
34	09160-08161	WASHER (8.2X23X3.2)	2	

DF350A_E11_022

FIG.163B

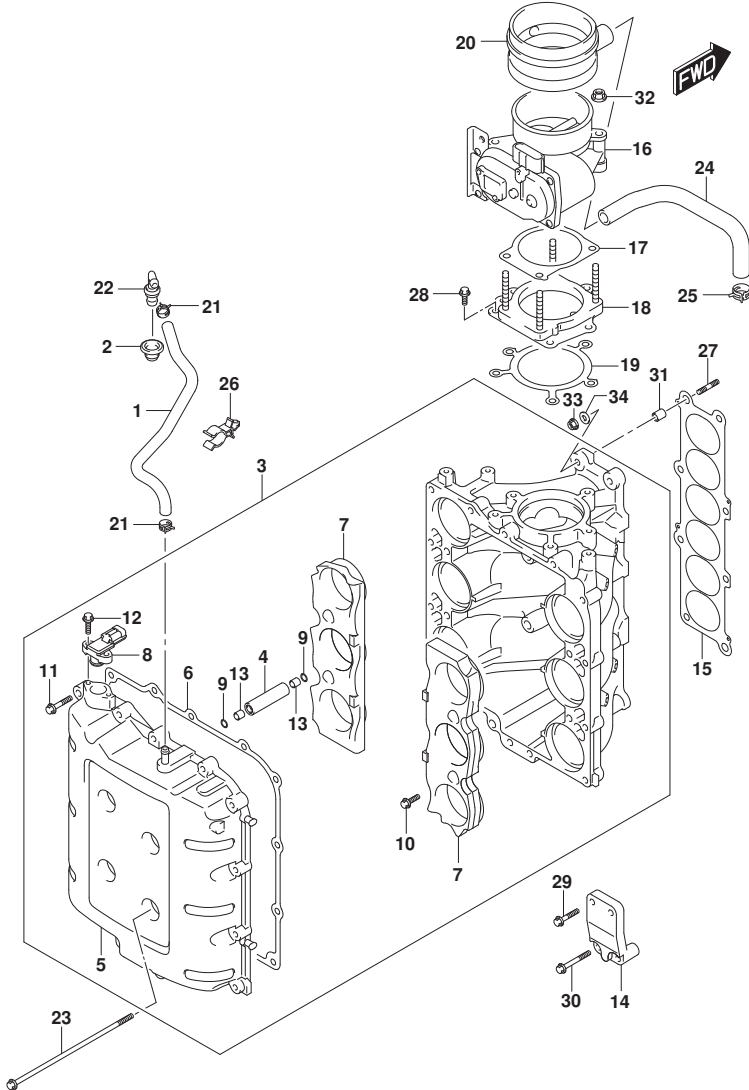

DF350A_E11_022_163B
THROTTLE BODY

FIG.163B (1-D-7) THROTTLE BODY (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11193-98J01	HOSE,PCV	1	
2	11198-98L00	SEAL,PCV VALVE	1	
3	13100-98L10	COLLECTOR,ASSY	1	
4	13137-98J00	.SPACER,COLLECTOR	4	
5	13140-98L00	.COVER,COLLECTOR	1	
6	13147-98J00	.GASKET,COLLECTOR COVER	1	
7	13180-98J01	.FUNNEL,AIR COLLECTOR	2	
8	18590-68H00	.SENSOR,PRESSURE	1	
9	09280-10009	.O-RING (D:1.3,ID:9.8)	8	
10	01550-0816C	.BOLT	4	
11	01550-0835C	.BOLT	10	
12	09103-05028	.BOLT,PRESSURE SENSOR (5X20)	2	
13	04211-11129	.PIN (11X12)	8	
14	13134-98J00	BRACKET,COLLECTOR	1	
15	13139-98J01	GASKET,COLLECTOR	1	
16	13300-98L00	BODY ASSY,THROTTLE	1	
17	13343-98J10	GASKET,THROTTLE BODY	1	
18	13315-98J11	DAMPER,THROTTLE BODY	1	
19	13421-98L00	GASKET,THROTTLE BODY	1	
20	13813-98L01	GROMMET,THROTTLE BODY	1	
21	09401-13423	CLIP	2	
22	18118-93J00	VALVE,PCV	1	
23	09103-08370	BOLT (8X250)	6	
24	11174-98L01	HOSE,BREATHER	1	
25	09401-18410	CLIP	1	
26	09403-13310	CLAMP	1	
27	01421-0835C	BOLT,STUD	2	
28	01550-0816C	BOLT	5	
29	01550-0835C	BOLT	2	
30	01550-0860C	BOLT	2	
31	04211-11129	PIN (11X12)	2	
32	09159-08136	NUT (M8)	4	
33	08316-1008C	NUT	2	
34	09160-08161	WASHER (8.2X23X3.2)	2	

DF350A_E11_022

FIG.175A

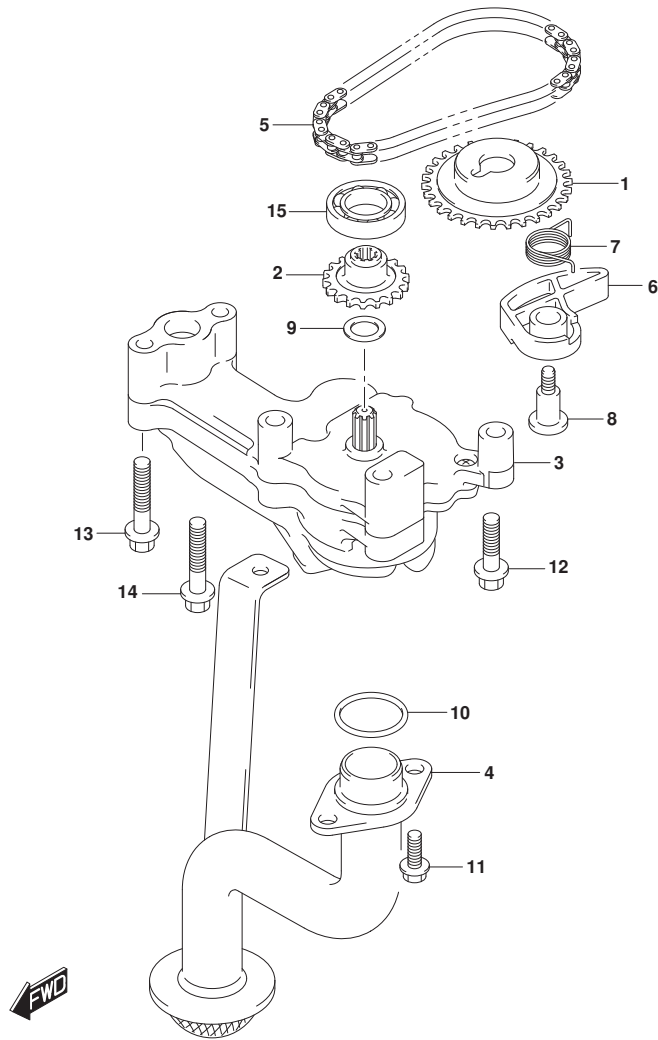


FIG.175A (1-D-8) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12632-93J11	SPROCKET,OIL PUMP DRIVE (NT:32)	1	
2	16113-93J10	SPROCKET,OIL PUMP DRIVEN (NT:18)	1	
3	16400-93J20	PUMP ASSY,OIL	1	
4	16520-93J00	STRAINER,OIL PUMP	1	
5	16760-93J00	CHAIN,OIL PUMP DRIVE	1	
6	16781-93J00	TENSIONER,OIL PUMP CHAIN	1	
7	16782-93J00	SPRING,OIL PUMP TENSIONER	1	
8	16783-93J01	BOLT,OIL PUMP TENSIONER	1	
9	09181-12158	SHIM (12X20X0.5)	1	
10	09280-22020	O RING (D:2.4,ID:21.8)	2	
11	01550-0616A	BOLT (6X16)	3	
12	01550-0845A	BOLT	1	
13	01550-0865A	BOLT	3	
14	01550-0885A	BOLT	1	
15	08110-60020	BEARING	1	

FIG.180A

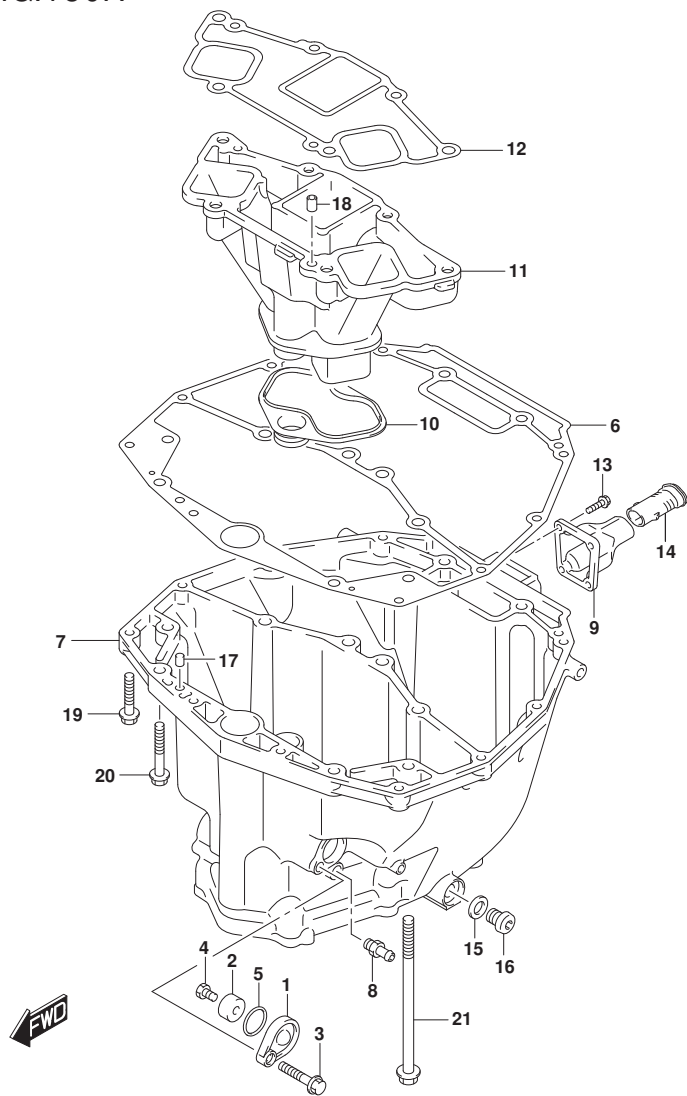


FIG.180A (1-D-9) OIL PAN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11261-93J10	COVER,PROTECTION ANODE	1	
2-1	55321-87J01	ANODE,PROTECTION	1	
2-2	55321-87J11	ANODE (MAGNESIUM)	1	OPT
3	29103-93J30	BOLT (8X25)	1	
4	09103-06281	BOLT (6X14)	1	
5	09280-22019	O RING (D:1.9,ID:21.8)	1	
6	11489-98L00	GASKET,OIL PAN	1	
7-1	11501-98L00-YAY	PAN,OIL (BLACK)	1	020 BODY COLOR:YAY
7-2	11501-98L00-Y5S	PAN,OIL (WHITE)	1	020 BODY COLOR:Y5S
7-3	11501-98L00-YAY	PAN,OIL (BLACK)	1	021,022 BODY COLOR:YAY
7-4	11501-98L00-QTN	PAN,OIL (WHITE)	1	021,022 BODY COLOR:QTN,QUA
8	11591-98L00	UNION,OIL PAN	1	
9-1	11541-93J00-019	PIPE,EXHAUST (BLACK)	1	020
9-2	11541-93J00-YAY	PIPE,EXHAUST (BLACK)	1	021,022
10	14154-93J02	SEAL,EXHAUST TUBE	1	
11	14211-98L00	TUBE,EXHAUST	1	
12	14212-98L00	GASKET,EXHAUST TUBE	1	
13	29116-93J00	BOLT (6X20)	4	
14	11435-98L01	PIPE,EXHAUST RELEASE	1	
15	09168-12012	GASKET (12.5X20X2.5)	1	
16	09248-12009	PLUG (12X18.65)	1	
17	09202-08006	PIN (8X12)	2	
18	09202-08006	PIN (8X12)	2	
19	09116-08128	BOLT,8X40 (8X40)	10	
20	09116-10176	BOLT (10X44)	4	
21	09116-10184	BOLT (10X200)	2	

FIG.204A

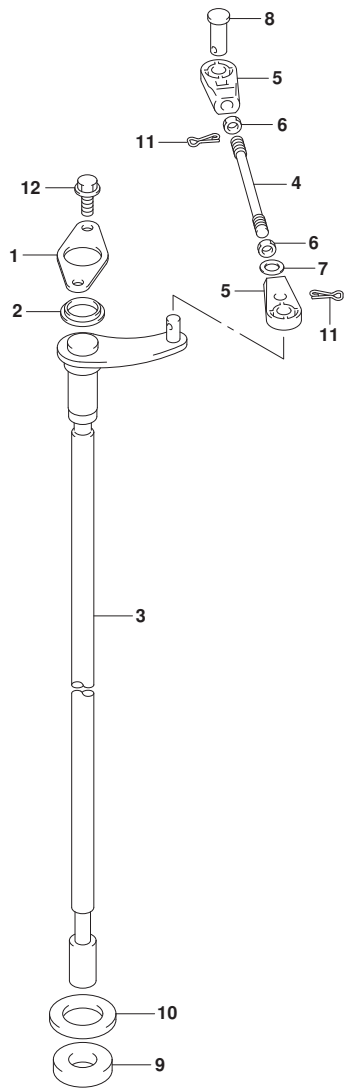


FIG.204A (1-D-10) CLUTCH SHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21152-98L00	PLATE,CLUTCH SFT	1	
2	21153-98L00	BUSH,CLUTCH SFT	1	
3	21210-98L00	SHAFT,CLUTCH	1	
4	21241-98L00	LINK,CLUTCH LEVER	1	
5	67467-98L00	CONNECTOR,CLUTCH LINK	2	
6	09140-06023	NUT (6X3.6)	2	
7	09160-08091	WASHER (8.5X14X1.0)	1	
8	09200-08074	PIN (8X17.3)	1	
9	09262-17019	BEARING (17X35X8)	1	
10	09282-22008	SEAL,OIL (22X38X6)	1	
11	09385-08004	CLIP (L:19)	2	
12	01550-0616C	BOLT (6X16)	2	

FIG.206A

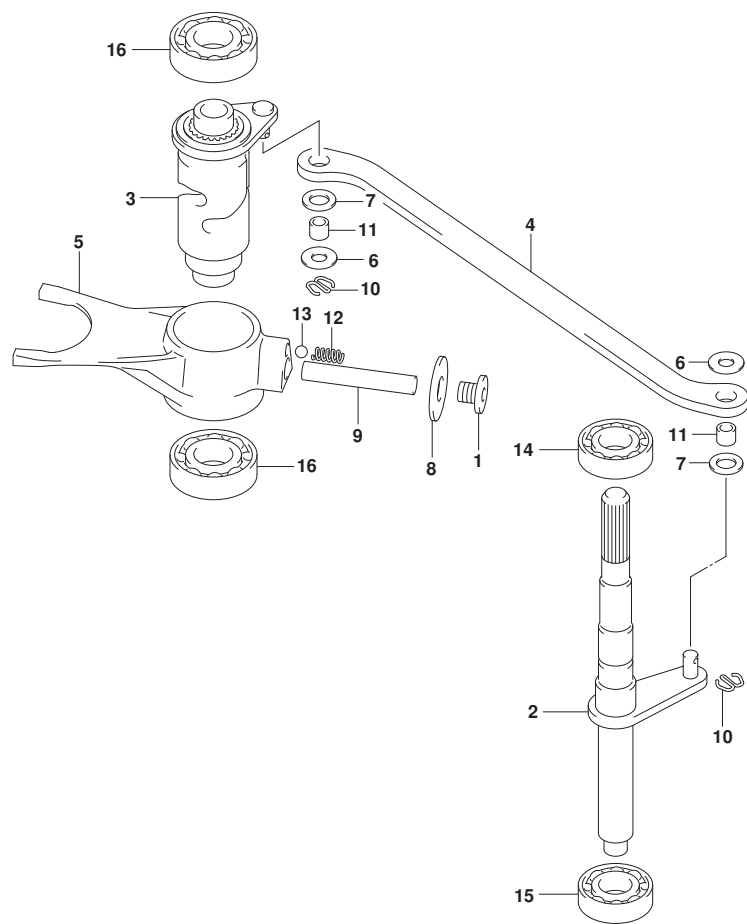


FIG.206A (1-D-11) CLUTCH ROD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11118-93J00	PLUG,SHIFT CAM	1	
2-1	25110-98L00	ROD,SHIFT	1	X-TRANSOM
2-2	25110-98L10	ROD,SHIFT	1	XX-TRANSOM
3	25300-98L00	CAM,SHIFT	1	
4	25315-98L00	LINK,SHIFT CAM ARM	1	
5	25411-98L00	FORK,SHIFT	1	
6	09160-06094	WASHER (6.5X15X1.0)	2	
7	09160-08091	WASHER (8.5X14X1.0)	2	
8	09160-10129	WASHER (10.5X28X1.6)	1	
9	09202-08007	PIN (8X49)	1	
10	09204-01006	PIN	2	
11	25214-98L00	BUSH,SHIFT LINK	2	
12	09440-05031	SPRING	1	
13	06111-07004	BALL	1	
14	08113-60020	BEARING	1	
15	08113-62000	BEARING	1	
16	08113-69047	BEARING	2	



FIG.220A

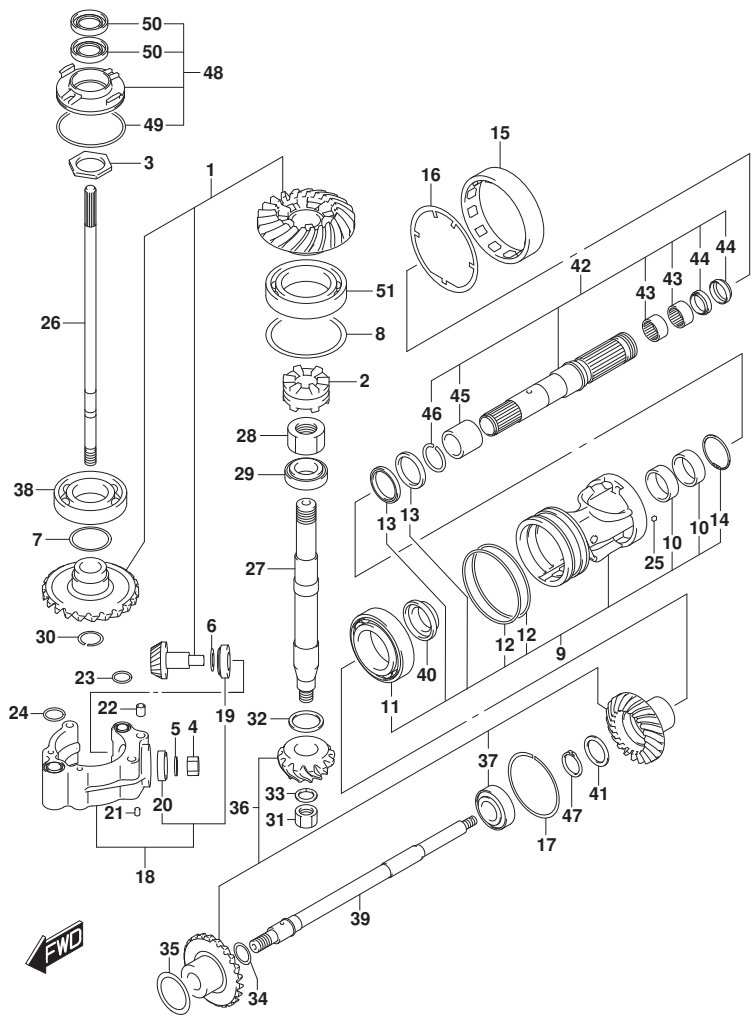


FIG.220A (1-D-12) TRANSMISSION (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	25500-98L00	GEAR SET,REVERSE	1	
2	25711-98L00	SHIFTER,CLUTCH DOG	1	
3	09140-36003	NUT (M36,T:6)	1	
4	09159-16027	NUT (M16)	1	
5	09160-16026	WASHER (16X30X3)	1	
6-1	09181-25051	SHIM (25X34X0.6)	1	
6-2	09181-25052	SHIM (25X34X0.65)	1	
6-3	09181-25160	SHIM (25X34X0.7)	1	
6-4	09181-25054	SHIM (25X34X0.75)	1	
6-5	09181-25162	SHIM (25X34X0.8)	1	
6-6	09181-25056	SHIM (25X34X0.85)	1	
6-7	09181-25057	SHIM (25X34X0.9)	1	
6-8	09181-25058	SHIM (25X34X0.95)	1	
6-9	09181-25059	SHIM (25X34X1)	1	
6-10	09181-25060	SHIM (25X34X1.05)	1	
6-11	09181-25061	SHIM (25X34X1.1)	1	
6-12	09181-25062	SHIM (25X34X1.15)	1	
6-13	09181-25063	SHIM (25X34X1.2)	1	
6-14	09181-25130	SHIM (25X32X0.5)	1	
7-1	09181-40004	SHIM (40X46.8X0.6)	1	
7-2	09181-40005	SHIM (40X46.8X0.65)	1	
7-3	09181-40006	SHIM (40X46.8X0.7)	1	
7-4	09181-40007	SHIM (40X46.8X0.75)	1	
7-5	09181-40008	SHIM (40X46.8X0.8)	1	
7-6	09181-40009	SHIM (40X46.8X0.85)	1	
7-7	09181-40010	SHIM (40X46.8X0.9)	1	
7-8	09181-40011	SHIM (40X46.8X0.95)	1	
7-9	09181-40012	SHIM (40X46.8X1)	1	
7-10	09181-40013	SHIM (40X46.8X1.05)	1	
7-11	09181-40014	SHIM (40X46.8X1.1)	1	
7-12	09181-40015	SHIM (40X46.8X1.15)	1	
8-1	09181-77003	SHIM (77X90X0.5)	1	
8-2	09181-77004	SHIM (77X90X0.55)	1	
8-3	09181-77005	SHIM (77X90X0.6)	1	
8-4	09181-77006	SHIM (77X90X0.65)	1	

FIG.220A

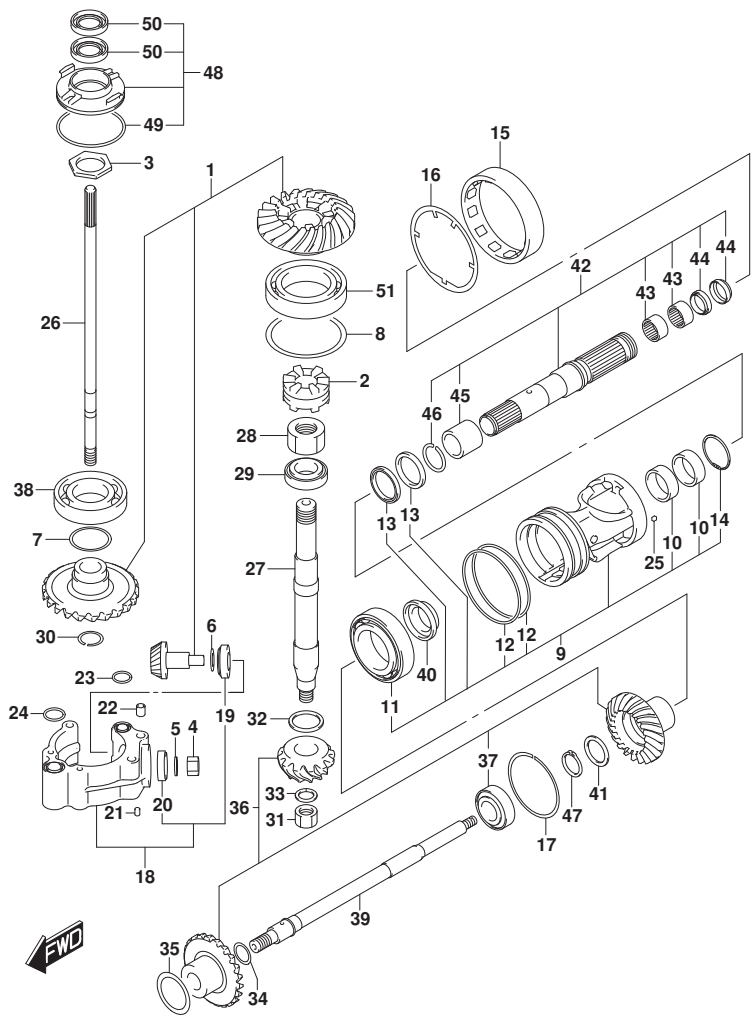


FIG.220A (1-D-13) TRANSMISSION (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
8-5	09181-77007	SHIM (77X90X0.7)	1	
8-6	09181-77008	SHIM (77X90X0.75)	1	
8-7	09181-77009	SHIM (77X90X0.8)	1	
8-8	09181-77010	SHIM (77X90X0.85)	1	
8-9	09181-77011	SHIM (77X90X0.9)	1	
8-10	09181-77012	SHIM (77X90X0.95)	1	
8-11	09181-77013	SHIM (77X90X1)	1	
8-12	09181-77014	SHIM (77X90X1.05)	1	
8-13	09181-77015	SHIM (77X90X1.1)	1	
9	56120-98L00	HOUSING,PROP SHAFT BRG	1	
10	09263-45005	.BEARING (45X55X20)	2	
11	09265-50002	.BEARING (50X90X21.75)	1	
12	09280-00047	.O-RING (D:3;ID:109)	2	
13	09282-45001	.SEAL (45X60X8)	2	
14	08331-41559	.CIRCLIP	1	
15	56122-98L00	STOPPER,PROP SHAFT BRG HSG	1	
16	56123-98L00	WASHER,PROP SHAFT BRG HSG NO.2	1	
17-1	56126-98L00	WASHER,PROP SFT BRG HSG (T:1.9	1	)
17-2	56126-98L10	WASHER,PROP SFT BRG HSG (T:2.0	1	)
17-3	56126-98L20	WASHER,PROP SFT BRG HSG (T:2.1	1	)
17-4	56126-98L30	WASHER,PROP SFT BRG HSG (T:2.2	1	)
17-5	56126-98L40	WASHER,PROP SFT BRG HSG (T:2.3	1	)
17-6	56126-98L50	WASHER,PROP SFT BRG HSG (T:2.4	1	)
17-7	56126-98L60	WASHER,PROP SFT BRG HSG (T:2.5	1	)
17-8	56126-98L70	WASHER,PROP SFT BRG HSG (T:2.6	1	)
18	56150-98L02	HOUSING,REV PINION BRG	1	
19	09265-25048	.BEARING (25X52X16.25)	1	

FIG.220A

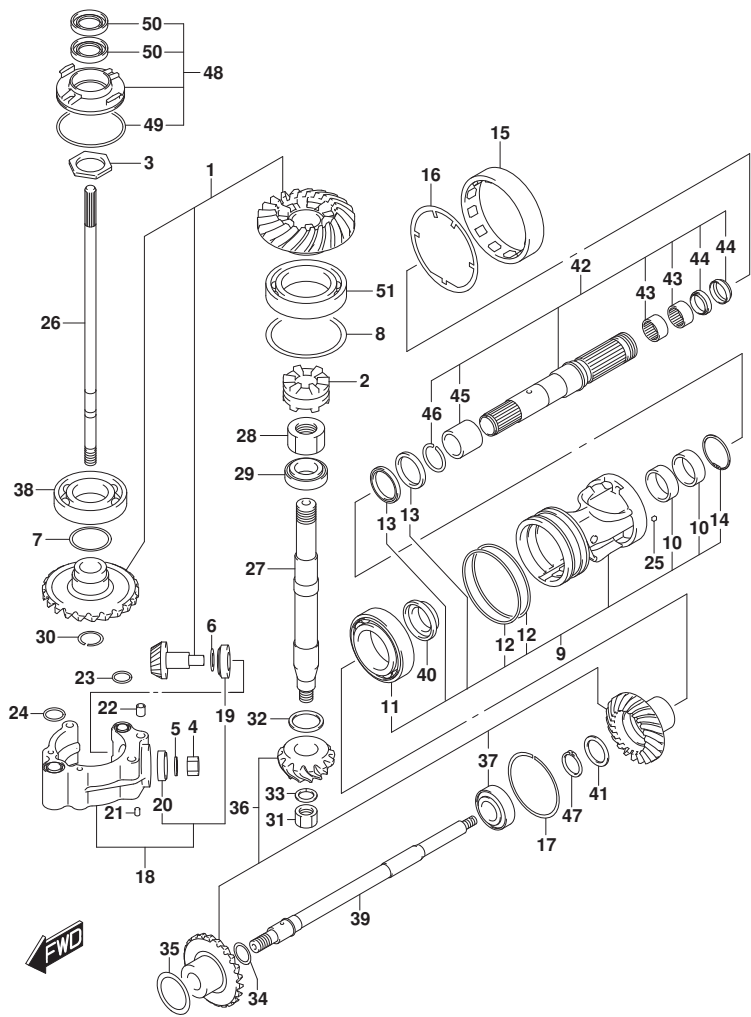


FIG.220A (1-D-14) TRANSMISSION (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	09265-25038	.BEARING (25X47X15)	1	
21	04221-08129	PIN	1	
22	09206-13019	PIN (10.4X13X16)	2	
23	09280-21015	O RING (D:2.7,ID:21.4)	2	
24	09280-26006	O RING (D:3.1,ID:26.4)	2	
25	09421-04008	KEY	1	
26-1	57110-98L01	SHAFT,DRIVE UPPER	1	X-TRANSOM UPPER
26-2	57110-98L11	SHAFT,DRIVE UPPER	1	XX-TRANSOM UPPER
27	57113-98L00	SHAFT,DRIVE LOWER	1	LOWER
28	09159-27001	NUT,DRIVE SHAFT LOWER (M27)	1	LOWER
29	09265-28006	BEARING (28X52X16)	1	PART OF FIG.407A REF3
30	09380-24007	CIRCLIP	1	
31	09159-16027	NUT (M16)	1	
32-1	09181-29003	SHIM (29X50X0.5)	1	
32-2	09181-29004	SHIM (29X50X0.6)	1	
32-3	09181-29005	SHIM (29X50X0.65)	1	
32-4	09181-29006	SHIM (29X50X0.7)	1	
32-5	09181-29007	SHIM (29X50X0.75)	1	
32-6	09181-29008	SHIM (29X50X0.8)	1	
32-7	09181-29009	SHIM (29X50X0.85)	1	
32-8	09181-29010	SHIM (29X50X0.9)	1	
32-9	09181-29011	SHIM (29X50X0.95)	1	
32-10	09181-29012	SHIM (29X50X1.05)	1	
33	08221-16256	SHIM	1	
34-1	09181-25051	SHIM (25X34X0.6)	1	
34-2	09181-25052	SHIM (25X34X0.65)	1	
34-3	09181-25160	SHIM (25X34X0.7)	1	
34-4	09181-25054	SHIM (25X34X0.75)	1	
34-5	09181-25162	SHIM (25X34X0.8)	1	
34-6	09181-25056	SHIM (25X34X0.85)	1	
34-7	09181-25057	SHIM (25X34X0.9)	1	
34-8	09181-25058	SHIM (25X34X0.95)	1	
34-9	09181-25059	SHIM (25X34X1)	1	

FIG.220A

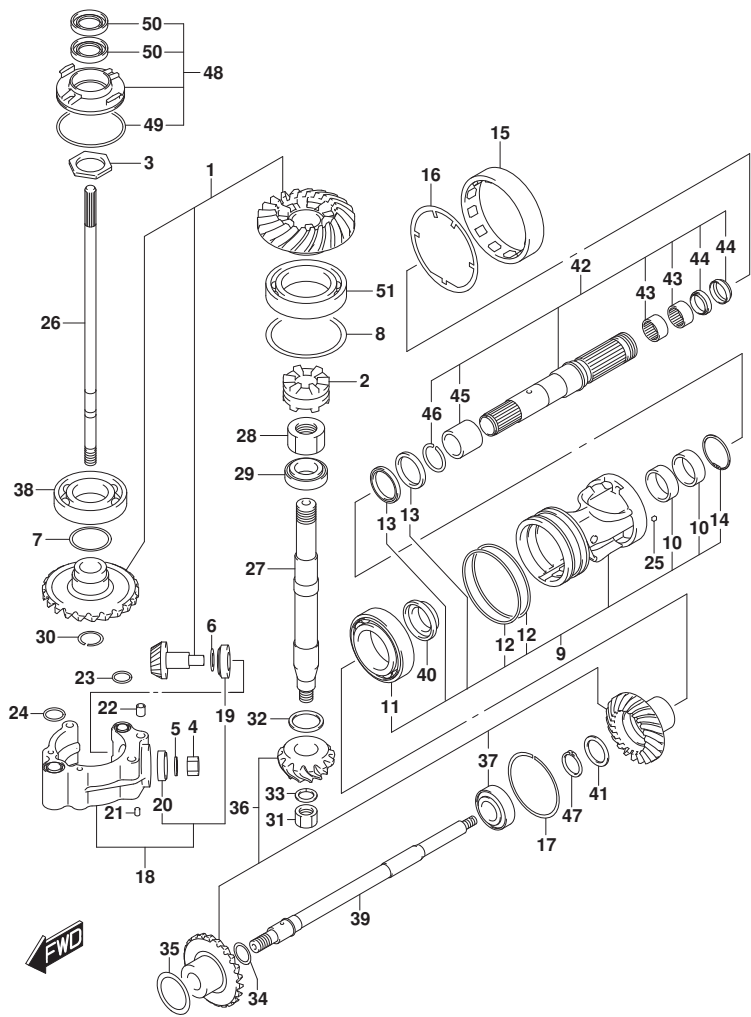


FIG.220A (1-D-15) TRANSMISSION (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34-10	09181-25060	SHIM (25X34X1.05)	1	
34-11	09181-25061	SHIM (25X34X1.1)	1	
34-12	09181-25062	SHIM (25X34X1.15)	1	
34-13	09181-25063	SHIM (25X34X1.2)	1	
34-14	09181-25130	SHIM (25X32X0.5)	1	
35-1	09181-50020	SHIM (50X65X0.45)	1	
35-2	09181-50021	SHIM (50X65X0.5)	1	
35-3	09181-50022	SHIM (50X65X0.55)	1	
35-4	09181-50023	SHIM (50X65X0.6)	1	
35-5	09181-50024	SHIM (50X65X0.65)	1	
35-6	09181-50025	SHIM (50X65X0.7)	1	
35-7	09181-50026	SHIM (50X65X0.75)	1	
35-8	09181-50027	SHIM (50X65X0.8)	1	
35-9	09181-50028	SHIM (50X65X0.85)	1	
35-10	09181-50029	SHIM (50X65X0.9)	1	
36	57301-98810	GEAR SET,CONTRA	1	
37	09265-30024	.BEARING (30X62X21.25)	1	
38	09262-40017	BEARING (40X80X18)	1	PART OF FIG.407A REF15
39	57610-98L00	SHAFT,PROPELLER INNER	1	
40	57622-98L00	SPACER,PROP SHAFT	1	
41	09160-36007	WASHER (32X47X2)	1	
42	57600-98822	SHAFT SET,PROPELLER OUTER	1	
43	09263-30064	.BEARING (30X37X20)	2	
44	09282-30009	.SEAL (30X38X10.9)	2	
45	09300-40003	.BUSH (40X45X40)	1	
46	09380-40004	.RING,SNAP	1	
47	57635-98L00	STOPPER,PROPELLER SHAFT	1	
48	17450-98L02	HOUSING,WATER INLET	1	
49	09280-69001	.O RING (D:3.1,ID:68.5)	1	
50	09282-24008	.SEAL,OIL (24X40X7)	2	
51	09262-55002	BEARING (55X90X18)	1	

FIG.220B

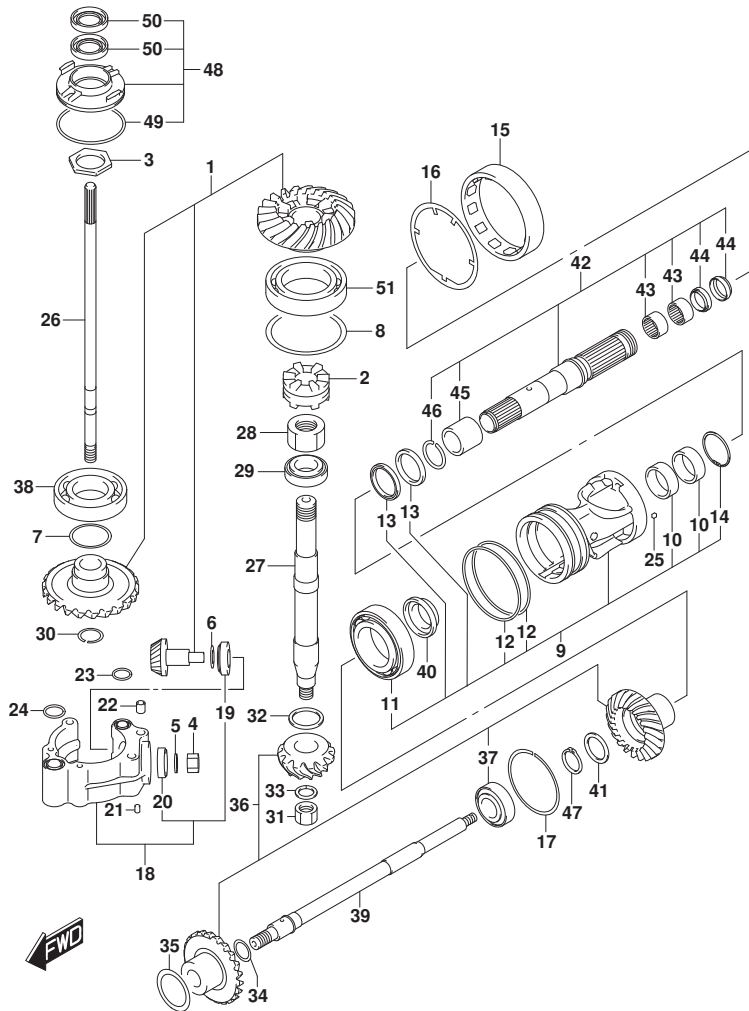


FIG.220B (1-D-16) TRANSMISSION (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	25500-98L00	GEAR SET,REVERSE	1	
2	25711-98L00	SHIFTER,CLUTCH DOG	1	
3	09140-36003	NUT (M36,T:6)	1	
4	09159-16027	NUT (M16)	1	
5	09160-16026	WASHER (16X30X3)	1	
6-1	09181-25051	SHIM (25X34X0.6)	1	
6-2	09181-25052	SHIM (25X34X0.65)	1	
6-3	09181-25160	SHIM (25X34X0.7)	1	
6-4	09181-25054	SHIM (25X34X0.75)	1	
6-5	09181-25162	SHIM (25X34X0.8)	1	
6-6	09181-25056	SHIM (25X34X0.85)	1	
6-7	09181-25057	SHIM (25X34X0.9)	1	
6-8	09181-25058	SHIM (25X34X0.95)	1	
6-9	09181-25059	SHIM (25X34X1)	1	
6-10	09181-25060	SHIM (25X34X1.05)	1	
6-11	09181-25061	SHIM (25X34X1.1)	1	
6-12	09181-25062	SHIM (25X34X1.15)	1	
6-13	09181-25063	SHIM (25X34X1.2)	1	
6-14	09181-25130	SHIM (25X32X0.5)	1	
7-1	09181-40004	SHIM (40X46.8X0.6)	1	
7-2	09181-40005	SHIM (40X46.8X0.65)	1	
7-3	09181-40006	SHIM (40X46.8X0.7)	1	
7-4	09181-40007	SHIM (40X46.8X0.75)	1	
7-5	09181-40008	SHIM (40X46.8X0.8)	1	
7-6	09181-40009	SHIM (40X46.8X0.85)	1	
7-7	09181-40010	SHIM (40X46.8X0.9)	1	
7-8	09181-40011	SHIM (40X46.8X0.95)	1	
7-9	09181-40012	SHIM (40X46.8X1)	1	
7-10	09181-40013	SHIM (40X46.8X1.05)	1	
7-11	09181-40014	SHIM (40X46.8X1.1)	1	
7-12	09181-40015	SHIM (40X46.8X1.15)	1	
8-1	09181-77003	SHIM (77X90X0.5)	1	
8-2	09181-77004	SHIM (77X90X0.55)	1	
8-3	09181-77005	SHIM (77X90X0.6)	1	
8-4	09181-77006	SHIM (77X90X0.65)	1	

FIG.220B

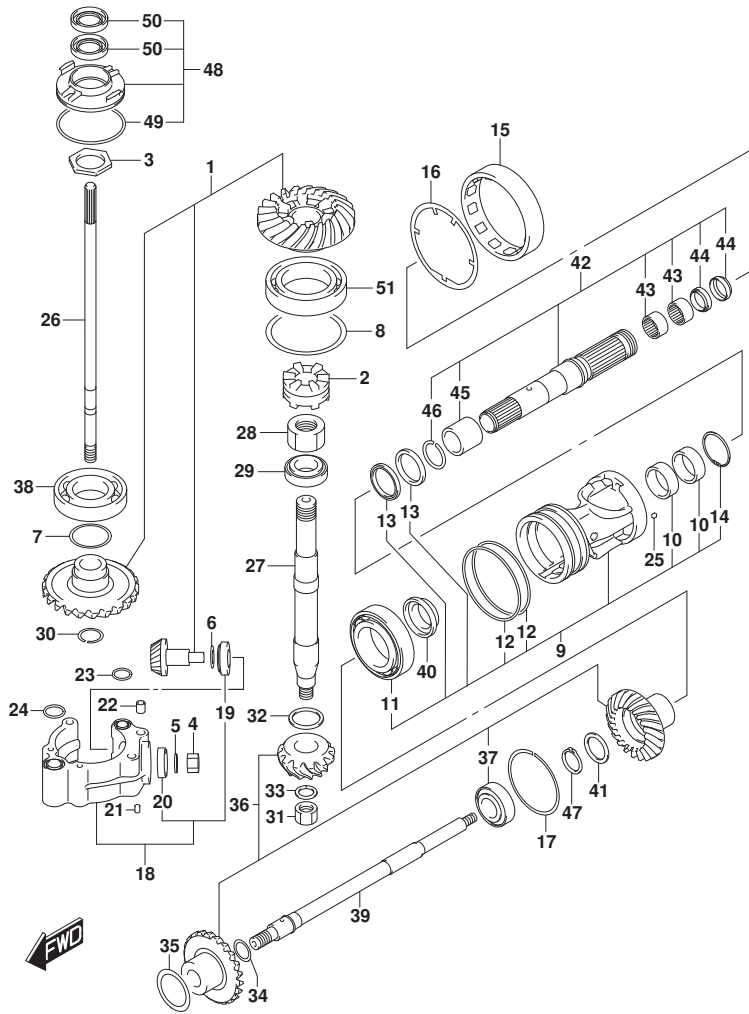


FIG.220B (1-E-2) TRANSMISSION (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
8-5	09181-77007	SHIM (77X90X0.7)	1	
8-6	09181-77008	SHIM (77X90X0.75)	1	
8-7	09181-77009	SHIM (77X90X0.8)	1	
8-8	09181-77010	SHIM (77X90X0.85)	1	
8-9	09181-77011	SHIM (77X90X0.9)	1	
8-10	09181-77012	SHIM (77X90X0.95)	1	
8-11	09181-77013	SHIM (77X90X1)	1	
8-12	09181-77014	SHIM (77X90X1.05)	1	
8-13	09181-77015	SHIM (77X90X1.1)	1	
9	56120-98L00	HOUSING,PROP SHAFT BRG	1	
10	09263-45005	.BEARING (45X55X20)	2	
11	09265-50002	.BEARING (50X90X21.75)	1	
12	09280-00047	.O-RING (D:3;ID:109)	2	
13	09282-45001	.SEAL (45X60X8)	2	
14	08331-41559	.CIRCLIP	1	
15	56122-98L00	STOPPER,PROP SHAFT BRG HSG	1	
16	56123-98L00	WASHER,PROP SHAFT BRG HSG NO.2	1	
17-1	56126-98L00	WASHER,PROP SFT BRG HSG (T:1.9)	1	
17-2	56126-98L10	WASHER,PROP SFT BRG HSG (T:2.0)	1	
17-3	56126-98L20	WASHER,PROP SFT BRG HSG (T:2.1)	1	
17-4	56126-98L30	WASHER,PROP SFT BRG HSG (T:2.2)	1	
17-5	56126-98L40	WASHER,PROP SFT BRG HSG (T:2.3)	1	
17-6	56126-98L50	WASHER,PROP SFT BRG HSG (T:2.4)	1	
17-7	56126-98L60	WASHER,PROP SFT BRG HSG (T:2.5)	1	
17-8	56126-98L70	WASHER,PROP SFT BRG HSG (T:2.6)	1	
18	56150-98L02	HOUSING,REV PINION BRG	1	
19	09265-25048	.BEARING (25X52X16.25)	1	

FIG.220B

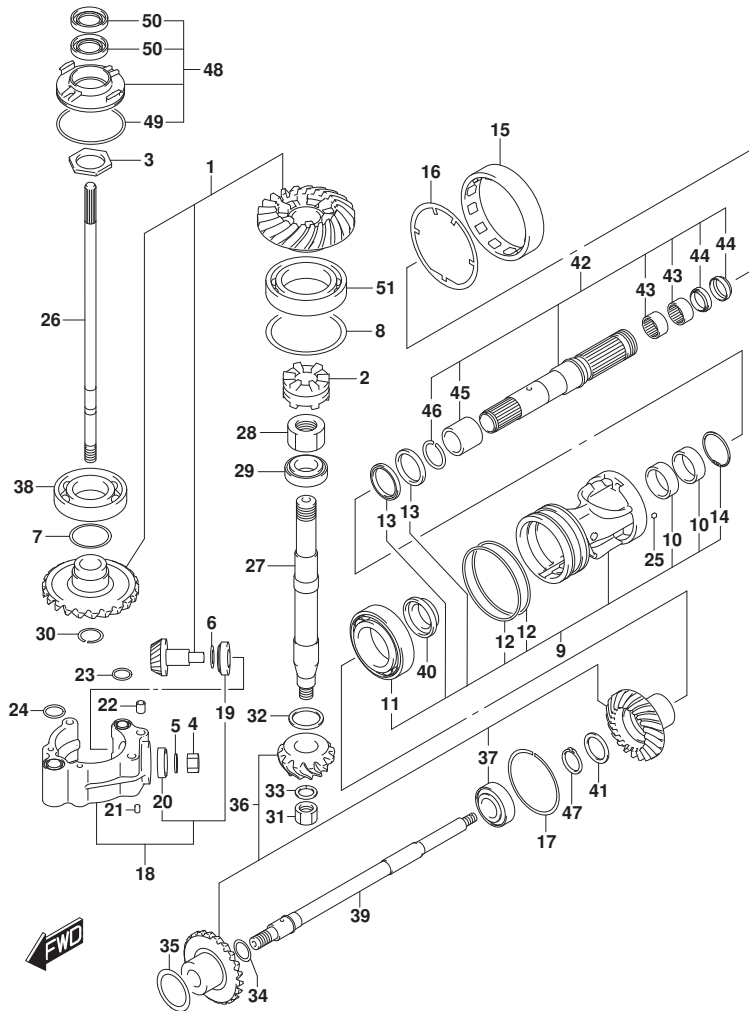


FIG.220B (1-E-3) TRANSMISSION (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	09265-25038	.BEARING (25X47X15)	1	
21	04221-08129	PIN	1	
22	09206-13019	PIN (10.4X13X16)	2	
23	09280-21015	O RING (D:2.7,ID:21.4)	2	
24	09280-26006	O RING (D:3.1,ID:26.4)	2	
25	09421-04008	KEY	1	
26-1	57110-98L01	SHAFT,DRIVE UPPER	1	X-TRANSOM
26-2	57110-98L11	SHAFT,DRIVE UPPER	1	XX-TRANSOM
27	57113-98L00	SHAFT,DRIVE LOWER	1	
28	09159-27001	NUT,DRIVE SHAFT LOWER (M27)	1	
29	09265-28006	BEARING (28X52X16)	1	PART OF FIG.407A REF3
30	09380-24007	CIRCLIP	1	
31	09159-16027	NUT (M16)	1	
32-1	09181-29003	SHIM (29X50X0.5)	1	
32-2	09181-29004	SHIM (29X50X0.6)	1	
32-3	09181-29005	SHIM (29X50X0.65)	1	
32-4	09181-29006	SHIM (29X50X0.7)	1	
32-5	09181-29007	SHIM (29X50X0.75)	1	
32-6	09181-29008	SHIM (29X50X0.8)	1	
32-7	09181-29009	SHIM (29X50X0.85)	1	
32-8	09181-29010	SHIM (29X50X0.9)	1	
32-9	09181-29011	SHIM (29X50X0.95)	1	
32-10	09181-29012	SHIM (29X50X1.05)	1	
33	08221-16256	SHIM	1	
34-1	09181-25051	SHIM (25X34X0.6)	1	
34-2	09181-25052	SHIM (25X34X0.65)	1	
34-3	09181-25160	SHIM (25X34X0.7)	1	
34-4	09181-25054	SHIM (25X34X0.75)	1	
34-5	09181-25162	SHIM (25X34X0.8)	1	
34-6	09181-25056	SHIM (25X34X0.85)	1	
34-7	09181-25057	SHIM (25X34X0.9)	1	
34-8	09181-25058	SHIM (25X34X0.95)	1	
34-9	09181-25059	SHIM (25X34X1)	1	
34-10	09181-25060	SHIM (25X34X1.05)	1	
34-11	09181-25061	SHIM (25X34X1.1)	1	

FIG.220B

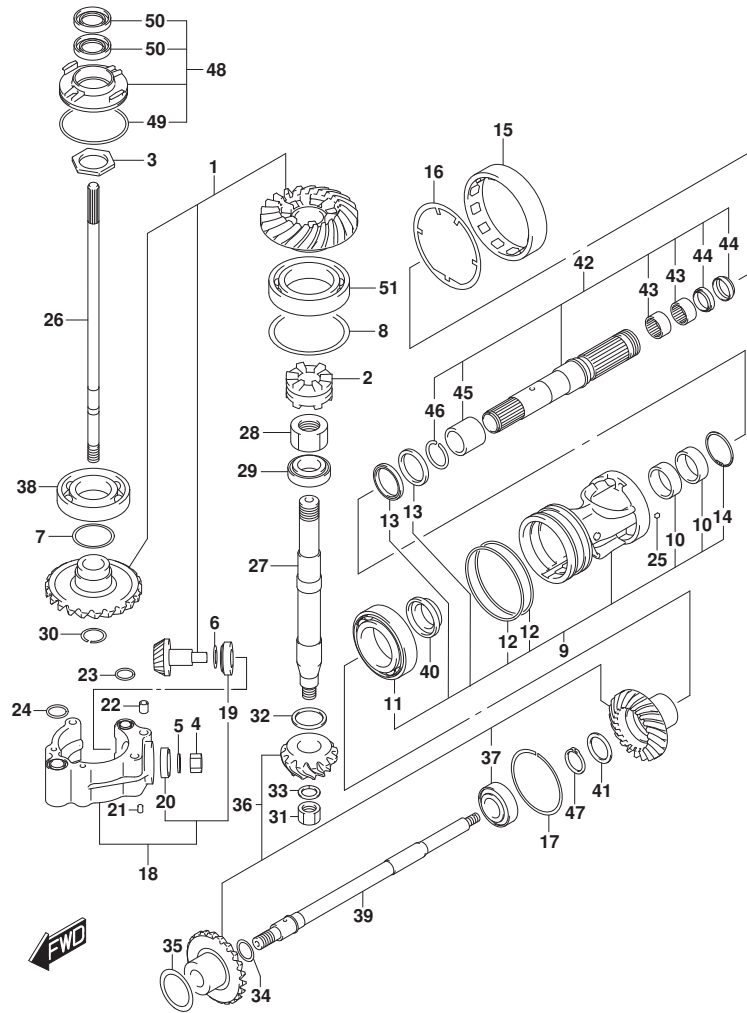


FIG.220B (1-E-4) TRANSMISSION (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34-12	09181-25062	SHIM (25X34X1.15)	1	
34-13	09181-25063	SHIM (25X34X1.2)	1	
34-14	09181-25130	SHIM (25X32X0.5)	1	
35-1	09181-50020	SHIM (50X65X0.45)	1	
35-2	09181-50021	SHIM (50X65X0.5)	1	
35-3	09181-50022	SHIM (50X65X0.55)	1	
35-4	09181-50023	SHIM (50X65X0.6)	1	
35-5	09181-50024	SHIM (50X65X0.65)	1	
35-6	09181-50025	SHIM (50X65X0.7)	1	
35-7	09181-50026	SHIM (50X65X0.75)	1	
35-8	09181-50027	SHIM (50X65X0.8)	1	
35-9	09181-50028	SHIM (50X65X0.85)	1	
35-10	09181-50029	SHIM (50X65X0.9)	1	
36	57301-98810	GEAR SET,CONTRA	1	
37	09265-30024	.BEARING (30X62X21.25)	1	
38	09262-40017	BEARING (40X80X18)	1	PART OF FIG.407A REF15
39	57610-98L00	SHAFT,PROPELLER INNER	1	
40	57622-98L00	SPACER,PROP SHAFT	1	
41	09160-36007	WASHER (32X47X2)	1	
42	57600-98822	SHAFT SET,PROPELLER OUTER	1	
43	09263-30064	.BEARING (30X37X20)	2	
44	09282-30009	.SEAL (30X38X10.9)	2	
45	09300-40003	.BUSH (40X45X40)	1	
46	09380-40004	.RING,SNAP	1	
47	57635-98L00	STOPPER,PROPELLER SHAFT	1	
48	17450-98L02	HOUSING,WATER INLET	1	
49	09280-69001	.O RING (D:3.1,ID:68.5)	1	
50	09282-24008	.SEAL,OIL (24X40X7)	2	
51	09262-55002	BEARING (55X90X18)	1	

FIG.301A

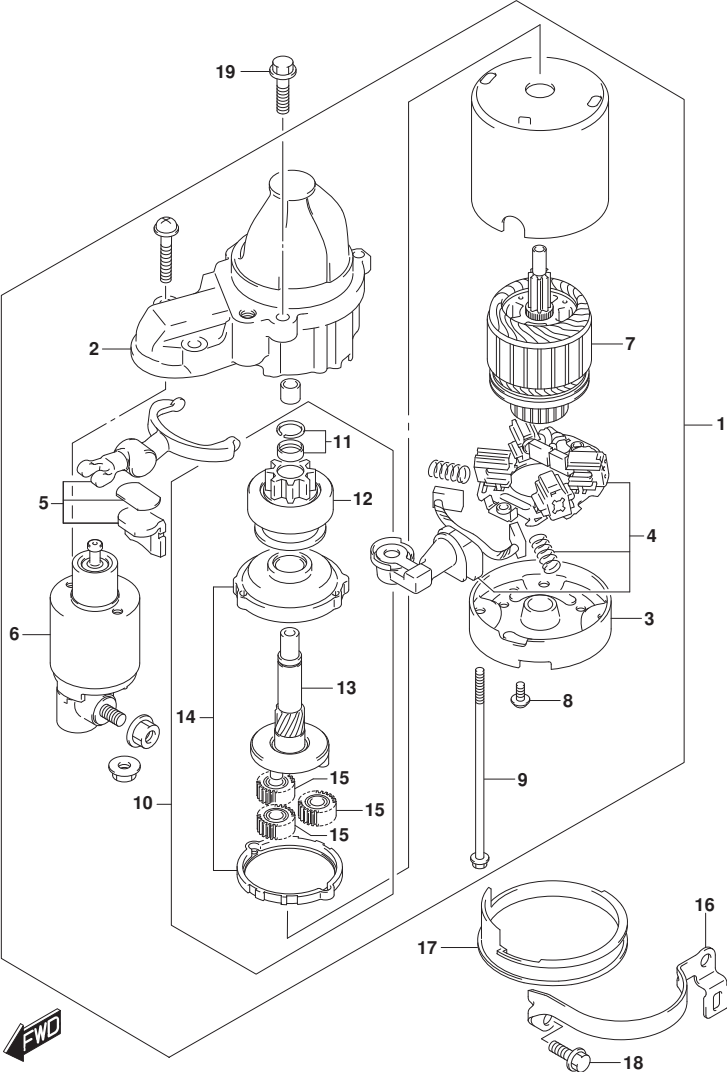


FIG.301A (1-E-5) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-98L10	MOTOR ASSY,STARTING	1	
2	31150-98L00	.CASE,GEAR	1	
3	31170-92J00	.HOUSING,REAR	1	
4	31173-98L00	.HOLDER ASSY,BRUSH	1	
5	31191-63J00	.LEVER SET	1	
6	31220-98L10	.SWITCH ASSY	1	
7	31311-63J00	ARMATURE	1	
8	31192-92J00	.SCREW SET	1	
9	31261-75F10	.BOLT	2	
10	31340-98L00	.CLUTCH SET,STARTING MOTOR	1	
11	31313-86030	..STOPPER SET	1	
12	31320-98L00	..PINION	1	
13	31341-98L00	..SHAFT,PINION	1	
14	31343-63J00	..INTERNAL GEAR ASSY	1	
15	31344-63J00	..GEAR ASSY	3	
16	31912-98L00	BAND,STARTER MOTOR	1	
17	31918-92J01	DAMPER,LOWER	1	LOWER
18	01550-0820C	BOLT (8X20)	2	
19	01550-0830C	BOLT	2	

FIG.303A (1-E-6) MAGNETO (DF350A,DF325A)

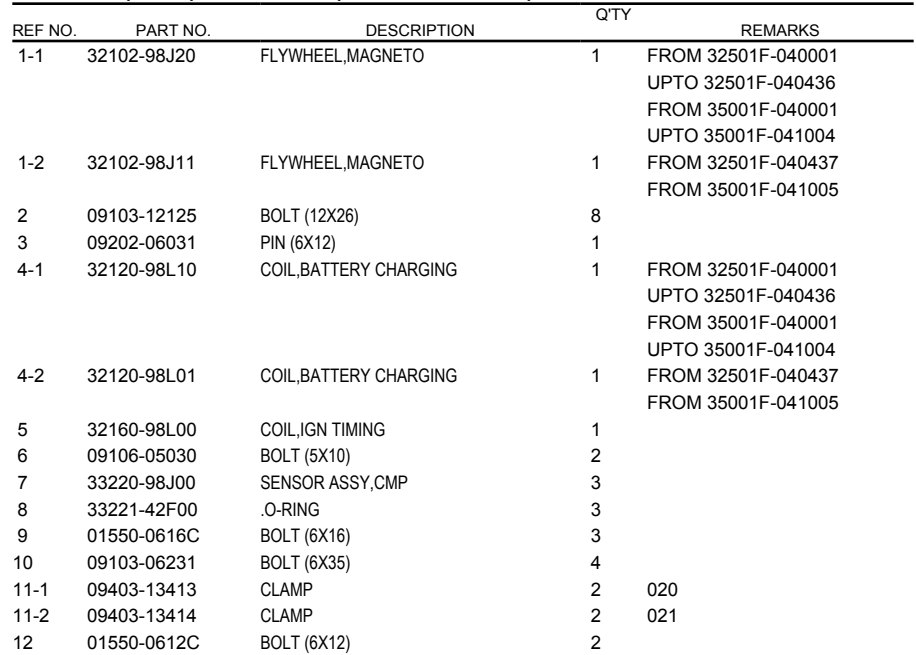


FIG.303B

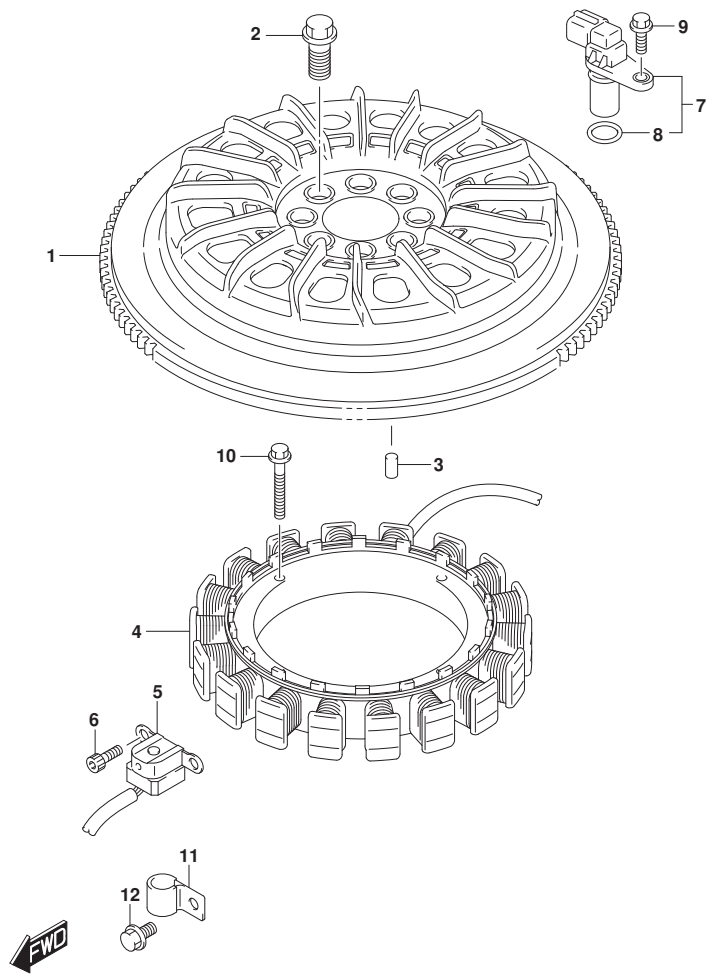


FIG.303B (1-E-7) MAGNETO (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	32102-98J20	FLYWHEEL,MAGNETO	1	FROM 30003F-040001 UPTO 30003F-040713
1-2	32102-98J11	FLYWHEEL,MAGNETO	1	FROM 30003F-040714
2	09103-12125	BOLT (12X26)	8	
3	09202-06031	PIN (6X12)	1	
4-1	32120-98L10	COIL,BATTERY CHARGING	1	FROM 30003F-040001 UPTO 30003F-040713
4-2	32120-98L01	COIL,BATTERY CHARGING	1	FROM 30003F-040714
5	32160-98L00	COIL,IGN TIMING	1	
6	09106-05030	BOLT (5X10)	2	
7	33220-98J00	SENSOR ASSY,CMP	3	
8	33221-42F00	.O-RING	3	
9	01550-0616C	BOLT (6X16)	3	
10	09103-06231	BOLT (6X35)	4	
11-1	09403-13413	CLAMP	2	020
11-2	09403-13414	CLAMP	2	021,022
12	01550-0612C	BOLT (6X12)	2	

FIG.310A (1-E-8) RECTIFIER/IGNITION COIL

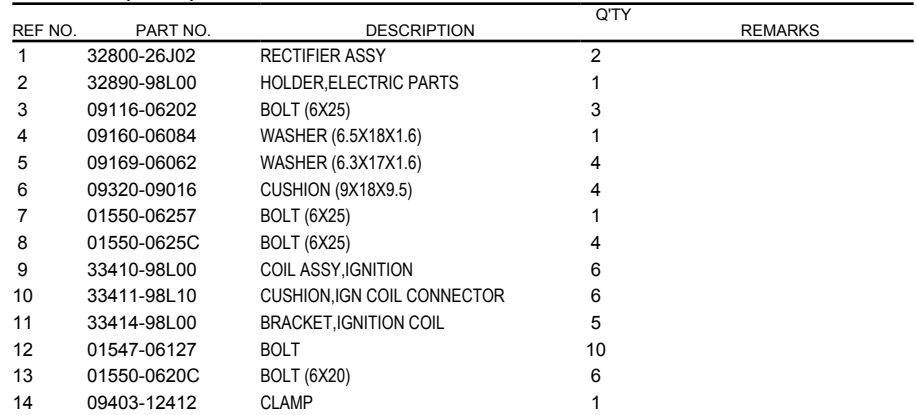


FIG.315A

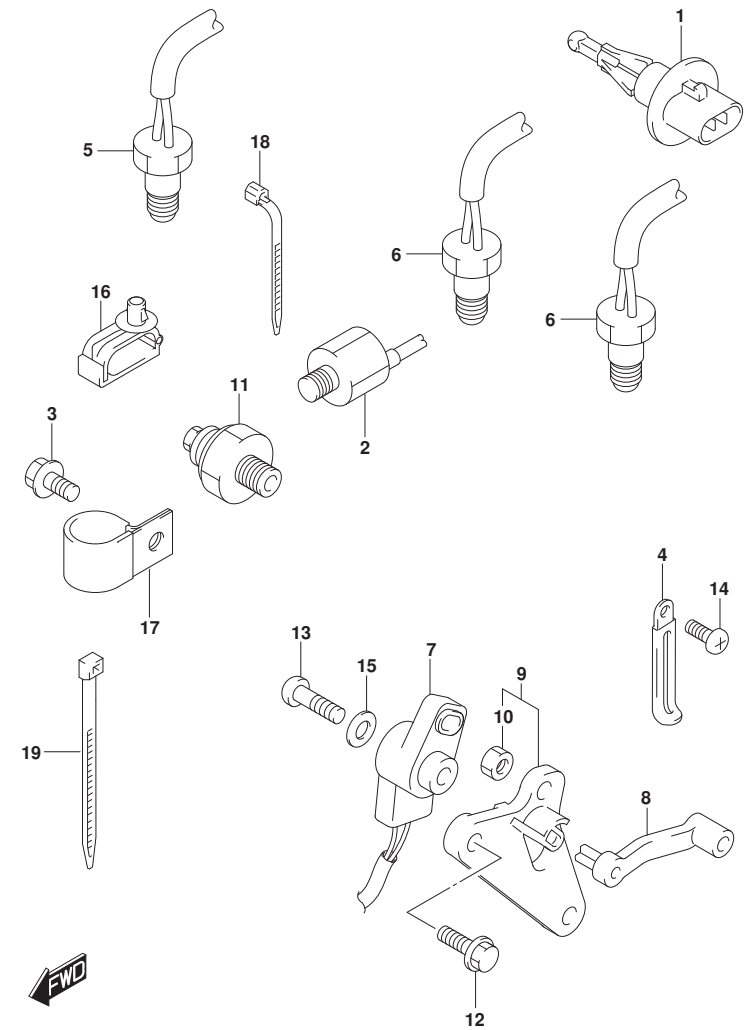


FIG.315A (1-E-9) SENSOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13650-52G00	SENSOR,INLET AIR TEMP	1	
2	18640-98L01	SENSOR ASSY,KNOCK	1	
3	29103-93J00	BOLT (6X12)	1	PTT MOTOR LEAD CLAMP
4	29404-93J11	CLAMP (L:65)	1	PTT MOTOR LEAD
5	34830-87J20	SENSOR,TEMP	1	EXHAUST TEMP
6	34830-87J20	SENSOR,TEMP	2	CYLINDER TEMP
7	34840-98J03	SENSOR ASSY,TRIM & TILT	1	
8	34841-88L01	LEVER,TRIM SENSOR	1	
9	34845-88L02	BRACKET,TRIM SENSOR	1	
10	09140-05005	.NUT (M5)	1	
11	37820-99E02	SWITCH ASSY,OIL PRESSURE	1	
12	09103-06093	BOLT (6X20)	2	
13	09125-05048	SCREW (5X16)	1	
14	09125-06063	SCREW (6X10)	1	
15	09160-05029	WASHER (5.5X12X0.8)	1	
16	09403-07340	CLAMP	1	
17	09403-19412	CLAMP	1	
18	09407-14403	CLAMP (L:125)	1	
19	09407-14407	CLAMP (L:145)	2	

FIG.322A

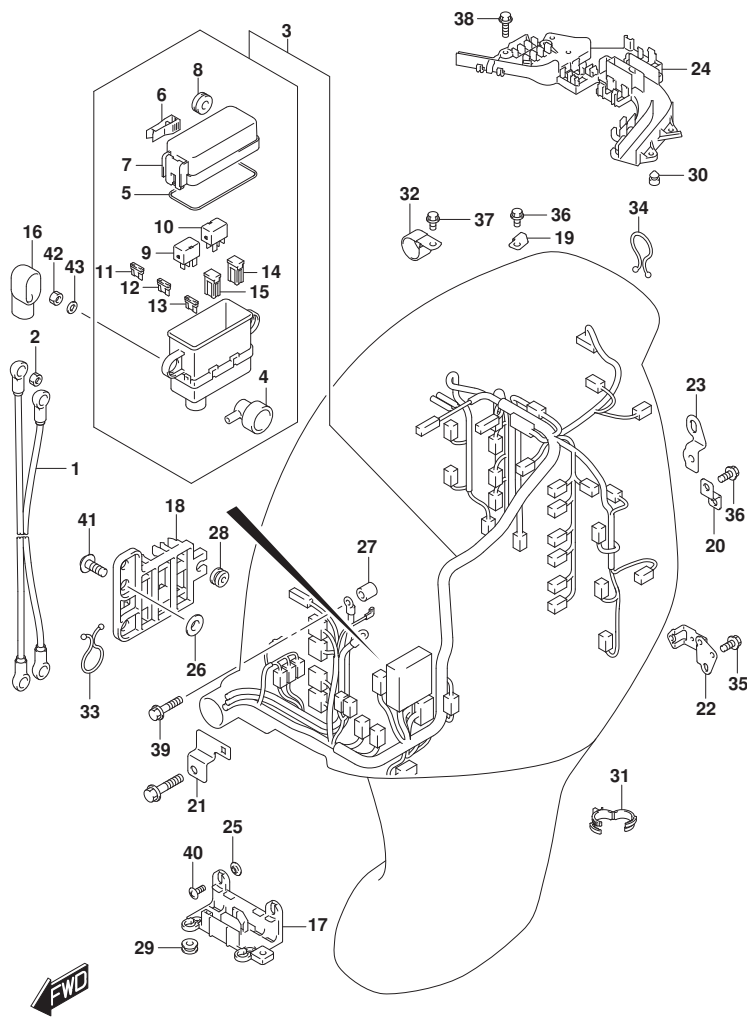


FIG.322A (1-E-10) HARNESS ((DF350A,DF325A):(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98L01	CABLE ASSY,STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-98L32	HARNESS ASSY,WIRING	1	
4	36618-43410	.CAP,OIL PRESSURE SWITCH (40X70)	1	
5	36721-98L10	.O RING,UPR COVER	1	
6	36737-98L00	.PULLER,FUSE	1	
7	36738-98L00	.COVER,FUSE CASE UPPER	1	
8	09320-08510	.CUSHION (8.5X20X8)	2	
9	38860-76F01	.RELAY ASSY	1	FOR MAIN
10	38860-76F01	.RELAY ASSY	1	FOR START
11	09481-10504	.FUSE (10A)	2	
12	09481-15504	.FUSE (15A)	4	
13	09481-30504	.FUSE (30A)	3	
14	09481-40403	.FUSE (40A)	1	
15	09481-60403	.FUSE (60A)	2	
16	36612-96J01	CAP,TERMINAL	1	
17	36616-98L00	HOLDER,CABLE	1	
18	36616-98L10	HOLDER,CONNECTOR	1	
19	36617-88L00	BRACKET,PTT CABLE CLAMP	1	
20	36617-93J10	BRACKET,HARNESS	5	
21	36617-98L10	BRACKET,HARNESS	1	
22	36617-98L30	BRACKET,HARNESS	1	
23	36617-98L50	BRACKET,HARNESS	2	
24	36626-98L00	HOLDER,MAIN HARNESS	1	
25	09169-06053	WASHER (6.3X16X1)	2	
26	09169-06053	WASHER (6.3X16X1)	2	
27	09180-08229	SPACER (8.1X16X17)	1	
28	09320-04013	BUSH	1	
29	09320-08517	GROMMET	2	
30	09321-06036	CUSHION,LICENSE PLATE	1	
31	09403-25001	CLAMP	1	
32	09403-26402	CLAMP	1	
33	09408-00008	CLIP (ID:20)	3	
34	09408-00327	CLIP,HARNESS (ID:42)	4	

FIG.322A

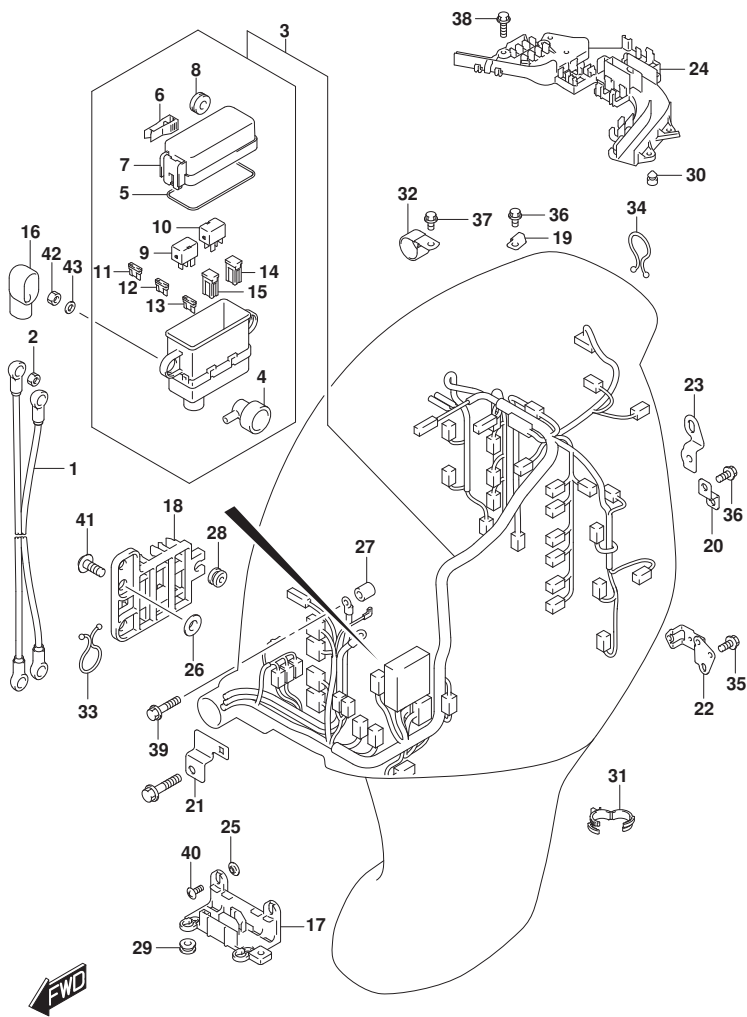


FIG.322A (1-E-11) HARNESS ((DF350A,DF325A):(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01547-06127	BOLT	2	
36	01550-0612C	BOLT (6X12)	7	
37	01550-0612C	BOLT (6X12)	1	
38	01550-0620C	BOLT (6X20)	4	
39	01550-08357	BOLT	1	
40	02142-06167	SCREW (6X16)	2	
41	02142-06167	SCREW (6X16)	2	
42	08310-00067	NUT	1	
43	08321-01067	WASHER,LOCK	1	

FIG.322B

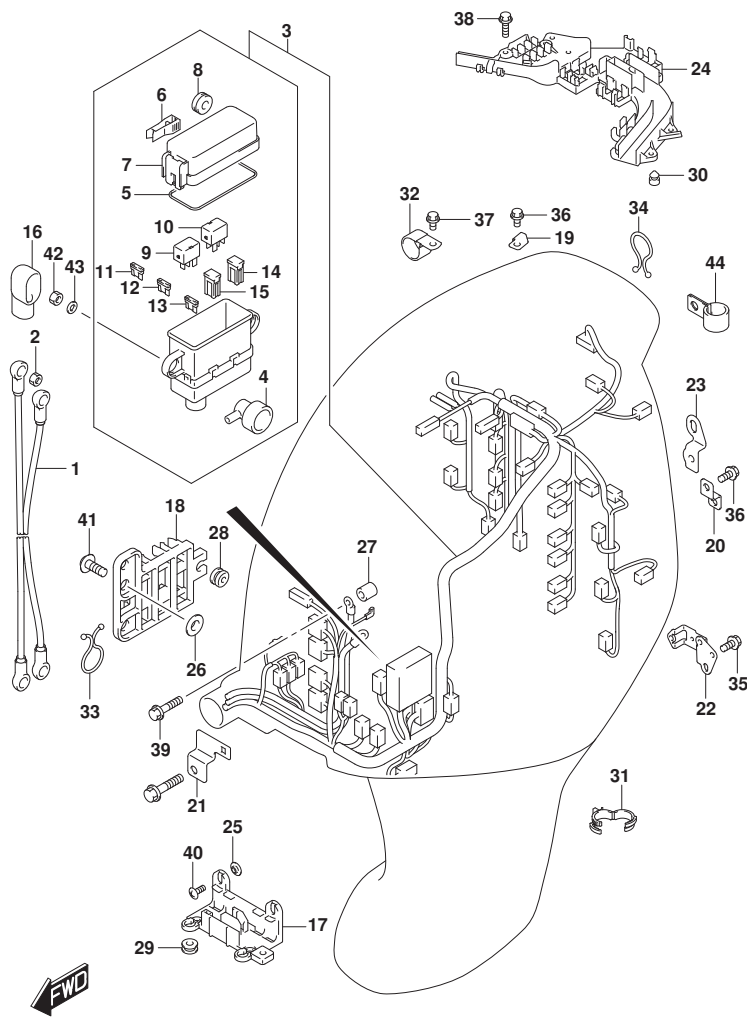


FIG.322B (1-E-12) HARNESS ((DF350A,DF325A):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98L01	CABLE ASSY,STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-98L40	HARNESS ASSY,WIRING	1	
4	36618-43410	.CAP,OIL PRESSURE SWITCH (40X70)	1	
5	36721-98L10	.O RING,UPR COVER	1	
6	36737-98L00	.PULLER,FUSE	1	
7	36738-98L00	.COVER,FUSE CASE UPPER	1	
8	09320-08510	.CUSHION (8.5X20X8)	2	
9	38860-76F01	.RELAY ASSY	1	FOR MAIN
10	38860-76F01	.RELAY ASSY	1	FOR START
11	09481-10504	.FUSE (10A)	2	
12	09481-15504	.FUSE (15A)	4	
13	09481-30504	.FUSE (30A)	3	
14	09481-40403	.FUSE (40A)	1	
15	09481-60403	.FUSE (60A)	2	
16	36612-96J01	CAP,TERMINAL	1	
17	36616-98L00	HOLDER,CABLE	1	
18	36616-98L10	HOLDER,CONNECTOR	1	
19	36617-88L00	BRACKET,PTT CABLE CLAMP	1	
20	36617-93J10	BRACKET,HARNESS	3	
21	36617-98L10	BRACKET,HARNESS	1	
22	36617-98L30	BRACKET,HARNESS	1	
23	36617-98L50	BRACKET,HARNESS	2	
24	36626-98L00	HOLDER,MAIN HARNESS	1	
25	09169-06053	WASHER (6.3X16X1)	2	
26	09169-06053	WASHER (6.3X16X1)	2	
27	09180-08229	SPACER (8.1X16X17)	1	
28	09320-04013	BUSH	1	
29	09320-08517	GROMMET	2	
30	09321-06036	CUSHION,LICENSE PLATE	1	
31	09403-25001	CLAMP	1	
32	09403-26402	CLAMP	1	
33	09408-00008	CLIP (ID:20)	3	
34	09408-00327	CLIP,HARNESS (ID:42)	4	

FIG.322B

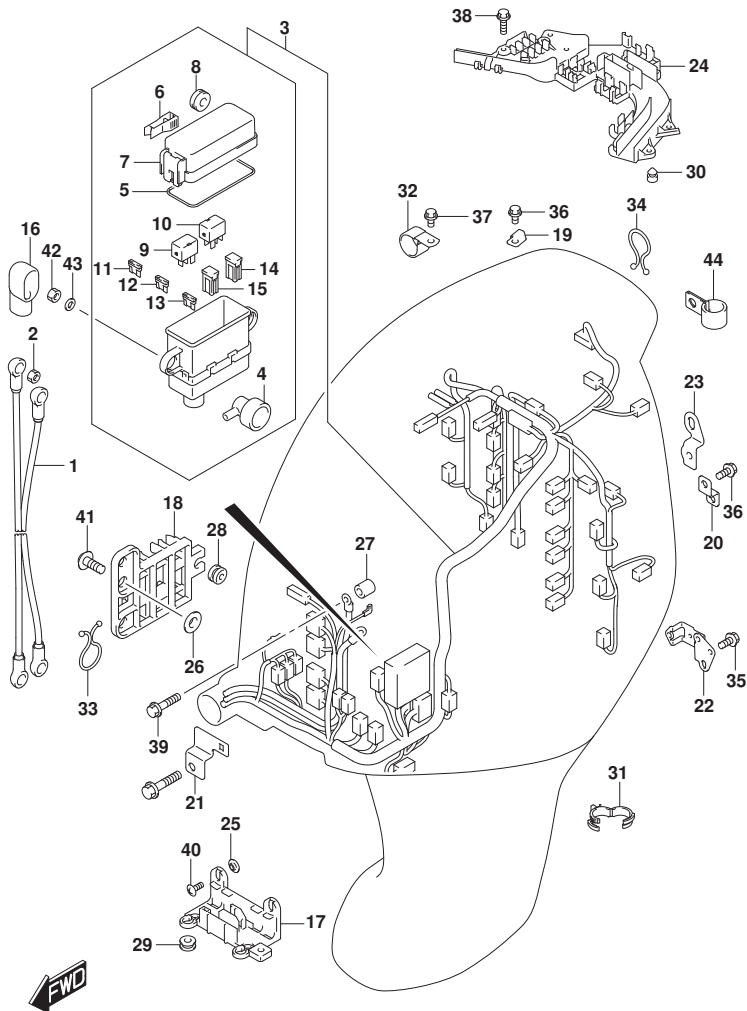


FIG.322B (1-E-13) HARNESS ((DF350A,DF325A):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01547-06127	BOLT	2	
36	01550-0612C	BOLT (6X12)	7	
37	01550-0612C	BOLT (6X12)	1	
38	01550-0620C	BOLT (6X20)	4	
39	01550-08357	BOLT	1	
40	02142-06167	SCREW (6X16)	2	
41	02142-06167	SCREW (6X16)	2	
42	08310-00067	NUT	1	
43	08321-01067	WASHER,LOCK	1	
44	09403-14416	CLAMP,HARNESS	2	

FIG.322C

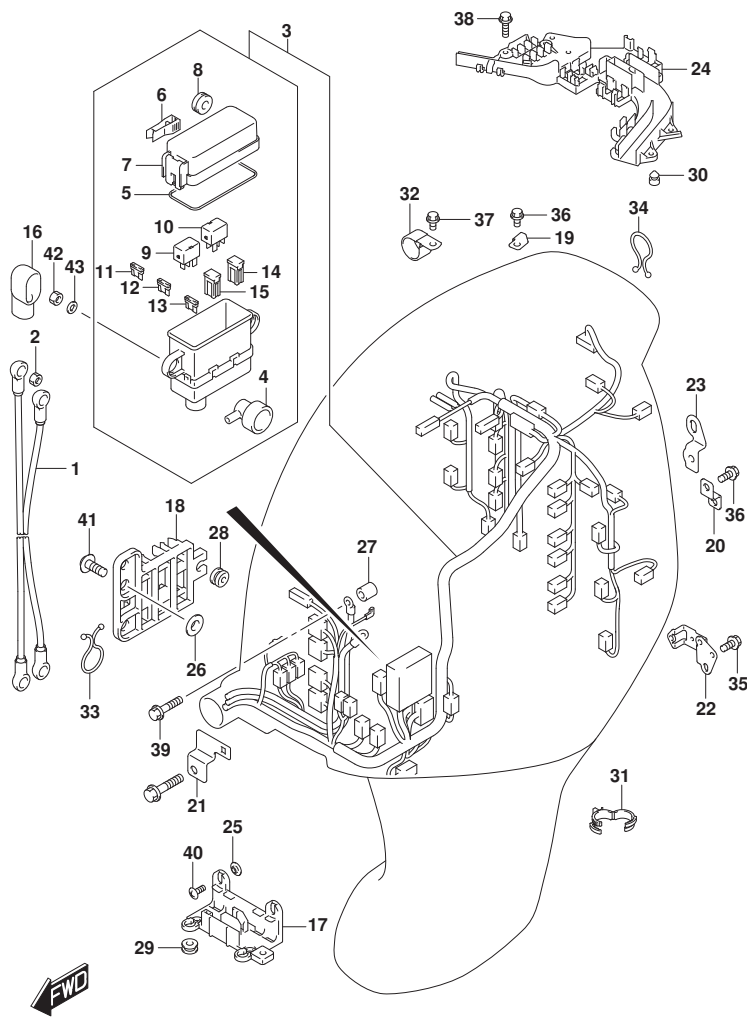


FIG.322C (1-E-14) HARNESS (DF300B:(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98L01	CABLE ASSY,STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-98L32	HARNESS ASSY,WIRING	1	
4	36618-43410	.CAP,OIL PRESSURE SWITCH (40X70)	1	
5	36721-98L10	.O RING,UPR COVER	1	
6	36737-98L00	.PULLER,FUSE	1	
7	36738-98L00	.COVER,FUSE CASE UPPER	1	
8	09320-08510	.CUSHION (8.5X20X8)	2	
9	38860-76F01	.RELAY ASSY	1	FOR MAIN
10	38860-76F01	.RELAY ASSY	1	FOR START
11	09481-10504	.FUSE (10A)	2	
12	09481-15504	.FUSE (15A)	4	
13	09481-30504	.FUSE (30A)	3	
14	09481-40403	.FUSE (40A)	1	
15	09481-60403	.FUSE (60A)	2	
16	36612-96J01	CAP,TERMINAL	1	
17	36616-98L00	HOLDER,CABLE	1	
18	36616-98L10	HOLDER,CONNECTOR	1	
19	36617-88L00	BRACKET,PTT CABLE CLAMP	1	
20	36617-93J10	BRACKET,HARNESS	5	
21	36617-98L10	BRACKET,HARNESS	1	
22	36617-98L30	BRACKET,HARNESS	1	
23	36617-98L50	BRACKET,HARNESS	2	
24	36626-98L00	HOLDER,MAIN HARNESS	1	
25	09169-06053	WASHER (6.3X16X1)	2	
26	09169-06053	WASHER (6.3X16X1)	2	
27	09180-08229	SPACER (8.1X16X17)	1	
28	09320-04013	BUSH	1	
29	09320-08517	GROMMET	2	
30	09321-06036	CUSHION,LICENSE PLATE	1	
31	09403-25001	CLAMP	1	
32	09403-26402	CLAMP	1	
33	09408-00008	CLIP (ID:20)	3	
34	09408-00327	CLIP,HARNESS (ID:42)	4	

FIG.322C

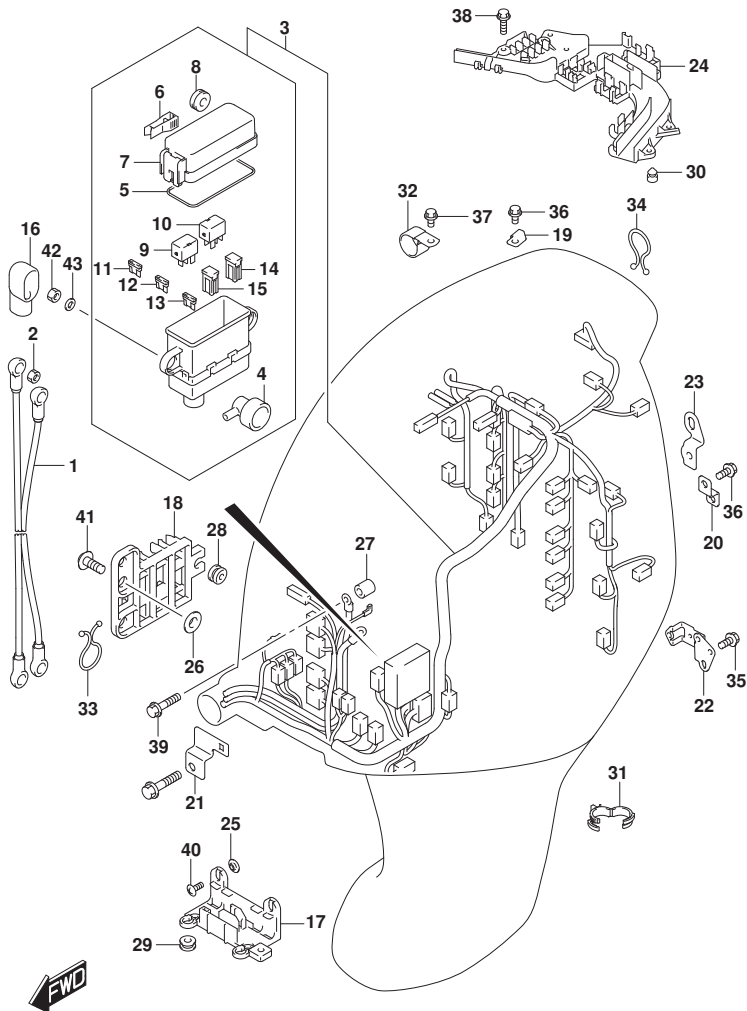


FIG.322C (1-E-15) HARNESS (DF300B:(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01547-06127	BOLT	2	
36	01550-0612C	BOLT (6X12)	7	
37	01550-0612C	BOLT (6X12)	1	
38	01550-0620C	BOLT (6X20)	4	
39	01550-08357	BOLT	1	
40	02142-06167	SCREW (6X16)	2	
41	02142-06167	SCREW (6X16)	2	
42	08310-00067	NUT	1	
43	08321-01067	WASHER,LOCK	1	

FIG.322D

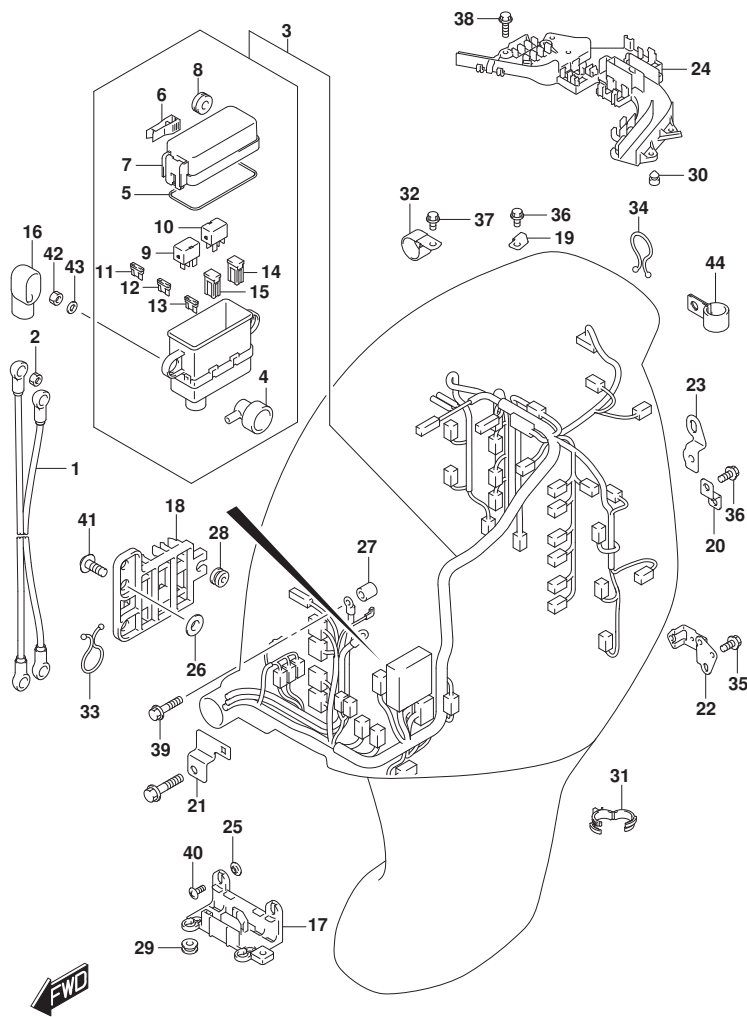


FIG.322D (1-E-16) HARNESS (DF300B:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98L01	CABLE ASSY,STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-98L40	HARNESS ASSY,WIRING	1	
4	36618-43410	.CAP,OIL PRESSURE SWITCH (40X70)	1	
5	36721-98L10	.O RING,UPR COVER	1	
6	36737-98L00	.PULLER,FUSE	1	
7	36738-98L00	.COVER,FUSE CASE UPPER	1	
8	09320-08510	.CUSHION (8.5X20X8)	2	
9	38860-76F01	.RELAY ASSY	1	FOR MAIN
10	38860-76F01	.RELAY ASSY	1	FOR START
11	09481-10504	.FUSE (10A)	2	
12	09481-15504	.FUSE (15A)	4	
13	09481-30504	.FUSE (30A)	3	
14	09481-40403	.FUSE (40A)	1	
15	09481-60403	.FUSE (60A)	2	
16	36612-96J01	CAP,TERMINAL	1	
17	36616-98L00	HOLDER,CABLE	1	
18	36616-98L10	HOLDER,CONNECTOR	1	
19	36617-88L00	BRACKET,PTT CABLE CLAMP	1	
20	36617-93J10	BRACKET,HARNESS	3	
21	36617-98L10	BRACKET,HARNESS	1	
22	36617-98L30	BRACKET,HARNESS	1	
23	36617-98L50	BRACKET,HARNESS	2	
24	36626-98L00	HOLDER,MAIN HARNESS	1	
25	09169-06053	WASHER (6.3X16X1)	2	
26	09169-06053	WASHER (6.3X16X1)	2	
27	09180-08229	SPACER (8.1X16X17)	1	
28	09320-04013	BUSH	1	
29	09320-08517	GROMMET	2	
30	09321-06036	CUSHION,LICENSE PLATE	1	
31	09403-25001	CLAMP	1	
32	09403-26402	CLAMP	1	
33	09408-00008	CLIP (ID:20)	3	
34	09408-00327	CLIP,HARNESS (ID:42)	4	

FIG.322D

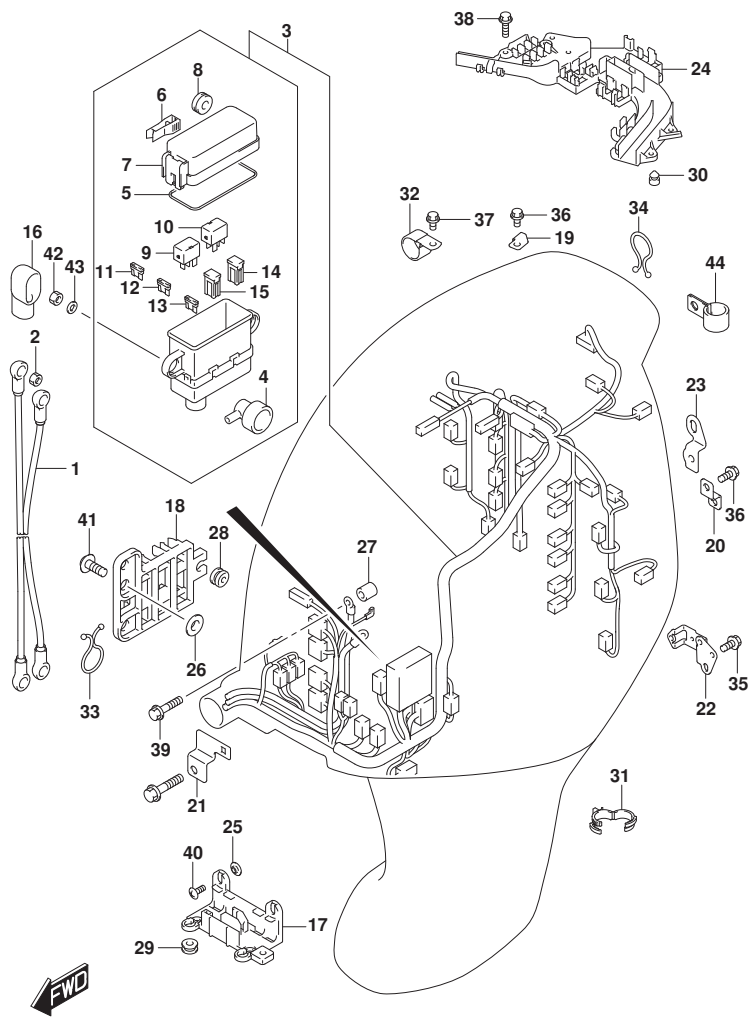


FIG.322D (1-F-2) HARNESS (DF300B:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01547-06127	BOLT	2	
36	01550-0612C	BOLT (6X12)	7	
37	01550-0612C	BOLT (6X12)	1	
38	01550-0620C	BOLT (6X20)	4	
39	01550-08357	BOLT	1	
40	02142-06167	SCREW (6X16)	2	
41	02142-06167	SCREW (6X16)	2	
42	08310-00067	NUT	1	
43	08321-01067	WASHER,LOCK	1	
44	09403-14416	CLAMP,HARNESS	2	

FIG.326A

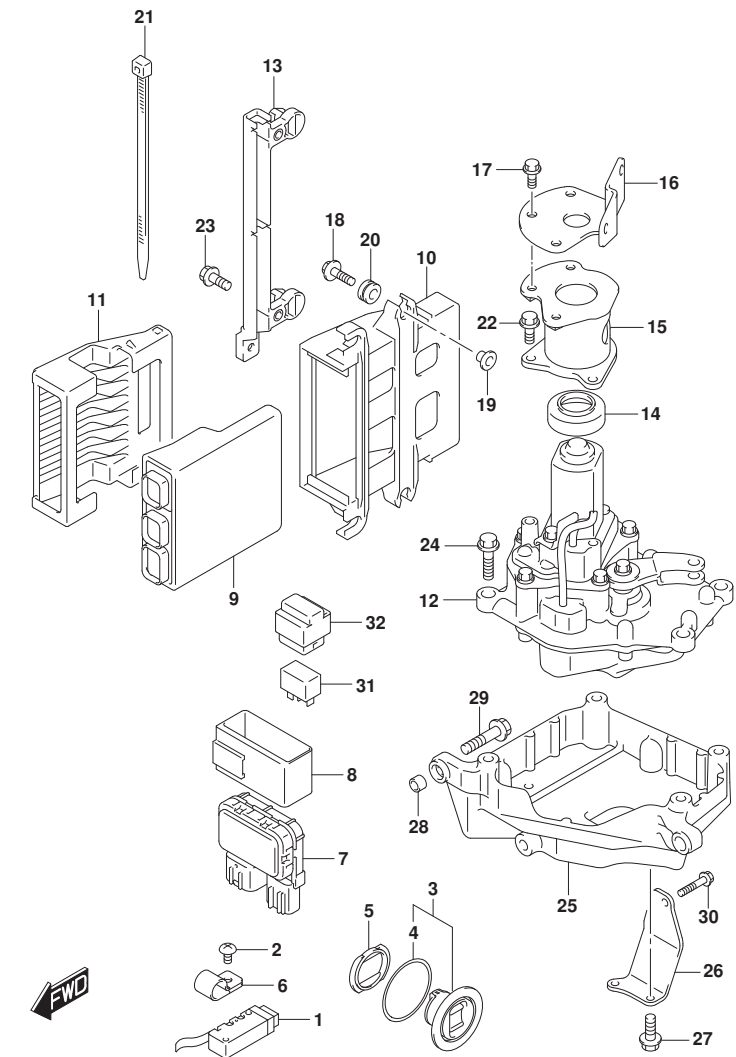


FIG.326A (1-F-3) PTT SWITCH/ENGINE CONTROL UNIT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J13	SWITCH ASSY,TILT LIMIT	1	
2	29125-93J00	SCREW (6X12)	1	
3	37850-92J00	SWITCH ASSY,PTT	1	
4	37856-92J00	.TAPE,PTT SWITCH	1	
5	37857-92J01	BUSH,PTT SWITCH	1	
6	09403-09330	CLAMP	1	
7	38410-93J21	RELAY ASSY,PTT	1	
8	38415-93J20	HOLDER,PTT RELAY	1	
9-1	33920-98L80	UNIT,ENGINE CONTROL	1	020,021
9-2	33920-98LC0	UNIT,ENGINE CONTROL	1	022
10	33924-98L00	HOLDER,ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION,ENGINE CONTROL UNIT	1	
12	38800-98L01	ACTUATOR ASSY,SHIFT	1	
13	38831-98L00	GUIDE,ACTUATOR CABLE	1	
14	38892-98L00	DAMPER,SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET,SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET,ACTUATOR UPPER	1	UPPER
17	01550-0612C	BOLT (6X12)	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER (6.3X17X1.6)	2	
20	09320-09016	CUSHION (9X18X9.5)	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT (6X16)	3	
23	01550-0625C	BOLT (6X25)	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER,ACTUATOR	1	
26	19116-98L00	BRACKET,ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY ASSY	2	
32	38915-90J00	HOLDER,RELAY	2	

FIG.326B

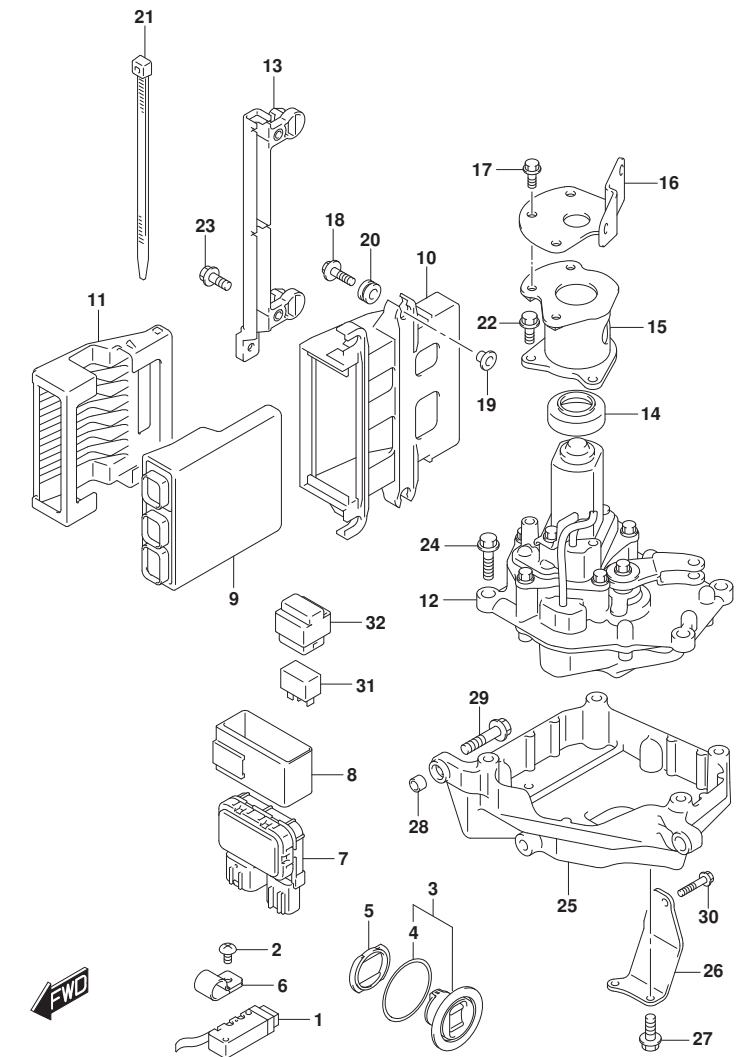


FIG.326B (1-F-4) PTT SWITCH/ENGINE CONTROL UNIT (DF325A:E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J13	SWITCH ASSY,TILT LIMIT	1	
2	29125-93J00	SCREW (6X12)	1	
3	37850-92J00	SWITCH ASSY,PTT	1	
4	37856-92J00	.TAPE,PTT SWITCH	1	
5	37857-92J01	BUSH,PTT SWITCH	1	
6	09403-09330	CLAMP	1	
7	38410-93J21	RELAY ASSY,PTT	1	
8	38415-93J20	HOLDER,PTT RELAY	1	
9-1	33920-98L90	UNIT,ENGINE CONTROL	1	020,021
9-2	33920-98LD0	UNIT,ENGINE CONTROL	1	022
10	33924-98L00	HOLDER,ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION,ENGINE CONTROL UNIT	1	
12	38800-98L01	ACTUATOR ASSY,SHIFT	1	
13	38831-98L00	GUIDE,ACTUATOR CABLE	1	
14	38892-98L00	DAMPER,SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET,SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET,ACTUATOR UPPER	1	UPPER
17	01550-0612C	BOLT (6X12)	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER (6.3X17X1.6)	2	
20	09320-09016	CUSHION (9X18X9.5)	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT (6X16)	3	
23	01550-0625C	BOLT (6X25)	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER,ACTUATOR	1	
26	19116-98L00	BRACKET,ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY ASSY	2	
32	38915-90J00	HOLDER,RELAY	2	

FIG.326C

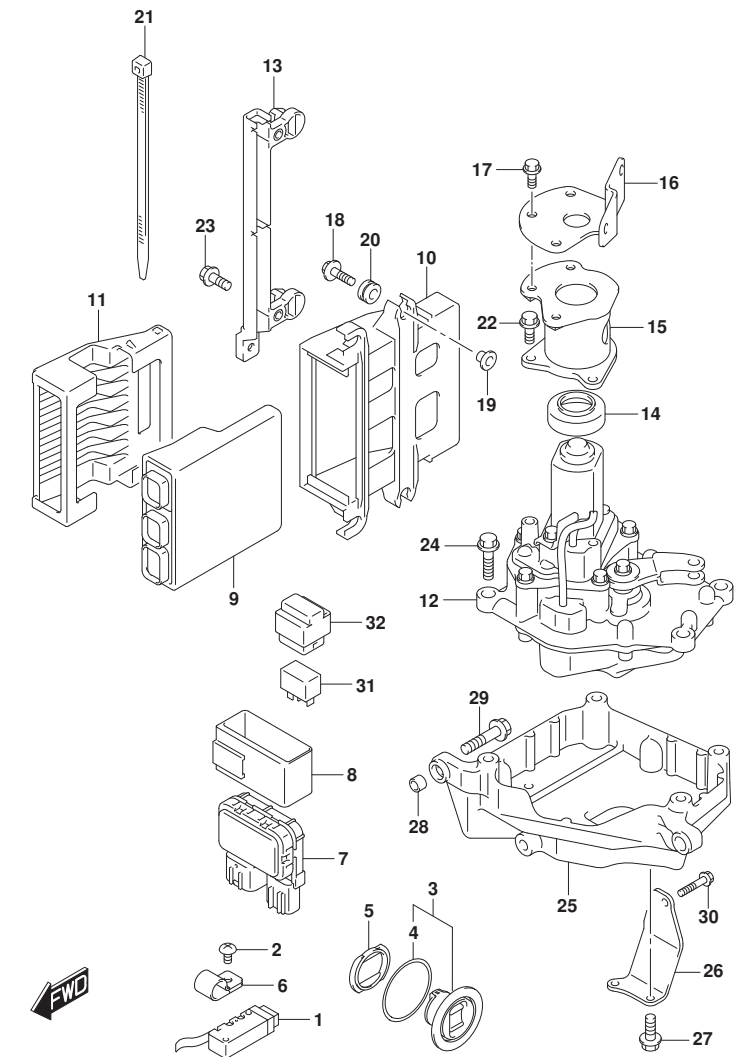


FIG.326C (1-F-5) PTT SWITCH/ENGINE CONTROL UNIT (DF325A:E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J13	SWITCH ASSY,TILT LIMIT	1	
2	29125-93J00	SCREW (6X12)	1	
3	37850-92J00	SWITCH ASSY,PTT	1	
4	37856-92J00	.TAPE,PTT SWITCH	1	
5	37857-92J01	BUSH,PTT SWITCH	1	
6	09403-09330	CLAMP	1	
7	38410-93J21	RELAY ASSY,PTT	1	
8	38415-93J20	HOLDER,PTT RELAY	1	
9-1	33920-98LA0	UNIT,ENGINE CONTROL	1	020,021
9-2	33920-98LE0	UNIT,ENGINE CONTROL	1	022
10	33924-98L00	HOLDER,ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION,ENGINE CONTROL UNIT	1	
12	38800-98L01	ACTUATOR ASSY,SHIFT	1	
13	38831-98L00	GUIDE,ACTUATOR CABLE	1	
14	38892-98L00	DAMPER,SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET,SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET,ACTUATOR UPPER	1	UPPER
17	01550-0612C	BOLT (6X12)	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER (6.3X17X1.6)	2	
20	09320-09016	CUSHION (9X18X9.5)	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT (6X16)	3	
23	01550-0625C	BOLT (6X25)	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER,ACTUATOR	1	
26	19116-98L00	BRACKET,ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY ASSY	2	
32	38915-90J00	HOLDER,RELAY	2	

FIG.326D

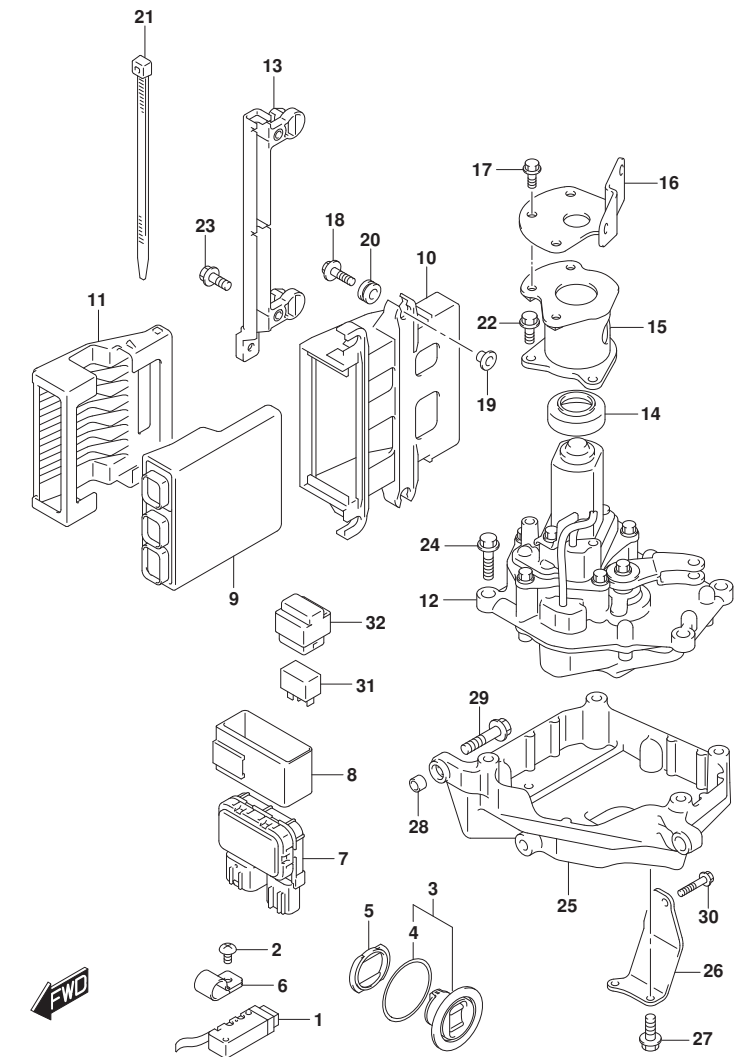


FIG.326D (1-F-6) PTT SWITCH/ENGINE CONTROL UNIT (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J13	SWITCH ASSY,TILT LIMIT	1	
2	29125-93J00	SCREW (6X12)	1	
3	37850-92J00	SWITCH ASSY,PTT	1	
4	37856-92J00	.TAPE,PTT SWITCH	1	
5	37857-92J01	BUSH,PTT SWITCH	1	
6	09403-09330	CLAMP	1	
7	38410-93J21	RELAY ASSY,PTT	1	
8	38415-93J20	HOLDER,PTT RELAY	1	
9-1	33920-98LB0	UNIT,ENGINE CONTROL	1	020,021
9-2	33920-98LF0	UNIT,ENGINE CONTROL	1	022
10	33924-98L00	HOLDER,ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION,ENGINE CONTROL UNIT	1	
12	38800-98L01	ACTUATOR ASSY,SHIFT	1	
13	38831-98L00	GUIDE,ACTUATOR CABLE	1	
14	38892-98L00	DAMPER,SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET,SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET,ACTUATOR UPPER	1	
17	01550-0612C	BOLT (6X12)	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER (6.3X17X1.6)	2	
20	09320-09016	CUSHION (9X18X9.5)	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT (6X16)	3	
23	01550-0625C	BOLT (6X25)	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER,ACTUATOR	1	
26	19116-98L00	BRACKET,ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY ASSY	2	
32	38915-90J00	HOLDER,RELAY	2	

FIG.331A

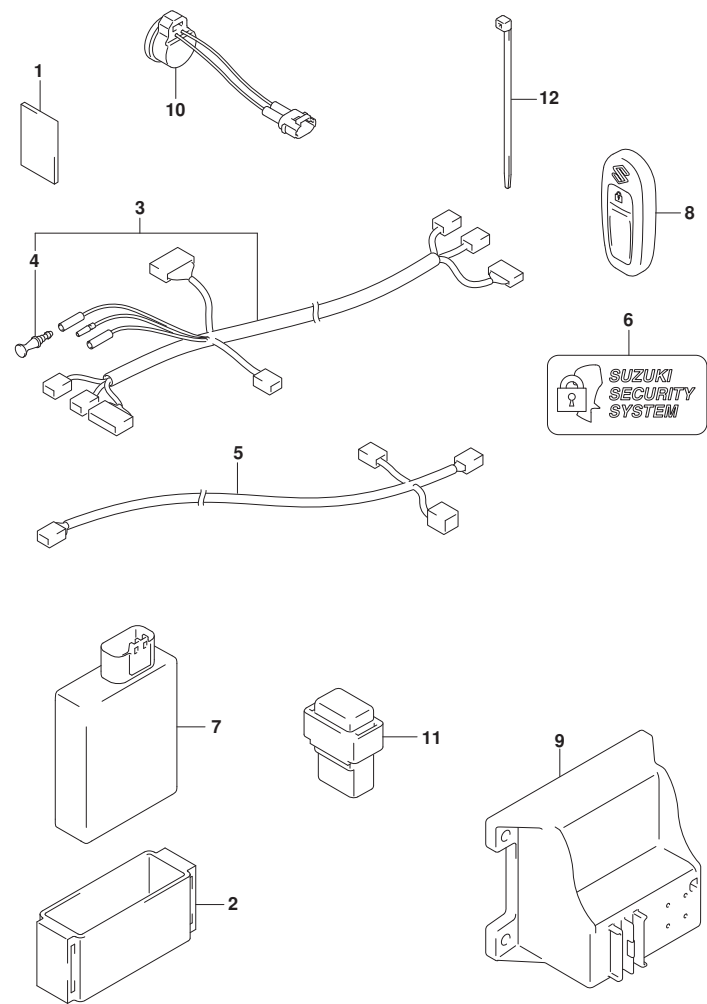


FIG.331A (1-F-7) KEY LESS START

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32851-93J00	CUSHION,LEAD WIRE	1	
2	32980-38F00	CUSHION,CDI UNIT	1	
3-1	36623-96L02	HARNESS ASSY,KLS CONTROLLER	1	020,021
3-2	36623-98LA0	HARNESS ASSY,KLS CONT	1	022
4	36615-96300	.TERMINAL	1	
5	36662-96L01	HARNESS ASSY,KLS CAN (L:6500+1 10)	1	
6	37117-96L00	DECAL,KLS	2	
7-1	37171-96L02	CONTROLLER ASSY,KLS (433MHZ)	1	020,021
7-2	37171-98L00	CONTROLLER ASSY,KLS 433 (433MH Z)	1	022
7-3	37171-96L12	CONTROLLER ASSY,KLS (315MHZ)	1	020,021
7-4	37171-98L10	CONTROLLER ASSY,KLS 315 (315MH Z)	1	022
8-1	37172-96L01	REMOCON ASSY,KLS (433MHZ)	2	
8-2	37172-96L10	REMOCON ASSY,KLS (315MHZ)	2	
9	37173-96L10	HOLDER,KLS PARTS	1	
10	38500-93J90	BUZZER,WARNING	1	
11	38860-96L01	RELAY ASSY,KLS	1	
12	09407-14407	CLAMP (L:145)	1	

FIG.335A

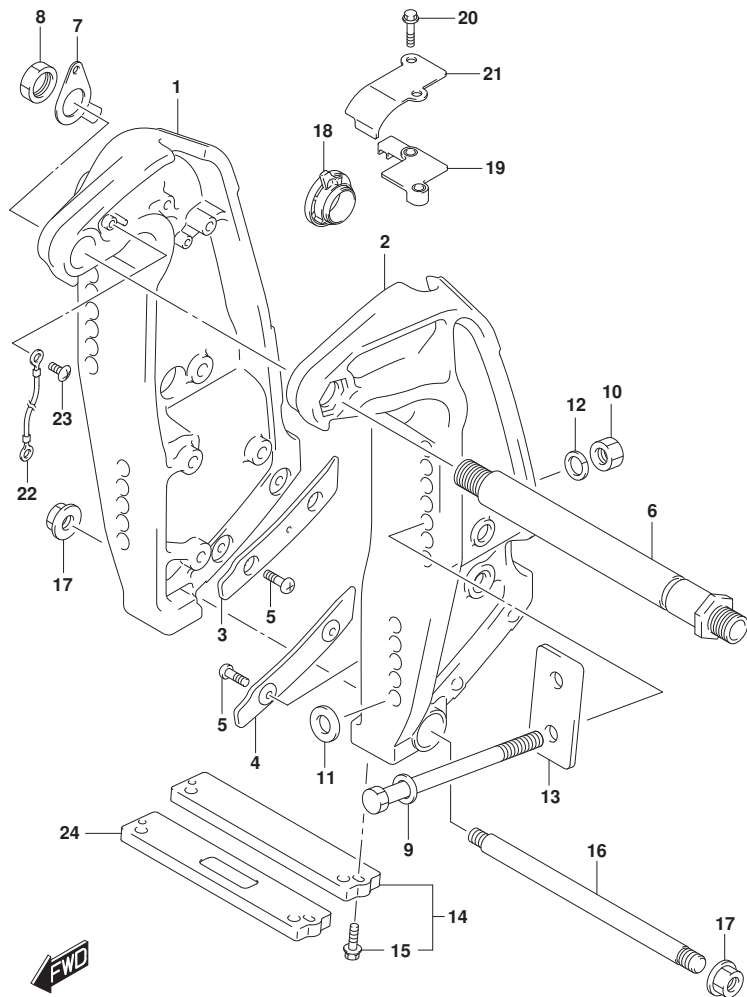


FIG.335A (1-F-8) CLAMP BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-98L00-YAY	BRACKET,CLAMP STBD (BLACK)	1	020 STBD BODY COLOR:YAY
1-2	41111-98L00-Y5S	BRACKET,CLAMP STBD (WHITE)	1	020 STBD BODY COLOR:Y5S
1-3	41111-98L00-YAY	BRACKET,CLAMP STBD (BLACK)	1	021,022 STBD BODY COLOR:YAY
1-4	41111-98L00-QTN	BRACKET,CLAMP STBD (WHITE)	1	021,022 STBD BODY COLOR:QTN,QUA
2-1	41121-98L00-YAY	BRACKET,CLAMP PORT (BLACK)	1	020 PORT BODY COLOR:YAY
2-2	41121-98L00-Y5S	BRACKET,CLAMP PORT (WHITE)	1	020 PORT BODY COLOR:Y5S
2-3	41121-98L00-YAY	BRACKET,CLAMP PORT (BLACK)	1	021,022 PORT BODY COLOR:YAY
2-4	41121-98L00-QTN	BRACKET,CLAMP PORT (WHITE)	1	021,022 PORT BODY COLOR:QTN,QUA
3	41117-93J02	PLATE,CLAMP BRACKET LWR STBD	1	STBD
4	41122-93J02	PLATE,CLAMP BRACKET LWR PORT	1	PORT
5	09125-06063	SCREW (6X10)	4	
6	41130-93J12	SHAFT,CLAMP BRACKET	1	
7	41135-93J11	WASHER,CLAMP BRACKET SHAFT	1	
8	09159-22006	NUT (M22)	1	
9-1	09100-12086	BOLT (12.7X150)	6	
9-2	09100-12085	BOLT (12.7X115)	1	OPT
9-3	09100-12092	BOLT (12.7X75)	1	OPT
9-4	09100-12125	BOLT (12.7X170)	1	OPT
9-5	09100-12126	BOLT (12.7X190)	1	OPT

FIG.335A

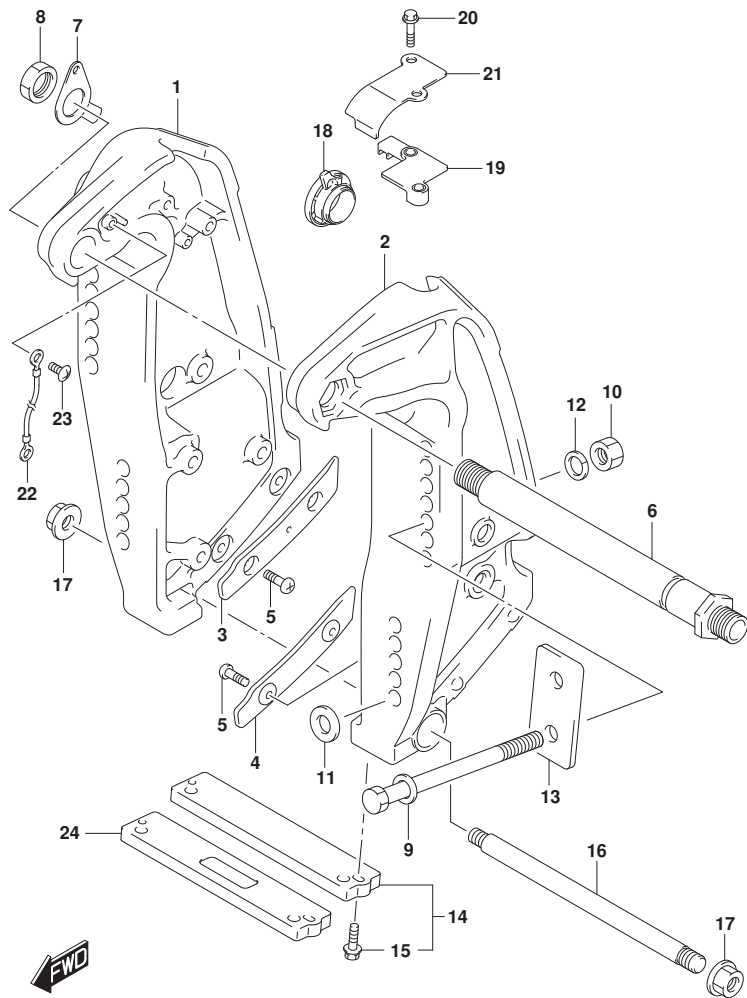


FIG.335A (1-F-9) CLAMP BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
10	09159-12062	NUT (12.7X19)	6	
11	09160-13022	WASHER (13.2X45X3)	4	
12	09160-13021	WASHER (13.2X26X3)	6	
13	41155-93J02	PLATE,TRANSOM	2	
14	55320-94900	ANODE SET,CLAMP BRACKET	1	
15	09116-06121	.BOLT (6X25)	2	
16	45421-87D03	PIN,TILT LOCK	1	
17	09159-14020	NUT	2	
18	48140-93J01	CAM ASSY,TILT LIMIT SWITCH	1	
19	48144-93J00	HOLDER,TILT LIMIT SWITCH	1	
20	09103-06278	BOLT (6X25)	2	
21	48145-93J00	COVER,TILT LIMIT SWITCH	1	
22	36894-87D00	LEAD (L:165)	1	CLAMP TO SWIVEL
23	09125-06063	SCREW (6X10)	2	
24	55321-94910	ANODE (MAGNESIUM)	1	OPT

FIG.336A

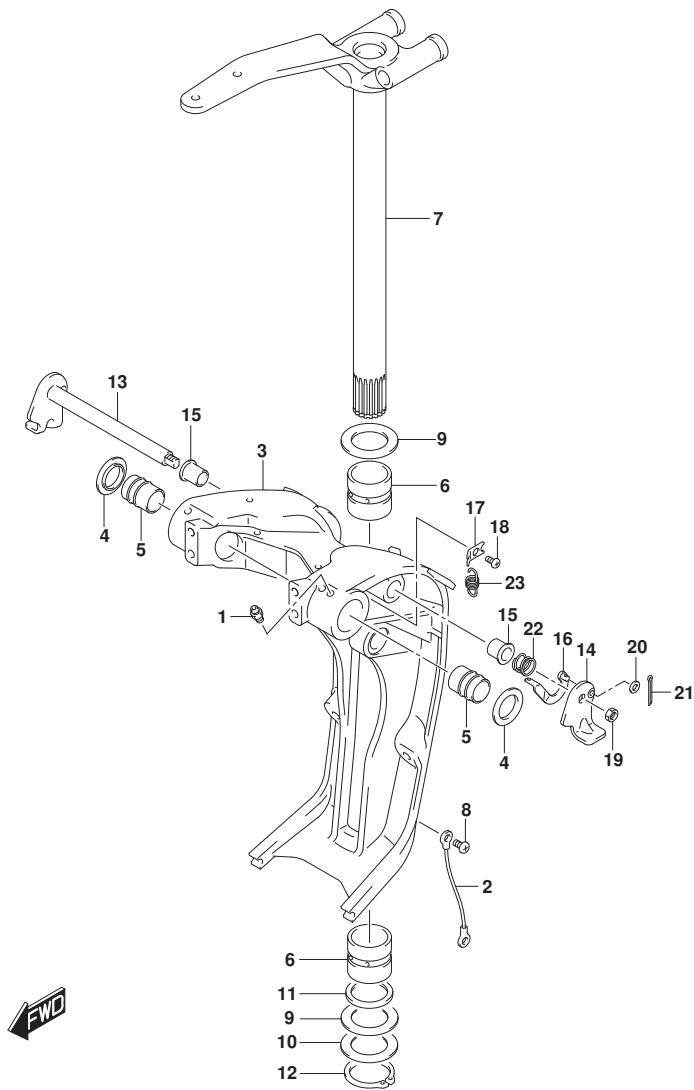


FIG.336A (1-F-10) SWIVEL BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE,GREASE	4	
2	36894-87D00	LEAD (L:165)	1	SWIVEL TO MOUNT BRKT
3-1	43111-93J24-YAY	BRACKET,SWIVEL (BLACK)	1	020 BODY COLOR:YAY
3-2	43111-93J24-Y5S	BRACKET,SWIVEL (WHITE)	1	020 BODY COLOR:Y5S
3-3	43111-93J24-YAY	BRACKET,SWIVEL (BLACK)	1	021,022 BODY COLOR:YAY
3-4	43111-93J24-QTN	BRACKET,SWIVEL (WHITE)	1	021,022 BODY COLOR:QTN,QUA
4	43114-93J00	WASHER,SWIVEL TO CLAMP BRKT	2	
5	43211-93J11	BUSH,CLAMP SHAFT SWIVEL	2	
6	43711-97E11	BUSH,STEERING	2	
7-1	43750-93J03-YAY	BRACKET,STEERING (BLACK)	1	020 BODY COLOR:YAY
7-2	43750-93J03-Y5S	BRACKET,STEERING (WHITE)	1	020 BODY COLOR:Y5S
7-3	43750-93J03-YAY	BRACKET,STEERING (BLACK)	1	021,022 BODY COLOR:YAY
7-4	43750-93J03-QTN	BRACKET,STEERING (WHITE)	1	021,022 BODY COLOR:QTN,QUA
8	09125-06063	SCREW (6X10)	1	
9	09160-39004	WASHER (39.5X65.5X1)	2	
10	09181-39001	SHIM (39.5X64X0.30)	AR	
11	09282-39001	OIL SEAL (39X51X5)	1	
12	09380-38003	CIRCLIP	1	
13	41220-93J11	LEVER,TILT LOCK	1	
14	41234-93J11	LEVER,TILT LOCK PORT	1	PORT
15	41224-95E01	BUSH,TILT STOPPER ROD	2	
16	41230-96J00	LINK,TILT LOCK LEVER	1	
17	41233-95E10	BRACKET,TILT LOCK SPRING	1	
18	09125-06063	SCREW (6X10)	1	
19	09140-10032	NUT (M10)	1	
20	09160-06082	WASHER (6.5X13X1.0)	1	
21	09204-01006	PIN	1	

FIG.336A

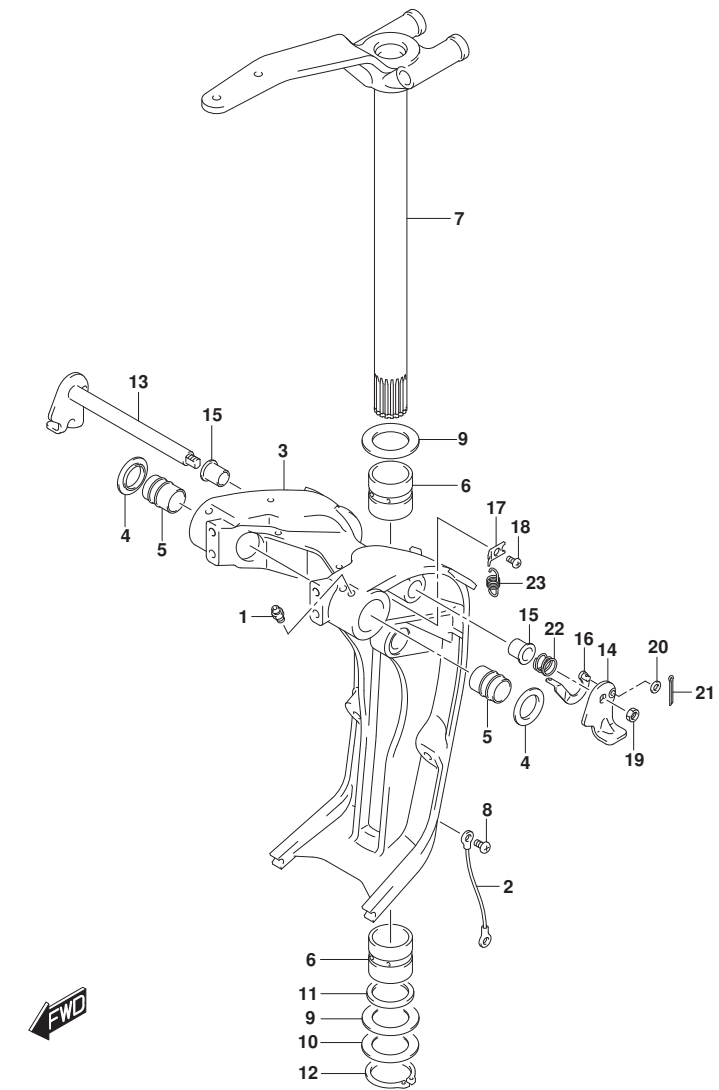


FIG.336A (1-F-11) SWIVEL BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22	09440-19028	SPRING	1	
23	09443-10043	SPRING	1	

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-98L02	TRIM ASSY,POWER WITH TILT	1	
2	31281-92J10	.BOLT,THROUGH	4	
3	38100-98L00	.MOTOR ASSY,PTT	1	
4	48500-98L02	.MANIFOLD ASSY	1	
5	48320-93J00	..VALVE SET,UP BLOW	1	
6	48582-95E01	..FILTER	1	
7	48605-93J00	..O-RING SET	1	
8	48610-98L00	..PISTON/RAM	2	
9	48630-98L01	..ROD GUIDE	2	
10	48633-93J00	...O-RING	2	
11	48691-93J00	..CHECK VALVE	1	
12	48400-98L00	.CYLINDER ASSY	1	
13	48451-93J00	.BACK UP RING	2	
14	48452-93J00	..O-RING	2	
15	48452-93J10	..O-RING	1	
16	48650-93J00	..PISTON,FREE	1	
17	48401-98L00	..PISTON ROD SUB ASSY	1	
18	48427-87D00	...O-RING,PISTON	1	
19	48627-93J00	..O-RING SET	1	
20	48427-87D00	...O-RING,PISTON	1	
21	48572-87J10	.PLUG	1	
22	48862-87J20	.BOLT,RESERVOIR	2	
23	48864-98L00	.MANUAL VALVE	1	
24	48583-95E00	.JOINT,DRIVE	1	
25	48121-93J20	.SHAFT	1	
26	48125-93J10	.O-RING SET	1	
27	48451-93J00	..BACK UP RING	4	

FIG.337A


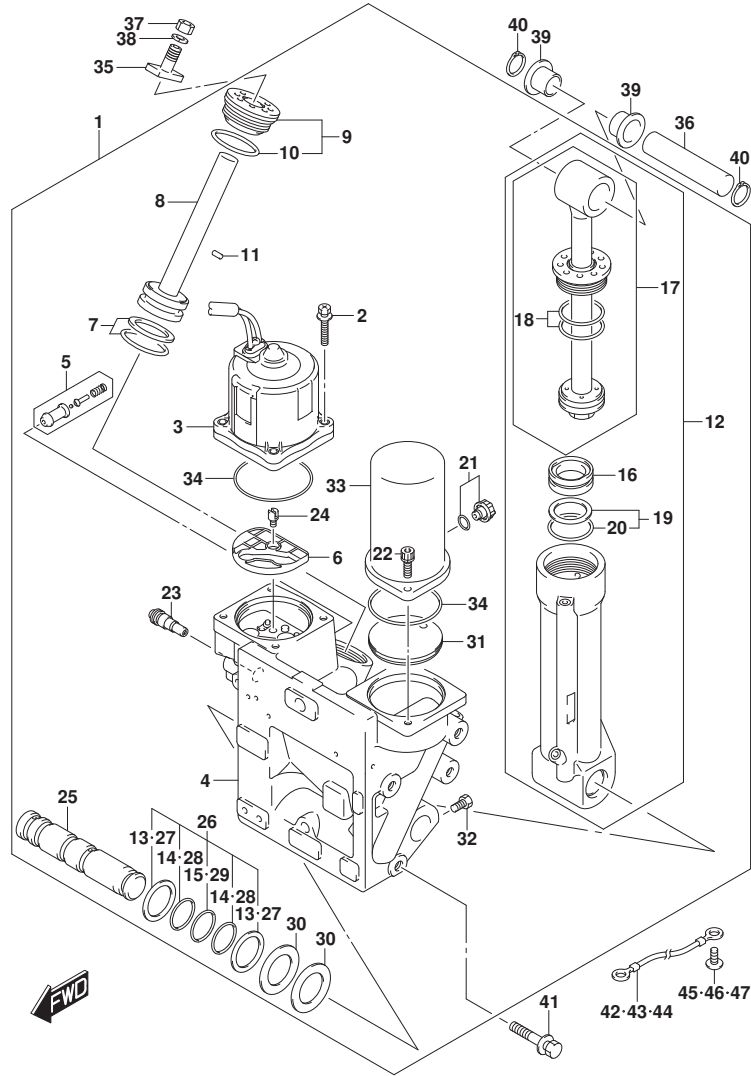


FIG.337A (1-F-13) TRIM CYLINDER (DF350A,DF325A)(SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	48452-93J00	..O-RING	4	
29	48452-93J10	..O-RING	2	
30	48126-93J00	.WASHER,TILT CYL TO MANIFOLD	2	
31	48573-93J00	.COVER	1	
32	48128-93J11	.BOLT	1	
33	48571-93J00	.RESERVOIR TANK	1	
34	48585-95E00	.O RING	2	
35	48311-93J01	PAD,TRIM CYLINDER RAM	2	
36	48321-93J00	SHAFT,TILT CYL UPPER	1	
37	09140-10031	NUT (M10)	2	
38	09162-10005	WASHER,LOCK (10.2X18.4X2.5)	2	
39	09306-24001	BUSH	2	
40	09380-21002	CIRCLIP	2	
41	09116-10175	BOLT (10X50)	8	
42	36894-87D00	LEAD (L:165)	1	
43	36895-87D01	LEAD (L:230)	1	
44	36895-87D01	LEAD (L:230)	1	
45	09125-06063	SCREW (6X10)	1	
46	09125-06063	SCREW (6X10)	1	
47	09125-06063	SCREW (6X10)	1	

NOTE 1:
FROM 32501F-040001 UPTO 32501F-040225
FROM 35001F-040001 UPTO 35001F-040659

FIG.337B

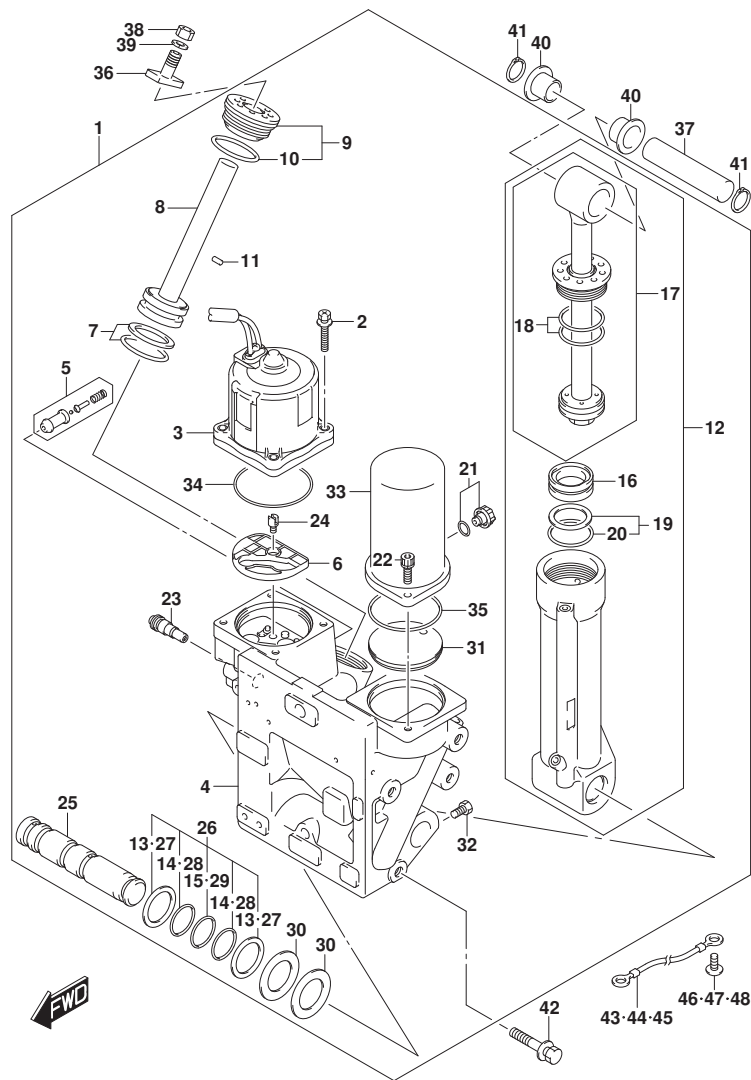

DF350A_E11_022_337B
TRIM CYLINDER

FIG.337B (1-G-3) TRIM CYLINDER (DF350A,DF325A)(SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-98L03	TRIM ASSY,POWER WITH TILT	1	
2	31281-92J10	.BOLT,THROUGH	4	
3	38100-98L00	.MOTOR ASSY,PTT	1	
4	48500-98L02	.MANIFOLD ASSY	1	
5	48320-93J00	..VALVE SET,UP BLOW	1	
6	48582-95E01	..FILTER	1	
7	48605-93J00	..O-RING SET	1	
8	48610-98L00	..PISTON/RAM	2	
9	48630-98L01	..ROD GUIDE	2	
10	48633-93J00	...O-RING	2	
11	48691-93J00	..CHECK VALVE	1	
12	48400-98L00	..CYLINDER ASSY	1	
13	48451-93J00	..BACK UP RING	2	
14	48452-93J00	..O-RING	2	
15	48452-93J10	..O-RING	1	
16	48650-93J00	..PISTON,FREE	1	
17	48401-98L00	..PISTON ROD SUB ASSY	1	
18	48427-87D00	...O-RING,PISTON	1	
19	48627-93J00	..O-RING SET	1	
20	48427-87D00	...O-RING,PISTON	1	
21	48572-87J10	.PLUG	1	
22	48862-87J20	.BOLT,RESERVOIR	2	
23	48864-98L00	.MANUAL VALVE	1	
24	48583-95E00	.JOINT,DRIVE	1	
25	48121-93J20	.SHAFT	1	
26	48125-93J10	.O-RING SET	1	
27	48451-93J00	..BACK UP RING	4	
28	48452-93J00	..O-RING	4	
29	48452-93J10	..O-RING	2	
30	48126-93J00	..WASHER,TILT CYL TO MANIFOLD	2	
31	48573-93J00	.COVER	1	
32	48128-93J11	.BOLT	1	
33	48571-93J00	.RESERVOIR TANK	1	
34	48585-95E00	.O RING	1	
35	48585-98L00	.O-RING	1	

DF350A_E11_022

FIG.337B

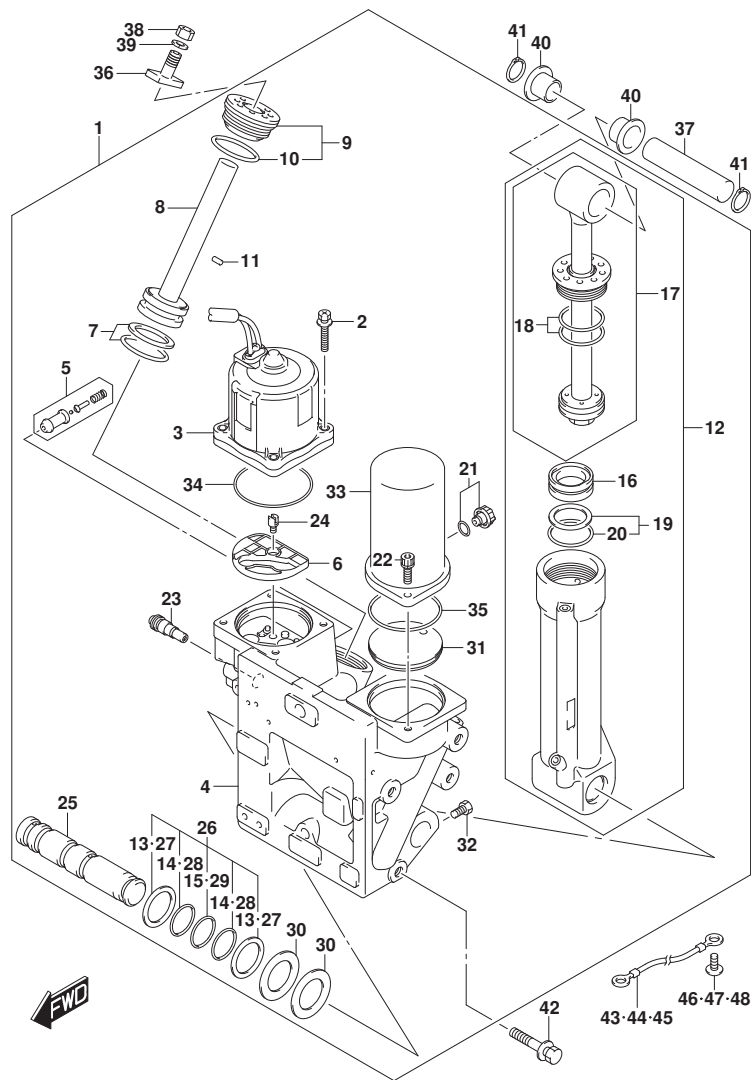


FIG.337B (1-G-5) TRIM CYLINDER (DF350A,DF325A)(SEE NOTE 1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
36	48311-93J01	PAD,TRIM CYLINDER RAM	2	
37	48321-93J00	SHAFT,TILT CYL UPPER	1	
38	09140-10031	NUT (M10)	2	
39	09162-10005	WASHER,LOCK (10.2X18.4X2.5)	2	
40	09306-24001	BUSH	2	
41	09380-21002	CIRCLIP	2	
42	09116-10175	BOLT (10X50)	8	
43	36894-87D00	LEAD (L:165)	1	
44	36895-87D01	LEAD (L:230)	1	
45	36895-87D01	LEAD (L:230)	1	
46	09125-06063	SCREW (6X10)	1	
47	09125-06063	SCREW (6X10)	1	
48	09125-06063	SCREW (6X10)	1	

NOTE 1:
FROM 32501F-040226
FROM 35001F-040660

FIG.337C

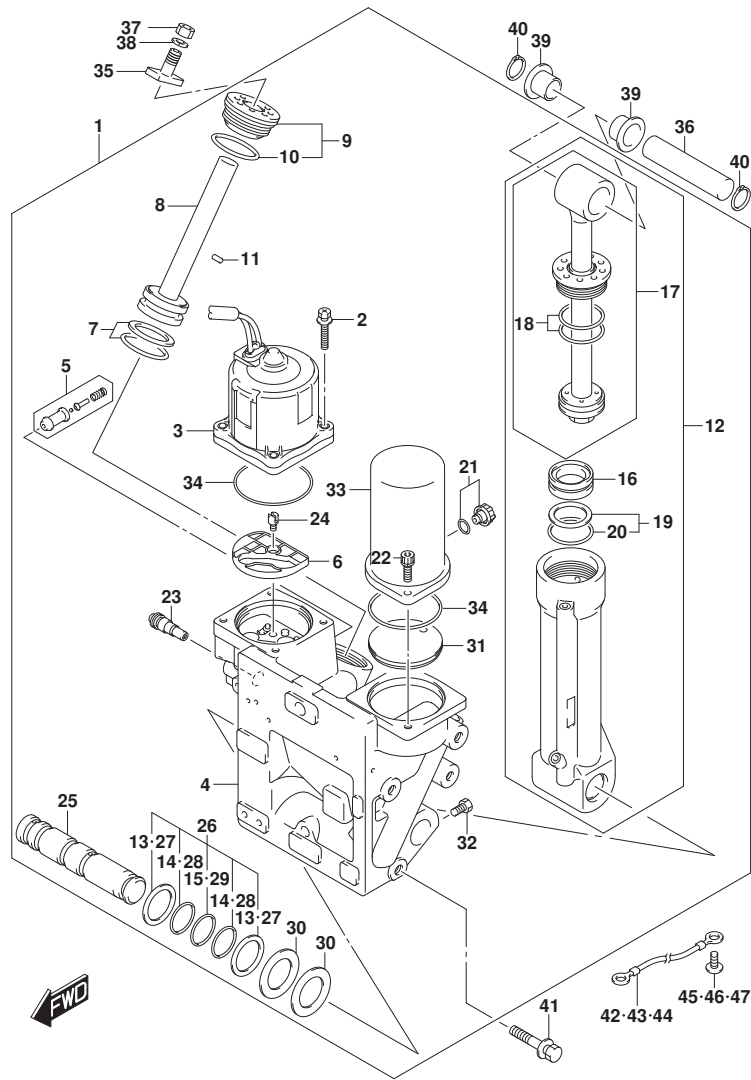


FIG.337C (1-G-6) TRIM CYLINDER (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-98L02	TRIM ASSY,POWER WITH TILT	1	
2	31281-92J10	.BOLT,THROUGH	4	
3	38100-98L00	.MOTOR ASSY,PTT	1	
4	48500-98L02	.MANIFOLD ASSY	1	
5	48320-93J00	..VALVE SET,UP BLOW	1	
6	48582-95E01	..FILTER	1	
7	48605-93J00	..O-RING SET	1	
8	48610-98L00	..PISTON/RAM	2	
9	48630-98L01	..ROD GUIDE	2	
10	48633-93J00	...O-RING	2	
11	48691-93J00	..CHECK VALVE	1	
12	48400-98L00	..CYLINDER ASSY	1	
13	48451-93J00	..BACK UP RING	2	
14	48452-93J00	..O-RING	2	
15	48452-93J10	..O-RING	1	
16	48650-93J00	..PISTON,FREE	1	
17	48401-98L00	..PISTON ROD SUB ASSY	1	
18	48427-87D00	...O-RING,PISTON	1	
19	48627-93J00	..O-RING SET	1	
20	48427-87D00	...O-RING,PISTON	1	
21	48572-87J10	.PLUG	1	
22	48862-87J20	.BOLT,RESERVOIR	2	
23	48864-98L00	.MANUAL VALVE	1	
24	48583-95E00	.JOINT,DRIVE	1	
25	48121-93J20	.SHAFT	1	
26	48125-93J10	.O-RING SET	1	
27	48451-93J00	..BACK UP RING	4	
28	48452-93J00	..O-RING	4	
29	48452-93J10	..O-RING	2	
30	48126-93J00	..WASHER,TILT CYL TO MANIFOLD	2	
31	48573-93J00	.COVER	1	
32	48128-93J11	.BOLT	1	
33	48571-93J00	.RESERVOIR TANK	1	
34	48585-95E00	.O RING	2	
35	48311-93J01	PAD,TRIM CYLINDER RAM	2	

FIG.337C

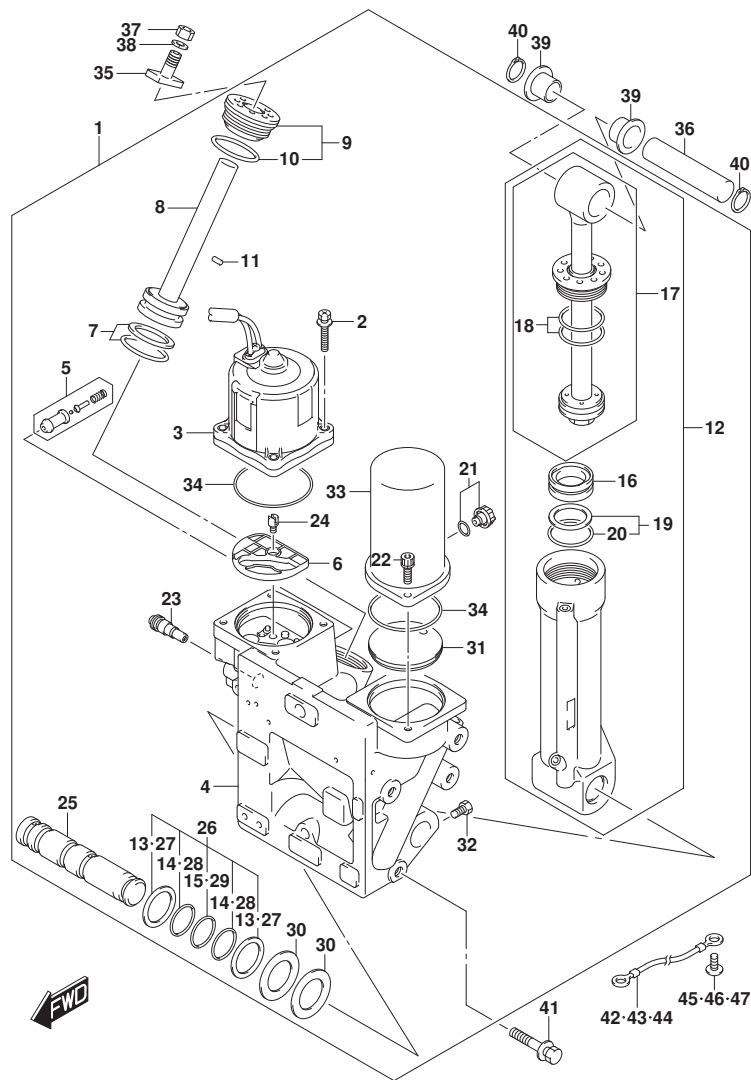


FIG.337C (1-G-7) TRIM CYLINDER (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
36	48321-93J00	SHAFT,TILT CYL UPPER	1	
37	09140-10031	NUT (M10)	2	
38	09162-10005	WASHER,LOCK (10.2X18.4X2.5)	2	
39	09306-24001	BUSH	2	
40	09380-21002	CIRCLIP	2	
41	09116-10175	BOLT (10X50)	8	
42	36894-87D00	LEAD (L:165)	1	
43	36895-87D01	LEAD (L:230)	1	
44	36895-87D01	LEAD (L:230)	1	
45	09125-06063	SCREW (6X10)	1	
46	09125-06063	SCREW (6X10)	1	
47	09125-06063	SCREW (6X10)	1	

FIG.340A

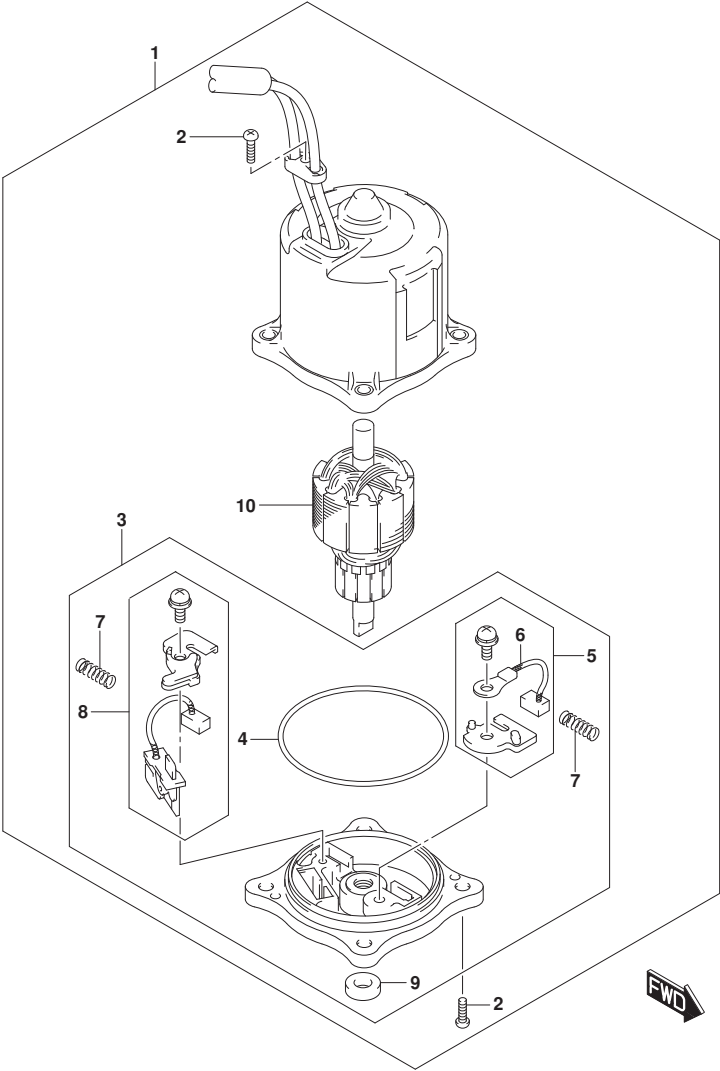


FIG.340A (1-G-8) PTT MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38100-98L00	MOTOR ASSY,PTT	1	
2	31111-94900	.SCREW	3	
3	31173-94920	.HOLDER ASSY,BRUSH	1	
4	31123-94910	..O RING	1	
5	31133-90J10	..BRUSH ASSY	1	
6	31133-94910	...BRUSH	1	
7	31135-94900	..SPRING	2	
8	31136-90J20	..BREAKER ASSY	1	
9	33799-97E00	..SEAL,OIL	1	
10	31311-93J00	.ARMATURE	1	

FIG.401A

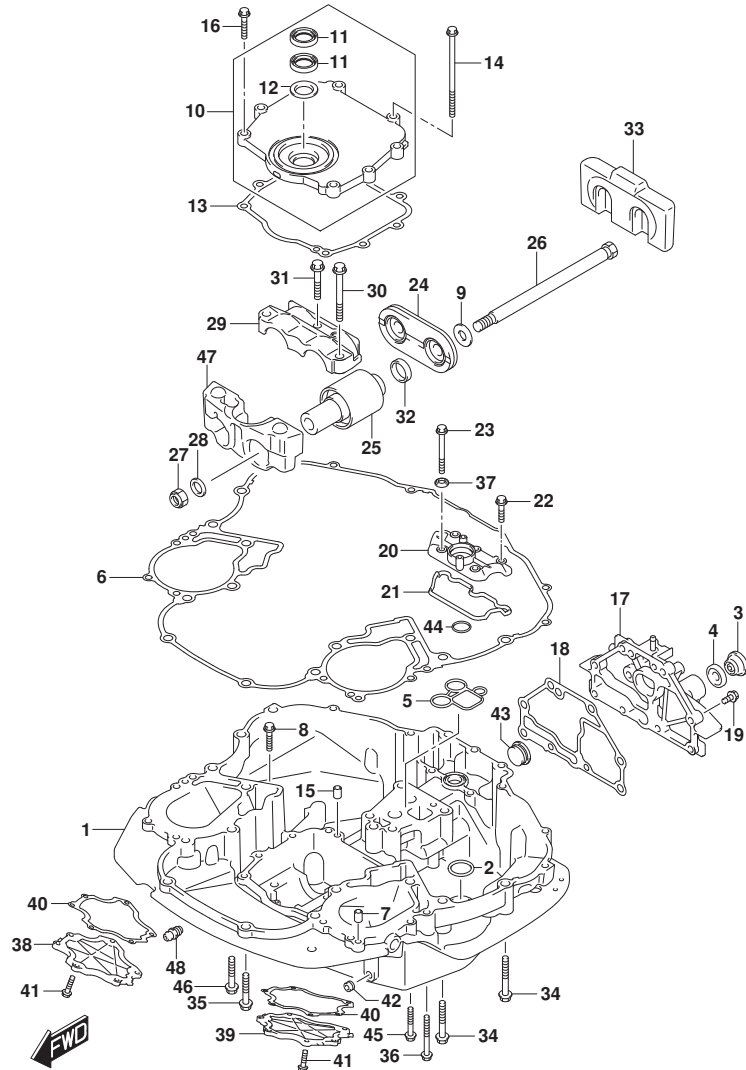


FIG.401A (1-G-9) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	51111-98L01-YAY	HOLDER,ENGINE (BLACK)	1	BODY COLOR:YAY
1-2	51111-98L01-Y5S	HOLDER,ENGINE (WHITE)	1	BODY COLOR:Y5S
2	16519-93J00	SEAL,ENGINE HOLDER OIL	1	
3	17913-93J00	PLUG,WATER	1	
4	17914-93J01	GASKET,WATER PLUG	1	
5	51116-98L00	SEAL,WATER RETURN	1	
6	51211-98L00	GASKET,ENGINE HOLDER	1	
7	09206-08001	PIN (8X11)	2	
8	01550-1050A	BOLT	4	
9	09160-14076	WASHER (14.5X32X3)	2	
10	51120-98L00	COVER,MOUNT OIL SEAL	1	
11	51124-93J01	.SEAL,OIL	2	
12	51125-93J00	.SCRAPER	1	
13	51123-98L00	GASKET,MOUNT OIL SEAL COVER	1	
14	09103-08109	BOLT (8X120)	2	
15	09206-08001	PIN (8X11)	2	
16	01550-0830A	BOLT (8X30)	6	
17-1	51140-98L00-019	COVER,ENGINE HOLDER (BLACK)	1	020
17-2	51140-98L00-YAY	COVER,ENGINE HOLDER (BLACK)	1	021,022
18	51142-98L00	GASKET,ENGINE HOLDER COVER	1	
19	09116-08122	BOLT (8X30)	8	
20	51151-98L00	COVER,ENGINE HOLDER UPPER	1	UPPER
21	51152-98L00	SEAL,ENGINE HOLDER UPPER COVER	1	UPPER
22	01550-0830C	BOLT	3	
23	01550-0860C	BOLT	2	
24	54120-98L00	PLATE,UPPER MOUNT	1	UPPER
25	54130-98L01	MOUNT,UPPER	2	UPPER
26	54112-93J00	BOLT,MOUNT (14X220)	2	UPPER
27	29159-93J00	NUT (M14)	2	UPPER
28	09160-15051	WASHER (15X24X3)	2	
29	54137-93J02	COVER,UPPER MOUNT	1	UPPER
30	09116-10135	BOLT (10X95)	2	
31	09116-10175	BOLT (10X50)	1	
32	54127-98L00	MOUNT,UPPER SIDE	2	UPPER
33	54140-98J11	MOUNT,UPPER THRUST REV	1	UPPER

FIG.401A

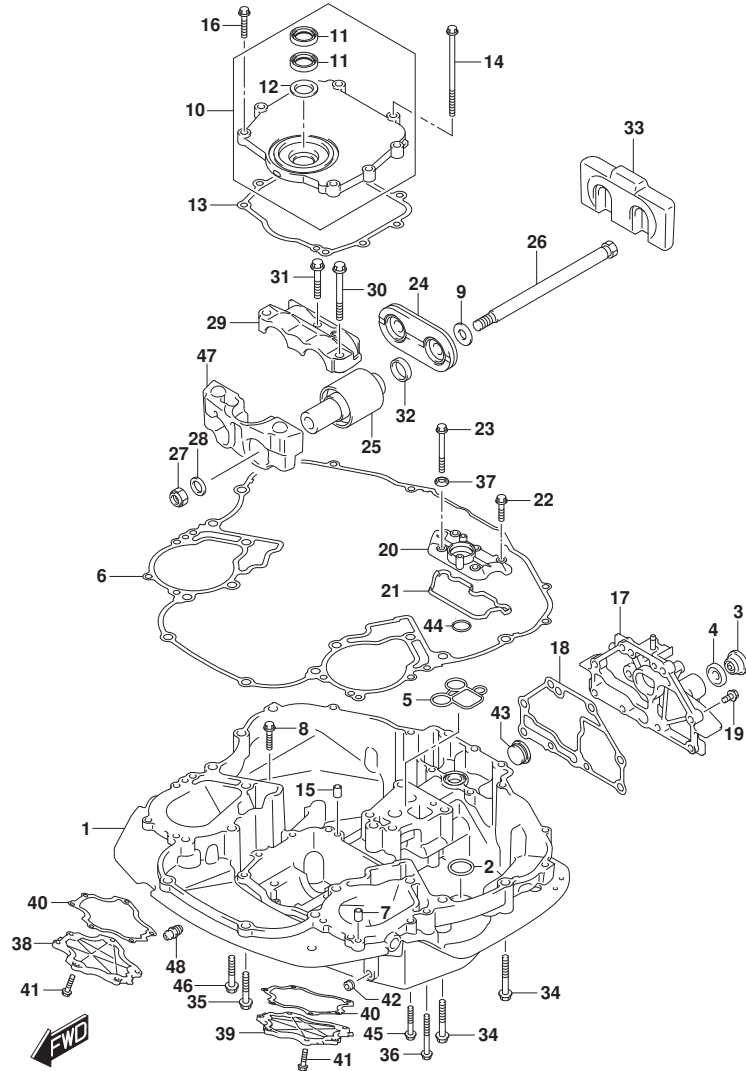


FIG.401A (1-G-10) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	09116-10137	BOLT (10X70)	6	
35	09116-10175	BOLT (10X50)	4	
36	09116-08126	BOLT (8X65)	2	
37	09169-08038	WASHER (8.3X15X3)	2	
38	51161-98L00	COVER,ENG HLDR WATER JKT STBD	1	STBD
39	51165-98L00	COVER,ENG HLDR WATER JKT PORT	1	PORT
40	51162-98L00	GASKET,ENG HLDR WATER JKT COV	2	
41	09116-06516	BOLT (6X25)	12	
42	09246-08006	PLUG	2	
43	09248-26003	PLUG	1	
44	09280-26014	O-RING (D:2.4,ID:25.8)	1	
45	09116-08131	BOLT (8X45)	4	
46	09116-10135	BOLT (10X95)	2	
47	54180-98L01	MOUNT,UPPER SIDE	1	UPPER
48	22511-99011	NIPPLE,GREASE	1	

FIG.405A

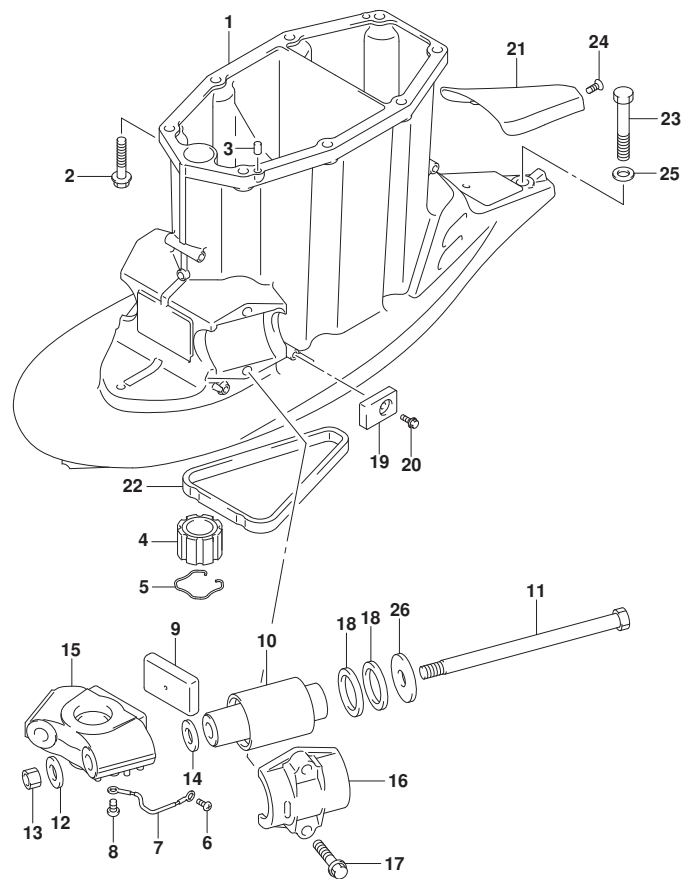


FIG.405A (1-G-11) DRIVE SHAFT HOUSING (X-TRANSM)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98L00-YAY	HOUSING,DRIVE SHAFT (BLACK)	1	020 BODY COLOR:YAY
1-2	52111-98L00-Y5S	HOUSING,DRIVE SHAFT (WHITE)	1	020 BODY COLOR:Y5S
1-3	52111-98L00-YAY	HOUSING,DRIVE SHAFT (BLACK)	1	021,022 BODY COLOR:YAY
1-4	52111-98L00-QTN	HOUSING,DRIVE SHAFT (WHITE)	1	021,022 BODY COLOR:QTN,QUA
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH,DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	36894-87D00	LEAD (L:165)	1	MT BRKT TO HSG
8	09125-06063	SCREW (6X10)	1	
9	54151-98L00	MOUNT,LOWER THRUST	1	LOWER
10	54160-98L00	MOUNT,LOWER	2	LOWER
11	54112-93J00	BOLT,MOUNT (14X220)	2	LOWER
12	09160-14073	WASHER (14.5X34X3)	2	
13	29159-93J00	NUT (M14)	2	LOWER
14	09160-14073	WASHER (14.5X34X3)	2	
15-1	54211-98L00-YAY	BRACKET,LOWER MOUNT (BLACK)	1	020 LOWER BODY COLOR:YAY
15-2	54211-98L00-Y5S	BRACKET,LOWER MOUNT (WHITE)	1	020 LOWER BODY COLOR:Y5S
15-3	54211-98L00-YAY	BRACKET,LOWER MOUNT (BLACK)	1	021,022 LOWER BODY COLOR:YAY
15-4	54211-98L00-QTN	BRACKET,LOWER MOUNT (WHITE)	1	021,022 LOWER BODY COLOR:QTN,QUA
16-1	54221-93J00-YAY	COVER,LWR MOUNT (BLACK)	2	020 LOWER

FIG.405A

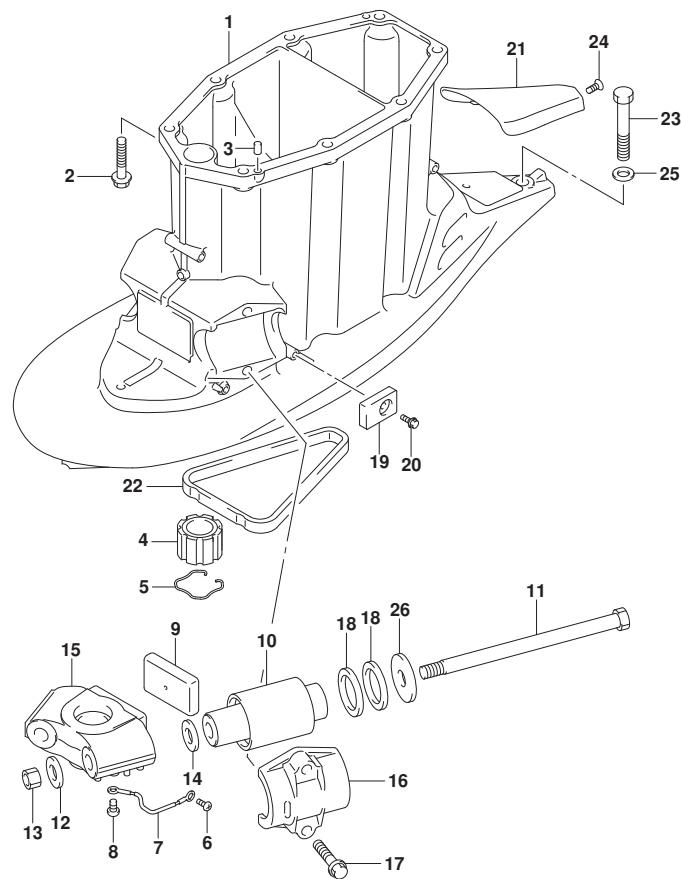


FIG.405A (1-G-12) DRIVE SHAFT HOUSING (X-TRANSM)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
16-2	54221-93J00-Y5S	COVER,LOWER MOUNT (WHITE)	2	BODY COLOR:YAY 020 LOWER BODY COLOR:Y5S
16-3	54221-93J00-YAY	COVER,LWR MOUNT (BLACK)	2	021 LOWER BODY COLOR:YAY
16-4	54221-93J00-QTN	COVER,LWR MOUNT (WHITE)	2	021 LOWER BODY COLOR:QTN,QUA
16-5	54221-93J00	COVER,LOWER MOUNT	2	022
17	09116-10175	BOLT (10X50)	4	
18	54165-98L00	STOPPER,LOWER THRUST REVERSE	4	LOWER
19	55321-93J01	ANODE,PROTECTION	1	
20	09116-06236	BOLT (6X16)	1	
21-1	52115-98L00-YAY	CAP,DRIVE SHAFT HOUSING (BLACK)	1	020 BODY COLOR:YAY
21-2	52115-98L00-Y5S	CAP,DRIVE SHAFT HOUSING (WHITE)	1	020 BODY COLOR:Y5S
21-3	52115-98L00-YAY	CAP,DRIVE SHAFT HOUSING (BLACK)	1	021,022 BODY COLOR:YAY
21-4	52115-98L00-QTN	CAP,DRIVE SHAFT HOUSING (WHITE)	1	021,022 BODY COLOR:QTN,QUA
22	52118-98L10	SEAL,DRIVE SHAFT HOUSING	1	
23	09100-12124	BOLT (12X75)	2	
24	09120-06016	SCREW (M6)	1	
25	09160-12066	WASHER (12.5X22X2.5)	2	
26	09160-16055	WASHER (16X50X4)	2	



FIG.405B

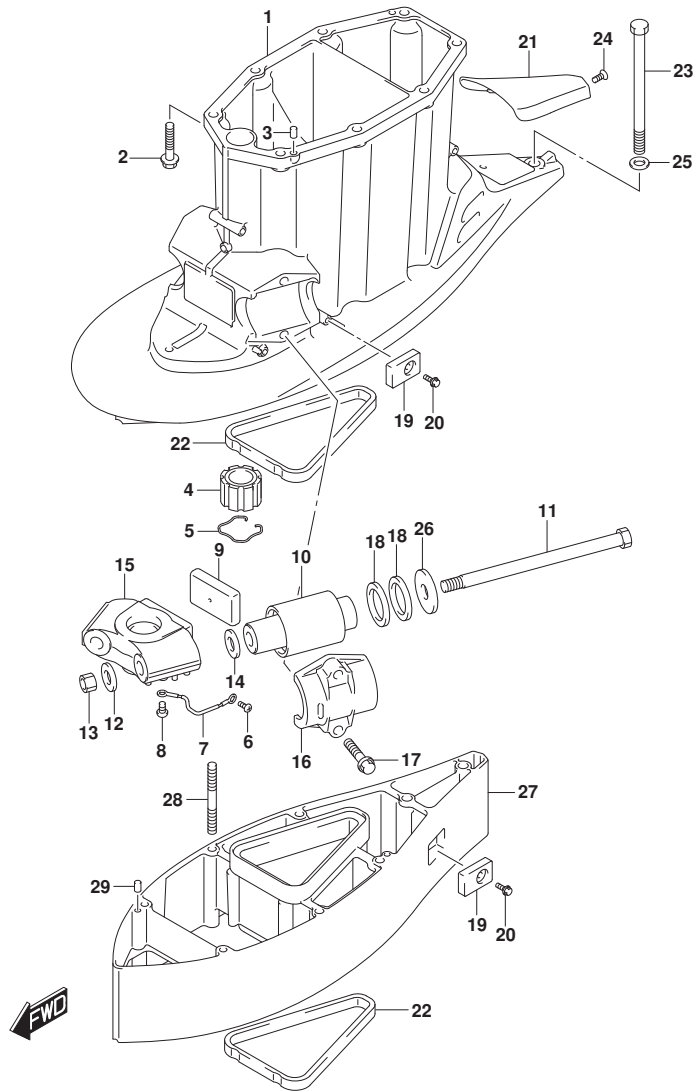


FIG.405B (1-G-13) DRIVE SHAFT HOUSING (XX-TRANSM)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98L00-YAY	HOUSING,DRIVE SHAFT (BLACK)	1	020 BODY COLOR:YAY
1-2	52111-98L00-Y5S	HOUSING,DRIVE SHAFT (WHITE)	1	020 BODY COLOR:Y5S
1-3	52111-98L00-YAY	HOUSING,DRIVE SHAFT (BLACK)	1	021,022 BODY COLOR:YAY
1-4	52111-98L00-QTN	HOUSING,DRIVE SHAFT (WHITE)	1	021,022 BODY COLOR:QTN,QUA
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH,DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	36894-87D00	LEAD (L:165)	1	MT BRKT TO HSG
8	09125-06063	SCREW (6X10)	1	
9	54151-98L00	MOUNT,LOWER THRUST	1	LOWER
10	54160-98L00	MOUNT,LOWER	2	LOWER
11	54112-93J00	BOLT,MOUNT (14X220)	2	LOWER
12	09160-14073	WASHER (14.5X34X3)	2	
13	29159-93J00	NUT (M14)	2	LOWER
14	09160-14073	WASHER (14.5X34X3)	2	
15-1	54211-98L00-YAY	BRACKET,LOWER MOUNT (BLACK)	1	020 LOWER BODY COLOR:YAY
15-2	54211-98L00-Y5S	BRACKET,LOWER MOUNT (WHITE)	1	020 LOWER BODY COLOR:Y5S
15-3	54211-98L00-YAY	BRACKET,LOWER MOUNT (BLACK)	1	021,022 LOWER BODY COLOR:YAY
15-4	54211-98L00-QTN	BRACKET,LOWER MOUNT (WHITE)	1	021,022 LOWER BODY COLOR:QTN,QUA
16-1	54221-93J00-YAY	COVER,LWR MOUNT (BLACK)	2	020 LOWER

FIG.405B

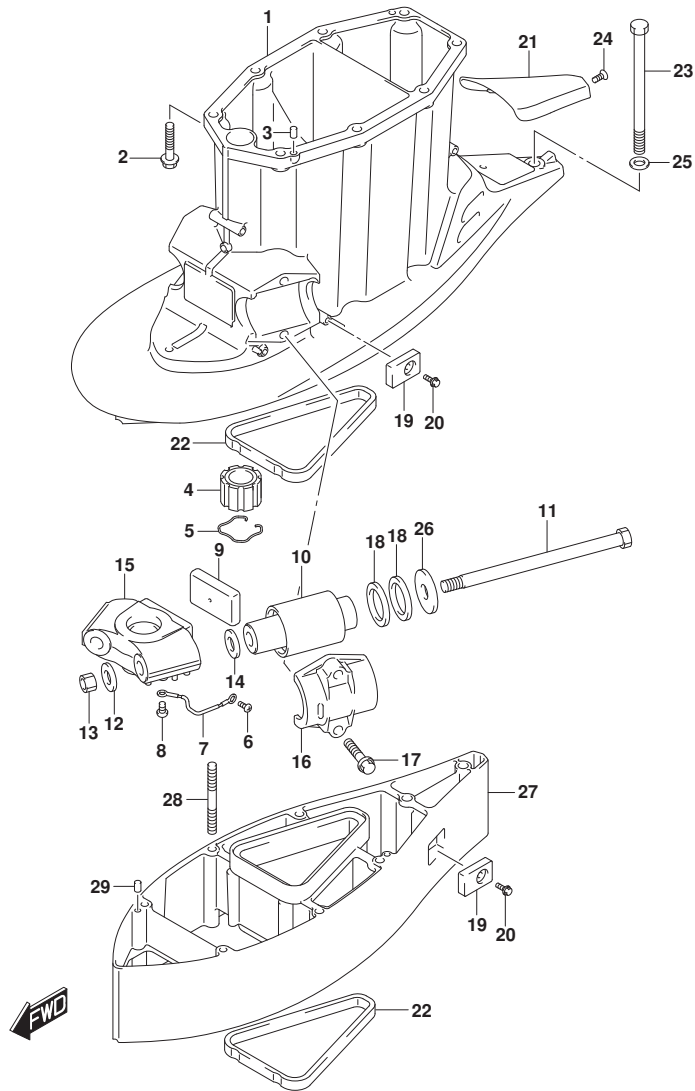


FIG.405B (1-G-14) DRIVE SHAFT HOUSING (XX-TRANSMOM)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
16-2	54221-93J00-Y5S	COVER,LOWER MOUNT (WHITE)	2	BODY COLOR:YAY 020 LOWER BODY COLOR:Y5S
16-3	54221-93J00-YAY	COVER,LWR MOUNT (BLACK)	2	021 LOWER BODY COLOR:YAY
16-4	54221-93J00-QTN	COVER,LWR MOUNT (WHITE)	2	021 LOWER BODY COLOR:QTN,QUA
16-5	54221-93J00	COVER,LOWER MOUNT	2	022
17	09116-10175	BOLT (10X50)	4	
18	54165-98L00	STOPPER,LOWER THRUST REVERSE	4	LOWER
19	55321-93J01	ANODE,PROTECTION	2	
20	09116-06236	BOLT (6X16)	2	
21-1	52115-98L00-YAY	CAP,DRIVE SHAFT HOUSING (BLACK)	1	020 BODY COLOR:YAY
21-2	52115-98L00-Y5S	CAP,DRIVE SHAFT HOUSING (WHITE)	1	020 BODY COLOR:Y5S
21-3	52115-98L00-YAY	CAP,DRIVE SHAFT HOUSING (BLACK)	1	021,022 BODY COLOR:YAY
21-4	52115-98L00-QTN	CAP,DRIVE SHAFT HOUSING (WHITE)	1	021,022 BODY COLOR:QTN,QUA
22	52118-98L10	SEAL,DRIVE SHAFT HOUSING	2	
23	54166-95J02	BOLT,LOWER MOUNT (12X200)	2	
24	09120-06016	SCREW (M6)	1	
25	09160-12066	WASHER (12.5X22X2.5)	2	
26	09160-16055	WASHER (16X50X4)	2	
27-1	52131-98L00-YAY	CASE,EXTENSION (BLACK)	1	020 BODY COLOR:YAY
27-2	52131-98L00-Y5S	CASE,EXTENSION (WHITE)	1	020 BODY COLOR:Y5S
27-3	52131-98L00-YAY	CASE,EXTENSION (BLACK)	1	021,022 BODY COLOR:YAY
27-4	52131-98L00-QTN	CASE,EXTENSION (WHITE)	1	021,022

FIG.405B


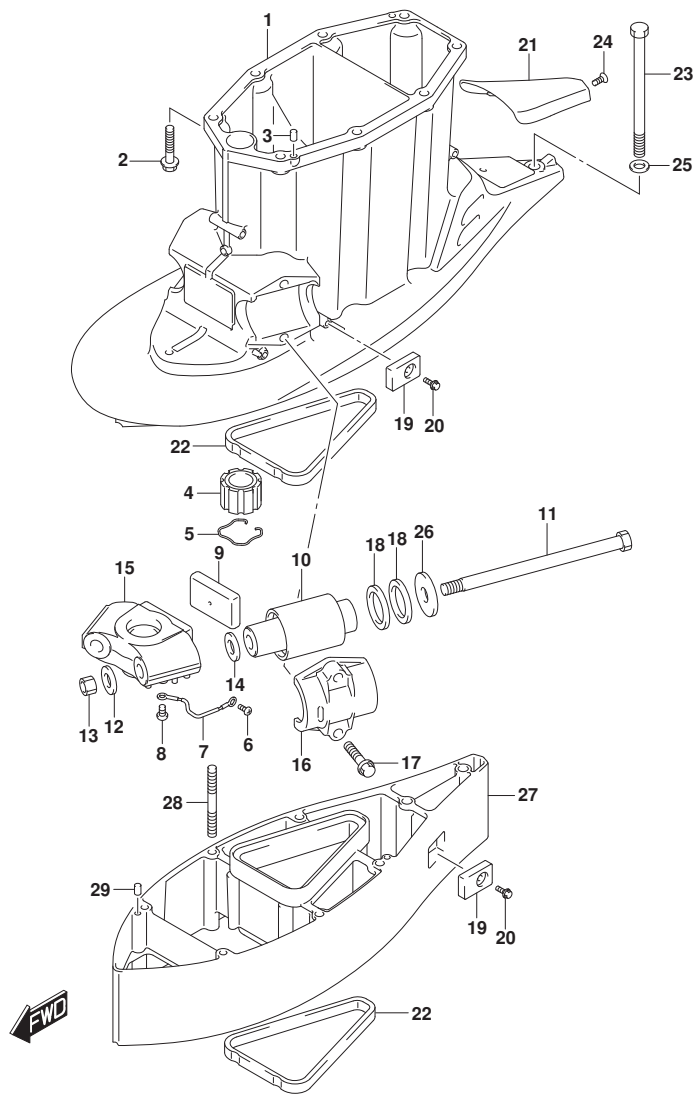


FIG.405B (1-G-15) DRIVE SHAFT HOUSING (XX-TRANSOM)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	09108-10115	BOLT,STUD (10X167)	6	BODY COLOR:QTN,QUA
29	09202-08006	PIN (8X12)	2	

FIG.407A

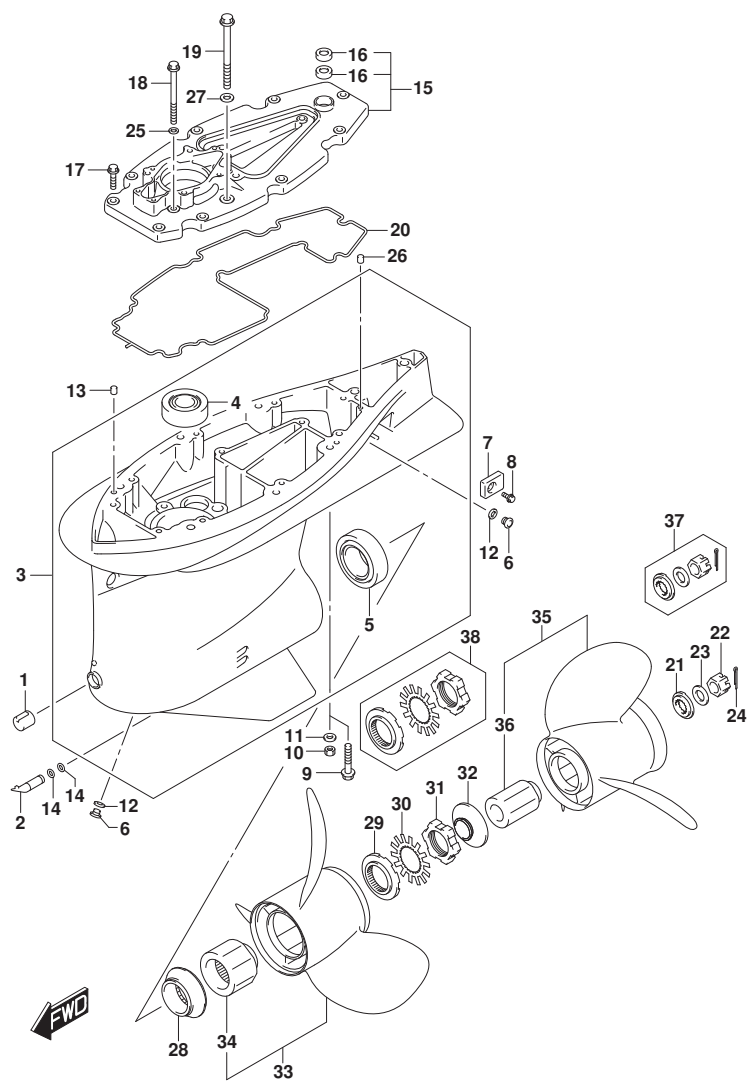


DF350A_E11_022_407A
GEAR CASE

FIG.407A (1-G-16) GEAR CASE (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17631-98L03	FILTER,WATER	1	
2	17635-98L01	FILTER,SUB WATER	1	
3-1	55100-98851-YAY	CASE SET,GEAR (BLACK)	1	020 INCLUDE FIG.220A REF29 BODY COLOR:YAY
3-2	55100-98851-Y5S	CASE SET,GEAR (WHITE)	1	020 INCLUDE FIG.220A REF29 BODY COLOR:Y5S
3-3	55100-98851-YAY	CASE SET,GEAR (BLACK)	1	021,022 INCLUDE FIG.220A REF29 BODY COLOR:YAY
3-4	55100-98851-QTN	CASE SET,GEAR (WHITE)	1	021,022 INCLUDE FIG.220A REF29 BODY COLOR:QTN,QUA
4	57710-98L00	.BEARING ASSY,CONTRA PINION	1	
5	09265-50001	.BEARING (50X90X32)	1	
6	55128-93L00	PLUG,DRAIN	3	
7	55321-93J01	ANODE,PROTECTION	2	
8	09116-06236	BOLT (6X16)	2	
9	09116-10150	BOLT (10X55)	6	X-TRANSOM
10	09140-10031	NUT (M10)	6	XX-TRANSOM
11-1	09160-10141	WASHER (10.5X19X2)	6	XX-TRANSOM:(020,021)
11-2	09160-10165	WASHER,ATTACHMENT (10.5X19X2)	6	XX-TRANSOM:022
12	09168-10034	GASKET (9.5X16.5X2)	3	
13	09202-08006	PIN (8X12)	2	
14	09280-10012	O-RING (D:1.5,ID:10)	2	
15	56130-98L12	HOUSING,DRIVE SHAFT BRG	1	INCLUDE FIG.220A REF38
16	09282-15010	.SEAL,OIL (14.7X25X6.5)	2	
17	29116-93J10	BOLT (8X35)	11	
18	09103-08552	BOLT (8X105)	2	
19	09103-10461	BOLT (10X107)	3	
20	55122-98L00	SEAL,DRIVE SHAFT BRG HSG	1	
21	58641-98L00	SPACER,REAR PROPELLER NUT	1	
22	09141-18005	NUT (M18)	1	
23	09160-18019	WASHER (18.5X32X2.5)	1	

DF350A_E11_022

FIG.407A

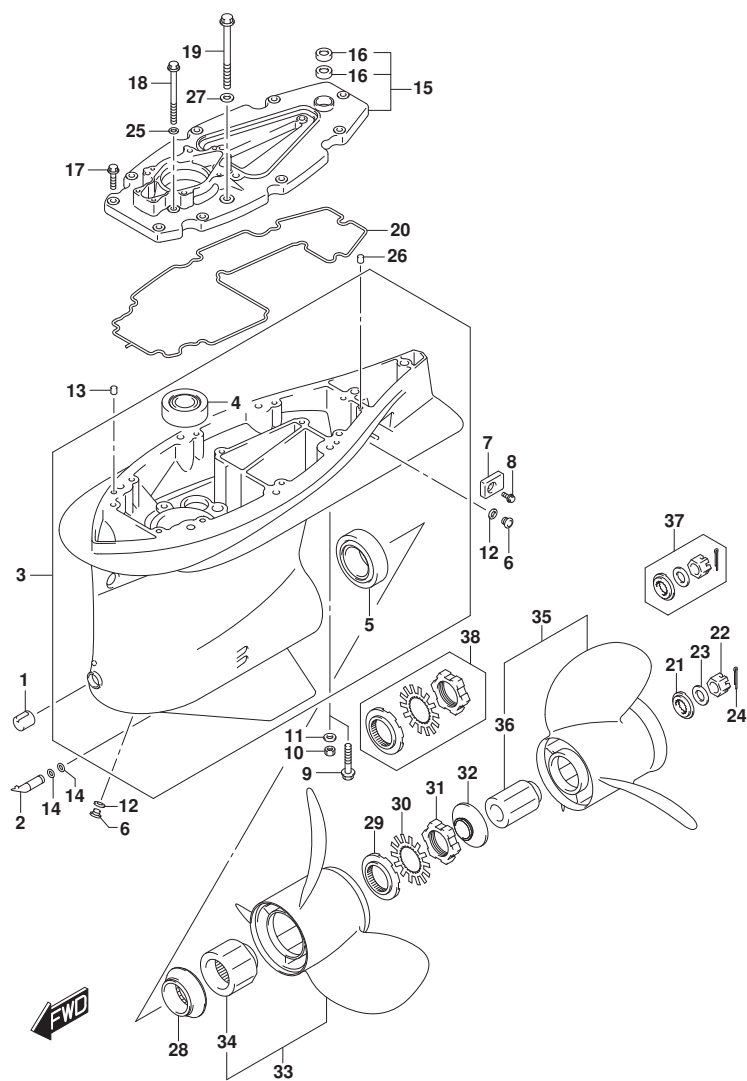

DF350A_E11_022_407A
GEAR CASE

FIG.407A (1-H-2) GEAR CASE (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	09204-03003	PIN (D:3.6,L:25)	1	
25	09169-08038	WASHER (8.3X15X3)	2	
26	09202-06031	PIN (6X12)	1	
27	09169-10023	WASHER	3	
28	58531-98L00	STOPPER,FRONT PROPELLER BUSH	1	
29	58541-98L00	SPACER,FRONT PROPELLER NUT	1	
30	58551-98L00	STOPPER,FRONT PROPELLER NUT	1	
31	58561-98L01	NUT,FRONT PROPELLER	1	
32	58631-98L00	STOPPER,REAR PROPELLER BUSH	1	
33-1	58500-98L00	PROPELLER,FRONT (3X15-1/2X21)	1	OPT
33-2	58500-98L10	PROPELLER,FRONT (3X15-1/2X22.5	1	OPT
	)			
33-3	58500-98L20	PROPELLER,FRONT (3X15-1/2X24)	1	OPT
33-4	58500-98L30	PROPELLER,FRONT (3X15-1/2X25.5	1	OPT
	)			
33-5	58500-98L40	PROPELLER,FRONT (3X15-1/2X27)	1	OPT
33-6	58500-98L50	PROPELLER,FRONT (3X15-1/2X28.5	1	OPT
	)			
33-7	58500-98L60	PROPELLER,FRONT (3X15-1/2X19.5	1	OPT
	)			
33-8	58500-98L70	PROPELLER,FRONT (3X15-1/2X30)	1	OPT
33-9	58500-98L80	PROPELLER,FRONT (3X15-1/2X31.5	1	OPT
	)			
33-10	58500-98L90	PROPELLER,FRONT (3X15-1/2X18)	1	OPT
33-11	58500-98LA0	PROPELLER,FRONT (3X15-1/2X12)	1	OPT
33-12	58500-98LB0	PROPELLER,FRONT (3X15-1/2X15)	1	OPT
33-13	58500-98LC0	PROPELLER,FRONT (3X15-1/2X16.5	1	OPT
	)			
34	58520-98L00	.BUSH,FRONT PROPELLER	1	OPT
35-1	58600-98L01	PROPELLER,REAR (3X15-1/2X21)	1	OPT
35-2	58600-98L11	PROPELLER,REAR (3X15-1/2X22.5)	1	OPT
35-3	58600-98L21	PROPELLER,REAR (3X15-1/2X24)	1	OPT
35-4	58600-98L31	PROPELLER,REAR (3X15-1/2X25.5)	1	OPT
35-5	58600-98L41	PROPELLER,REAR (3X15-1/2X27)	1	OPT
35-6	58600-98L51	PROPELLER,REAR (3X15-1/2X28.5)	1	OPT

DF350A_E11_022

FIG.407A

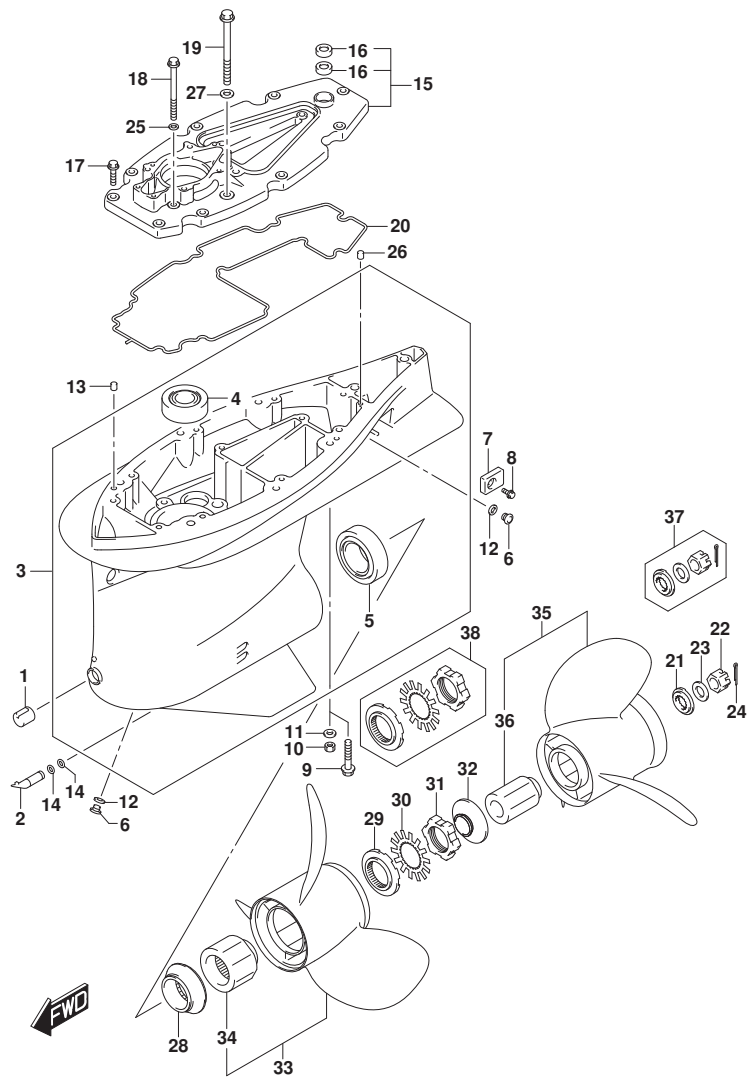


FIG.407A (1-H-3) GEAR CASE (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35-7	58600-98L61	PROPELLER,REAR (3X15-1/2X19.5)	1	OPT
35-8	58600-98L71	PROPELLER,REAR (3X15-1/2X30)	1	OPT
35-9	58600-98L81	PROPELLER,REAR (3X15-1/2X31.5)	1	OPT
35-10	58600-98L91	PROPELLER,REAR (3X15-1/2X18)	1	OPT
35-11	58600-98LA1	PROPELLER,REAR (3X15-1/2X12)	1	OPT
35-12	58600-98LB1	PROPELLER,REAR (3X15-1/2X15)	1	OPT
35-13	58600-98LC1	PROPELLER,REAR (3X15-1/2X16.5)	1	OPT
36	58620-98L00	.BUSH,REAR PROPELLER	1	OPT
37	58640-98L00	KIT,REAR PROPELLER NUT	1	OPT
38	58540-98L01	KIT,FRONT PROPELLER NUT	1	OPT
39	25700-98L02	KIT,GEAR CASE SEALING	1	OPT,NOT ILLUSTRATED

FIG.407B

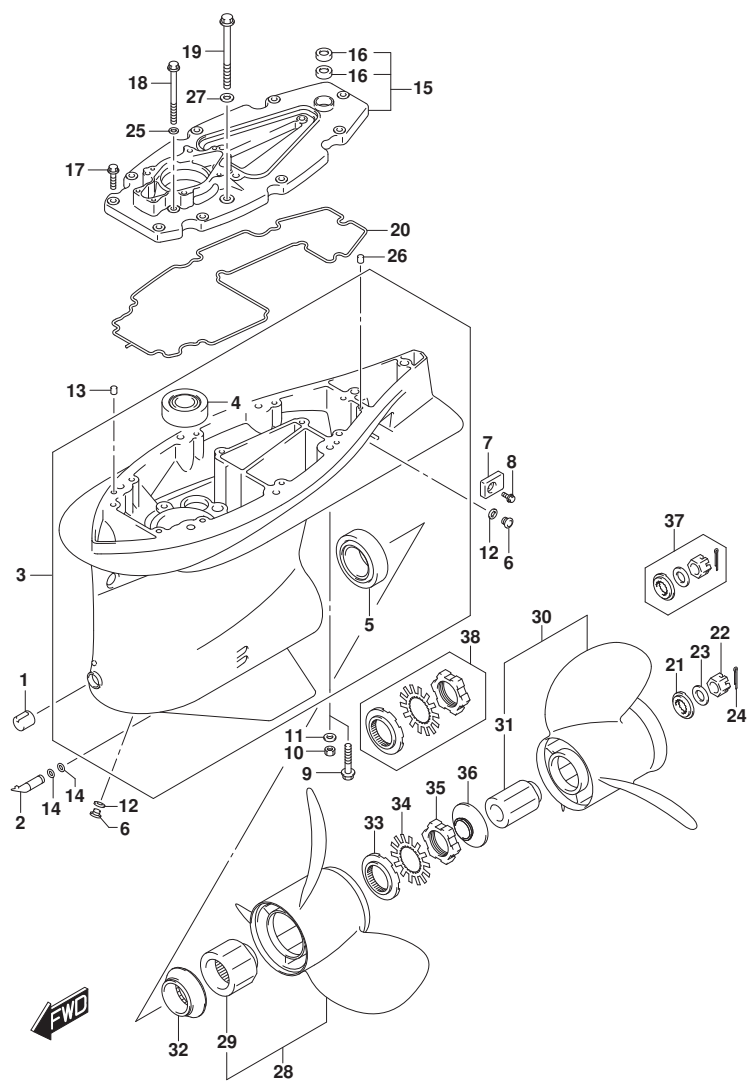


FIG.407B (1-H-4) GEAR CASE (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17631-98L03	FILTER,WATER	1	
2	17635-98L01	FILTER,SUB WATER	1	
3-1	55100-98851-YAY	CASE SET,GEAR (BLACK)	1	020 INCLUDE FIG.220A REF29 BODY COLOR:YAY
3-2	55100-98851-Y5S	CASE SET,GEAR (WHITE)	1	020 INCLUDE FIG.220A REF29 BODY COLOR:Y5S
3-3	55100-98851-YAY	CASE SET,GEAR (BLACK)	1	021,022 INCLUDE FIG.220A REF29 BODY COLOR:YAY
3-4	55100-98851-QTN	CASE SET,GEAR (WHITE)	1	021,022 INCLUDE FIG.220A REF29 BODY COLOR:QTN
4	57710-98L00	.BEARING ASSY,CONTRA PINION	1	
5	09265-50001	.BEARING (50X90X32)	1	
6	55128-93L00	PLUG,DRAIN	3	
7	55321-93J01	ANODE,PROTECTION	2	
8	09116-06236	BOLT (6X16)	2	
9	09116-10150	BOLT (10X55)	6	X-TRANSOM
10	09140-10031	NUT (M10)	6	XX-TRANSOM
11-1	09160-10141	WASHER (10.5X19X2)	6	XX-TRANSOM:(020,021)
11-2	09160-10165	WASHER,ATTACHMENT (10.5X19X2)	6	XX-TRANSOM:022
12	09168-10034	GASKET (9.5X16.5X2)	3	
13	09202-08006	PIN (8X12)	2	
14	09280-10012	O-RING (D:1.5,ID:10)	2	
15	56130-98L12	HOUSING,DRIVE SHAFT BRG	1	INCLUDE FIG.220A REF38
16	09282-15010	.SEAL,OIL (14.7X25X6.5)	2	
17	29116-93J10	BOLT (8X35)	11	
18	09103-08552	BOLT (8X105)	2	
19	09103-10461	BOLT (10X107)	3	
20	55122-98L00	SEAL,DRIVE SHAFT BRG HSG	1	
21	58641-98L00	SPACER,REAR PROPELLER NUT	1	
22	09141-18005	NUT (M18)	1	
23	09160-18019	WASHER (18.5X32X2.5)	1	

FIG.407B

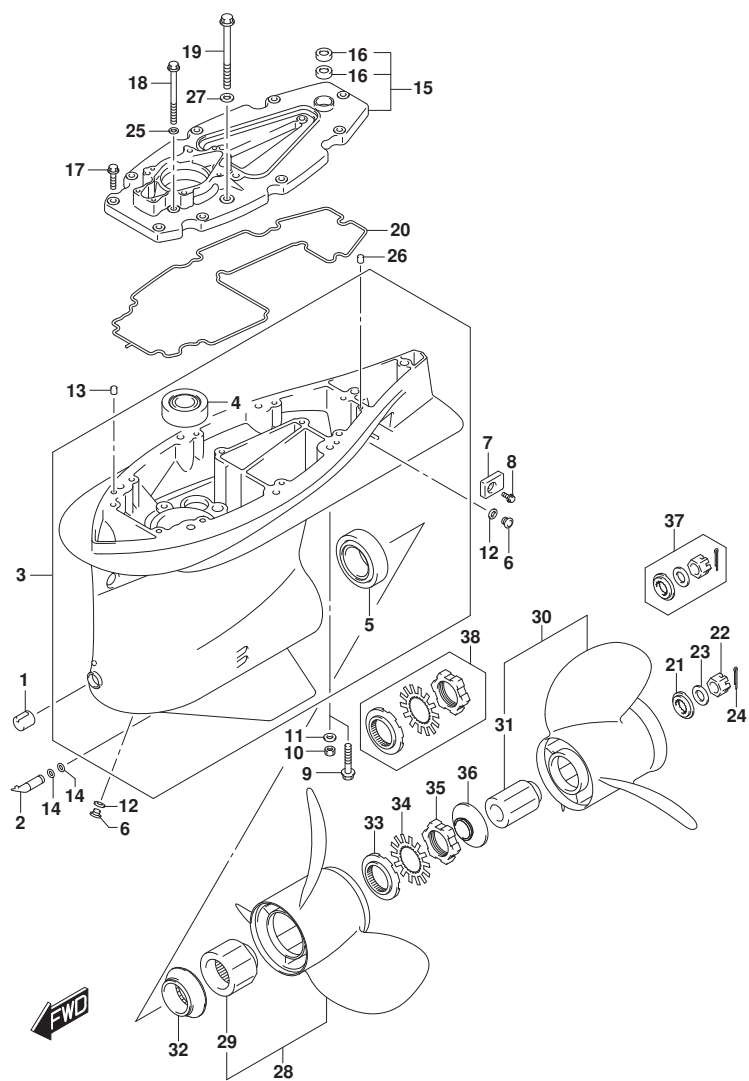


FIG.407B (1-H-5) GEAR CASE (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	09204-03003	PIN (D:3.6,L:25)	1	
25	09169-08038	WASHER (8.3X15X3)	2	
26	09202-06031	PIN (6X12)	1	
27	09169-10023	WASHER	3	
28-1	58500-98L00	PROPELLER,FRONT (3X15-1/2X21)	1	
28-2	58500-98L10	PROPELLER,FRONT (3X15-1/2X22.5	1	
	)			
28-3	58500-98L20	PROPELLER,FRONT (3X15-1/2X24)	1	
28-4	58500-98L30	PROPELLER,FRONT (3X15-1/2X25.5	1	
	)			
28-5	58500-98L40	PROPELLER,FRONT (3X15-1/2X27)	1	
28-6	58500-98L50	PROPELLER,FRONT (3X15-1/2X28.5	1	
	)			
28-7	58500-98L60	PROPELLER,FRONT (3X15-1/2X19.5	1	
	)			
28-8	58500-98L70	PROPELLER,FRONT (3X15-1/2X30)	1	
28-9	58500-98L80	PROPELLER,FRONT (3X15-1/2X31.5	1	
	)			
28-10	58500-98L90	PROPELLER,FRONT (3X15-1/2X18)	1	
28-11	58500-98LA0	PROPELLER,FRONT (3X15-1/2X12)	1	
28-12	58500-98LB0	PROPELLER,FRONT (3X15-1/2X15)	1	
28-13	58500-98LC0	PROPELLER,FRONT (3X15-1/2X16.5	1	
	)			
29	58520-98L00	.BUSH,FRONT PROPELLER	1	
30-1	58600-98L01	PROPELLER,REAR (3X15-1/2X21)	1	
30-2	58600-98L11	PROPELLER,REAR (3X15-1/2X22.5)	1	
30-3	58600-98L21	PROPELLER,REAR (3X15-1/2X24)	1	
30-4	58600-98L31	PROPELLER,REAR (3X15-1/2X25.5)	1	
30-5	58600-98L41	PROPELLER,REAR (3X15-1/2X27)	1	
30-6	58600-98L51	PROPELLER,REAR (3X15-1/2X28.5)	1	
30-7	58600-98L61	PROPELLER,REAR (3X15-1/2X19.5)	1	
30-8	58600-98L71	PROPELLER,REAR (3X15-1/2X30)	1	
30-9	58600-98L81	PROPELLER,REAR (3X15-1/2X31.5)	1	
30-10	58600-98L91	PROPELLER,REAR (3X15-1/2X18)	1	
30-11	58600-98LA1	PROPELLER,REAR (3X15-1/2X12)	1	

FIG.407B

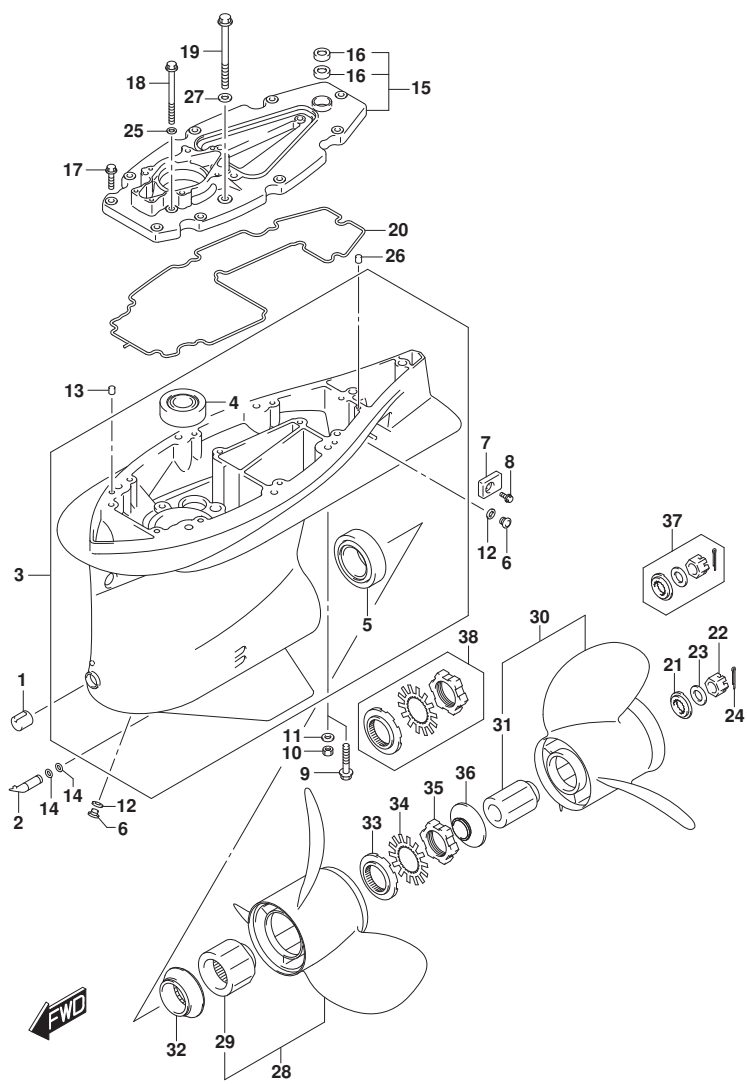


FIG.407B (1-H-6) GEAR CASE (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30-12	58600-98LB1	PROPELLER,REAR (3X15-1/2X15)	1	
30-13	58600-98LC1	PROPELLER,REAR (3X15-1/2X16.5)	1	
31	58620-98L00	.BUSH,REAR PROPELLER	1	
32	58531-98L00	STOPPER,FRONT PROPELLER BUSH	1	
33	58541-98L00	SPACER,FRONT PROPELLER NUT	1	
34	58551-98L00	STOPPER,FRONT PROPELLER NUT	1	
35	58561-98L01	NUT,FRONT PROPELLER	1	
36	58631-98L00	STOPPER,REAR PROPELLER BUSH	1	
37	58640-98L00	KIT,REAR PROPELLER NUT	1	OPT
38	58540-98L01	KIT,FRONT PROPELLER NUT	1	OPT
39	25700-98L02	KIT,GEAR CASE SEALING	1	OPT,NOT ILLUSTRATED

FIG.410A

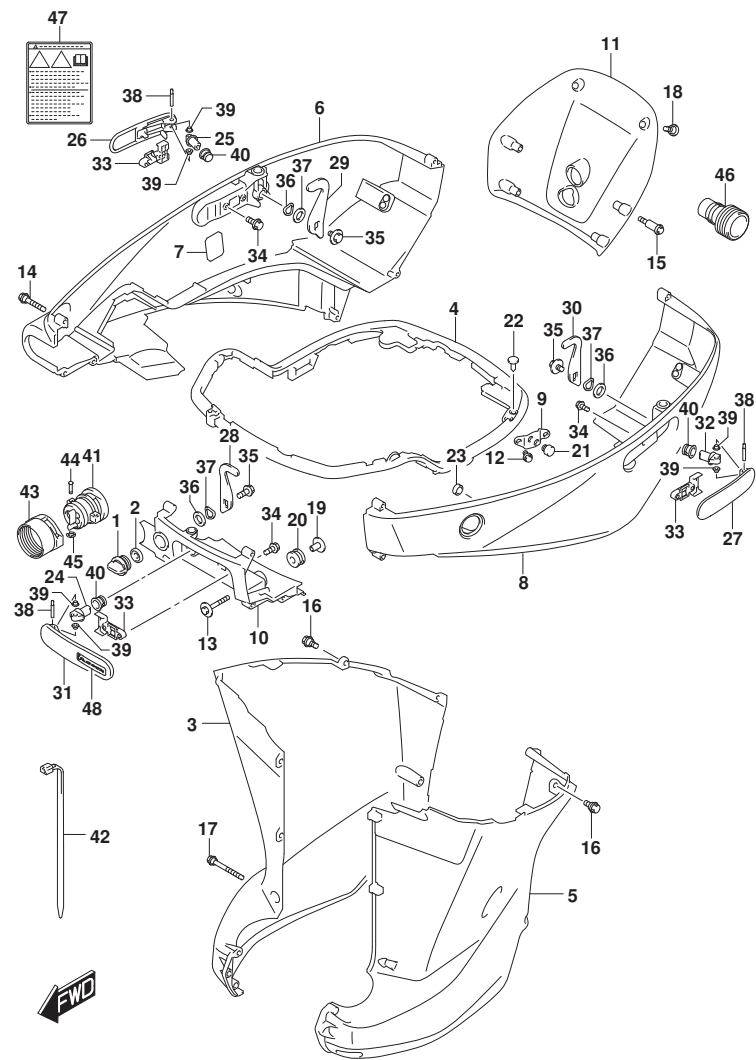


FIG.410A (1-H-7) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG,WATER	1	
2	17914-93J01	GASKET,WATER PLUG	1	
3-1	61131-98L02-YAY	COVER,OIL PAN STBD (BLACK)	1	020 STBD BODY COLOR:YAY
3-2	61131-98L02-Y5S	COVER,OIL PAN STBD (WHITE)	1	020 STBD BODY COLOR:Y5S
3-3	61131-98L02-YAY	COVER,OIL PAN STBD (BLACK)	1	021,022 STBD BODY COLOR:YAY
3-4	61131-98L02-QTN	COVER,OIL PAN STBD (WHITE)	1	021,022 STBD BODY COLOR:QTN
3-5	61131-98L02-QUA	COVER,OIL PAN STBD (WHITE)	1	021 STBD BODY COLOR:QUA
4	61134-98L00	SEAL,ENGINE HOLDER	1	
5-1	61140-98L02-YAY	COVER,OIL PAN PORT (BLACK)	1	020 PORT BODY COLOR:YAY
5-2	61140-98L02-Y5S	COVER,OIL PAN PORT (WHITE)	1	020 PORT BODY COLOR:Y5S
5-3	61140-98L02-YAY	COVER,OIL PAN PORT (BLACK)	1	021,022 PORT BODY COLOR:YAY
5-4	61140-98L02-QTN	COVER,OIL PAN PORT (WHITE)	1	021,022 PORT BODY COLOR:QTN
5-5	61140-98L02-QUA	COVER,OIL PAN PORT (WHITE)	1	021 PORT BODY COLOR:QUA
6-1	61810-98L00-YAY	COVER,SIDE STBD (BLACK)	1	020 STBD

FIG.410A

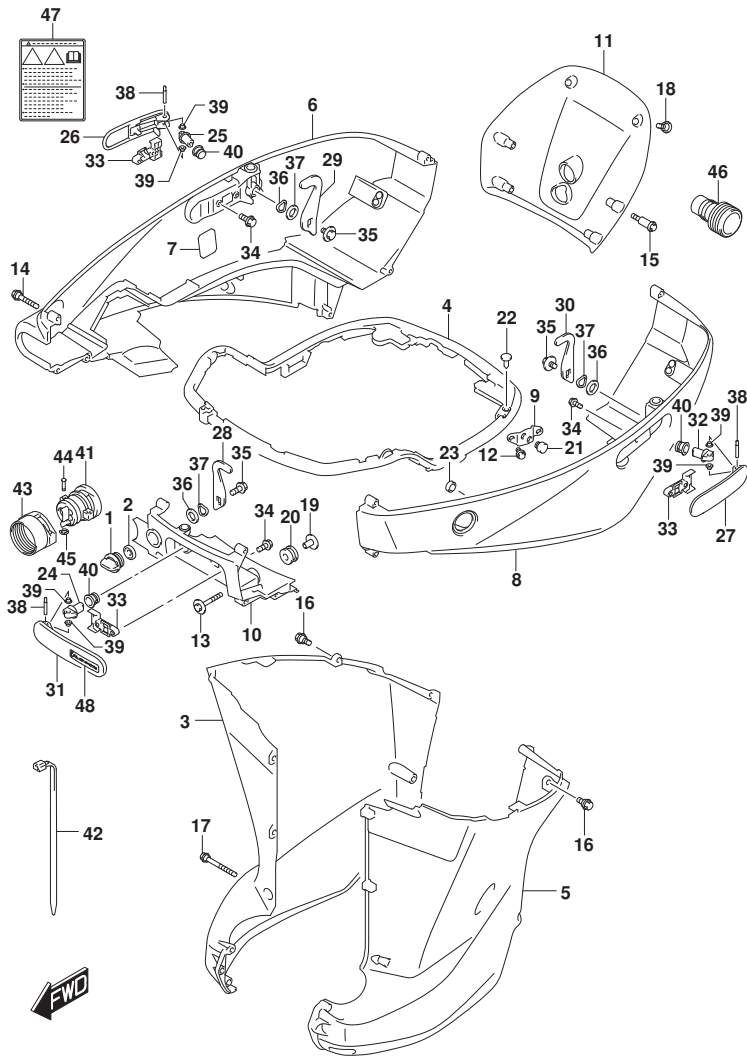


FIG.410A (1-H-8) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
6-2	61810-98L00-Y5S	COVER,SIDE STBD (WHITE)	1	BODY COLOR:YAY 020 STBD
6-3	61810-98L00-YAY	COVER,SIDE STBD (BLACK)	1	BODY COLOR:Y5S 021,022 STBD
6-4	61810-98L00-QTN	COVER,SIDE STBD (WHITE)	1	BODY COLOR:YAY 021,022 STBD
6-5	61810-98L00-QUA	COVER,SIDE STBD (WHITE)	1	BODY COLOR:QTN 021 STBD
7	61814-98L00	PROTECTOR,SIDE COVER	2	BODY COLOR:QUA
8-1	61820-98L00-YAY	COVER,SIDE PORT (BLACK)	1	020 PORT BODY COLOR:YAY
8-2	61820-98L00-Y5S	COVER,SIDE PORT (WHITE)	1	020 PORT BODY COLOR:Y5S
8-3	61820-98L00-YAY	COVER,SIDE PORT (BLACK)	1	021,022 PORT BODY COLOR:YAY
8-4	61820-98L00-QTN	COVER,SIDE PORT (WHITE)	1	021,022 PORT BODY COLOR:QTN
8-5	61820-98L00-QUA	COVER,SIDE PORT (WHITE)	1	021 PORT BODY COLOR:QUA
9	61827-98L00	HOLDER,SIDE COVER	1	
10-1	61830-98L00-YAY	PANEL,FRONT (BLACK)	1	020 BODY COLOR:YAY
10-2	61830-98L00-Y5S	PANEL,FRONT (WHITE)	1	020 BODY COLOR:Y5S
10-3	61830-98L00-YAY	PANEL,FRONT (BLACK)	1	021,022

FIG.410A

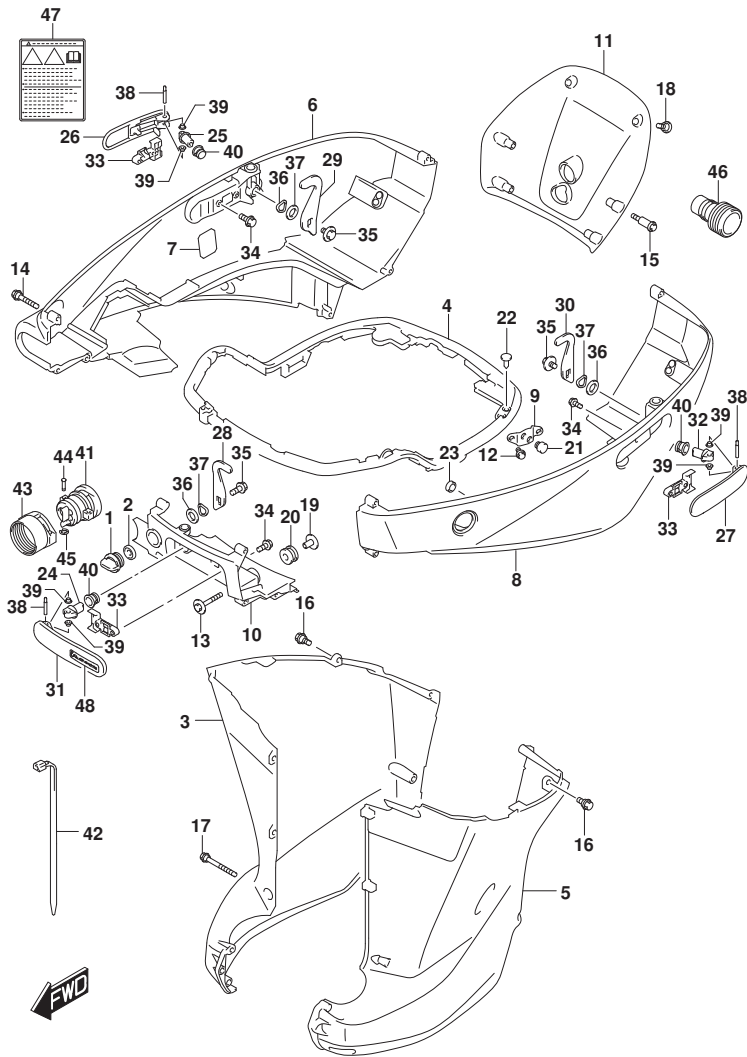


FIG.410A (1-H-9) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
10-4	61830-98L00-QTN	PANEL,FRONT (WHITE)	1	BODY COLOR:YAY 021,022
10-5	61830-98L00-QUA	PANEL,FRONT (WHITE)	1	BODY COLOR:QTN 021
11-1	61861-98L01-20H	PANEL,REAR (SILVER)	1	BODY COLOR:QUA 020
11-2	61861-98L01-20H	PANEL,REAR (SILVER)	1	021,022
11-3	61861-98L01-QUA	PANEL,REAR (WHITE)	1	BODY COLOR:YAY,QTN 021
				BODY COLOR:QUA
12	01550-0816C	BOLT	2	
13	09116-08170	BOLT (8X60)	2	
14	09136-06148	SCREW (6X35)	8	
15	09111-06253	BOLT (M6)	4	
16	09139-06135	SCREW (6X17)	9	
17	09139-06136	SCREW (6X65)	2	
18	09139-06135	SCREW (6X17)	2	
19	09169-08050	WASHER (ID:8.5)	2	
20	09320-11023	CUSHION	2	
21	09321-10049	CUSHION	2	
22	09409-05302-5PK	CLIP (BLACK)	2	
23	09329-14003	CUSHION (14X20X9)	1	
24	61632-93J00	SHAFT,ENGINE COVER HOOK	1	
25	61632-98L00	SHAFT,ENGINE COVER HOOK STBD	1	STBD
26-1	61633-93J00-YAY	LEVER,HOOK REAR STBD (BLACK)	1	020
				STBD
				BODY COLOR:YAY
26-2	61633-93J00-Y5S	LEVER,HOOK REAR STBD (WHITE)	1	020
				STBD
				BODY COLOR:Y5S
26-3	61633-93J00-YAY	LEVER,HOOK REAR STBD (BLACK)	1	021,022
				STBD
				BODY COLOR:YAY
26-4	61633-93J00-QTN	LEVER,HOOK REAR STBD (WHITE)	1	021,022
				STBD

FIG.410A

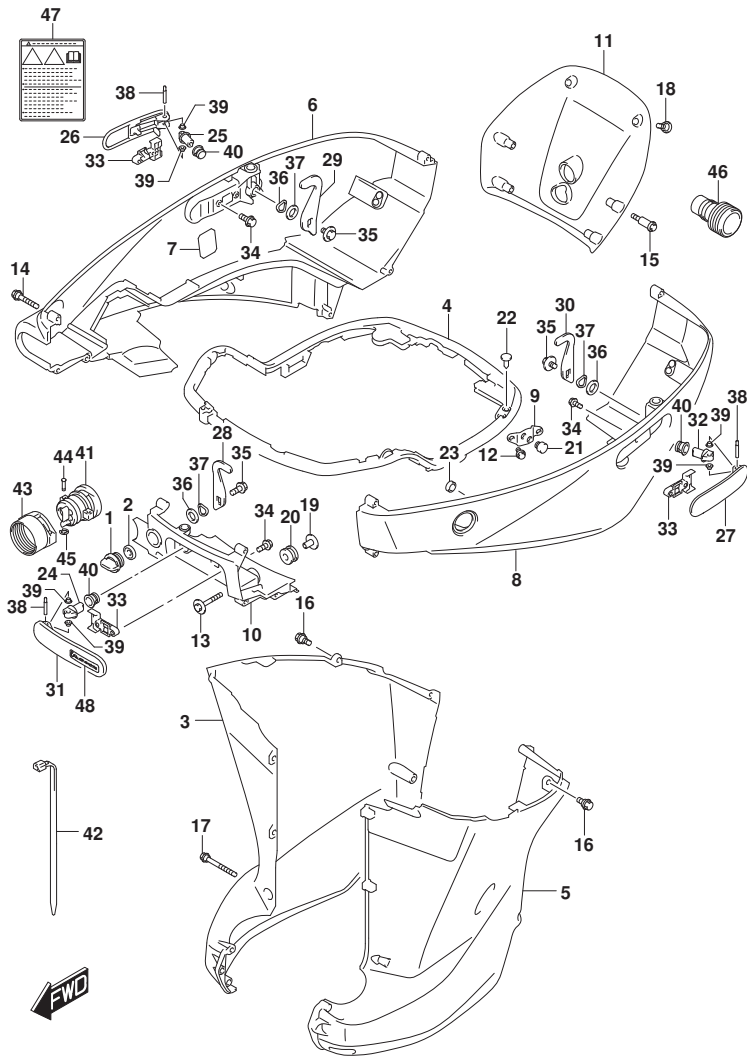


FIG.410A (1-H-10) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
26-5	61633-93J20-QUA	LEVER,HOOK REAR STBD (WHITE)	1	BODY COLOR:QTN 021 STBD
27-1	61634-93J00-YAY	LEVER,HOOK REAR PORT (BLACK)	1	BODY COLOR:QUA 020 PORT
27-2	61634-93J00-Y5S	LEVER,HOOK REAR PORT (WHITE)	1	BODY COLOR:YAY 020 PORT
27-3	61634-93J00-YAY	LEVER,HOOK REAR PORT (BLACK)	1	BODY COLOR:Y5S 020 PORT
27-4	61634-93J00-QTN	LEVER,HOOK REAR PORT (WHITE)	1	BODY COLOR:YAY 021,022 PORT
27-5	61634-93J20-QUA	LEVER,HOOK REAR PORT (WHITE)	1	BODY COLOR:QTN 021 PORT
28	61641-93J10	HOOK,ENGINE COVER (REAR STBD/F RONT)	1	BODY COLOR:QUA
29	61641-93J10	HOOK,ENGINE COVER (REAR STBD/F RONT)	1	STBD
30	61641-93J20	HOOK,ENGINE COVER REAR PORT (R EAR PORT)	1	PORT
31-1	61645-93J01-YAY	LEVER,HOOK FRONT (BLACK)	1	020 BODY COLOR:YAY
31-2	61645-93J01-Y5S	LEVER,HOOK FRONT (WHITE)	1	020 BODY COLOR:Y5S
31-3	61645-93J01-YAY	LEVER,HOOK FRONT (BLACK)	1	021,022 BODY COLOR:YAY
31-4	61645-93J01-QTN	LEVER,HOOK FRONT (WHITE)	1	021,022 BODY COLOR:QTN
31-5	61645-93J20-QUA	LEVER,HOOK FRONT (WHITE)	1	021 BODY COLOR:QUA

FIG.410A


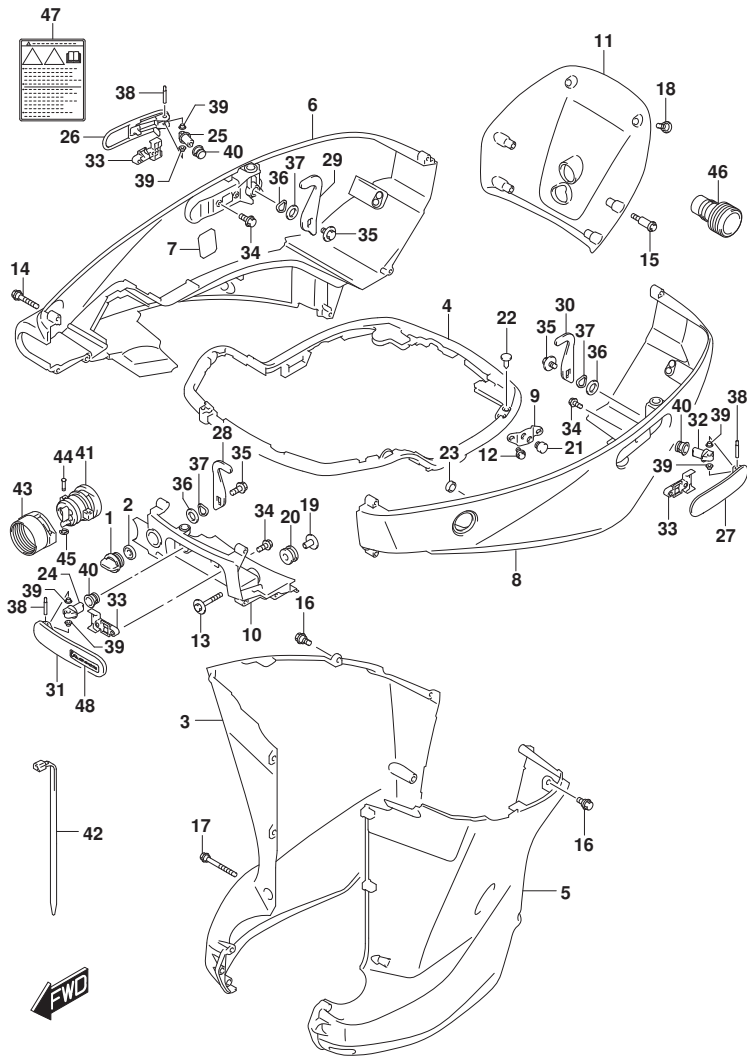


FIG.410A (1-H-11) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	61652-98L00	SHAFT,ENGINE COVER HOOK PORT	1	PORT
33	61673-93J01	LATCH,HOOK LEVER	3	
34	09103-05026	BOLT (5X10)	6	
35	09116-06127	BOLT (6X12)	3	
36	09160-13014	WASHER (13.2X25X1)	3	
37	09164-14008	WASHER	3	
38	09202-04022	PIN	3	
39	09306-04005	BUSH	6	
40	09306-13007	BUSH	3	
41-1	61124-98L20	GROMMET,R/CON HARNESS	1	020,021
41-2	61124-98L30	GROMMET,R/CON HARNESS	1	022
42-1	09407-25402	CLAMP (L:250)	1	
42-2	09407-20405	CLAMP (L:202)	1	
43	67361-90J10	ADAPTER,HOSE	1	
44-1	09208-06009	PIN (RIGGING)	2	020,021
44-2	09208-06011	PIN	2	022
45	09383-04002	E RING	2	020,021
46	17917-87L00	CONNECTOR,FLUSH WATER	1	
47	61458-90J01	LABEL,ENGINE COVER	1	
48-1	61649-93J00	LABEL,HOOK LEVER (REAR STBD/FR ONT)	1	020 BODY COLOR:YAY
48-2	61649-93J10	LABEL,HOOK LEVER (REAR STBD/FR ONT)	1	020 BODY COLOR:Y5S
48-3	61649-93J00	LABEL,HOOK LEVER (REAR STBD/FR ONT)	1	021 BODY COLOR:YAY
48-4	61649-93J10	LABEL,HOOK LEVER (REAR STBD/FR ONT)	1	021 BODY COLOR:QTN,QUA

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK)	1	020 BODY COLOR:YAY
1-2	61420-98823-BBK	COVER SET,ENGINE (WHITE/SILVER)	1	020 BODY COLOR:Y5S
1-3	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK)	1	021,022 BODY COLOR:YAY
1-4	61420-98823-B5H	COVER SET,ENGINE (WHITE/SILVER)	1	021,022 BODY COLOR:QTN
1-5	61420-98830-QUA	COVER SET,ENGINE (WHITE)	1	021 BODY COLOR:QUA
2	61414-98L00	.SEAL,ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	020 BODY COLOR:YAY
3-2	61421-98L00-Y5S	.COVER,ENGINE TOP REAR (WHITE)	1	020 BODY COLOR:Y5S
3-3	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	021,022 BODY COLOR:YAY
3-4	61421-98L00-QTN	.COVER,ENGINE TOP REAR (WHITE)	1	021,022 BODY COLOR:QTN
4	61425-98L00	.SILENCER,TOP COVER	2	
5	61426-98L10	.SILENCER,ENGINE COVER	1	
6	61427-98L00	.SILENCER,ENGINE COVER	1	
7	61428-98L00	.SILENCER,ENGINE COVER STBD	1	STBD
8	61429-98L00	.SILENCER,ENGINE COVER PORT	1	PORT
9	61430-98L00-20H	.COVER,ENGINE TOP FRONT (SILVER)	1	BODY COLOR:YAY,Y5S,QTN
10	61432-98L00-20H	.GARNISH,AIR INTAKE (SILVER)	1	BODY COLOR:YAY,Y5S,QTN
11	61433-98L00	.COVER,AIR INTAKE STBD	1	STBD
12	61434-98L00	.COVER,AIR INTAKE PORT	1	PORT
13	61437-98L00	.SEAL,AIR INTAKE	2	
14	61438-98L01	.SEAL,ENGINE COVER TOP	1	
15	61439-98L00	.SEAL,AIR VENT NO.2	2	
16	61475-98L00	.GUIDE,AIR VENT	1	
17	61476-98L00	.SEAL,AIR VENT NO.1	1	
18	61561-98L00	.LOUVER,AIR INTAKE OUTER	2	

FIG.420A

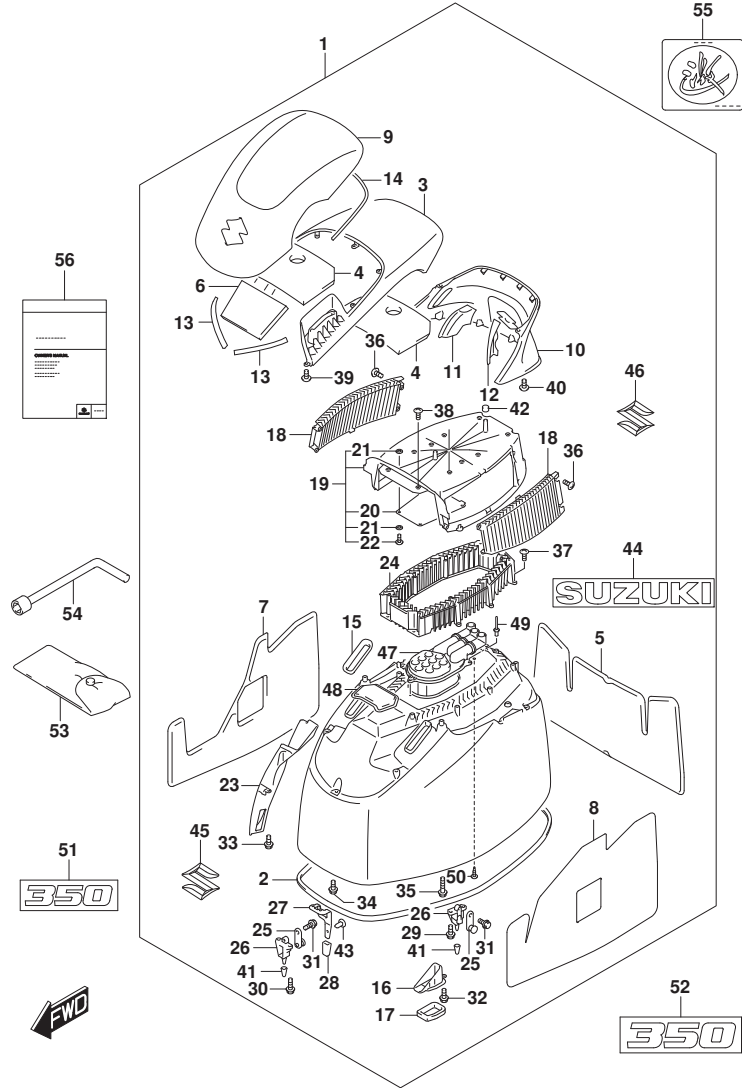

DF350A_E11_022_420A
ENGINE COVER

FIG.420A (1-H-13) ENGINE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19	61560-98L00	.FRAME COMP,AIR INTAKE	1	
20	61563-98L00	..SILENCER,AIR INTAKE	1	
21	09160-04029	..WASHER	8	
22	09229-04018	..RIVET	4	
23	61565-98L00	..DUCT,AIR INTAKE	1	
24	61591-98L00	..LOUVER,AIR INTAKE INNER	1	
25	61610-98L00	..FASTENER	3	
26	61621-93J01	..BRACKET,FASTENER	3	
27	61682-98L00	..STAND,ENGINE COVER	1	
28	61683-98L00	..CUSHION,ENGINE COVER STAND	1	
29-1	01547-06167	..BOLT (6X16)	4	020,021
29-2	01547-0616C	..BOLT	4	022
30-1	01547-06207	..BOLT (6X20)	2	020,021
30-2	01547-0620C	..BOLT	2	022
31	01550-0616C	..BOLT (6X16)	3	
32	01550-0616C	..BOLT (6X16)	1	
33	01550-0616C	..BOLT (6X16)	2	
34	01550-0616C	..BOLT (6X16)	3	
35	01550-0630C	..BOLT (6X30)	2	
36	03542-06169	..SCREW (6X19)	8	
37	03542-06169	..SCREW (6X19)	9	
38	03542-06169	..SCREW (6X19)	14	
39	03542-06169	..SCREW (6X19)	7	
40	03542-06169	..SCREW (6X19)	13	
41	09329-10024	..CUSHION	3	
42	09329-12006	..CUSHION	2	
43	09409-05302-5PK	..CLIP (BLACK)	1	
44	61441-98L00	..MARK,SUZUKI	2	
45	68111-93J00	..EMBLEM,S	1	
46	77811-63J00-0PG	..EMBLEM,MARK S (CHROME)	1	
47	61416-98L10	..GUARD,AIR INTAKE	1	
48	6142A-98L00	..SILENCER,ENGINE UPPER FRONT	1	UPPER
49	09229-04018	..RIVET	3	
50	03542-06169	..SCREW (6X19)	1	
51	61422-98L00	..MARK,EMBLEM FRONT	1	

DF350A_E11_022

FIG.420A

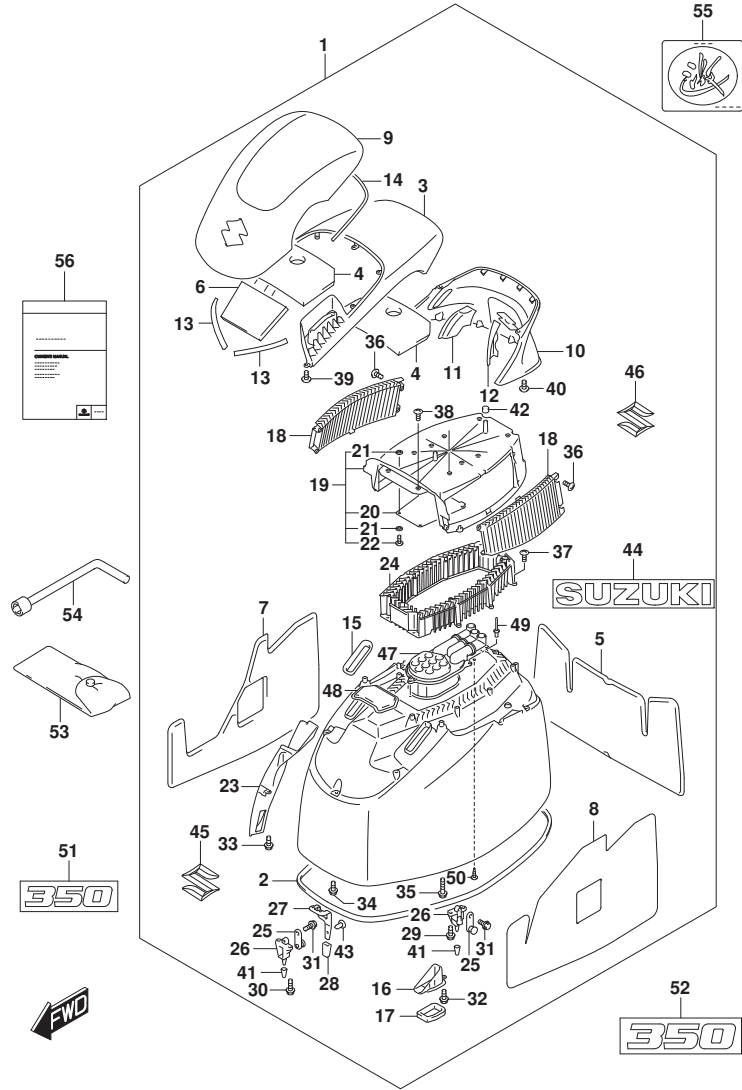


FIG.420A (1-H-14) ENGINE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
52	61435-98L00	MARK,EMBLEM REAR	1	
53	09800-81835	TOOL SET	1	
54	09816-00175	WRENCH,BOX (8)	1	
55-1	61424-98L01	MARK,EMBLEM	1	020 BODY COLOR:YAY
55-2	61424-98L10	MARK,EMBLEM	1	020 BODY COLOR:Y5S
55-3	61424-98L01	MARK,EMBLEM	1	021,022 BODY COLOR:YAY
55-4	61424-98L20	MARK,EMBLEM	1	021,022 BODY COLOR:QTN
56-1	99011-98L42-054	MANUAL,OWNERS	1	020:(E01,E03),021
56-2	99011-98L50-054	MANUAL,OWNERS	1	022
56-3	99011-98L42-059	MANUAL,OWNERS	1	020:E01,021
56-4	99011-98L50-059	MANUAL,OWNERS	1	022
56-5	99011-98L42-03B	MANUAL,OWNERS	1	020:E03,021
56-6	99011-98L50-03B	MANUAL,OWNERS	1	022

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK)	1	020 BODY COLOR:YAY
1-2	61420-98823-BBK	COVER SET,ENGINE (WHITE/SILVER)	1	020 BODY COLOR:Y5S
1-3	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK)	1	021,022 BODY COLOR:YAY
1-4	61420-98823-B5H	COVER SET,ENGINE (WHITE/SILVER)	1	021,022 BODY COLOR:QTN
2	61414-98L00	.SEAL,ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	020 BODY COLOR:YAY
3-2	61421-98L00-Y5S	.COVER,ENGINE TOP REAR (WHITE)	1	020 BODY COLOR:Y5S
3-3	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	021,022 BODY COLOR:YAY
3-4	61421-98L00-QTN	.COVER,ENGINE TOP REAR (WHITE)	1	021,022 BODY COLOR:QTN
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER,ENGINE COVER	1	
6	61427-98L00	.SILENCER,ENGINE COVER	1	
7	61428-98L00	.SILENCER,ENGINE COVER STBD	1	STBD
8	61429-98L00	.SILENCER,ENGINE COVER PORT	1	PORT
9	61430-98L00-20H	.COVER,ENGINE TOP FRONT (SILVER)	1	
10	61432-98L00-20H	.GARNISH,AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER,AIR INTAKE STBD	1	STBD
12	61434-98L00	.COVER,AIR INTAKE PORT	1	PORT
13	61437-98L00	.SEAL,AIR INTAKE	2	
14	61438-98L01	.SEAL,ENGINE COVER TOP	1	
15	61439-98L00	.SEAL,AIR VENT NO.2	2	
16	61475-98L00	.GUIDE,AIR VENT	1	
17	61476-98L00	.SEAL,AIR VENT NO.1	1	
18	61561-98L00	.LOUVER,AIR INTAKE OUTER	2	
19	61560-98L00	.FRAME COMP,AIR INTAKE	1	
20	61563-98L00	.SILENCER,AIR INTAKE	1	

FIG.420B (1-H-16) ENGINE COVER (DF325A:E01)

DF350A_E11_022

FIG.420B

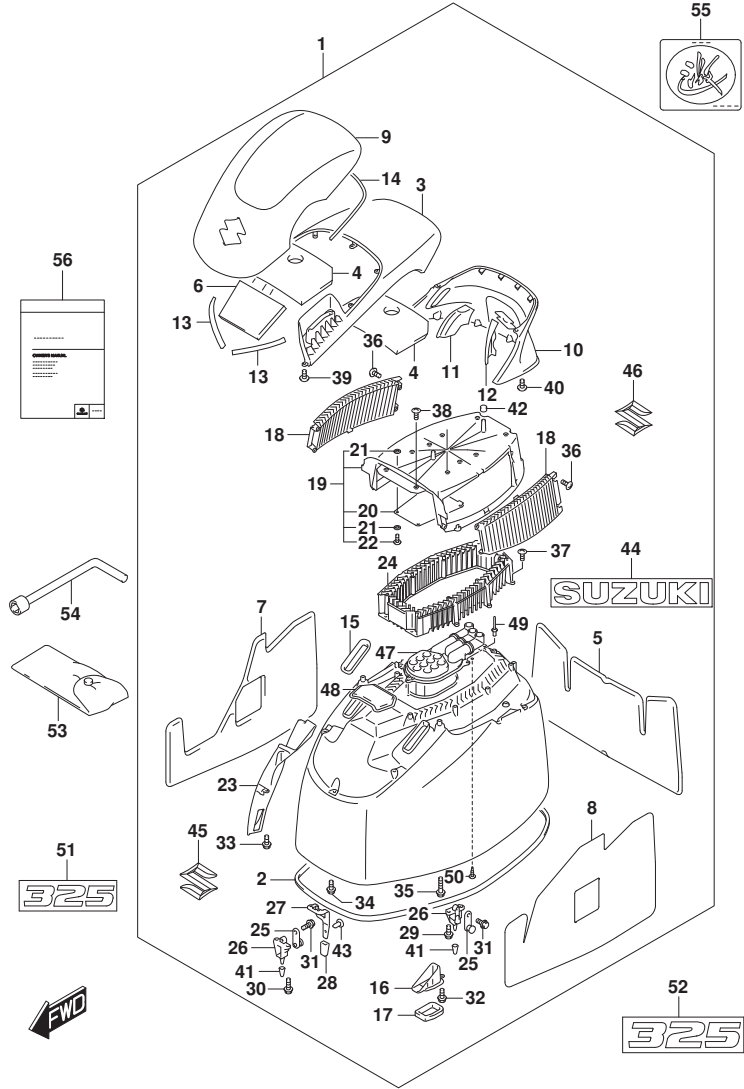


FIG.420B (1-I-2) ENGINE COVER (DF325A:E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
54	09816-00175	WRENCH,BOX (8)	1	
55-1	61424-98L01	MARK,EMBLEM	1	020 BODY COLOR:YAY
55-2	61424-98L10	MARK,EMBLEM	1	020 BODY COLOR:Y5S
55-3	61424-98L01	MARK,EMBLEM	1	021,022 BODY COLOR:YAY
55-4	61424-98L20	MARK,EMBLEM	1	021,022 BODY COLOR:QTN
56-1	99011-98L42-054	MANUAL,OWNERS	1	020,021
56-2	99011-98L50-054	MANUAL,OWNERS	1	022
56-3	99011-98L42-059	MANUAL,OWNERS	1	020,021
56-4	99011-98L50-059	MANUAL,OWNERS	1	022

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK)	1	020 BODY COLOR:YAY
1-2	61420-98823-BBK	COVER SET,ENGINE (WHITE/SILVER)	1	020 BODY COLOR:Y5S
1-3	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK)	1	021,022 BODY COLOR:YAY
1-4	61420-98823-B5H	COVER SET,ENGINE (WHITE/SILVER)	1	021,022 BODY COLOR:QTN
2	61414-98L00	.SEAL,ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	020 BODY COLOR:YAY
3-2	61421-98L00-Y5S	.COVER,ENGINE TOP REAR (WHITE)	1	020 BODY COLOR:Y5S
3-3	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	021,022 BODY COLOR:YAY
3-4	61421-98L00-QTN	.COVER,ENGINE TOP REAR (WHITE)	1	021,022 BODY COLOR:QTN
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER,ENGINE COVER	1	
6	61427-98L00	.SILENCER,ENGINE COVER	1	
7	61428-98L00	.SILENCER,ENGINE COVER STBD	1	STBD
8	61429-98L00	.SILENCER,ENGINE COVER PORT	1	PORT
9	61430-98L00-20H	.COVER,ENGINE TOP FRONT (SILVER)	1	
10	61432-98L00-20H	.GARNISH,AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER,AIR INTAKE STBD	1	STBD
12	61434-98L00	.COVER,AIR INTAKE PORT	1	PORT
13	61437-98L00	.SEAL,AIR INTAKE	2	
14	61438-98L01	.SEAL,ENGINE COVER TOP	1	
15	61439-98L00	.SEAL,AIR VENT NO.2	2	
16	61475-98L00	.GUIDE,AIR VENT	1	
17	61476-98L00	.SEAL,AIR VENT NO.1	1	
18	61561-98L00	.LOUVER,AIR INTAKE OUTER	2	
19	61560-98L00	.FRAME COMP,AIR INTAKE	1	
20	61563-98L00	.SILENCER,AIR INTAKE	1	

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
21	09160-04029	..WASHER	8	
22	09229-04018	..RIVET	4	
23	61565-98L00	..DUCT,AIR INTAKE	1	
24	61591-98L00	..LOUVER,AIR INTAKE INNER	1	
25	61610-98L00	..FASTENER	3	
26	61621-93J01	..BRACKET,FASTENER	3	
27	61682-98L00	..STAND,ENGINE COVER	1	
28	61683-98L00	..CUSHION,ENGINE COVER STAND	1	
29-1	01547-06167	..BOLT (6X16)	4	020,021
29-2	01547-0616C	..BOLT	4	022
30-1	01547-06207	..BOLT (6X20)	2	020,021
30-2	01547-0620C	..BOLT	2	022
31	01550-0616C	..BOLT (6X16)	3	
32	01550-0616C	..BOLT (6X16)	1	
33	01550-0616C	..BOLT (6X16)	2	
34	01550-0616C	..BOLT (6X16)	3	
35	01550-0630C	..BOLT (6X30)	2	
36	03542-06169	..SCREW (6X19)	8	
37	03542-06169	..SCREW (6X19)	9	
38	03542-06169	..SCREW (6X19)	14	
39	03542-06169	..SCREW (6X19)	7	
40	03542-06169	..SCREW (6X19)	13	
41	09329-10024	..CUSHION	3	
42	09329-12006	..CUSHION	2	
43	09409-05302-5PK	..CLIP (BLACK)	1	
44	61441-98L00	..MARK,SUZUKI	2	
45	68111-93J00	..EMBLEM,S	1	
46	77811-63J00-0PG	..EMBLEM,MARK S (CHROME)	1	
47	61416-98L10	..GUARD,AIR INTAKE	1	
48	6142A-98L00	..SILENCER,ENGINE UPPER FRONT	1	UPPER
49	09229-04018	..RIVET	3	
50	03542-06169	..SCREW (6X19)	1	
51	61422-98L60	MARK,EMBLEM FRONT	1	
52	61435-98L60	MARK,EMBLEM REAR	1	
53	09800-81835	TOOL SET	1	

FIG.420C

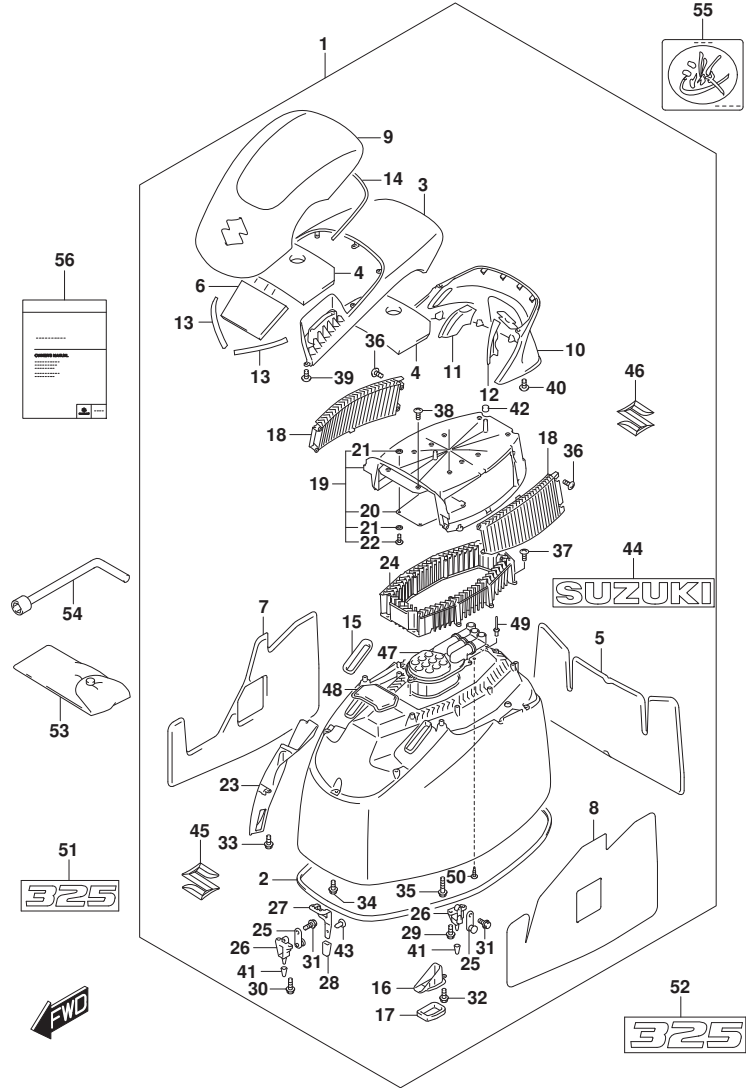


FIG.420C (1-I-5) ENGINE COVER (DF325A:E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
54	09816-00175	WRENCH,BOX (8)	1	
55-1	61424-98L01	MARK,EMBLEM	1	020 BODY COLOR:YAY
55-2	61424-98L10	MARK,EMBLEM	1	020 BODY COLOR:Y5S
55-3	61424-98L01	MARK,EMBLEM	1	021,022 BODY COLOR:YAY
55-4	61424-98L20	MARK,EMBLEM	1	021,022 BODY COLOR:QTN
56-1	99011-98L42-059	MANUAL,OWNERS	1	020,021
56-2	99011-98L50-059	MANUAL,OWNERS	1	022

FIG.420D

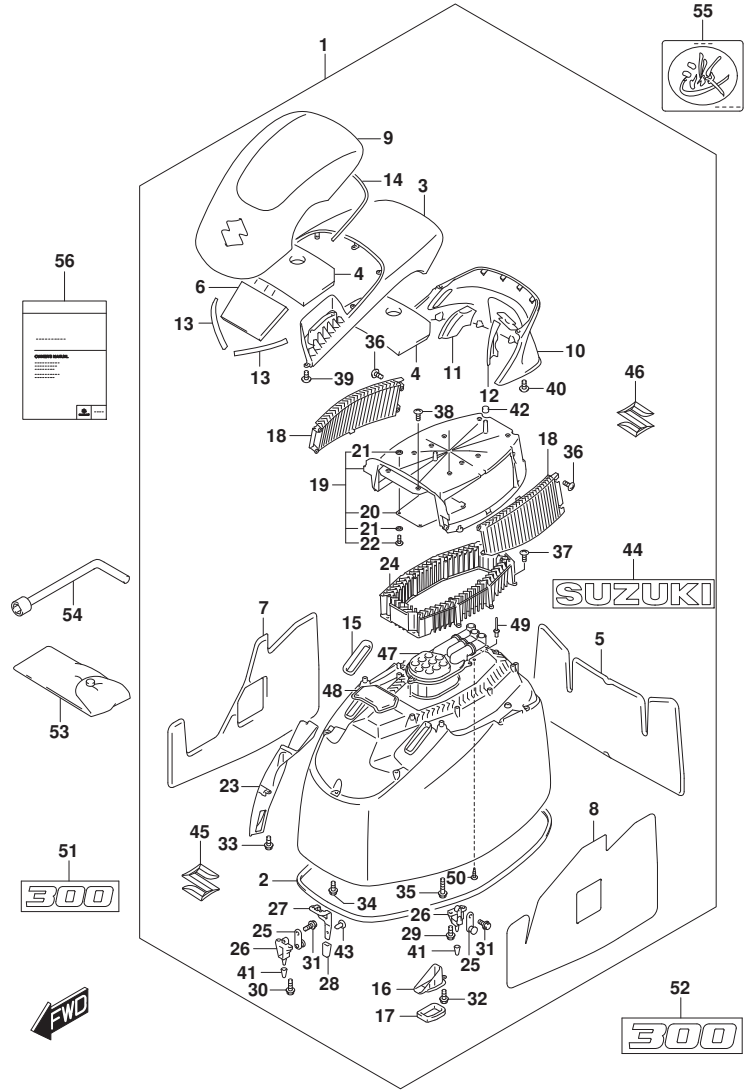


FIG.420D (1-I-6) ENGINE COVER (DF300B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK	1	020
		)		BODY COLOR:YAY
1-2	61420-98823-BBK	COVER SET,ENGINE (WHITE/SILVER	1	020
		)		BODY COLOR:Y5S
1-3	61420-98823-AML	COVER SET,ENGINE (SILVER/BLACK	1	021,022
		)		BODY COLOR:YAY
1-4	61420-98823-B5H	COVER SET,ENGINE (WHITE/SILVER	1	021,022
		)		BODY COLOR:QTN
2	61414-98L00	.SEAL,ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	020
				BODY COLOR:YAY
3-2	61421-98L00-Y5S	.COVER,ENGINE TOP REAR (WHITE)	1	020
				BODY COLOR:Y5S
3-3	61421-98L00-YAY	.COVER,ENGINE TOP REAR (BLACK)	1	021,022
				BODY COLOR:YAY
3-4	61421-98L00-QTN	.COVER,ENGINE TOP REAR (WHITE)	1	021,022
				BODY COLOR:QTN
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER,ENGINE COVER	1	
6	61427-98L00	.SILENCER,ENGINE COVER	1	
7	61428-98L00	.SILENCER,ENGINE COVER STBD	1	STBD
8	61429-98L00	.SILENCER,ENGINE COVER PORT	1	PORT
9	61430-98L00-20H	.COVER,ENGINE TOP FRONT (SILVE	1	
		R)		
10	61432-98L00-20H	.GARNISH,AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER,AIR INTAKE STBD	1	STBD
12	61434-98L00	.COVER,AIR INTAKE PORT	1	PORT
13	61437-98L00	.SEAL,AIR INTAKE	2	
14	61438-98L01	.SEAL,ENGINE COVER TOP	1	
15	61439-98L00	.SEAL,AIR VENT NO.2	2	
16	61475-98L00	.GUIDE,AIR VENT	1	
17	61476-98L00	.SEAL,AIR VENT NO.1	1	
18	61561-98L00	.LOUVER,AIR INTAKE OUTER	2	
19	61560-98L00	.FRAME COMP,AIR INTAKE	1	
20	61563-98L00	..SILENCER,AIR INTAKE	1	

FIG.420D (1-I-7) ENGINE COVER (DF300B)

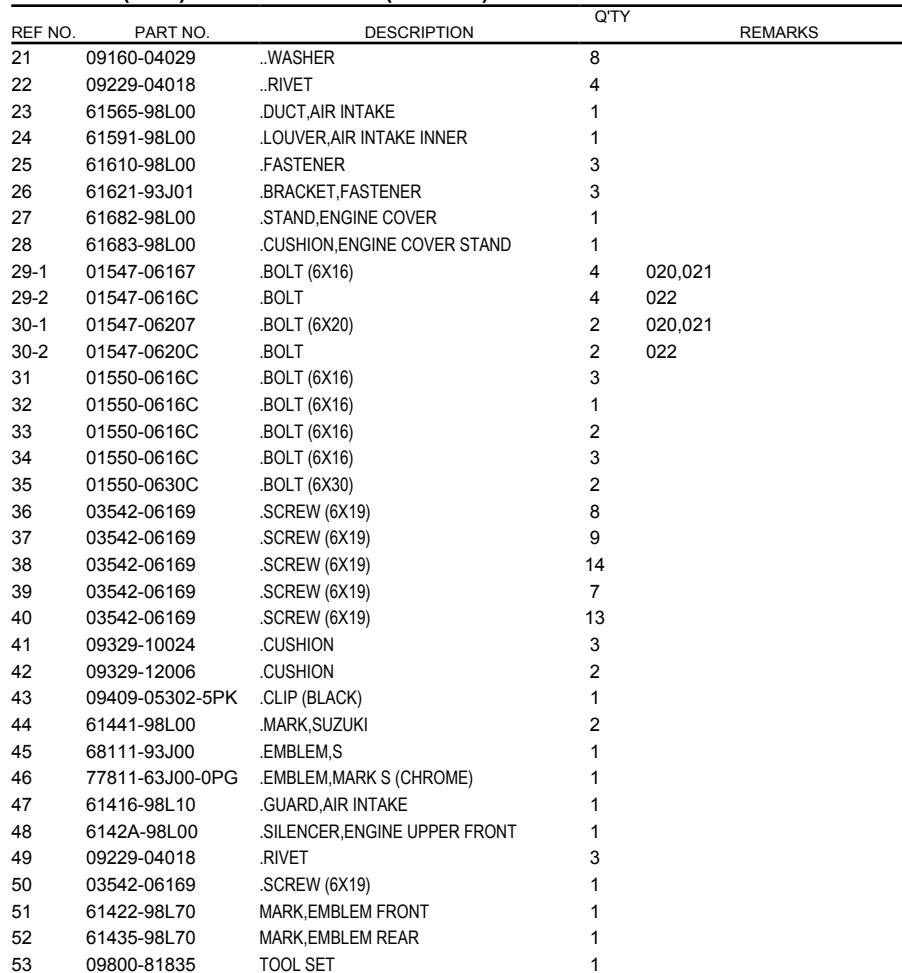


FIG.420D (1-I-8) ENGINE COVER (DF300B)

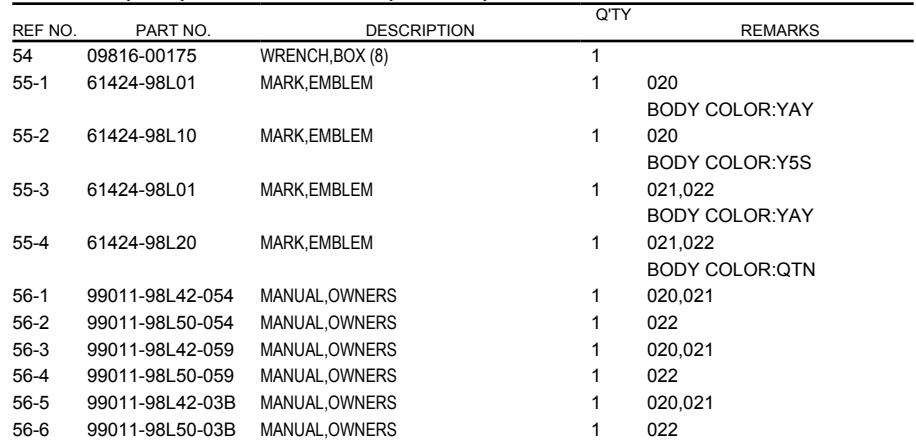


FIG.430A

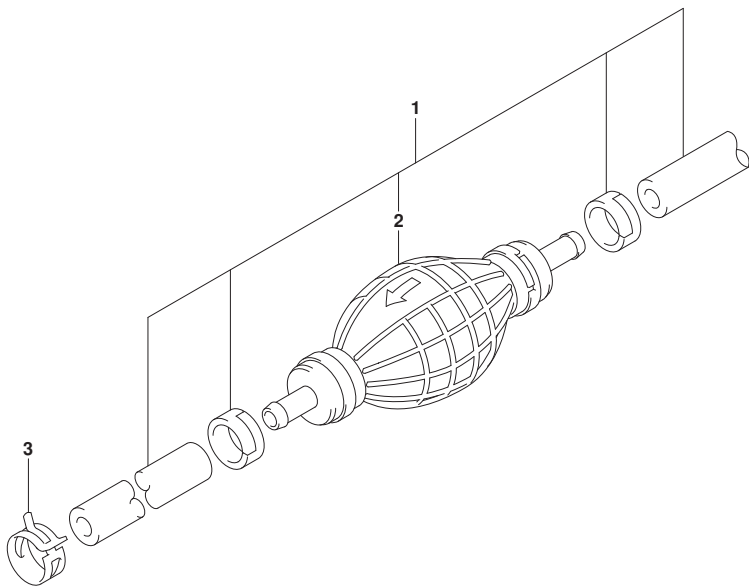


FIG.430A (1-I-9) FUEL HOSE (DF350A,DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65700-93J14	HOSE,FUEL	1	
2	65770-93J13	,PUMP,SQUEEZE	1	
3	09401-13423	CLIP	2	

FIG.475A

FIG.475A (1-I-10) SQUEEZE PUMP (E03,E11)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65770-93J04	PUMP,SQUEEZE	1	

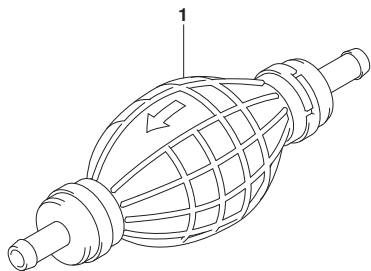


FIG.520A

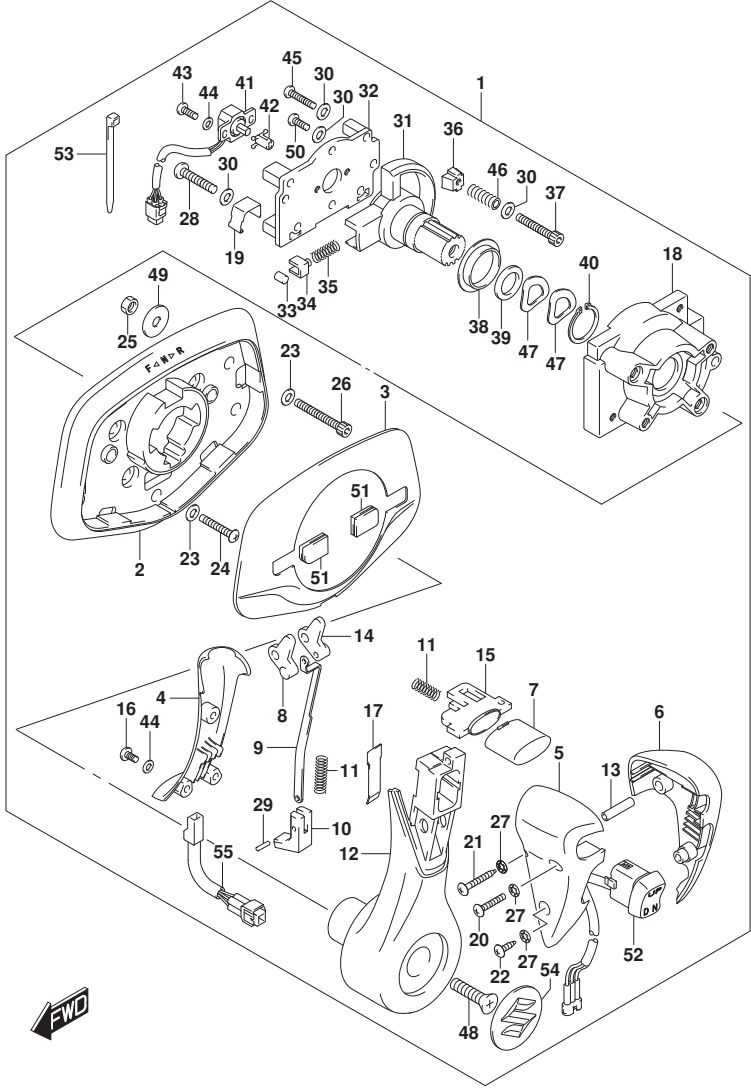


FIG.520A (1-I-11) OPT:FLUSH MOUNT REMOCON (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J24	REMOTE CONTROL ASSY,FLASH MT	1	
2	67271-98J20	.COVER,BOTTOM BASE	1	
3	67264-98J00	.COVER, TOP BASE	1	
4	67263-98J20	.COVER,LEVER	1	
5	67261-98J20	.GRIP,A	1	
6	67261-98J30	.GRIP,B	1	
7	67265-98J00	.BUTTON,NEUTRAL LOCK	1	
8	67255-98J00	.LINK,NEUTRAL LOCK NO.1	1	
9	67258-98J00	.PLATE,JOINT	1	
10	67256-98J00	.BLOCK,NEUTRAL LOCK	1	
11	67259-98J00	.SPRING	3	
12	67251-98J20	.LEVER,HANDLE	1	
13	67294-98J00	.SPACER	1	
14	67254-98J00	.LINK,NEUTRAL LOCK NO.2	1	
15	67233-98J00	.SLIDER,NEUTRAL BUTTON	1	
16	67296-98JA0	.SCREW (4X10)	3	
17	67234-98J00	.PLATE,LEVER	1	
18	67211-98J20	.HOUSING	1	
19	67269-98J20	.CLAMP,LEAD	1	
20	67296-98JB0	.SCREW (4X30)	1	
21	67227-98J20	.SCREW (4X35)	1	
22	67227-98J30	.SCREW (4X20)	1	
23	67288-98J50	.WASHER,PLANE	8	
24	67296-98JC0	.SCREW (6X40)	4	
25	67287-98J00	.NUT	4	
26	67226-98J10	.BOLT (6X50)	4	
27	67288-98J60	.WASHER,INTERNAL TOOTH (M4)	3	
28	67296-98JD0	.SCREW (5X40)	1	
29	67238-98J00	.PIN	2	
30	67288-98J70	.WASHER,PLANE	5	
31	67246-98J00	.SHAFT,DRIVE	1	
32	67222-98J00	.PANEL ASSY,BACK	1	
33	67236-98J00	.ROLLER,DETENT	1	
34	67235-98J00	.GUIDE,DETENT ROOLER	1	
35	67237-98J00	.SPRING,DETENT	1	

FIG.520A

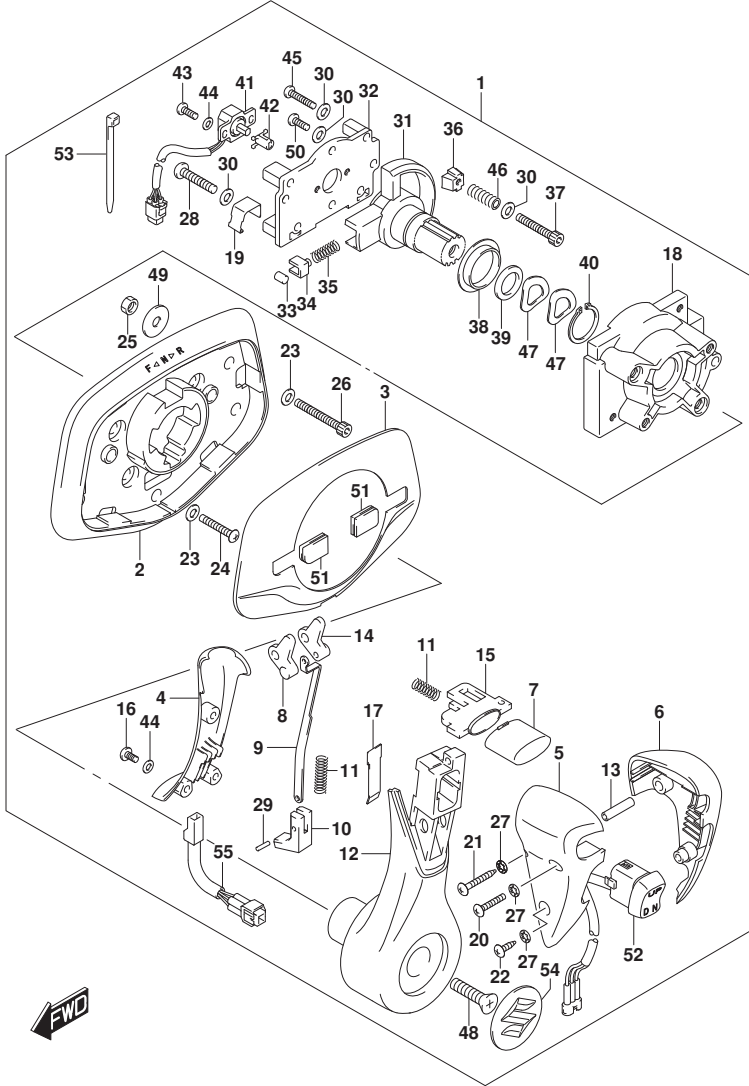


FIG.520A (1-1-12) OPT:FLUSH MOUNT REMOCON (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
36	67223-98J00	.PAD,BRAKE	1	
37	67296-98JE0	.SCREW (5X35)	1	
38	67252-98J00	.BUSH,DRIVE SHAFT	1	
39	67288-98J20	.WASHER	1	
40	67292-98J00	.C RING	1	
41	15980-98J00	.POTENTIOMETER	1	
42	67227-98J10	.LEVER,POTENTIOMETER NO.2	1	
43	67296-94300	.SCREW (4X10)	2	
44	67288-98J00	.WASHER,POTENTIOMETER	5	
45	67296-98J10	.SCREW (5X35)	1	
46	67288-98J10	.WASHER,SPRING	8	
47	67228-98J50	.WASHER,WAVE	2	
48	67296-98J60	.SCREW (8X30)	1	
49	09160-06104	.WASHER (6.5X24X2)	4	
50	67296-98J50	.SCREW (5X18)	2	
51	67272-98J00	.GROMMET,COVER	2	
52	37850-98J03	.SWITCH ASSY,PTT	1	
53	67269-98J10	.BAND	1	
54	67257-98J00	.MARK,LEVER	1	
55	36890-98J00	.HARNESS,CONDENSER ADAPTER	1	

FIG.520B

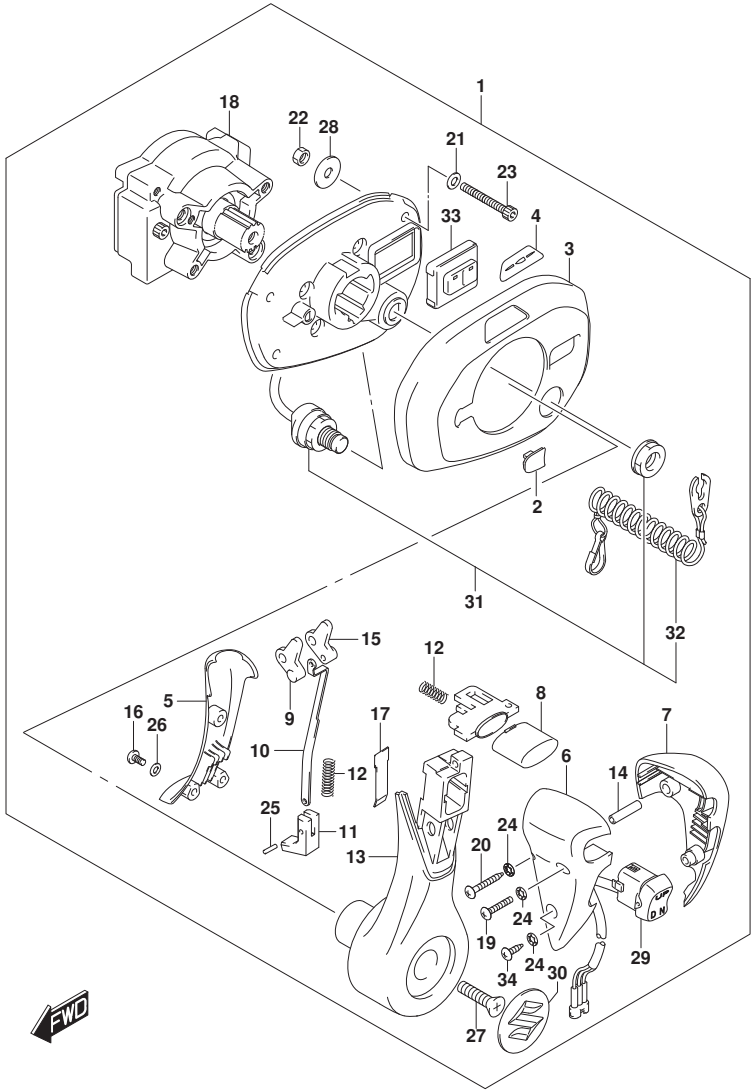


FIG.520B (1-I-13) OPT:FLUSH MOUNT REMOCON (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98L20	R/CON ASSY,FLASH MOUNT	1	
2	67272-98L20	.GROMMET,R/CON COVER	1	
3	67264-98L00	.COVER,TOP BASE	1	
4	67284-98L20	.MARK,HANDLE LEVER	1	
5	67263-98J20	.COVER,LEVER	1	
6	67261-98J20	.GRIP,A	1	
7	67261-98J30	.GRIP,B	1	
8	67265-98J00	.BUTTON,NEUTRAL LOCK	1	
9	67255-98J00	.LINK,NEUTRAL LOCK NO.1	1	
10	67258-98J00	.PLATE,JOINT	1	
11	67256-98L00	.BLOCK,NEUTRAL LOCK	1	
12	67259-98J00	.SPRING	3	
13	67251-98J20	.LEVER,HANDLE	1	
14	67294-98J00	.SPACER	1	
15	67254-98J00	.LINK,NEUTRAL LOCK NO.2	1	
16	67296-98JA0	.SCREW (4X10)	3	
17	67234-98J00	.PLATE,LEVER	1	
18	67211-98J20	.HOUSING	1	
19	67296-98JB0	.SCREW (4X30)	1	
20	67227-98J20	.SCREW (4X35)	1	
21	67288-98J50	.WASHER,PLANE	4	
22	67287-98J00	.NUT	4	
23	67226-98J10	.BOLT (6X50)	4	
24	67288-98J60	.WASHER,INNTERNAL TOOTH (M4)	3	
25	67238-98J00	.PIN	2	
26	67288-98J00	.WASHER,POTENTIOMETER	4	
27	67296-98J60	.SCREW (8X30)	1	
28	67288-94310	.WASHER (6.5X24X2)	4	
29	37850-98J03	.SWITCH ASSY,PTT	1	
30	67257-98J00	.MARK,LEVER	1	
31	37820-98L00	.SWITCH ASSY,EMERGENCY	1	
32	37823-98L00	.PLATE,EMERGENCY SW LOCK	1	
33	37130-98L20	.SWITCH ASSY,BOAT CONTROL	1	
34	67227-98L00	.SCREW	1	

FIG.522A

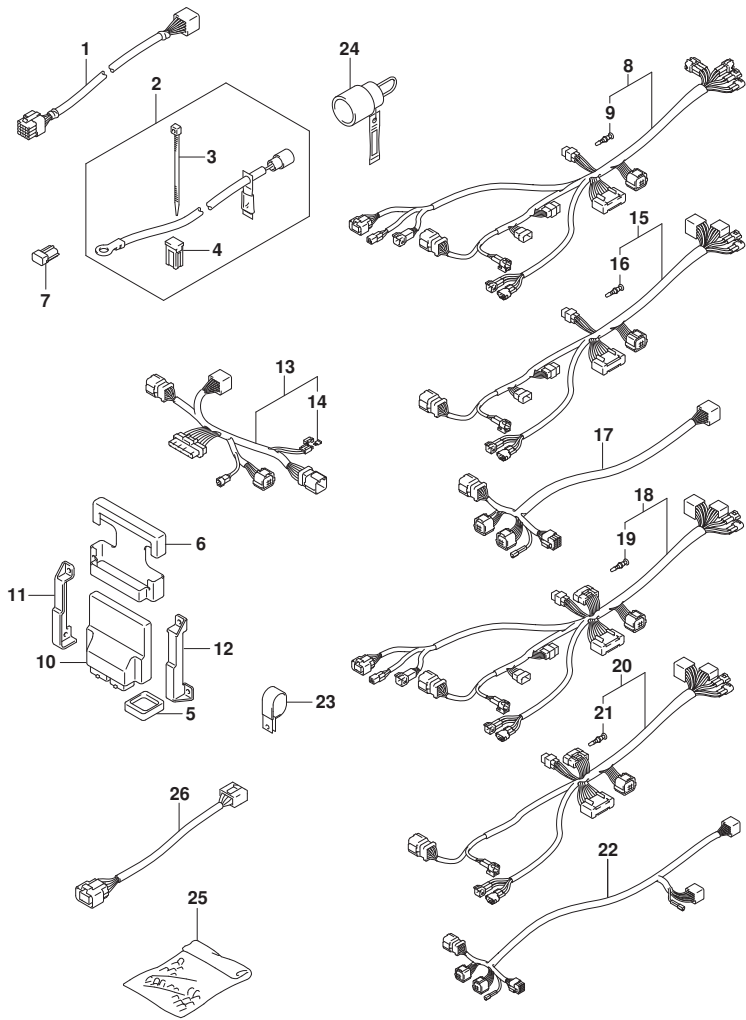


FIG.522A (1-I-14) OPT:HARNESS (1) (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-98J52	WIRE ASSY,REMOTE CONTROL	1	
2	33830-98J11	SET,BATTERY ISOLATOR LEAD	1	
3	09407-10404	.CLAMP (L:100)	2	
4	09481-40401	.FUSE (40A)	1	
5	33911-88BL0	CAP,RUBBER	1	
6	33925-93J00	CUSHION,ENGINE CONTROL UNIT	AR	
7	33926-98J00	RESISTOR,TERMINAL	AR	
8	36623-98J21	HARNESS ASSY,BCM NO.1 FOR SNGL	1	
9	36615-96300	.TERMINAL	4	
10-1	36770-98J13	CONTROLLER ASSY,BOAT ELECTRIC	1	
10-2	36770-98J22	CONTROLLER ASSY,BOAT ELECTRIC	2	
11	36775-98J00	HOLDER,BCM,L	AR	
12	36776-98J00	HOLDER,BCM,R	AR	
13	36622-98J00	HARNESS ASSY,DUAL STATION,MAIN	AR	
14	09481-10501	.FUSE (10A)	AR	
15	36624-98J02	HARNESS ASSY,BCM NO.2 FOR SNGL	1	
16	36615-96300	.TERMINAL	2	
17	36621-98J00	HARNESS ASSY,DUAL ENGINE	AR	
18	36623-98J30	HARNESS ASSY,BCM NO.1 FOR MULT	1	
19	36615-96300	.TERMINAL	5	
20	36624-98J11	HARNESS ASSY,BCM NO.2 FOR MULT	1	
21	36615-96300	.TERMINAL	2	
22	36621-98J10	HARNESS ASSY,TRIPLE ENGINE	1	
23	09403-13402	CLAMP (ID:13)	AR	
24	36612-98J20	CONNECTOR,COUNTER SELECT	AR	
25	36990-87D00	TERMINAL & SLEEVE SET	1	
26	36667-96L20	WIRE,GAUGE EXT	1	

FIG.522B

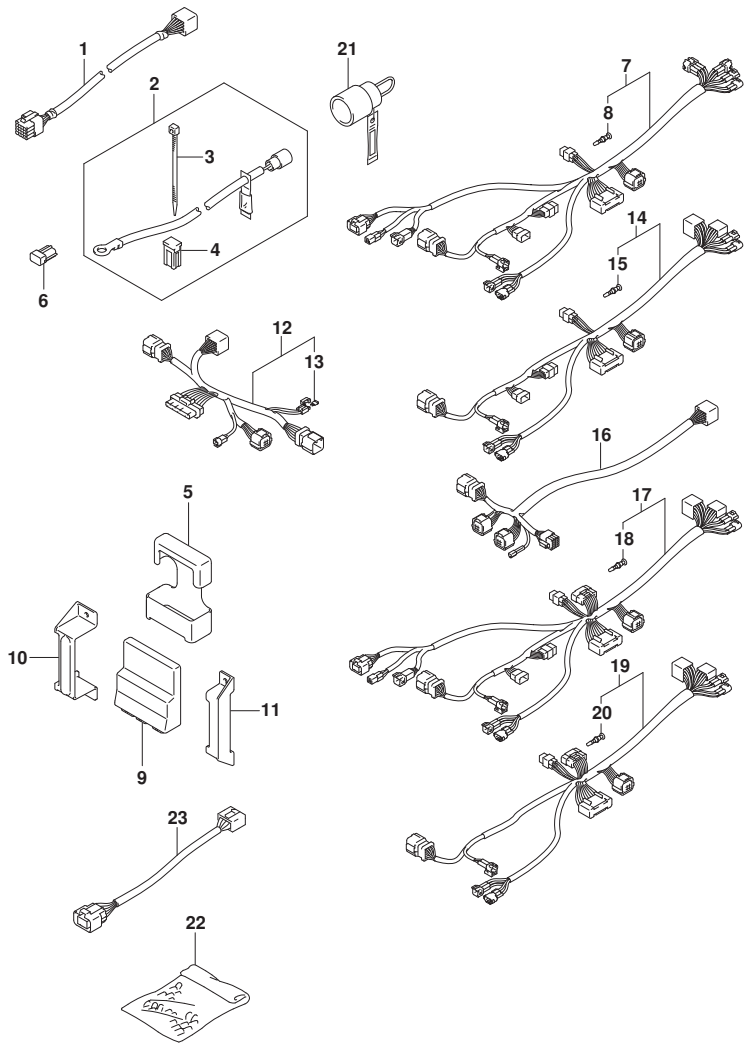


FIG.522B (1-I-15) OPT:HARNESS (1) (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-98L00	WIRE ASSY,REMOTE CONTROL (L:65 00)	1	
2	33830-98J11	SET,BATTERY ISOLATOR LEAD	1	
3	09407-10404	.CLAMP (L:100)	2	
4	09481-40401	.FUSE (40A)	1	
5	33925-98L00	CUSHION,ENGINE CONTROL UNIT	AR	
6	33926-98L00	RESISTOR,TERMINAL	AR	
7	36623-98L00	HARNESS ASSY,BCM NO.1 SNGL	1	
8	36615-96300	.TERMINAL	7	
9	36770-98L00	CONTROLLER ASSY,BOAT ELECTRIC	1	
10	36775-98L00	HOLDER,BCM	AR	
11	36776-98L00	HOLDER,BCM	AR	
12	36622-98L00	HARNESS ASSY,DUAL STATION MAIN	AR	
13	09481-10501	.FUSE (10A)	AR	
14	36624-98L00	HARNESS ASSY,BCM NO.2 SNGL	1	
15	36615-96300	.TERMINAL	7	
16	36621-98L00	HARNESS ASSY,DUAL ENGINE	AR	
17	36623-98L10	HARNESS ASSY,BCM NO.1 FOR MULT	1	
18	36615-96300	.TERMINAL	5	
19	36624-98L10	HARNESS ASSY,BCM NO.2 MULTI	1	
20	36615-96300	.TERMINAL	2	
21	36612-98J20	CONNECTOR,COUNTER SELECT	AR	
22	36990-87D00	TERMINAL & SLEEVE SET	1	
23	36667-96L60	WIRE,GAUGE EXT	1	

FIG.523A

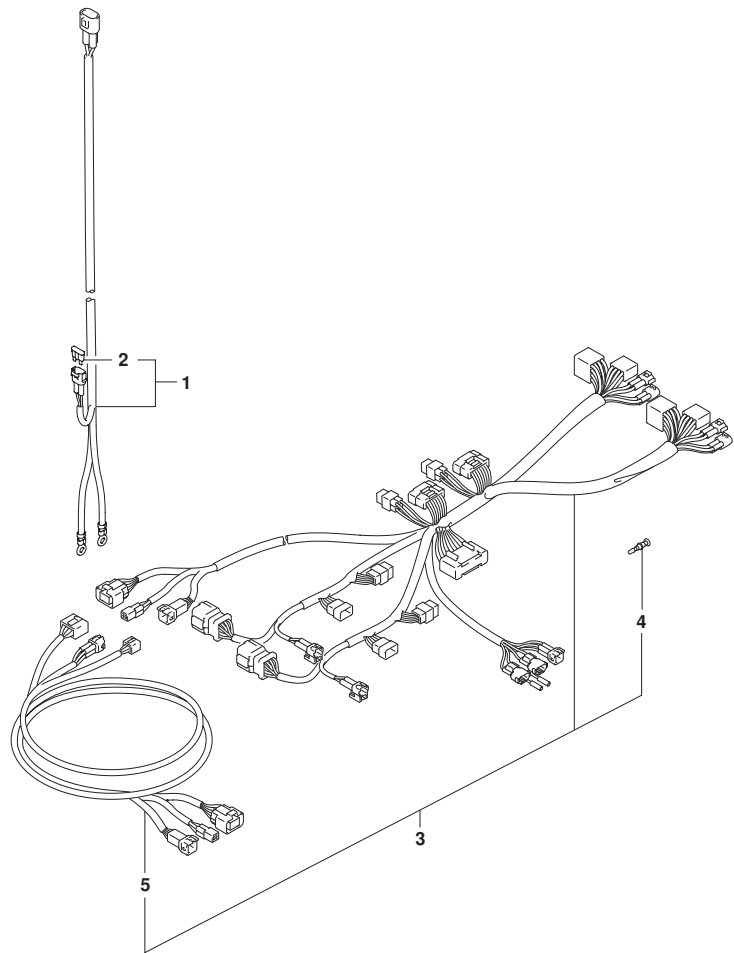


FIG.523A (1-I-16) OPT:HARNESS (2) (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36625-98J10	WIRE ASSY,BATTERY (L:2250)	AR	
2	09481-30501	.FUSE (30A)	AR	
3	36623-98J40	HARNESS ASSY,BCM FOR QUADRUPLE	1	
4	36615-96300	.TERMINAL	8	
5	36627-98J00	.HARNESS,R/CON EXTENSION	1	

FIG.523B


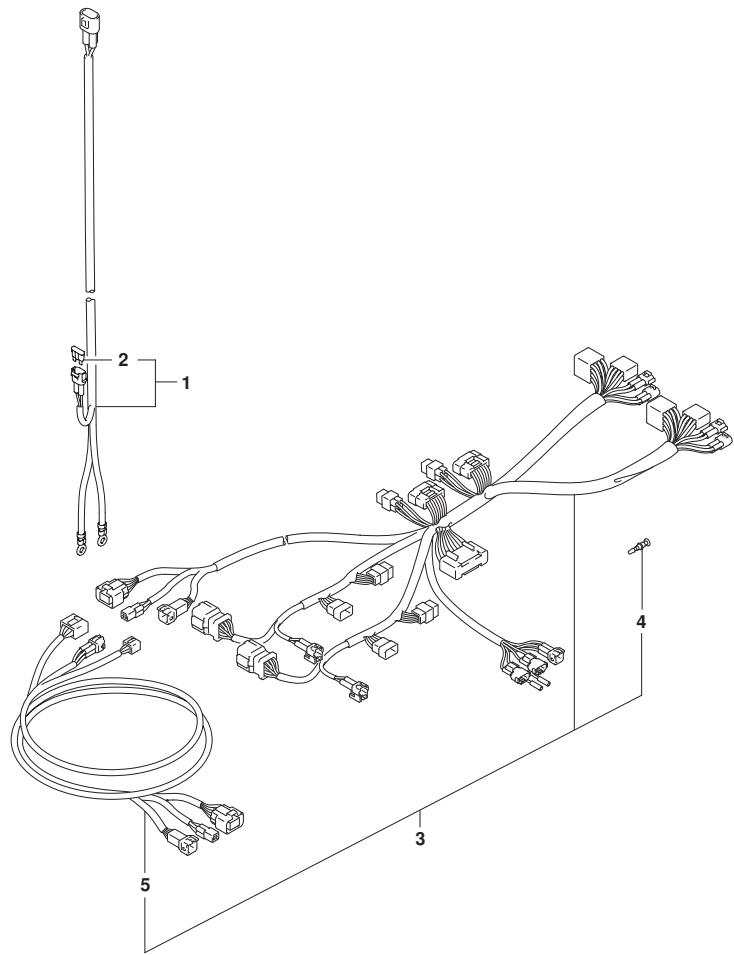


FIG.523B (1-J-2) OPT:HARNESS (2) (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36625-98J10	WIRE ASSY,BATTERY (L:2250)	AR	
1-2	36625-98J20	WIRE ASSY,BATTERY (L:6100)	AR	
2	09481-30504	.FUSE (30A)	AR	
3	36623-98L40	HARNESS ASSY,BCM NO.1 QDRPL	1	
4	36615-96300	.TERMINAL	7	
5	36627-98L00	.HARNESS,R/CON EXT	1	

FIG.530A

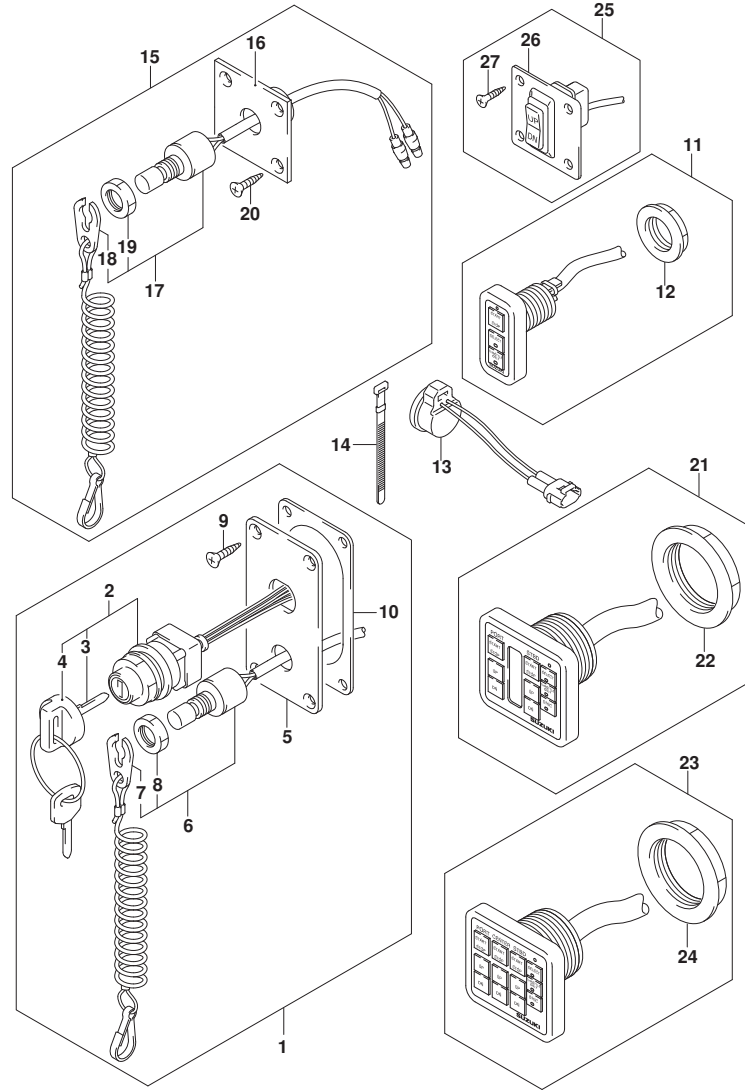

DF350A_E11_022_530A
OPT:SWITCH

FIG.530A (1-J-3) OPT:SWITCH (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98J07	PANEL ASSY,MAIN SWITCH	1	
2	37110-98J02	..SWITCH ASSY,MAIN	1	
3-1	37141-99EA0	..KEY (941)	1	
3-2	37141-99EB0	..KEY (942)	1	
3-3	37141-99E00	..KEY (931)	1	
3-4	37141-99E10	..KEY (932)	1	
3-5	37141-99E20	..KEY (933)	1	
3-6	37141-99E30	..KEY (934)	1	
3-7	37141-99E40	..KEY (935)	1	
3-8	37141-99E50	..KEY (936)	1	
3-9	37141-99E60	..KEY (937)	1	
3-10	37141-99E70	..KEY (938)	1	
3-11	37141-99E80	..KEY (939)	1	
3-12	37141-99E90	..KEY (940)	1	
4	37143-99E01	..CAP,KEY	1	
5	37139-98J10	..PANEL,MAIN SW	1	
6	37820-93J11	..SWITCH ASSY,EMERGENCY	1	
7	37823-92E02	..PLATE ASSY,EMERGENCY SW LOCK	1	
8	37826-92J10	..NUT	1	
9	03122-05169	..SCREW	4	
10	37114-98J00	..SHEET,MAIN SW PANEL	1	
11	37100-98J11	PANEL ASSY,SINGLE	1	
12	37112-98J00	..NUT	1	
13	38500-93J90	BUZZER,WARNING	AR	
14	09407-08401	CLAMP (L:80)	AR	
15	37803-93J06	PANEL ASSY,EMERGENCY SW	1	
16	37825-99E10	..PANEL,EMERGENCY STOP SW	1	
17	37820-93J11	..SWITCH ASSY,EMERGENCY	1	
18	37823-92E02	..PLATE ASSY,EMERGENCY SW LOCK	1	
19	37826-92J10	..NUT	1	
20	03122-05165	..SCREW	4	
21	37100-98J21	PANEL ASSY,DUAL	AR	
22	37112-98J10	..NUT	AR	
23	37100-98J31	PANEL ASSY,TRIPLE	1	
24	37112-98J10	..NUT	1	

DF350A_E11_022

FIG.530A


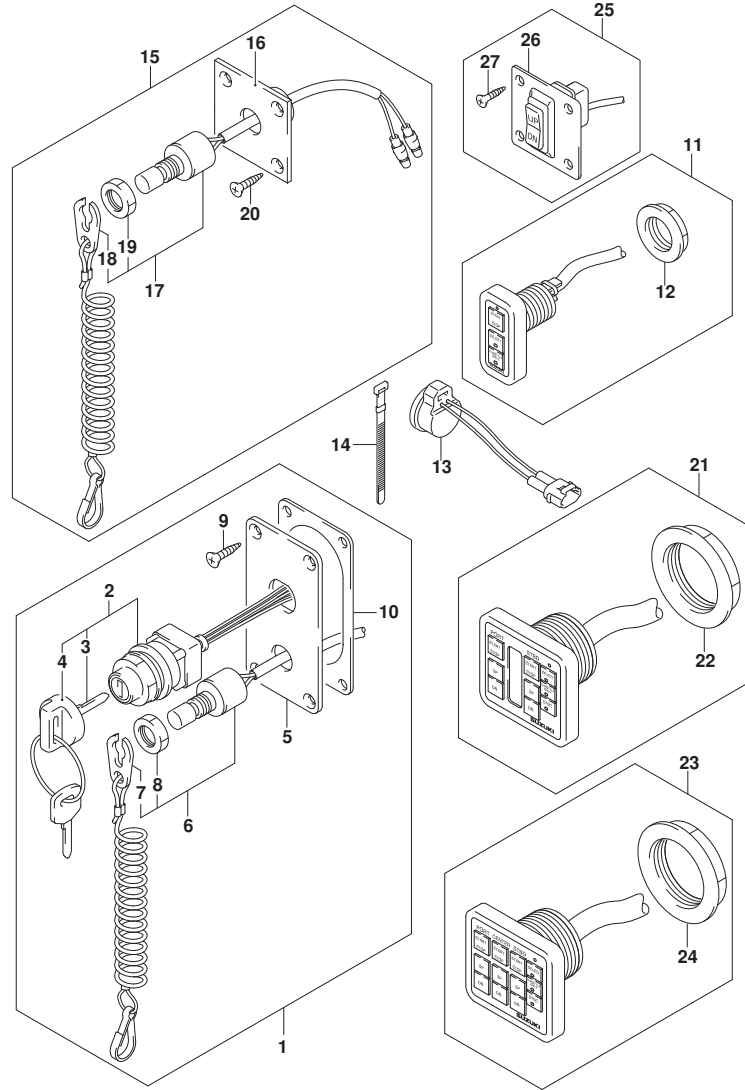


FIG.530A (1-J-4) OPT:SWITCH (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	37860-87L00	PANEL ASSY,TROLLING CONTROL SW	1	
26	37862-87L00	.PANEL	1	
27	09131-05004	.SCREW (5X16)	4	

FIG.530B

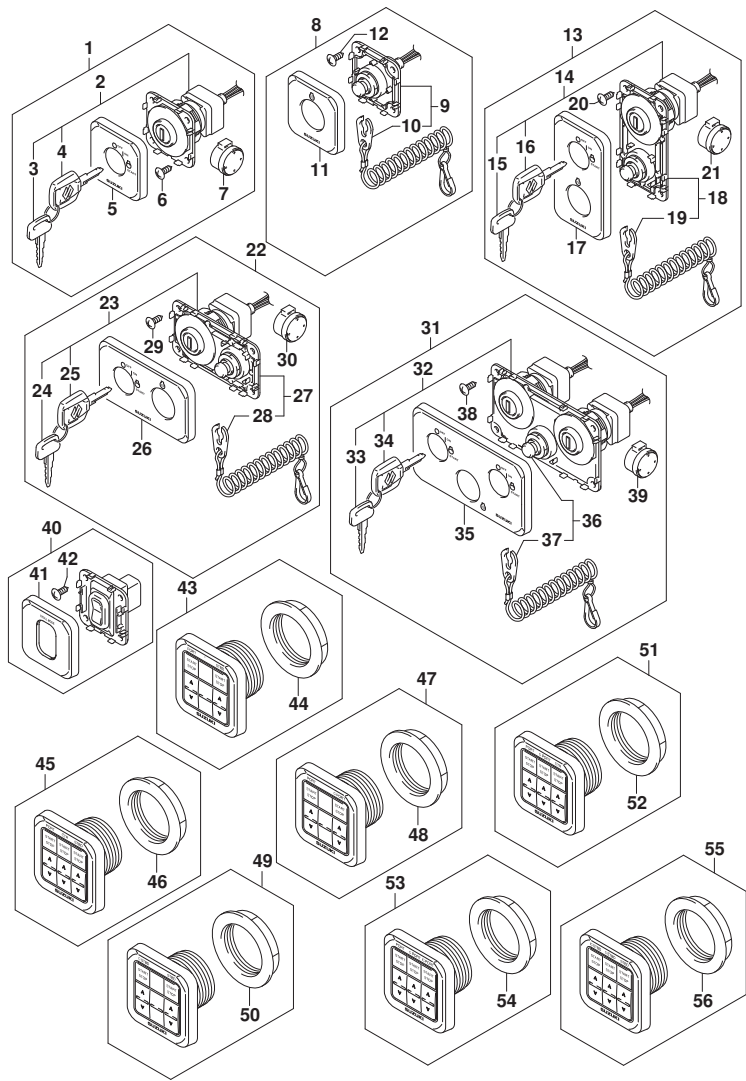


DF350A_E11_022_530B
OPT:SWITCH

FIG.530B (1-J-5) OPT:SWITCH (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98L00	PANEL ASSY,MAIN SWITCH	1	
2	37110-98L00	..SWITCH ASSY,MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
3-7	37141-99E60	..KEY (937)	1	
3-8	37141-99E70	..KEY (938)	1	
3-9	37141-99E80	..KEY (939)	1	
3-10	37141-99E90	..KEY (940)	1	
3-11	37141-99EA0	..KEY (941)	1	
3-12	37141-99EB0	..KEY (942)	1	
4-1	37141-98L00	..KEY (931)	1	
4-2	37141-98L10	..KEY (932)	1	
4-3	37141-98L20	..KEY (933)	1	
4-4	37141-98L30	..KEY (934)	1	
4-5	37141-98L40	..KEY (935)	1	
4-6	37141-98L50	..KEY (936)	1	
4-7	37141-98L60	..KEY (937)	1	
4-8	37141-98L70	..KEY (938)	1	
4-9	37141-98L80	..KEY (939)	1	
4-10	37141-98L90	..KEY (940)	1	
4-11	37141-98LA0	..KEY (941)	1	
4-12	37141-98LB0	..KEY (942)	1	
5	37138-98L00	..COVER,MAIN SW PANEL	1	
6	03142-05169	..SCREW	4	
7	38500-93J90	..BUZZER,WARNING	1	
8	37803-98L00	PANEL ASSY,EMERGENCY SW	1	
9	37820-98L00	..SWITCH ASSY,EMERGENCY	1	
10	37823-98L00	..PLATE,EMERGENCY SW LOCK	1	
11	37832-98L00	..COVER,EMERGENCY SW PANEL	1	
12	03142-05169	..SCREW	4	
13	37100-98L10	PANEL ASSY,MAIN SWITCH	1	

DF350A_E11_022

FIG.530B

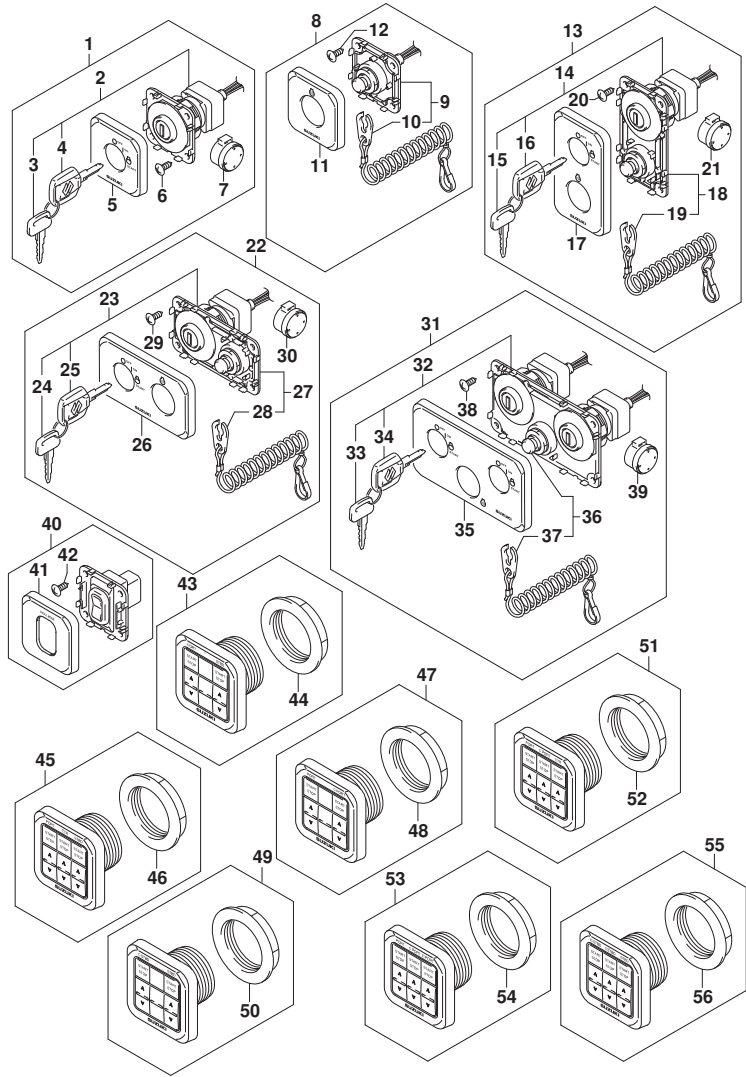


DF350A_E11_022_530B
OPT:SWITCH

FIG.530B (1-J-6) OPT:SWITCH (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14	37110-98L00	.SWITCH ASSY,MAIN	1	
15-1	37141-99E00	..KEY (931)	1	
15-2	37141-99E10	..KEY (932)	1	
15-3	37141-99E20	..KEY (933)	1	
15-4	37141-99E30	..KEY (934)	1	
15-5	37141-99E40	..KEY (935)	1	
15-6	37141-99E50	..KEY (936)	1	
15-7	37141-99E60	..KEY (937)	1	
15-8	37141-99E70	..KEY (938)	1	
15-9	37141-99E80	..KEY (939)	1	
15-10	37141-99E90	..KEY (940)	1	
15-11	37141-99EA0	..KEY (941)	1	
15-12	37141-99EB0	..KEY (942)	1	
16-1	37141-98L00	..KEY (931)	1	
16-2	37141-98L10	..KEY (932)	1	
16-3	37141-98L20	..KEY (933)	1	
16-4	37141-98L30	..KEY (934)	1	
16-5	37141-98L40	..KEY (935)	1	
16-6	37141-98L50	..KEY (936)	1	
16-7	37141-98L60	..KEY (937)	1	
16-8	37141-98L70	..KEY (938)	1	
16-9	37141-98L80	..KEY (939)	1	
16-10	37141-98L90	..KEY (940)	1	
16-11	37141-98LA0	..KEY (941)	1	
16-12	37141-98LB0	..KEY (942)	1	
17	37138-98L10	.COVER,MAIN SW PANEL VERT	1	
18	37820-98L00	.SWITCH ASSY,EMERGENCY	1	
19	37823-98L00	..PLATE,EMERGENCY SW LOCK	1	
20	03142-05169	.SCREW	4	
21	38500-93J90	..BUZZER,WARNING	1	
22	37100-98L20	PANEL ASSY,MAIN SWITCH HORIZ	1	
23	37110-98L00	.SWITCH ASSY,MAIN	1	
24-1	37141-99E00	..KEY (931)	1	
24-2	37141-99E10	..KEY (932)	1	
24-3	37141-99E20	..KEY (933)	1	

DF350A_E11_022

FIG.530B

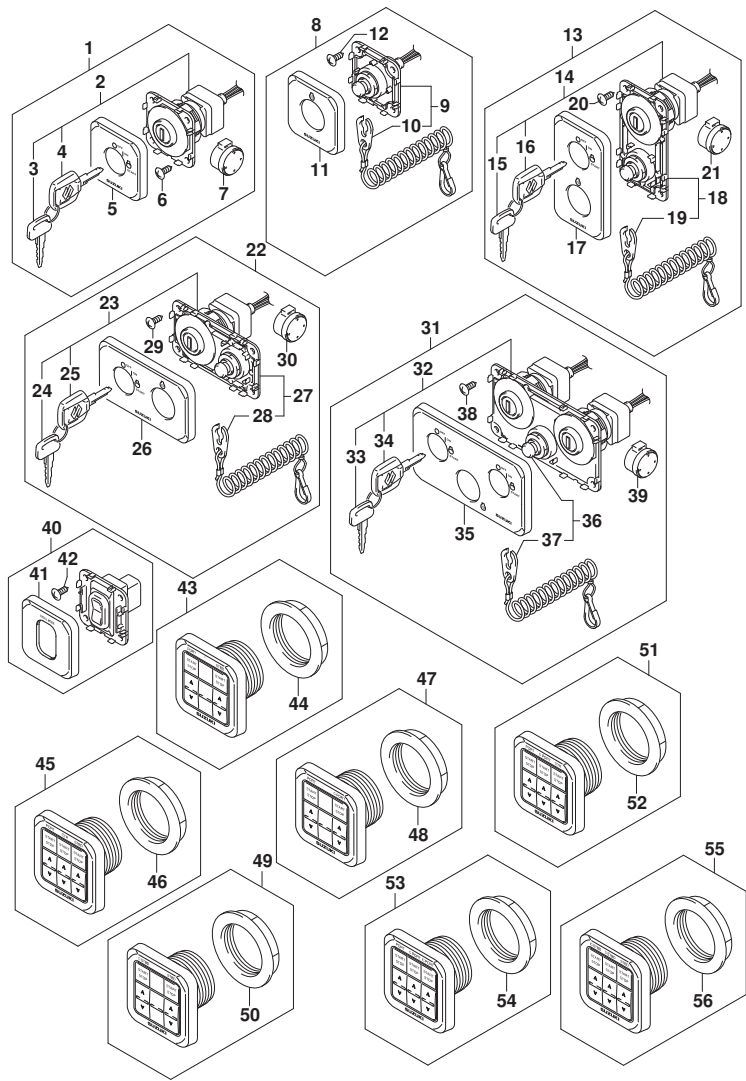


DF350A_E11_022_530B
OPT:SWITCH

FIG.530B (1-J-7) OPT:SWITCH (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24-4	37141-99E30	..KEY (934)	1	
24-5	37141-99E40	..KEY (935)	1	
24-6	37141-99E50	..KEY (936)	1	
24-7	37141-99E60	..KEY (937)	1	
24-8	37141-99E70	..KEY (938)	1	
24-9	37141-99E80	..KEY (939)	1	
24-10	37141-99E90	..KEY (940)	1	
24-11	37141-99EA0	..KEY (941)	1	
24-12	37141-99EB0	..KEY (942)	1	
25-1	37141-98L00	..KEY (931)	1	
25-2	37141-98L10	..KEY (932)	1	
25-3	37141-98L20	..KEY (933)	1	
25-4	37141-98L30	..KEY (934)	1	
25-5	37141-98L40	..KEY (935)	1	
25-6	37141-98L50	..KEY (936)	1	
25-7	37141-98L60	..KEY (937)	1	
25-8	37141-98L70	..KEY (938)	1	
25-9	37141-98L80	..KEY (939)	1	
25-10	37141-98L90	..KEY (940)	1	
25-11	37141-98LA0	..KEY (941)	1	
25-12	37141-98LB0	..KEY (942)	1	
26	37138-98L20	..COVER,MAIN SW PANEL HORIZ	1	
27	37820-98L00	..SWITCH ASSY,EMERGENCY	1	
28	37823-98L00	..PLATE,EMERGENCY SW LOCK	1	
29	03142-05169	..SCREW	4	
30	38500-93J90	..BUZZER,WARNING	1	
31	37100-98L30	PANEL ASSY,MAIN SWITCH MULTI	1	
32	37110-98L00	..SWITCH ASSY,MAIN	2	
33-1	37141-99E00	..KEY (931)	2	
33-2	37141-99E10	..KEY (932)	2	
33-3	37141-99E20	..KEY (933)	2	
33-4	37141-99E30	..KEY (934)	2	
33-5	37141-99E40	..KEY (935)	2	
33-6	37141-99E50	..KEY (936)	2	
33-7	37141-99E60	..KEY (937)	2	

DF350A_E11_022

FIG.530B

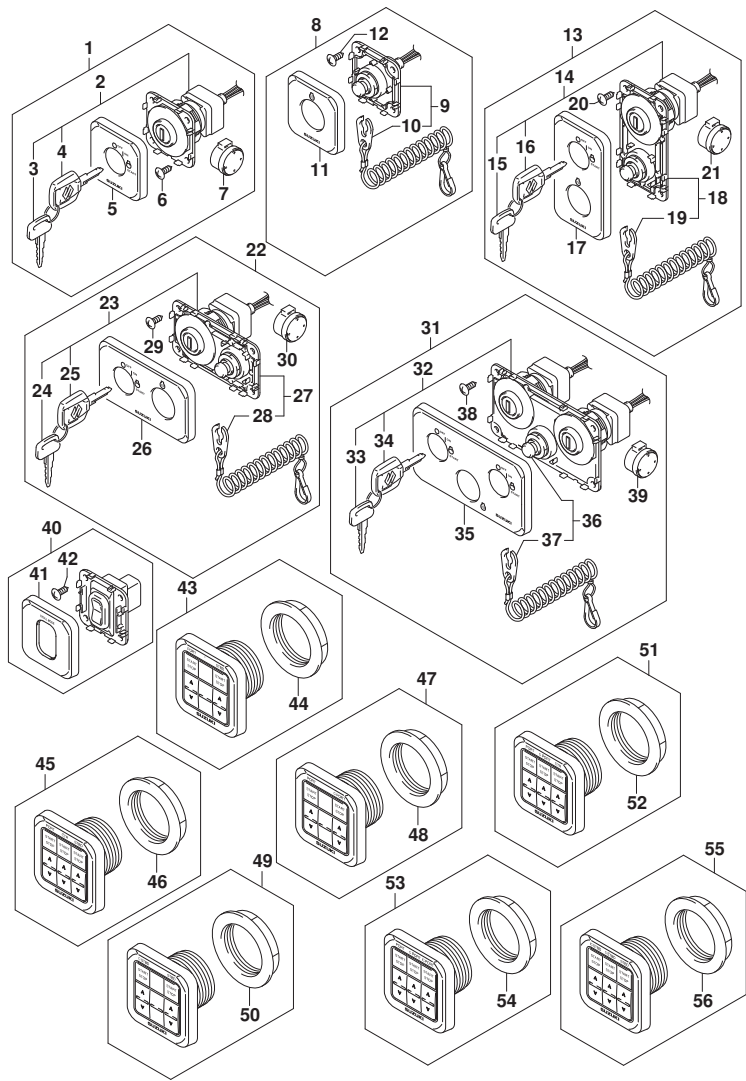

DF350A_E11_022_530B
OPT:SWITCH

FIG.530B (1-J-8) OPT:SWITCH (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33-8	37141-99E70	..KEY (938)	2	
33-9	37141-99E80	..KEY (939)	2	
33-10	37141-99E90	..KEY (940)	2	
33-11	37141-99EA0	..KEY (941)	2	
33-12	37141-99EB0	..KEY (942)	2	
34-1	37141-98L00	..KEY (931)	2	
34-2	37141-98L10	..KEY (932)	2	
34-3	37141-98L20	..KEY (933)	2	
34-4	37141-98L30	..KEY (934)	2	
34-5	37141-98L40	..KEY (935)	2	
34-6	37141-98L50	..KEY (936)	2	
34-7	37141-98L60	..KEY (937)	2	
34-8	37141-98L70	..KEY (938)	2	
34-9	37141-98L80	..KEY (939)	2	
34-10	37141-98L90	..KEY (940)	2	
34-11	37141-98LA0	..KEY (941)	2	
34-12	37141-98LB0	..KEY (942)	2	
35	37138-98L30	..COVER,MAIN SW PANEL MULTIPLE	1	
36	37820-98L00	..SWITCH ASSY,EMERGENCY	1	
37	37823-98L00	..PLATE,EMERGENCY SW LOCK	1	
38	03142-05169	..SCREW	4	
39	38500-93J90	..BUZZER,WARNING	2	
40	37860-98L00	PANEL ASSY,TROLLING CONTROL SW	1	
41	37865-98L00	..COVER,TROLLING CONTROL SW	1	
42	03142-05169	..SCREW	4	
43	37120-98L00	PANEL ASSY,DUAL	1	
44	37112-98J10	..NUT	1	
45	37120-98L10	PANEL ASSY,TRIPLE	1	
46	37112-98J10	..NUT	1	
47	37120-98L20	PANEL ASSY,QDRPL PORT	1	
48	37112-98J10	..NUT	1	
49	37120-98L30	PANEL ASSY,QDRPL STBD	1	
50	37112-98J10	..NUT	1	
51	37120-98L40	PANEL ASSY,QUINTUPLE	1	
52	37112-98J10	..NUT	1	

DF350A_E11_022

FIG.530B

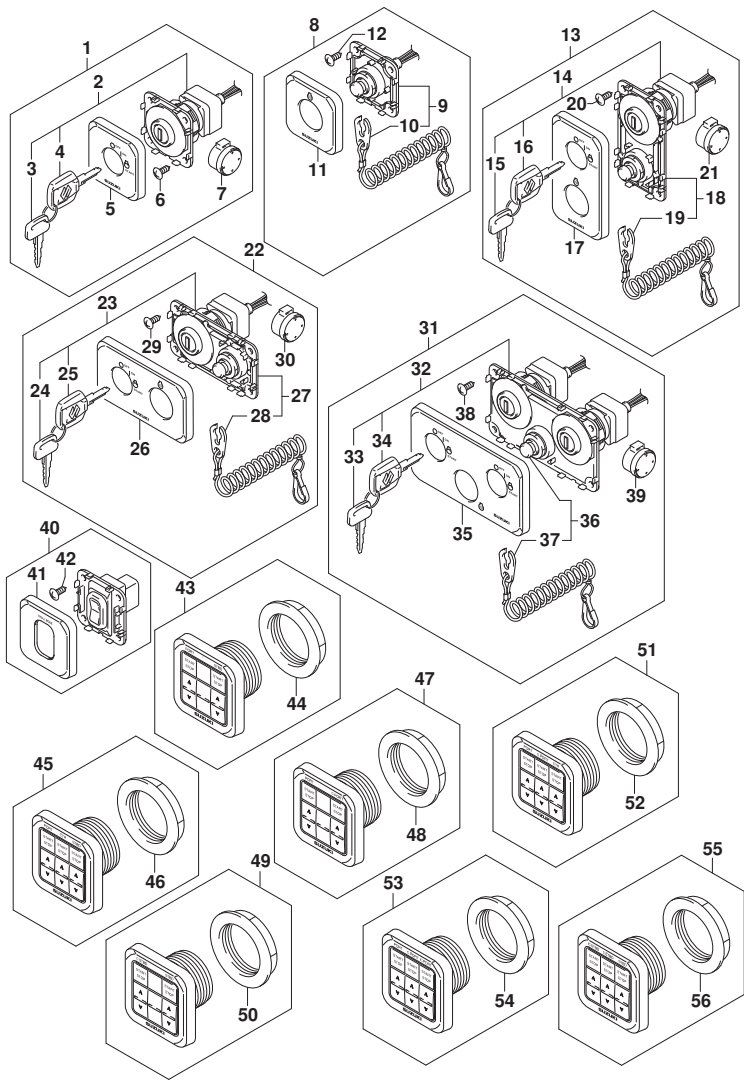


FIG.530B (1-J-9) OPT:SWITCH (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
53	37120-98L50	PANEL ASSY,SEXTUPLE PORT	1	
54	37112-98J10	.NUT	1	
55	37120-98L60	PANEL ASSY,SEXTUPLE STBD	1	
56	37112-98J10	.NUT	1	

FIG.535A

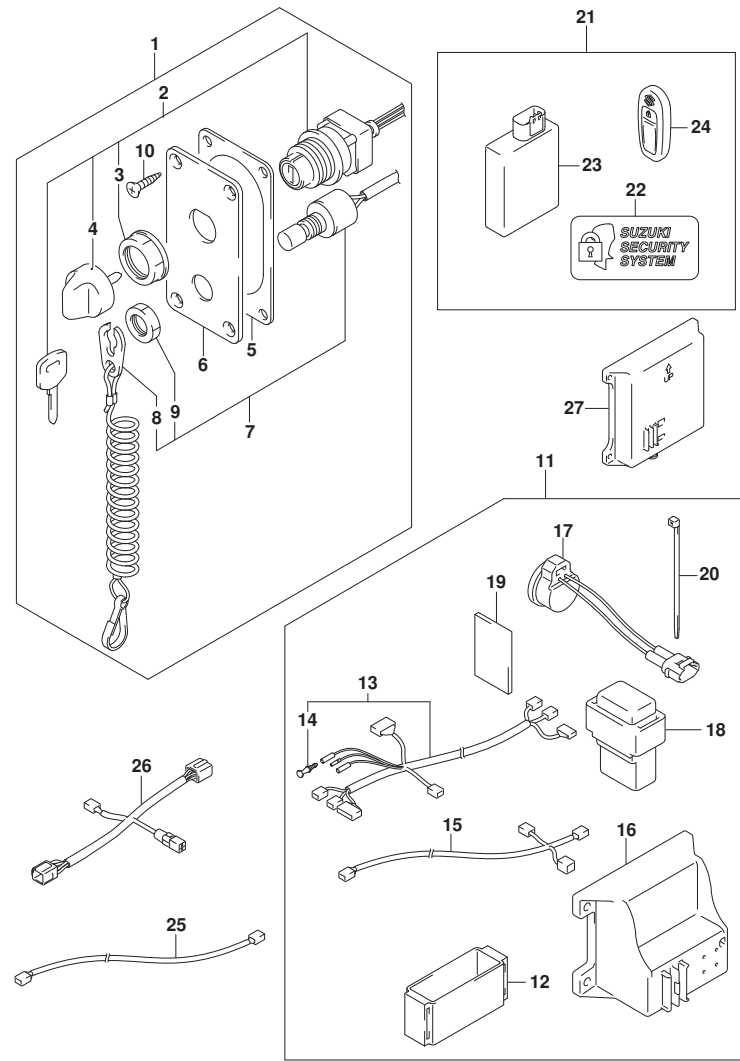


FIG.535A (1-J-10) OPT:KEY LESS START ((DF350A,DF325A):(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-96L02	PANEL ASSY,MAIN SWITCH	1	
2	37110-96L00	.SWITCH ASSY,MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
4	37143-96L00	..KNOB,MAIN SWITCH	1	
5	37114-98J00	.SHEET,MAIN SW PANEL	1	
6	37139-96L30	.PANEL,MAIN SWITCH	1	
7	37820-93J11	.SWITCH ASSY,EMERGENCY	1	
8	37823-92E02	..PLATE ASSY,EMERGENCY SW LOCK	1	
9	37826-92J10	..NUT	1	
10	03122-05169	.SCREW	4	
11	37105-96L04	HARNESS SET,KLS CONTROLLER	1	
12	32980-38F00	.CUSHION,CDI UNIT	1	
13	36623-96L02	.HARNESS ASSY,KLS CONTROLLER	1	
14	36615-96300	..TERMINAL	1	
15	36662-96L01	.HARNESS ASSY,KLS CAN (L:6500+ 110)	1	
16	37173-96L10	.HOLDER,KLS PARTS	1	
17	38500-93J90	.BUZZER,WARNING	1	
18	38860-96L01	.RELAY ASSY,KLS	1	
19	32851-93J00	.CUSHION,LEAD WIRE	1	
20	09407-14407	.CLAMP (L:145)	1	
21-1	37170-96L15	CONTROLLER SET,KLS (315MHZ)	1	DF350A:E03:020
21-2	37170-96L05	CONTROLLER SET,KLS (433MHZ)	1	DF350A:E01:020,DF325A:(020,021):E 01
22	37117-96L00	.DECAL,KLS	2	
23-1	37171-96L12	.CONTROLLER ASSY,KLS (315MHZ)	1	DF350A:E03:020
23-2	37171-96L02	.CONTROLLER ASSY,KLS (433MHZ)	1	DF350A:E01:020,DF325A:(020,021):E 01
24-1	37172-96L10	.REMOCON ASSY,KLS (315MHZ)	2	DF350A:E03:020
24-2	37172-96L01	.REMOCON ASSY,KLS (433MHZ)	2	DF350A:020:E01,DF325A:(020,021):E

FIG.535A


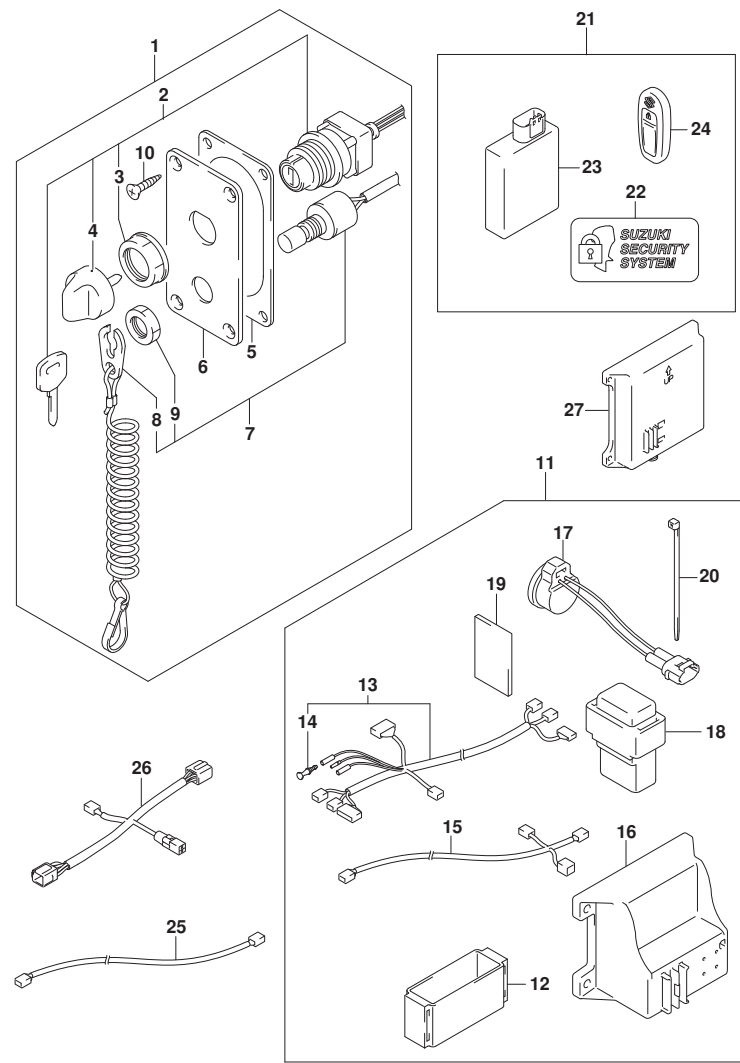


FIG.535A (1-J-11) OPT:KEY LESS START ((DF350A,DF325A):(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
			01	
25	36663-96L00	WIRE,KLS CAN EXT	1	
26	36664-96L00	HARNESS ASSY,KLS CAN (L:810+110)	AR	
27	37173-96L00	HOLDER,KLS PARTS	1	

FIG.535B

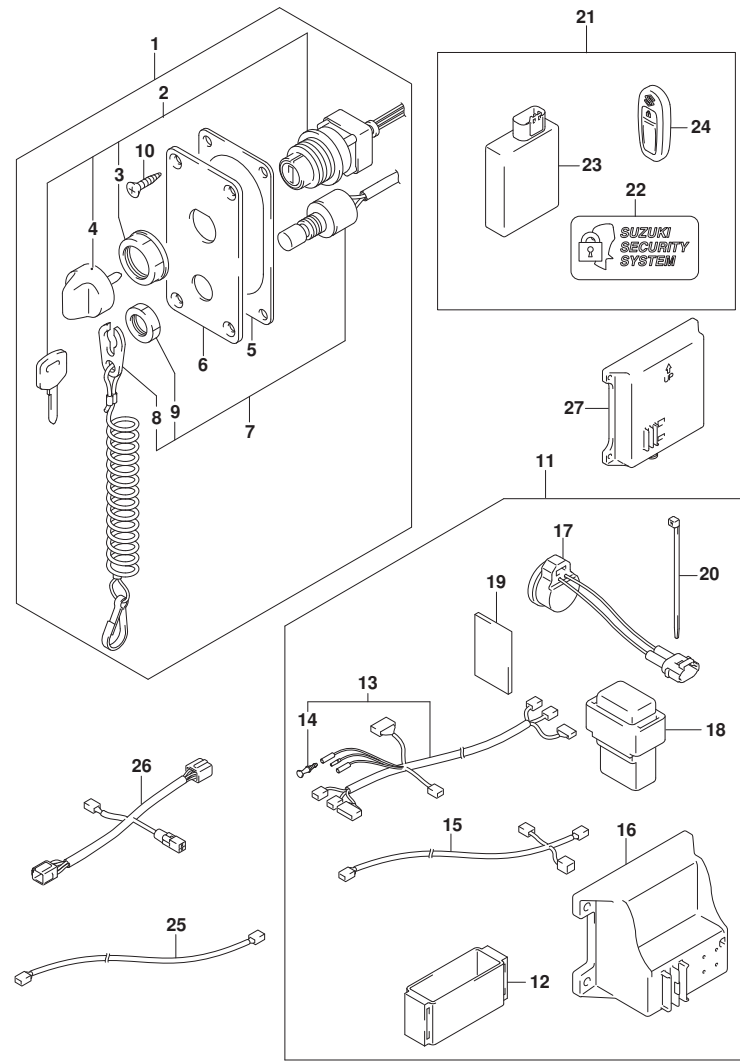

DF350A_E11_022_535B
OPT:KEY LESSSTART

FIG.535B (1-J-12) OPT:KEY LESS START (DF300B:(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-96L02	PANEL ASSY,MAIN SWITCH	1	
2	37110-96L00	.SWITCH ASSY,MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
4	37143-96L00	..KNOB,MAIN SWITCH	1	
5	37114-98J00	.SHEET,MAIN SW PANEL	1	
6	37139-96L30	.PANEL,MAIN SWITCH	1	
7	37820-93J11	.SWITCH ASSY,EMERGENCY	1	
8	37823-92E02	..PLATE ASSY,EMERGENCY SW LOCK	1	
9	37826-92J10	..NUT	1	
10	03122-05169	.SCREW	4	
11	37105-96L04	HARNESS SET,KLS CONTROLLER	1	
12	32980-38F00	.CUSHION,CDI UNIT	1	
13	36623-96L02	.HARNESS ASSY,KLS CONTROLLER	1	
14	36615-96300	..TERMINAL	1	
15	36662-96L01	.HARNESS ASSY,KLS CAN (L:6500+110)	1	
16	37173-96L10	.HOLDER,KLS PARTS	1	
17	38500-93J90	.BUZZER,WARNING	1	
18	38860-96L01	.RELAY ASSY,KLS	1	
19	32851-93J00	.CUSHION,LEAD WIRE	1	
20	09407-14407	.CLAMP (L:145)	1	
21-1	37170-96L05	CONTROLLER SET,KLS (433MHZ)	1	
21-2	37170-96L15	CONTROLLER SET,KLS (315MHZ)	1	
22	37117-96L00	.DECAL,KLS	2	
23-1	37171-96L02	.CONTROLLER ASSY,KLS (433MHZ)	1	
23-2	37171-96L12	.CONTROLLER ASSY,KLS (315MHZ)	1	
24-1	37172-96L01	.REMOCON ASSY,KLS (433MHZ)	2	
24-2	37172-96L10	.REMOCON ASSY,KLS (315MHZ)	2	
25	36663-96L00	WIRE,KLS CAN EXT	1	
26	36664-96L00	HARNESS ASSY,KLS CAN (L:810+11)	AR	

DF350A_E11_022

FIG.535B


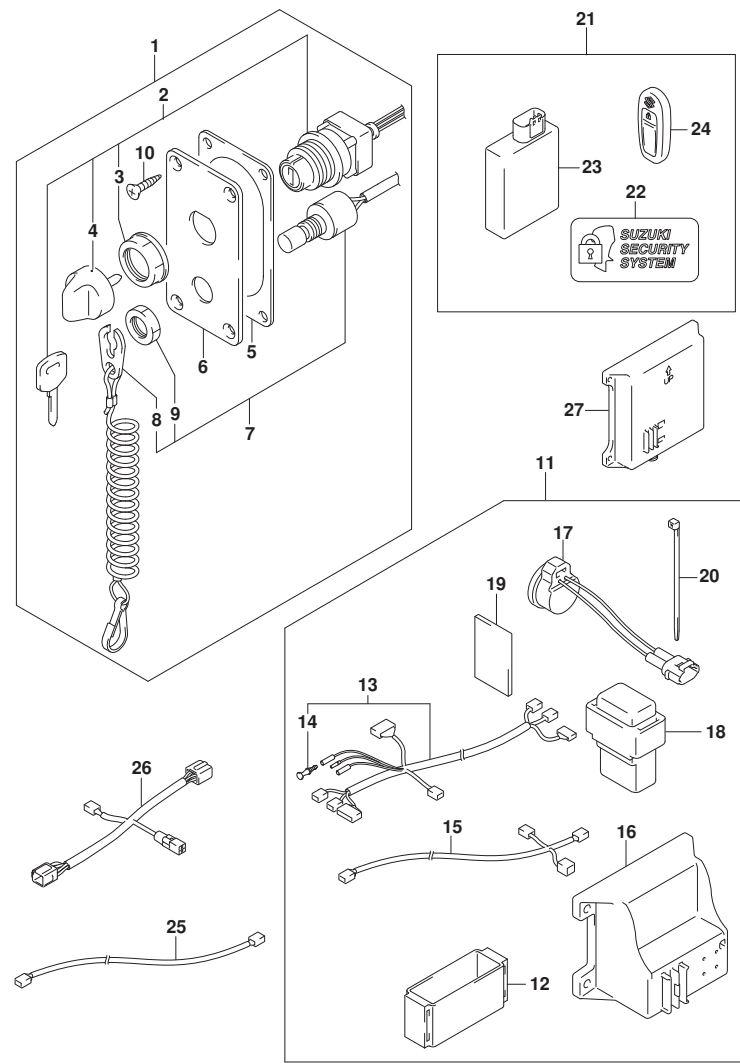


FIG.535B (1-J-13) OPT:KEY LESS START (DF300B:(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
		0)		
27	37173-96L00	HOLDER,KLS PARTS	1	

FIG.535C

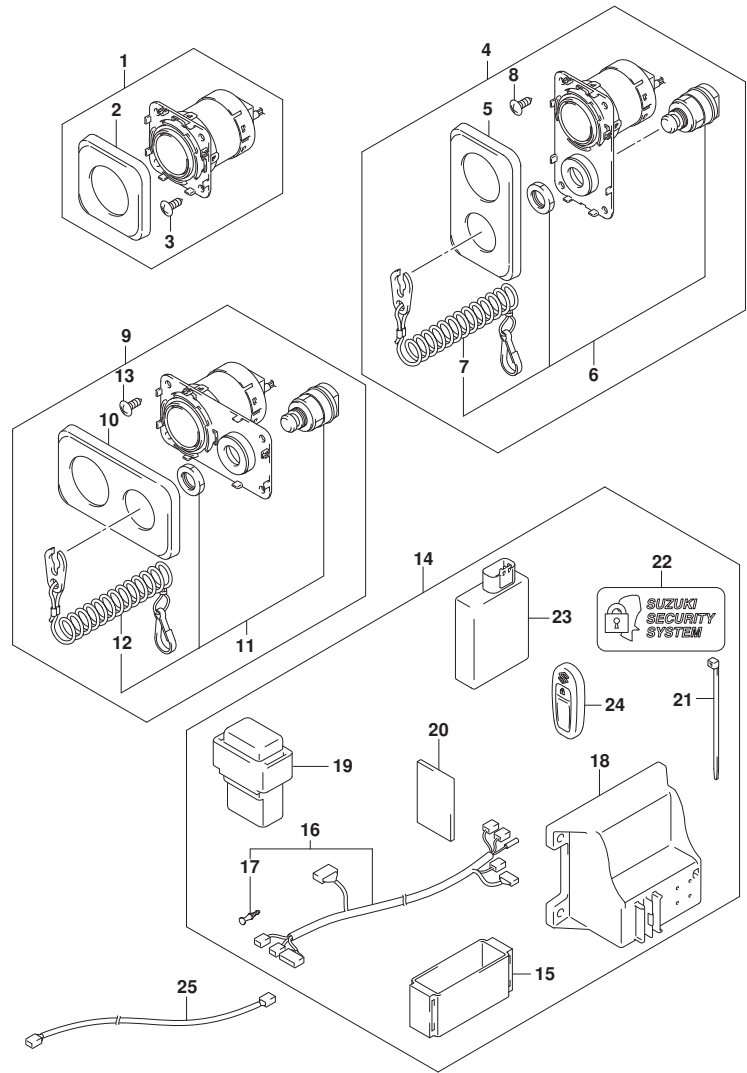


DF350A_E11_022_535C
OPT:KEY LESSSTART

FIG.535C (1-J-14) OPT:KEY LESS START (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37290-98L00	PANEL ASSY,ENG START SW	1	
2	37292-98L00	.COVER,ENG START PANEL	1	
3	03142-05169	.SCREW	4	
4	37290-98L10	PANEL ASSY,ENG START SW VERT	1	
5	37292-98L10	.COVER,ENG START PANEL VERT	1	
6	37820-98L00	.SWITCH ASSY,EMERGENCY	1	
7	37823-98L00	..PLATE,EMERGENCY SW LOCK	1	
8	03142-05169	.SCREW	4	
9	37290-98L20	PANEL ASSY,ENG START SW HORIZ	1	
10	37292-98L20	.COVER,ENG START PANEL HORIZ	1	
11	37820-98L00	.SWITCH ASSY,EMERGENCY	1	
12	37823-98L00	..PLATE,EMERGENCY SW LOCK	1	
13	03142-05169	.SCREW	4	
14-1	37105-98L00	KIT,KLS	1	DF350A,(DF325A:E01),DF300B
14-2	37105-98L10	KIT,KLS	1	DF350A,DF300B
15	32851-93J00	.CUSHION,LEAD WIRE	1	
16	32980-38F00	.CUSHION,CDI UNIT	1	
17	36623-98LA0	.HARNESS ASSY,KLS CONT	1	
18	36615-96300	..TERMINAL	1	
19	37117-96L00	.DECAL,KLS	2	
20-1	37171-98L00	.CONTROLLER ASSY,KLS 433 (433M HZ)	1	DF350A,(DF325A:E01),DF300B
20-2	37171-98L10	.CONTROLLER ASSY,KLS 315 (315M HZ)	1	DF350A,DF300B
21-1	37172-96L01	.REMOCON ASSY,KLS (433MHZ)	2	DF350A,(DF325A:E01),DF300B
21-2	37172-96L10	.REMOCON ASSY,KLS (315MHZ)	2	DF350A,DF300B
22	37173-96L10	.HOLDER,KLS PARTS	1	
23	38860-96L10	.RELAY ASSY	1	
24	09407-14407	.CLAMP (L:145)	1	
25	36627-98L20	HARNESS,CAN EXT	1	

DF350A_E11_022

FIG.540A

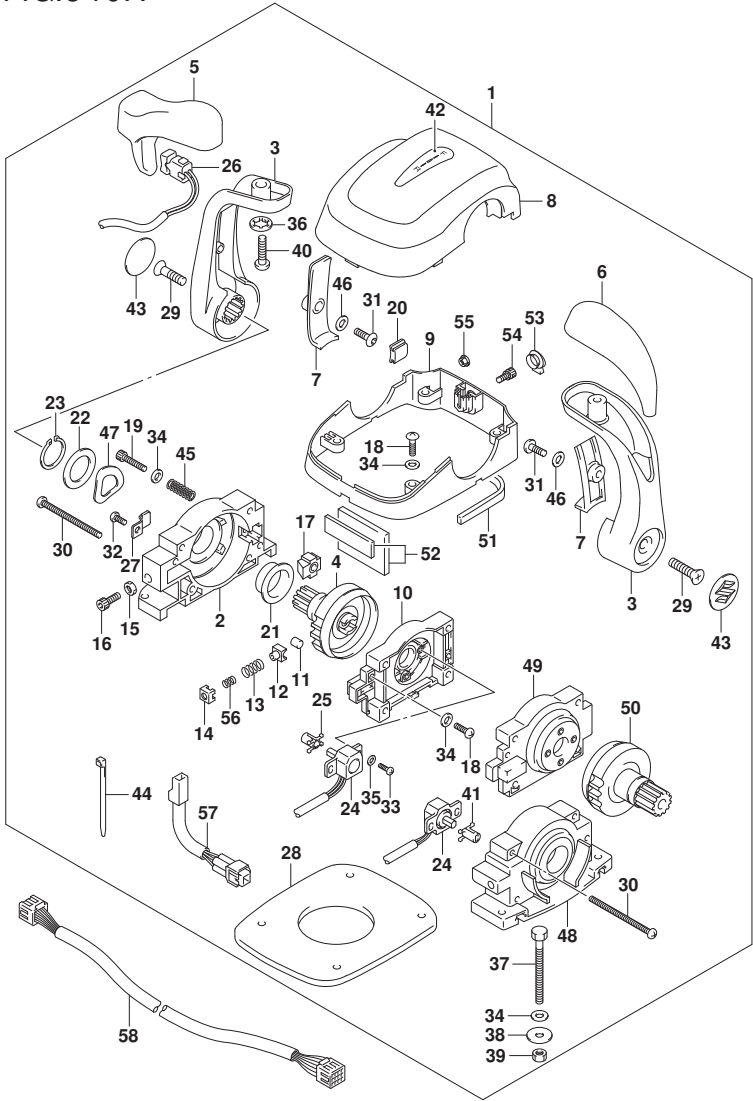


DF350A_E11_022_540A
OPT:REMOTE CONTROL ASSYDUAL

FIG.540A (1-J-15) OPT:REMOTE CONTROL ASSY DUAL (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J16	REMOTE CONTROL ASSY,MULTIPLE	1	
2	67211-98J20	.HOUSING	1	
3	67251-98J00	.LEVER,HANDLE	2	
4	67246-98J10	.SHAFT,DRIVE REMOCON	1	
5	67261-98J00	.GRIP,NO.1	1	
6	67261-98J10	.GRIP,NO.2	1	
7	67263-98J00	.COVER,LEVER	2	
8	67212-98J30	.COVER,REMOCON UPPER	1	UPPER
9	67271-98J40	.COVER,REMOCON BOTTOM	1	
10	67222-98J10	.PANEL ASSY,BACK	1	
11	67236-98J10	.ROLLER,DETENT	2	
12	67235-98J10	.GUIDE,DETENT ROLLER	2	
13	67237-98J40	.SPRING,DETENT	2	
14	67233-98J10	.HOLDER,DETENT SPRING	2	
15	67287-92E00	.NUT (M5)	2	
16	67239-98J00	.SCREW,DETENT ADJUSTMENT (5X14)	2	
17	67223-98J00	.PAD,BRAKE	2	
18	67296-98J50	.SCREW (5X18)	8	
19	67296-98JA0	.SCREW (4X10)	2	
20	67272-98J10	.GROMMET,REMOCON COVER	2	
21	67252-98J10	.BUSH,DRIVE SHAFT	2	
22	67288-98J20	.WASHER	2	
23	67292-98J00	.C RING	2	
24	15980-98J00	.POTENTIOMETER	2	
25	67227-98J10	.LEVER,POTENTIOMETER NO.2	1	
26	37850-98J03	.SWITCH ASSY,PTT	1	
27	67269-98J01	.CLAMP,LEAD	1	
28	67273-98J20	.PACKING	1	
29	67296-98J60	.SCREW (8X30)	2	
30	67296-98J30	.SCREW (5X70)	4	
31	67296-98JG0	.SCREW (5X14)	2	
32	67296-98J00	.SCREW (5X12)	1	
33	67296-94300	.SCREW (4X10)	4	
34	67288-98J40	.WASHER,BOTTOM COVER	14	

DF350A_E11_022

FIG.540A

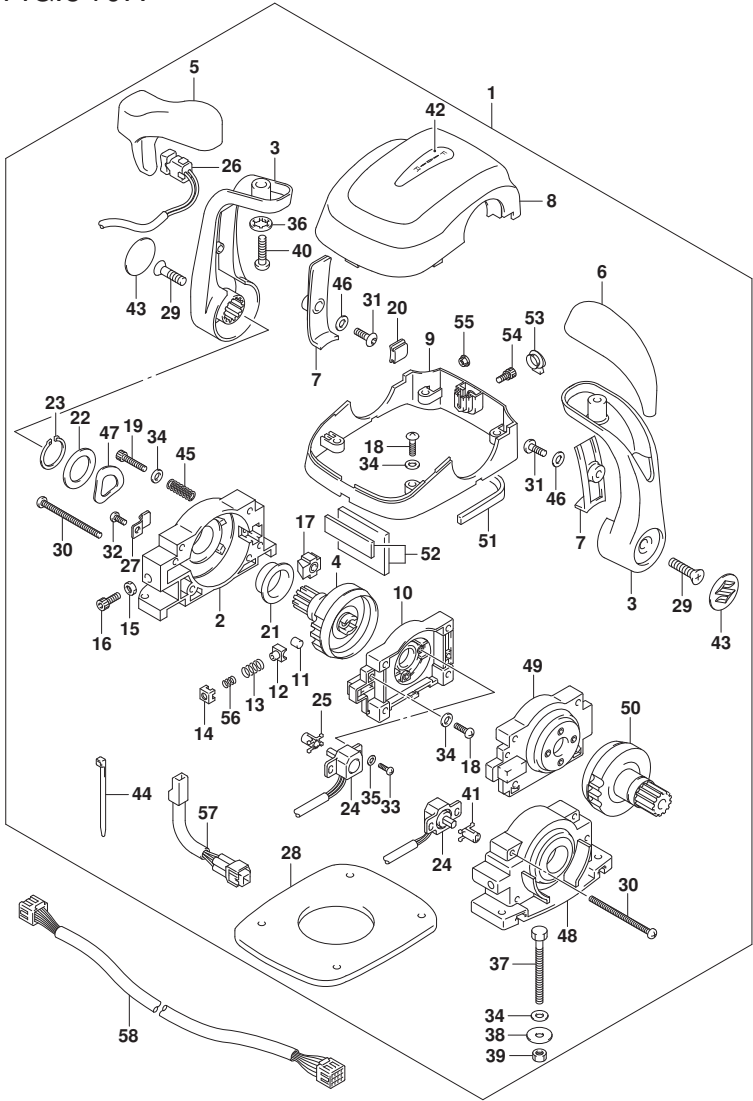

DF350A_E11_022_540A
OPT:REMOTE CONTROL ASSYDUAL

FIG.540A (1-J-16) OPT:REMOTE CONTROL ASSY DUAL (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67288-98J00	.WASHER,POTENTIOMETER	4	
36	67288-92E20	.WASHER	2	
37	67226-98J00	.BOLT (5X50)	4	
38	09160-05024	.WASHER (5.5X16X1.5)	4	
39	67287-92E00	.NUT (M5)	4	
40	67296-98J90	.SCREW (8X30)	2	
41	67227-98J00	.LEVER,POTENTIOMETER NO.1	1	
42	67284-98J10	.MARK	1	
43	67257-98J00	.MARK,LEVER	2	
44	67269-98J30	.BAND	1	
45	67288-98J10	.WASHER,SPRING	16	
46	67288-98J30	.WASHER,LEVER COVER	2	
47	67228-98J50	.WASHER,WAVE	2	
48	67211-98J30	.HOUSING,REMOCON	1	
49	67222-98J20	.PANEL ASSY,BACK	1	
50	67246-98J20	.SHAFT,DRIVE REMOCON	1	
51	67273-98J10	.PACKING,FRONT	1	
52	67273-98J30	.PACKING,REAR	1	
53	67277-98J00	.GROMMET,REMOCON BOTTOM COVER	1	
54	67296-98JF0	.BOLT,UPPER COVER (5X14)	1	
55	67297-98J00	.NUT,UPPER COVER BOLT	1	
56	67237-98J50	.SPRING,DETENT	2	
57	36890-98J00	.HARNES,CONDENSER ADAPTER	1	
58-1	36620-98J31	WIRE ASSY,REMOTE CONTROL (L:65 00)	1	
58-2	36620-98J42	WIRE ASSY,REMOTE CONTROL (L:95 00)	1	

DF350A_E11_022

FIG.540B

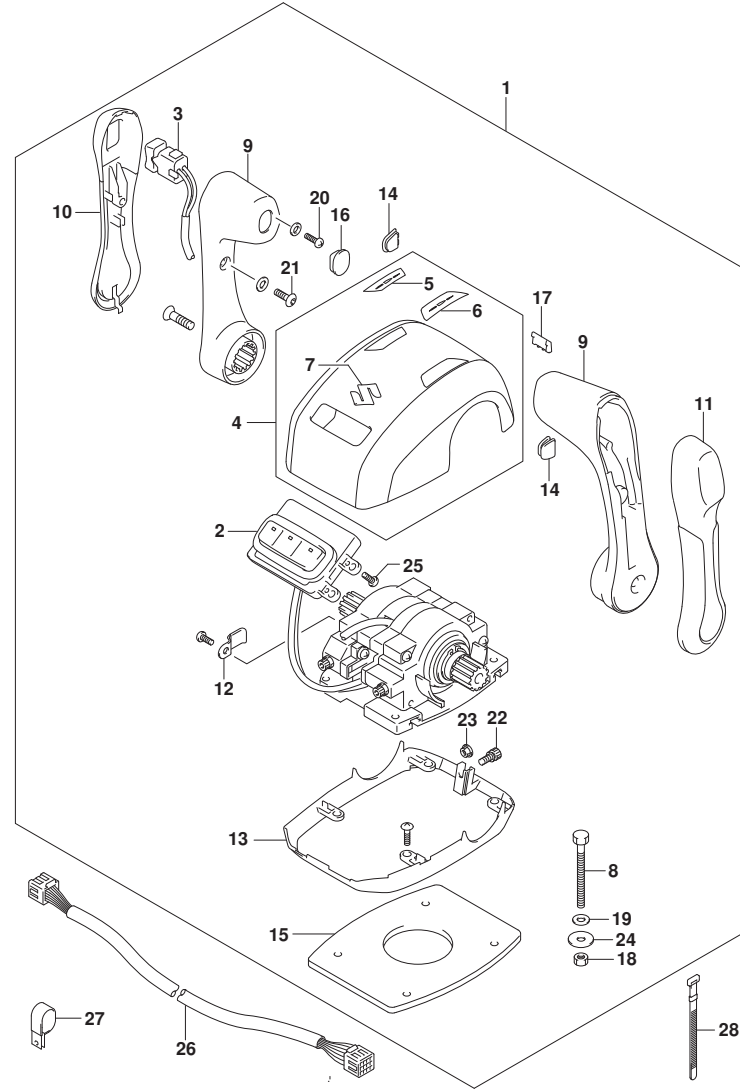


FIG.540B (1-K-2) OPT:REMOTE CONTROL ASSY DUAL (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98L10	R/CON ASSY,MULTIPLE TOP MOUNT	1	
2	37130-98L10	.SWITCH ASSY,BOAT CONTROL	1	
3	37850-98L00	.SWITCH ASSY,PTT	1	
4	67212-98L10	.COVER,R/CON UPPER	1	
5	67284-98L00	..MARK,HANDLE LEVER	1	
6	67284-98L10	..MARK,HANDLE LEVER	1	
7	68111-88L00	..EMBLEM,MARK	1	
8	67226-98J00	.BOLT (5X50)	4	
9	67261-98L00	.GRIP,R/CON NO.1	2	
10	67261-98L10	.GRIP,R/CON NO.2	1	
11	67261-98L20	.GRIP,R/CON NO.3	1	
12	67269-98L00	.CLAMP,LEAD	1	
13	67271-98L10	.COVER,R/CON BOTTOM	1	
14	67272-98L10	.GROMMET,R/CON COVER	2	
15	67273-98L10	.PACKING,R/CON	1	
16	67277-98L10	.GROMMET,R/CON GRIP	2	
17	67277-98L20	.GROMMET,R/CON BOTTOM COVER	1	
18	67287-92E00	.NUT (M5)	6	
19	67288-98J40	.WASHER,BOTTOM COVER	12	
20	67296-98J50	.SCREW (5X18)	6	
21	67296-98L00	.SCREW	3	
22	67296-98L10	.BOLT,UPPER COVER	1	
23	67297-98J00	.NUT,UPPER COVER BOLT	1	
24	67288-92E50	.WASHER	4	
25	67296-88D00	.SCREW	4	
26-1	36620-98L00	WIRE ASSY,REMOTE CONTROL (L:65 00)	1	
26-2	36620-98L10	WIRE ASSY,REMOTE CONTROL (L:95 00)	1	
26-3	36620-98L20	WIRE ASSY,REMOTE CONTROL EXT (L:2000)	1	
27	09403-13402	CLAMP (ID:13)	15	
28	09407-08401	CLAMP (L:80)	1	

FIG.543A

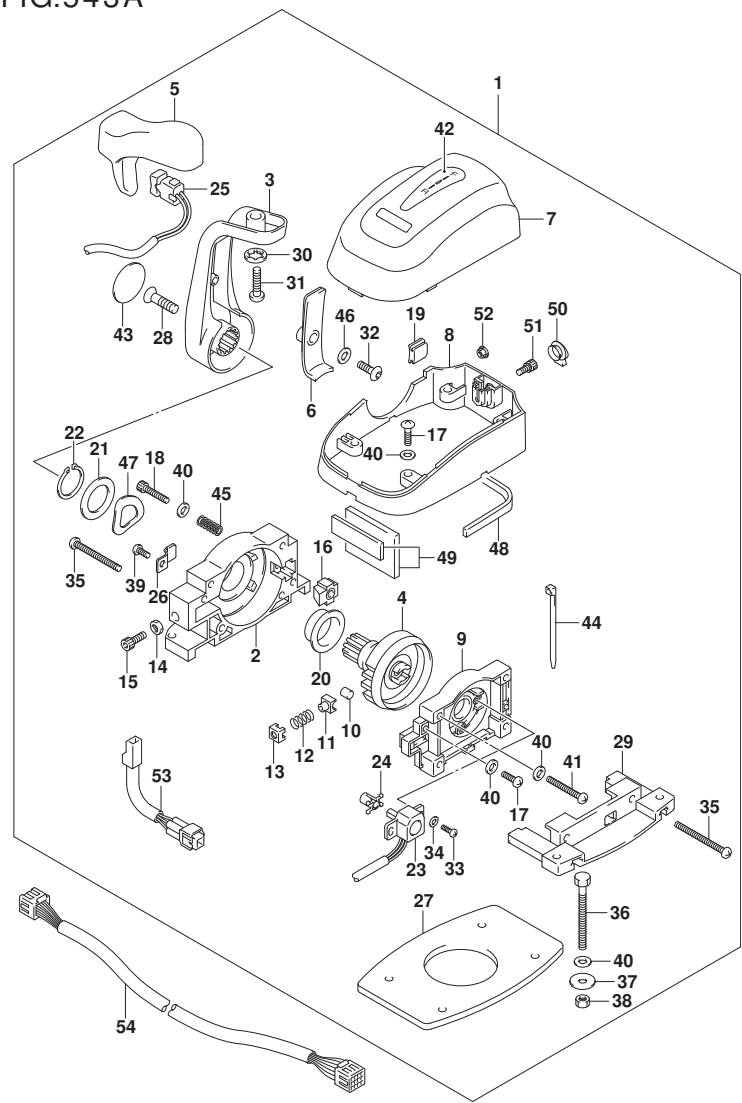


FIG.543A (1-K-3) OPT:REMOTE CONTROL ASSY SINGLE (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J06	REMOTE CONTROL ASSY,SINGLE	1	
2	67211-98J20	.HOUSING	1	
3	67251-98J00	.LEVER,HANDLE	1	
4	67246-98J10	.SHAFT,DRIVE REMOCON	1	
5	67261-98J00	.GRIP,NO.1	1	
6	67263-98J00	.COVER,LEVER	1	
7	67212-98J20	.COVER,REMOCON UPPER	1	UPPER
8	67271-98J30	.COVER,REMOCON BOTTOM	1	
9	67222-98J10	.PANEL ASSY,BACK	1	
10	67236-98J10	.ROLLER,DETENT	1	
11	67235-98J10	.GUIDE,DETENT ROLLER	1	
12	67237-98J30	.SPRING,DETENT	1	
13	67233-98J10	.HOLDER,DETENT SPRING	1	
14	67287-92E00	.NUT (M5)	1	
15	67239-98J00	.SCREW,DETENT ADJUSTMENT (5X14)	1	
16	67223-98J00	.PAD,BRAKE	1	
17	67296-98J50	.SCREW (5X18)	6	
18	67296-98JA0	.SCREW (4X10)	1	
19	67272-98J10	.GROMMET,REMOCON COVER	1	
20	67252-98J10	.BUSH,DRIVE SHAFT	1	
21	67288-98J20	.WASHER	1	
22	67292-98J00	.C RING	1	
23	15980-98J00	.POTENTIOMETER	1	
24	67227-98J10	.LEVER,POTENTIOMETER NO.2	1	
25	37850-98J03	.SWITCH ASSY,PTT	1	
26	67269-98J01	.CLAMP,LEAD	1	
27	67273-98J00	.PACKING	1	
28	67296-98J60	.SCREW (8X30)	1	
29	67274-98J00	.FLANGE,BASE	1	
30	67288-92E20	.WASHER	1	
31	67296-98J90	.SCREW (8X30)	1	
32	67296-98JG0	.SCREW (5X14)	1	
33	67296-94300	.SCREW (4X10)	2	
34	67288-98J00	.WASHER,POTENTIOMETER	2	

FIG.543A


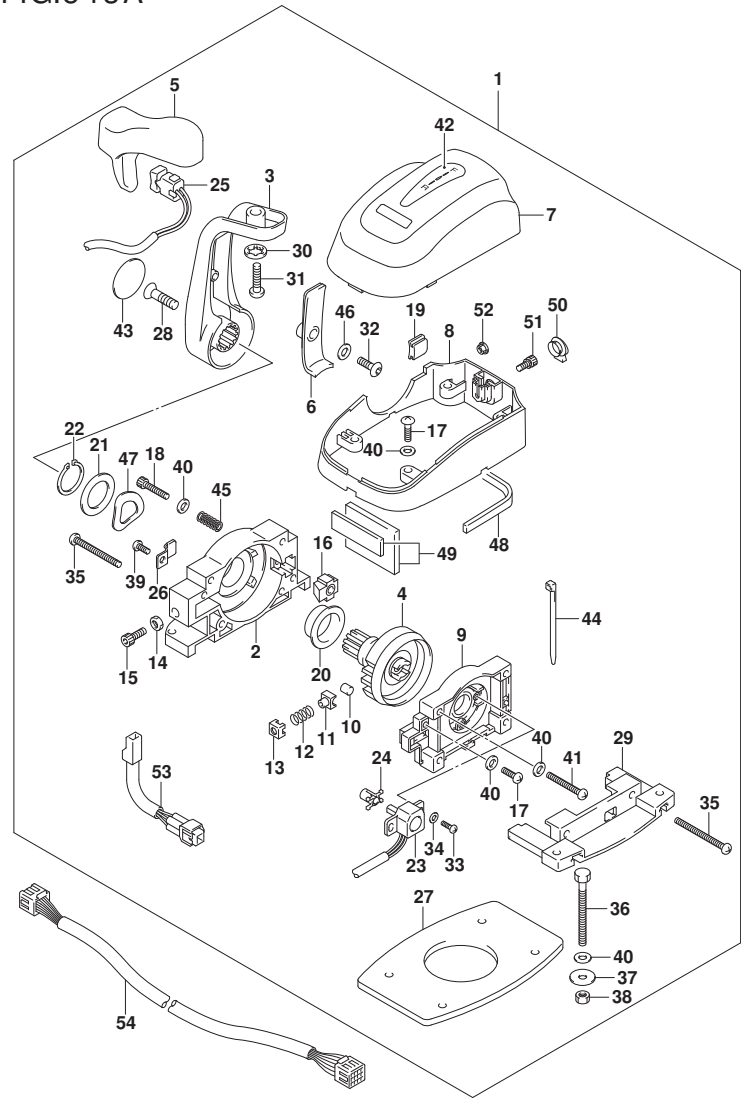


FIG.543A (1-K-4) OPT:REMOTE CONTROL ASSY SINGLE (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67296-98J20	.SCREW (5X50)	2	
36	67226-98J00	.BOLT (5X50)	4	
37	09160-05024	.WASHER (5.5X16X1.5)	4	
38	67287-92E00	.NUT (M5)	4	
39	67296-98J00	.SCREW (5X12)	1	
40	67288-98J40	.WASHER,BOTTOM COVER	12	
41	67296-98J10	.SCREW (5X35)	1	
42	67284-98J10	.MARK	1	
43	67257-98J00	.MARK,LEVER	1	
44	67269-98J30	.BAND	1	
45	67288-98J10	.WASHER,SPRING	8	
46	67288-98J30	.WASHER,LEVER COVER	1	
47	67228-98J50	.WASHER,WAVE	1	
48	67273-98J10	.PACKING,FRONT	1	
49	67273-98J30	.PACKING,REAR	1	
50	67277-98J00	.GROMMET,REMOCON BOTTOM COVER	1	
51	67296-98JF0	.BOLT,UPPER COVER (5X14)	1	
52	67297-98J00	.NUT,UPPER COVER BOLT	1	
53	36890-98J00	.HARNESS,CONDENSER ADAPTER	1	
54-1	36620-98J31	WIRE ASSY,REMOTE CONTROL (L:65 00)	1	
54-2	36620-98J42	WIRE ASSY,REMOTE CONTROL (L:95 00)	1	

FIG.543B

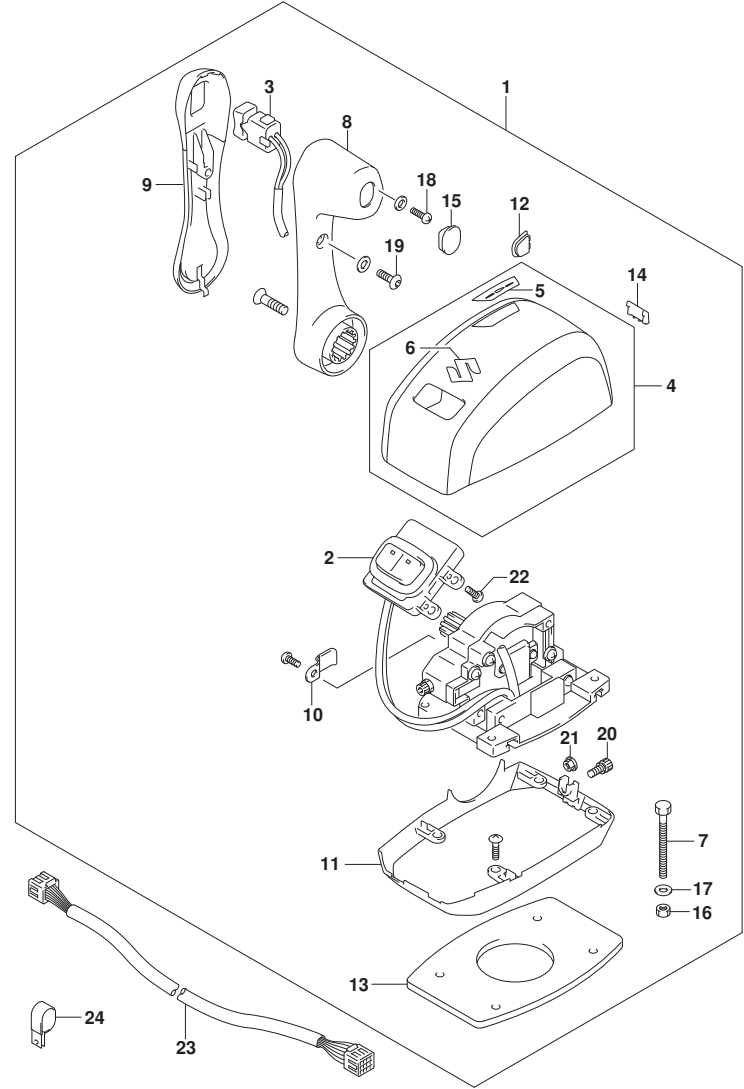

DF350A_E11_022_543B
OPT:REMOTE CONTROL ASSY SINGLE

FIG.543B (1-K-5) OPT:REMOTE CONTROL ASSY SINGLE (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98L00	R/CON ASSY,SINGLE TOP MOUNT	1	
2	37130-98L00	.SWITCH ASSY,BOAT CONTROL	1	
3	37850-98L00	.SWITCH ASSY,PTT	1	
4	67212-98L00	.COVER,R/CON UPPER	1	
5	67284-98L00	..MARK,HANDLE LEVER	1	
6	68111-88L00	..EMBLEM,MARK	1	
7	67226-98J00	.BOLT (5X50)	4	
8	67261-98L00	.GRIP,R/CON NO.1	1	
9	67261-98L10	.GRIP,R/CON NO.2	1	
10	67269-98L00	.CLAMP,LEAD	1	
11	67271-98L00	.COVER,R/CON BOTTOM	1	
12	67272-98L00	.GROMMET,R/CON COVER	1	
13	67273-98L00	.PACKING,R/CON	1	
14	67277-98L00	.GROMMET,R/CON BOTTOM COVER	1	
15	67277-98L10	.GROMMET,R/CON GRIP	1	
16	67287-92E00	.NUT (M5)	5	
17	67288-98J40	.WASHER,BOTTOM COVER	9	
18	67296-98J50	.SCREW (5X18)	3	
19	67296-98L00	.SCREW	2	
20	67296-98L10	.BOLT,UPPER COVER	1	
21	67297-98J00	.NUT,UPPER COVER BOLT	1	
22	67296-88D00	.SCREW	4	
23-1	36620-98L00	WIRE ASSY,REMOTE CONTROL (L:65 00)	1	
23-2	36620-98L10	WIRE ASSY,REMOTE CONTROL (L:95 00)	1	
23-3	36620-98L20	WIRE ASSY,REMOTE CONTROL EXT (L:2000)	1	
24	09403-13402	CLAMP (ID:13)	10	

DF350A_E11_022

FIG.585A

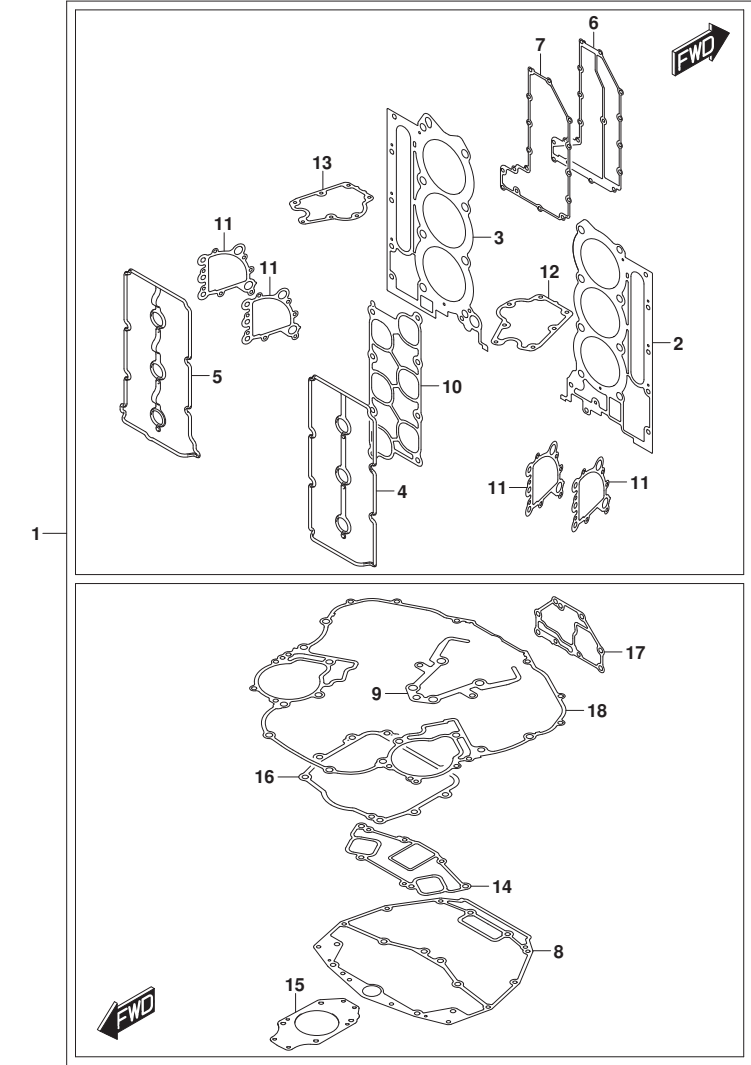


FIG.585A (1-K-6) OPT:GASKET SET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11410-98841	GASKET SET	1	
2	11141-98L00	.GASKET,CYLINDER HEAD STBD	1	STBD
3	11142-98L00	.GASKET,CYLINDER HEAD PORT	1	PORT
4	11179-93J00	.GASKET,CYL HEAD COVER STBD	1	STBD
5	11189-93J00	.GASKET,CYL HEAD COVER PORT	1	PORT
6	11332-98L00	.GASKET,CRANKCASE WTR JKT COVE R	1	
7	11333-98L00	.GASKET,CRANKCASE OIL COVER	1	
8	11489-98L00	.GASKET,OIL PAN	1	
9	12778-98L00	.GASKET,TIMING CHAIN GUIDE BAS E	1	
10	13119-98L00	.GASKET,INTAKE MANIFOLD	1	
11	14151-98L00	.GASKET,EXH COVER	4	
12	14181-98L01	.GASKET,EXH UPPER COVER STBD	1	STBD
13	14182-98L01	.GASKET,EXH UPPER COVER PORT	1	PORT
14	14212-98L00	.GASKET,EXHAUST TUBE	1	
15	17472-98L00	.GASKET,PUMP CASE PANEL	1	
16	51123-98L00	.GASKET,MOUNT OIL SEAL COVER	1	
17	51142-98L00	.GASKET,ENGINE HOLDER COVER	1	
18	51211-98L00	.GASKET,ENGINE HOLDER	1	

FIG.601A

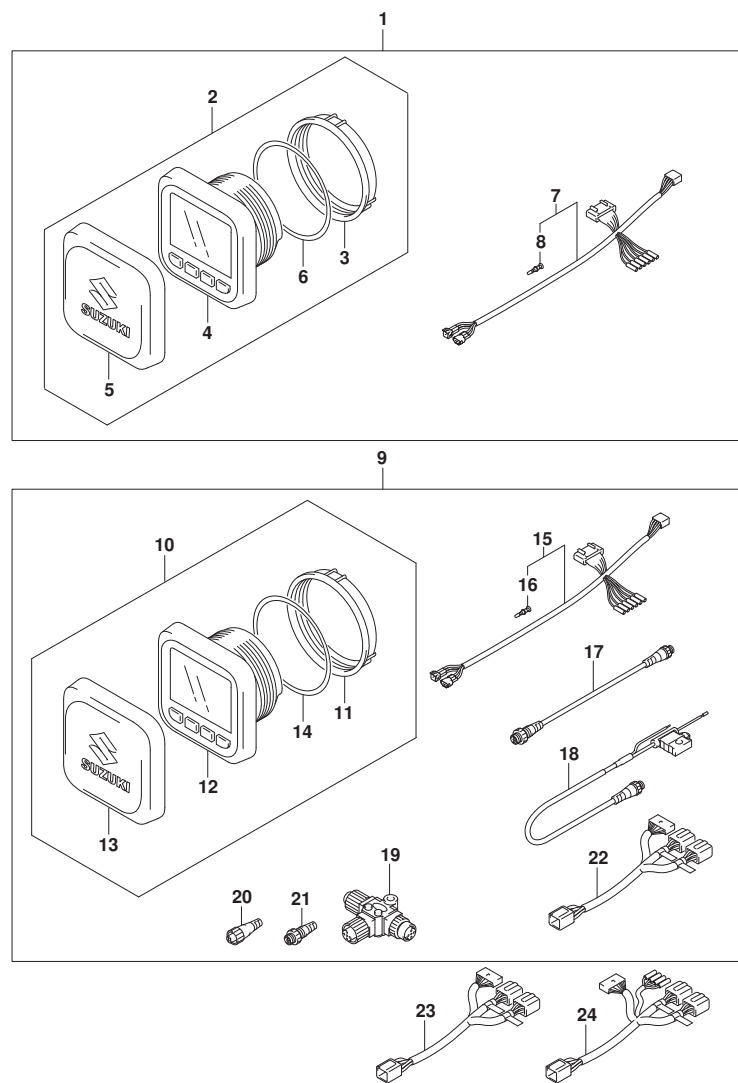


FIG.601A (1-K-7) OPT:MULTI FUNCTION GAUGE (1) (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34000-96L66	KIT,SINGLE GAUGE ELECTRIC	1	
2	34011-96L16	.GAUGE SET,MULTI	1	
3	34112-96L00	..NUT,GAUGE	1	
4	34193-96L00	..BEZEL,GAUGE	1	
5	34211-96L00	..COVER,GAUGE	1	
6	34825-96L00	..PACKING,GAUGE	1	
7	36661-96L20	.ADAPTER,GAUGE	1	
8	36615-96300	..TERMINAL	5	
9	34000-96L76	KIT,DUAL GAUGE ELECTRIC	1	
10	34011-96L16	.GAUGE SET,MULTI	2	
11	34112-96L00	..NUT,GAUGE	2	
12	34193-96L00	..BEZEL,GAUGE	2	
13	34211-96L00	..COVER,GAUGE	2	
14	34825-96L00	..PACKING,GAUGE	2	
15	36661-96L20	.ADAPTER,GAUGE	1	
16	36615-96300	..TERMINAL	5	
17	36662-88L10	.WIRE,2 EXTENSION	2	
18	36663-88L00	.HARNESS ASSY,NETWORK POWER	1	
19	36664-88L00	.CONNECTOR,BRANCH	2	
20	36665-88L00	.UNIT,RESISTOR FEMALE	1	
21	36665-88L10	.UNIT,RESISTOR MALE	1	
22	36667-96L00	.WIRE,GAUGE ADAPTER (L:100+100)	1	
23	36667-96L11	WIRE,DUAL GAUGE ADAPTER (L:100 +150)	1	
24	36667-96L30	WIRE,GAUGE ADAPTER	1	

FIG.601B

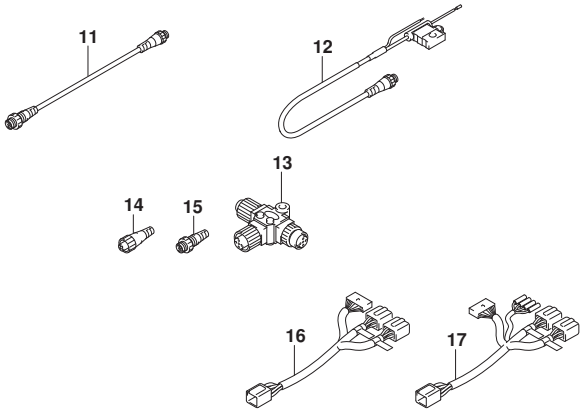
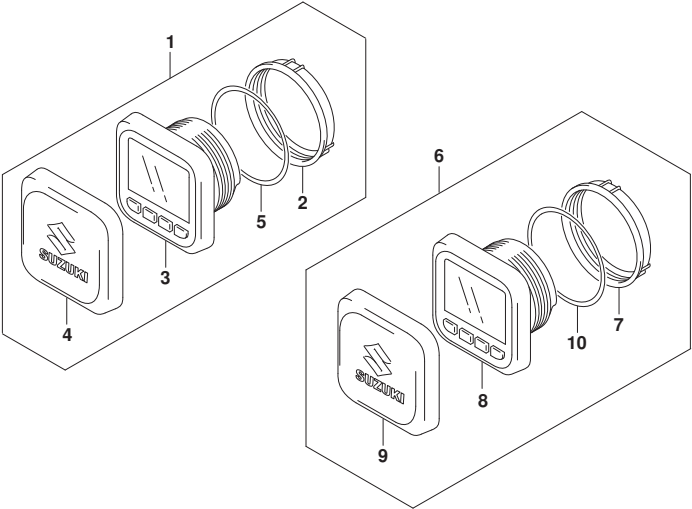


FIG.601B (1-K-8) OPT:MULTI FUNCTION GAUGE (1) (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34011-96L40	GAUGE SET,MULTI	AR	
2	34112-96L00	.NUT,GAUGE	AR	
3	34193-96L00	.BEZEL,GAUGE	AR	
4	34211-96L00	.COVER,GAUGE	AR	
5	34825-96L00	.PACKING,GAUGE	AR	
6	34011-96L50	GAUGE SET,MULTI	AR	
7	34112-96L00	.NUT,GAUGE	AR	
8	34193-96L00	.BEZEL,GAUGE	AR	
9	34211-96L00	.COVER,GAUGE	AR	
10	34825-96L00	.PACKING,GAUGE	AR	
11	36662-88L10	WIRE,2 EXTENSION	1	
12	36663-88L00	HARNESS ASSY,NETWORK POWER	1	
13	36664-88L00	CONNECTOR,BRANCH	1	
14	36665-88L00	UNIT,RESISTOR FEMALE	1	
15	36665-88L10	UNIT,RESISTOR MALE	1	
16	36667-96L40	WIRE,DUAL GAUGE ADAPTER	1	
17	36667-96L50	WIRE,DUAL GAUGE ADAPTER	1	

FIG.602A


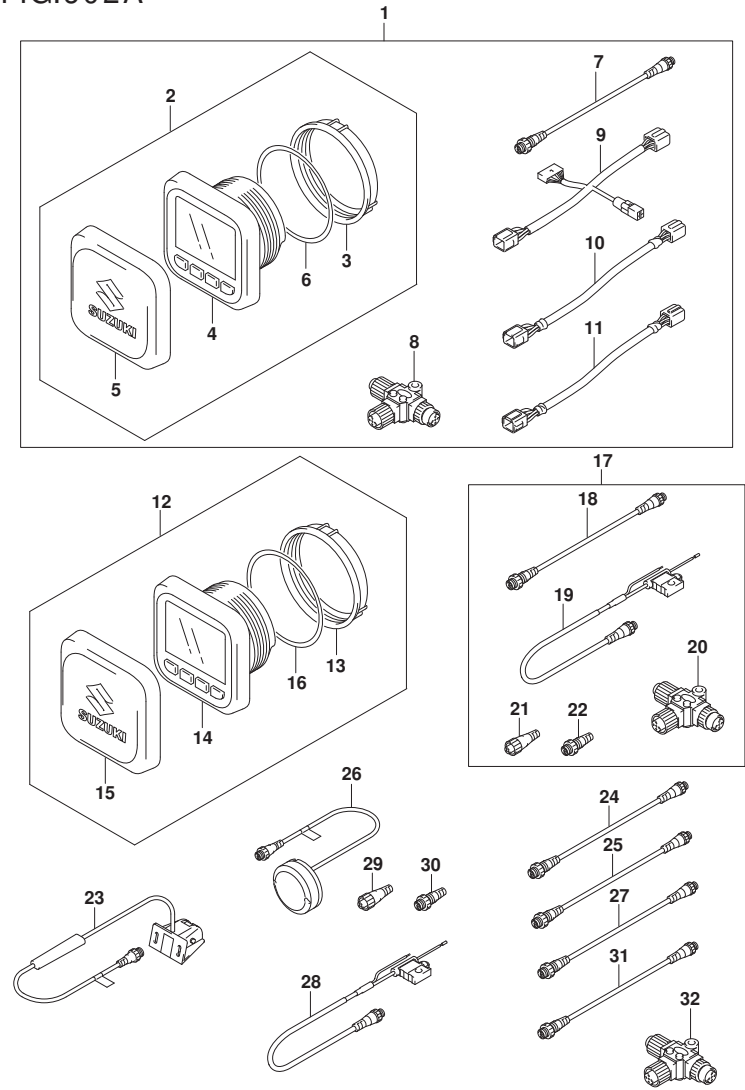


FIG.602A (1-K-9) OPT:MULTI FUNCTION GAUGE (2) (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34002-96L16	KIT,DUAL STATION	1	
2	34011-96L16	.GAUGE SET,MULTI	1	
3	34112-96L00	..NUT,GAUGE	1	
4	34193-96L00	..BEZEL,GAUGE	1	
5	34211-96L00	..COVER,GAUGE	1	
6	34825-96L00	..PACKING,GAUGE	1	
7	36662-88L10	..WIRE,2 EXTENSION	1	
8	36664-88L00	..CONNECTOR,BRANCH	1	
9	36665-96L00	..ADAPTER,DUAL STATION	1	
10	36666-96L00	..ADAPTER,GAUGE POWER	1	
11	36682-92E00	..WIRE,TRIM METER EXT (L:6500)	1	
12	34011-96L16	GAUGE SET,MULTI	1	
13	34112-96L00	..NUT,GAUGE	1	
14	34193-96L00	..BEZEL,GAUGE	1	
15	34211-96L00	..COVER,GAUGE	1	
16	34825-96L00	..PACKING,GAUGE	1	
17	36001-88L00	SET,WIRE	1	
18	36662-88L10	..WIRE,2 EXTENSION	1	
19	36663-88L00	..HARNESS ASSY,NETWORK POWER	1	
20	36664-88L00	..CONNECTOR,BRANCH	1	
21	36665-88L00	..UNIT,RESISTOR FEMALE	1	
22	36665-88L10	..UNIT,RESISTOR MALE	1	
23	34190-88L00	SENSOR ASSY,PAD WHEEL	1	
24	36662-88L20	WIRE,6 EXTENSION	1	
25	36662-88L30	WIRE,15 EXTENSION	1	
26	39950-88L02	MODULE ASSY,GPS RECEIVER	1	
27	36662-88L00	WIRE,25 EXTENSION	1	
28	36663-88L00	HARNESS ASSY,NETWORK POWER	1	
29	36665-88L00	UNIT,RESISTOR FEMALE	1	
30	36665-88L10	UNIT,RESISTOR MALE	1	
31	36662-88L10	WIRE,2 EXTENSION	1	
32	36664-88L00	CONNECTOR,BRANCH	1	

FIG.602B (1-K-10) OPT:MULTI FUNCTION GAUGE (2) (022)

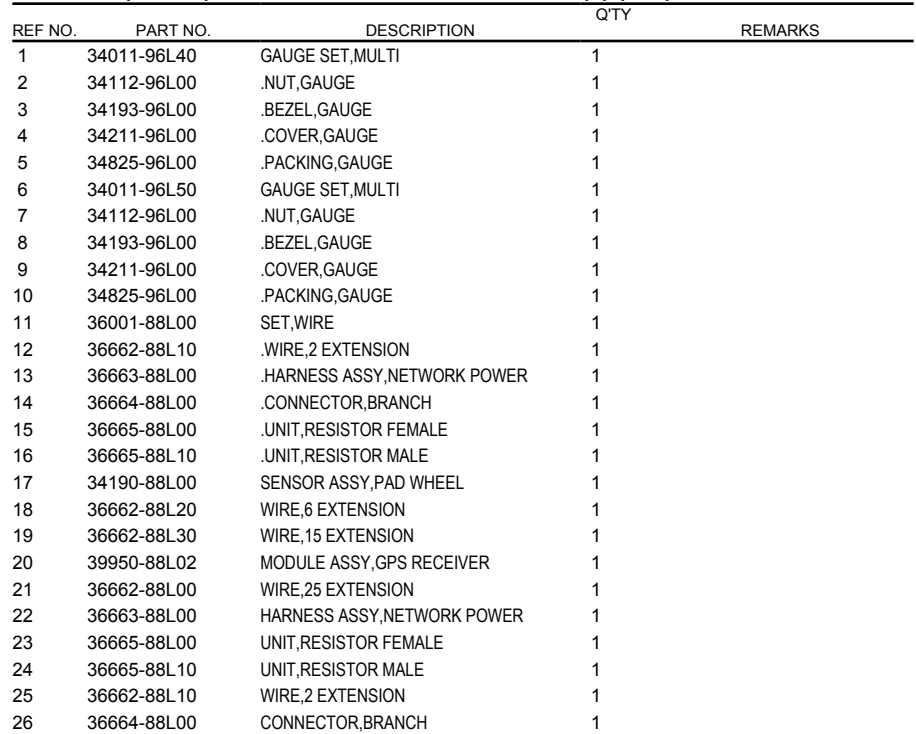

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11333-98L00	585A-6 113A-14	12300-98830-012	116B-13-1 116A-13-2
		11334-98L00	585A-7 113A-15	12300-98841-0AA	116B-13-2 116A-12-6
		11382-93J00	111A-31		116B-12-6
		11390-98L00	113A-9	12300-98841-0BA	116A-12-7 116B-12-7
11101-98L11	111A-1-1	11410-98841	585A-1	12300-98841-0CA	116A-12-8 116B-12-8
11101-98L20	111A-1-2	11435-98L01	180A-14		116A-12-9
11103-98L11	111A-5-1	11489-98L00	180A-6		116B-12-9
11103-98L20	111A-5-2		585A-8	12300-98841-0DA	116B-12-9
11112-93J00	113A-4		180A-7-4		116A-12-10
11115-98L00-001	111A-44	11501-98L00-QTN	180A-7-2	12300-98841-0EA	116B-12-10
11116-93J01	111A-9	11501-98L00-Y5S	180A-7-1		116B-12-10
11117-98L00	113A-5	11501-98L00-YAY	180A-7-3	12340-98L01-0A0	116A-12-1
11118-93J00	206A-1		136A-1		116B-12-1
11119-98L00	111A-36	11510-98L10	136A-2	12340-98L01-0B0	116A-12-2
11141-98L00	111A-10	11514-98J00	136A-3		116B-12-2
	585A-2	11517-98J00	136A-17	12340-98L01-0C0	116A-12-3
11142-98L00	111A-11	11522-98L01	136A-4		116B-12-3
	585A-3	11531-98L00	180A-9-1	12340-98L01-0D0	116A-12-4
11170-93J01	111A-21	11541-93J00-019	180A-9-2		116B-12-4
11173-93J00	111A-23	11541-93J00-YAY	180A-8	12340-98L01-0E0	116A-12-5
11174-98L01	163A-24	11591-98L00	116A-7-2		116B-12-5
	163B-24	12100-98810-025	116B-7-2	12632-93J11	175A-1
11179-93J00	111A-25		116A-7-1	12701-98L00	121A-1
	585A-4	12100-98810-0A0	116B-7-1		121B-1
11180-98L00	111A-22	12101-98L20-050	116A-15	12701-98L40	121C-1
11183-93J00	111A-24	12101-98L30-050	116B-15		121D-1
11186-15501	111A-37	12102-98L20-050	116A-17	12705-98L00	121A-2
11189-93J00	111A-26	12102-98L30-050	116B-17		121B-2
	585A-5	12111-98L00-0B0	116A-1		121C-2
11193-98J01	163A-1	12111-98L10-0B0	116B-1	12721-98L30	121A-3
	163B-1	12121-98L00-0B0	116A-2		121B-3
11196-98L00	162A-1	12121-98L10-0B0	116B-2		121C-3
	162B-1	12140-98J10	116B-3		121D-3
11197-98L00	162A-2		116A-16	12729-98L30	121A-4
	162B-2	12140-98J10-050	116A-18		121B-4
11198-98L00	163A-2		116B-16		121C-4
11216-98L10	111A-12		116B-18		121D-4
11241-86FA0	113A-37		116A-4	12730-98J02	119A-1
11261-93J00	111A-13	12151-98L00	116B-4	12734-98L00	119A-5
	113A-32	12160-98L00	116A-6	12740-98L00	121A-5
11261-93J10	180A-1		116B-6		121B-5
11291-98L00	111A-34	12200-98L00	116A-8		121C-5
11293-98L00	113A-1		116B-8		121D-5
11301-98L10	113A-3		116A-9	12748-93J00	121A-6
11318-98L00	113A-7	12242-98J00	116B-9		121B-6
11319-98L00	113A-8		113A-16		121C-6
11330-98L00	113A-12	12247-98L00	116A-13-1		121D-6
11332-98L00	113A-13	12300-98830			

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
12749-93J00	121A-8 121B-8	12892-93J00-248	121A-15-13 121C-15-13	12892-93J10-225	121B-15-4 121D-15-4
	121C-8 121D-8	12892-93J00-250	121A-15-14 121C-15-14	12892-93J10-228	121B-15-5 121D-15-5
12753-93J00	121A-7 121B-7	12892-93J00-253	121A-15-15 121C-15-15	12892-93J10-230	121B-15-6 121D-15-6
	121C-7 121D-7	12892-93J00-255	121A-15-16 121C-15-16	12892-93J10-233	121B-15-7 121D-15-7
12761-98L00	119A-8	12892-93J00-258	121A-15-17 121C-15-17	12892-93J10-235	121B-15-8 121D-15-8
12762-93J00	119A-9		121A-15-18	12892-93J10-238	121B-15-9 121D-15-9
12770-98L00	119A-10	12892-93J00-260	121A-15-19 121C-15-19	12892-93J10-240	121B-15-10 121D-15-10
12771-93J00	119A-14		121A-15-20	12892-93J10-243	121B-15-11 121D-15-11
12772-98L00	119A-16	12892-93J00-263	121A-15-21 121C-15-21	12892-93J10-245	121B-15-12 121D-15-12
12775-93J00	119A-15		121A-15-22	12892-93J10-248	121B-15-13 121D-15-13
12778-98L00	119A-11	12892-93J00-265	121A-15-23 121C-15-23	12892-93J10-250	121B-15-14 121D-15-14
	585A-9		121A-15-24	12892-93J10-253	121B-15-15 121D-15-15
12810-93J00	119A-18	12892-93J00-268	121A-15-25 121C-15-25	12892-93J10-255	121B-15-16 121D-15-16
12812-90J00	119A-20		121A-15-26	12892-93J10-258	121B-15-17 121D-15-17
12813-73G00	119A-19	12892-93J00-270	121A-15-27 121C-15-27	12892-93J10-260	121B-15-18 121D-15-18
12831-93J01	119A-22		121A-15-28	12892-93J10-263	121B-15-19 121D-15-19
12832-93J00	119A-23	12892-93J00-273	121A-15-29 121C-15-29	12892-93J10-265	121B-15-20 121D-15-20
12833-93J00	119A-24		121A-15-30	12892-93J10-268	121B-15-21 121D-15-21
12891-93J00	121A-14 121C-14	12892-93J00-275	121A-15-31 121C-15-31	12892-93J10-270	121B-15-22 121D-15-22
12891-93J10	121B-14 121D-14	12892-93J00-278	121A-15-32 121C-15-32	12892-93J10-273	121B-15-23 121D-15-23
	121A-15-1		121A-15-33	12892-93J10-275	121B-15-24 121D-15-24
12892-93J00-218	121C-15-1	12892-93J00-280	121A-15-34 121C-15-34	12892-93J10-278	121B-15-25 121D-15-25
	121A-15-2	12892-93J00-283	121A-15-35 121C-15-35	12892-93J10-280	121B-15-26 121D-15-26
12892-93J00-223	121A-15-3		121A-15-36	12892-93J10-283	121B-15-27 121D-15-27
	121A-15-4	12892-93J00-285	121A-15-37 121C-15-37	12892-93J10-285	121B-15-28 121D-15-28
12892-93J00-225	121A-15-5		121A-15-38		
	121C-15-4	12892-93J00-288	121A-15-39 121C-15-39		
12892-93J00-228	121A-15-6		121A-15-40		
	121C-15-5	12892-93J00-290	121A-15-41 121C-15-41		
	121A-15-7		121A-15-42		
12892-93J00-230	121A-15-8	12892-93J00-293	121A-15-43 121C-15-43		
	121C-15-6		121A-15-44		
12892-93J00-233	121A-15-7	12892-93J00-295	121A-15-45 121C-15-45		
	121C-15-7		121A-15-46		
12892-93J00-235	121A-15-8	12892-93J00-298	121A-15-47 121C-15-47		
	121C-15-8		121A-15-48		
12892-93J00-238	121A-15-9	12892-93J00-300	121A-15-49 121C-15-49		
	121C-15-9		121A-15-50		
12892-93J00-240	121A-15-10	12892-93J10-218	121B-15-1 121D-15-1		
	121C-15-10		121B-15-2		
12892-93J00-243	121A-15-11	12892-93J10-220	121B-15-3 121D-15-3		
	121C-15-11		121B-15-4		
12892-93J00-245	121A-15-12	12892-93J10-223	121B-15-5 121D-15-5		
	121C-15-12		121B-15-6		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
12892-93J10-288	121B-15-29		163B-6	15116-98L10	147A-40
	121D-15-29	13180-98J01	163A-7		147B-40
12892-93J10-290	121B-15-30		163B-7	15191-98L20	147A-57
	121D-15-30	13300-98L00	163A-16		147B-57
12892-93J10-293	121B-15-31		163B-16	15192-98L00	147A-58
	121D-15-31	13315-98J11	163A-18		147B-58
12892-93J10-295	121B-15-32		163B-18	15193-98L00	147A-59
	121D-15-32	13343-98J10	163A-17		147B-59
12892-93J10-298	121B-15-33		163B-17	15198-98L00	147A-60
	121D-15-33	13370-93J10	147A-2		147B-60
12892-93J10-300	121B-15-34		147B-2	15200-98L00	147A-3
	121D-15-34	13421-98L00	163A-19		147B-3
12911-98L00	121A-16		163B-19	15410-98L00	147A-61
	121B-16	13614-93J00	147B-22		147B-61
	121C-16	13650-52G00	315A-1	15411-93J10	147A-62
	121D-16	13761-98L00	136A-5		147B-62
12915-98L00	121A-17		136A-6	15412-93J10	147A-63
	121B-17	13766-98L00	136A-7		147B-63
	121C-17	13811-98L00	136A-8	15413-98L00	147A-64
	121D-17	13812-98L01	136A-9		147B-64
12921-98L00	121A-18	13813-98L01	163A-20	15415-93J10	147A-65
	121B-18		163B-20		147B-65
	121C-18	13824-98L00	136A-15	15421-98L00	147A-66
	121D-18	13851-98L00	136A-10		147B-66
12931-78G00	121A-19	14111-98L01	140A-11	15423-98L00	147A-67
	121B-19	14112-98L00	140A-16		147B-67
	121C-19	14141-98L00	140A-1	15600-98L10	147B-1
	121D-19	14142-98L00	140A-3	15600-98L21	147A-1
12932-24400	121A-20	14151-98L00	140A-5	15612-98L00	147A-4
	121B-20		585A-11		147B-4
	121C-20	14154-93J02	180A-10	15613-98L00	147A-5
	121D-20	14161-98L00	140A-2		147B-5
12933-69G10	121A-21	14162-98L00	140A-4	15614-98L00	147A-6
	121B-21	14171-98L00	140A-6		147B-6
	121C-21	14172-98L00	140A-8	15626-93J00	147A-7
	121D-21	14181-98L01	140A-7	15626-93J10	147B-7
13100-98L01	163A-3		585A-12	15627-93J00	147A-8
13100-98L10	163B-3	14182-98L01	140A-9		147B-8
13111-98L00	122A-1		585A-13	15628-99E00	147A-9
13119-98L00	122A-2	14211-98L00	180A-11		147B-9
	585A-10	14212-98L00	180A-12	15629-99E10	147A-10
13134-98J00	163A-14		585A-14		147B-10
	163B-14	15100-98J00	147A-39	15631-98L00	147A-11
13137-98J00	163A-4		147B-39		147B-11
	163B-4	15100-98L13	147A-38	15632-98L10	147A-41
13139-98J01	163A-15		147B-38		147B-41
	163B-15	15114-93J00	147A-54	15635-98L01	147A-42
13140-98L00	163A-5		147B-54		147B-42
	163B-5	15115-93J02	147A-55	15637-98L10	147A-43
13147-98J00	163A-6		147B-55		147B-43

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15638-98L00	147A-12		144B-10		160B-6
	147B-12	15831-96J00	147A-69		585A-15
15639-98L00	147A-13		147B-69	17560-98L00	160A-7-1
	147B-13	15832-93J00	144B-9		160B-7-1
15641-98L01	147A-14		147A-70	17560-98L10	160A-7-2
15641-98L10	147B-14	15852-98L00	147B-70		160B-7-2
15642-88L10	147A-15	15980-98J00	520A-41	17562-98L00	160A-8
	147B-15		540A-24		160B-8
15642-90J00	147A-16		543A-23	17563-98L00	160A-9
	147B-16	16113-93J10	175A-2		160B-9
15643-98L00	147A-44	16400-93J20	175A-3	17564-93J01	160A-10
	147B-44	16431-98L00	113A-17		160B-10
15645-93J10	147A-45	16432-98L00	113A-18	17581-98L00	162A-3
	147B-45	16433-98L00	113A-19		162B-3
15647-98L00	147A-17	16480-98L00	113A-20	17582-93J00	162A-4
15647-98L10	147B-17	16485-98L00	113A-21		162B-4
15650-93J00	147A-18	16510-96J10	113A-38	17611-90J00	162A-5
	147B-18	16519-93J00	401A-2		162B-5
15654-99E00	147A-19	16520-93J00	175A-4	17631-98L03	407A-1
	147B-19	16531-98L00	113A-39		407B-1
15674-98L01	147A-46	16539-98L10	113A-40	17635-98L01	407A-2
	147B-46	16550-93J00	121A-11		407B-2
15681-98L00	147A-23		121B-11	17660-98L01	162A-6
	147B-23		121C-11		162B-6
15683-98L00	147A-20		121D-11	17670-98L10	162A-7-2
	147B-20	16555-93J01	121A-12		162B-7-2
15695-98L00	147A-87		121B-12	17670-98L20	162A-7-1
	147B-87		121C-12		162B-7-1
15710-98L10	144A-1		121D-12	17680-98L00	162A-8
	144B-1	16760-93J00	175A-5		162B-8
15715-98L00	144A-4	16781-93J00	175A-6	17680-98L10	162A-9
	144B-4	16782-93J00	175A-7		162B-9
15716-82M00	144A-2	16783-93J01	175A-8	17712-98L00	162A-10
	144B-2	16910-98L00	111A-38		162B-10
15717-82M00	144A-3	16931-98L00	111A-39	17714-98L00	162A-11
	144B-3	16941-98L00	111A-40		162B-11
15735-98L00	144A-5	17400-98L02	160A-15	17913-93J00	401A-3
	144B-5	17410-93J01	160A-1		401A-1
15751-98L00	144A-6		160B-1	17914-93J01	401A-4
	144B-6	17413-93J02	160A-2		401A-2
15756-98L00	144A-7	17413-93J12	160B-2	17915-98L00	162A-12
	144B-7	17416-93J01	160A-3		162B-12
15760-98L00	147A-21		160B-3	17917-87L00	410A-46
	147B-21	17450-98L02	220A-48	18118-93J00	163A-22
15762-93J00	144A-8		220B-48		163B-22
15762-93J10	144B-8	17461-93J00	160A-4	18498-87J51	162A-15
15830-77EA0	144A-9		160B-4		162B-15
15830-98J01	147A-68	17471-98L00	160A-5	18498-96L41	162A-17
	147B-68	17471-98L10	160B-5		162B-17
15831-93J00	144A-10	17472-98L00	160A-6	18498-96L50	162A-16

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
18498-98L21	162B-16	29125-93J00	326A-2	32160-98L00	303B-4-1
	147A-24		326B-2		303A-5
	147B-24		326C-2		303B-5
	18498-99E11		326D-2		310A-1
18590-68H00	147B-71	29159-93J00	401A-27	32851-93J00	331A-1
	162A-13		405A-13		535A-19
	162A-14		405B-13		535B-19
	162B-13		315A-4		535C-15
	162B-14				310A-2
	163A-8				331A-2
18640-98L01	163B-8	30000		32980-38F00	535A-12
	315A-2				535B-12
	326A-25				535C-16
	326B-25				303A-7
19115-98L00	326C-25			33220-98J00	303B-7
	326D-25				303A-8
	326A-26		31100-98L10		303B-8
	326B-26		31111-94900		310A-9
	326C-26		31123-94910		310A-10
	326D-26		31133-90J10		310A-11
20000			31133-94910	33414-98L00	340A-6
			31135-94900		340A-7
			31136-90J20		340A-8
			31150-98L00		301A-2
			31170-92J00		301A-3
			31173-94920		322A-1
			31173-98L00		322B-1
			31191-63J00		322C-1
			31192-92J00		322D-1
			31220-98L10		522A-2
			31261-75F10		522B-2
			31281-92J10		522A-5
21152-98L00	204A-1		301A-4	33830-98J11	326A-9-1
21153-98L00	204A-2		301A-5		326B-9-1
21210-98L00	204A-3		301A-8		326C-9-1
21241-98L00	204A-4		301A-6		326D-9-1
22511-99011	336A-1		301A-9	33920-98L90	326A-9-2
	401A-48		337A-2		326B-9-2
25110-98L00	206A-2-1		337B-2		326C-9-2
25110-98L10	206A-2-2		337C-2		326D-9-2
25214-98L00	206A-11		301A-7	33920-98L00	326A-10
25300-98L00	206A-3		301A-10		326B-10
25315-98L00	206A-4		301A-11		326C-10
25411-98L00	206A-5		301A-12		326D-10
25500-98L00	220A-1		301A-10	33925-93J00	522A-6
	220B-1		301A-13		326A-11
25700-98L02	407A-39		301A-14		326B-11
	407B-39		301A-15		326C-11
25711-98L00	220A-2		301A-16	33925-98J00	326D-11
	220B-2		301A-17		522B-5
29103-93J00	315A-3		303A-1-2		522A-7
29103-93J30	180A-3		303B-1-2		522B-6
29116-93J00	160A-11		303A-1-1	34000-96L66	601A-1
	160B-11		303B-1-1		601A-9
	180A-13		303A-4-2		
29116-93J10	407A-17		303B-4-2		
	407B-17		303A-4-1		
			32120-98L10		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
34002-96L16	602A-1	36610-98L32	322A-3	36617-98L30	322A-22
34011-96L16	601A-2		322C-3		322B-22
	601A-10		322B-3		322C-22
	602A-2		322D-3		322D-22
	602A-12	36612-96J01	322A-16	36617-98L40	121A-24
34011-96L40	601B-1		322B-16		121B-24
	602B-1		322C-16		121C-24
34011-96L50	601B-6		322D-16		121D-24
	602B-6	36612-98J20	522A-24	36617-98L50	322A-23
34112-96L00	601A-3		522B-21		322B-23
	601A-11		331A-4		322C-23
	601B-2		522A-9	36618-43410	322D-23
	601B-7	36615-96300	522A-16		322A-4
	602A-3		522A-19		322B-4
	602A-13		522A-21		322C-4
	602B-2		522B-8	36620-98J31	322D-4
34190-88L00	602B-7		522B-15		540A-58-1
	602A-23		522B-18		543A-54-1
	602B-17		522B-20		540A-58-2
	601A-4		523A-4		543A-54-2
34193-96L00	601A-12		523B-4	36620-98J52	522A-1
	601B-3		535A-14		522B-1
	601B-8		535B-14		540B-26-1
	602A-4		535C-18		543B-23-1
	602A-14		601A-8	36620-98L10	540B-26-2
	602B-3		601A-16		543B-23-2
34211-96L00	602B-8	36616-98L00	322A-17		540B-26-3
	601A-5		322B-17		543B-23-3
	601A-13		322C-17	36621-98J00	522A-17
	601B-4		322D-17		522A-22
	601B-9	36616-98L10	322A-18		522B-16
	602A-5		322B-18		522A-13
	602A-15		322C-18	36622-98L00	522B-12
	602B-4		322D-18		331A-3-1
	602B-9	36617-98L00	322A-19		535A-13
34825-96L00	601A-6		322B-19		535B-13
	601A-14		322C-19	36623-98J21	522A-8
	601B-5		322D-19		522A-18
	601B-10	36617-93J10	147A-25		523A-3
	602A-6		147A-72	36623-98L10	522B-7
	602A-16		147B-25		522B-17
	602B-5		147B-72		523B-3
34830-87J20	602B-10		322A-20	36623-98LA0	331A-3-2
	315A-5		322B-20		535C-17
	315A-6		322C-20		522A-15
	315A-7		322D-20	36624-98J11	522A-20
34840-98J03	315A-8	36617-98L10	322A-21		522B-14
34841-88L01	315A-9		322B-21		522B-19
34845-88L02	602A-17		322C-21		523A-1
36001-88L00	602B-11		322D-21		523B-1-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
36625-98J20	523B-1-2		601B-15	36990-87D00	522A-25
36626-98L00	322A-24		602A-22		522B-22
	322B-24		602A-30	37100-96L02	535A-1
	322C-24		602B-16		535B-1
	322D-24		602B-24	37100-98J07	530A-1
36627-98J00	523A-5	36665-96L00	602A-9	37100-98J11	530A-11
36627-98L00	523B-5	36666-96L00	602A-10	37100-98J21	530A-21
36627-98L20	535C-25	36667-96L00	601A-22	37100-98J31	530A-23
36661-96L20	601A-7	36667-96L11	601A-23	37100-98L00	530B-1
	601A-15	36667-96L20	522A-26	37100-98L10	530B-13
36662-88L00	602A-27	36667-96L30	601A-24	37100-98L20	530B-22
	602B-21	36667-96L40	601B-16	37100-98L30	530B-31
36662-88L10	601A-17	36667-96L50	601B-17	37105-96L04	535A-11
	601B-11	36667-96L60	522B-23		535B-11
	602A-7	36682-92E00	602A-11	37105-98L00	535C-14-1
	602A-18	36721-98L10	322A-5	37105-98L10	535C-14-2
	602A-31		322B-5	37110-96L00	535A-2
	602B-12		322C-5		535B-2
	602B-25		322D-5	37110-98J02	530A-2
36662-88L20	602A-24	36737-98L00	322A-6	37110-98L00	530B-2
	602B-18		322B-6		530B-14
36662-88L30	602A-25		322C-6		530B-23
	602B-19		322D-6		530B-32
36662-96L01	331A-5	36738-98L00	322A-7	37112-98J00	530A-12
	535A-15		322B-7	37112-98J10	530A-22
	535B-15		322C-7		530A-24
36663-88L00	601A-18		322D-7		530B-44
	601B-12	36770-98J13	522A-10-1		530B-46
	602A-19	36770-98J22	522A-10-2		530B-48
	602A-28	36770-98L00	522B-9		530B-50
	602B-13	36775-98J00	522A-11		530B-52
	602B-22	36775-98L00	522B-10		530B-54
36663-96L00	535A-25	36776-98J00	522A-12		530B-56
	535B-25	36776-98L00	522B-11	37114-98J00	530A-10
36664-88L00	601A-19	36890-98J00	520A-55		535A-5
	601B-13		540A-57		535B-5
	602A-8		543A-53	37117-96L00	331A-6
	602A-20	36894-87D00	335A-22		535A-22
	602A-32		336A-2		535B-22
	602B-14		337A-42		535C-19
	602B-26		337B-43	37120-98L00	530B-43
36664-96L00	535A-26		337C-42	37120-98L10	530B-45
	535B-26		405A-7	37120-98L20	530B-47
36665-88L00	601A-20		405B-7	37120-98L30	530B-49
	601B-14	36895-87D01	337A-43	37120-98L40	530B-51
	602A-21		337A-44	37120-98L50	530B-53
	602A-29		337B-44	37120-98L60	530B-55
	602B-15		337B-45	37130-98L00	543B-2
	602B-23		337C-43	37130-98L10	540B-2
36665-88L10	601A-21		337C-44	37130-98L20	520B-33

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37138-98L00	530B-5		530B-34-11		530B-24-7
37138-98L10	530B-17	37141-98LB0	530B-4-12		530B-33-7
37138-98L20	530B-26		530B-16-12	37141-99E70	530A-3-10
37138-98L30	530B-35		530B-25-12		530B-3-8
37139-96L30	535A-6		530B-34-12		530B-15-8
	535B-6	37141-99E00	530A-3-3		530B-24-8
37139-98J10	530A-5		530B-3-1		530B-33-8
37141-98L00	530B-4-1		530B-15-1	37141-99E80	530A-3-11
	530B-16-1		530B-24-1		530B-3-9
	530B-25-1		530B-33-1		530B-15-9
	530B-34-1		535A-3-1		530B-24-9
37141-98L10	530B-4-2		535B-3-1		530B-33-9
	530B-16-2	37141-99E10	530A-3-4	37141-99E90	530A-3-12
	530B-25-2		530B-3-2		530B-3-10
	530B-34-2		530B-15-2		530B-15-10
37141-98L20	530B-4-3		530B-24-2		530B-24-10
	530B-16-3		530B-33-2		530B-33-10
	535A-3-2		535A-3-2	37141-99EA0	530A-3-1
	535B-2		535B-3-2		530B-3-11
37141-98L30	530B-4-4	37141-99E20	530A-3-5		530B-15-11
	530B-16-4		530B-3-3		530B-24-11
	530B-25-4		530B-15-3		530B-33-11
37141-98L40	530B-34-4		530B-24-3	37141-99EB0	530A-3-2
	530B-4-5		530B-33-3		530B-3-12
	530B-16-5		535A-3-3		530B-15-12
	530B-25-5		535B-3-3		530B-24-12
	530B-34-5	37141-99E30	530A-3-6		530B-33-12
37141-98L50	530B-4-6		530B-3-4	37143-96L00	535A-4
	530B-16-6		530B-15-4		535B-4
	530B-25-6		530B-24-4	37143-99E01	530A-4
	530B-34-6		530B-33-4	37170-96L05	535A-21-2
37141-98L60	530B-4-7		535A-3-4		535B-21-1
	530B-16-7		535B-3-4	37170-96L15	535A-21-1
	530B-25-7	37141-99E40	530A-3-7		535B-21-2
	530B-34-7		530B-3-5	37171-96L02	331A-7-1
37141-98L70	530B-4-8		530B-15-5		535A-23-2
	530B-16-8		530B-24-5		535B-23-1
	530B-25-8		530B-33-5	37171-96L12	331A-7-3
	530B-34-8		535A-3-5		535A-23-1
37141-98L80	530B-4-9		535B-3-5		535B-23-2
	530B-16-9	37141-99E50	530A-3-8	37171-98L00	331A-7-2
	530B-25-9		530B-3-6		535C-20-1
	530B-34-9		530B-15-6	37171-98L10	331A-7-4
37141-98L90	530B-4-10		530B-24-6		535C-20-2
	530B-16-10		530B-33-6	37172-96L01	331A-8-1
	530B-25-10		535A-3-6		535A-24-2
	530B-34-10		535B-3-6		535B-24-1
37141-98LA0	530B-4-11	37141-99E60	530A-3-9		535C-21-1
	530B-16-11		530B-3-7	37172-96L10	331A-8-2
	530B-25-11		530B-15-7		535A-24-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37173-96L00	535B-24-2	37850-98J03	326B-3		322A-10
	535C-21-2		326C-3		322B-9
	535A-27		326D-3		322B-10
	535B-27		520A-52		322C-9
37173-96L10	331A-9		520B-29		322C-10
	535A-16	37850-98L00	540A-26		322D-9
	535B-16		543A-25		322D-10
37290-98L00	535C-22		540B-3		326A-31
	535C-1		543B-3		326B-31
37290-98L10	535C-4	37856-92J00	326A-4		326C-31
37290-98L20	535C-9		326B-4	38860-96L01	326D-31
37292-98L00	535C-2		326C-4		331A-11
37292-98L10	535C-5		326D-4		535A-18
37292-98L20	535C-10	37857-92J01	326A-5		535B-18
37722-93J13	326A-1		326B-5	38860-96L10	535C-23
	326B-1		326C-5	38892-98L00	326A-14
	326C-1		326D-5		326B-14
	326D-1	37860-87L00	530A-25		326C-14
37803-93J06	530A-15	37860-98L00	530B-40		326D-14
37803-98L00	530B-8	37862-87L00	530A-26	38895-98L11	326A-15
37820-93J11	530A-6	37865-98L00	530B-41		326B-15
	530A-17	38100-98L00	337A-3		326C-15
	535A-7		337B-3	38895-98L20	326D-15
	535B-7		337C-3		326A-16
37820-98L00	520B-31		340A-1		326B-16
	530B-9	38410-93J21	326A-7		326C-16
	530B-18		326B-7	38915-90J00	326D-16
	530B-27		326C-7		326A-32
	530B-36		326D-7		326B-32
	535C-6	38415-93J20	326A-8		326C-32
	535C-11		326B-8		326D-32
37820-99E02	315A-11		326C-8	39950-88L02	602A-26
37823-92E02	530A-7		326D-8		602B-20
	530A-18	38500-93J90	331A-10		
	535A-8		530A-13		
	535B-8		530B-7		
37823-98L00	520B-32		530B-21	40000	
	530B-10		530B-30		
	530B-19		530B-39		
	530B-28		535A-17		
	530B-37		535B-17	41111-98L00-QTN	335A-1-4
	535C-7	38800-98L01	326A-12	41111-98L00-Y5S	335A-1-2
	535C-12		326B-12	41111-98L00-YAY	335A-1-1
37825-99E10	530A-16		326C-12		335A-1-3
37826-92J10	530A-8		326D-12	41117-93J02	335A-3
	530A-19	38831-98L00	326A-13	41121-98L00-QTN	335A-2-4
	535A-9		326B-13	41121-98L00-Y5S	335A-2-2
	535B-9		326C-13	41121-98L00-YAY	335A-2-1
37832-98L00	530B-11		326D-13		335A-2-3
37850-92J00	326A-3	38860-76F01	322A-9	41122-93J02	335A-4

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
41130-93J12	335A-6	48401-98L00	337A-17		337B-7
41135-93J11	335A-7		337B-17		337C-7
41155-93J02	335A-13		337C-17	48610-98L00	337A-8
41220-93J11	336A-13	48427-87D00	337A-18		337B-8
41224-95E01	336A-15		337A-20		337C-8
41230-96J00	336A-16		337B-18	48627-93J00	337A-19
41233-95E10	336A-17		337B-20		337B-19
41234-93J11	336A-14		337C-18		337C-19
43111-93J24-QTN	336A-3-4		337C-20	48630-98L01	337A-9
43111-93J24-Y5S	336A-3-2	48451-93J00	337A-13		337B-9
43111-93J24-YAY	336A-3-1		337A-27		337C-9
	336A-3-3		337B-13	48633-93J00	337A-10
43114-93J00	336A-4		337B-27		337B-10
43211-93J11	336A-5		337C-13		337C-10
43711-97E11	336A-6		337C-27	48650-93J00	337A-16
43750-93J03-QTN	336A-7-4	48452-93J00	337A-14		337B-16
43750-93J03-Y5S	336A-7-2		337A-28		337C-16
43750-93J03-YAY	336A-7-1		337B-14	48691-93J00	337A-11
	336A-7-3		337B-28		337B-11
45421-87D03	335A-16		337C-14		337C-11
48000-98L02	337A-1		337C-28	48862-87J20	337A-22
	337C-1	48452-93J10	337A-15		337B-22
48000-98L03	337B-1		337A-29		337C-22
48121-93J20	337A-25		337B-15	48864-98L00	337A-23
	337B-25		337B-29		337B-23
	337C-25		337C-15		337C-23
48125-93J10	337A-26		337C-29		
	337B-26	48500-98L02	337A-4		
	337C-26		337B-4		
48126-93J00	337A-30		337C-4		
	337B-30	48571-93J00	337A-33		
	337C-30		337B-33		
48128-93J11	337A-32		337C-33		
	337B-32	48572-87J10	337A-21		
	337C-32		337B-21		
48140-93J01	335A-18		337C-21	51111-98L01-Y5S	401A-1-2
48144-93J00	335A-19	48573-93J00	337A-31	51111-98L01-YAY	401A-1-1
48145-93J00	335A-21		337B-31	51116-98L00	401A-5
48311-93J01	337A-35		337C-31	51120-98L00	401A-10
	337B-36	48582-95E01	337A-6	51123-98L00	401A-13
	337C-35		337B-6		585A-16
48320-93J00	337A-5		337C-6	51124-93J01	401A-11
	337B-5	48583-95E00	337A-24	51125-93J00	401A-12
	337C-5		337B-24	51140-98L00-019	401A-17-1
48321-93J00	337A-36		337C-24	51140-98L00-YAY	401A-17-2
	337B-37	48585-95E00	337A-34		401A-18
	337C-36		337B-34		585A-17
48400-98L00	337A-12		337C-34	51151-98L00	401A-20
	337B-12	48585-98L00	337B-35	51152-98L00	401A-21
	337C-12	48605-93J00	337A-7	51161-98L00	401A-38

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
51162-98L00	401A-40		405B-15-1	56126-98L50	220A-17-6
51165-98L00	401A-39		405B-15-3		220B-17-6
51170-98L00	162A-18	54221-93J00	405A-16-5	56126-98L60	220A-17-7
	162B-18		405B-16-5		220B-17-7
51211-98L00	401A-6	54221-93J00-QTN	405A-16-4	56126-98L70	220A-17-8
	585A-18		405B-16-4		220B-17-8
52111-98L00-QTN	405A-1-4	54221-93J00-Y5S	405A-16-2	56130-98L12	407A-15
	405B-1-4		405B-16-2		407B-15
52111-98L00-Y5S	405A-1-2	54221-93J00-YAY	405A-16-1	56150-98L02	220A-18
	405B-1-2		405A-16-3		220B-18
52111-98L00-YAY	405A-1-1		405B-16-1	57110-98L01	220A-26-1
	405A-1-3		405B-16-3		220B-26-1
	405B-1-1	55100-98851-QTN	407A-3-4	57110-98L11	220A-26-2
	405B-1-3		407B-3-4		220B-26-2
52115-98L00-QTN	405A-21-4	55100-98851-Y5S	407A-3-2	57113-98L00	220A-27
	405B-21-4		407B-3-2		220B-27
52115-98L00-Y5S	405A-21-2	55100-98851-YAY	407A-3-1	57130-87D10	405A-4
	405B-21-2		407A-3-3		405B-4
52115-98L00-YAY	405A-21-1		407B-3-1	57301-98810	220A-36
	405A-21-3		407B-3-3		220B-36
	405B-21-1	55122-98L00	407A-20	57600-98822	220A-42
	405B-21-3		407B-20		220B-42
52118-98L10	405A-22	55128-93L00	407A-6	57610-98L00	220A-39
	405B-22		407B-6		220B-39
52131-98L00-QTN	405B-27-4	55320-94900	335A-14	57622-98L00	220A-40
52131-98L00-Y5S	405B-27-2	55321-87J01	111A-15		220B-40
52131-98L00-YAY	405B-27-1		113A-33	57635-98L00	220A-47
	405B-27-3		180A-2-1		220B-47
54112-93J00	401A-26	55321-87J11	180A-2-2	57710-98L00	407A-4
	405A-11	55321-93J01	405A-19		407B-4
	405B-11		405B-19	58500-98L00	407A-33-1
54120-98L00	401A-24		407A-7		407B-28-1
54127-98L00	401A-32		407B-7	58500-98L10	407A-33-2
54130-98L01	401A-25	55321-94910	335A-24		407B-28-2
54137-93J02	401A-29	56120-98L00	220A-9	58500-98L20	407A-33-3
54140-98J11	401A-33		220B-9		407B-28-3
54151-98L00	405A-9	56122-98L00	220A-15	58500-98L30	407A-33-4
	405B-9		220B-15		407B-28-4
54160-98L00	405A-10	56123-98L00	220A-16	58500-98L40	407A-33-5
	405B-10		220B-16		407B-28-5
54165-98L00	405A-18	56126-98L00	220A-17-1	58500-98L50	407A-33-6
	405B-18		220B-17-1		407B-28-6
54166-95J02	405B-23	56126-98L10	220A-17-2	58500-98L60	407A-33-7
54180-98L01	401A-47		220B-17-2		407B-28-7
54211-98L00-QTN	405A-15-4	56126-98L20	220A-17-3	58500-98L70	407A-33-8
	405B-15-4		220B-17-3		407B-28-8
54211-98L00-Y5S	405A-15-2	56126-98L30	220A-17-4	58500-98L80	407A-33-9
	405B-15-2		220B-17-4		407B-28-9
54211-98L00-YAY	405A-15-1	56126-98L40	220A-17-5	58500-98L90	407A-33-10
	405A-15-3		220B-17-5		407B-28-10

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
58500-98LA0	407A-33-11	58641-98L00	407A-21		420C-3-4
	407B-28-11		407B-21		420D-3-4
58500-98LB0	407A-33-12			61421-98L00-Y5S	420A-3-2
	407B-28-12				420B-3-2
58500-98LC0	407A-33-13				420C-3-2
	407B-28-13				420D-3-2
58520-98L00	407A-34			61421-98L00-YAY	420A-3-1
	407B-29				420A-3-3
58531-98L00	407A-28				420B-3-1
	407B-32				420B-3-3
58540-98L01	407A-38	61124-98L20	410A-41-1		420C-3-1
	407B-38	61124-98L30	410A-41-2		420C-3-3
58541-98L00	407A-29	61131-98L02-QTN	410A-3-4		420D-3-1
	407B-33	61131-98L02-QUA	410A-3-5		420D-3-3
58551-98L00	407A-30	61131-98L02-Y5S	410A-3-2	61422-98L00	420A-51
	407B-34	61131-98L02-YAY	410A-3-1	61422-98L60	420B-51
58561-98L01	407A-31		410A-3-3		420C-51
	407B-35	61134-98L00	410A-4	61422-98L70	420D-51
58600-98L01	407A-35-1	61140-98L02-QTN	410A-5-4	61424-98L01	420A-55-1
	407B-30-1	61140-98L02-QUA	410A-5-5		420A-55-3
58600-98L11	407A-35-2	61140-98L02-Y5S	410A-5-2		420B-55-1
	407B-30-2	61140-98L02-YAY	410A-5-1		420B-55-3
58600-98L21	407A-35-3		410A-5-3		420C-55-1
	407B-30-3	61414-98L00	420A-2		420C-55-3
58600-98L31	407A-35-4		420B-2		420D-55-1
	407B-30-4		420C-2		420D-55-3
58600-98L41	407A-35-5		420D-2	61424-98L10	420A-55-2
	407B-30-5	61416-98L10	420A-47		420B-55-2
58600-98L51	407A-35-6		420B-47		420C-55-2
	407B-30-6		420C-47		420D-55-2
58600-98L61	407A-35-7		420D-47	61424-98L20	420A-55-4
	407B-30-7	61420-98823-AML	420A-1-1		420B-55-4
58600-98L71	407A-35-8		420A-1-3		420C-55-4
	407B-30-8		420B-1-1		420D-55-4
58600-98L81	407A-35-9		420B-1-3	61425-98L00	420A-4
	407B-30-9		420C-1-1		420B-4
58600-98L91	407A-35-10		420C-1-3		420C-4
	407B-30-10		420D-1-1		420D-4
58600-98LA1	407A-35-11		420D-1-3	61426-98L10	420A-5
	407B-30-11	61420-98823-B5H	420A-1-4		420B-5
58600-98LB1	407A-35-12		420B-1-4		420C-5
	407B-30-12		420C-1-4		420D-5
58600-98LC1	407A-35-13		420D-1-4	61427-98L00	420A-6
	407B-30-13	61420-98823-BBK	420A-1-2		420B-6
58620-98L00	407A-36		420B-1-2		420C-6
	407B-31		420C-1-2		420D-6
58631-98L00	407A-32		420D-1-2	61428-98L00	420A-7
	407B-36	61420-98830-QUA	420A-1-5		420B-7
58640-98L00	407A-37	61421-98L00-QTN	420A-3-4		420C-7
	407B-37		420B-3-4		420D-7

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61429-98L00	420A-8		420B-17		410A-31-3
	420B-8		420C-17	61645-93J20-QUA	410A-31-5
	420C-8		420D-17	61649-93J00	410A-48-1
	420D-8	61494-93J01	136A-20		410A-48-3
6142A-98L00	420A-48	61560-98L00	420A-19	61649-93J10	410A-48-2
	420B-48		420B-19		410A-48-4
	420C-48		420C-19	61652-98L00	410A-32
	420D-48		420D-19	61673-93J01	410A-33
61430-98L00-20H	420A-9	61561-98L00	420A-18	61682-98L00	420A-27
	420B-9		420B-18		420B-27
	420C-9		420C-18		420C-27
	420D-9		420D-18		420D-27
61432-98L00-20H	420A-10	61563-98L00	420A-20	61683-98L00	420A-28
	420B-10		420B-20		420B-28
	420C-10		420C-20		420C-28
	420D-10		420D-20		420D-28
61433-98L00	420A-11	61565-98L00	420A-23	61810-98L00-QTN	410A-6-4
	420B-11		420B-23	61810-98L00-QUA	410A-6-5
	420C-11		420C-23	61810-98L00-Y5S	410A-6-2
	420D-11		420D-23	61810-98L00-YAY	410A-6-1
61434-98L00	420A-12	61591-98L00	420A-24		410A-6-3
	420B-12		420B-24	61814-98L00	410A-7
	420C-12		420C-24	61820-98L00-QTN	410A-8-4
	420D-12		420D-24	61820-98L00-QUA	410A-8-5
61435-98L00	420A-52	61610-98L00	420A-25	61820-98L00-Y5S	410A-8-2
61435-98L60	420B-52		420B-25	61820-98L00-YAY	410A-8-1
	420C-52		420C-25		410A-8-3
61435-98L70	420D-52		420D-25	61827-98L00	410A-9
61437-98L00	420A-13	61621-93J01	420A-26	61830-98L00-QTN	410A-10-4
	420B-13		420B-26	61830-98L00-QUA	410A-10-5
	420C-13		420C-26	61830-98L00-Y5S	410A-10-2
	420D-13		420D-26	61830-98L00-YAY	410A-10-1
61438-98L01	420A-14	61632-93J00	410A-24		410A-10-3
	420B-14	61632-98L00	410A-25	61861-98L01-20H	410A-11-1
	420C-14	61633-93J00-QTN	410A-26-4		410A-11-2
	420D-14	61633-93J00-Y5S	410A-26-2	61861-98L01-QUA	410A-11-3
61439-98L00	420A-15	61633-93J00-YAY	410A-26-1	65700-93J14	430A-1
	420B-15		410A-26-3	65770-93J04	475A-1
	420C-15	61633-93J20-QUA	410A-26-5	65770-93J13	430A-2
	420D-15	61634-93J00-QTN	410A-27-4	67200-98J06	543A-1
61441-98L00	420A-44	61634-93J00-Y5S	410A-27-2	67200-98J16	540A-1
	420B-44	61634-93J00-YAY	410A-27-1	67200-98J24	520A-1
	420C-44		410A-27-3	67200-98L00	543B-1
	420D-44	61634-93J20-QUA	410A-27-5	67200-98L10	540B-1
61458-90J01	410A-47	61641-93J10	410A-28	67200-98L20	520B-1
61475-98L00	420A-16		410A-29	67211-98J20	520A-18
	420B-16	61641-93J20	410A-30		520B-18
	420C-16	61645-93J01-QTN	410A-31-4		540A-2
	420D-16	61645-93J01-Y5S	410A-31-2		543A-2
61476-98L00	420A-17	61645-93J01-YAY	410A-31-1	67211-98J30	540A-48

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67212-98J20	543A-7	67246-98J20	540A-50	67271-98J20	520A-2
67212-98J30	540A-8	67251-98J00	540A-3	67271-98J30	543A-8
67212-98L00	543B-4		520A-12	67271-98J40	540A-9
67212-98L10	540B-4	67251-98J20	520A-12	67271-98L00	543B-11
67222-98J00	520A-32		520B-13	67271-98L10	540B-13
67222-98J10	540A-10	67252-98J00	520A-38	67272-98J00	520A-51
	543A-9	67252-98J10	540A-21	67272-98J10	540A-20
67222-98J20	540A-49		543A-20		543A-19
67223-98J00	520A-36	67254-98J00	520A-14	67272-98L00	543B-12
	540A-17		520B-15	67272-98L10	540B-14
	543A-16	67255-98J00	520A-8	67272-98L20	520B-2
67226-98J00	540A-37		520B-9	67273-98J00	543A-27
	540B-8	67256-98J00	520A-10	67273-98J10	540A-51
	543A-36	67256-98L00	520B-11		543A-48
	543B-7	67257-98J00	520A-54	67273-98J20	540A-28
67226-98J10	520A-26		520B-30	67273-98J30	540A-52
	520B-23		540A-43		543A-49
67227-98J00	540A-41		543A-43	67273-98L00	543B-13
67227-98J10	520A-42	67258-98J00	520A-9	67273-98L10	540B-15
	540A-25		520B-10	67274-98J00	543A-29
	543A-24	67259-98J00	520A-11	67277-98J00	540A-53
67227-98J20	520A-21		520B-12		543A-50
	520B-20	67261-98J00	540A-5	67277-98L00	543B-14
67227-98J30	520A-22		543A-5	67277-98L10	540B-16
67227-98L00	520B-34	67261-98J10	540A-6		543B-15
67228-98J50	520A-47	67261-98J20	520A-5	67277-98L20	540B-17
	540A-47		520B-6	67284-98J10	540A-42
	543A-47	67261-98J30	520A-6		543A-42
67233-98J00	520A-15		520B-7	67284-98L00	540B-5
67233-98J10	540A-14	67261-98L00	540B-9		543B-5
	543A-13		543B-8	67284-98L10	540B-6
67234-98J00	520A-17	67261-98L10	540B-10	67284-98L20	520B-4
	520B-17		543B-9	67287-92E00	540A-15
67235-98J00	520A-34	67261-98L20	540B-11		540A-39
67235-98J10	540A-12	67263-98J00	540A-7		540B-18
	543A-11		543A-6		543A-14
67236-98J00	520A-33	67263-98J20	520A-4		543A-38
67236-98J10	540A-11		520B-5		543B-16
	543A-10	67264-98J00	520A-3	67287-98J00	520A-25
67237-98J00	520A-35	67264-98L00	520B-3		520B-22
67237-98J30	543A-12	67265-98J00	520A-7	67288-92E20	540A-36
67237-98J40	540A-13		520B-8		543A-30
67237-98J50	540A-56	67269-98J01	540A-27	67288-92E50	540B-24
67238-98J00	520A-29		543A-26	67288-94310	520B-28
	520B-25	67269-98J10	520A-53	67288-98J00	520A-44
67239-98J00	540A-16	67269-98J20	520A-19		520B-26
	543A-15	67269-98J30	540A-44		540A-35
67246-98J00	520A-31		543A-44		543A-34
67246-98J10	540A-4	67269-98L00	540B-12	67288-98J10	520A-46
	543A-4		543B-10		540A-45

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.		
67288-98J20	543A-45	67296-98JE0	520A-37	99011-98L50-054	420D-56-6		
	520A-39	67296-98JF0	540A-54		420A-56-2		
	540A-22	67296-98JG0	543A-51		420B-56-2		
	543A-21		540A-31		420D-56-2		
67288-98J30	540A-46	67296-98L00	543A-32	99011-98L50-059	420A-56-4		
67288-98J40	543A-46		540B-21		420B-56-4		
	540A-34		543B-19		420C-56-2		
	540B-19		540B-22		420D-56-4		
	543A-40	543B-20					
67288-98J50	543B-17	67297-98J00	540A-55	00000			
	520A-23		540B-23				
	520B-21		543A-52				
	520A-27		543B-21				
67288-98J60	520B-24	67361-90J10	410A-43				
	520A-30		204A-5				
67288-98J70	520A-40	67467-98L00	540B-7	01421-0835C	163A-27		
67292-98J00	540A-23	68111-88L00	543B-6	01547-06127	163B-27		
	543A-22		420A-45		310A-12		
67294-98J00	520A-13		420B-45		322A-35		
	520B-14		420C-45		322B-35		
67296-88D00	540B-25	69711-93E11	420D-45	01547-06167	322C-35		
	543B-22		136A-21		322D-35		
67296-94300	520A-43		70000		01547-06167	420A-29-1	
	540A-33					420B-29-1	
	543A-33	420C-29-1					
	67296-98J00	540A-32	01547-0616C	420D-29-1			
67296-98J10	543A-39	420A-29-2					
	520A-45	420B-29-2					
	543A-41	420C-29-2					
	67296-98J20	543A-35	420D-29-2				
67296-98J30	540A-30	77811-63J00-0PG	420A-46	01547-06207	111A-4		
	520A-50		420B-46		111A-8		
	540A-18		420C-46		420A-30-1		
	540B-20		420D-46		420B-30-1		
67296-98J50	543A-17	90000	01547-0620C	420C-30-1			
	543B-18			420D-30-1			
	520A-48			420A-30-2			
	520B-27			420B-30-2			
540A-29	420C-30-2						
543A-28	420D-30-2						
67296-98J60	540A-40		99011-98L42-03B	420A-56-5	01547-0625C	111A-29	
67296-98J90	543A-31			420D-56-5		01547-0650C	111A-30
	520A-16	420A-56-1		01550-0612A		113A-25	
	520B-16	420B-56-1		01550-0612C		147A-36	
	540A-19	420D-56-1	147A-52				
67296-98JB0	543A-18	99011-98L42-059	420A-56-3	01547-0612A	147A-80		
	520A-20		420B-56-3		147B-36		
	520B-19		420C-56-1		147B-52		
	520A-24		420D-56-3		147B-80		
67296-98JC0	520A-28	99011-98L50-03B	420A-56-6	01550-0612C	162A-34		
67296-98JD0							

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	162B-34		322A-38		322B-39
	303A-12		322B-38		322C-39
	303B-12		322C-38		322D-39
	322A-36		322D-38		113A-28
	322A-37	01550-06257 01550-0625C	310A-7	01550-0835A 01550-0835C	163A-11
	322B-36		111A-41		163A-29
	322B-37		121A-13		163B-11
	322C-36		121B-13		163B-29
	322C-37		121C-13	01550-0840C	326A-29
	322D-36		121D-13		326B-29
	322D-37		136A-18		326C-29
	326A-17		140A-15		326D-29
	326B-17		147A-82		113A-29
	326C-17		147B-82		147A-37
	326D-17		310A-8		147B-37
	175A-11		326A-23		326A-30
01550-0616A 01550-0616C	147A-81		326B-23		326B-30
	147B-81		326C-23		326C-30
	204A-12		326D-23		326D-30
	303A-9		121A-23	01550-0630C	113A-30
	303B-9		121B-23		175A-12
	326A-22		121C-23		113A-41
	326B-22		121D-23		119A-7
	326C-22		136A-14	01550-0855A 01550-08607	111A-18
	326D-22		147A-83		111A-19
	420A-31		147B-83		163A-30
	420A-32		420A-35	01550-0860C	163B-30
	420A-33		420B-35		401A-23
	420A-34		420C-35		113A-31
	420B-31		420D-35		175A-13
	420B-32	01550-06357 01550-0816C	113A-26	01550-08657 01550-0865A 01550-0885A 01550-1025A	175A-14
	420B-33		163A-10		116A-11
	420B-34		163A-28		116B-11
	420C-31		163B-10		401A-8
	420C-32		163B-28	01550-1050A 01560-0830C	326A-24
	420C-33		410A-12		326B-24
	420C-34		111A-17		326C-24
	420D-31		111A-35		326D-24
	420D-32	01550-0820C	113A-2	01570-06127	147A-53
	420D-33		113A-27		147B-53
	420D-34		113A-36		147A-22
	119A-25		301A-18		111A-28
01550-0620A 01550-0620C	119A-26	01550-0830A	119A-13	02142-0408B 02142-0612A 02142-06167	322A-40
	136A-13		119A-17		322A-41
	140A-14		119A-21		322B-40
	162A-35		401A-16		322B-41
	162A-36	01550-0830C	111A-43		322C-40
	162B-35		301A-19		322C-41
	162B-36		401A-22		322D-40
	310A-13		322A-39		322D-41

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
02162-05207	163A-12	08221-16256	220A-33		303B-2
03122-05165	530A-20		220B-33	09106-05030	303A-6
03122-05169	530A-9	08310-00067	322A-42		303B-6
	535A-10		322B-42	09106-06075	113A-10
	535B-10		322C-42	09108-08143	122A-3
03142-05169	530B-6		322D-42	09108-08189	144A-14
	530B-12	08316-10087	322A-2		144B-14
	530B-20		322B-2	09108-10115	405B-28
	530B-29		322C-2	09111-06253	410A-15
	530B-38		322D-2	09116-06121	162A-19
	530B-42	08316-1008C	122A-5		162A-20
	535C-3		144A-15		162B-19
	535C-8		144B-15		162B-20
	535C-13		163A-33		335A-15
03542-06169	420A-36		163B-33	09116-06127	410A-35
	420A-37	08321-01067	322A-43	09116-06202	310A-3
	420A-38		322B-43	09116-06215	136A-19-1
	420A-39		322C-43		326A-18
	420A-40		322D-43		326B-18
	420A-50	08331-41559	220A-14		326C-18
	420B-36		220B-14		326D-18
	420B-37	09100-12085	335A-9-2	09116-06228	140A-10
	420B-38	09100-12086	335A-9-1	09116-06236	405A-20
	420B-39	09100-12092	335A-9-3		405B-20
	420B-40	09100-12124	405A-23		407A-8
	420B-50	09100-12125	335A-9-4		407B-8
	420C-36	09100-12126	335A-9-5	09116-06516	401A-41
	420C-37	09103-05026	410A-34	09116-06524	147A-56
	420C-38	09103-05028	163B-12		147B-56
	420C-39	09103-06093	315A-12	09116-08122	401A-19
	420C-40	09103-06231	303A-10	09116-08126	401A-36
	420C-50		303B-10	09116-08128	180A-19
	420D-36	09103-06266	111A-2	09116-08131	160A-12
	420D-37		111A-6		160B-12
	420D-38	09103-06267	147A-73		401A-45
	420D-39		147B-73	09116-08137	326A-27
	420D-40	09103-06278	335A-20		326B-27
	420D-50	09103-06281	111A-16		326C-27
04211-11129	163A-13		113A-34		326D-27
	163A-31		180A-4	09116-08170	410A-13
	163B-13	09103-06551	136A-19-2	09116-08175	122A-4
	163B-31	09103-08109	401A-14	09116-10134	113A-42
04211-13149	119A-12	09103-08370	163A-23	09116-10135	401A-30
04221-08129	220A-21		163B-23		401A-46
	220B-21	09103-08379	113A-22	09116-10137	401A-34
06111-07004	206A-13	09103-08552	407A-18	09116-10146	111A-42
08110-60020	175A-15		407B-18	09116-10150	407A-9
08113-60020	206A-14	09103-10461	407A-19		407B-9
08113-62000	206A-15		407B-19	09116-10175	337A-41
08113-69047	206A-16	09103-12125	303A-2		337B-42

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	337C-41	09159-14020	335A-17	09162-10005	337A-38
	401A-31	09159-16027	220A-4		337B-39
	401A-35		220A-31		337C-38
	405A-17		220B-4	09164-14008	410A-37
	405B-17		220B-31	09168-06023	113A-23
09116-10176	180A-20	09159-22006	335A-8	09168-10034	407A-12
	405A-2	09159-27001	220A-28		407B-12
	405B-2		220B-28	09168-12012	180A-15
09116-10184	180A-21	09160-04029	420A-21	09169-06053	322A-25
09120-06016	405A-24		420B-21		322A-26
	405B-24		420C-21		322B-25
09125-05048	315A-13		420D-21		322B-26
09125-06063	315A-14	09160-05024	540A-38		322C-25
	335A-5		543A-37		322C-26
	335A-23	09160-05029	315A-15		322D-25
	336A-8	09160-06082	336A-20		322D-26
	336A-18	09160-06084	310A-4	09169-06062	136A-11
	337A-45	09160-06094	206A-6		310A-5
	337A-46	09160-06104	520A-49		326A-19
	337A-47	09160-08091	204A-7		326B-19
	337B-46		206A-7		326C-19
	337B-47	09160-08161	163A-34		326D-19
	337B-48		163B-34	09169-06093	147A-47
	337C-45	09160-10104	116A-10		147B-47
	337C-46		116B-10	09169-08038	401A-37
	337C-47	09160-10129	206A-8		407A-25
	405A-6	09160-10141	407A-11-1		407B-25
	405A-8		407B-11-1	09169-08042	147A-26
	405B-6	09160-10165	407A-11-2		147B-26
	405B-8		407B-11-2	09169-08050	410A-19
09131-05004	530A-27	09160-12066	405A-25	09169-10023	407A-27
09136-06148	410A-14		405B-25		407B-27
09139-06135	410A-16	09160-13014	410A-36	09180-08229	322A-27
	410A-18	09160-13021	335A-12		322B-27
09139-06136	410A-17	09160-13022	335A-11		322C-27
	315A-10	09160-14073	405A-12		322D-27
09140-05005	204A-6		405A-14	09181-12158	175A-9
09140-06023	337A-37		405B-12	09181-25051	220A-6-1
09140-10031	337B-38		405B-14		220A-34-1
	337C-37	09160-14076	401A-9		220B-6-1
	407A-10	09160-15051	401A-28		220B-34-1
	407B-10	09160-16026	220A-5	09181-25052	220A-6-2
09140-10032	336A-19		220B-5		220A-34-2
09140-36003	220A-3	09160-16055	405A-26		220B-6-2
	220B-3		405B-26		220B-34-2
09141-18005	407A-22	09160-18019	407A-23	09181-25054	220A-6-4
	407B-22		407B-23		220A-34-4
09159-08136	163A-32	09160-36007	220A-41		220B-6-4
	163B-32		220B-41		220B-34-4
09159-12062	335A-10	09160-39004	336A-9	09181-25056	220A-6-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-25057	220A-34-6	09181-29007	220B-32-4	09181-50026	220A-35-7
	220B-6-6		220A-32-5		220B-35-7
	220B-34-6		220B-32-5		220A-35-8
	220A-6-7		220A-32-6		220B-35-8
09181-25058	220A-34-7	09181-29008	220B-32-6	09181-50027	220A-35-9
	220B-6-7		220A-32-7		220B-35-9
	220B-34-7		220B-32-7		220A-35-10
	220A-6-8		220A-32-8		220B-35-10
09181-25059	220A-34-8	09181-29010	220B-32-8	09181-77003	220A-8-1
	220B-6-8		220A-32-9		220B-8-1
	220B-34-8		220B-32-9		220A-8-2
	220A-6-9		220A-32-10		220B-8-2
09181-25060	220A-34-9	09181-29011	220B-32-10	09181-77004	220A-8-3
	220B-6-9		336A-10		220B-8-3
	220B-34-9		220A-7-1		220A-8-4
	220A-6-10		220B-7-1		220B-8-4
09181-25061	220A-34-10	09181-40004	220A-7-2	09181-77005	220A-8-5
	220B-6-10		220B-7-2		220B-8-5
	220B-34-10		220A-7-3		220A-8-6
	220A-6-11		220B-7-3		220B-8-6
09181-25062	220A-34-11	09181-40005	220A-7-4	09181-77006	220A-8-7
	220B-6-11		220B-7-4		220B-8-7
	220B-34-11		220A-7-5		220A-8-8
	220A-6-12		220B-7-5		220B-8-8
09181-25063	220A-34-12	09181-40008	220A-7-6	09181-77010	220A-8-9
	220B-6-12		220B-7-6		220B-8-9
	220B-34-12		220A-7-7		220A-8-10
	220A-6-13		220B-7-7		220B-8-10
09181-25130	220A-34-13	09181-40009	220A-7-8	09181-77011	220A-8-11
	220B-6-13		220B-7-8		220B-8-11
	220B-34-13		220A-7-9		220A-8-12
	220A-6-14		220B-7-9		220B-8-12
09181-25160	220A-34-14	09181-40010	220A-7-10	09181-77012	220A-8-13
	220B-6-14		220B-7-10		220B-8-13
	220B-34-14		220A-7-11		204A-8
	220A-6-3		220B-7-11		410A-38
09181-25162	220A-34-3	09181-40011	220A-7-12	09181-77013	121A-9
	220B-6-3		220B-7-12		121B-9
	220B-34-3		220A-35-1		121C-9
	220A-6-5		220B-35-1		121D-9
09181-29003	220A-34-5	09181-50020	220A-35-2	09181-77014	160A-13
	220B-6-5		220B-35-2		160B-13
	220B-34-5		220A-35-3		303A-3
	220A-32-1		220B-35-3		303B-3
09181-29004	220B-32-1	09181-50021	220A-35-4	09181-77015	220B-8-13
	220A-32-2		220B-35-4		204A-8
	220B-32-2		220A-35-5		410A-38
	220A-32-3		220B-35-5		121A-9
09181-29005	220B-32-3	09181-50022	220A-35-6	09181-77016	121B-9
	220A-32-4		220B-35-6		121C-9
					121D-9
					160A-13
09181-29006		09181-50023	220A-35-7	09181-77017	160B-13
			220B-35-7		303A-3
			220A-35-8		303B-3
			220B-35-8		407A-26
09181-29007		09181-50024	220A-35-9	09181-77018	407B-26
			220B-35-9		180A-17
			220A-35-10		180A-18
			220B-35-10		405A-3
09181-29008		09181-50025	220A-35-11	09181-77019	405B-3
			220B-35-11		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09202-08007	405B-29	09263-30064	220A-43	09282-45001	220A-13
	407A-13		220B-43		220B-13
	407B-13		220A-10		119A-4
	206A-9		220B-10		116A-14
09204-01006	206A-10	09265-25038	220A-20	09283-32044	116B-14
	336A-21		220B-20		121A-22
	407A-24		220A-19		121B-22
	407B-24		220B-19		121C-22
09204-03003	111A-3	09265-25048	220A-29	09283-91001	121D-22
	111A-7		220B-29		220A-45
	111A-27		220A-37		220B-45
	401A-7		220B-37		410A-39
09206-08001	401A-15	09265-28006	407A-5	09300-40003	410A-39
	326A-28		407B-5		410A-40
	326B-28		220A-11		337A-39
	326C-28		220B-11		337C-39
09206-11006	326D-28	09265-50002	220A-12	09306-04005	322A-28
	220A-22		220B-12		322B-28
	220B-22		140A-12		322C-28
	113A-6		113A-11		322D-28
09206-13019	111A-20	09280-00047	163A-9	09320-04013	322A-8
	410A-44-1		163B-9		322B-8
	410A-44-2		407A-14		322C-8
	420A-22		407B-14		322D-8
09206-14004	420A-49	09280-05007	113A-24	09320-08510	322A-29
	420B-22		220A-23		322B-29
	420B-49		220B-23		322C-29
	420C-22		111A-14		322D-29
09206-15001	420C-49	09280-18004	113A-35	09320-08517	147A-27
	420D-22		180A-5		147B-27
	420D-49		175A-10		136A-12
	136A-16		111A-32		310A-6
09229-04055	401A-42	09280-22020	162A-21	09320-09016	326A-20
	144A-11		162B-21		326B-20
	144B-11		220A-24		326C-20
	180A-16		220B-24		326D-20
09246-08006	401A-43	09280-26006	401A-44	09280-26006	162A-22
	147A-74		140A-13		162B-22
	147B-74		220A-49		162A-23
	121A-10		220B-49		162B-23
09247-14041	121B-10	09280-69001	119A-6	09320-10076	410A-20
	121C-10		407A-16		410A-21
	121D-10		407B-16		410A-22
	204A-9		119A-27		410A-23
09247-14042	119A-3	09282-17011	204A-10	09321-06036	322A-30
	220A-38		220A-50		322B-30
	220B-38		220B-50		322C-30
	119A-2		220A-44		322D-30
09248-12009	220A-51	09282-22008	220B-44	09321-10049	410A-21
	220B-51		336A-11		420A-41
					420B-41

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.		
09329-12006	420C-41	09401-11425	162B-30	09403-26402	322D-31		
	420D-41		144A-13		322A-32		
	420A-42		144B-13		322B-32		
	420B-42		147A-31		322C-32		
	420C-42		147B-31		322D-32		
09329-14003	420D-42	09401-13423	163A-21	09407-08401	530A-14		
	410A-23		163B-21		540B-28		
	147A-48		430A-3		522A-3		
09343-70503-040	147B-48	09401-13425	162A-31	09407-10404	522B-3		
09343-70503-600	147A-86		162B-31		09407-14403	315A-18	
09352-50003-06A	147B-86	09401-14409	147A-76	09407-14407	315A-19		
	147A-29		147B-76		326A-21		
	09352-50006-600	147B-29	09401-18410	163A-25		326B-21	
162A-24		163B-25			326C-21		
		162A-25	09401-25406	162A-32		326D-21	
	162A-26	162B-32			331A-12		
09352-70119-600	162B-24	09403-07323	147A-32	09407-20405	410A-42-2		
	162B-25		147B-32		410A-42-1		
	162B-26		315A-16				
	162A-27	09403-09330	326A-6		09407-25402		
	162B-27		326B-6				
	09360-14009	144A-12			326C-6	09408-00008	322A-33
	09360-14014	144B-12			326D-6		322B-33
09367-08005	162A-28	09403-12412	310A-14		322C-33		
	162B-28		09403-13308	147A-77		322D-33	
09380-21002	337A-40	09403-13310		147B-77	09408-00050	147A-89	
	337B-41		147A-50	147B-89			
09380-24007	337C-40			147B-50	09408-00054	147A-85	
	220A-30		163A-26	147B-85			
		220B-30		163B-26	09408-00056	147A-33	
09380-38003	336A-12	09403-13402	522A-23			147B-33	
09380-40004	220A-46			540B-27	09408-00121	147A-79	
	220B-46		543B-24			147B-79	
09381-22010	116A-5	09403-13413	162A-33-1	09408-00142	147A-34		
	116B-5		303A-11-1		147A-84		
09383-04002	410A-45		303B-11-1		147B-34		
09385-08004	204A-11	09403-13414	162A-33-2	09408-00173	147B-84		
09387-38002	405A-5		162B-33		147A-90		
	405B-5		303A-11-2		147B-90		
09401-08412	147A-30		303B-11-2	09408-00198	147A-35		
	147B-30	09403-14416	322B-44		147B-35		
09401-08413	162A-29			322D-44	09408-00327	322A-34	
	162B-29	09403-16307	147A-51	322B-34			
09401-11423	147A-49			147B-51		322C-34	
	147A-75	09403-17403	147A-78		322D-34		
			147B-78	09408-00337	147A-91		
	147B-49	09403-19412	315A-17			147B-91	
	147B-75		09403-25001	322A-31	09409-05302-5PK	410A-22	
	147B-88			322B-31		420A-43	
09401-11424	162A-30		322C-31		420B-43		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09420-05009	420C-43				
	420D-43				
	160A-14				
	160B-14				
	220A-25				
09421-04008	220B-25				
	206A-12				
	336A-22				
09440-05031	336A-23				
	522A-14				
09440-19028	522B-13				
	322A-11				
09443-10043	322B-11				
	322C-11				
09481-10501	322D-11				
	322A-12				
09481-10504	322B-12				
	322C-12				
	322D-12				
	523A-2				
	322A-13				
09481-30501	322B-13	09481-30504			
	322C-13				
	322D-13				
	523B-2				
	522A-4				
09481-40401	522B-4				
	322A-14				
	322B-14				
09481-40403	322C-14				
	322D-14				
	322A-15				
09481-60403	322B-15				
	322C-15				
	322D-15				
	111A-33				
	420A-53				
09482-00642	420B-53	09800-81835			
	420C-53				
	420D-53				
09816-00175	420A-54				
	420B-54				
	420C-54				
	420D-54				

SUZUKI DF350A/325A/300B PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material Development Group, Automobile & Motorcycle Service Engineering Dept.
300 Takatsuka, Minami, Hamamatsu, Japan

SUZUKI MOTOR CORPORATION