

SUZUKI

PARTS CATALOGUE

DF9.9B/15A/20A

DF9.9B/BR
DF9.9BT/BTH
DF15A/AR
DF15AT
DF20A/AR
DF20AT/ATH



OUTBOARD MOTOR

020 021 022

2021-9

P01/P40

1ST EDITION

This part catalogue supersedes all the following part catalogue with immediate effect

Model of catalogue	Parts catalogue No.
DF9.9B/15A/20A_P01/40_021	9900B-45484-000

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF9.9B/15A/20A production start from 2019 to 2021.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	S, L, X	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 02002F-123456		
123456~	: From E. NO. 02002F-123456		
12 x 34 x 5.6	 Figures in the description column		
	show the dimensions of parts.		
ID OD T(or W, L)			

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".


6. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	ENGINE NO.
DF9.9B_020	P01	00995F	S, L, X	00995F-040001~
DF9.9B_021	P01	00995F	S, L, X	00995F-140001~
DF9.9B_022	P01	00995F	S, L, X	00995F-240001~
DF9.9BR_020	P01	00995F	S, L, X	00995F-040001~
DF9.9BR_021	P01	00995F	S, L, X	00995F-140001~
DF9.9BR_022	P01	00995F	S, L, X	00995F-240001~
DF9.9BT_020	P01	00995F	S, L, X	00995F-040001~
DF9.9BT_021	P01	00995F	S, L, X	00995F-140001~
DF9.9BT_022	P01	00995F	S, L, X	00995F-240001~
DF9.9BTH_020	P01	00995F	S, L, X	00995F-040001~

MODEL	DESTINATION	TYPE	TRANSOM	ENGINE NO.
DF15A_020	P01	01504F	S, L, X	01504F-040001~
DF15A_021	P01	01504F	S, L, X	01504F-140001~
DF15A_022	P01	01504F	S, L, X	01504F-240001~
DF15AR_020	P01	01504F	S, L, X	01504F-040001~
DF15AR_021	P01	01504F	S, L, X	01504F-140001~
DF15AR_022	P01	01504F	S, L, X	01504F-240001~
DF15AT_020	P01	01504F	S, L, X	01504F-040001~
DF15AT_021	P01	01504F	S, L, X	01504F-140001~
DF15AT_022	P01	01504F	S, L, X	01504F-240001~
DF20A_020	P01, P40	02002F	S, L, X	02002F-040001~
DF20A_021	P01, P40	02002F	S, L, X	02002F-140001~
DF20A_022	P01, P40	02002F	S, L, X	02002F-240001~
DF20AR_020	P01	02002F	S, L, X	02002F-040001~
DF20AR_021	P01	02002F	S, L, X	02002F-140001~
DF20AR_022	P01	02002F	S, L, X	02002F-240001~
DF20AT_020	P01	02002F	S, L, X	02002F-040001~
DF20AT_021	P01	02002F	S, L, X	02002F-140001~
DF20AT_022	P01	02002F	S, L, X	02002F-240001~
DF20ATH_020	P01	02002F	S, L, X	02002F-040001~
DF20ATH_021	P01	02002F	S, L, X	02002F-140001~
DF20ATH_022	P01	02002F	S, L, X	02002F-240001~


[illegible][illegible]

FIG.111A

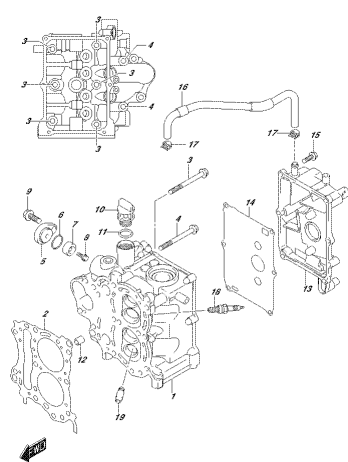


DFGM_P01_022_111A
PUMP HEAD

FIG.113A

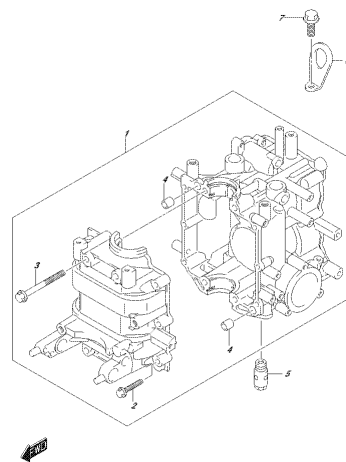


DFGM_P01_022_113A
PUMP HEAD

FIG.116A

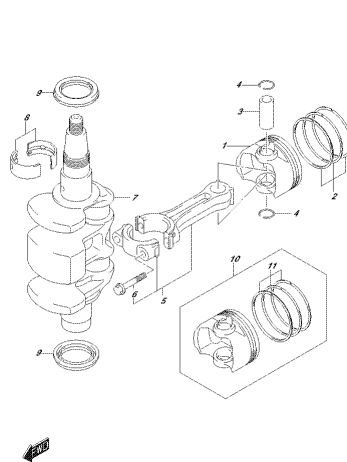


DFGM_P01_022_116A
PUMP HEAD

FIG.120A

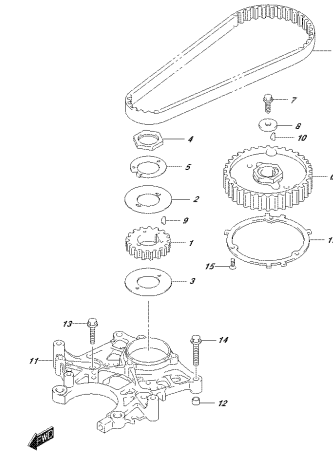


DFGM_P01_022_120A
TIMING BELT

FIG.121A

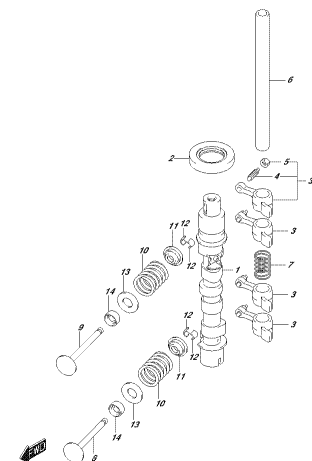


DFGM_P01_022_121A
CAM SHAFT

FIG.121B

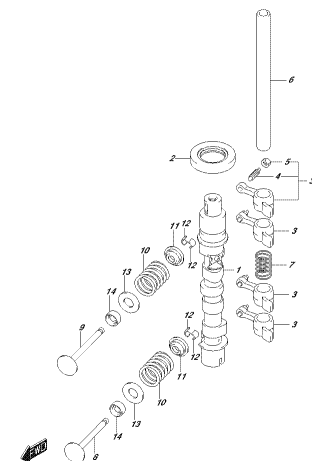


DFGM_P01_022_121B
CAM SHAFT

FIG.126A

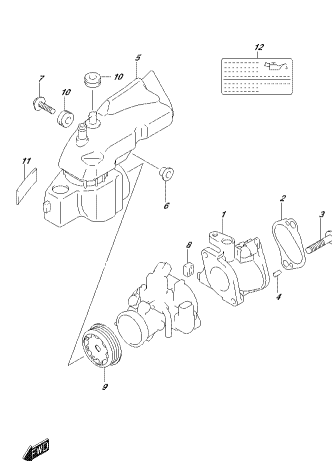


DFGM_P01_022_126A
PISTON MANIFOLD

FIG.126B

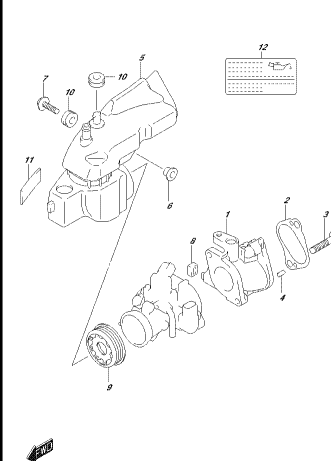


DFGM_P01_022_126B
PISTON MANIFOLD

FIG.126C

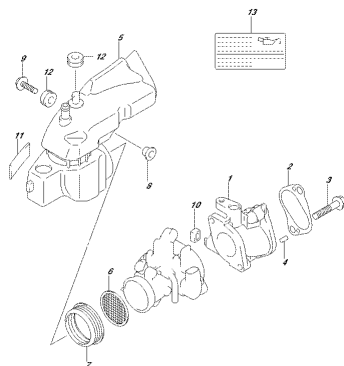


DFCML_PVL_022_1026
FUEL MANIFOLD

FIG.144A

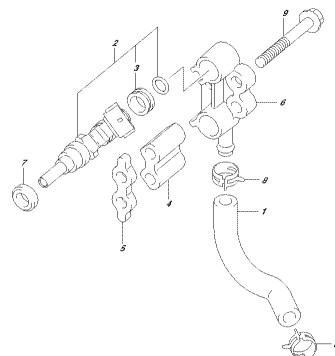


DFCML_PVL_022_1044
FUEL INJECTOR

FIG.146A

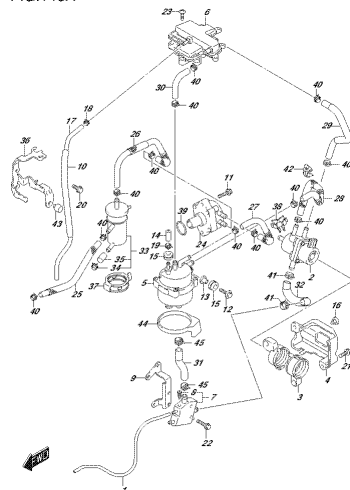


DFCML_PVL_022_1064
FUEL PUMP

FIG.146B

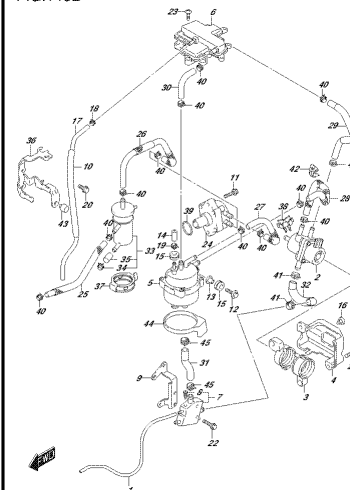


DFCML_PVL_022_1067
FUEL PUMP

FIG.160A

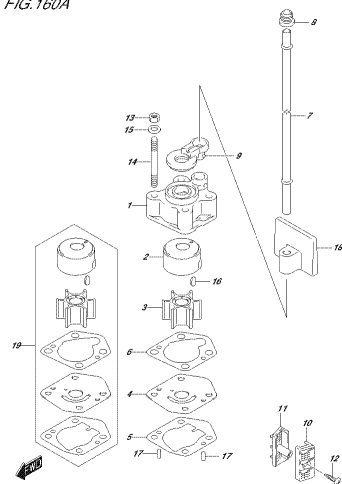


DFCML_PVL_022_1064
WATER PUMP

FIG.160B

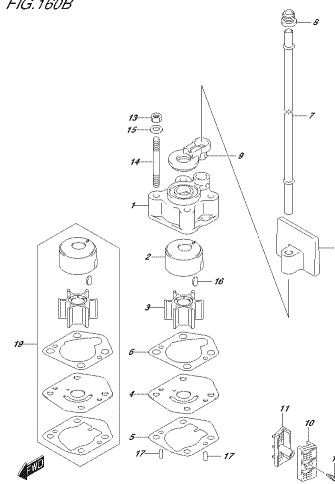


DFCML_PVL_022_1067
WATER PUMP

FIG.162A

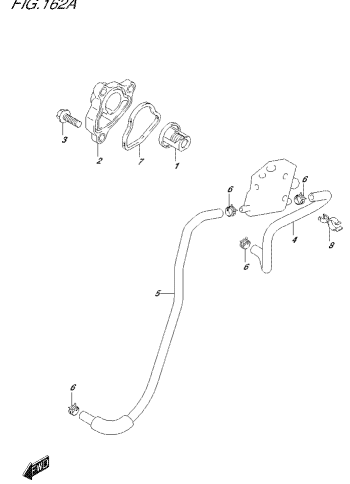


DFCML_PVL_022_1064
THERMOSTAT

FIG.163A

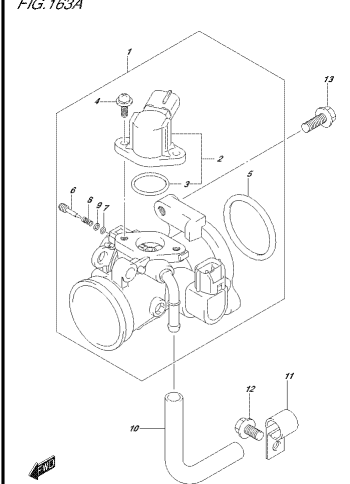


DFCML_PVL_022_1064
THERMOSTAT

FIG.163B

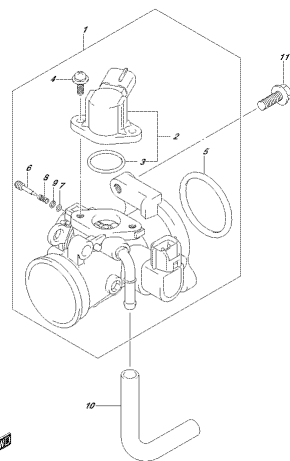


DFGM_RVL_022_163B
THROTTLE BODY

FIG.166A

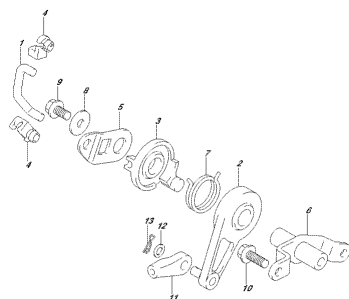


DFGM_RVL_022_166A
THROTTLE CABLE

FIG.167A

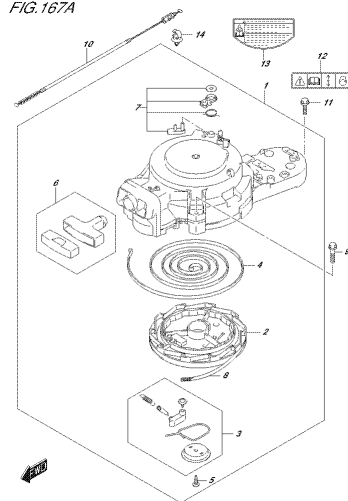


DFGM_RVL_022_167A
THROTTLE BODY

FIG.167B

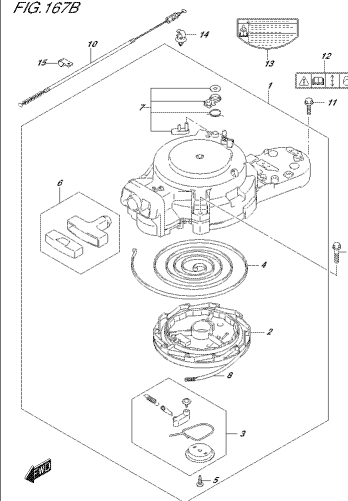


DFGM_RVL_022_167B
THROTTLE BODY

FIG.175A

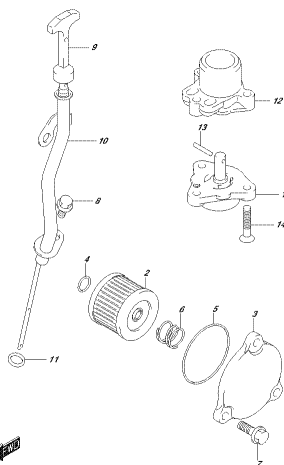


DFGM_RVL_022_175A
THROTTLE CABLE

FIG.206A

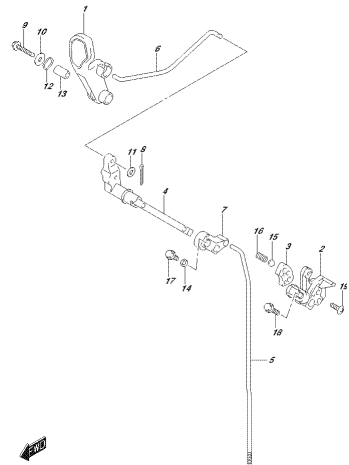


DFGM_RVL_022_206A
THROTTLE CABLE

FIG.206B

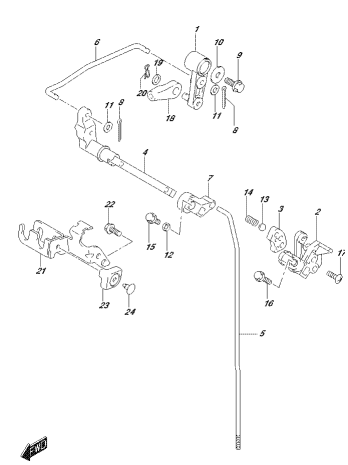


DFGM_RVL_022_206B
THROTTLE CABLE

FIG.210A

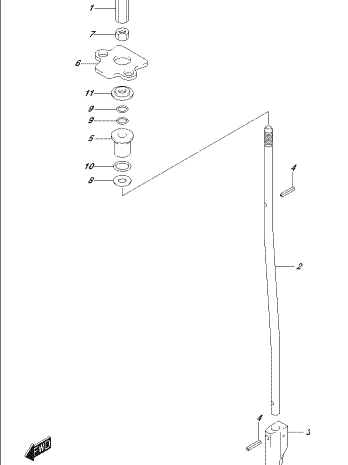


DFGM_RVL_022_210A
THROTTLE CABLE

FIG.220A

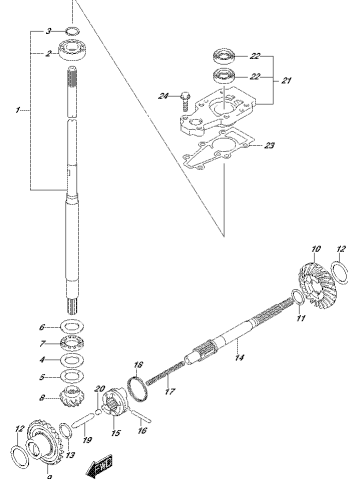


DFGM_P01_022_204
ITW438520Y

FIG.220B

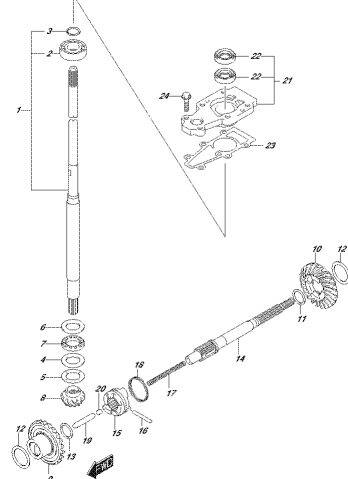


DFGM_P01_022_205
ITW438520Y

FIG.301A

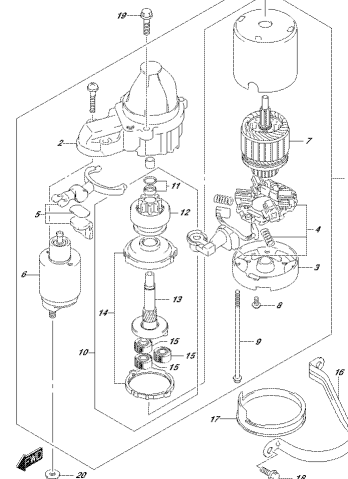


DFGM_P01_022_304
ITW438520Y

FIG.303A

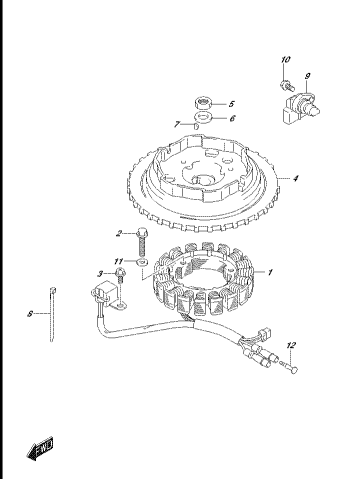


DFGM_P01_022_304
KAGH723

FIG.303B

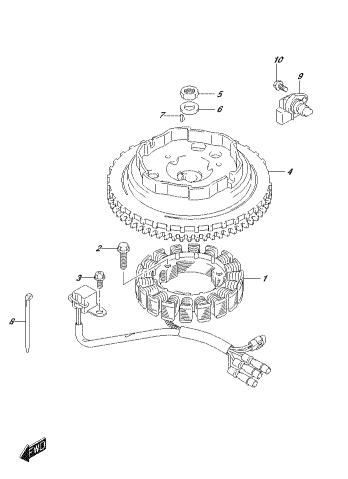


DFGM_P01_022_305
KAGH723

FIG.310A

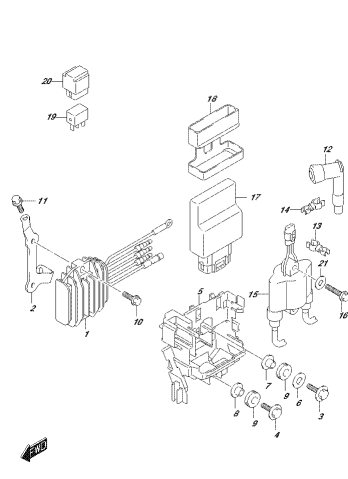


DFGM_P01_022_310A
RECYCLING CODE

FIG.310B

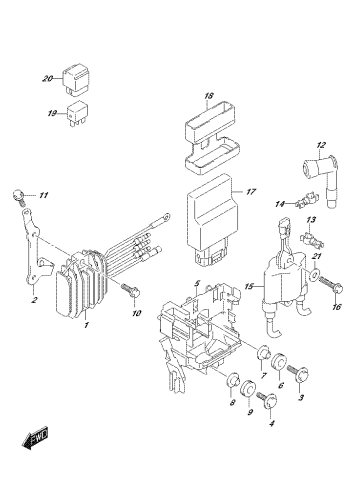


DFGM_P01_022_310B
RECYCLING CODE

FIG.310C

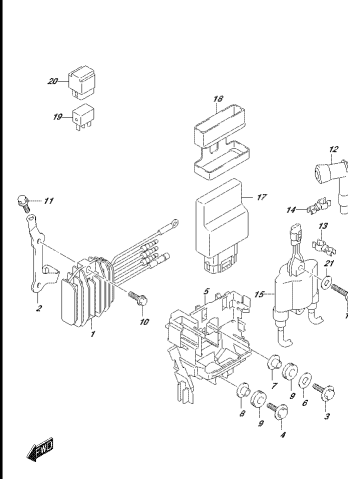


DFGM_P01_022_310C
RECYCLING CODE

FIG.310D

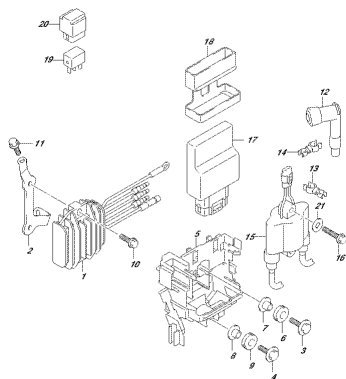


DFBM_PVL_022_310D
RECYCLING INFORMATION CODE

FIG.310E

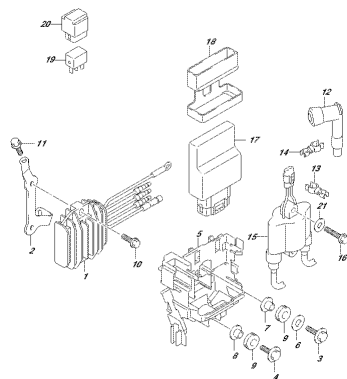


DFBM_PVL_022_310E
RECYCLING INFORMATION CODE

FIG.310F

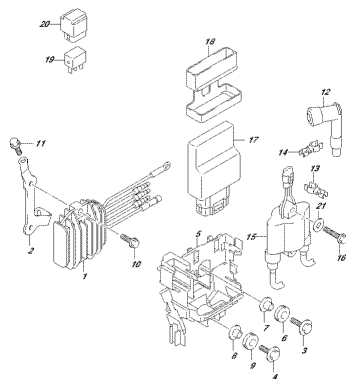


DFBM_PVL_022_310F
RECYCLING INFORMATION CODE

FIG.310G

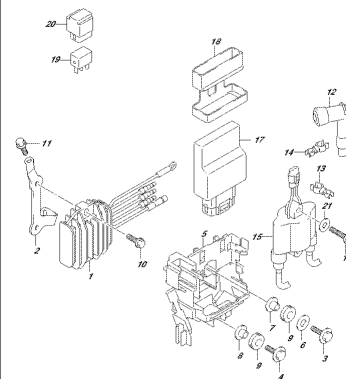


DFBM_PVL_022_310G
RECYCLING INFORMATION CODE

FIG.310H

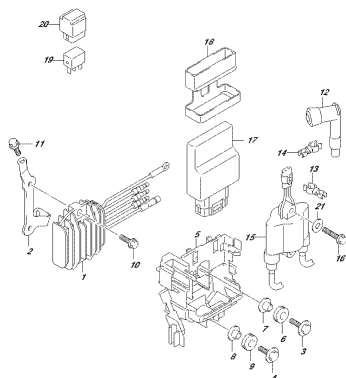


DFBM_PVL_022_310H
RECYCLING INFORMATION CODE

FIG.310J

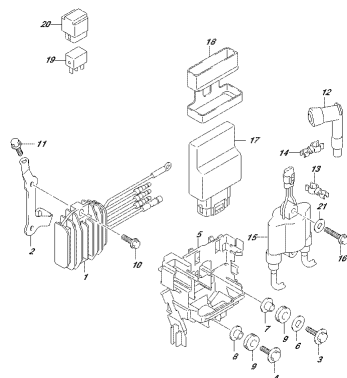


DFBM_PVL_022_310J
RECYCLING INFORMATION CODE

FIG.310K

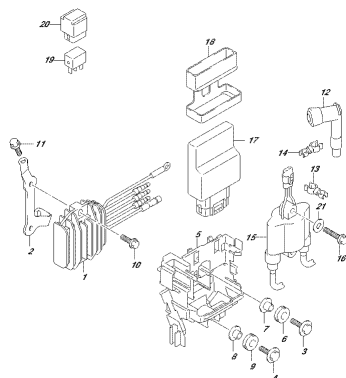


DFBM_PVL_022_310K
RECYCLING INFORMATION CODE

FIG.310L

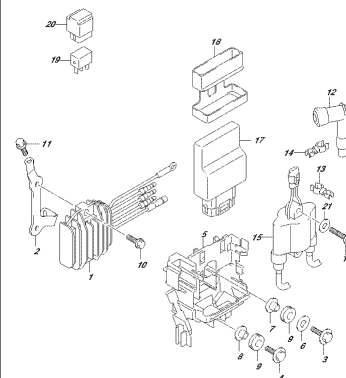


DFBM_PVL_022_310L
RECYCLING INFORMATION CODE

FIG.327A

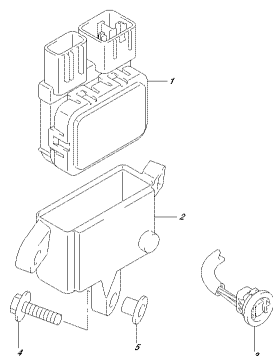


DFGM_R11_022_027A
PTT SWITCH

FIG.327B

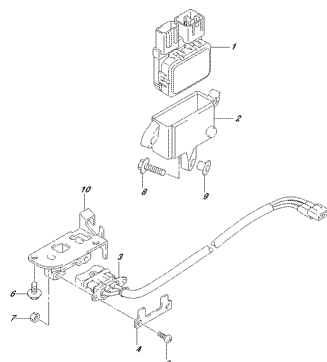


DFGM_R11_022_027B
PTT SWITCH

FIG.334A

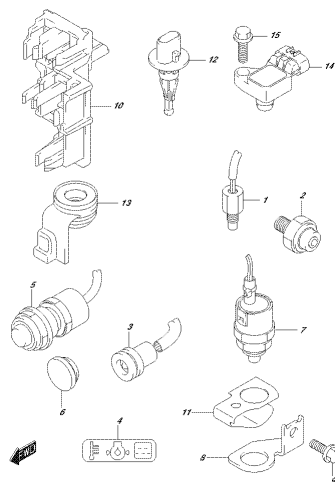


DFGM_R11_022_034A
SENSOR SWITCH

FIG.334B

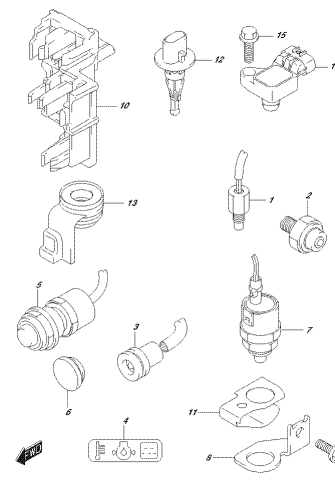


DFGM_R11_022_034B
SENSOR SWITCH

FIG.334C

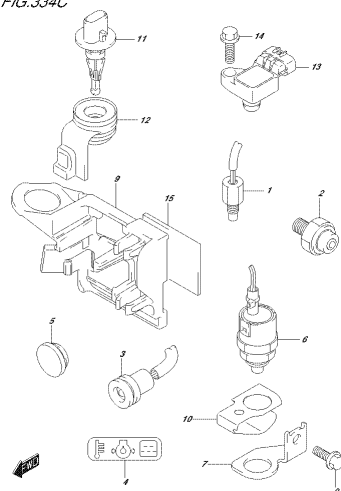


DFGM_R11_022_034C
SENSOR SWITCH

FIG.334D

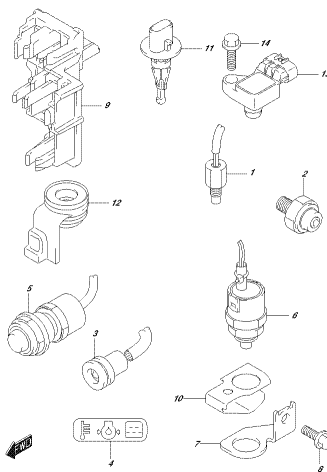


DFGM_R11_022_034D
SENSOR SWITCH

FIG.335A

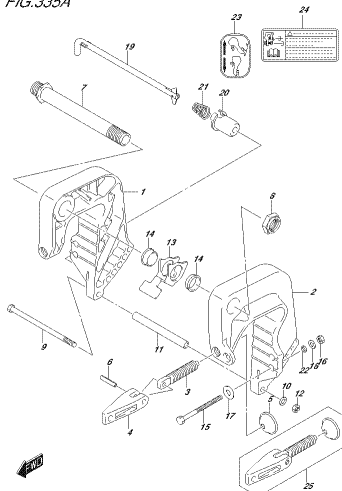


DFGM_R11_022_035A
CLAMP BRACKET

FIG.335B

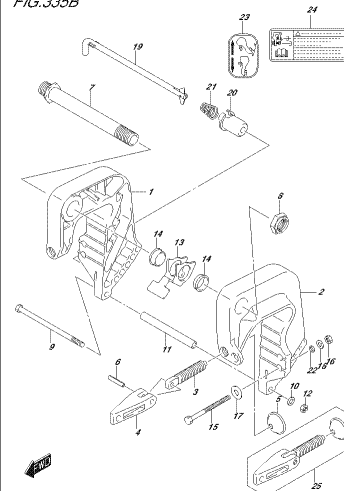


DFGM_R11_022_035B
CLAMP BRACKET

FIG.335C

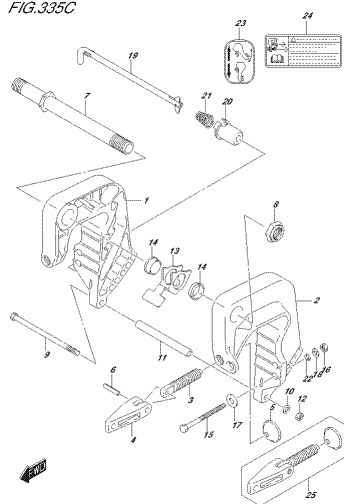


DFGM_P01_022_030C
DIAUP SHACDET

FIG.335D

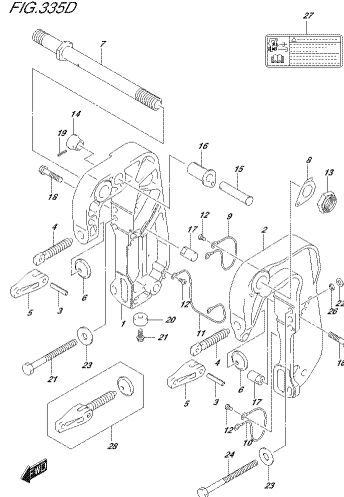


DFGM_P01_022_030D
DIAUP SHACDET

FIG.336A

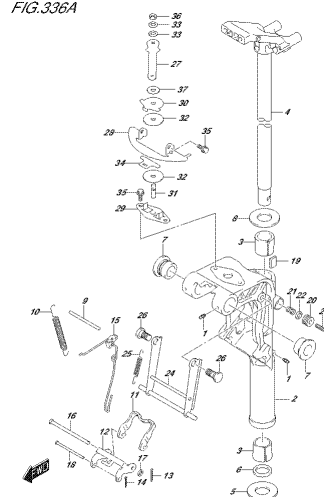


DFGM_P01_022_036A
SHRIEL SHACDET

FIG.336B

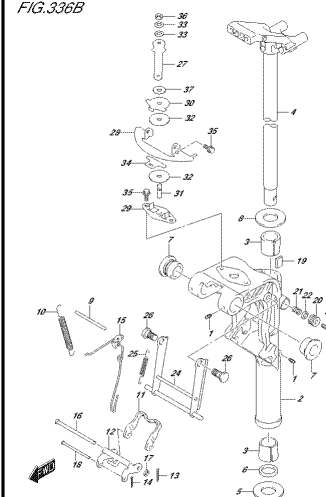


DFGM_P01_022_036B
SHRIEL SHACDET

FIG.336C

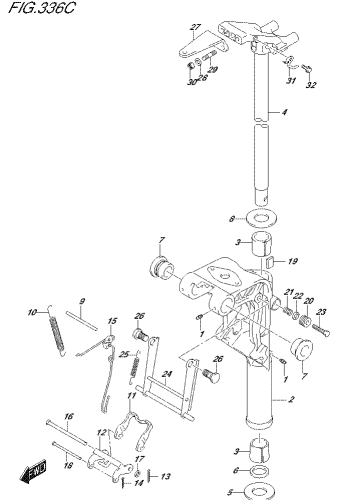


DFGM_P01_022_036C
SHRIEL SHACDET

FIG.336D

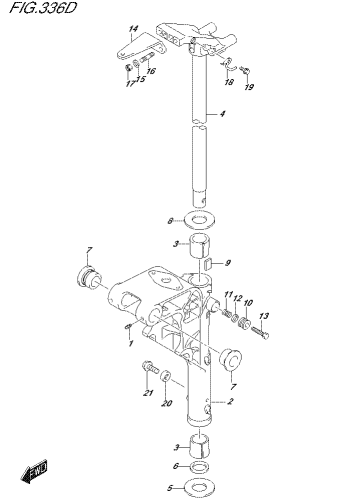


DFGM_P01_022_036D
SHRIEL SHACDET

FIG.336E

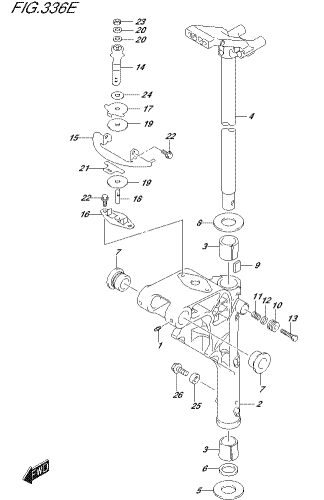


DFGM_P01_022_036E
SHRIEL SHACDET

FIG.338A

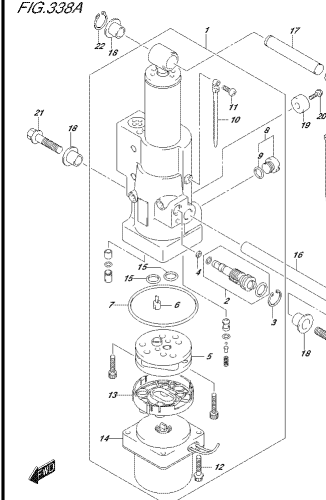


DFGM_P01_022_038A
TET CYLINDER

FIG. 340A

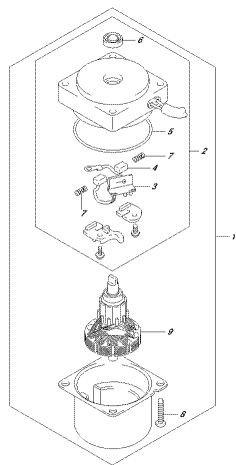


DF204 PUL 022 3404
PTT MOTOR

FIG. 401A

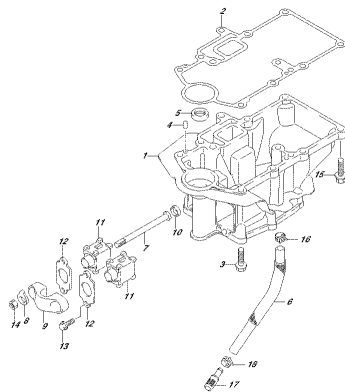


DF200A_P01_022_401A
ENGINE HOLDER

FIG. 405A

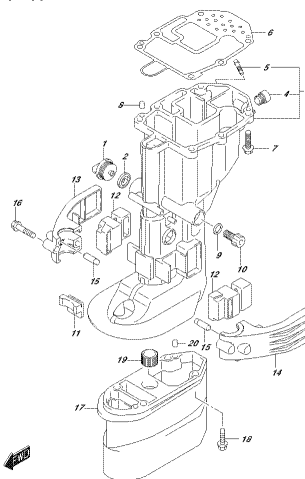


DF200A_P01_002_002A
DRIVE SHAFT HOUSING

FIG. 405B

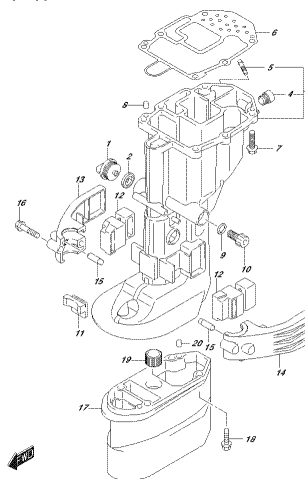


DF20A, P/L 022-4028
DRIVE SHAFT HOUSING

FIG. 407A

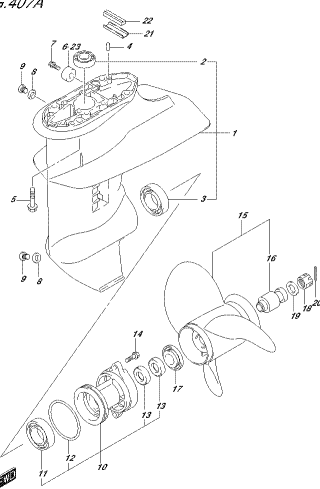


DF204 P/L 022 407A
GEAR CASE

FIG. 407B

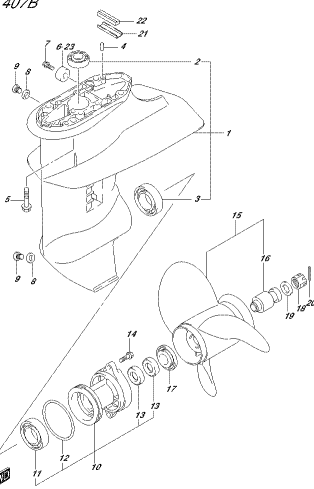


DF200A_P01_022_4079
GEAR CASE

FIG. 407C

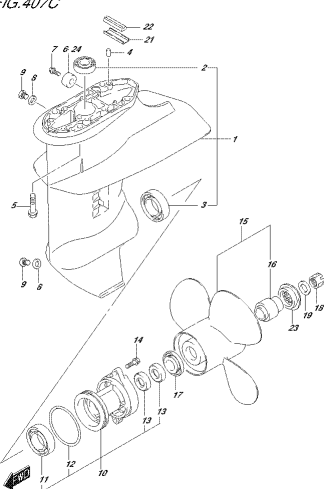

DESK POL 022 407C
GEAR CASE

FIG. 407D

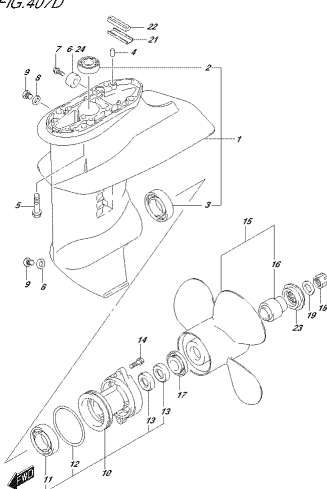

DEBOM POL 022 407D
GEAR CASE

FIG.407E

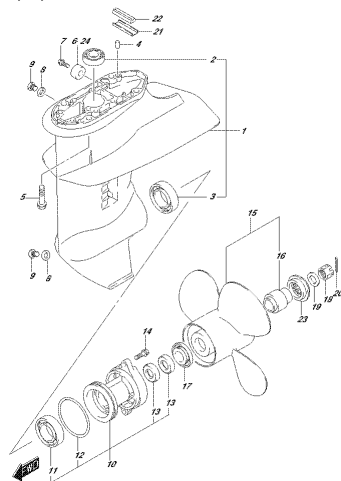


FIG. 407E
SEAL GASKET

FIG.407F

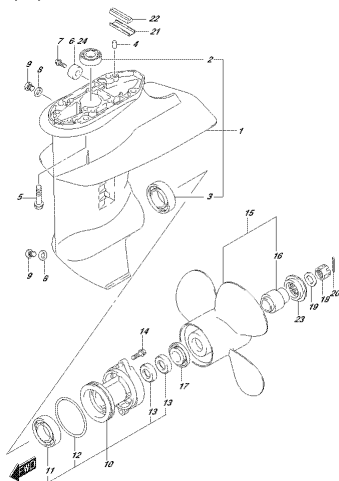


FIG. 407F
SEAL GASKET

FIG.407G

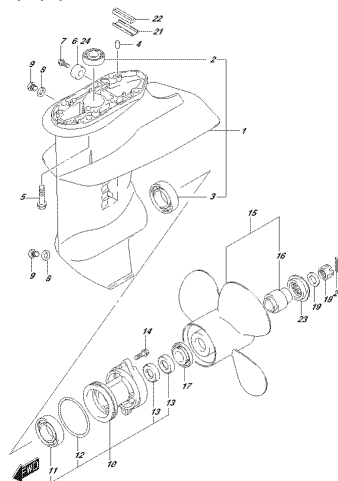


FIG. 407G
SEAL GASKET

FIG.410A

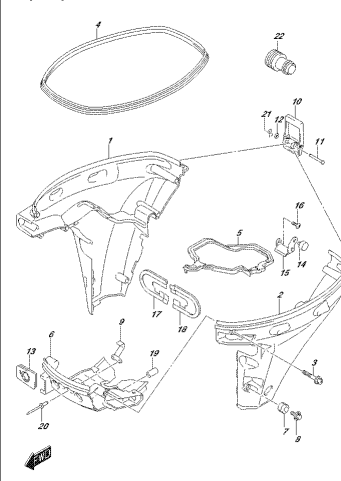


FIG. 410A
SEAL GASKET

FIG.410B

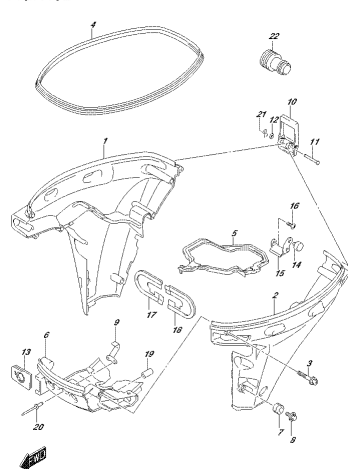


FIG. 410B
SIDE COVER

FIG.410C

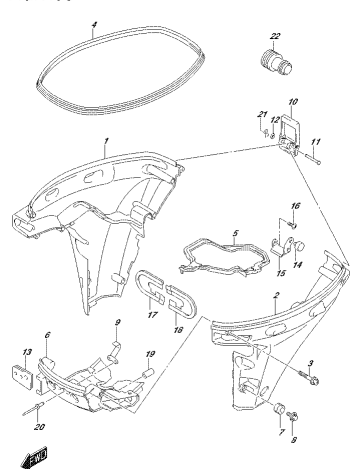


FIG. 410C
SIDE COVER

FIG.410D

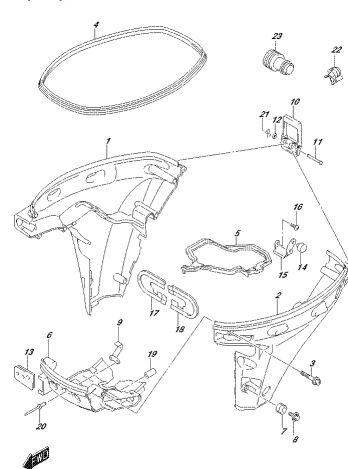


FIG. 410D
SIDE COVER

FIG.410E


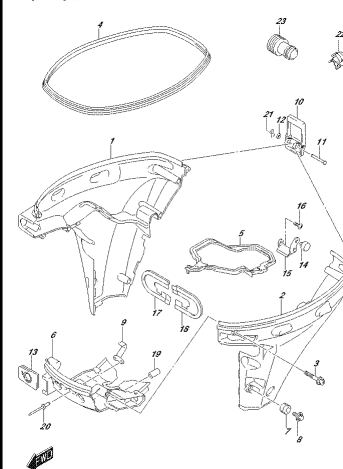



FIG. 410E
SIDE COVER

FIG.420A

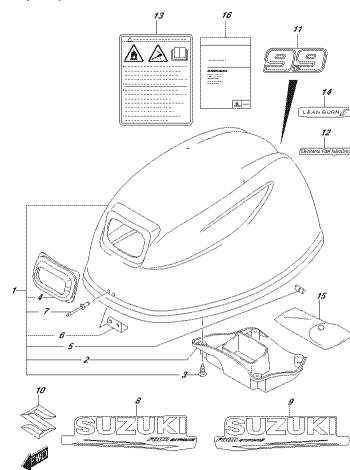


DF30ML, PVL 422, 424
EXTENSION COVER

FIG.420B

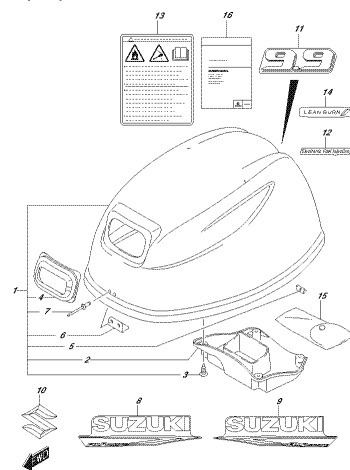


DF30ML, PVL 422, 425
EXTENSION COVER

FIG.420C

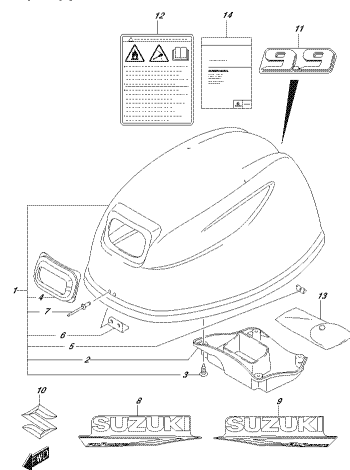


DF30ML, PVL 422, 426
EXTENSION COVER

FIG.420D

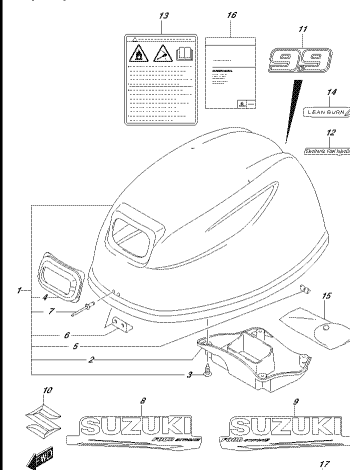


DF30ML, PVL 422, 427
EXTENSION COVER

FIG.420E

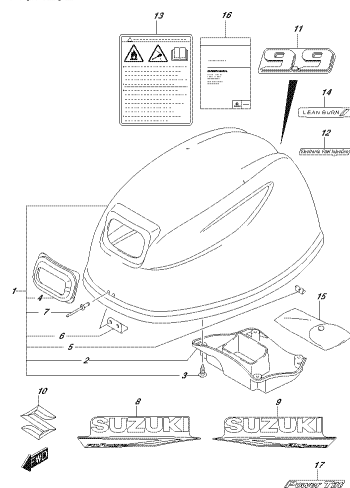


DF30ML, PVL 422, 428
EXTENSION COVER

FIG.420F

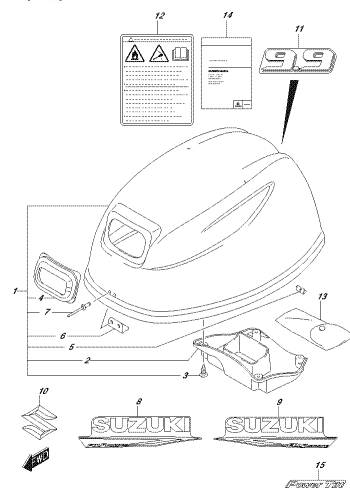


DF30ML, PVL 422, 429
EXTENSION COVER

FIG.420G

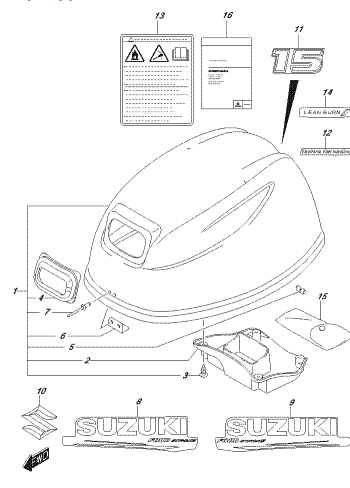


DF30ML, PVL 422, 430
EXTENSION COVER

FIG.420H

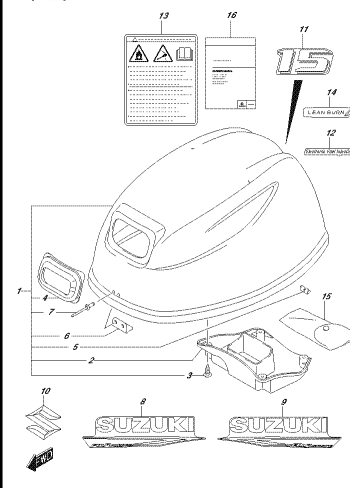


DF30ML, PVL 422, 431
EXTENSION COVER

FIG.420J

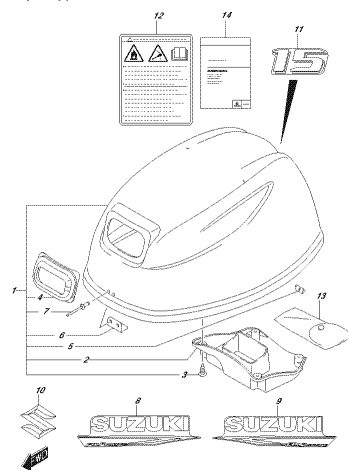


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420K

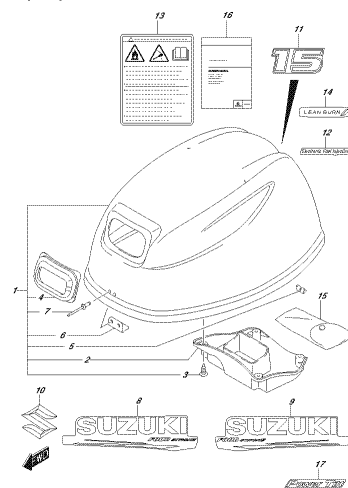


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420L

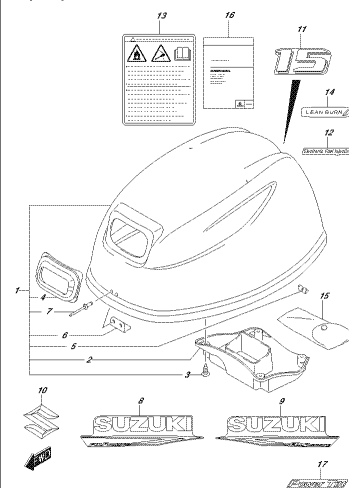


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420M

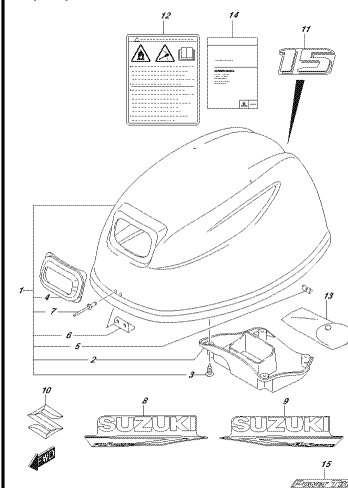


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420N

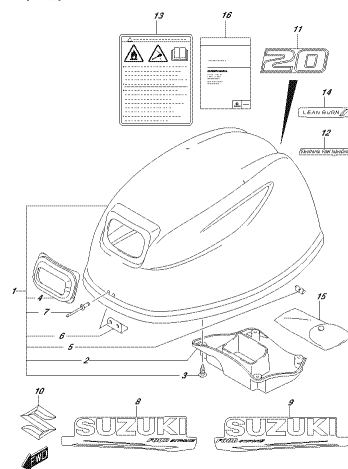


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420P

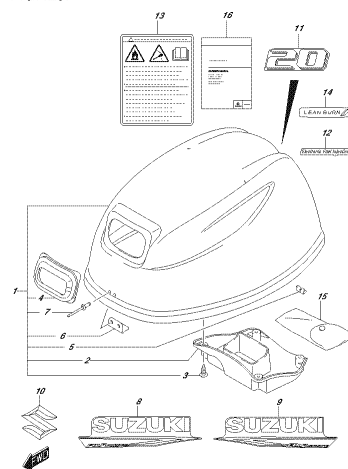


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420R

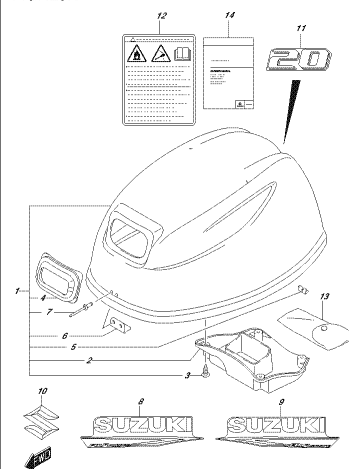


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420S

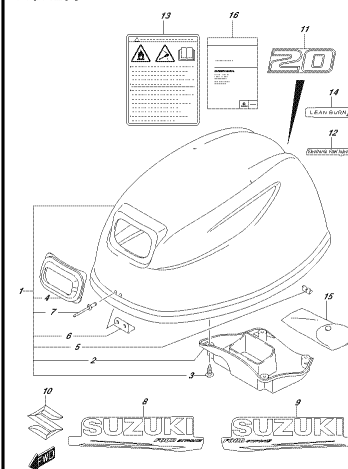


DF20M, P/L, 422, 424
ENGINE COVER

FIG.420T

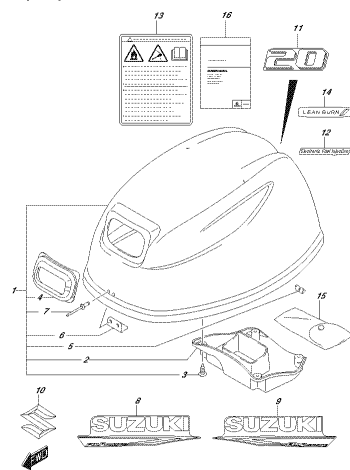


DFCM1_P01_022_420T
ENGINE COVER

FIG.420U

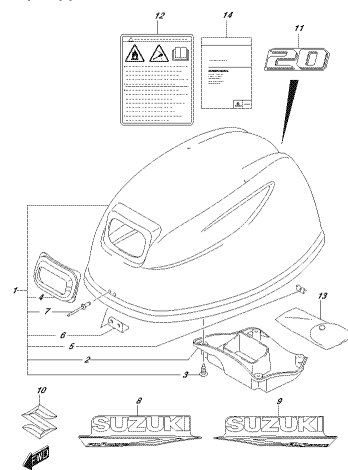


DFCM1_P01_022_420U
ENGINE COVER

FIG.420V

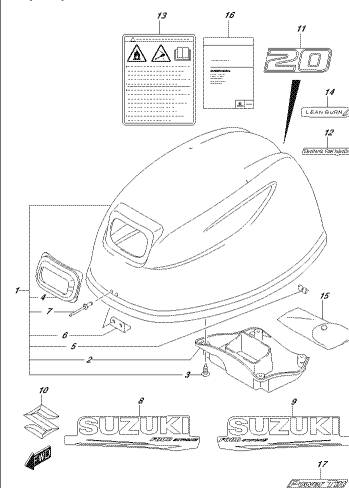


DFCM1_P01_022_420V
ENGINE COVER

FIG.420W

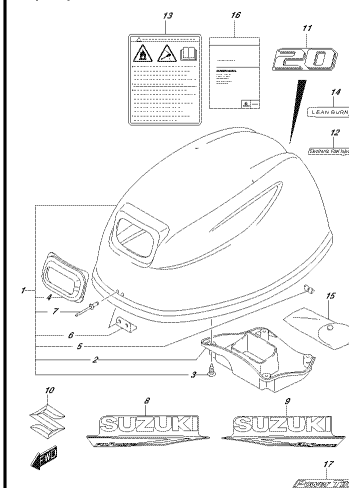


DFCM1_P01_022_420W
ENGINE COVER

FIG.420X

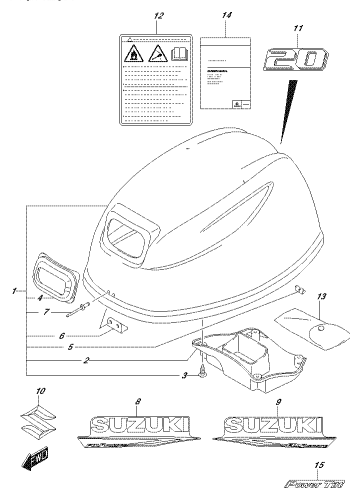


DFCM1_P01_022_420X
ENGINE COVER

FIG.432A

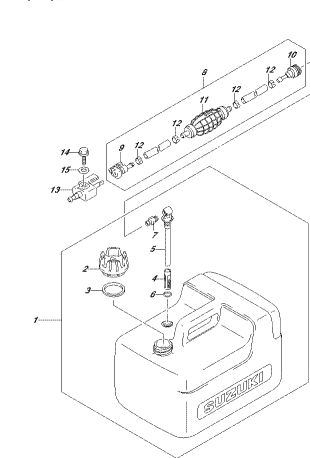


DFCM1_P01_022_432A
FUEL TANK

FIG.442A

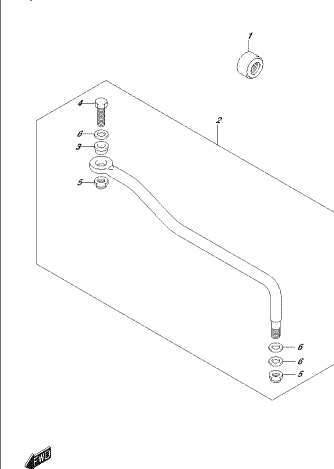


DFCM1_P01_022_442A
FUEL TANK

FIG.444A

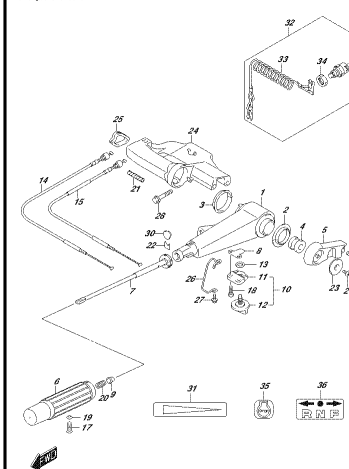


DFCM1_P01_022_444A
TELEGRAPH HANDLE

FIG.444B

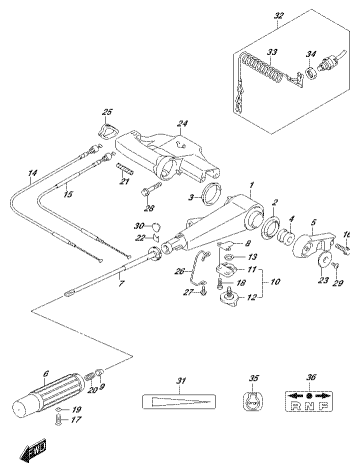


DFGM_PRL_022_441B
REMOTE HANDLE

FIG.450A

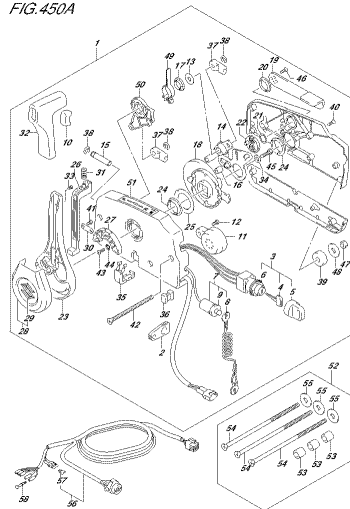


DFGM_PRL_022_450A
REMOTE CONTROL

FIG.450B

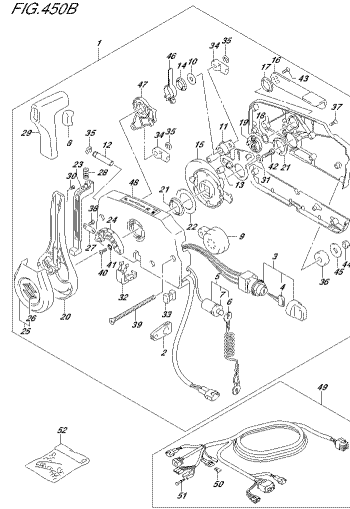


DFGM_PRL_022_450B
REMOTE CONTROL

FIG.450C

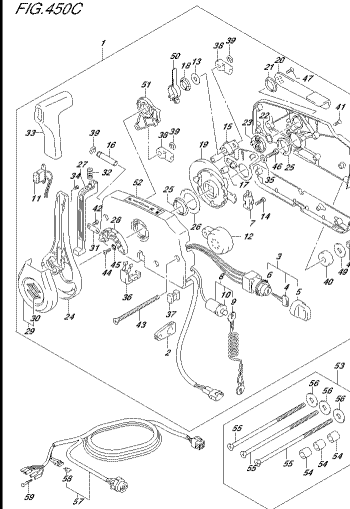


DFGM_PRL_022_450C
REMOTE CONTROL

FIG.450D

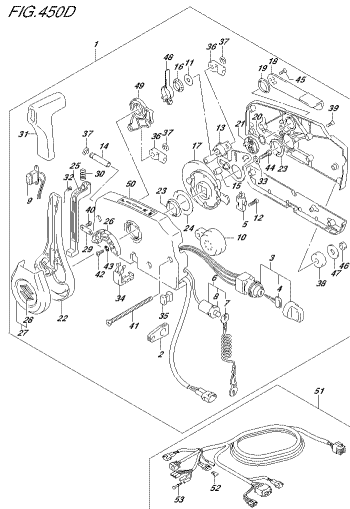


DFGM_PRL_022_450D
REMOTE CONTROL

FIG.501A

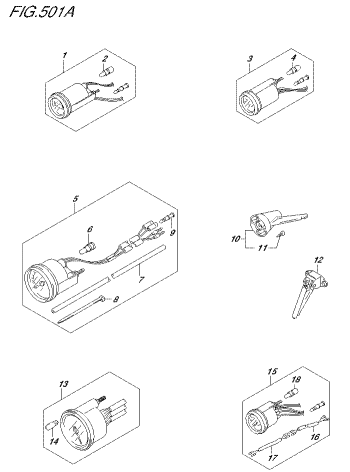


DFGM_PRL_022_501A
OPTIMETER

FIG.501B

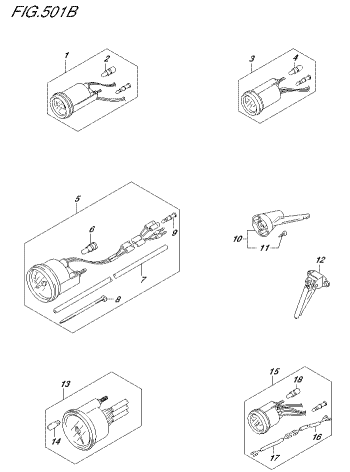


DFGM_PRL_022_501B
OPTIMETER

FIG.508A

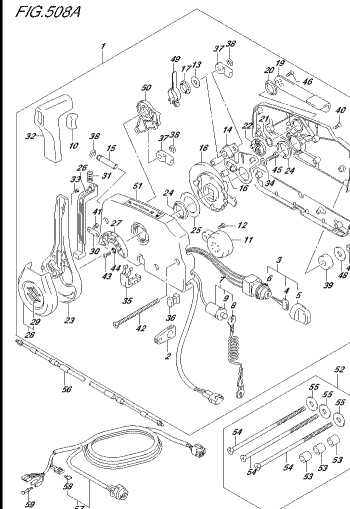


DFGM_PRL_022_508A
OPTIMETER CONTROL

FIG.508B

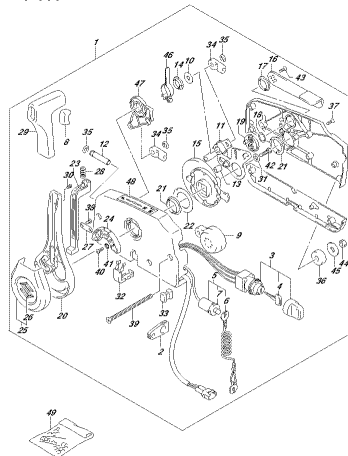


DCRM_P01_022_8082
OPT-REMOTE CONTROL

FIG.513A

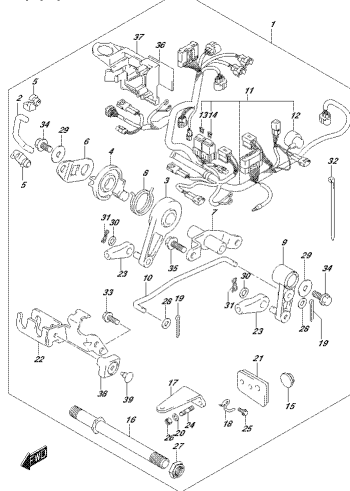


DCRM_P01_022_8104
OPT-REMOTE CONTROL PARTS

FIG.515A

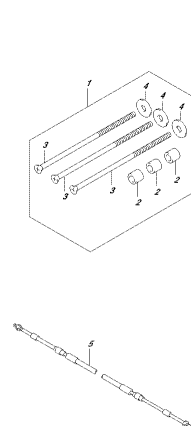


DCRM_P01_022_8104
OPT-REMOTE CONTROL

FIG.515B

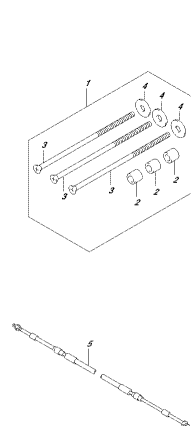


DCRM_P01_022_8102
OPT-REMOTE CONTROL

FIG.521A

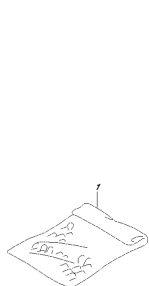


DCRM_P01_022_8114
OPT-IR-RECEIVER

FIG.521B

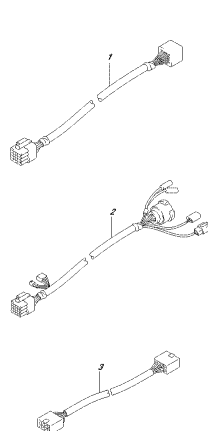


DCRM_P01_022_8118
OPT-IR-RECEIVER

FIG.530A

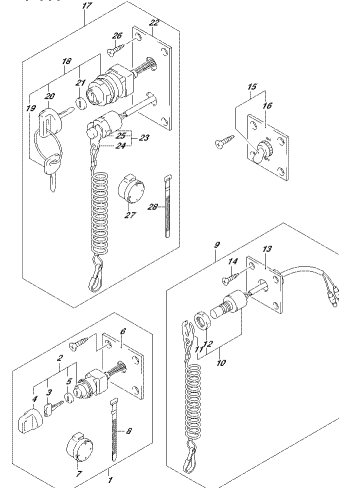

DCRM_P01_022_8304
OPT-IR-RECEIVER

FIG.530B

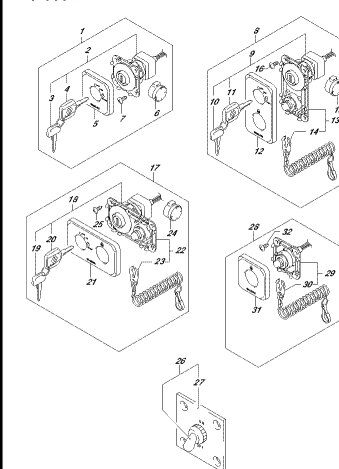

DCRM_P01_022_8308
OPT-IR-RECEIVER

FIG.544A

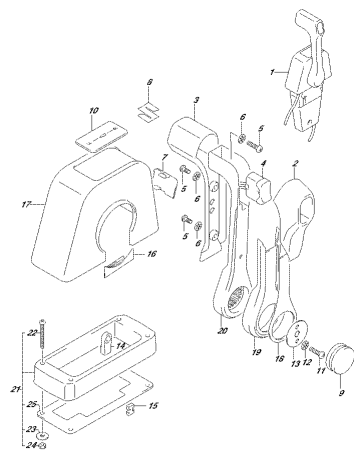


FIG. 544A
OPTIMOTE CONTROL ASSY SINGLE (1)

FIG.544B

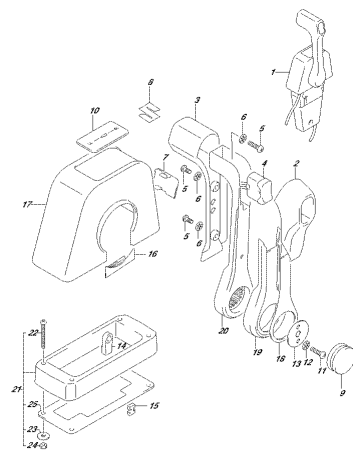


FIG. 544B
OPTIMOTE CONTROL ASSY SINGLE (1)

FIG.544C

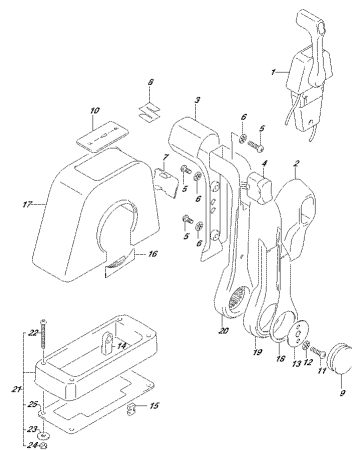


FIG. 544C
OPTIMOTE CONTROL ASSY SINGLE (1)

FIG.545A

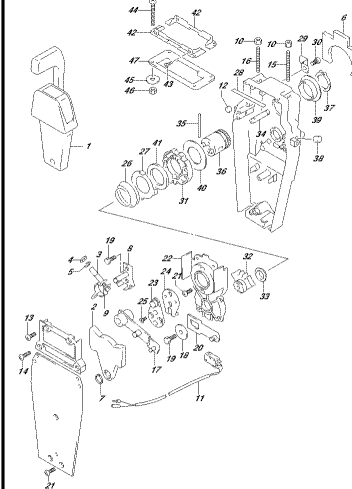


FIG. 545A
OPTIMOTE CONTROL ASSY SINGLE (2)

FIG.545B

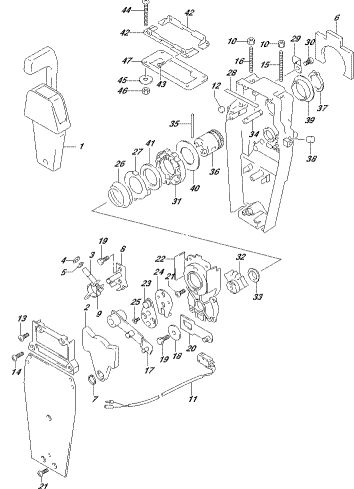


FIG. 545B
OPTIMOTE CONTROL ASSY SINGLE (2)

FIG.545C

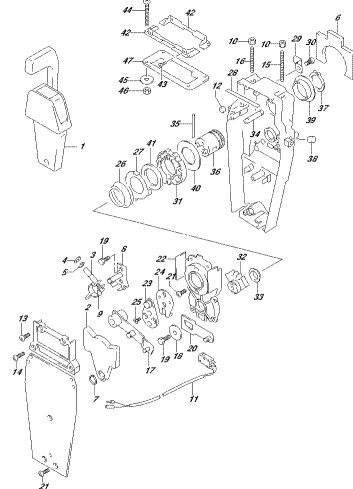


FIG. 545C
OPTIMOTE CONTROL ASSY SINGLE (2)

FIG.546A

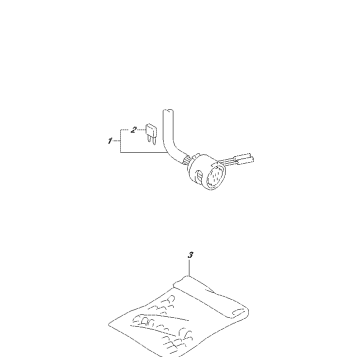


FIG. 546A
OPTIMOTE CABLE (ELECTRIC STARTER)

FIG.546B


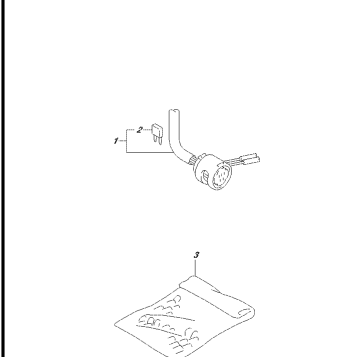



FIG. 546B
OPTIMOTE CABLE (ELECTRIC STARTER)

FIG.553A

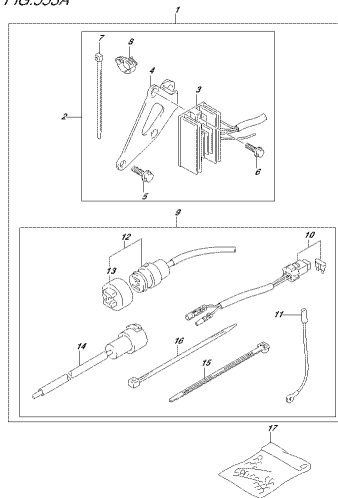


DEGM_P01_022_853A
OPT-ELECTRICAL (MANUAL STARTER)

FIG.561A

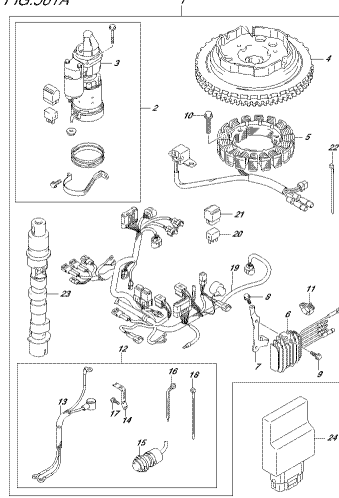


DEGM_P01_022_861A
OPT-ELECTRICAL MOTOR (MANUAL STARTER)

FIG.561B

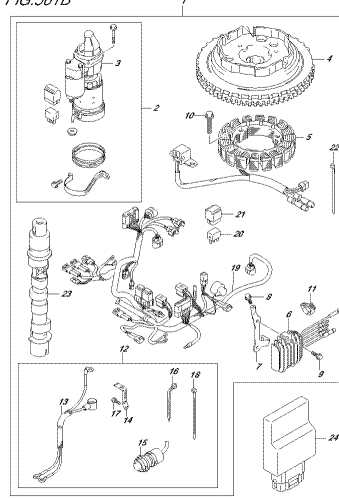


DEGM_P01_022_861B
OPT-ELECTRICAL MOTOR (MANUAL STARTER)

FIG.561C

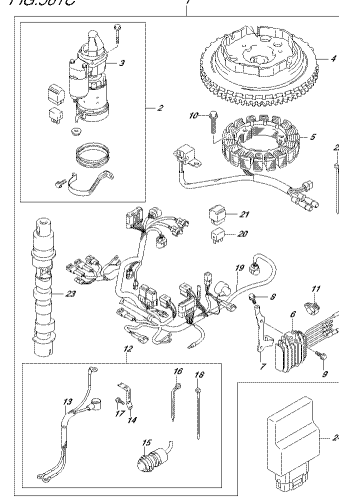


DEGM_P01_022_861C
OPT-ELECTRICAL MOTOR (MANUAL STARTER)

FIG.561D

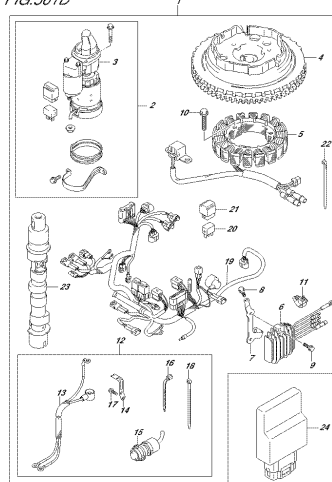


DEGM_P01_022_861D
OPT-ELECTRICAL MOTOR (MANUAL STARTER)

FIG.575A

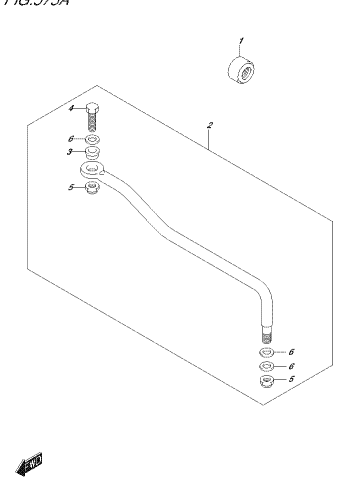


DEGM_P01_022_875A
OPT-ELECTRICAL

FIG.583A

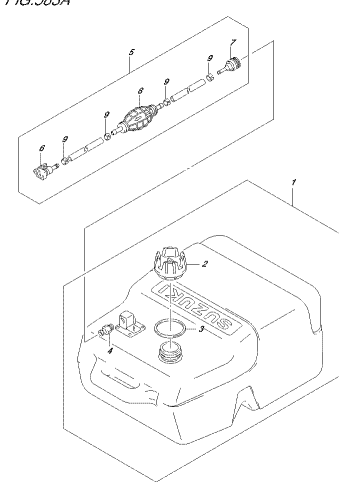

DEGM_P01_022_883A
OPT-ELECTRICAL

FIG.583B

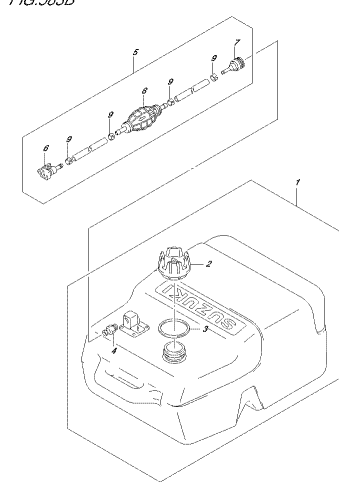

DEGM_P01_022_883B
OPT-ELECTRICAL

FIG.111A

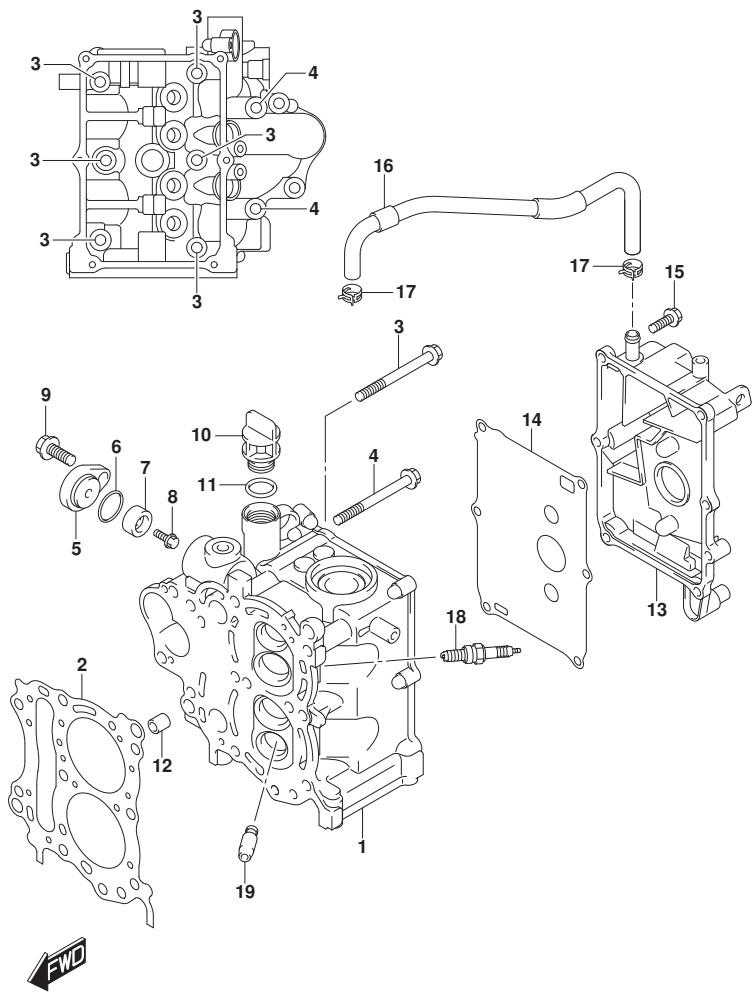


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11110-89L01	HEAD, CYLINDER	1	
2	11141-89L00	GASKET, CYLINDER HEAD	1	
3	09119-08L02	BOLT (8X72)	6	
4	09119-08L01	BOLT (8X77)	2	
5	11261-93J00	COVER, PROTECTION ANODE	1	
6	09280-22019	O RING (D:1.9,ID:21.8)	1	
7	55321-87J01	ANODE, PROTECTION	1	
8	09103-06281	BOLT (6X14)	1	
9	01550-0820C	BOLT	1	
10	11382-93E00	CAP, OIL FILLER	1	
11	09280-17003	O RING (D:3.1,ID:16.8)	1	
12	04211-11129	PIN	2	
13	11170-89L00	COVER, CYLINDER HEAD	1	
14	11162-89L01	GASKET, CYLINDER HEAD COVER	1	
15	01550-0620C	BOLT	6	
16	11174-89L00	HOSE, BREATHER	1	
17	09401-12413	CLIP	2	
18	09482-00661	SPARK PLUG (MR6K-9)	2	NGK
19	11115-93E00-001	GUIDE, VALVE	4	OPT

FIG.113A

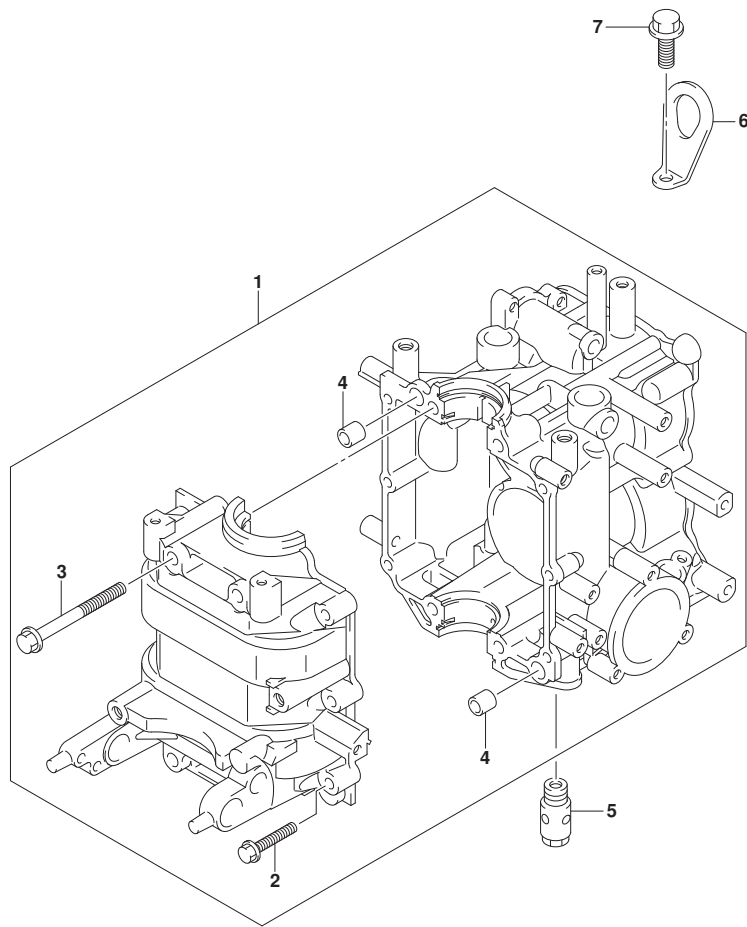


FIG.113A (1-B-3) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	11300-89L03	BLOCK ASSY, CYLINDER	1	020	
1-2	11300-89L11	BLOCK ASSY, CYLINDER	1	021,022	
2	01550-06357	.BOLT	6		
3	01560-08757	.BOLT	4		
4	04211-11129	.PIN	2		
5	16440-11D00	REGULATOR ASSY, ENGINE OIL	1		
6	11291-91B50	HOOK, ENGINE	1	OPT	
7	01550-08207	BOLT	1	OPT	



FIG.116A

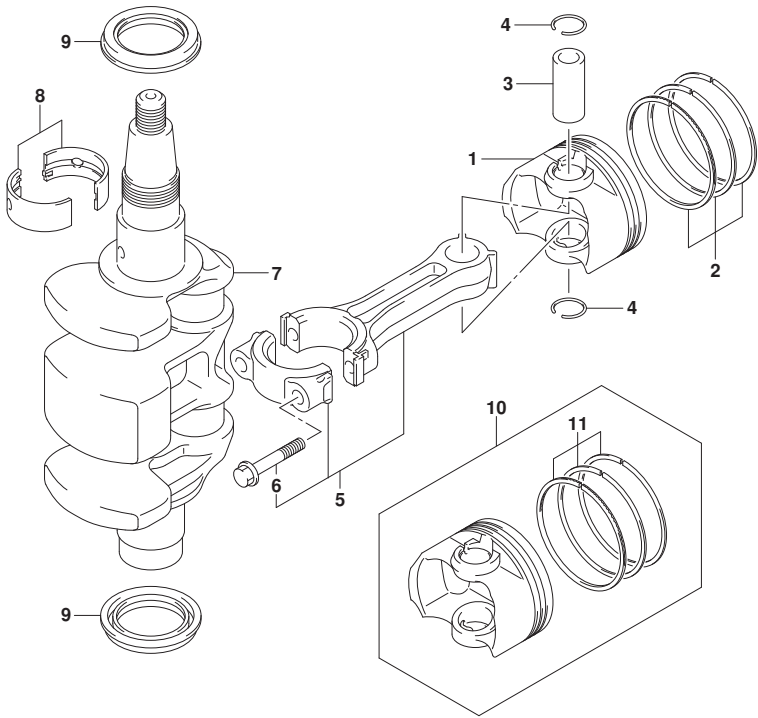


FIG.116A (1-B-4) CRANKSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-89L10-0B0	PISTON	2	
2	12140-89L10	RING SET, PISTON	2	
3	12151-89L00	PIN, PISTON	2	
4	09381-16001	CIRCLIP	4	
5	12160-89L11	CONNROD ASSY	2	
6	12163-89L02	.BOLT, CONNROD	4	
7	12220-89L00	CRANKSHAFT	1	
8	12341-89L10	BEARING, CRANKSHAFT	4	
9	09283-32048	OIL SEAL (32X44X6.5)	2	
10	12100-89L30-050	PISTON SET (OS:0.50)	2	OPT
11	12140-89L10-050	.RING SET, PISTON	2	OPT



FIG.120A

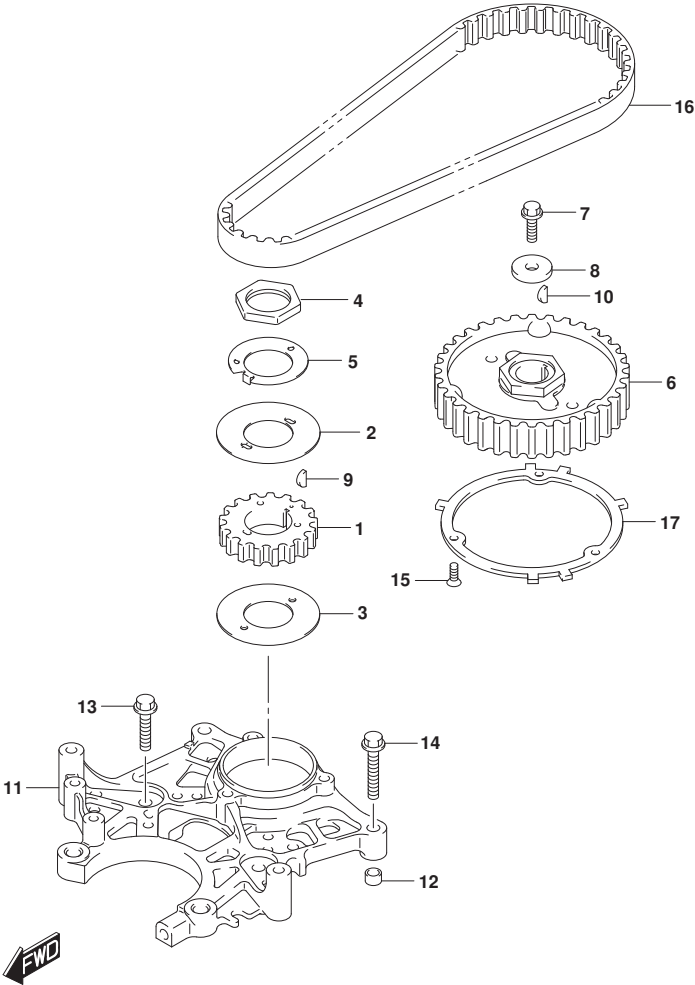


FIG.120A (1-B-5) TIMING BELT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12631-89L10	PULLEY, CRANKSHAFT	1	
2	12635-89L00	GUIDE, TIMING BELT	1	
3	12636-89L00	GUIDE, TIMING BELT	1	
4	12637-89L00	NUT, TIMING PULLEY	1	
5	12638-89L00	LOCK WASHER, PULLEY NUT	1	
6	12741-89L00	PULLEY, CAMSHAFT	1	
7	09103-06267	BOLT (6X18)	1	
8	09160-06171	WASHER (6.5X24X4)	1	
9	08341-31039	KEY	1	
10	08341-31039	KEY	1	
11	12625-89L10	BASE, STATOR	1	
12	04211-09149	PIN	2	
13	01550-0625C	BOLT	2	
14	01550-06357	BOLT	2	
15	02122-04127	SCREW	3	
16	12761-93EL0	BELT, TIMING	1	
17	12744-89L00	PLATE, SENSING	1	

FIG.121A

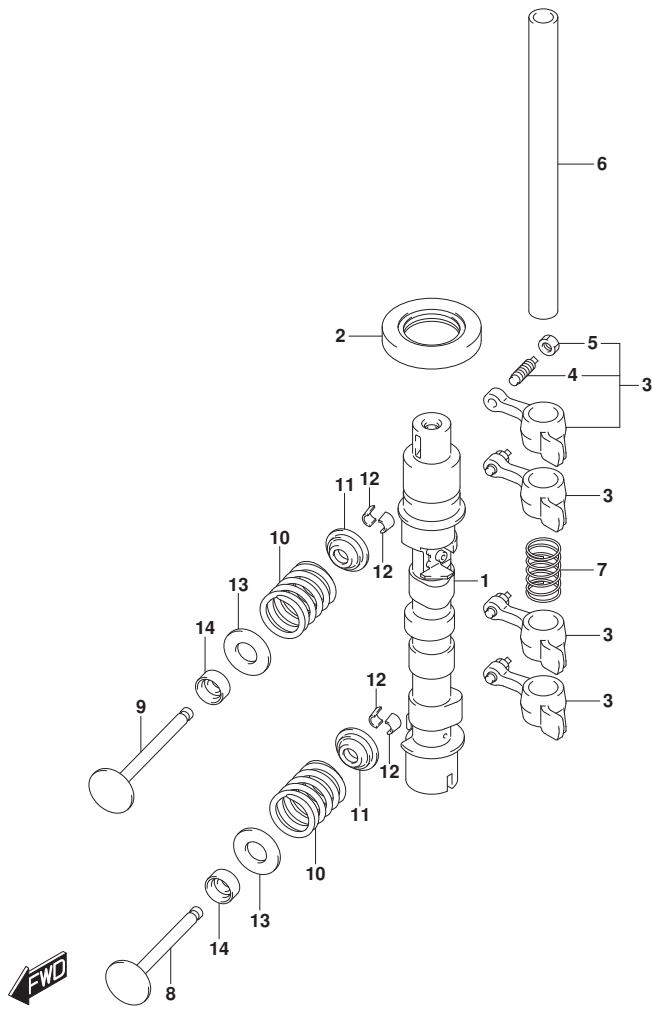


FIG.121A (1-B-6) CAMSHAFT (W/MANUAL STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12700-89L01	CAMSHAFT ASSY	1	
2	09283-25096	OIL SEAL (25X44X7)	1	
3	12840-93E01	ARM ASSY, ROCKER	4	
4	12842-49201	.SCREW, TAPPET ADJUSTING	4	
5	12843-27A00	.NUT, TAPPET ADJUSTING	4	
6	12861-89L00	SHAFT, ROCKER ARM	1	
7	12891-94J00	SPRING, ROCKER SHAFT	1	
8	12911-94J01	VALVE, INTK	2	
9	12915-94J50	VALVE, EXH	2	
10	12921-89L00	SPRING, VALVE	4	
11	12931-78G00	RETAINER, VALVE SPRING	4	
12	12932-24400	COTTER, VALVE	8	
13	12933-71C00	SEAT, VALVE SPRING	4	
14	09289-05012	OIL SEAL (5.5X11.5X9.3)	4	

FIG.121B

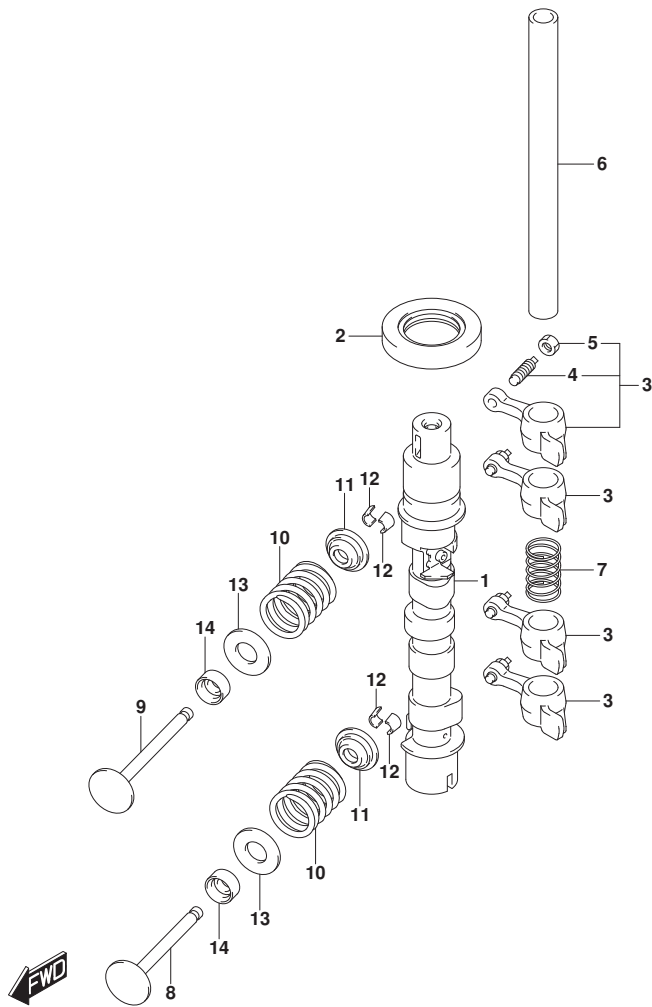


FIG.121B (1-B-7) CAMSHAFT (W/ELECTRIC STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12700-89L21	CAMSHAFT ASSY	1	
2	09283-25096	OIL SEAL (25X44X7)	1	
3	12840-93E01	ARM ASSY, ROCKER	4	
4	12842-49201	.SCREW, TAPPET ADJUSTING	4	
5	12843-27A00	.NUT, TAPPET ADJUSTING	4	
6	12861-89L00	SHAFT, ROCKER ARM	1	
7	12891-94J00	SPRING, ROCKER SHAFT	1	
8	12911-94J01	VALVE, INTK	2	
9	12915-94J50	VALVE, EXH	2	
10	12921-89L00	SPRING, VALVE	4	
11	12931-78G00	RETAINER, VALVE SPRING	4	
12	12932-24400	COTTER, VALVE	8	
13	12933-71C00	SEAT, VALVE SPRING	4	
14	09289-05012	OIL SEAL (5.5X11.5X9.3)	4	

FIG.126A

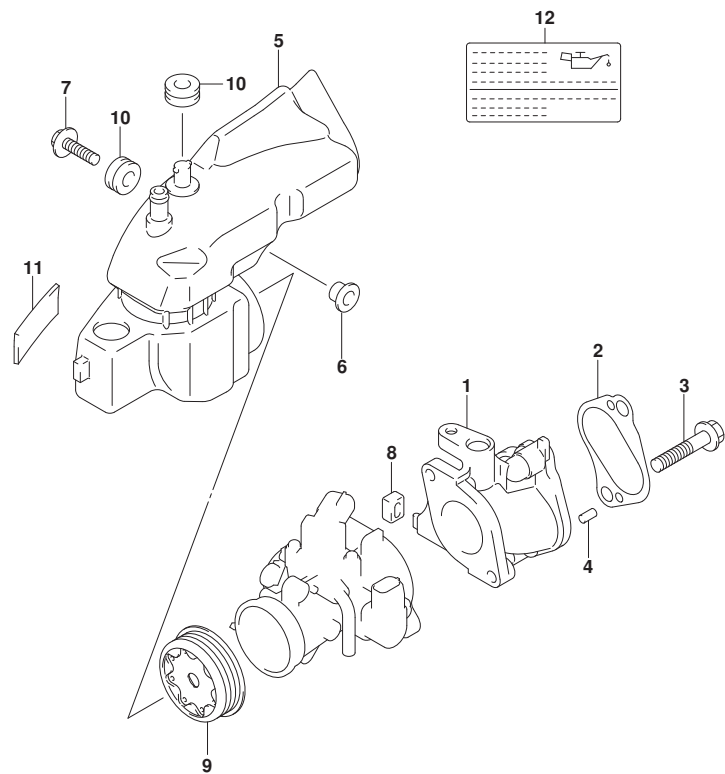


FIG.126A (1-B-8) INLET MANIFOLD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-89L00	MANIFOLD, INLET	1	
2	13119-89L00	GASKET, INLET MANIFOLD	1	
3	01580-08407	BOLT	2	
4	04221-05109	PIN	2	
5	13811-89L10	PIPE, AIR INLET	1	
6	09169-06062	WASHER (6.3X17X1.6)	1	
7	09116-06517	BOLT (6X25)	1	
8	13116-94J00	CAP, INLET MANIFOLD	1	
9	13820-89L10	HOLDER, RESTRICTOR	1	
10	09320-09052	CUSHION	2	
11	13831-89L00	CUSHION, AIR INLET PIPE	1	
12	61494-89L10	LABEL, OIL & CLEARANCE	1	

NOTE : DF9.9B,DF9.9BR,DF9.9BT,DF9.9BTH



FIG.126B

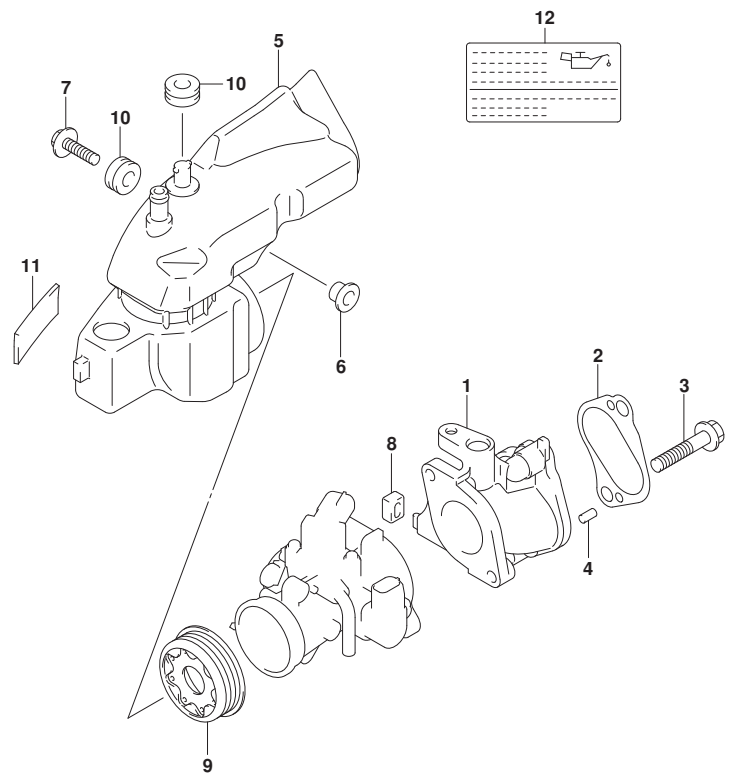


FIG.126B (1-B-9) INLET MANIFOLD (DF15A,DF15AR,DF15AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-89L00	MANIFOLD, INLET	1	
2	13119-89L00	GASKET, INLET MANIFOLD	1	
3	01580-08407	BOLT	2	
4	04221-05109	PIN	2	
5	13811-89L10	PIPE, AIR INLET	1	
6	09169-06062	WASHER (6.3X17X1.6)	1	
7	09116-06517	BOLT (6X25)	1	
8	13116-94J00	CAP, INLET MANIFOLD	1	
9	13820-89L00	HOLDER, RESTRICTOR	1	
10	09320-09052	CUSHION	2	
11	13831-89L00	CUSHION, AIR INLET PIPE	1	
12	61494-89L10	LABEL, OIL & CLEARANCE	1	



FIG.126C

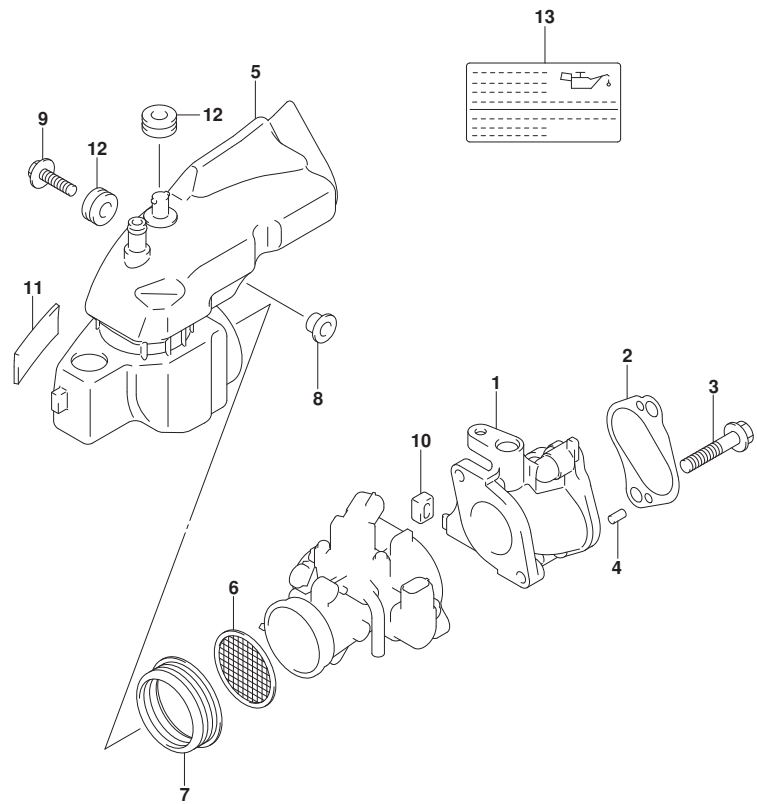


FIG.126C (1-B-10) INLET MANIFOLD (DF20A,DF20AR,DF20AT,DF20ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-89L00	MANIFOLD, INLET	1	
2	13119-89L00	GASKET, INLET MANIFOLD	1	
3	01580-08407	BOLT	2	
4	04221-05109	PIN	2	
5	13811-89L10	PIPE, AIR INLET	1	
6	13710-89L00	ARRESTER, FLAME	1	
7	13832-89L00	SEAL, SILENCER	1	
8	09169-06062	WASHER (6.3X17X1.6)	1	
9	09116-06517	BOLT (6X25)	1	
10	13116-94J00	CAP, INLET MANIFOLD	1	
11	13831-89L00	CUSHION, AIR INLET PIPE	1	
12	09320-09052	CUSHION	2	
13	61494-89L10	LABEL, OIL & CLEARANCE	1	



FIG.144A

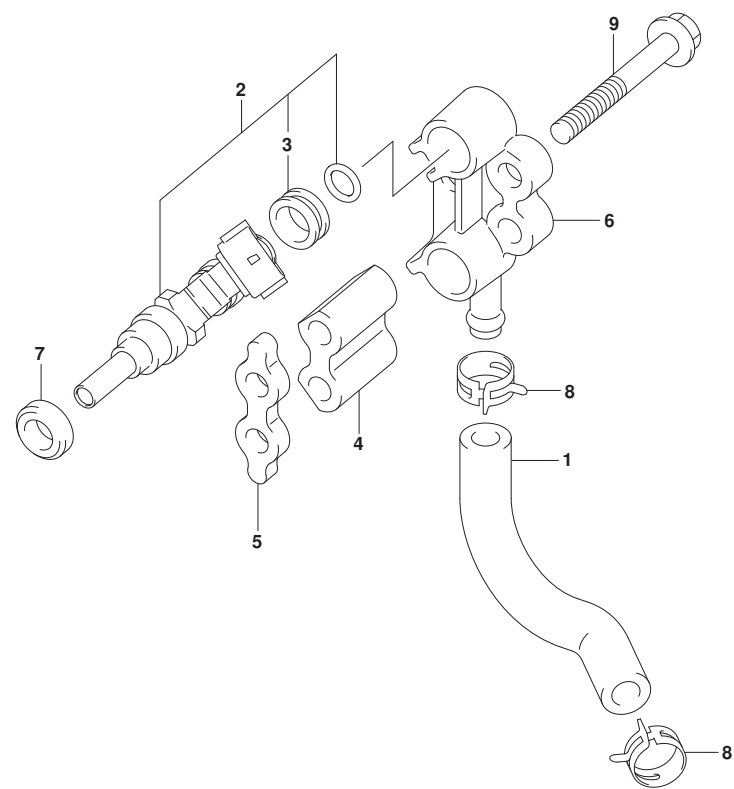


FIG.144A (1-B-11) FUEL INJECTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-89L00	HOSE, FUEL	1	
2	15710-50M00	INJECTOR ASSY, FUEL	2	
3	15716-65DT0	.GROMMET SET, FUEL INJECTOR	2	
4	15734-89L00	SPACER, DELIVERY PIPE	1	
5	15735-89L01	INSULATOR, DELIVERY PIPE	1	
6	15751-89L00	PIPE, DELIVERY	1	
7	09320-08062	CUSHION (8.7X16.3X5.5)	2	
8	09401-11425	CLIP	2	
9	01550-0650C	BOLT	2	



FIG.146A

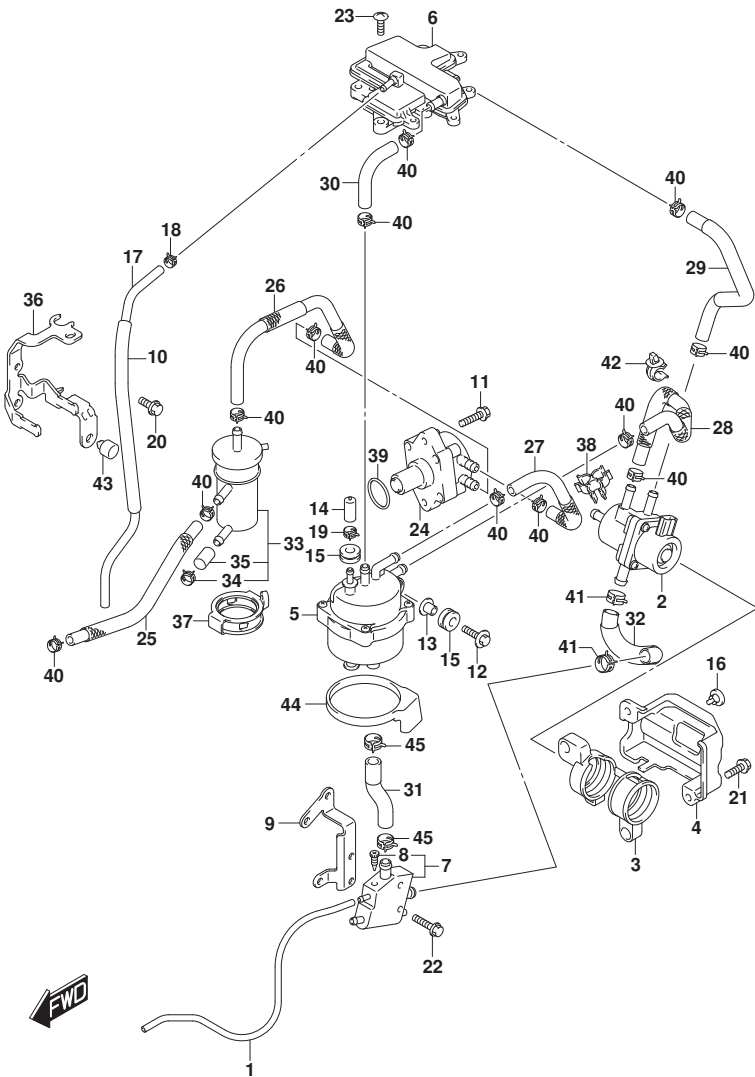


FIG.146A (1-B-12) FUEL PUMP (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13684-89L00	HOSE, DRAIN	1	
2	15200-89L11	PUMP ASSY, FUEL	1	
3	15217-89L00	CUSHION, FUEL PUMP	1	
4	15218-89L00	BRACKET, FUEL PUMP	1	
5	15600-89L00	SEPARATOR ASSY, FUEL VAPOR	1	
6	15690-89L02	CHAMBER, EVAPORATION	1	
7	15770-89L02	COOLER, FUEL	1	
8	15629-89L00	.SCREW, FUEL DRAIN	1	
9	15790-89L00	BRACKET, FUEL COOLER	1	
10	18498-87JB1	PROTECTOR, HOSE (L:200)	1	
11	01550-0625C	BOLT	2	
12	09116-06517	BOLT (6X25)	1	
13	09169-06062	WASHER (6.3X17X1.6)	1	
14	09251-05006	CAP	1	
15	09320-09052	CUSHION	3	
16	09321-08026	CUSHION	1	
17	15662-89L10	HOSE, EVAPORATION	1	
18	09401-08412	CLIP	1	
19	09401-10412	CLIP	1	
20	01550-0616C	BOLT	2	
21	01550-0620C	BOLT	2	
22	01550-0625C	BOLT	2	
23	03542-06209	SCREW	3	
24	15100-89L21	PUMP ASSY, FUEL	1	
25	15191-89L00	HOSE, FUEL	1	CONN TO FILTER
26	15192-89L02	HOSE, FUEL	1	FILTER TO PUMP(L)
27	15192-89L10	HOSE, FUEL	1	PUMP (L) TO SEP
28	15192-89L21	HOSE, FUEL	1	PUMP (H) TO SEP
29	15192-89L30	HOSE, FUEL	1	PUMP (H) TO 3WAY
30	15192-89L40	HOSE, FUEL	1	SEPARATOR TO EVAP
31	15193-89L10	HOSE, FUEL	1	SEPARATOR TO COOLER
32	15194-89L10	HOSE, FUEL	1	COOLER TO PUMP(H)
33	15410-87L00	FILTER, FUEL	1	
34	09401-11423	.CLIP	1	
35	15419-87J00	.CAP, FUEL FILTER	1	
36	15421-89L01	BRACKET, FUEL FILTER	1	

FIG.146A

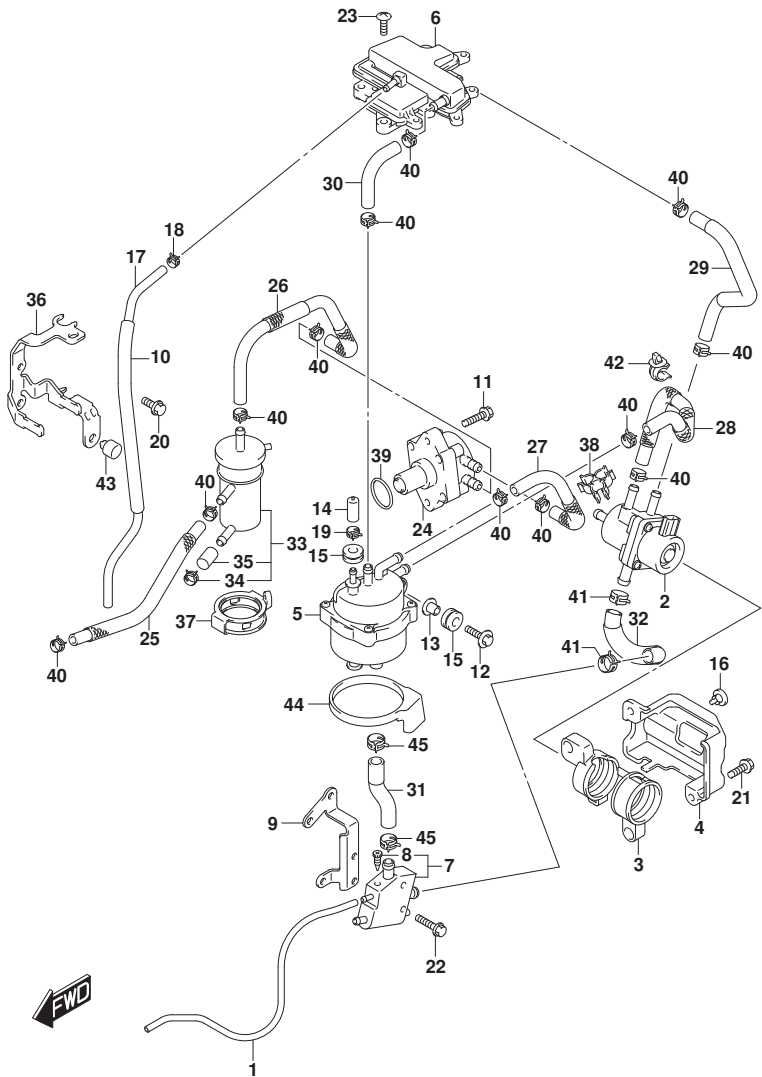


FIG.146A (1-B-13) FUEL PUMP (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
37	15422-89L00	CLAMP, FUEL FILTER	1	
38	15685-89L00	CLAMP, FUEL HOSE	2	
39	09280-26005	O RING (D:2.4,ID:26.2)	1	
40	09401-11423	CLIP	12	
41-1	09401-13423	CLIP	3	020
41-2	09401-13423	CLIP	2	021,022
42	09403-11320	CLAMP	2	
43	61151-91J11	CUSHION, LOWER COVER HOLDER	1	
44	15676-89L01	CUSHION, VAPOR SEPARATOR	1	
45	09401-14409	CLIP	2	

FIG.146B

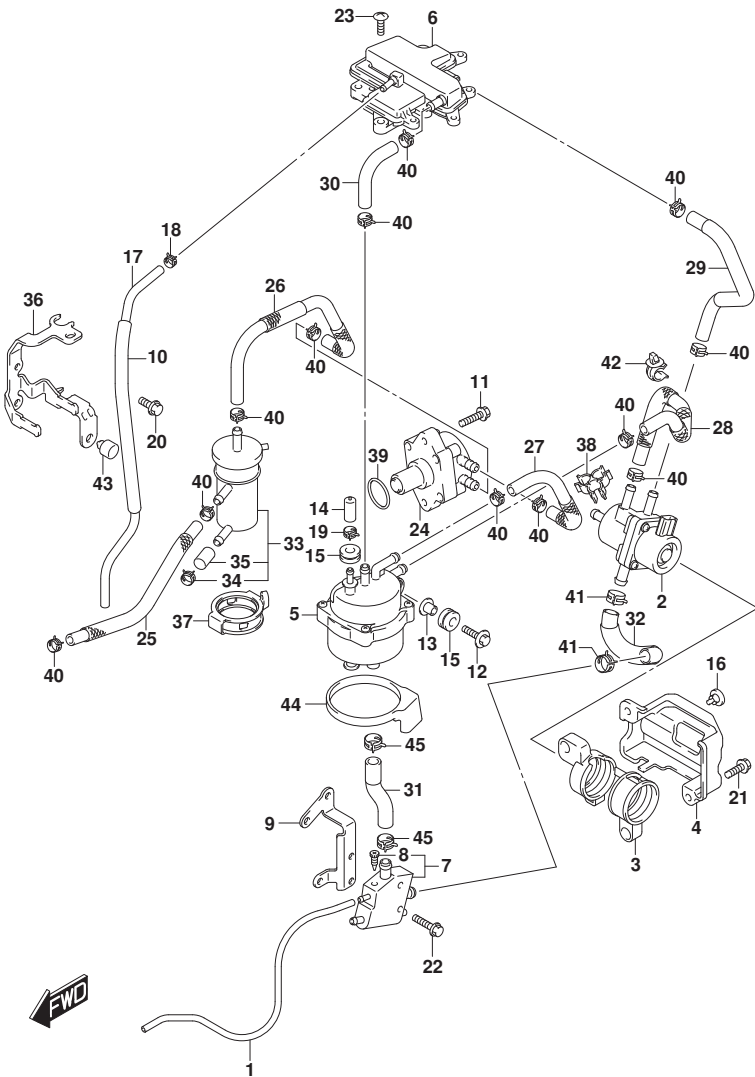


FIG.146B (1-B-14) FUEL PUMP (P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13684-89L00	HOSE, DRAIN	1	
2	15200-89L11	PUMP ASSY, FUEL	1	
3	15217-89L00	CUSHION, FUEL PUMP	1	
4	15218-89L00	BRACKET, FUEL PUMP	1	
5	15600-89L00	SEPARATOR ASSY, FUEL VAPOR	1	
6	15690-89L02	CHAMBER, EVAPORATION	1	
7	15770-89L02	COOLER, FUEL	1	
8	15629-89L00	.SCREW, FUEL DRAIN	1	
9	15790-89L00	BRACKET, FUEL COOLER	1	
10	18498-87JB1	PROTECTOR, HOSE (L:200)	1	
11	01550-0625C	BOLT	2	
12	09116-06517	BOLT (6X25)	1	
13	09169-06062	WASHER (6.3X17X1.6)	1	
14	09251-05006	CAP	1	
15	09320-09052	CUSHION	3	
16	09321-08026	CUSHION	1	
17	15662-89L10	HOSE, EVAPORATION	1	
18	09401-08412	CLIP	1	
19	09401-10412	CLIP	1	
20	01550-0616C	BOLT	2	
21	01550-0620C	BOLT	2	
22	01550-0625C	BOLT	2	
23	03542-06209	SCREW	3	
24	15100-89L11	PUMP ASSY, FUEL	1	
25	15191-89L00	HOSE, FUEL	1	CONN TO FILTER
26	15192-89L02	HOSE, FUEL	1	FILTER TO PUMP(L)
27	15192-89L10	HOSE, FUEL	1	PUMP (L) TO SEP
28	15192-89L21	HOSE, FUEL	1	PUMP (H) TO SEP
29	15192-89L30	HOSE, FUEL	1	PUMP (H) TO 3WAY
30	15192-89L40	HOSE, FUEL	1	SEPARATOR TO EVAP
31	15193-89L10	HOSE, FUEL	1	SEPARATOR TO COOLER
32	15194-89L10	HOSE, FUEL	1	COOLER TO PUMP(H)
33	15410-87L00	FILTER, FUEL	1	
34	09401-11423	.CLIP	1	
35	15419-87J00	.CAP, FUEL FILTER	1	
36	15421-89L01	BRACKET, FUEL FILTER	1	

FIG.146B

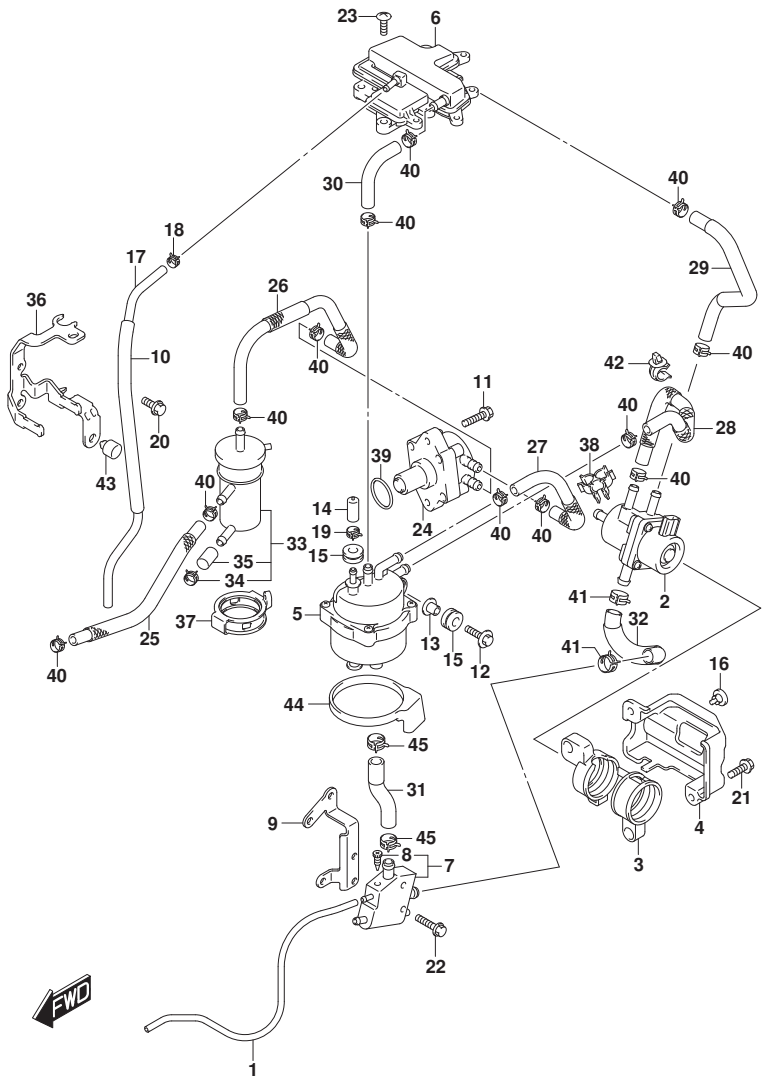


FIG.146B (1-B-15) FUEL PUMP (P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
37	15422-89L00	CLAMP, FUEL FILTER	1	
38	15685-89L00	CLAMP, FUEL HOSE	2	
39	09280-26005	O RING (D:2.4,ID:26.2)	1	
40	09401-11423	CLIP	12	
41-1	09401-13423	CLIP	3	020
41-2	09401-13423	CLIP	2	021,022
42	09403-11320	CLAMP	2	
43	61151-91J11	CUSHION, LOWER COVER HOLDER	1	
44	15676-89L01	CUSHION, VAPOR SEPARATOR	1	
45	09401-14409	CLIP	2	

FIG.160A

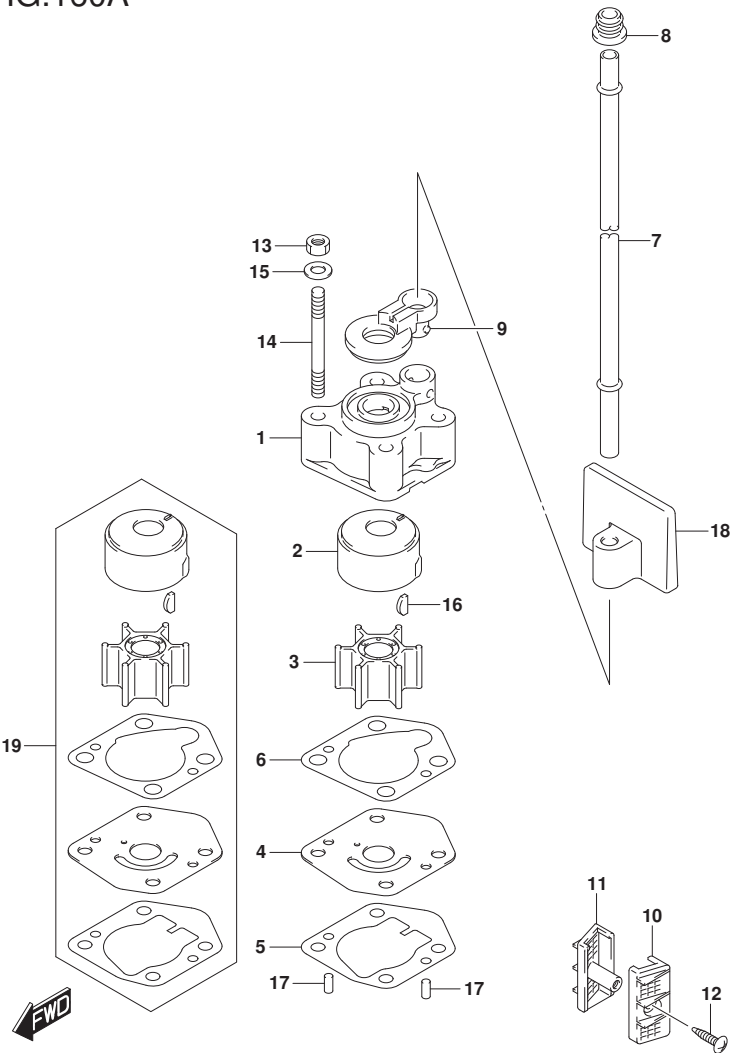


FIG.160A (1-C-2) WATER PUMP (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17411-94J00	CASE, WATER PUMP	1	
2	17413-94J00	SLEEVE, WATER PUMP CASE	1	
3	17461-939M0	IMPELLER, WATER PUMP	1	
4-1	17471-99J00	PANEL, PUMP CASE UNDER	1	020,021
4-2	17471-99J20	PANEL, PUMP CASE UNDER	1	022
5	17472-99J00	GASKET, PUMP CASE PANEL	1	
6	17473-94J00	GASKET, WATER PUMP CASE	1	
7-1	17561-99J00	TUBE, WATER	1	W/TRANSOM(S)
7-2	17561-99J10	TUBE, WATER	1	W/TRANSOM(L)
7-3	17561-99J20	TUBE, WATER	1	W/TRANSOM(X)
8	17563-94J00	GROMMET, WATER TUBE	1	
9	17564-99J00	BUSH, WATER PUMP CASE	1	
10	17631-99J20	FILTER, WATER PORT SIDE	1	PORT
11	17632-99J30	FILTER, WATER STBD SIDE	1	STBD
12	03142-04169	SCREW	1	
13	29141-93J00	NUT	4	
14	09108-06141	STUD BOLT	4	
15	09160-06082	WASHER (6.5X13X1.0)	4	
16	09420-03009	KEY	1	
17	09202-04008	PIN (D:4,L:9)	2	
18	17565-99J01	GUIDE, WATER TUBE	1	
19-1	17400-99J02	KIT, WATER PUMP REPAIR	1	020,021 OPT
19-2	17400-99J20	KIT, WATER PUMP REPAIR	1	022 OPT

FIG.160B

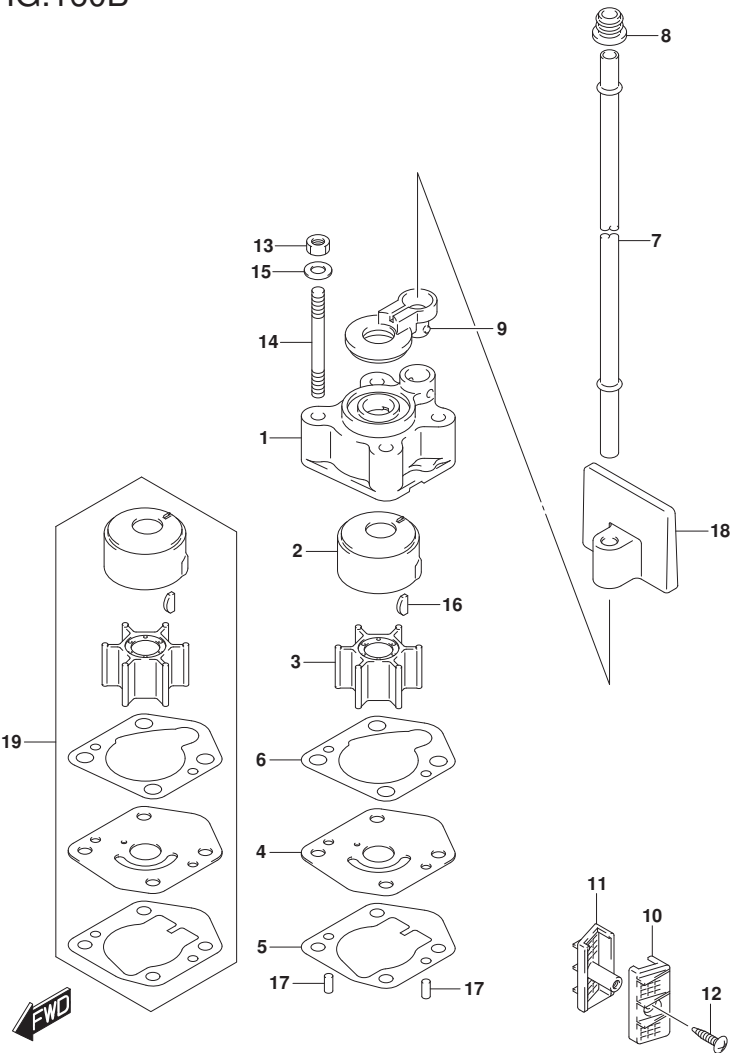


FIG.160B (1-C-3) WATER PUMP (P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17411-94J00	CASE, WATER PUMP	1	
2	17413-94J10	SLEEVE, WATER PUMP CASE	1	
3	17461-939M0	IMPELLER, WATER PUMP	1	
4-1	17471-99J10	PANEL, PUMP CASE UNDER	1	020,021
4-2	17471-99J30	PANEL, PUMP CASE UNDER	1	022
5	17472-99J00	GASKET, PUMP CASE PANEL	1	
6	17473-94J00	GASKET, WATER PUMP CASE	1	
7-1	17561-99J00	TUBE, WATER	1	W/TRANSOM(S)
7-2	17561-99J10	TUBE, WATER	1	W/TRANSOM(L)
7-3	17561-99J20	TUBE, WATER	1	W/TRANSOM(X)
8	17563-94J00	GROMMET, WATER TUBE	1	
9	17564-99J00	BUSH, WATER PUMP CASE	1	
10	17631-99J20	FILTER, WATER PORT SIDE	1	PORT
11	17632-99J30	FILTER, WATER STBD SIDE	1	STBD
12	03142-04169	SCREW	1	
13	29141-93J00	NUT	4	
14	09108-06141	STUD BOLT	4	
15	09160-06082	WASHER (6.5X13X1.0)	4	
16	09420-03009	KEY	1	
17	09202-04008	PIN (D:4,L:9)	2	
18	17565-99J01	GUIDE, WATER TUBE	1	
19-1	17400-99J12	KIT, WATER PUMP REPAIR	1	020,021 OPT
19-2	17400-99J30	KIT, WATER PUMP REPAIR	1	022 OPT

FIG.162A

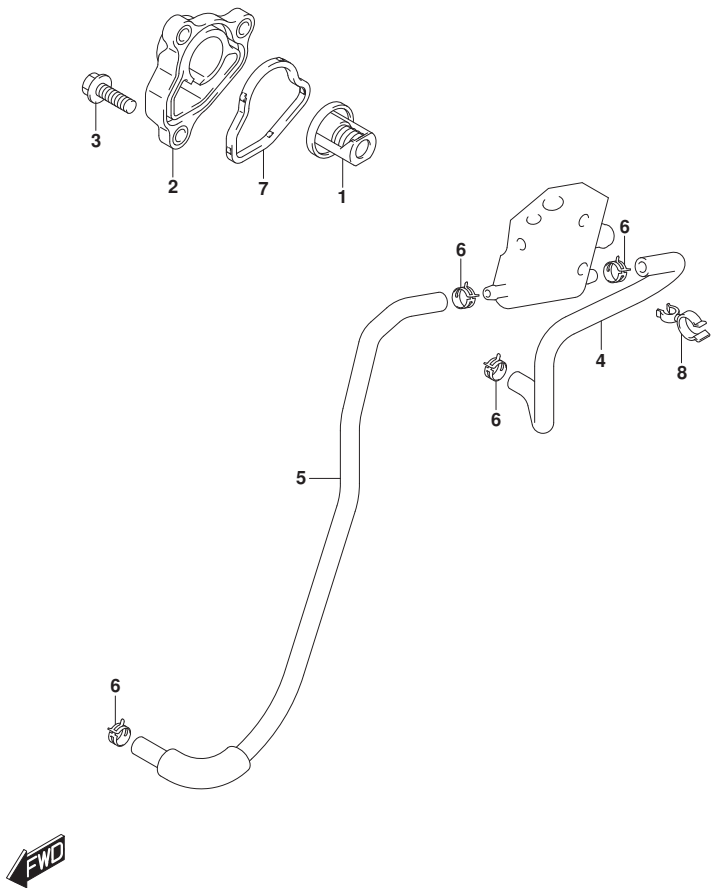


FIG.162A (1-C-4) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17670-91J02	THERMOSTAT, WATER (50C)	1	
2	17680-89L00	COVER, THERMOSTAT	1	
3	01550-0620C	BOLT	3	
4	17712-89L12	HOSE, WATER	1	
5	17712-89L03	HOSE, WATER	1	
6	09401-08413	CLIP	4	
7	17685-89L00	SEAL, THERMOSTAT COVER	1	
8	09408-00070	CLAMP	1	

FIG.163A

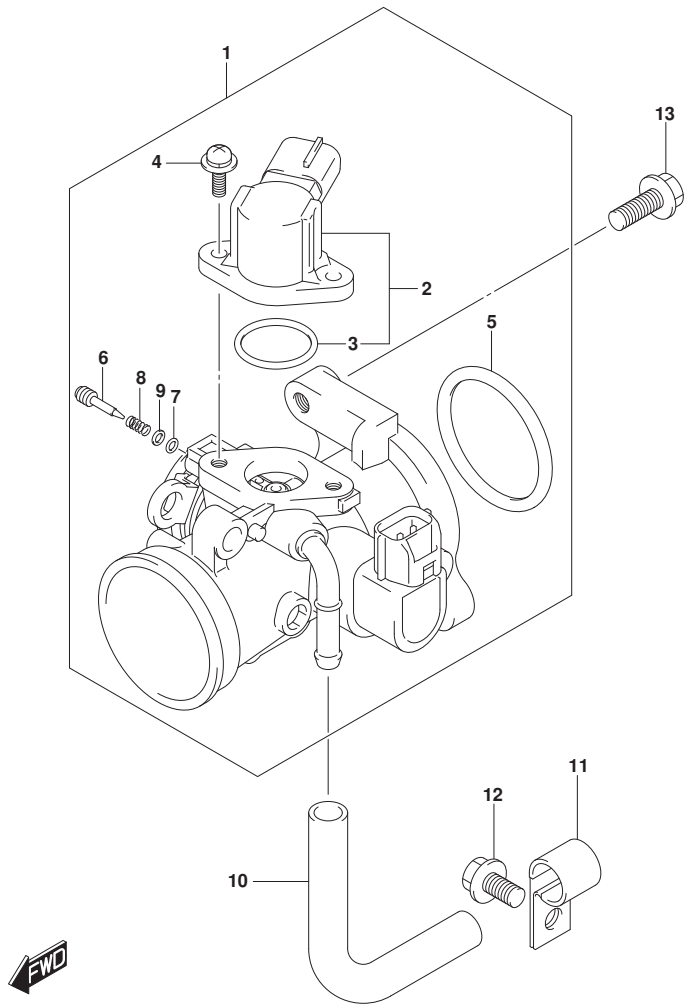


FIG.163A (1-C-5) THROTTLE BODY (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13300-89L01	BODY ASSY, THROTTLE	1	
2	13420-16HA1	.SOLENOID ASSY	1	
3	13425-33G01	..O RING	1	
4	13326-89L00	.SCREW, SOLENOID ASSY	2	
5	13421-89L00	.O RING, FLANGE	1	
6	13279-13G10	.ADJUSTER	1	
7	13295-29901	.O RING	1	
8	13365-89L00	.SPRING	1	
9	13606-47A00	.WASHER	1	
10	15211-91J01-130	HOSE, IAC	1	
11	09403-12417	CLAMP	1	
12	01550-0612C	BOLT	1	
13	01550-0620C	BOLT	2	

NOTE : DF9.9B,DF9.9BTH,DF15A,DF20A,DF20ATH

FIG.163B

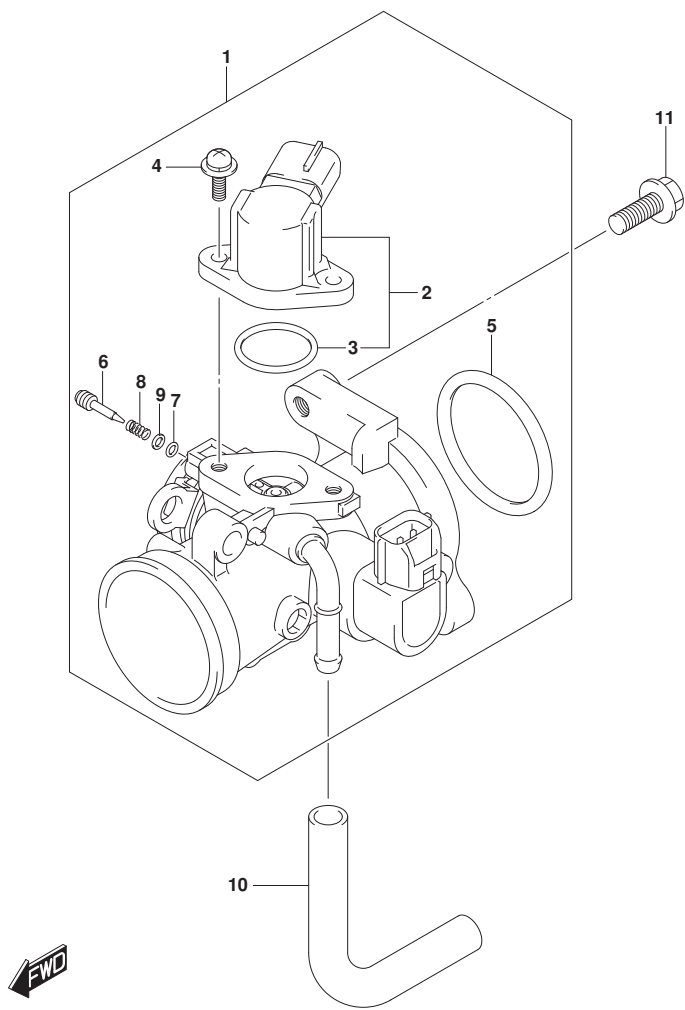


FIG.163B (1-C-6) THROTTLE BODY (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13300-89L11	BODY ASSY, THROTTLE	1	
2	13420-16HA1	.SOLENOID ASSY	1	
3	13425-33G01	..O RING	1	
4	13326-89L00	.SCREW, SOLENOID ASSY	2	
5	13421-89L00	.O RING, FLANGE	1	
6	13279-13G10	.ADJUSTER	1	
7	13295-29901	.O RING	1	
8	13365-89L00	.SPRING	1	
9	13606-47A00	.WASHER	1	
10	15211-91J01-130	HOSE, IAC	1	
11	01550-0620C	BOLT	2	

NOTE : DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT

FIG.166A

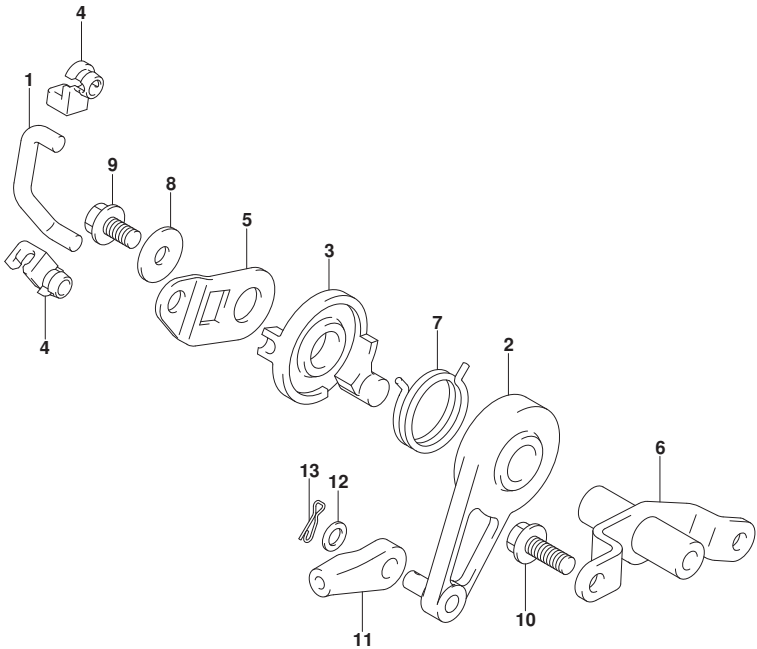


FIG.166A (1-C-7) THROTTLE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13513-89L10	ROD, THROTTLE	1	
2	19120-99J11	LEVER, THROTTLE CONTROL	1	
3	19122-99J00	LEVER, INTERLINK THROTTLE NO.2	1	
4	19131-89L00	CONNECTOR	2	
5	19148-89L10	LEVER, INTERLINK THROTTLE NO.1	1	
6	19150-89L00	BRACKET, THROTTLE LEVER	1	
7	19185-99J00	SPRING, THROTTLE LEVER	1	
8	09160-06046	WASHER (6.5X20X1.5)	1	
9	01550-0612C	BOLT	1	
10	01550-0616C	BOLT	2	
11	67467-89J01	CONNECTOR	1	
12	09160-06055	WASHER (7X12X1.0)	1	
13	09385-06016	CLIP	1	

NOTE : DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT



FIG.167A

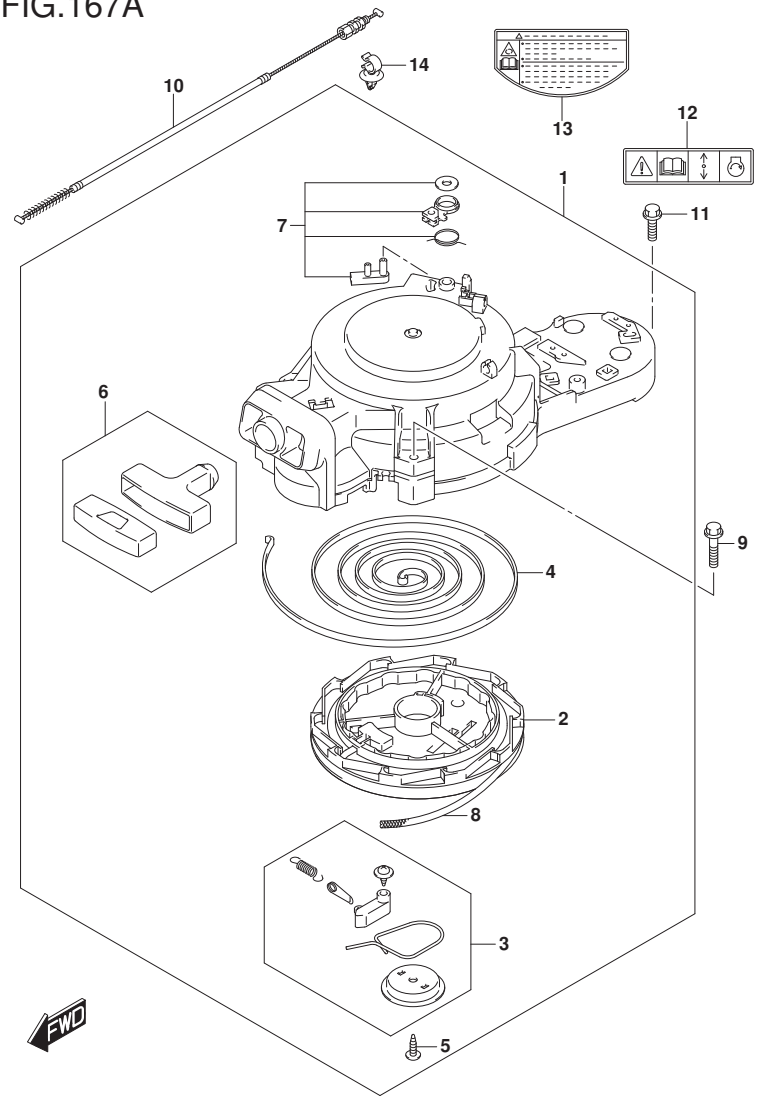


FIG.167A (1-C-8) RECOIL STARTER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	18100-94JN0	STARTER ASSY, RECOIL	1	
2	18121-94JL0	.REEL	1	
3	18130-93E01	.RATCHET SET	1	
4	18142-93E00	.SPRING, SPIRAL	1	
5	18132-89L00	.SCREW	1	
6	18210-95L00	.GRIP ASSY	1	
7	18280-93E00	.NSI SET	1	
8	99000-81158-50M	STARTER ROPE	1	OPT,L:50000->1500
9	01550-0630C	BOLT	3	
10	18290-94J01	CABLE ASSY, NSI	1	
11	01550-0620C	BOLT	1	
12-1	69711-93E11	LABEL, S.I.G.P	1	020
12-2	69711-91J01	LABEL, S.I.G.P	1	021,022
13	61472-97J00	LABEL, RECOIL STARTER	1	
14	09403-12415	CLAMP	1	

NOTE : DF9.9B,DF9.9BR,DF15A,DF15AR,DF20A,DF20AR

Diagram illustrating the exploded view of the FWD 167B car stereo unit, showing the main components and their assembly order:

- 1**: Main stereo unit.
- 2**: Front faceplate.
- 3**: Mounting bracket.
- 4**: Antenna coil.
- 5**: Mounting screw.
- 6**: Mounting bracket (alternative design).
- 7**: Mounting plate.
- 8**: Antenna cable.
- 9**: Mounting screw.
- 10**: Antenna rod.
- 11**: Mounting screw.
- 12**: Mounting bracket.
- 13**: Antenna base.
- 14**: Mounting screw.
- 15**: Mounting bracket.

The diagram includes a warning symbol (triangle with exclamation mark) and a note indicating that the antenna base (13) should be installed in the car's body.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	18100-94JN0	STARTER ASSY, RECOIL	1	
2	18121-94JL0	.REEL	1	
3	18130-93E01	.RATCHET SET	1	
4	18142-93E00	.SPRING, SPIRAL	1	
5	18132-89L00	.SCREW	1	
6	18210-95L00	.GRIP ASSY	1	
7	18280-93E00	.NSI SET	1	
8	99000-81158-50M	STARTER ROPE	1	OPT,L:50000->1500
9	01550-0630C	BOLT	3	
10	18290-94J01	CABLE ASSY, NSI	1	
11	01550-0620C	BOLT	1	
12-1	69711-93E11	LABEL, S.I.G.P	1	020
12-2	69711-91J01	LABEL, S.I.G.P	1	021,022
13	61472-97J00	LABEL, RECOIL STARTER	1	
14	09403-12415	CLAMP	1	
15	09403-12417	CLAMP	1	

NOTE : DF9.9BT,DF9.9BTH,DF15AT,DF20AT,DF20ATH

FIG.175A

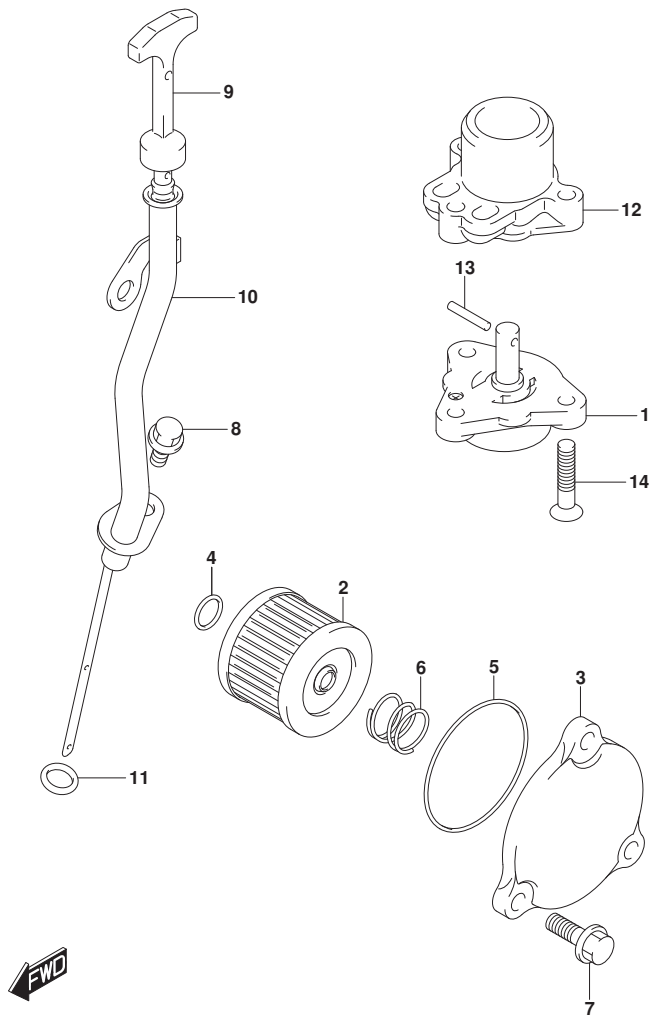


FIG.175A (1-C-10) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	16400-89L00	PUMP ASSY, OIL	1	
2	16510-45H10	FILTER, ENGINE OIL	1	
3	16512-99J00	CAP, OIL FILTER	1	
4	09280-13004	O RING (D:1.9,ID:13)	1	
5	09280-54001	O RING (D:2.4,ID:52.6)	1	
6	09440-18002	SPRING (L:14.5)	1	
7	01550-0620C	BOLT	3	
8	01550-0612C	BOLT	1	
9	16910-89L01	GAUGE, OIL LEVEL	1	
10	16930-89L02	GUIDE, OIL LEVEL GAUGE	1	
11	09280-09008	O RING (D:2.1,ID:8.8)	1	
12	16431-89L00	BLOCK, OIL GALLERY	1	
13	59262-94J00	PIN, OIL PUMP	1	
14	02122-0630A	SCREW	3	

FIG.206A

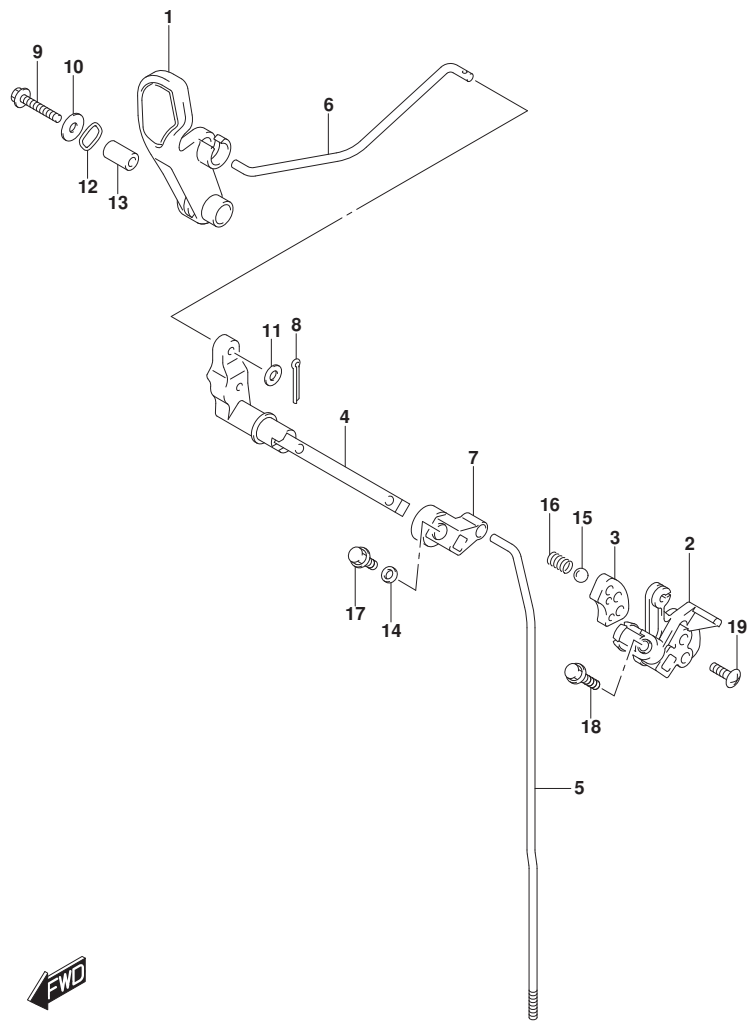


FIG.206A (1-C-11) CLUTCH ROD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21111-89L01	LEVER, CLUTCH	1	
2	21120-89L00	LEVER, CLUTCH NOTCH	1	
3	21122-89L00	PLATE, CLUTCH NOTCH	1	
4	21210-89L01	SHAFT, CLUTCH LEVER	1	
5-1	23111-89L00	ROD, CLUTCH	1	W/TRANSOM(S)
5-2	23111-89L10	ROD, CLUTCH	1	W/TRANSOM(L),W/TRANSOM(X)
6	23115-89L00	LINK, CLUTCH LEVER	1	
7	23211-89L00	ARM, CLUTCH ROD	1	
8	09204-01002	PIN	1	
9	09116-06234	BOLT (6X35)	1	
10	09160-06046	WASHER (6.5X20X1.5)	1	
11	09160-06094	WASHER (6.5X15X1.0)	1	
12	09164-14008	WASHER	2	
13	09180-06186	SPACER (6.2X12.6X21)	1	
14	09180-06362	SPACER (6.5X10.5X4)	1	
15	09260-12003	BALL	1	
16	09440-09041	SPRING	1	
17	01550-0612C	BOLT	1	
18	01550-0625C	BOLT	1	
19	02142-06207	SCREW	2	

NOTE : DF9.9B,DF9.9BTH,DF15A,DF20A,DF20ATH



FIG.206B

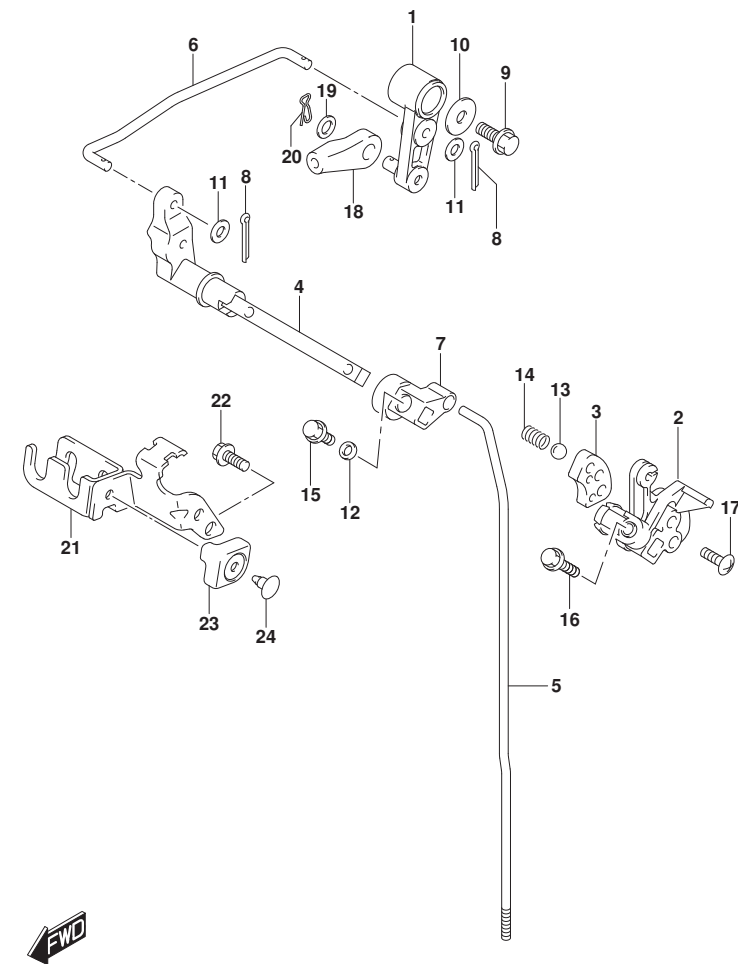


FIG.206B (1-C-12) CLUTCH ROD (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21110-89L10	LEVER, CLUTCH	1	
2	21120-89L00	LEVER, CLUTCH NOTCH	1	
3	21122-89L00	PLATE, CLUTCH NOTCH	1	
4	21210-89L01	SHAFT, CLUTCH LEVER	1	
5-1	23111-89L00	ROD, CLUTCH	1	W/TRANSOM(S)
5-2	23111-89L10	ROD, CLUTCH	1	W/TRANSOM(L),W/TRANSOM(X)
6	23115-89L10	LINK, CLUTCH LEVER	1	
7	23211-89L00	ARM, CLUTCH ROD	1	
8	09204-01002	PIN	2	
9	01550-0612C	BOLT	1	
10	09160-06046	WASHER (6.5X20X1.5)	1	
11	09160-05029	WASHER (5.5X12X0.8)	2	
12	09180-06362	SPACER (6.5X10.5X4)	1	
13	09260-12003	BALL	1	
14	09440-09041	SPRING	1	
15	01550-0612C	BOLT	1	
16	01550-0625C	BOLT	1	
17	02142-06207	SCREW	2	
18	67467-89J01	CONNECTOR	1	
19	09160-06055	WASHER (7X12X1.0)	1	
20	09385-06016	CLIP	1	
21	67340-89L10	HOLDER, R/CON CABLE	1	
22	01547-0616C	BOLT	2	
23	67345-89L10	PROTECTOR, R/CON CABLE HOLDER	1	
24	09409-10304-5ES	CLIP (4.7X11) (BLACK)	1	

NOTE : DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT

FIG.210A


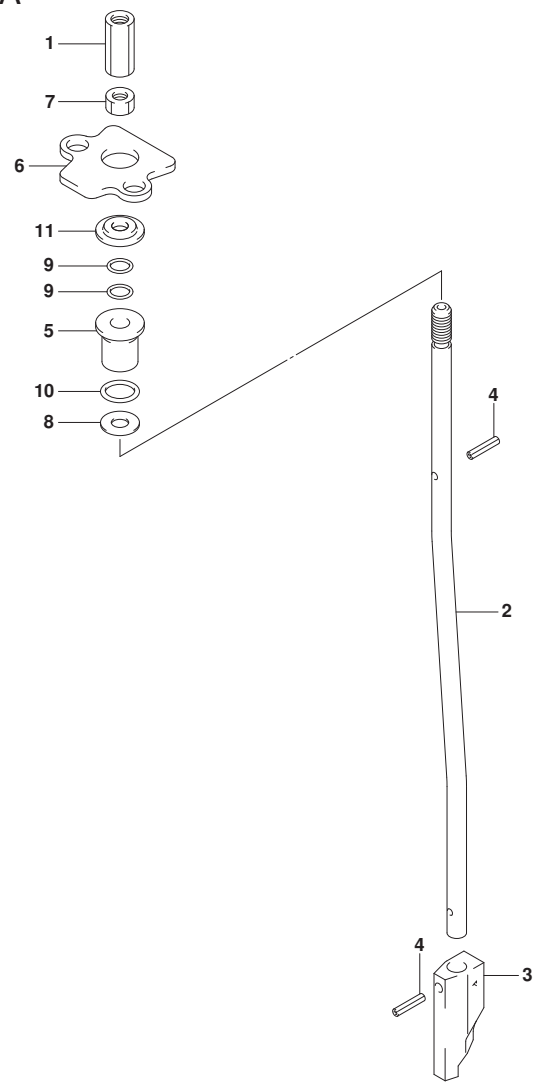


FIG.210A (1-C-13) SHIFT ROD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23311-95J00	CONNECTOR, CLUTCH ROD	1	
2-1	25111-99J01	ROD, SHIFT	1	W/TRANSOM(S),W/TRANSOM(L)
2-2	25111-99J10	ROD, SHIFT	1	W/TRANSOM(X)
3	25311-99J00	CAM, SHIFT	1	
4	09205-02004	PIN (2.5X12)	2	
5	25211-99JL0	GUIDE, SHIFT ROD	1	
6	25215-99J00	STOPPER, SHIFT ROD GUIDE	1	
7	29141-93J00	NUT	1	
8	09160-06082	WASHER (6.5X13X1.0)	1	
9	09280-06012	O RING (D:1.7,ID:5.8)	2	
10	09280-09012	O RING (D:2.3,ID:9)	1	
11	09289-06L02	SEAL (5X17X3.5)	1	



FIG.220A

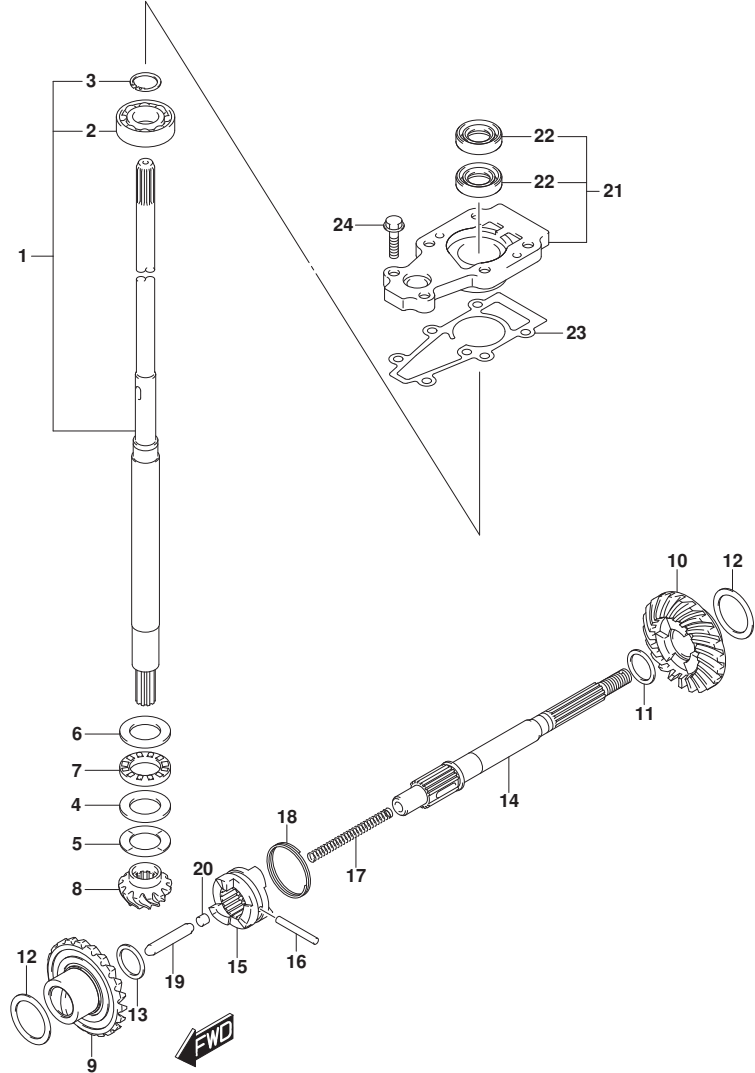

DF20A_P01_022_220A
TRANSMISSION

FIG.220A (1-C-14) TRANSMISSION (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57100-90L40	SHAFT ASSY, DRIVE	1	W/TRANSOM(S)
1-2	57100-90L30	SHAFT ASSY, DRIVE	1	W/TRANSOM(L)
1-3	57100-90L50	SHAFT ASSY, DRIVE	1	W/TRANSOM(X)
2	08110-60020	.BEARING	1	
3	09380-15001	.RING	1	
4	09160-20027	WASHER (20X35X2.75)	1	
5-1	09181-20251	SHIM (T:1.0)	1	
5-2	09160-20042	SHIM (T:1.1)	1	
5-3	09160-20043	SHIM (T:1.2)	1	
5-4	09160-20044	SHIM (T:1.3)	1	
5-5	09181-20244	SHIM (T:0.7)	1	
5-6	09181-20246	SHIM (T:0.8)	1	
5-7	09181-20248	SHIM (T:0.9)	1	
6	09160-21009	WASHER (21X35X2.75)	1	
7	09263-20024	BEARING (20X35X4.5)	1	
8	57311-99J10	PINION	1	
9	57510-99J11	GEAR, FORWARD	1	
10	57521-99J10	GEAR, REVERSE	1	
11-1	09160-17024	WASHER (T:1.1)	1	REV
11-2	09160-17039	WASHER (T:1.2)	1	REV
11-3	09160-17025	WASHER (T:1.3)	1	REV
11-4	09160-17040	WASHER (T:1.4)	1	REV
11-5	09160-17026	WASHER (T:1.5)	1	REV
11-6	09160-17041	WASHER (T:1.6)	1	REV
11-7	09160-17027	WASHER (T:1.7)	1	REV
11-8	09160-17042	WASHER (T:1.8)	1	REV
11-9	09160-17028	WASHER (T:1.9)	1	REV

NOTE : DF9.9B,DF9.9BR,DF15A,DF15AR,DF20A,DF20AR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
12-1	09181-25160	WASHER (T:0.7)	2	
12-2	09181-25162	WASHER (T:0.8)	2	
12-3	09181-25164	WASHER (T:0.9)	2	
12-4	09160-25040	WASHER (T:1.0)	2	
12-5	09160-25041	WASHER (T:1.1)	2	
12-6	09160-25042	WASHER (T:1.2)	2	
12-7	09181-25181	WASHER (T:1.3)	2	
13	09181-15241	WASHER (15X22X2)	1	FWD
14	57610-99JL0	SHAFT, PROPELLER	1	
15	57621-99J11	SHIFTER, CLUTCH DOG	1	
16	09202-04025	PIN (4X31)	1	
17	59441-94J00	SPRING, RETURN	1	
18	59441-99J00	SPRING, DOG	1	
19	57631-93901	ROD, PUSH	1	
20	57632-97L00	PIN, PUSH	1	
21	56130-99J30	HOUSING, DRIVE SHAFT BRG	1	
22	09282-13L01	.OIL SEAL (12.5X25X7)	2	
23	56132-99J10	GASKET, DRIVE SFT BRG HSG	1	
24	09116-06229	BOLT (6X25)	2	

DF20A_P01_022

FIG.220B

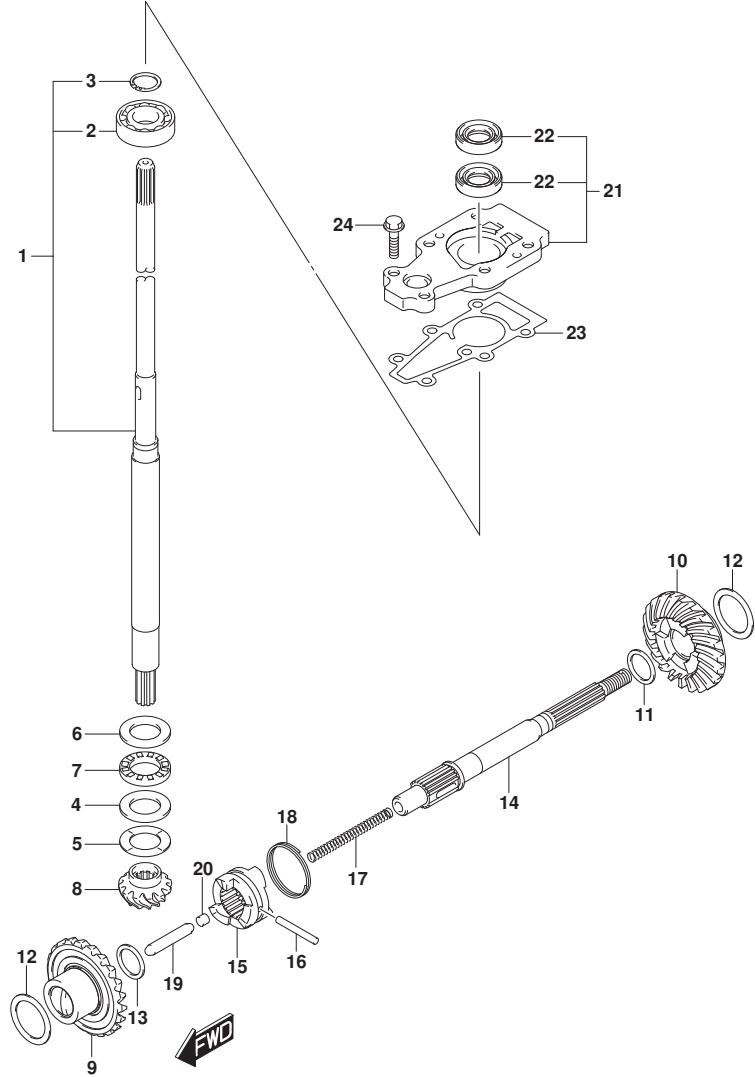


FIG.220B (1-D-2) TRANSMISSION (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57100-90L40	SHAFT ASSY, DRIVE	1	W/TRANSOM(S)
1-2	57100-90L30	SHAFT ASSY, DRIVE	1	W/TRANSOM(L)
1-3	57100-90L50	SHAFT ASSY, DRIVE	1	W/TRANSOM(X)
2	08110-60020	.BEARING	1	
3	09380-15001	.RING	1	
4	09160-20027	WASHER (20X35X2.75)	1	
5-1	09181-20251	SHIM (T:1.0)	1	
5-2	09160-20042	SHIM (T:1.1)	1	
5-3	09160-20043	SHIM (T:1.2)	1	
5-4	09160-20044	SHIM (T:1.3)	1	
5-5	09181-20244	SHIM (T:0.7)	1	
5-6	09181-20246	SHIM (T:0.8)	1	
5-7	09181-20248	SHIM (T:0.9)	1	
6	09160-21009	WASHER (21X35X2.75)	1	
7	09263-20024	BEARING (20X35X4.5)	1	
8	57311-99J10	PINION	1	
9	57510-99J11	GEAR, FORWARD	1	
10	57521-99J10	GEAR, REVERSE	1	
11-1	09160-17053	WASHER (T:1.1)	1	REV
11-2	09160-17054	WASHER (T:1.2)	1	REV
11-3	09160-17055	WASHER (T:1.3)	1	REV
11-4	09160-17056	WASHER (T:1.4)	1	REV
11-5	09160-17057	WASHER (T:1.5)	1	REV
11-6	09160-17058	WASHER (T:1.6)	1	REV
11-7	09160-17059	WASHER (T:1.7)	1	REV
11-8	09160-17060	WASHER (T:1.8)	1	REV
11-9	09160-17061	WASHER (T:1.9)	1	REV

NOTE : DF9.9BT,DF9.9BTH,DF15AT,DF20AT,DF20ATH

Exploded view diagram of a front wheel hub assembly. The diagram shows the main shaft assembly (1) with various seals (2, 3, 4, 5, 6, 7, 8), a bearing (9), a gear (10), a pin (11), a spring (12), a pin (13), a pin (14), a pin (15), a pin (16), a pin (17), a pin (18), a pin (19), a pin (20), a pin (21), a pin (22), a pin (23), and a pin (24). A 'FWD' arrow points to the left.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
12-1	09181-25160	WASHER (T:0.7)	2	
12-2	09181-25162	WASHER (T:0.8)	2	
12-3	09181-25164	WASHER (T:0.9)	2	
12-4	09160-25040	WASHER (T:1.0)	2	
12-5	09160-25041	WASHER (T:1.1)	2	
12-6	09160-25042	WASHER (T:1.2)	2	
12-7	09181-25181	WASHER (T:1.3)	2	
13	09181-15241	WASHER (15X22X2)	1	FWD
14	57610-99JL0	SHAFT, PROPELLER	1	
15	57621-99J11	SHIFTER, CLUTCH DOG	1	
16	09202-04025	PIN (4X31)	1	
17	59441-94J00	SPRING, RETURN	1	
18	59441-99J00	SPRING, DOG	1	
19	57631-93901	ROD, PUSH	1	
20	57632-97L00	PIN, PUSH	1	
21	56130-99J30	HOUSING, DRIVE SHAFT BRG	1	
22	09282-13L01	.OIL SEAL (12.5X25X7)	2	
23	56132-99J10	GASKET, DRIVE SFT BRG HSG	1	
24	09116-06229	BOLT (6X25)	2	

DF20A_P01_022

[illegible]

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	31100-89L00	MOTOR ASSY, STARTING	1	
2	31150-98L00	.CASE, GEAR	1	
3	31170-89L00	.HOUSING, REAR	1	
4	31173-98L00	.HOLDER ASSY, BRUSH	1	
5	31191-63J00	.LEVER SET	1	
6	31220-89L00	.SWITCH ASSY	1	
7	31311-63J00	.ARMATURE	1	
8	31192-92J00	.SCREW SET	1	
9	31261-75F10	.BOLT	2	
10	31340-89L00	.CLUTCH SET, STARTING MOTOR	1	
11	31313-86030	..STOPPER SET	1	
12	31320-89L00	..PINION	1	
13	31341-89L00	..SHAFT, PINION	1	
14	31343-63J00	..INTERNAL GEAR ASSY	1	
15	31344-63J00	..GEAR ASSY	3	
16	31912-89L00	BAND, STARTER MOTOR	1	
17	31918-92J01	DAMPER, LOWER	1	
18	01550-08207	BOLT	2	
19	01550-08307	BOLT	2	
20	08316-10087	NUT	1	

FIG.303A

FIG.303A (1-D-5) MAGNETO (W/MANUAL STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32120-89L10	COIL, STATOR & PULSER	1	
2	01547-0630A	BOLT	3	
3	01550-05127	BOLT	2	
4	32102-89L10	FLYWHEEL, MAGNETO	1	
5	09140-14008	NUT	1	
6	09160-15057	WASHER (15X27X4)	1	
7	08341-31039	KEY	1	
8	09407-14407	CLAMP (L:145)	8	
9	33220-84M10	SENSOR ASSY, POSN	1	
10	01550-06167	BOLT	1	
11	08322-0106A	WASHER	3	
12	36615-96300	TERMINAL	2	

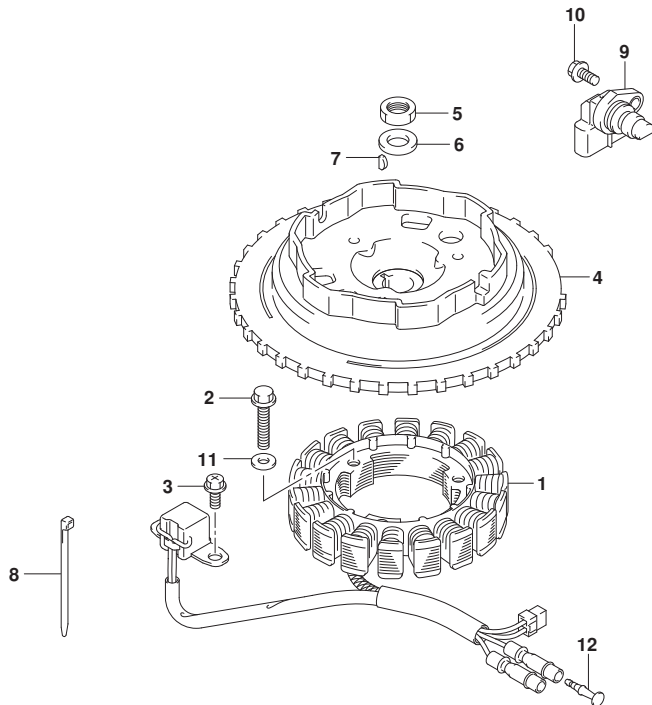


FIG.303B

FIG.303B (1-D-6) MAGNETO (W/ELECTRIC STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32120-89L20	COIL, STATOR & PULSER	1	
2	01547-0625A	BOLT	3	
3	01550-05127	BOLT	2	
4	32102-89L00	FLYWHEEL, MAGNETO	1	
5	09140-14008	NUT	1	
6	09160-15057	WASHER (15X27X4)	1	
7	08341-31039	KEY	1	
8	09407-14407	CLAMP (L:145)	8	
9	33220-84M10	SENSOR ASSY, POSN	1	
10	01550-06167	BOLT	1	

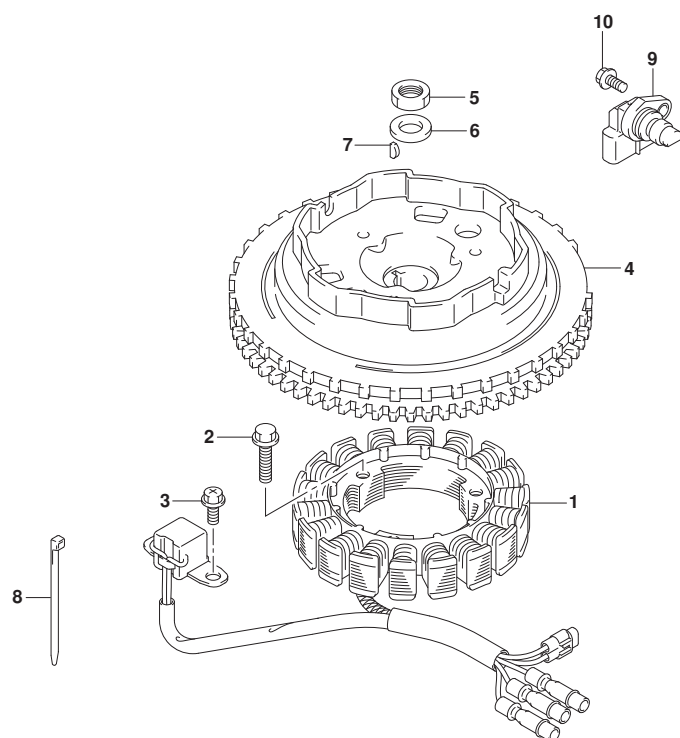


FIG.310A

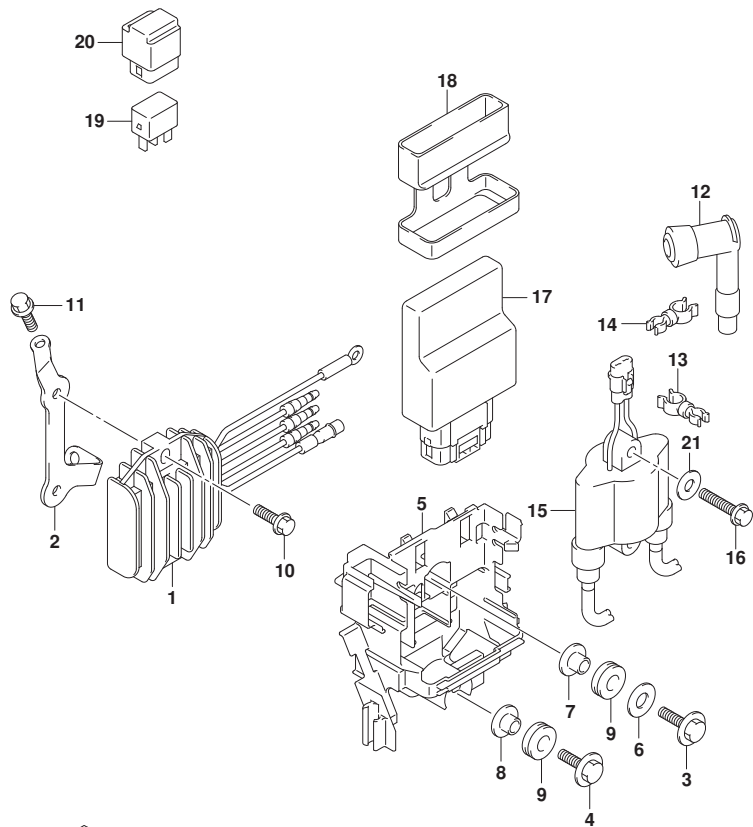


FIG.310A (1-D-7) RECTIFIER/IGNITION COIL (DF9.9B:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	2	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L40	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L50	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	



FIG.310B

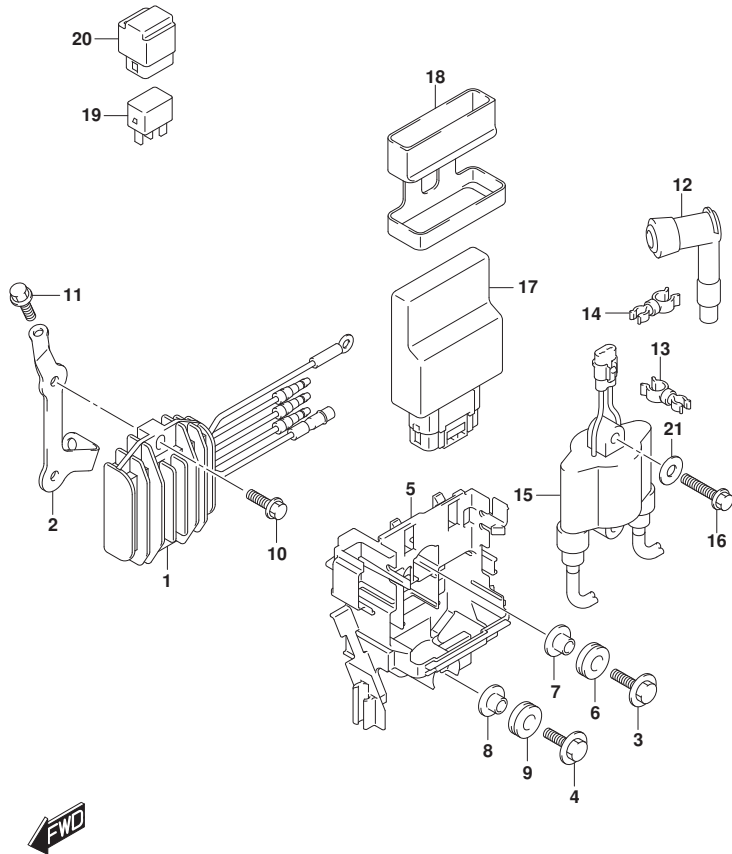


FIG.310B (1-D-8) RECTIFIER/IGNITION COIL (DF9.9B:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L02	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L10	HOLDER, ELECTRIC PARTS	1	
6	09320-09016	CUSHION (9X18X9.5)	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	1	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L40	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L50	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	

FIG.310C

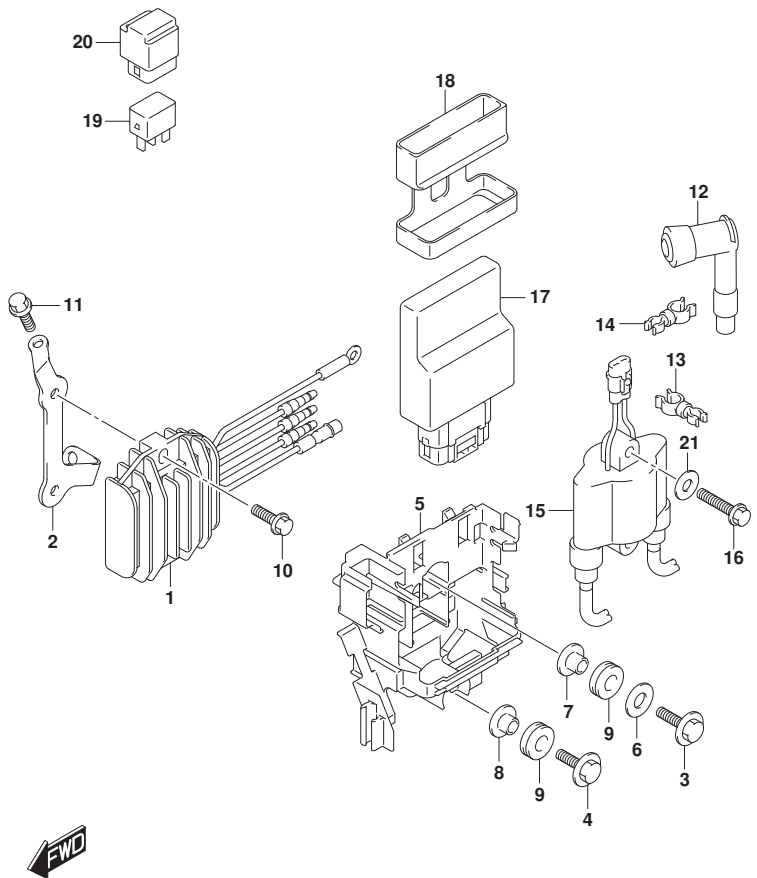


FIG.310C (1-D-9) RECTIFIER/IGNITION COIL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	
2	32815-89L00	BRACKET, RECTIFIER	1	
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	2	
10	01550-06207	BOLT	2	
11	01550-06167	BOLT	1	
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17	33930-89L40	UNIT, ENGINE CONTROL	1	
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	
20	38915-90J00	HOLDER, RELAY	1	
21	09160-06168	WASHER (6X14X1)	1	

NOTE : (DF9.9BR,DF9.9BT,DF9.9BTH):020

FIG.310D

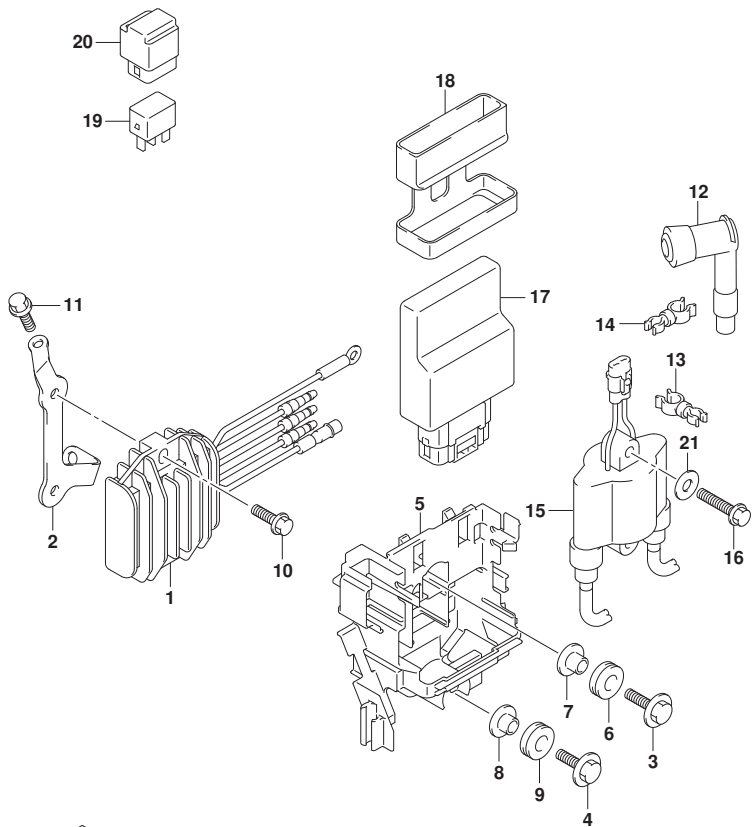


FIG.310D (1-D-10) RECTIFIER/IGNITION COIL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L02	RECTIFIER & REGULATOR ASSY	1	
2	32815-89L00	BRACKET, RECTIFIER	1	
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L10	HOLDER, ELECTRIC PARTS	1	
6	09320-09016	CUSHION (9X18X9.5)	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	1	
10	01550-06207	BOLT	2	
11	01550-06167	BOLT	1	
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17	33930-89L40	UNIT, ENGINE CONTROL	1	
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	
20	38915-90J00	HOLDER, RELAY	1	
21	09160-06168	WASHER (6X14X1)	1	

NOTE : (DF9.9BR,DF9.9BT):(021,022)

FIG.310E

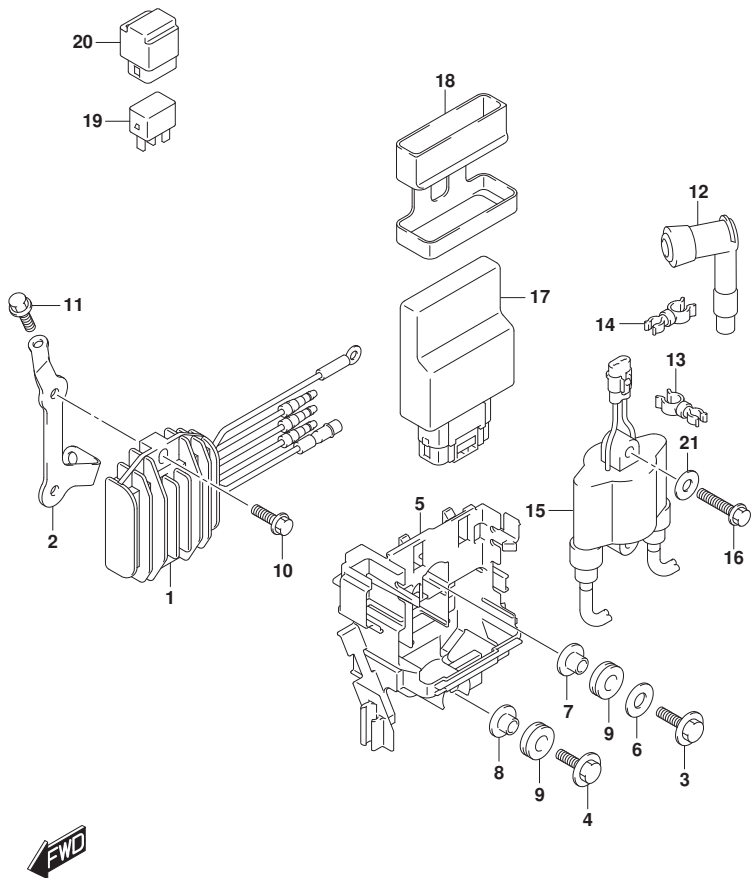


FIG.310E (1-D-11) RECTIFIER/IGNITION COIL (DF15A:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	2	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L00	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L10	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	

FIG.310F

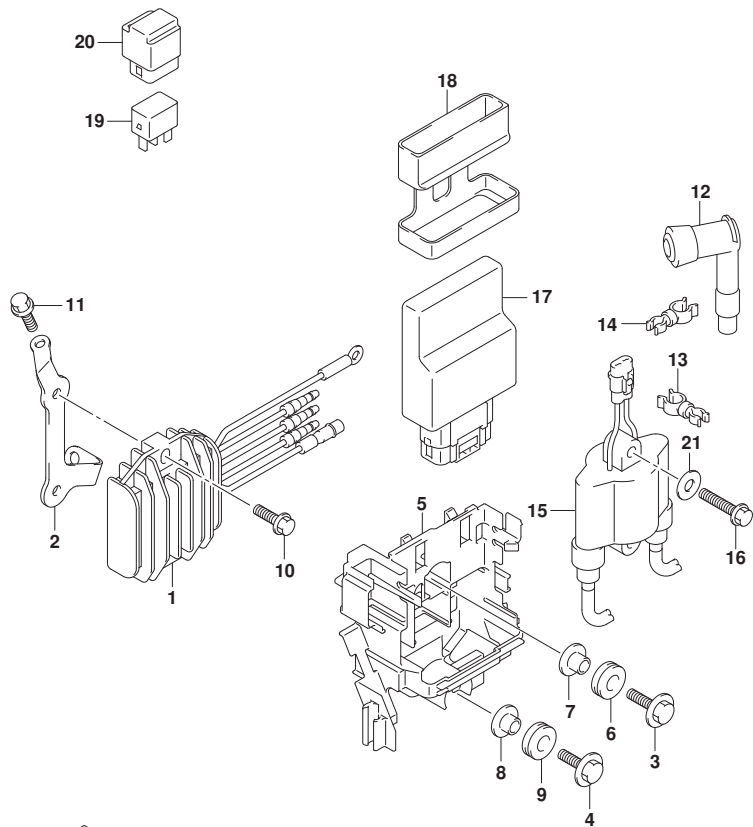


FIG.310F (1-D-12) RECTIFIER/IGNITION COIL (DF15A:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L02	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L10	HOLDER, ELECTRIC PARTS	1	
6	09320-09016	CUSHION (9X18X9.5)	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	1	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L00	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L10	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	

FIG.310G

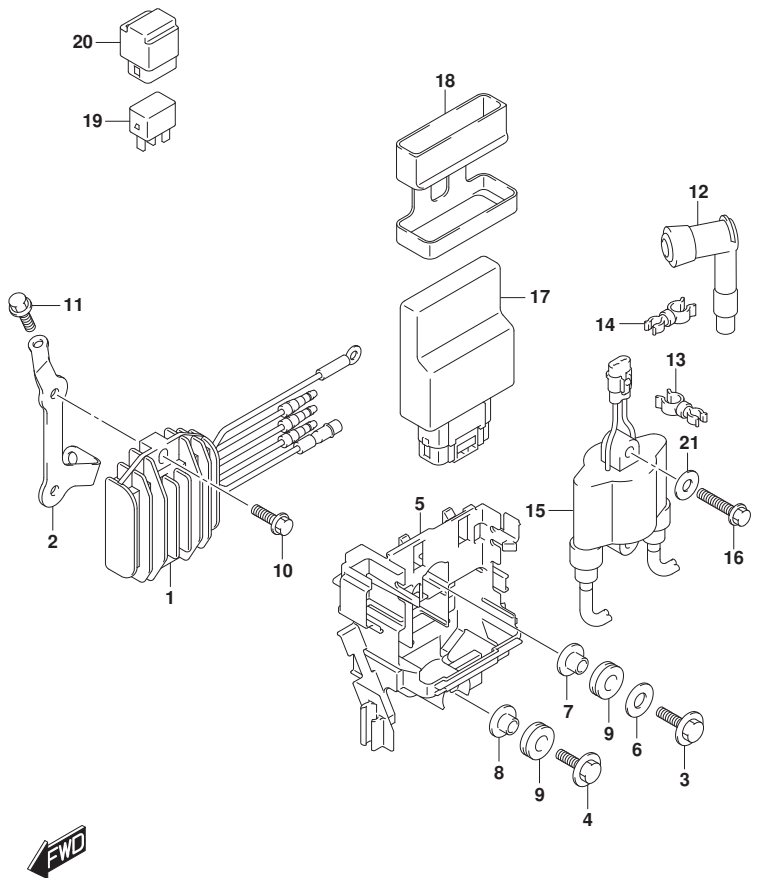


FIG.310G (1-D-13) RECTIFIER/IGNITION COIL ((DF15AR,DF15AT):020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	
2	32815-89L00	BRACKET, RECTIFIER	1	
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	2	
10	01550-06207	BOLT	2	
11	01550-06167	BOLT	1	
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17	33930-89L00	UNIT, ENGINE CONTROL	1	
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	
20	38915-90J00	HOLDER, RELAY	1	
21	09160-06168	WASHER (6X14X1)	1	

FIG.310H

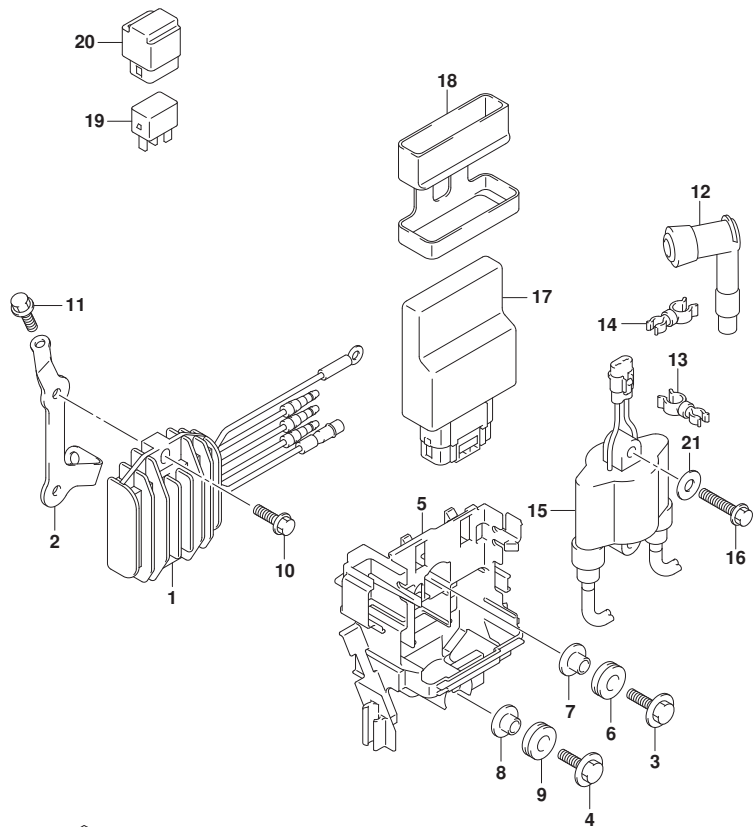


FIG.310H (1-D-14) RECTIFIER/IGNITION COIL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L02	RECTIFIER & REGULATOR ASSY	1	
2	32815-89L00	BRACKET, RECTIFIER	1	
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L10	HOLDER, ELECTRIC PARTS	1	
6	09320-09016	CUSHION (9X18X9.5)	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	1	
10	01550-06207	BOLT	2	
11	01550-06167	BOLT	1	
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17	33930-89L00	UNIT, ENGINE CONTROL	1	
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	
20	38915-90J00	HOLDER, RELAY	1	
21	09160-06168	WASHER (6X14X1)	1	

NOTE : (DF15AR,DF15AT):(021,022)



FIG.310J

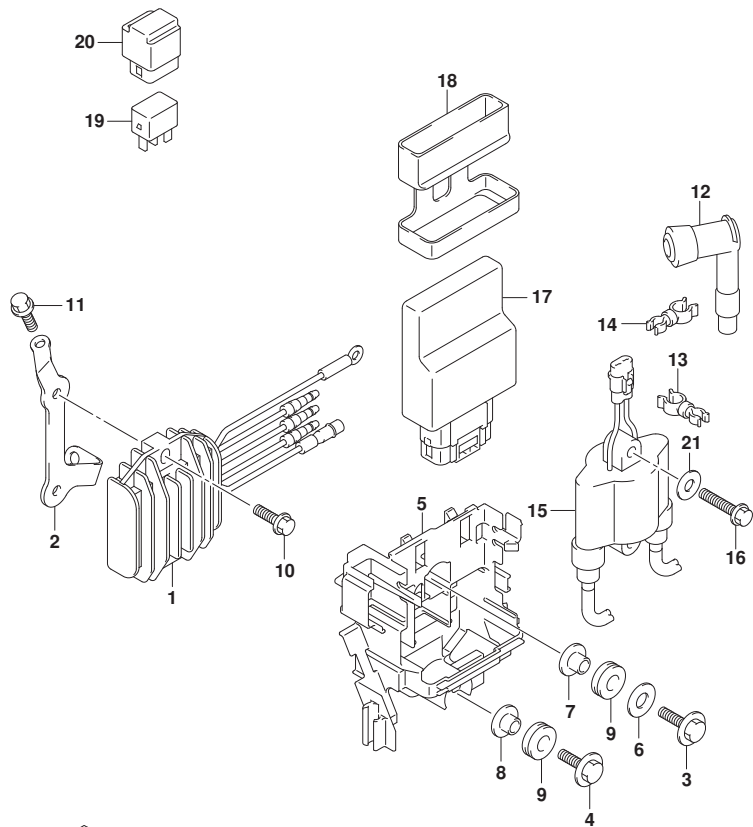


FIG.310J (1-E-2) RECTIFIER/IGNITION COIL (DF20A:P01:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	2	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L20	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L30	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	



FIG.310K

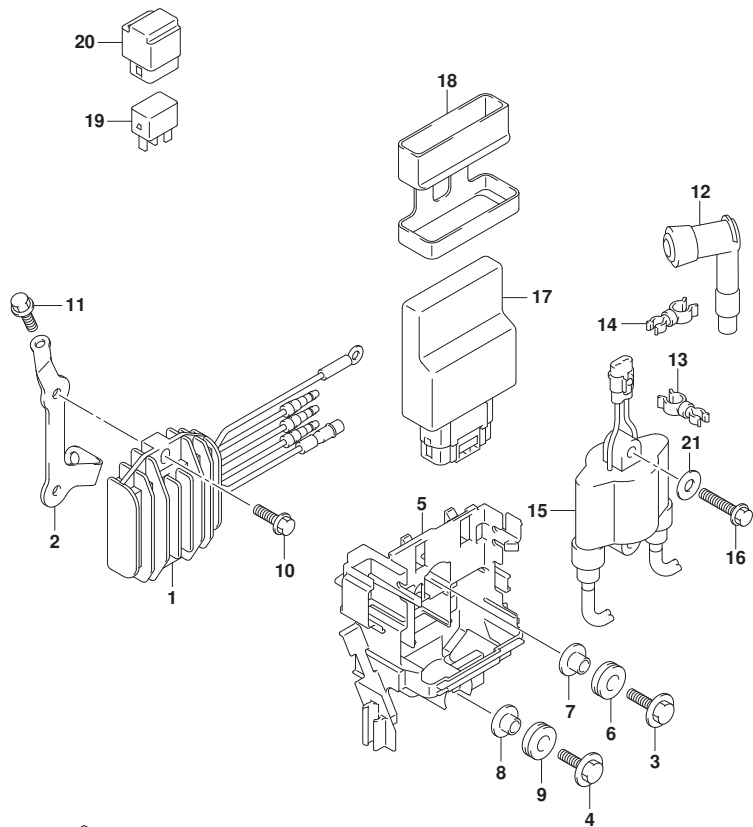


FIG.310K (1-E-3) RECTIFIER/IGNITION COIL (DF20A:P01:(021,022))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L02	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L10	HOLDER, ELECTRIC PARTS	1	
6	09320-09016	CUSHION (9X18X9.5)	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	1	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L20	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L30	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	



FIG.310L

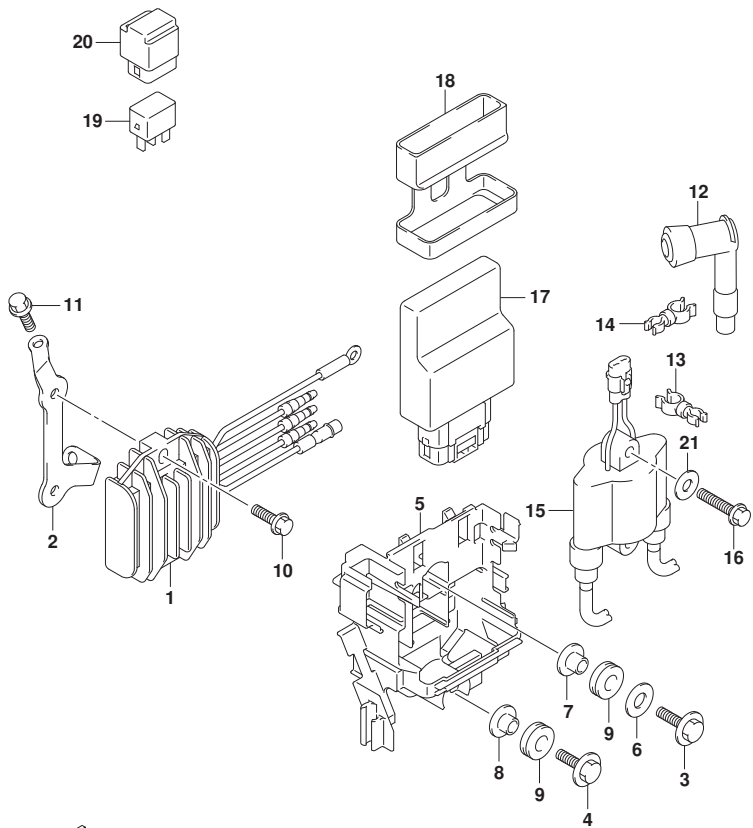


FIG.310L (1-E-4) RECTIFIER/IGNITION COIL (DF20A:P40:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	2	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L60	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L70	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	

FIG.310M

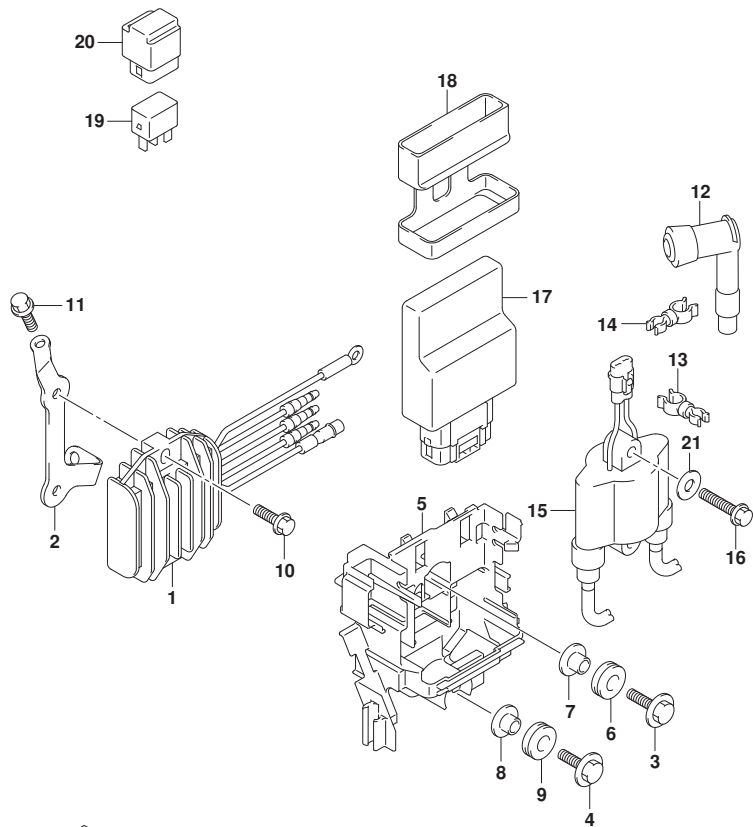


FIG.310M (1-E-5) RECTIFIER/IGNITION COIL (DF20A:P40:(021,022))

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	32800-89L02	RECTIFIER & REGULATOR ASSY	1	W/ELECTRIC STARTER
2	32815-89L00	BRACKET, RECTIFIER	1	W/ELECTRIC STARTER
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L10	HOLDER, ELECTRIC PARTS	1	
6	09320-09016	CUSHION (9X18X9.5)	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	1	
10	01550-06207	BOLT	2	W/ELECTRIC STARTER
11	01550-06167	BOLT	1	W/ELECTRIC STARTER
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17-1	33930-89L60	UNIT, ENGINE CONTROL	1	W/ELECTRIC STARTER
17-2	33930-89L70	UNIT, ENGINE CONTROL	1	W/MANUAL STARTER
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	W/ELECTRIC STARTER
20	38915-90J00	HOLDER, RELAY	1	W/ELECTRIC STARTER
21	09160-06168	WASHER (6X14X1)	1	



FIG.310N

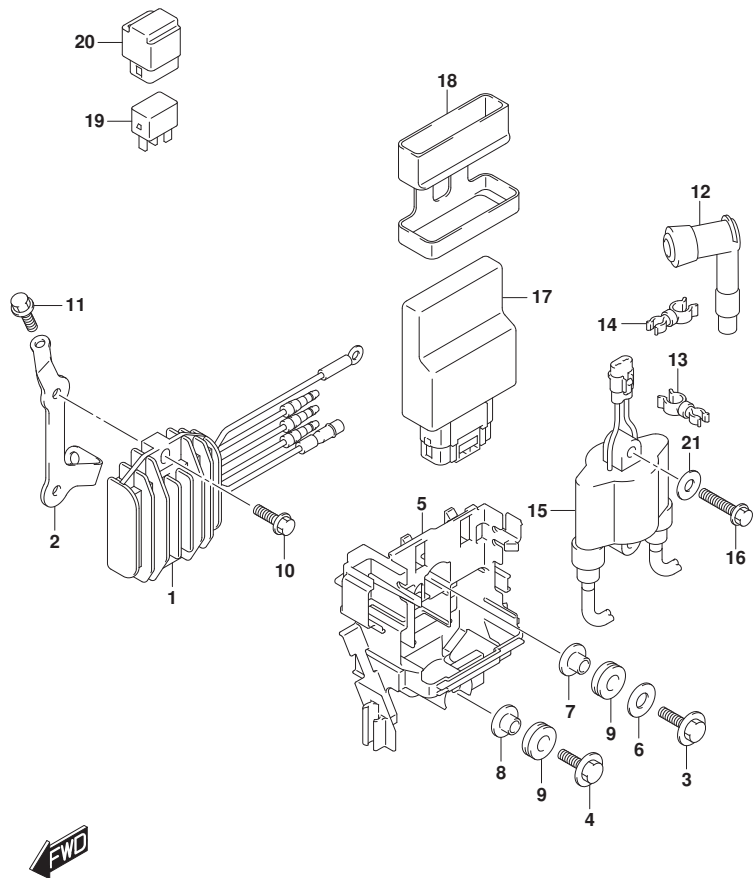


FIG.310N (1-E-6) RECTIFIER/IGNITION COIL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	
2	32815-89L00	BRACKET, RECTIFIER	1	
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	2	
10	01550-06207	BOLT	2	
11	01550-06167	BOLT	1	
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17	33930-89L20	UNIT, ENGINE CONTROL	1	
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	
20	38915-90J00	HOLDER, RELAY	1	
21	09160-06168	WASHER (6X14X1)	1	

NOTE : (DF20AR,DF20AT,DF20ATH):020



FIG.310P

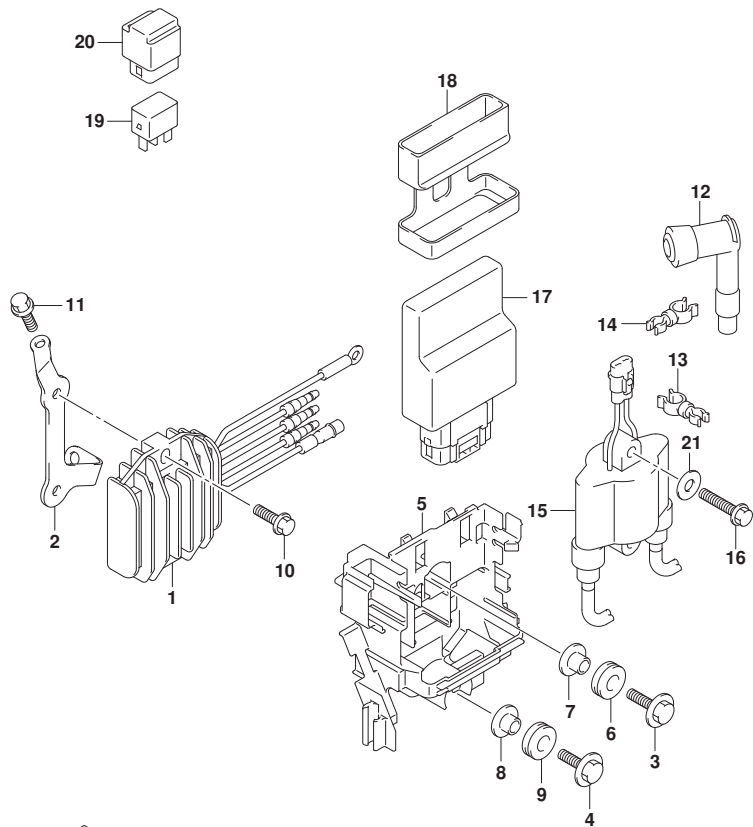


FIG.310P (1-E-7) RECTIFIER/IGNITION COIL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L01	RECTIFIER & REGULATOR ASSY	1	
2	32815-89L00	BRACKET, RECTIFIER	1	
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L03	HOLDER, ELECTRIC PARTS	1	
6	09320-08056	CUSHION	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08051	CUSHION	2	
10	01550-06207	BOLT	2	
11	01550-06167	BOLT	1	
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17	33930-89L20	UNIT, ENGINE CONTROL	1	
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	
20	38915-90J00	HOLDER, RELAY	1	
21	09160-06168	WASHER (6X14X1)	1	

NOTE : (DF20AR,DF20AT,DF20ATH):021



FIG.310R

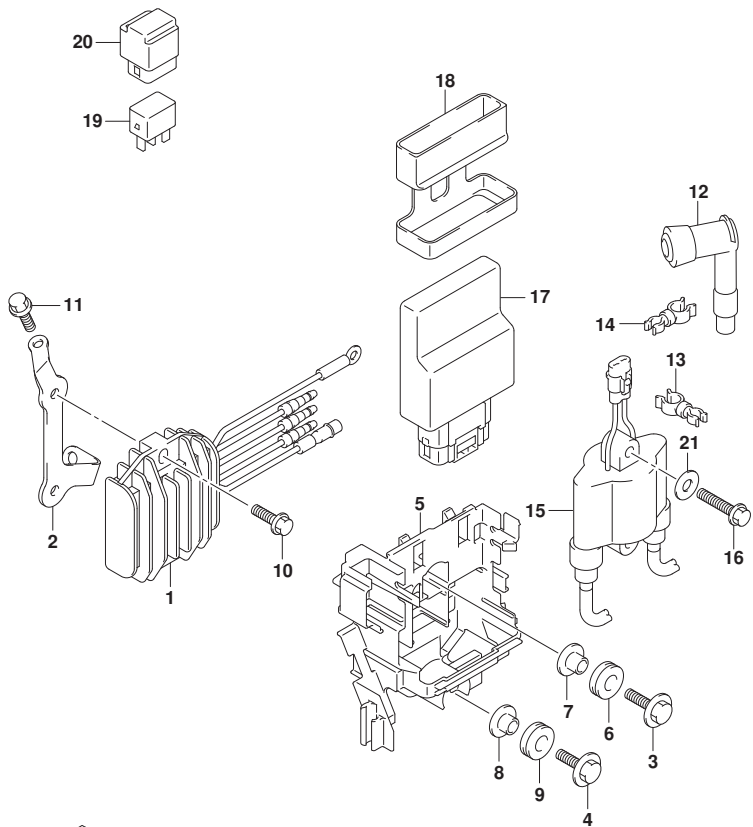


FIG.310R (1-E-8) RECTIFIER/IGNITION COIL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-89L02	RECTIFIER & REGULATOR ASSY	1	
2	32815-89L00	BRACKET, RECTIFIER	1	
3	09116-06517	BOLT (6X25)	1	
4	09116-06196	BOLT (6X20)	1	
5	32890-89L10	HOLDER, ELECTRIC PARTS	1	
6	09320-09016	CUSHION (9X18X9.5)	1	
7	09169-06062	WASHER (6.3X17X1.6)	1	
8	09169-06095	WASHER	1	
9	09320-08515	CUSHION (8.4X18X6)	1	
10	01550-06207	BOLT	2	
11	01550-06167	BOLT	1	
12	33500-07H00	CAP, SPARK PLUG	2	
13	09408-00159	CLAMP	1	
14	09408-00346	CLAMP	1	
15	33410-89L11	COIL, IGNITION	1	
16	01550-0630C	BOLT	2	
17	33930-89L20	UNIT, ENGINE CONTROL	1	
18	33925-89L00	CUSHION, ENGINE CONTROL UNIT	1	
19	38860-76F01	RELAY ASSY	1	
20	38915-90J00	HOLDER, RELAY	1	
21	09160-06168	WASHER (6X14X1)	1	

NOTE : (DF20AR,DF20AT,DF20ATH):022

FIG.322A

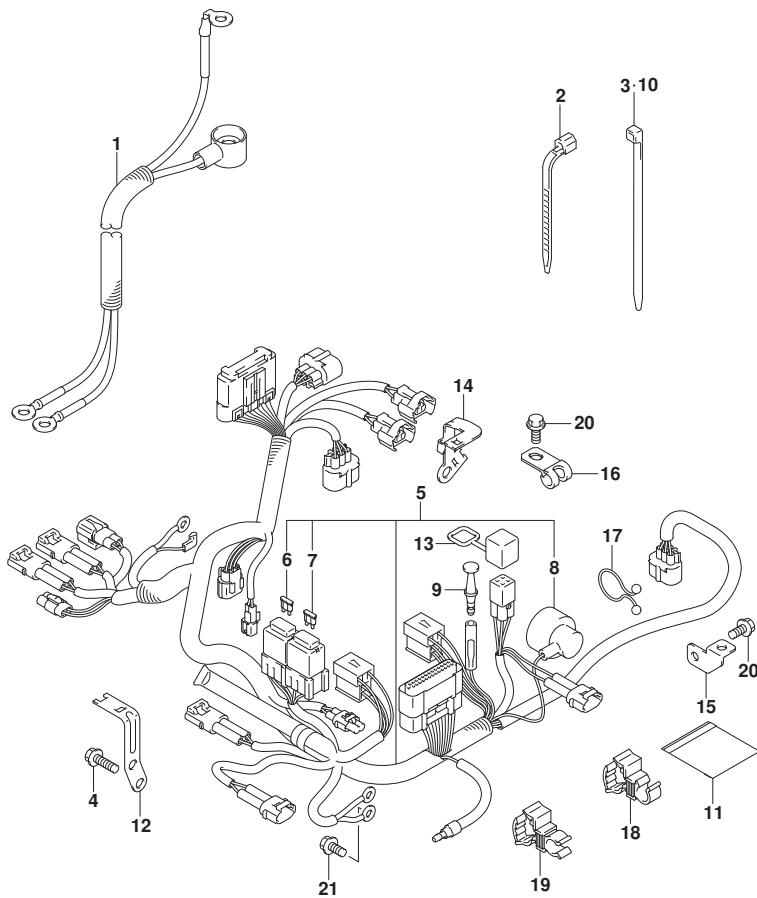


FIG.322A (1-E-9) HARNESS (DF9.9B,DF15A,DF20A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-89L10	CABLE, STARTER	1	W/ELECTRIC STARTER
2	09407-14403	CLAMP (L:125)	1	W/ELECTRIC STARTER
3	09407-14407	CLAMP (L:145)	1	W/ELECTRIC STARTER
4	01547-0616C	BOLT	2	W/ELECTRIC STARTER
5-1	36610-89LG0	HARNESS ASSY, WIRING	1	W/ELECTRIC STARTER
5-2	36610-89LC0	HARNESS ASSY, WIRING	1	W/MANUAL STARTER
6	09481-10501	.FUSE (10A)	1	W/ELECTRIC STARTER
7	09481-30501	.FUSE (30A)	1	W/ELECTRIC STARTER
8	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
9	36615-96300	TERMINAL	1	
10-1	09407-14407	CLAMP (L:145)	4	W/ELECTRIC STARTER
10-2	09407-14407	CLAMP (L:145)	5	W/MANUAL STARTER
11	32916-89L00	COVER, CONNECTOR	1	W/ELECTRIC STARTER
12	36617-89L10	BRACKET, HARNESS	1	W/ELECTRIC STARTER
13-1	33634-96J00	CAP, SERVICE CONNECTOR	1	020,021
13-2	33634-94L00	CAP, SERVICE CONNECTOR	1	022
14	36617-89L01	BRACKET, HARN	1	
15	36617-91J00	BRACKET, SWITCH LEAD	1	
16	09403-08417	CLAMP	1	
17	09408-00008	CLIP (ID:20)	1	
18-1	09408-00339	CLAMP	1	W/ELECTRIC STARTER
18-2	09408-00252	CLAMP	1	W/MANUAL STARTER
19	09408-00338	CLAMP	1	
20	01550-0612C	BOLT	2	
21	01550-06127	BOLT	1	

FIG.322B

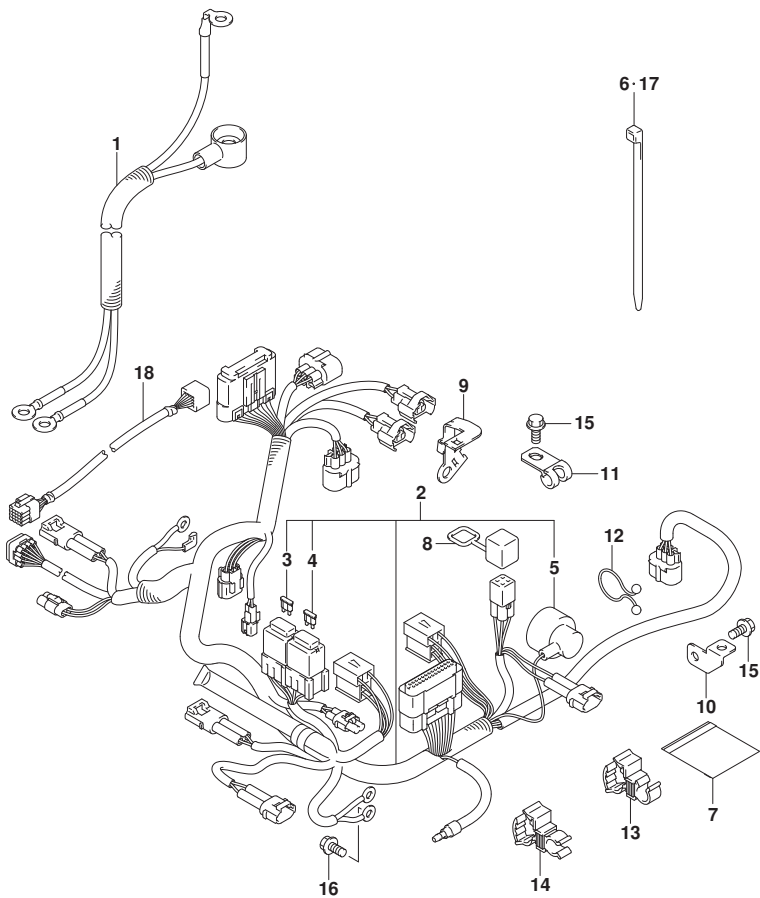


FIG.322B (1-E-10) HARNESS (DF9.9BR,DF15AR,DF20AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-89L10	CABLE, STARTER	1	
2	36610-89LH0	HARNESS ASSY, WIRING	1	
3	09481-10501	.FUSE (10A)	1	
4	09481-30501	.FUSE (30A)	1	
5	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
6	09407-14407	CLAMP (L:145)	4	
7	32916-89L00	COVER, CONNECTOR	1	
8	33634-96J00	CAP, SERVICE CONNECTOR	1	
9	36617-89L01	BRACKET, HARN	1	
10	36617-91J00	BRACKET, SWITCH LEAD	1	
11	09403-08417	CLAMP	1	
12-1	09408-00008	CLAMP (ID:20)	1	020
12-2	09408-00340	CLAMP (ID:20)	1	021,022
13	09408-00339	CLAMP	1	
14	09408-00338	CLAMP	1	
15	01550-0612C	BOLT	2	
16	01550-06127	BOLT	1	
17	09407-14407	CLAMP (L:145)	1	
18-1	36620-93J12	WIRE ASSY, REMOCON EXT (L:2000)	1	OPT
18-2	36620-93J42	WIRE ASSY, REMOCON EXT (L:3000)	1	OPT



FIG.322C

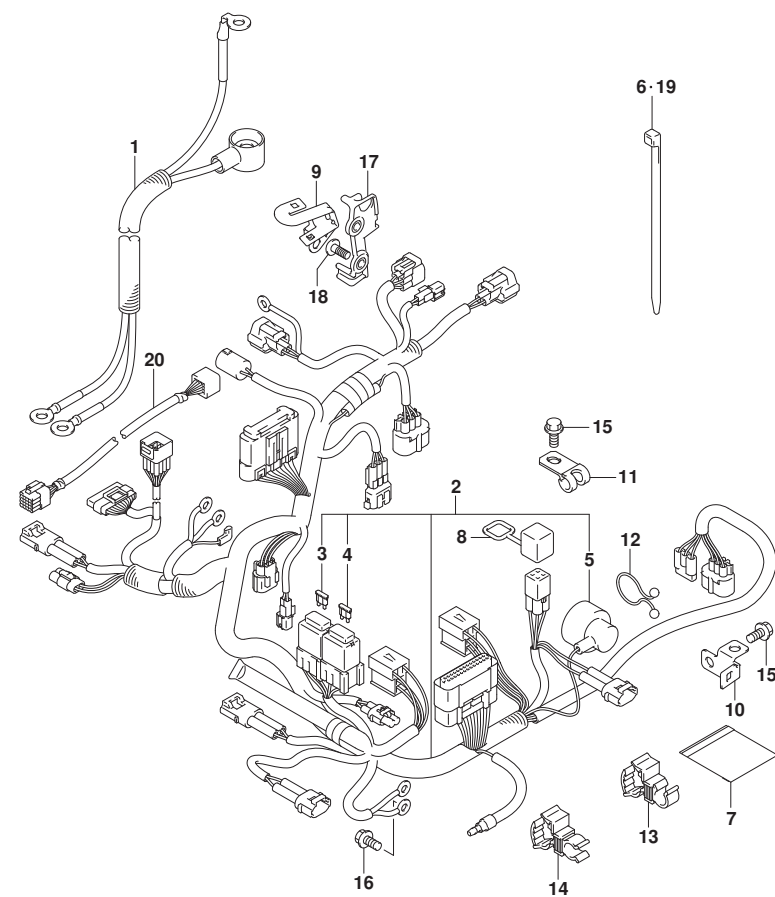


FIG.322C (1-E-11) HARNESS (DF9.9BT,DF15AT,DF20AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-89L10	CABLE, STARTER	1	
2	36610-89LK0	HARNESS ASSY, WIRING	1	
3	09481-10501	.FUSE (10A)	1	
4	09481-30501	.FUSE (30A)	1	
5	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
6	09407-14407	CLAMP (L:145)	4	
7	32916-89L00	COVER, CONNECTOR	1	
8	33634-96J00	CAP, SERVICE CONNECTOR	1	
9	36617-89L50	BRACKET, HARNESS	1	
10	36617-89L20	BRACKET, HARN	1	
11	09403-08417	CLAMP	1	
12	09408-00024	CLIP (ID:23)	1	
13	09408-00339	CLAMP	1	
14	09408-00338	CLAMP	1	
15	01550-0612C	BOLT	2	
16	01550-06127	BOLT	1	
17	36616-89L10	HOLDER, HARNESS	1	
18	02142-06167	SCREW	2	
19	09407-14407	CLAMP (L:145)	1	
20-1	36620-93J12	WIRE ASSY, REMOCON EXT (L:2000)	1	OPT
20-2	36620-93J42	WIRE ASSY, REMOCON EXT (L:3000)	1	OPT



FIG.322D

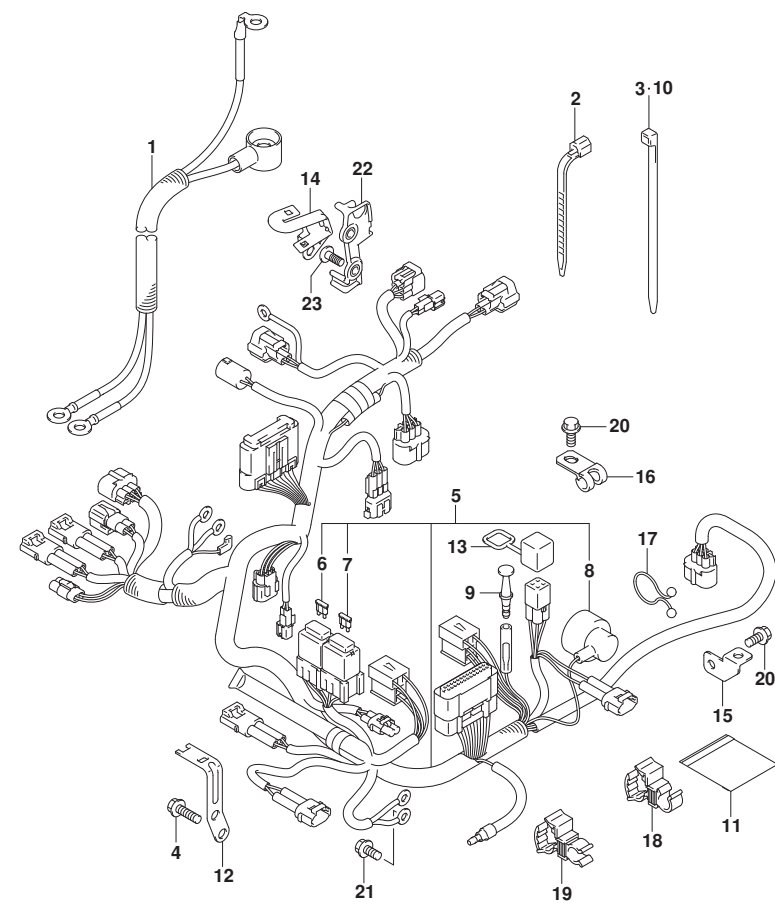


FIG.322D (1-E-12) HARNESS (DF9.9BTH,DF20ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-89L10	CABLE, STARTER	1	
2	09407-14403	CLAMP (L:125)	1	
3	09407-14407	CLAMP (L:145)	1	
4	01547-0616C	BOLT	2	
5	36610-89LJ0	HARNESS ASSY, WIRING	1	
6	09481-10501	.FUSE (10A)	1	
7	09481-30501	.FUSE (30A)	1	
8	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
9	36615-96300	TERMINAL	1	
10	09407-14407	CLAMP (L:145)	4	
11	32916-89L00	COVER, CONNECTOR	1	
12	36617-89L10	BRACKET, HARNESS	1	
13	33634-96J00	CAP, SERVICE CONNECTOR	1	
14	36617-89L50	BRACKET, HARNESS	1	
15	36617-91J00	BRACKET, SWITCH LEAD	1	
16	09403-08417	CLAMP	1	
17-1	09408-00008	CLAMP (ID:20)	1	020
17-2	09408-00340	CLAMP (ID:20)	1	021,022
18	09408-00339	CLAMP	1	
19	09408-00338	CLAMP	1	
20	01550-0612C	BOLT	2	
21	01550-06127	BOLT	1	
22	36616-89L10	HOLDER, HARNESS	1	
23	02142-06167	SCREW	2	



FIG.327A

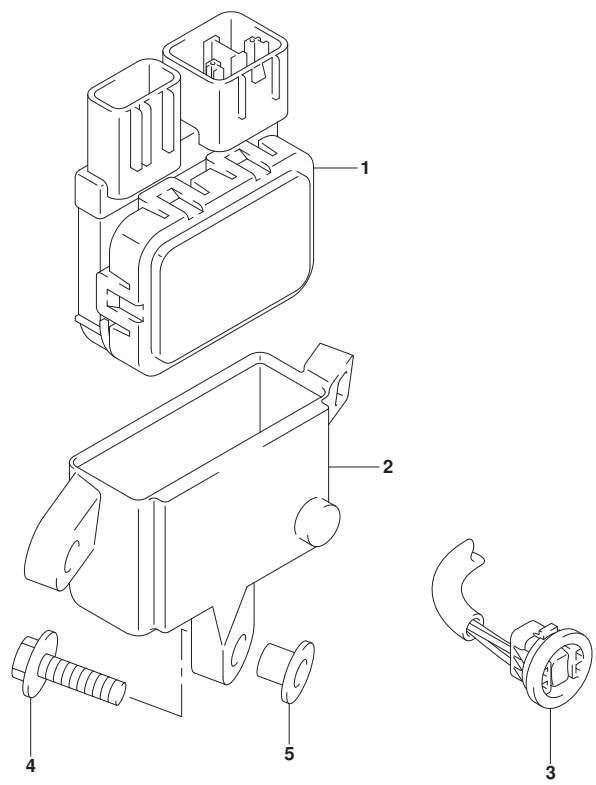


FIG.327A (1-E-13) PTT SWITCH (DF9.9BT,DF15AT,DF20AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38410-93J21	RELAY ASSY, PTT	1	
2	38415-89L00	HOLDER, PT RELAY	1	
3	37850-99E05	SWITCH ASSY, PTT	1	
4	09116-06517	BOLT (6X25)	2	
5	09169-06062	WASHER (6.3X17X1.6)	2	



FIG.327B

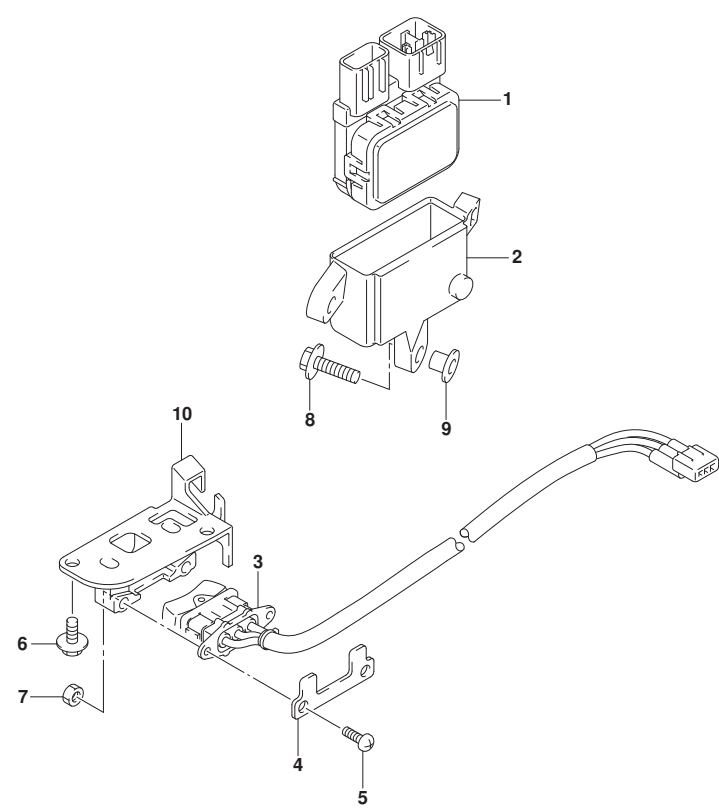


FIG.327B (1-E-14) PTT SWITCH (DF9.9BTH,DF20ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38410-93J21	RELAY ASSY, PTT	1	
2	38415-89L00	HOLDER, PT RELAY	1	
3	37850-94JA3	SWITCH ASSY, PT	1	
4	37852-94JB0	BRACKET, PT SW	1	
5	09125-05046	SCREW (5X12)	2	
6	29103-93J00	BOLT (6X12)	2	
7	09140-05005	NUT	2	
8	09116-06517	BOLT (6X25)	2	
9	09169-06062	WASHER (6.3X17X1.6)	2	
10	37851-89L00	HOLDER, PT SW	1	

FIG.334A


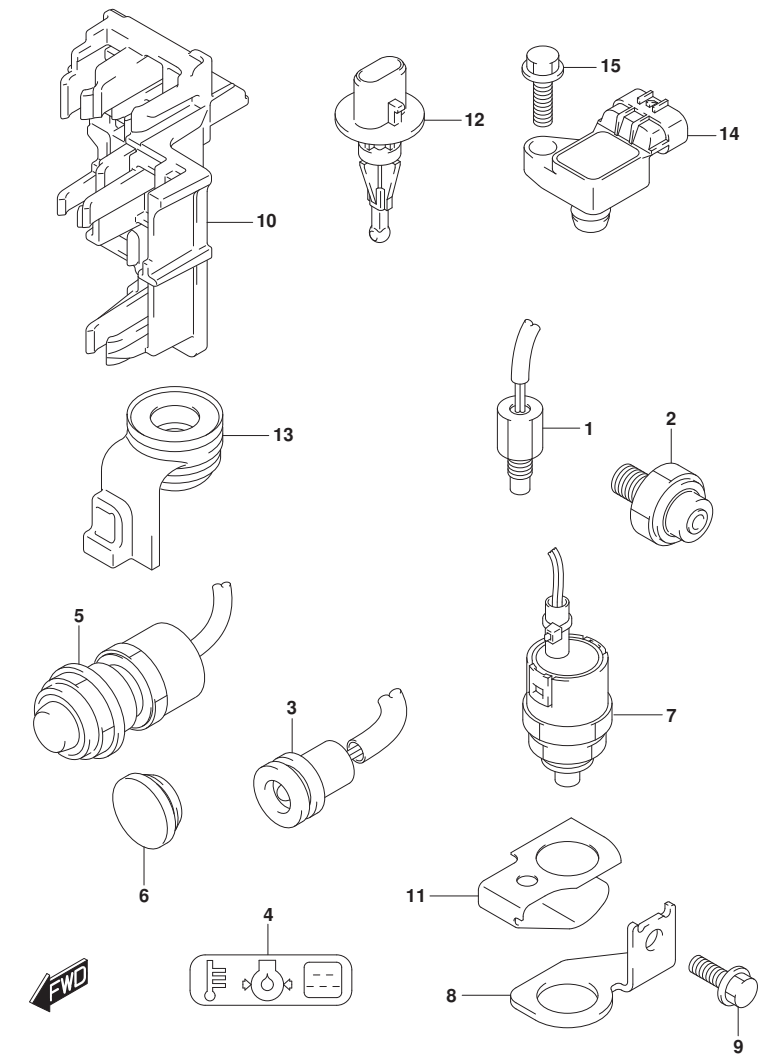


FIG.334A (1-F-2) SENSOR/SWITCH ((DF9.9B,DF15A,DF20A):P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-99J10	INDICATOR, OIL PRESSURE	1	
4-1	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
4-2	36367-89L00-Y5S	LABEL, WARNING (WHITE)	1	
4-3	36367-89L00-QTN	LABEL, WARNING (WHITE)	1	
5	37161-89L02	SWITCH ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
6	37163-89L00	PLUG, STARTING SWITCH HOLE	1	W/MANUAL STARTER
7	37721-89L00	SWITCH ASSY, NEUTRAL	1	
8	37726-89L00	BRACKET, NEUTRAL SWITCH	1	
9	01550-0616C	BOLT	1	
10	36616-89L20	HOLDER, CONNECTOR	1	
11	37725-89L01	ACTUATOR, NEUTRAL SWITCH	1	
12	13650-52G00	SENSOR, INLET AIR TEMP	1	
13	13655-89L10	GROMMET, INLET AIR TEMP SNSR	1	
14	18590-58M00	SENSOR, MAP	1	
15	01550-0620C	BOLT	1	

FIG.334B

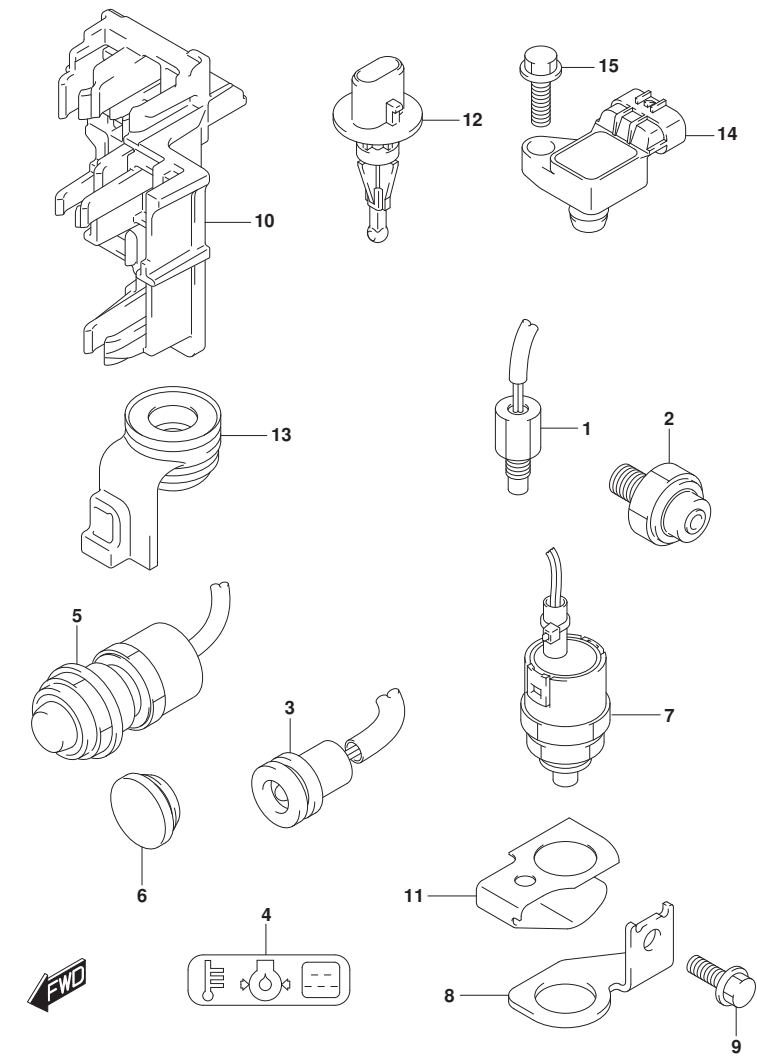

DF20A_P01_022_334B
SENSOR/SWITCH

FIG.334B (1-F-3) SENSOR/SWITCH (DF20A:P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-99J10	INDICATOR, OIL PRESSURE	1	
4	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
5	37161-89L02	SWITCH ASSY, STARTER MOTOR	1	W/ELECTRIC STARTER
6	37163-89L00	PLUG, STARTING SWITCH HOLE	1	W/MANUAL STARTER
7	37721-89L00	SWITCH ASSY, NEUTRAL	1	
8	37726-89L00	BRACKET, NEUTRAL SWITCH	1	
9	01550-0616C	BOLT	1	
10	36616-89L20	HOLDER, CONNECTOR	1	
11	37725-89L01	ACTUATOR, NEUTRAL SWITCH	1	
12	13650-52G00	SENSOR, INLET AIR TEMP	1	
13	13655-89L10	GROMMET, INLET AIR TEMP SNSR	1	
14	18590-58M00	SENSOR, MAP	1	
15	01550-0620C	BOLT	1	

FIG.334C

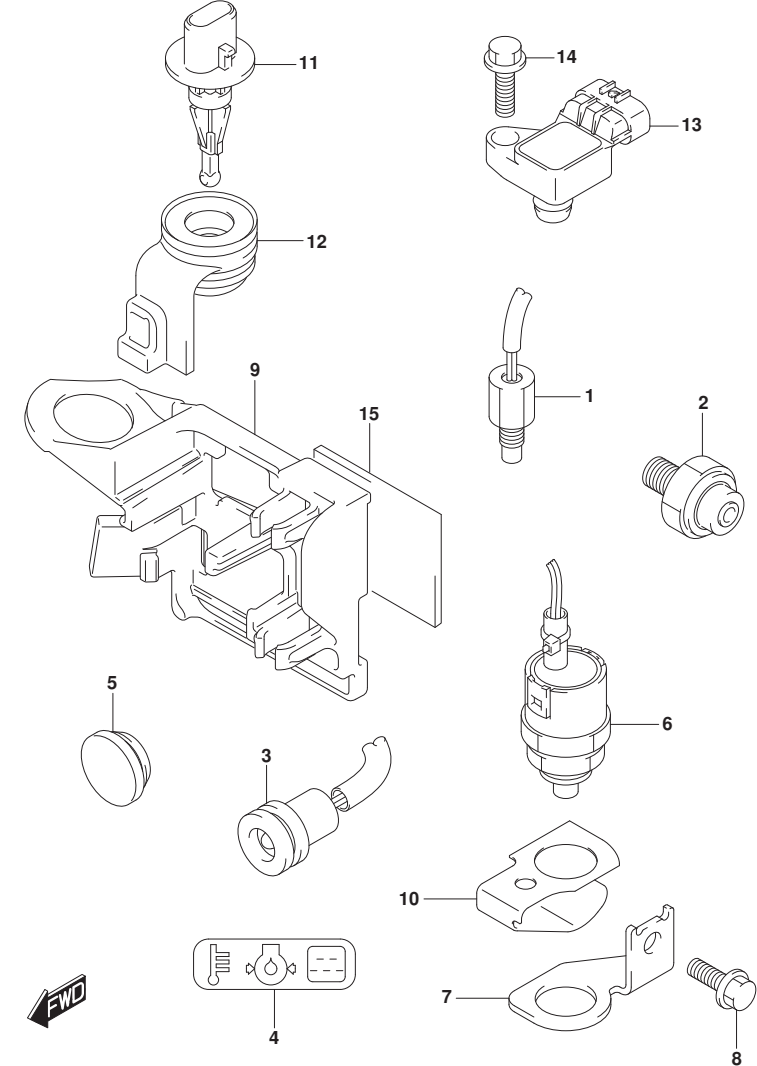


FIG.334C (1-F-4) SENSOR/SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-99J10	INDICATOR, OIL PRESSURE	1	
4-1	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
4-2	36367-89L00-Y5S	LABEL, WARNING (WHITE)	1	
4-3	36367-89L00-QTN	LABEL, WARNING (WHITE)	1	
5	37163-89L00	PLUG, STARTING SWITCH HOLE	1	
6	37721-89L00	SWITCH ASSY, NEUTRAL	1	
7	37726-89L00	BRACKET, NEUTRAL SWITCH	1	
8	01550-0616C	BOLT	1	
9	36616-89L30	HOLDER, CONNECTOR	1	
10	37725-89L01	ACTUATOR, NEUTRAL SWITCH	1	
11	13650-52G00	SENSOR, INLET AIR TEMP	1	
12	13655-89L10	GROMMET, INLET AIR TEMP SNSR	1	
13	18590-58M00	SENSOR, MAP	1	
14	01550-0620C	BOLT	1	
15	32851-93J00	CUSHION, LEAD WIRE	1	

NOTE : DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT

FIG.334D

FIG.334D (1-F-5) SENSOR/SWITCH (DF9.9BTH,DF20ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13640-32G20	SENSOR, ENGINE TEMP	1	
2	37820-89L00	SWITCH ASSY, OIL PRESSURE	1	
3	36360-99J10	INDICATOR, OIL PRESSURE	1	
4-1	36367-89L00-YAY	LABEL, WARNING (BLACK)	1	
4-2	36367-89L00-Y5S	LABEL, WARNING (WHITE)	1	
5	37161-89L02	SWITCH ASSY, STARTER MOTOR	1	
6	37721-89L00	SWITCH ASSY, NEUTRAL	1	
7	37726-89L00	BRACKET, NEUTRAL SWITCH	1	
8	01550-0616C	BOLT	1	
9	36616-89L20	HOLDER, CONNECTOR	1	
10	37725-89L01	ACTUATOR, NEUTRAL SWITCH	1	
11	13650-52G00	SENSOR, INLET AIR TEMP	1	
12	13655-89L10	GROMMET, INLET AIR TEMP SNSR	1	
13	18590-58M00	SENSOR, MAP	1	
14	01550-0620C	BOLT	1	


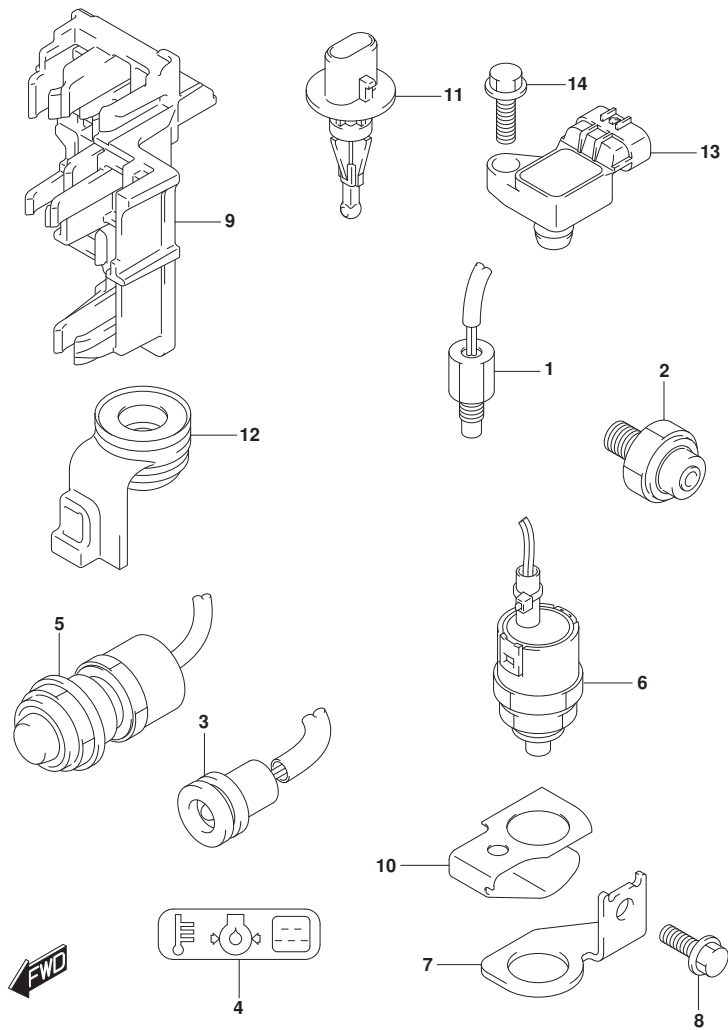


FIG.335A

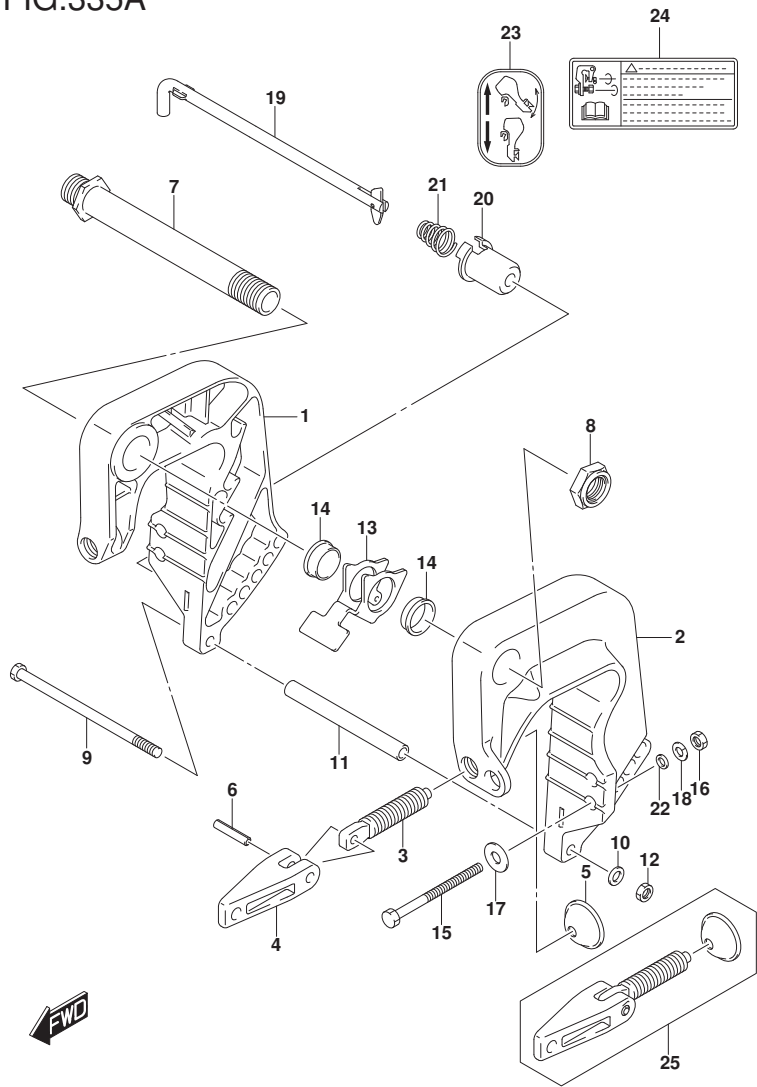


DF20A_P01_022_335A
CLAMP BRACKET

FIG.335A (1-F-6) CLAMP BRACKET ((DF9.9B,DF15A,DF20A):P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	41111-89L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	STBD	
1-2	41111-89L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020	
				STBD	
1-3	41111-89L00-QTN	BRACKET, CLAMP STBD (WHITE)	1	021,022	
				STBD	
2-1	41121-89L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	PORT	
2-2	41121-89L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020	
				PORT	
2-3	41121-89L00-QTN	BRACKET, CLAMP STBD (WHITE)	1	021,022	
				PORT	
3	41211-99JL0	SCREW, CLAMP	2		
4	41212-91J00	HANDLE, CLAMP	2		
5	41213-94J01	PLATE, CLAMP	2		
6	09205-06021	PIN (6X25)	2		
7	41130-90L00	SHAFT, CLAMP BRACKET	1		
8	09159-22006	NUT	1		
9	09100-06178	BOLT (6X150)	1		
10	09160-06082	WASHER (6.5X13X1.0)	1		
11	09180-06366	SPACER (6.5X10.5X114)	1		
12	29141-93J00	NUT	1		
13	45261-89L00	LEVER, RELEASE	1		
14	59315-94J00	BUSH, RELEASE LEVER	2		
		(22.6X27X8)			
15	09100-08311	BOLT (8X90)	2		
16-1	09140-08023-XC0	NUT	2	020,021	
16-2	09140-08016	NUT	2	022	
17	09160-08081	WASHER (8.5X23X1.5)	2		
18	29162-93J10	WASHER (8.2X15.4X2.0)	2		
19	45420-89L01	PIN, TILT LOCK	1		
20	45425-94J01	STOPPER, TILT LOCK PIN	1		
21	09441-17001	SPRING	1		
22	09160-08170	WASHER (8.5X16X2)	2		
23	45269-89L00	MARK, REVERSE LOCK	1		
24	69911-91J51	MARK, CLAMP BRACKET	1		
25	41210-99JL1	SCREW ASSY, CLAMP	1	OPT	

DF20A_P01_022

FIG.335B

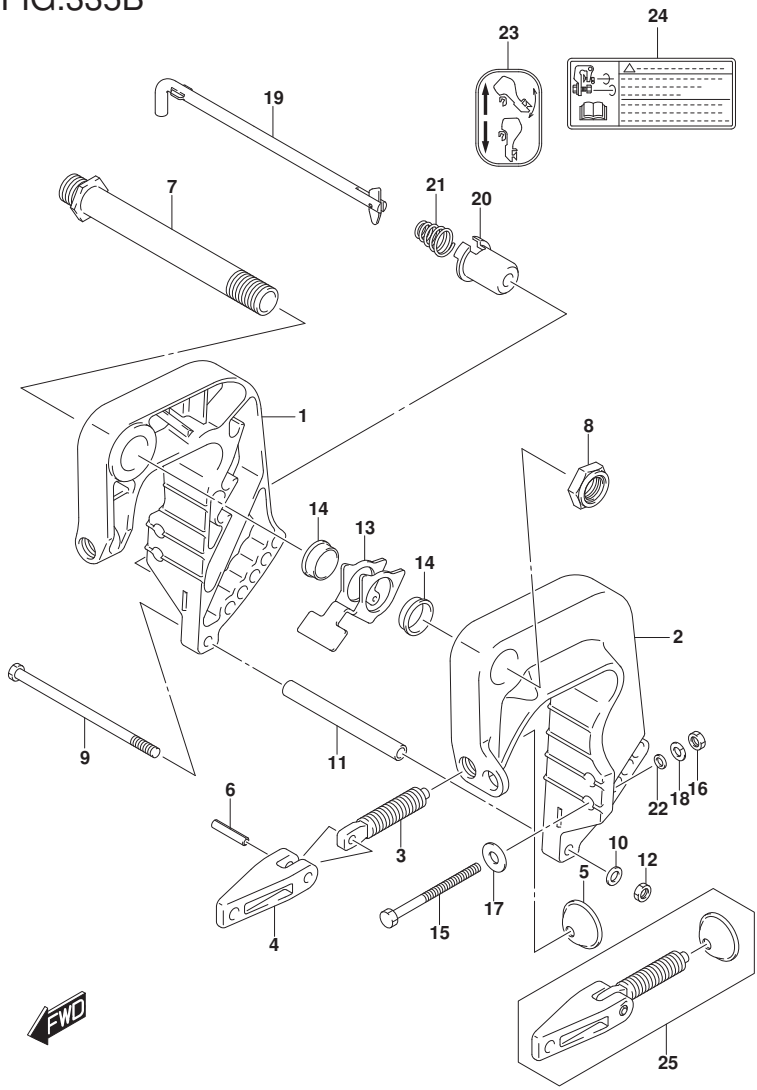


DF20A_P01_022_335B
CLAMP BRACKET

FIG.335B (1-F-7) CLAMP BRACKET (DF20A:P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-89L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	STBD
2	41121-89L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	PORT
3	41211-99JL0	SCREW, CLAMP	2	
4	41212-91J00	HANDLE, CLAMP	2	
5	41213-94J01	PLATE, CLAMP	2	
6	09205-06021	PIN (6X25)	2	
7	41130-90L00	SHAFT, CLAMP BRACKET	1	
8	09159-22006	NUT	1	
9	09100-06178	BOLT (6X150)	1	
10	09160-06082	WASHER (6.5X13X1.0)	1	
11	09180-06366	SPACER (6.5X10.5X114)	1	
12	29141-93J00	NUT	1	
13	45261-89L00	LEVER, RELEASE	1	
14	59315-94J00	BUSH, RELEASE LEVER (22.6X27X8)	2	
15	09100-08311	BOLT (8X90)	2	
16-1	09140-08023-XC0	NUT	2	020,021
16-2	09140-08016	NUT	2	022
17	09160-08081	WASHER (8.5X23X1.5)	2	
18	29162-93J10	WASHER (8.2X15.4X2.0)	2	
19	45420-89L01	PIN, TILT LOCK	1	
20	45425-94J01	STOPPER, TILT LOCK PIN	1	
21	09441-17001	SPRING	1	
22	09160-08170	WASHER (8.5X16X2)	2	
23	45269-89L00	MARK, REVERSE LOCK	1	
24	69911-91J51	MARK, CLAMP BRACKET	1	
25	41210-99JL1	SCREW ASSY, CLAMP	1	OPT

DF20A_P01_022

FIG.335C

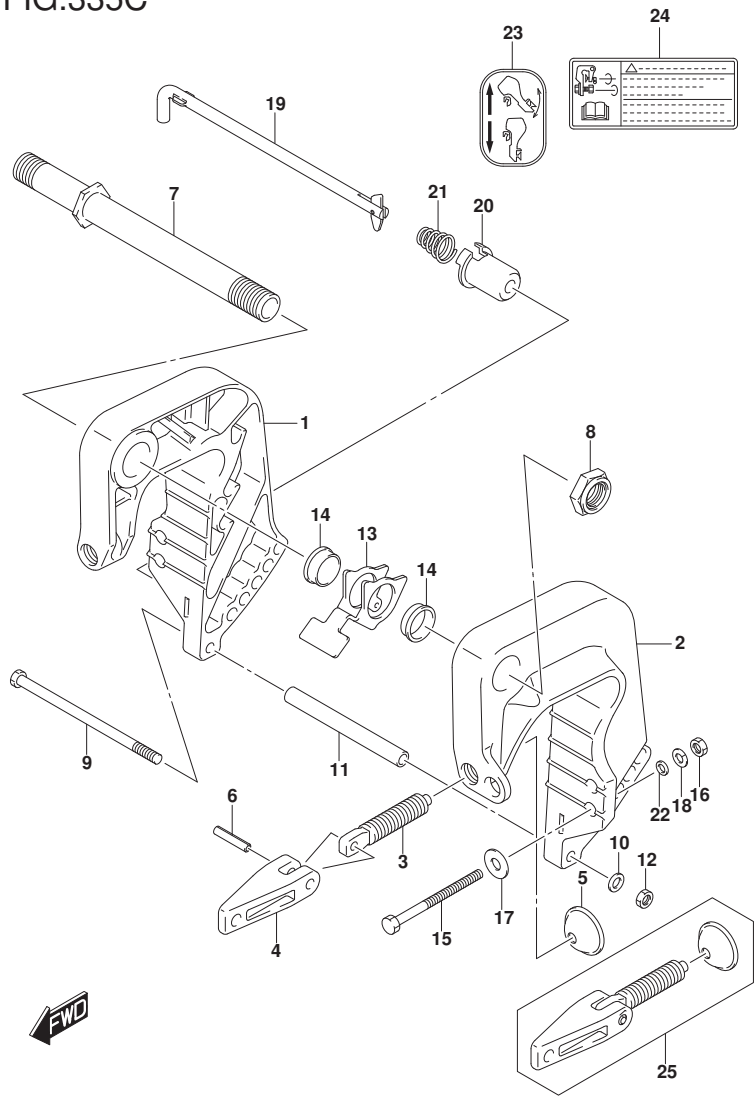

DF20A_P01_022_335C
CLAMP BRACKET

FIG.335C (1-F-8) CLAMP BRACKET (DF9.9BR,DF15AR,DF20AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	41111-89L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	021,022	STBD
1-2	41111-89L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020	STBD
2-1	41121-89L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	021,022	PORT
2-2	41121-89L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020	PORT
3	41211-99JL0	SCREW, CLAMP	2		
4	41212-91J00	HANDLE, CLAMP	2		
5	41213-94J01	PLATE, CLAMP	2		
6	09205-06021	PIN (6X25)	2		
7	41130-89L00	SHAFT, CLAMP BRACKET	1		
8	09159-22006	NUT	1		
9	09100-06178	BOLT (6X150)	1		
10	09160-06082	WASHER (6.5X13X1.0)	1		
11	09180-06366	SPACER (6.5X10.5X114)	1		
12	29141-93J00	NUT	1		
13	45261-89L00	LEVER, RELEASE	1		
14	59315-94J00	BUSH, RELEASE LEVER (22.6X27X8)	2		
15	09100-08311	BOLT (8X90)	2		
16-1	09140-08023-XC0	NUT	2	020,021	
16-2	09140-08016	NUT	2	022	
17	09160-08081	WASHER (8.5X23X1.5)	2		
18	29162-93J10	WASHER (8.2X15.4X2.0)	2		
19	45420-89L01	PIN, TILT LOCK	1		
20	45425-94J01	STOPPER, TILT LOCK PIN	1		
21	09441-17001	SPRING	1		
22	09160-08170	WASHER (8.5X16X2)	2		
23	45269-89L00	MARK, REVERSE LOCK	1		
24	69911-91J51	MARK, CLAMP BRACKET	1		
25	41210-99JL1	SCREW ASSY, CLAMP	1	OPT	

DF20A_P01_022

FIG.335D

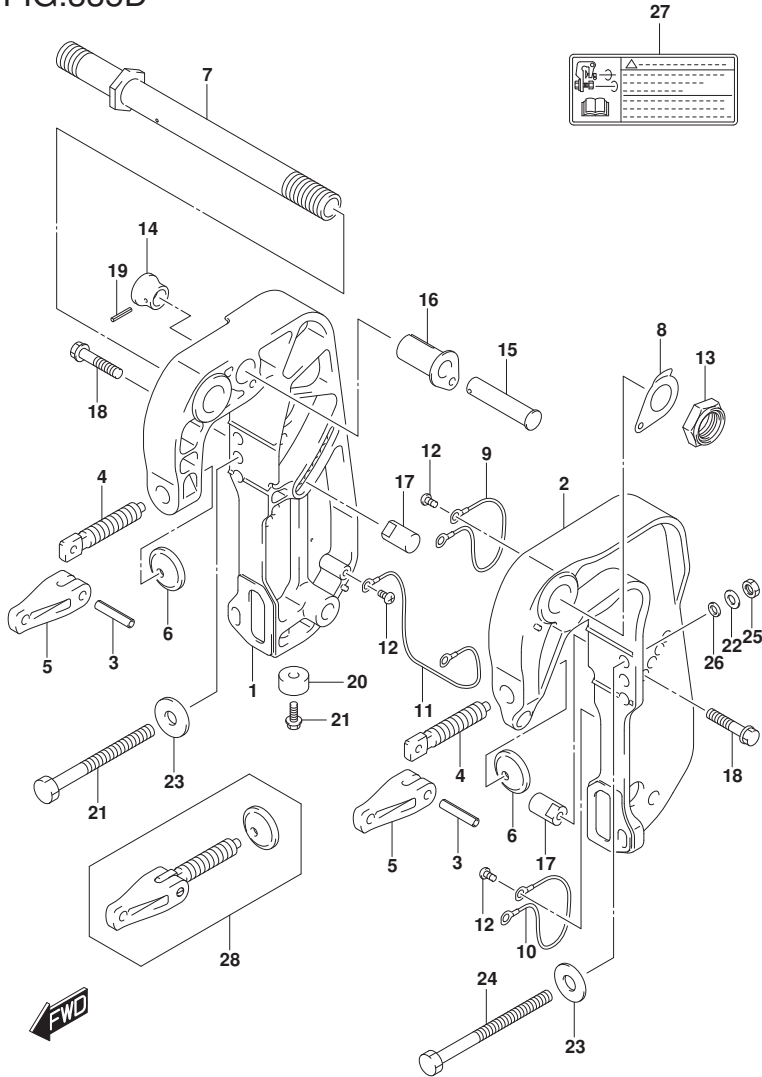


FIG.335D (1-F-9) CLAMP BRACKET (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-89LA0-YAY	BRACKET, CLAMP STBD (BLACK)	1	STBD
1-2	41111-89LA0-Y5S	BRACKET, CLAMP STBD (WHITE)	1	020 STBD
1-3	41111-89LA0-QTN	BRACKET, CLAMP STBD (WHITE)	1	021,022 STBD
2-1	41121-89LA0-YAY	BRACKET, CLAMP PORT (BLACK)	1	PORT
2-2	41121-89LA0-Y5S	BRACKET, CLAMP PORT (WHITE)	1	020 PORT
2-3	41121-89LA0-QTN	BRACKET, CLAMP PORT (WHITE)	1	021,022 PORT
3	09205-06021	PIN (6X25)	2	
4	41211-94L00	SCREW, CLAMP	2	
5	41212-91J00	HANDLE, CLAMP	2	
6	41213-94J01	PLATE, CLAMP	2	
7	41130-94JA1	SHAFT, CLAMP BRACKET	1	
8	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
9	36894-87D00	LEAD	1	
10	36894-87D00	LEAD	1	PORT
11	36895-87D01	LEAD	1	STBD
12	09125-06063	SCREW (6X10)	5	
13	09159-22006	NUT	1	
14	41221-94JA0	KNOB, TILT STOPPER	1	
15	41222-94JA0	PIN, TILT STOPPER	1	
16	41226-94JA0	BUSH, TILT STOPPER	1	
17	45421-94JA0	PIN, TILT LOCK	2	
18-1	09116-08128	BOLT (8X40)	2	020,021
18-2	09116-08178	BOLT (8X40)	2	022
19	09205-03004	SPRING PIN (3X20)	1	
20-1	55321-87J01	ANODE, PROTECTION	2	
20-2	55321-87J11	ANODE, PROTECTION	1	OPT
21	09103-06281	BOLT (6X14)	2	
22	29162-93J10	WASHER (8.2X15.4X2.0)	2	

NOTE : DF9.9BT,DF9.9BTH,DF15AT,DF20AT,DF20ATH

FIG.335D

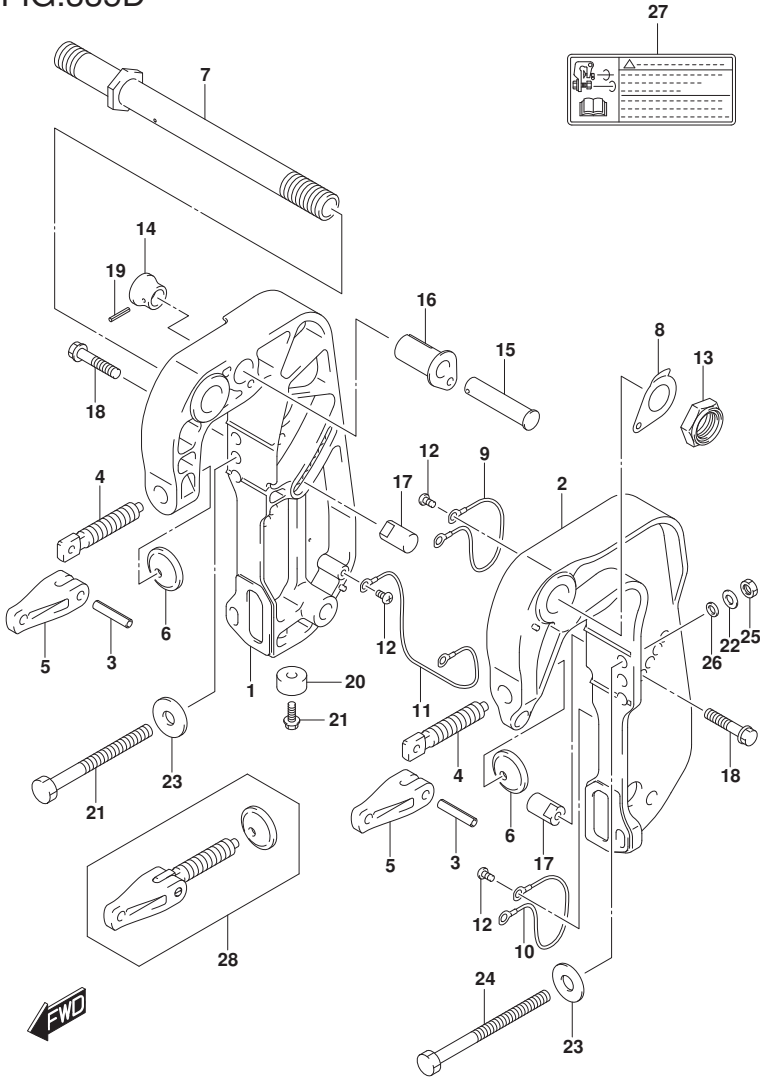


FIG.335D (1-F-10) CLAMP BRACKET (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
23	09160-08081	WASHER (8.5X23X1.5)	2	
24	09100-08311	BOLT (8X90)	2	
25-1	09140-08023-XC0	NUT	2	020,021
25-2	09140-08016	NUT	2	022
26	09160-08170	WASHER (8.5X16X2)	2	
27	69911-91J51	MARK, CLAMP BRACKET	1	
28	41210-89LA0	SCREW SET, CLAMP	1	OPT

NOTE : DF9.9BT,DF9.9BTH,DF15AT,DF20AT,DF20ATH

FIG.336A (1-F-11) SWIVEL BRACKET ((DF9.9B,DF15A,DF20A):P01)

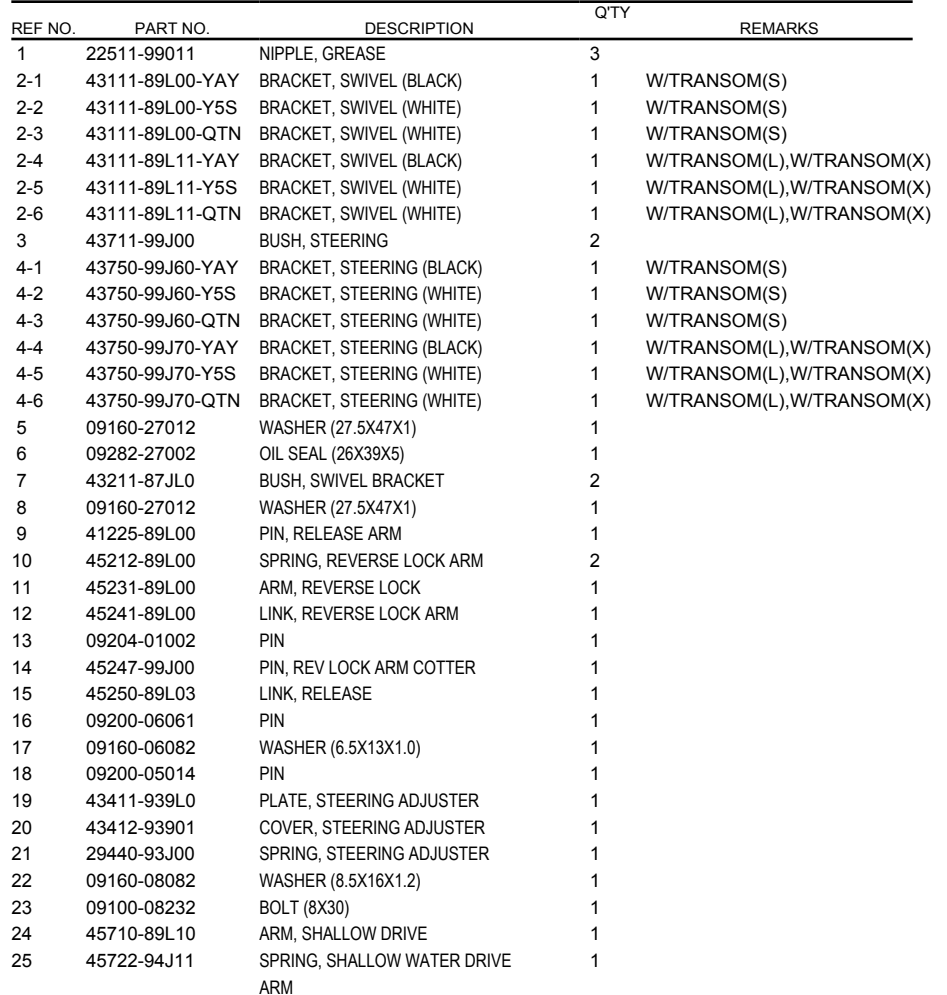


FIG.336A (1-F-12) SWIVEL BRACKET ((DF9.9B,DF15A,DF20A):P01)

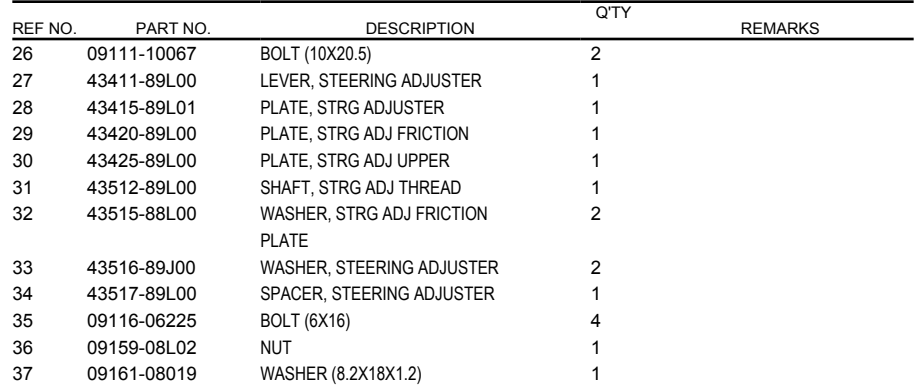


FIG.336B

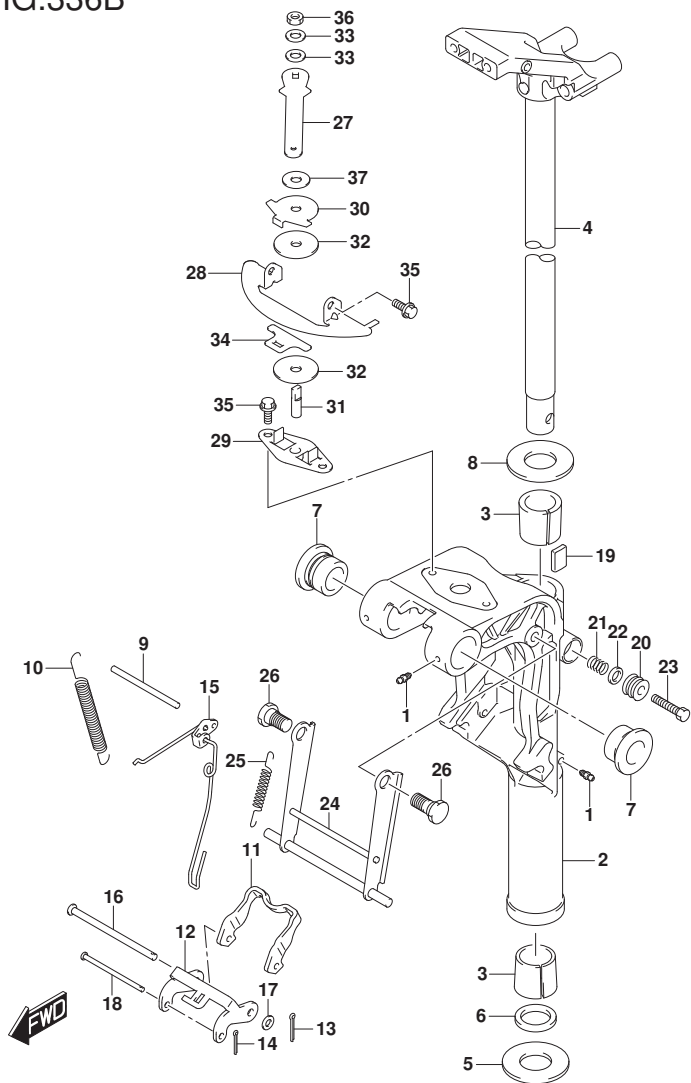


FIG.336B (1-F-13) SWIVEL BRACKET (DF20A:P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2-1	43111-89L00-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(S)
2-2	43111-89L11-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
3	43711-99J00	BUSH, STEERING	2	
4-1	43750-99J60-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(S)
4-2	43750-99J70-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	OIL SEAL (26X39X5)	1	
7	43211-87JL0	BUSH, SWIVEL BRACKET	2	
8	09160-27012	WASHER (27.5X47X1)	1	
9	41225-89L00	PIN, RELEASE ARM	1	
10	45212-89L00	SPRING, REVERSE LOCK ARM	2	
11	45231-89L00	ARM, REVERSE LOCK	1	
12	45241-89L00	LINK, REVERSE LOCK ARM	1	
13	09204-01002	PIN	1	
14	45247-99J00	PIN, REV LOCK ARM COTTER	1	
15	45250-89L03	LINK, RELEASE	1	
16	09200-06061	PIN	1	
17	09160-06082	WASHER (6.5X13X1.0)	1	
18	09200-05014	PIN	1	
19	43411-939L0	PLATE, STEERING ADJUSTER	1	
20	43412-93901	COVER, STEERING ADJUSTER	1	
21	29440-93J00	SPRING, STEERING ADJUSTER	1	
22	09160-08082	WASHER (8.5X16X1.2)	1	
23	09100-08232	BOLT (8X30)	1	
24	45710-89L10	ARM, SHALLOW DRIVE	1	
25	45722-94J11	SPRING, SHALLOW WATER DRIVE ARM	1	
26	09111-10067	BOLT (10X20.5)	2	
27	43411-89L00	LEVER, STEERING ADJUSTER	1	
28	43415-89L01	PLATE, STRG ADJUSTER	1	
29	43420-89L00	PLATE, STRG ADJ FRICTION	1	
30	43425-89L00	PLATE, STRG ADJ UPPER	1	
31	43512-89L00	SHAFT, STRG ADJ THREAD	1	
32	43515-88L00	WASHER, STRG ADJ FRICTION PLATE	2	

FIG.336B


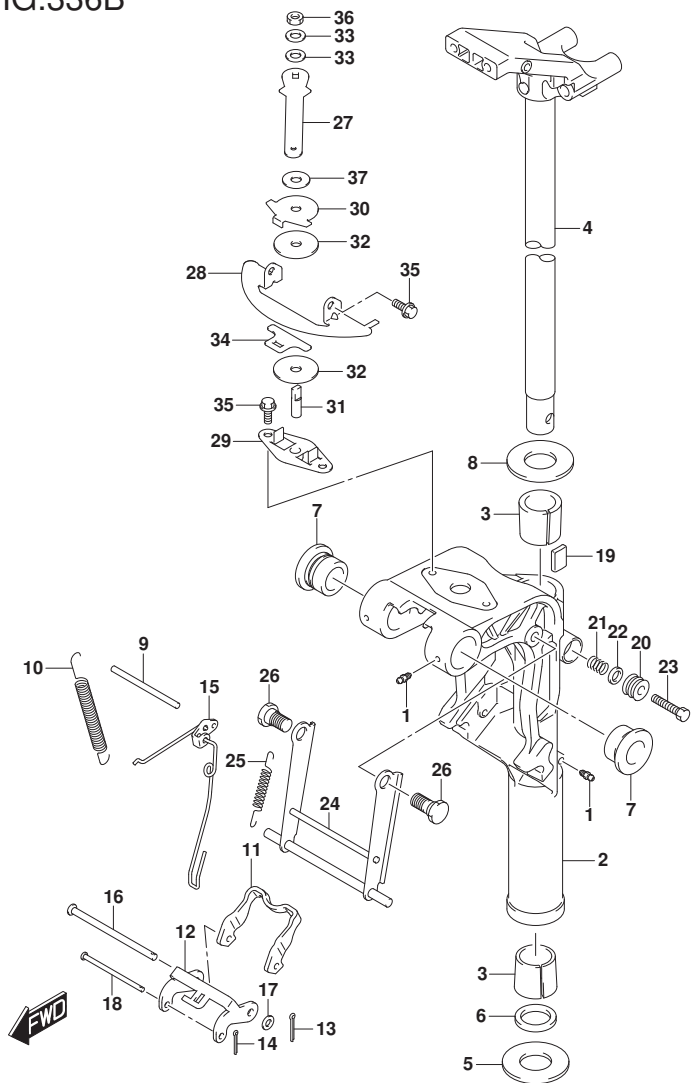


FIG.336B (1-F-14) SWIVEL BRACKET (DF20A:P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	43516-89J00	WASHER, STEERING ADJUSTER	2	
34	43517-89L00	SPACER, STEERING ADJUSTER	1	
35	09116-06225	BOLT (6X16)	4	
36	09159-08L02	NUT	1	
37	09161-08019	WASHER (8.2X18X1.2)	1	

FIG.336C

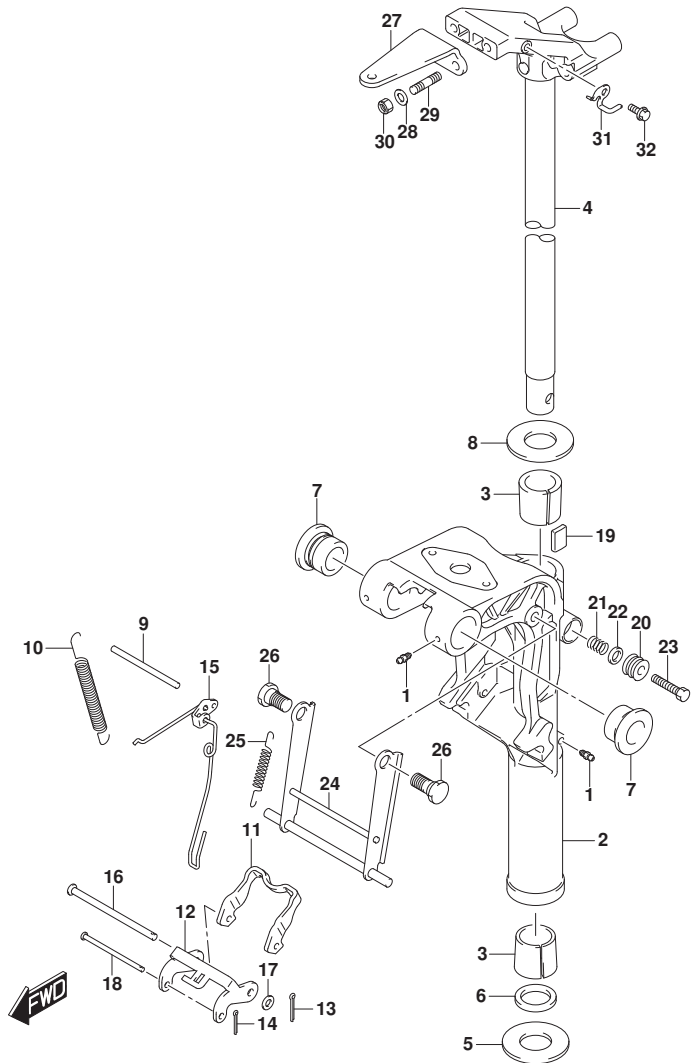

DF20A_P01_022_336C
SWIVEL BRACKET

FIG.336C (1-G-2) SWIVEL BRACKET (DF9.9BR,DF15AR,DF20AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2-1	43111-89L00-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(S)
2-2	43111-89L00-Y5S	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(S)
2-3	43111-89L11-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
2-4	43111-89L11-Y5S	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
3	43711-99J00	BUSH, STEERING	2	
4-1	43750-99J60-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(S)
4-2	43750-99J60-Y5S	BRACKET, STEERING (WHITE)	1	W/TRANSOM(S)
4-3	43750-99J70-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
4-4	43750-99J70-Y5S	BRACKET, STEERING (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	OIL SEAL (26X39X5)	1	
7	43211-87JL0	BUSH, SWIVEL BRACKET	2	
8	09160-27012	WASHER (27.5X47X1)	1	
9	41225-89L00	PIN, RELEASE ARM	1	
10	45212-89L00	SPRING, REVERSE LOCK ARM	2	
11	45231-89L00	ARM, REVERSE LOCK	1	
12	45241-89L00	LINK, REVERSE LOCK ARM	1	
13	09204-01002	PIN	1	
14	45247-99J00	PIN, REV LOCK ARM COTTER	1	
15	45250-89L03	LINK, RELEASE	1	
16	09200-06061	PIN	1	
17	09160-06082	WASHER (6.5X13X1.0)	1	
18	09200-05014	PIN	1	
19	43411-939L0	PLATE, STEERING ADJUSTER	1	
20	43412-93901	COVER, STEERING ADJUSTER	1	
21	29440-93J00	SPRING, STEERING ADJUSTER	1	
22	09160-08082	WASHER (8.5X16X1.2)	1	
23	09100-08232	BOLT (8X30)	1	
24	45710-89L10	ARM, SHALLOW DRIVE	1	
25	45722-94J11	SPRING, SHALLOW WATER DRIVE	1	
		ARM		
26	09111-10067	BOLT (10X20.5)	2	
27	43755-99J00	ATTACHMENT, STEERING BRACKET	1	
28	09160-08082	WASHER (8.5X16X1.2)	2	
29	09108-08286	STUD BOLT	2	

DF20A_P01_022

FIG.336C

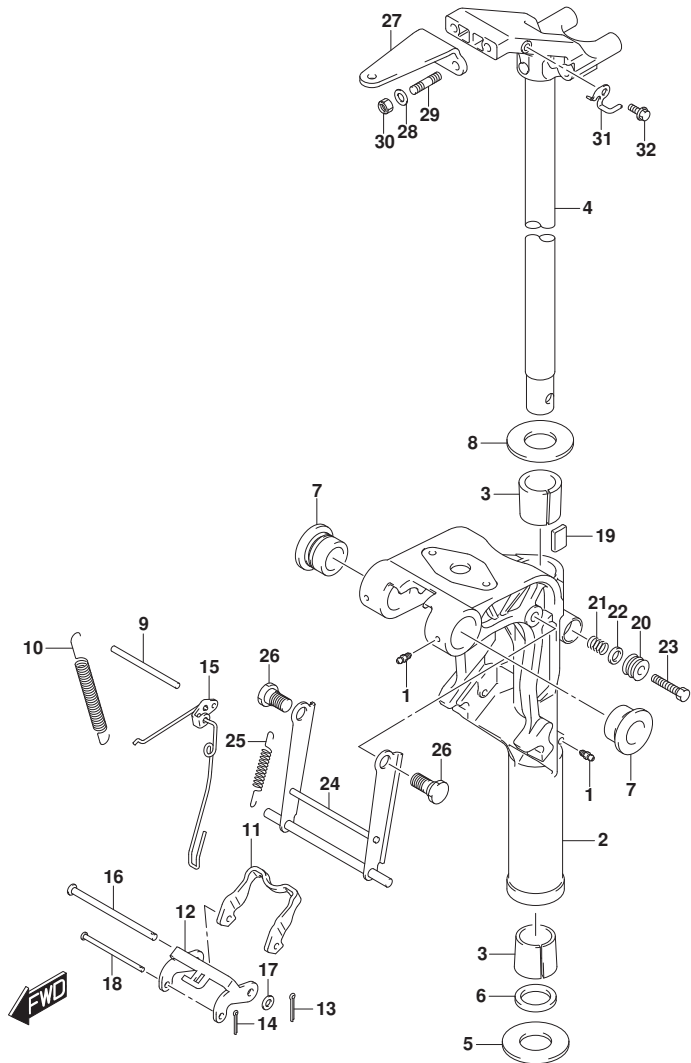


FIG.336C (1-G-3) SWIVEL BRACKET (DF9.9BR,DF15AR,DF20AR)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	09159-08059	NUT	2	
31	43759-89L00	HOLDER, DRAIN HOSE	1	
32	09116-06225	BOLT (6X16)	1	

FIG.336D

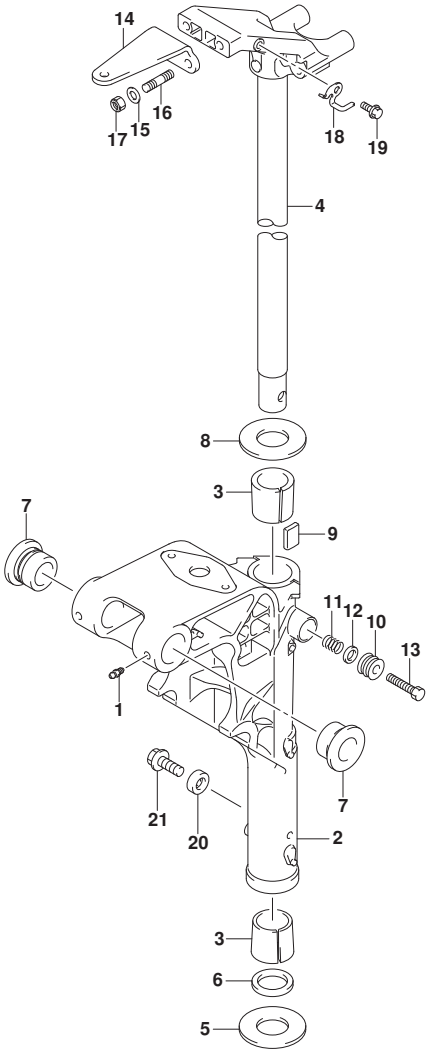


FIG.336D (1-G-4) SWIVEL BRACKET (DF9.9BT,DF15AT,DF20AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	22511-99011	NIPPLE, GREASE	3	W/TRANSOM(S)
1-2	22511-99011	NIPPLE, GREASE	4	W/TRANSOM(L),W/TRANSOM(X)
2-1	43111-89LB0-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(S)
2-2	43111-89LB0-Y5S	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(S)
2-3	43111-89LB0-QTN	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(S)
2-4	43111-89LA0-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
2-5	43111-89LA0-Y5S	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
2-6	43111-89LA0-QTN	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
3	43711-94JA0	BUSH, STEERING	2	
4-1	43750-99J60-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(S)
4-2	43750-99J60-Y5S	BRACKET, STEERING (WHITE)	1	W/TRANSOM(S)
4-3	43750-99J60-QTN	BRACKET, STEERING (WHITE)	1	W/TRANSOM(S)
4-4	43750-99J70-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
4-5	43750-99J70-Y5S	BRACKET, STEERING (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
4-6	43750-99J70-QTN	BRACKET, STEERING (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	OIL SEAL (26X39X5)	1	
7	43211-87JL0	BUSH, SWIVEL BRACKET	2	
8	09160-27012	WASHER (27.5X47X1)	1	
9	43411-939L0	PLATE, STEERING ADJUSTER	1	
10	43412-93901	COVER, STEERING ADJUSTER	1	
11	29440-93J00	SPRING, STEERING ADJUSTER	1	
12	09160-08082	WASHER (8.5X16X1.2)	1	
13	09100-08232	BOLT (8X30)	1	
14	43755-99J00	ATTACHMENT, STEERING BRACKET	1	
15	09160-08082	WASHER (8.5X16X1.2)	2	
16	09108-08286	STUD BOLT	2	
17	09159-08059	NUT	2	
18	43759-89L00	HOLDER, DRAIN HOSE	1	
19	09116-06225	BOLT (6X16)	1	
20-1	55321-87J01	ANODE, PROTECTION	1	W/TRANSOM(L),W/TRANSOM(X)
20-2	55321-87J11	ANODE	1	W/TRANSOM(L),W/TRANSOM(X)
				OPT
21	09103-06281	BOLT (6X14)	1	W/TRANSOM(L),W/TRANSOM(X)

FIG.336E

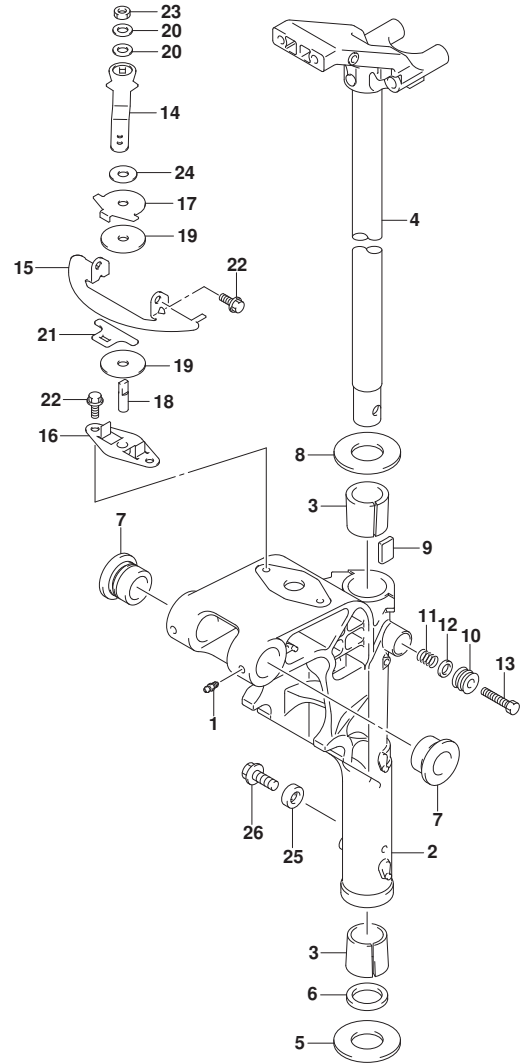


FIG.336E (1-G-5) SWIVEL BRACKET (DF9.9BTH,DF20ATH)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	22511-99011	NIPPLE, GREASE	3	W/TRANSOM(S)
1-2	22511-99011	NIPPLE, GREASE	4	W/TRANSOM(L),W/TRANSOM(X)
2-1	43111-89LB0-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(S)
2-2	43111-89LB0-Y5S	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(S)
2-3	43111-89LA0-YAY	BRACKET, SWIVEL (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
2-4	43111-89LA0-Y5S	BRACKET, SWIVEL (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
3	43711-94JA0	BUSH, STEERING	2	
4-1	43750-99J60-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(S)
4-2	43750-99J60-Y5S	BRACKET, STEERING (WHITE)	1	W/TRANSOM(S)
4-3	43750-99J70-YAY	BRACKET, STEERING (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
4-4	43750-99J70-Y5S	BRACKET, STEERING (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
5	09160-27012	WASHER (27.5X47X1)	1	
6	09282-27002	OIL SEAL (26X39X5)	1	
7	43211-87JL0	BUSH, SWIVEL BRACKET	2	
8	09160-27012	WASHER (27.5X47X1)	1	
9	43411-939L0	PLATE, STEERING ADJUSTER	1	
10	43412-93901	COVER, STEERING ADJUSTER	1	
11	29440-93J00	SPRING, STEERING ADJUSTER	1	
12	09160-08082	WASHER (8.5X16X1.2)	1	
13	09100-08232	BOLT (8X30)	1	
14	43411-89LA0	LEVER, STEERING ADJUSTER	1	
15	43415-89L01	PLATE, STRG ADJUSTER	1	
16	43420-89L00	PLATE, STRG ADJ FRICTION	1	
17	43425-89L00	PLATE, STRG ADJ UPPER	1	
18	43512-89L00	SHAFT, STRG ADJ THREAD	1	
19	43515-88L00	WASHER, STRG ADJ FRICTION	2	
20	43516-89J00	WASHER, STEERING ADJUSTER	2	
21	43517-89L00	SPACER, STEERING ADJUSTER	1	
22	09116-06225	BOLT (6X16)	4	
23	09159-08L02	NUT	1	
24	09161-08019	WASHER (8.2X18X1.2)	1	
25-1	55321-87J01	ANODE, PROTECTION	1	W/TRANSOM(L),W/TRANSOM(X)
25-2	55321-87J11	ANODE, PROTECTION	1	W/TRANSOM(L),W/TRANSOM(X)
26	09103-06281	BOLT (6X14)	1	OPT W/TRANSOM(L),W/TRANSOM(X)

FIG.338A (1-G-6) TILT CYLINDER (SEE NOTE)



NOTE : DF9.9BT,DF9.9BTH,DF15AT,DF20AT,DF20ATH

FIG.340A

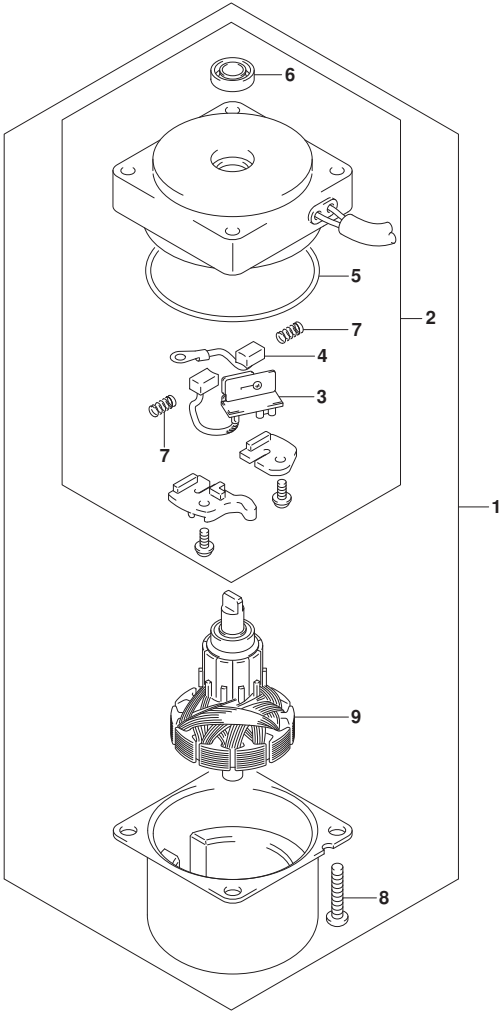


FIG.340A (1-G-7) PTT MOTOR (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38100-89LA3	MOTOR ASSY, PT	1	
2	31174-89LA1	.BRACKET	1	
3	31136-94J00	..BREAKER	1	
4	31133-94910	..BRUSH	1	
5	31123-94J01	..O RING	1	
6	33799-97E00	..OIL SEAL	1	
7	31135-94900	..SPRING	2	
8	09136-05041	.SCREW (5X20)	2	
9	31311-94J00	.ARMATURE	1	

NOTE : DF9.9BT,DF9.9BTH,DF15AT,DF20AT,DF20ATH



FIG.401A

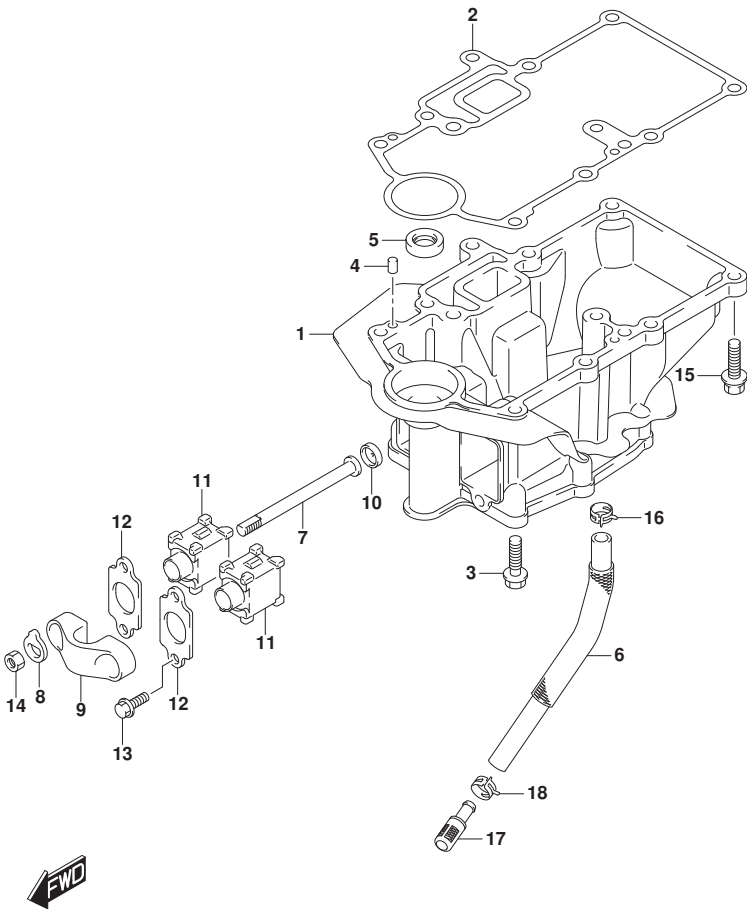


FIG.401A (1-G-8) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	51110-89L03	HOLDER, ENGINE	1	
2	51211-89L00	GASKET, ENGINE HOLDER	1	
3	09116-08151	BOLT (8X30)	3	
4	09202-06023	PIN (6X10)	2	
5	09282-12L04	OIL SEAL (12X25X7)	1	
6	16515-89L10	HOSE, OIL	1	
7	54112-99J01	BOLT, UPPER MOUNT	2	
8	54113-99JM0	WASHER, UPR MOUNT BOLT	2	
9	54127-89L00	MOUNT, UPPER SIDE	1	
10	54125-99J00	STOPPER, UPPER REVERSE THRUST	2	
11	54130-89L00	MOUNT, UPPER	2	
12	54137-89L00	COVER, UPPER MOUNT	2	
13-1	09116-08137	BOLT (8X22)	4	020
13-2	09116-08148	BOLT (8X22)	4	021,022
14	09140-10031	NUT (M10)	2	
15	01560-08307	BOLT	7	
16	09401-12413	CLIP	1	
17	16520-99J00	STRAINER, OIL	1	
18	09401-13424	CLIP	1	

FIG.405A

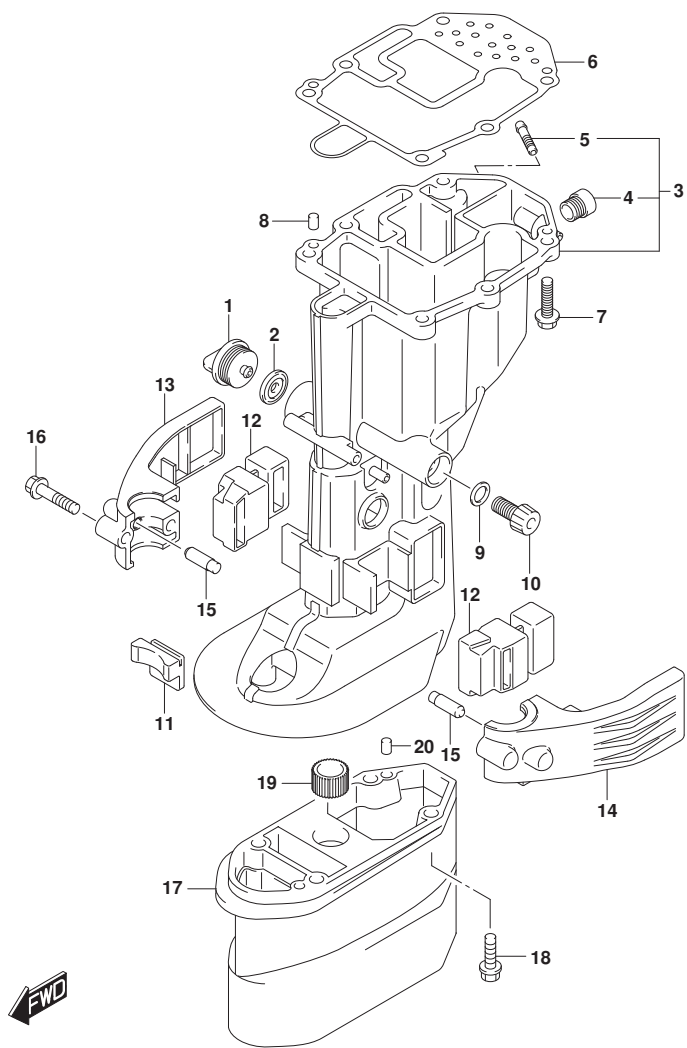


FIG.405A (1-G-9) DRIVE SHAFT HOUSING (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG, WATER	1	
2	17914-93J01	GASKET, WATER PLUG	1	
3-1	52110-89L40-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	W/TRANSOM(S)
3-2	52110-89L40-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	W/TRANSOM(S)
3-3	52110-89L40-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	W/TRANSOM(S)
3-4	52110-89L50-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
3-5	52110-89L50-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
3-6	52110-89L50-QTN	HOUSING, DRIVE SHAFT (WHITE)	1	W/TRANSOM(L),W/TRANSOM(X)
4	43112-94L01	.PIPE, EXHAUST	1	
5	61155-89L00	.TUBE, WATER INSPECTION	1	
6	52113-89L00	GASKET, DRIVE SHAFT HOUSING	1	
7	09116-08151	BOLT (8X30)	6	
8	09202-06023	PIN (6X10)	2	
9	09168-12017	GASKET (12X17X1)	1	
10	09248-12009	PLUG (12X18.65)	1	
11	54151-99J00	MOUNT, LOWER THRUST	1	
12	54167-99J01	MOUNT, LOWER SIDE	2	
13-1	54211-99J01-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	STBD
13-2	54211-99J01-Y5S	COVER, LOWER MOUNT STBD (WHITE)	1	STBD
13-3	54211-99J01-QTN	COVER, LOWER MOUNT STBD (WHITE)	1	STBD
14-1	54221-99J01-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	PORT
14-2	54221-99J01-Y5S	COVER, LOWER MOUNT PORT (WHITE)	1	PORT
14-3	54221-99J01-QTN	COVER, LOWER MOUNT PORT (WHITE)	1	PORT
15	54213-93901	PIN, LOWER MOUNT COVER KNOCK	2	
16	09116-08154	BOLT (8X40)	2	
17-1	52131-89L00-YAY	CASE, EXTENSION (BLACK)	1	W/TRANSOM(X)
17-2	52131-89L00-Y5S	CASE, EXTENSION (WHITE)	1	W/TRANSOM(X)
17-3	52131-89L00-QTN	CASE, EXTENSION (WHITE)	1	W/TRANSOM(X)
18	09116-08151	BOLT (8X30)	4	W/TRANSOM(X)
19	09320-13022	BUSH	1	W/TRANSOM(X)

FIG.405A

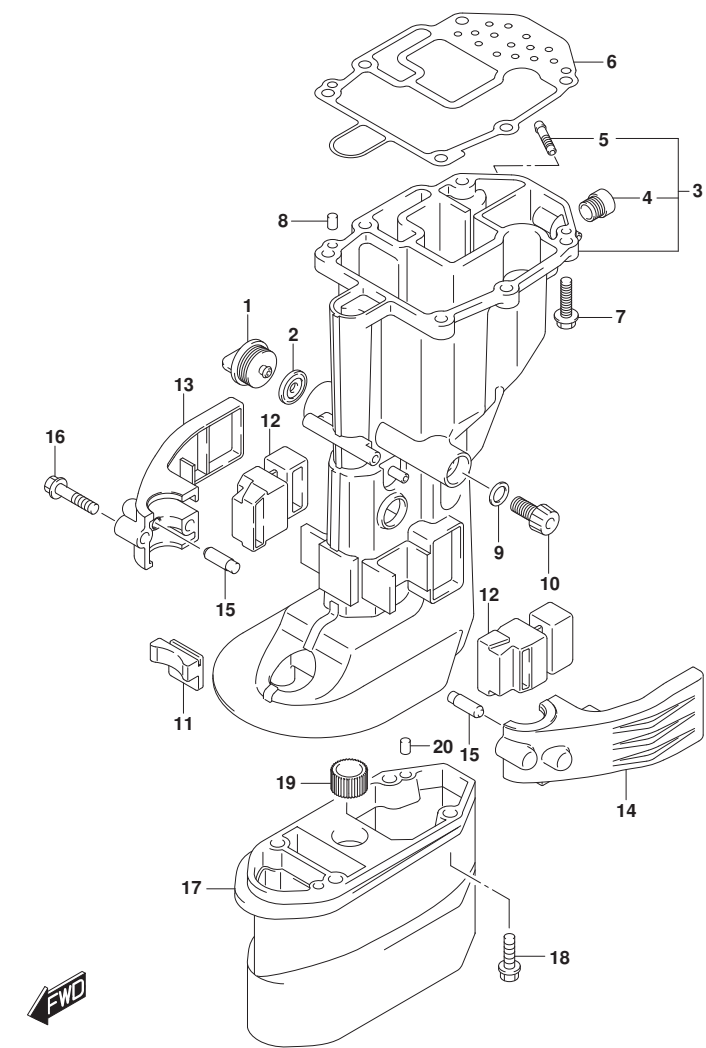


FIG.405A (1-G-10) DRIVE SHAFT HOUSING (P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	09202-06023	PIN (6X10)	2	W/TRANSOM(X)

FIG.405B

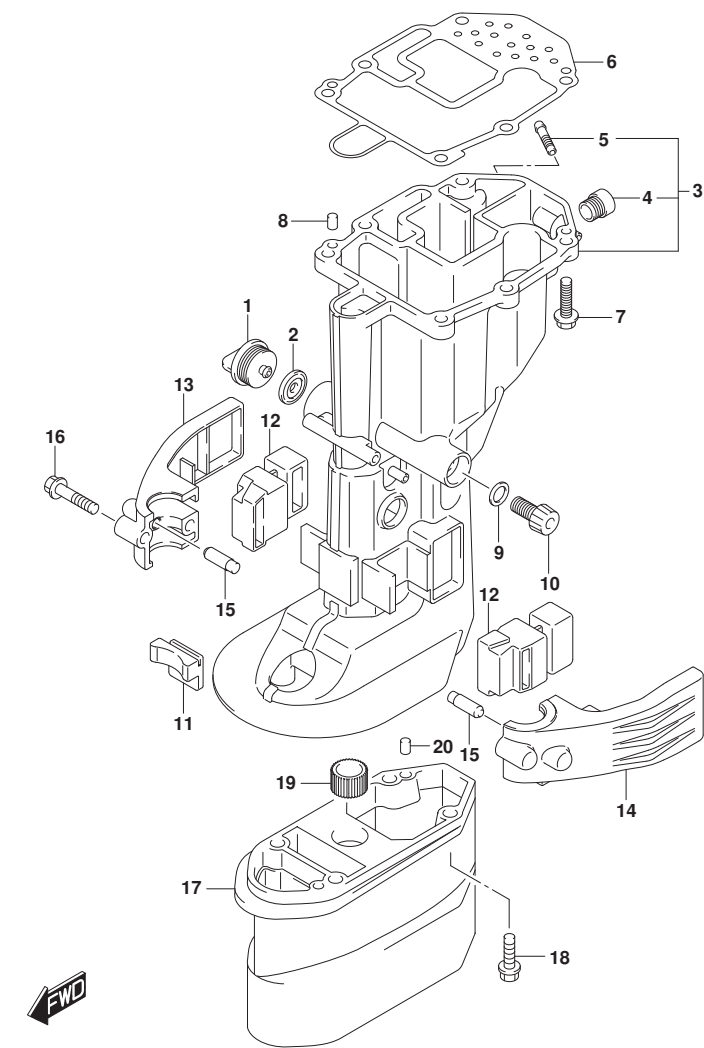


FIG.405B (1-G-11) DRIVE SHAFT HOUSING (P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG, WATER	1	
2	17914-93J01	GASKET, WATER PLUG	1	
3-1	52110-89L40-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	W/TRANSOM(S)
3-2	52110-89L50-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	W/TRANSOM(L),W/TRANSOM(X)
4	43112-94L01	.PIPE, EXHAUST	1	
5	61155-89L00	.TUBE, WATER INSPECTION	1	
6	52113-89L00	GASKET, DRIVE SHAFT HOUSING	1	
7	09116-08151	BOLT (8X30)	6	
8	09202-06023	PIN (6X10)	2	
9	09168-12017	GASKET (12X17X1)	1	
10	09248-12009	PLUG (12X18.65)	1	
11	54151-99J00	MOUNT, LOWER THRUST	1	
12	54167-99J01	MOUNT, LOWER SIDE	2	
13	54211-99J01-YAY	COVER, LOWER MOUNT STBD (BLACK)	1	STBD
14	54221-99J01-YAY	COVER, LOWER MOUNT PORT (BLACK)	1	PORT
15	54213-93901	PIN, LOWER MOUNT COVER KNOCK	2	
16	09116-08154	BOLT (8X40)	2	
17	52131-89L00-YAY	CASE, EXTENSION (BLACK)	1	W/TRANSOM(X)
18	09116-08151	BOLT (8X30)	4	W/TRANSOM(X)
19	09320-13022	BUSH	1	W/TRANSOM(X)
20	09202-06023	PIN (6X10)	2	W/TRANSOM(X)

FIG.407A

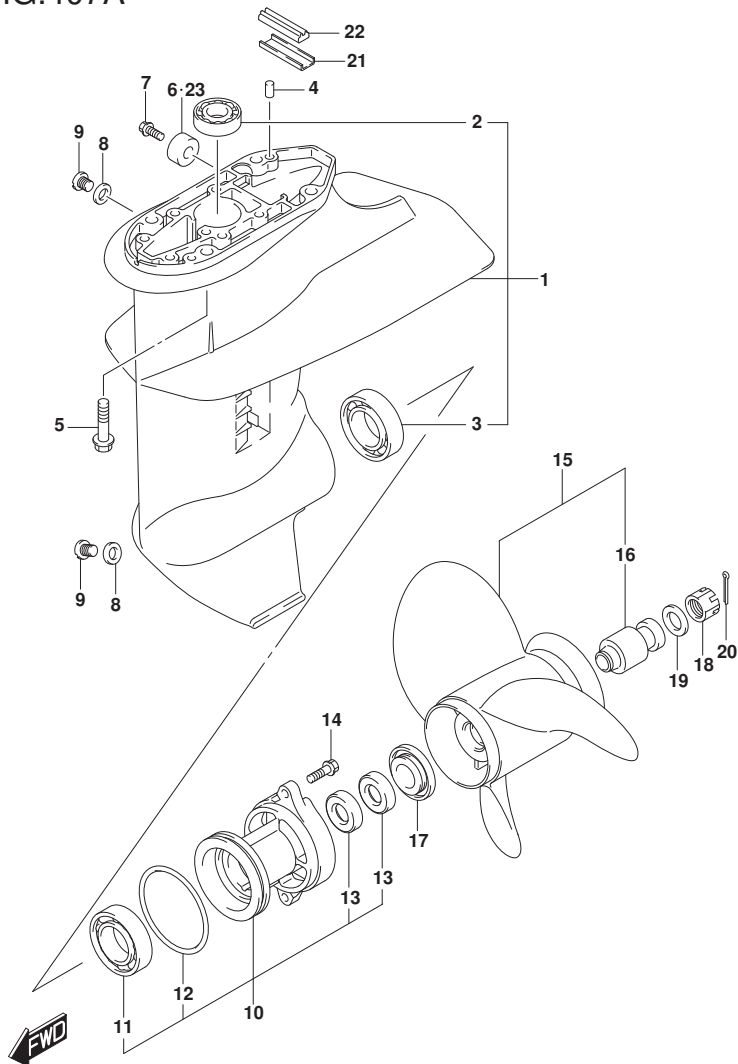


FIG.407A (1-G-12) GEAR CASE (P01:3 BLADE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-99J40-YAY	CASE ASSY, GEAR (BLACK)	1	
1-2	55100-99J40-Y5S	CASE ASSY, GEAR (WHITE)	1	
1-3	55100-99J40-QTN	CASE ASSY, GEAR (WHITE)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10-1	56120-99J41-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
10-2	56120-99J41-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	
10-3	56120-99J41-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15-1	58100-89L00-019	PROPELLER (3X9-1/4X7,M701) (BLACK)	1	
15-2	58100-89L20-019	PROPELLER (3X9-1/4X9,M930) (BLACK)	1	
15-3	58100-89L60-019	PROPELLER (3X9-1/4X10,M1001) (BLACK)	1	
15-4	58100-89L70-019	PROPELLER (3X9-1/4X11,M1101) (BLACK)	1	
15-5	58100-89L50-019	PROPELLER (3X9-1/4X12,M1201) (BLACK)	1	
15-6	58100-90L41-019	PROPELLER (3X9-1/4X8,M821) (BLACK)	1	
15-7	58100-90L50-019	PROPELLER (3X9-1/4X9,M911) (BLACK)	1	

FIG.407A

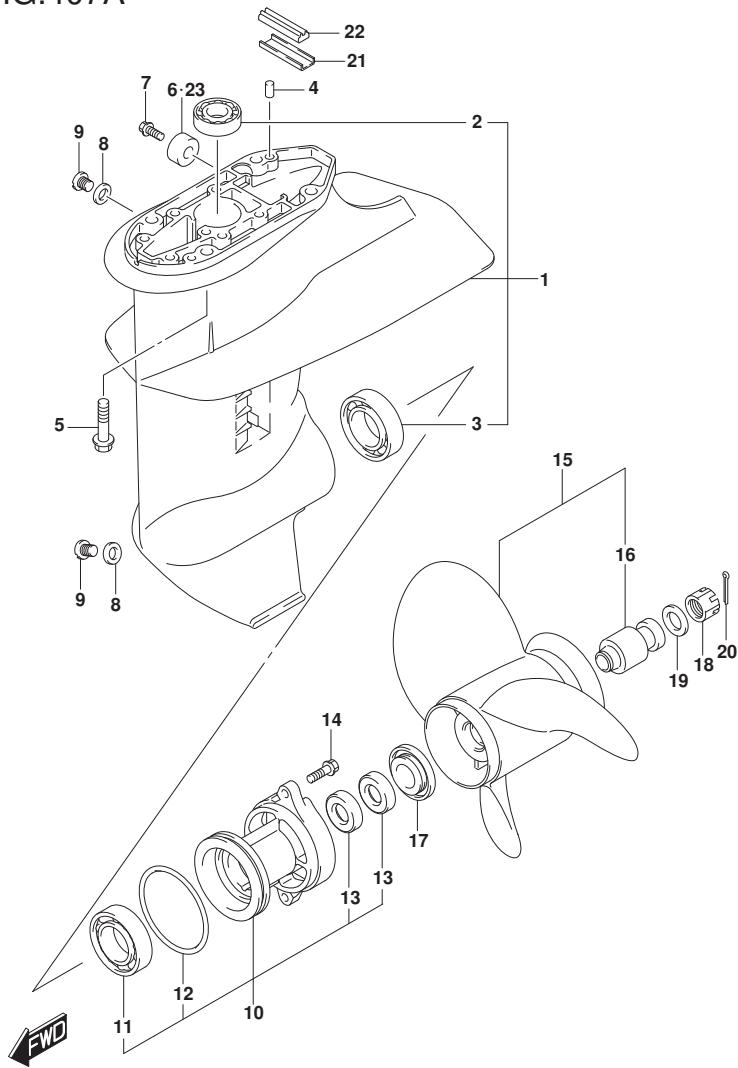


FIG.407A (1-G-13) GEAR CASE (P01:3 BLADE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-8	58100-90L60-019	PROPELLER (3X9-1/4X10,M1011) (BLACK)	1	
16	58120-89L00	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	
23	55321-87J11	ANODE	1	OPT

FIG.407B

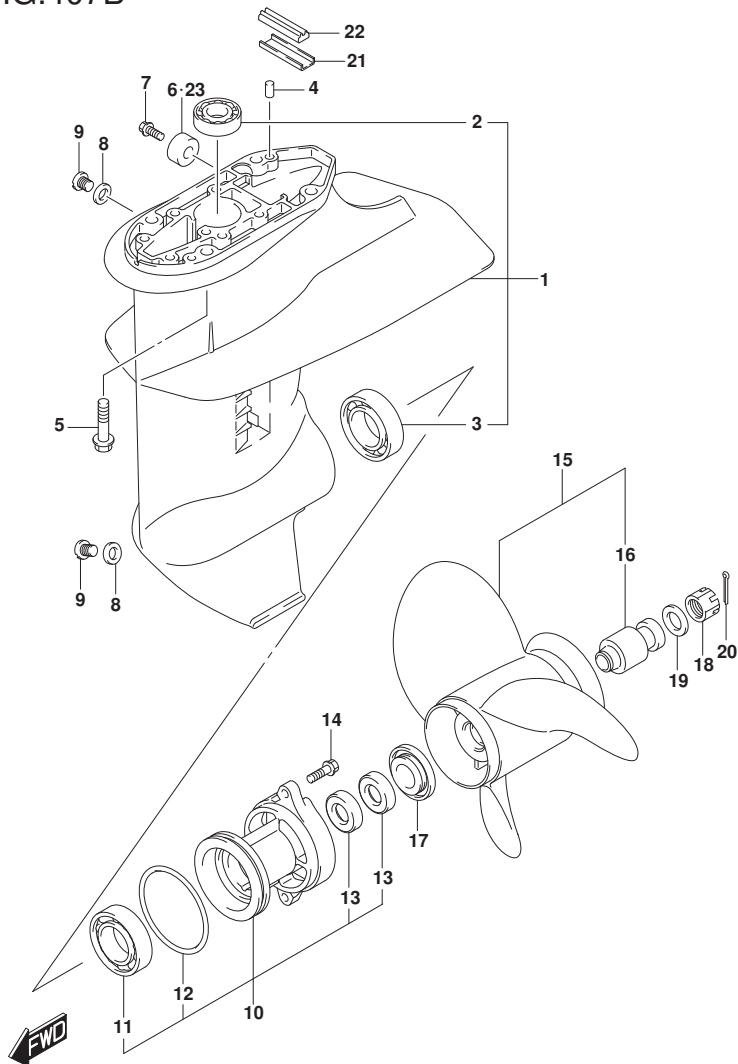


FIG.407B (1-G-14) GEAR CASE (P40:3 BLADE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-99J40-YAY	CASE ASSY, GEAR (BLACK)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10	56120-99J41-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15-1	58100-89L00-019	PROPELLER (3X9-1/4X7,M701) (BLACK)	1	
15-2	58100-89L20-019	PROPELLER (3X9-1/4X9,M930) (BLACK)	1	
15-3	58100-89L60-019	PROPELLER (3X9-1/4X10,M1001) (BLACK)	1	
15-4	58100-89L70-019	PROPELLER (3X9-1/4X11,M1101) (BLACK)	1	
15-5	58100-89L50-019	PROPELLER (3X9-1/4X12,M1201) (BLACK)	1	
15-6	58100-90L41-019	PROPELLER (3X9-1/4X8,M821) (BLACK)	1	
15-7	58100-90L50-019	PROPELLER (3X9-1/4X9,M911) (BLACK)	1	
15-8	58100-90L60-019	PROPELLER (3X9-1/4X10,M1011) (BLACK)	1	
16	58120-89L00	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	

FIG.407B


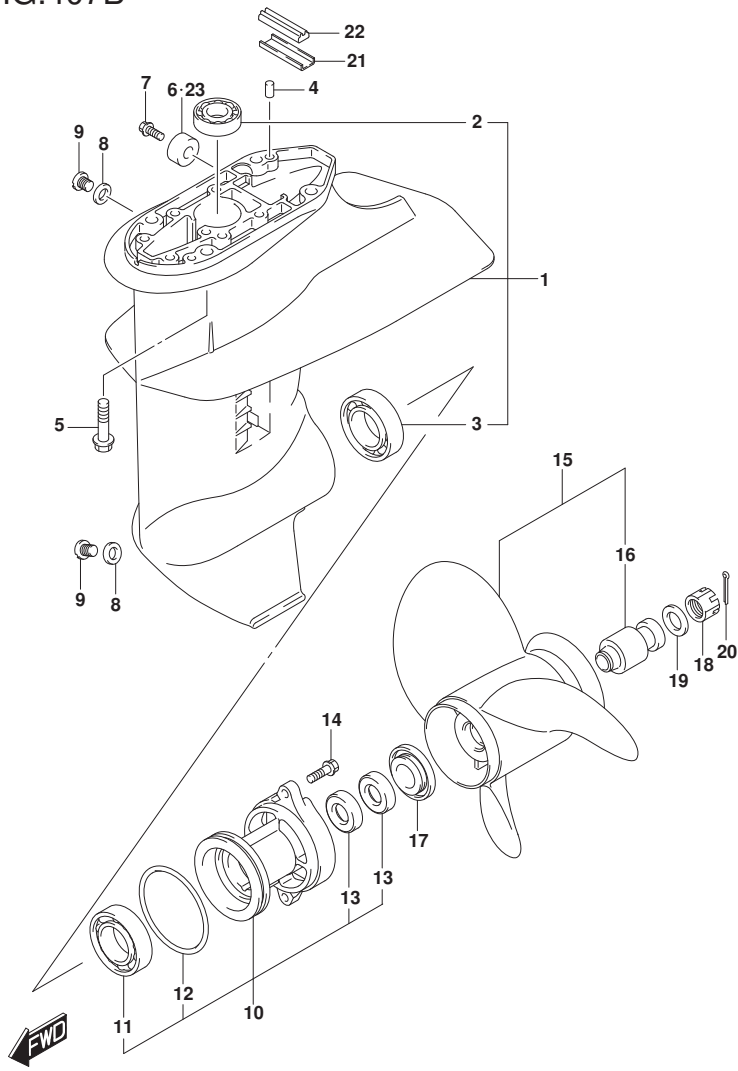


FIG.407B (1-G-15) GEAR CASE (P40:3 BLADE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	
23	55321-87J11	ANODE	1	OPT

FIG.407C

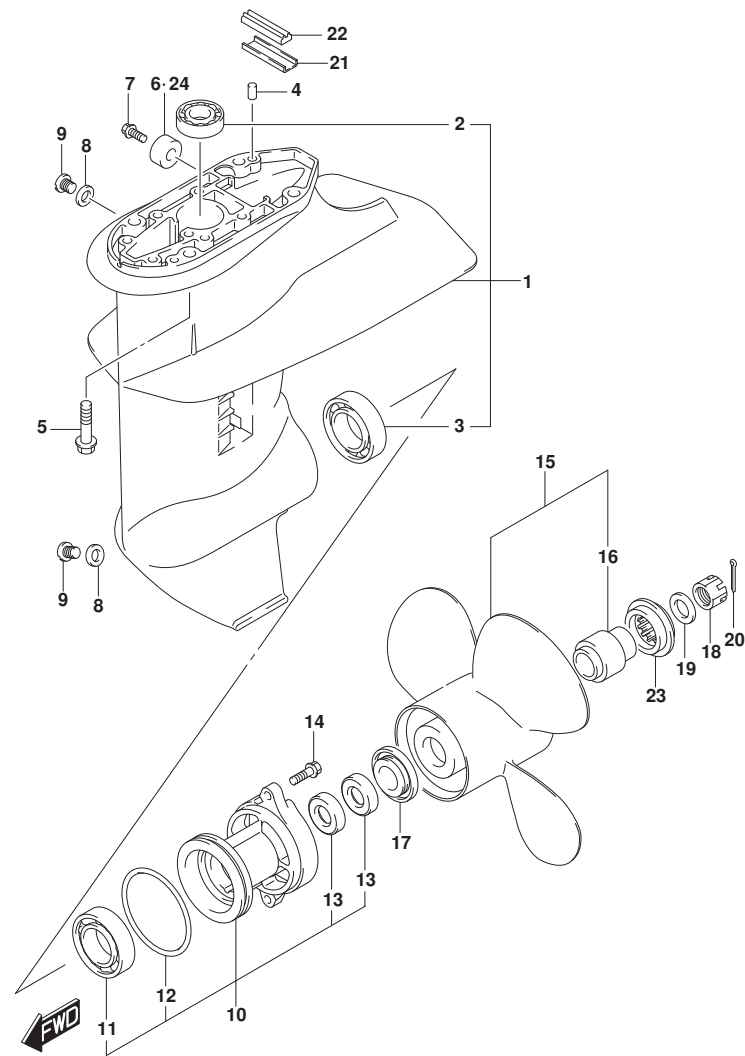


DF20A_P01_022_407C
GEAR CASE

FIG.407C (1-H-2) GEAR CASE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-99J40-YAY	CASE ASSY, GEAR (BLACK)	1	
1-2	55100-99J40-Y5S	CASE ASSY, GEAR (WHITE)	1	
1-3	55100-99J40-QTN	CASE ASSY, GEAR (WHITE)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10-1	56120-99J41-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
10-2	56120-99J41-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	
10-3	56120-99J41-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15	58100-94JB1-019	PROPELLER (4X10X7) (BLACK)	1	
16	58120-94JA1	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	
23	57633-93901	SPACER, PROPELLER NUT	1	
24	55321-87J11	ANODE	1	OPT

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR);4 BLADE

FIG.407D

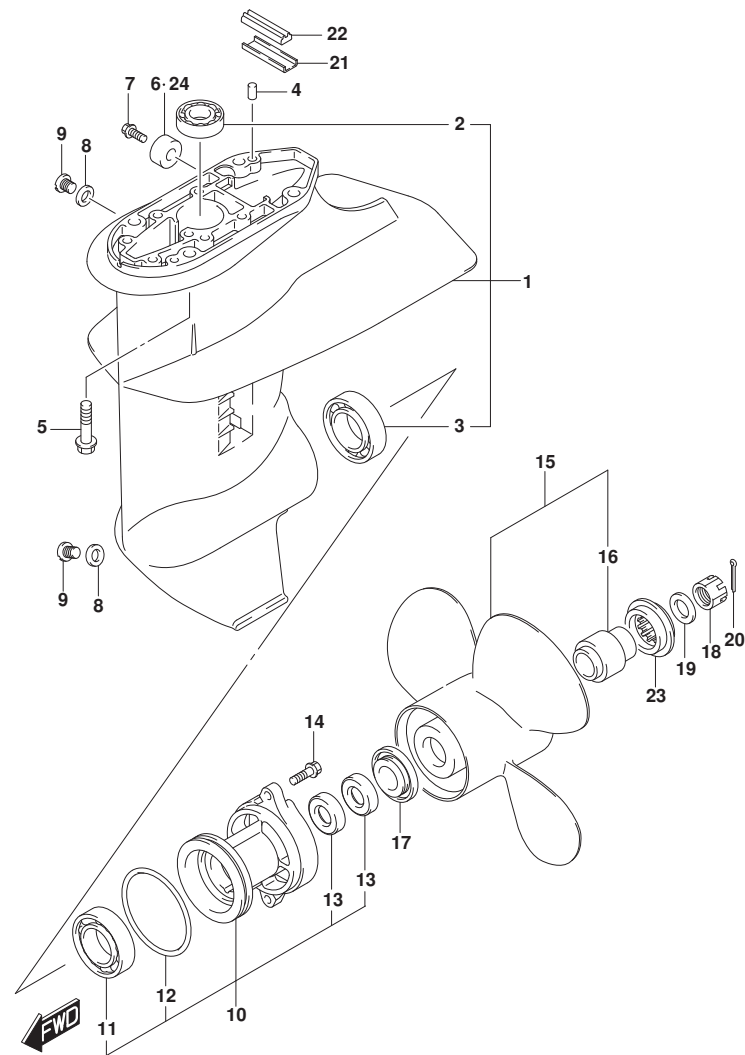


DF20A_P01_022_407D
GEAR CASE

FIG.407D (1-H-3) GEAR CASE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-99J40-YAY	CASE ASSY, GEAR (BLACK)	1	
1-2	55100-99J40-Y5S	CASE ASSY, GEAR (WHITE)	1	
1-3	55100-99J40-QTN	CASE ASSY, GEAR (WHITE)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10-1	56120-99J41-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
10-2	56120-99J41-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	
10-3	56120-99J41-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15	58100-94JB1-019	PROPELLER (4X10X7) (BLACK)	1	
16	58120-94JA1	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	
23	57633-93901	SPACER, PROPELLER NUT	1	
24	55321-87J11	ANODE	1	OPT

NOTE : (DF15AT,DF20AR,DF20AT,DF20ATH):4 BLADE

FIG.407E

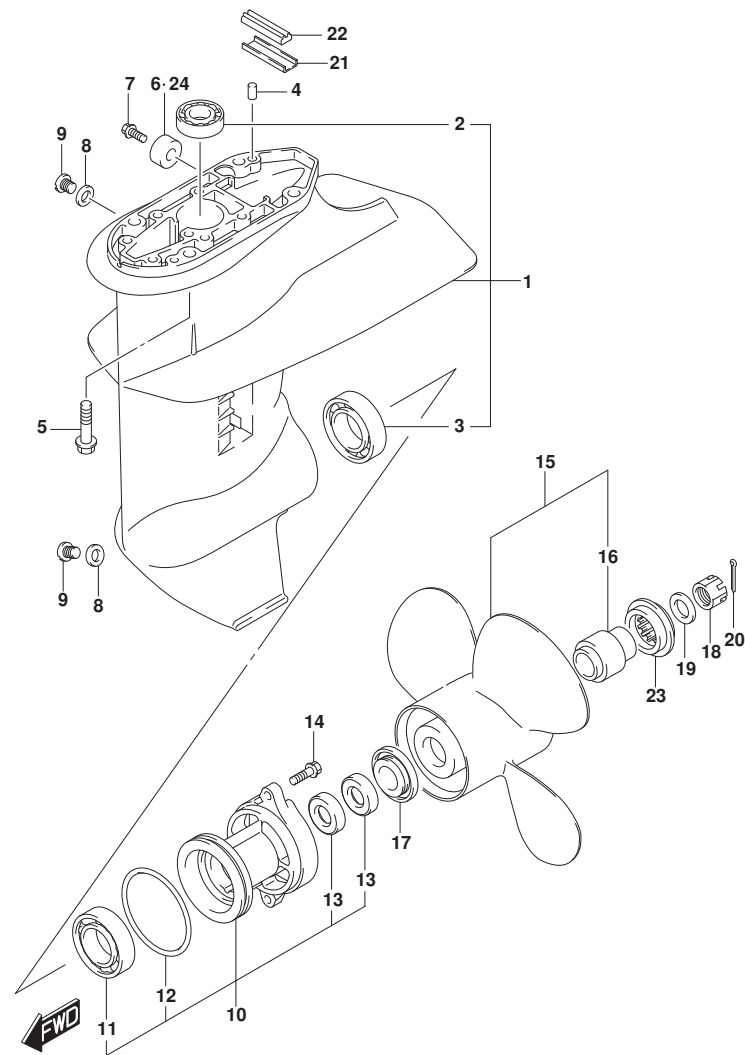

DF20A_P01_022_407E
GEAR CASE

FIG.407E (1-H-4) GEAR CASE (DF20A:P01:4 BLADE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-99J40-YAY	CASE ASSY, GEAR (BLACK)	1	
1-2	55100-99J40-Y5S	CASE ASSY, GEAR (WHITE)	1	
1-3	55100-99J40-QTN	CASE ASSY, GEAR (WHITE)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10-1	56120-99J41-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
10-2	56120-99J41-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	
10-3	56120-99J41-QTN	HOUSING, PROP SHAFT BRG (WHITE)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15	58100-94JB1-019	PROPELLER (4X10X7) (BLACK)	1	
16	58120-94JA1	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	
23	57633-93901	SPACER, PROPELLER NUT	1	
24	55321-87J11	ANODE	1	OPT

DF20A_P01_022

FIG.407F


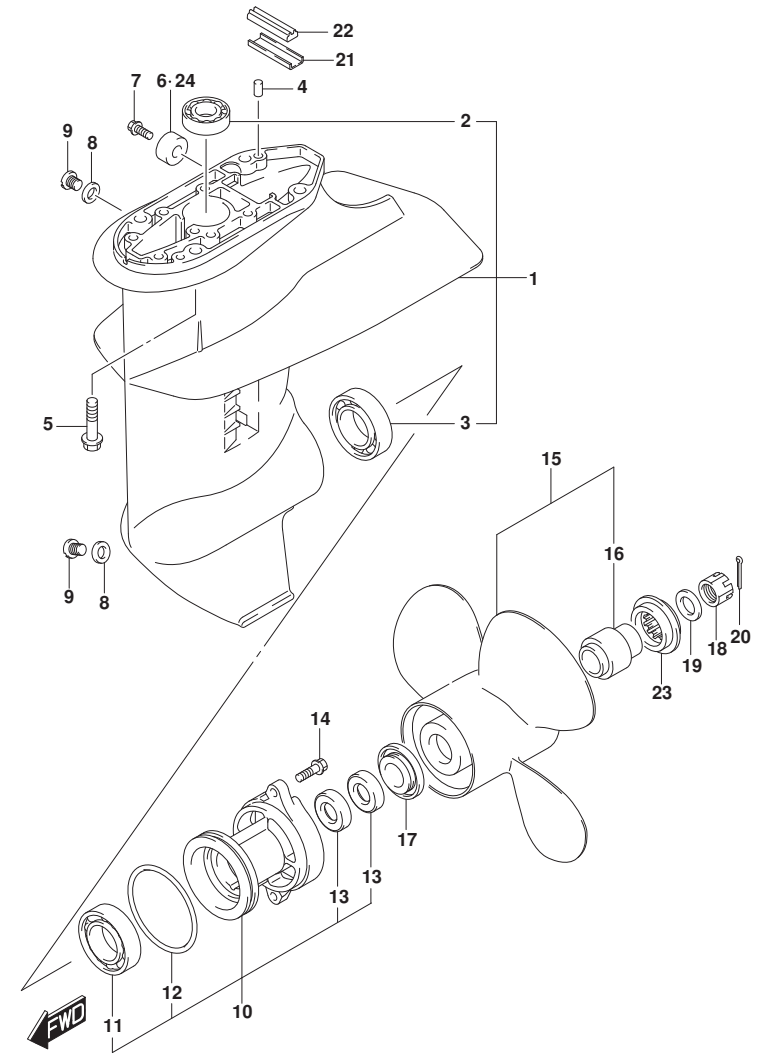


FIG.407F (1-H-5) GEAR CASE (DF20A:P40:4 BLADE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-99J40-YAY	CASE ASSY, GEAR (BLACK)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10	56120-99J41-YAY	HOUSING, PROP SHAFT BRG	1	
		(BLACK)		
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15	58100-94JB1-019	PROPELLER (4X10X7) (BLACK)	1	
16	58120-94JA1	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	
23	57633-93901	SPACER, PROPELLER NUT	1	
24	55321-87J11	ANODE	1	OPT

FIG.407G

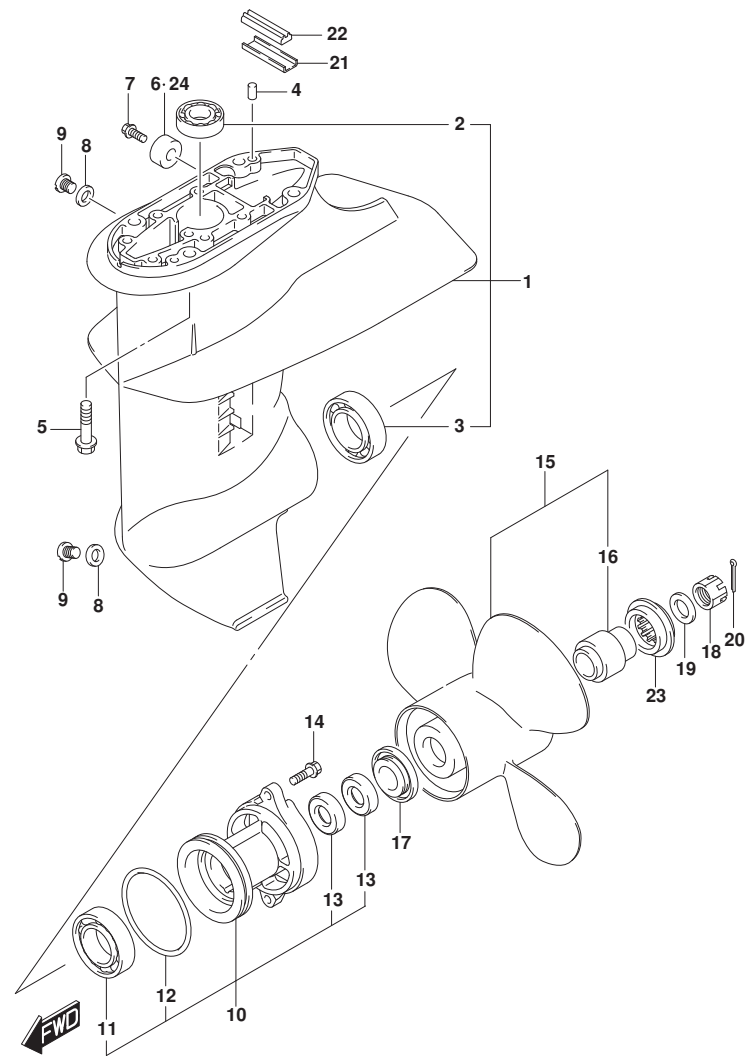

DF20A_P01_022_407G
GEAR CASE

FIG.407G (1-H-6) GEAR CASE (DF9.9BTH:4 BLADE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55100-99J40-YAY	CASE ASSY, GEAR (BLACK)	1	
1-2	55100-99J40-Y5S	CASE ASSY, GEAR (WHITE)	1	
2	09263-17048	.BEARING (17X24X27.5)	1	
3	09262-25003	.BEARING (25X52X15)	1	
4	09202-06023	PIN (6X10)	2	
5	09116-08151	BOLT (8X30)	4	
6	55321-87J01	ANODE, PROTECTION	1	
7	09103-06281	BOLT (6X14)	1	
8	59178-97J00	GASKET, DRAIN PLUG	2	
9	09248-08001	PLUG (8X7.5)	2	
10-1	56120-99J41-YAY	HOUSING, PROP SHAFT BRG (BLACK)	1	
10-2	56120-99J41-Y5S	HOUSING, PROP SHAFT BRG (WHITE)	1	
11	08110-60050	.BEARING	1	
12	09280-57002	.O RING (D:3.5,ID:65.2)	1	
13	09289-17L02	.OIL SEAL (17X30X6)	2	
14	09116-06227	BOLT (6X20)	2	
15-1	58100-94JA2-019	PROPELLER (4X10X5) (BLACK)	1	
15-2	58100-94JB1-019	PROPELLER (4X10X7) (BLACK)	1	
16	58120-94JA1	.BUSH, PROPELLER	1	
17	57632-94J00	STOPPER, PROPELLER BUSH	1	
18	09141-12005	NUT	1	
19	09160-12066	WASHER (12.5X22X2.5)	1	
20	09204-02004	PIN	1	
21	55331-99J10	CORE, EXHAUST SEAL	1	
22	55332-99J10	RUBBER, EXHAUST SEAL	1	
23	57633-93901	SPACER, PROPELLER NUT	1	
24	55321-87J11	ANODE	1	OPT

This exploded view diagram illustrates the assembly of a car bumper. The main components are the upper bumper cover (1) and the lower bumper cover (2). The assembly includes various mounting hardware such as screws (3, 7, 8, 11, 13, 15, 20, 22), bolts (4, 6, 9, 10, 12, 16), and pins (17, 18, 19). A rubber seal (5) is shown between the covers. A license plate bracket (13) is attached to the lower cover. A tow hook (17) is also shown. The diagram uses dashed lines to indicate the alignment and assembly sequence of the parts. A 'FWD' (Front View) arrow is located in the bottom left corner.

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61810-89L20-QGF	COVER, SIDE STBD (BLACK)	1	STBD
1-2	61810-89L20-Y5S	COVER, SIDE STBD (WHITE)	1	STBD
1-3	61810-89L20-QTN	COVER, SIDE STBD (WHITE)	1	STBD
2-1	61820-89L00-QGF	COVER, SIDE PORT (BLACK)	1	PORT
2-2	61820-89L00-Y5S	COVER, SIDE PORT (WHITE)	1	PORT
2-3	61820-89L00-QTN	COVER, SIDE PORT (WHITE)	1	PORT
3	09116-06523	BOLT (6X35)	8	
4	61112-89L10	RUBBER, SIDE COVER	1	
5	61134-89L00	SEAL, SIDE COVER	1	
6-1	61831-89L00-QGF	PANEL, FRONT (BLACK)	1	FOR YAY
6-2	61831-89L00-Y5S	PANEL, FRONT (WHITE)	1	FOR Y5S
6-3	61831-89L00-QTN	PANEL, FRONT (WHITE)	1	FOR QTN
7	09320-11017	CUSHION (11X20X13.5)	2	
8	09116-06522	BOLT (6X17)	2	
9	61412-89L00	HOOK, FR PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-89L40	GROMMET, CABLE	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	1	
15	61827-89L00	HOLDER, SIDE COVER	1	
16	02142-0616C	SCREW	1	
17	54144-89L11	SEAL, UPR MOUNT STBD	1	STBD
18	54145-89L01	SEAL, UPR MOUNT PORT	1	PORT
19	09251-09007	CUSHION	2	
20	09229-04005	RIVET	2	
21	09385-04003	CLIP	1	
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

FIG.410B

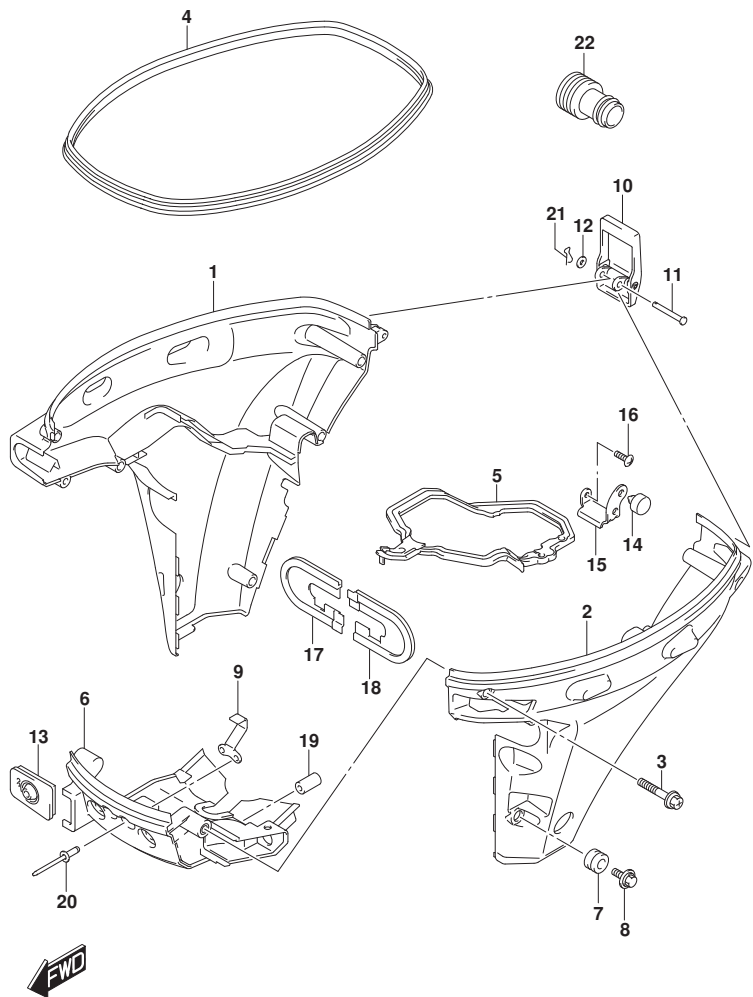


FIG.410B (1-H-8) SIDE COVER (DF20A:P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61810-89L20-QGF	COVER, SIDE STBD (BLACK)	1	STBD
2	61820-89L00-QGF	COVER, SIDE PORT (BLACK)	1	PORT
3	09116-06523	BOLT (6X35)	8	
4	61112-89L10	RUBBER, SIDE COVER	1	
5	61134-89L00	SEAL, SIDE COVER	1	
6	61831-89L00-QGF	PANEL, FRONT (BLACK)	1	
7	09320-11017	CUSHION (11X20X13.5)	2	
8	09116-06522	BOLT (6X17)	2	
9	61412-89L00	HOOK, FR PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-89L40	GROMMET, CABLE	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	1	
15	61827-89L00	HOLDER, SIDE COVER	1	
16	02142-0616C	SCREW	1	
17	54144-89L11	SEAL, UPR MOUNT STBD	1	STBD
18	54145-89L01	SEAL, UPR MOUNT PORT	1	PORT
19	09251-09007	CUSHION	2	
20	09229-04005	RIVET	2	
21	09385-04003	CLIP	1	
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

FIG.410C

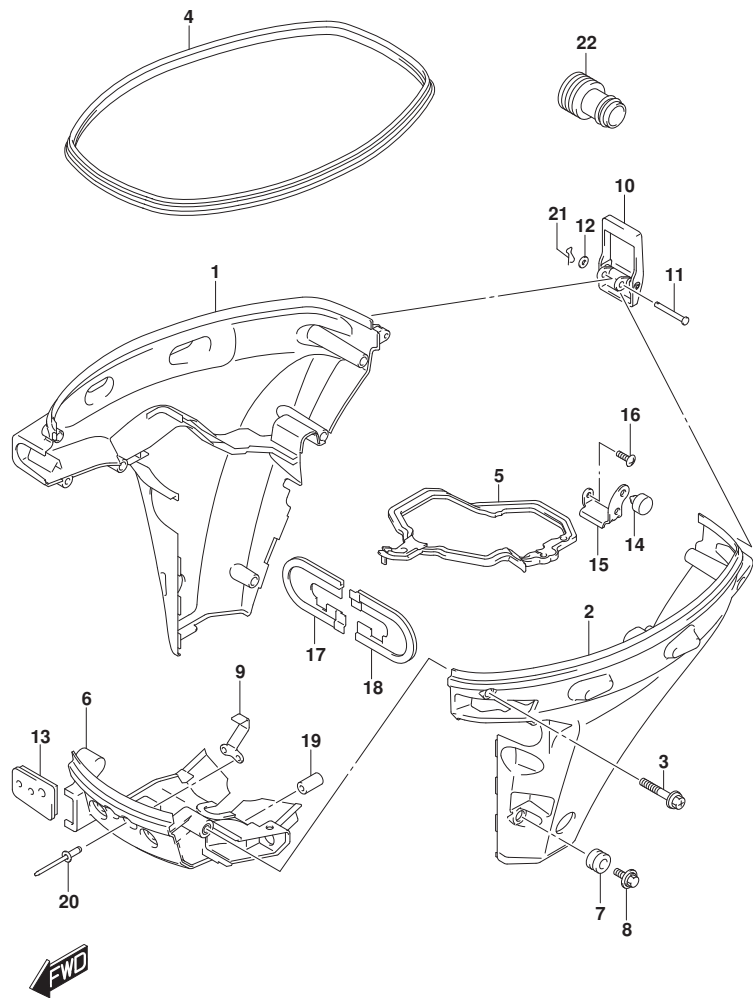


FIG.410C (1-H-9) SIDE COVER (DF9.9BR,DF15AR,DF20AR)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61810-89L20-QGF	COVER, SIDE STBD (BLACK)	1	STBD FOR YAY
1-2	61810-89L20-Y5S	COVER, SIDE STBD (WHITE)	1	STBD FOR Y5S
2-1	61820-89L00-QGF	COVER, SIDE PORT (BLACK)	1	PORT FOR YAY
2-2	61820-89L00-Y5S	COVER, SIDE PORT (WHITE)	1	PORT FOR Y5S
3	09116-06523	BOLT (6X35)	8	
4	61112-89L10	RUBBER, SIDE COVER	1	
5	61134-89L00	SEAL, SIDE COVER	1	
6-1	61831-89L00-QGF	PANEL, FRONT (BLACK)	1	FOR YAY
6-2	61831-89L00-Y5S	PANEL, FRONT (WHITE)	1	FOR Y5S
7	09320-11017	CUSHION (11X20X13.5)	2	
8	09116-06522	BOLT (6X17)	2	
9	61412-89L00	HOOK, FR PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-89L50	GROMMET, R/CON CABLE	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	1	
15	61827-89L00	HOLDER, SIDE COVER	1	
16	02142-0616C	SCREW	1	
17	54144-89L11	SEAL, UPR MOUNT STBD	1	STBD
18	54145-89L01	SEAL, UPR MOUNT PORT	1	PORT
19	09251-09007	CUSHION	2	
20	09229-04005	RIVET	2	
21	09385-04003	CLIP	1	
22	17917-87L00	CONNECTOR, FLUSH WATER	1	

FIG.410D

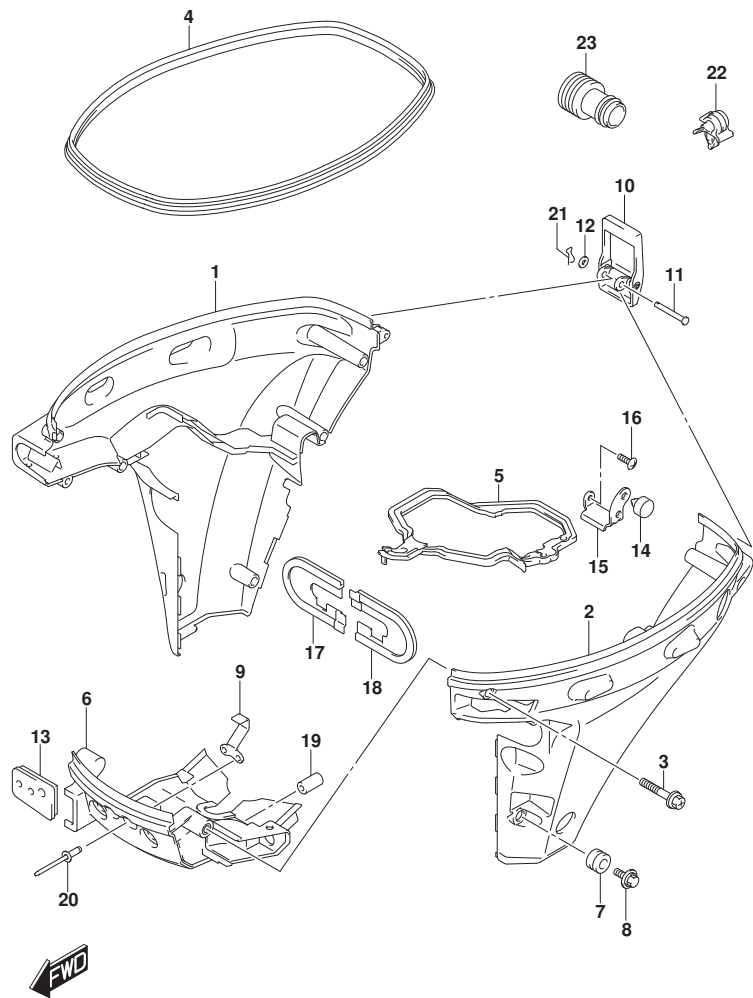


FIG.410D (1-H-10) SIDE COVER (DF9.9BT,DF15AT,DF20AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61810-89L30-QGF	COVER, SIDE STBD (BLACK)	1	STBD FOR YAY
1-2	61810-89L30-Y5S	COVER, SIDE STBD (WHITE)	1	STBD FOR Y5S
1-3	61810-89L30-QTN	COVER, SIDE STBD (WHITE)	1	STBD FOR QTN
2-1	61820-89L10-QGF	COVER, SIDE PORT (BLACK)	1	PORT FOR YAY
2-2	61820-89L10-Y5S	COVER, SIDE PORT (WHITE)	1	PORT FOR Y5S
2-3	61820-89L10-QTN	COVER, SIDE PORT (WHITE)	1	PORT FOR QTN
3	09116-06523	BOLT (6X35)	8	
4	61112-89L10	RUBBER, SIDE COVER	1	
5	61134-89L00	SEAL, SIDE COVER	1	
6-1	61831-89L00-QGF	PANEL, FRONT (BLACK)	1	FOR YAY
6-2	61831-89L00-Y5S	PANEL, FRONT (WHITE)	1	FOR Y5S
6-3	61831-89L00-QTN	PANEL, FRONT (WHITE)	1	FOR QTN
7	09320-11017	CUSHION (11X20X13.5)	2	
8	09116-06522	BOLT (6X17)	2	
9	61412-89L00	HOOK, FR PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-89L50	GROMMET, R/CON CABLE	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	1	
15	61827-89L00	HOLDER, SIDE COVER	1	
16	02142-0616C	SCREW	1	
17	54144-89L11	SEAL, UPR MOUNT STBD	1	STBD
18	54145-89L01	SEAL, UPR MOUNT PORT	1	PORT
19	09251-09007	CUSHION	2	
20	09229-04005	RIVET	2	
21	09385-04003	CLIP	1	
22	09403-07308	CLAMP	2	
23	17917-87L00	CONNECTOR, FLUSH WATER	1	

FIG.410E

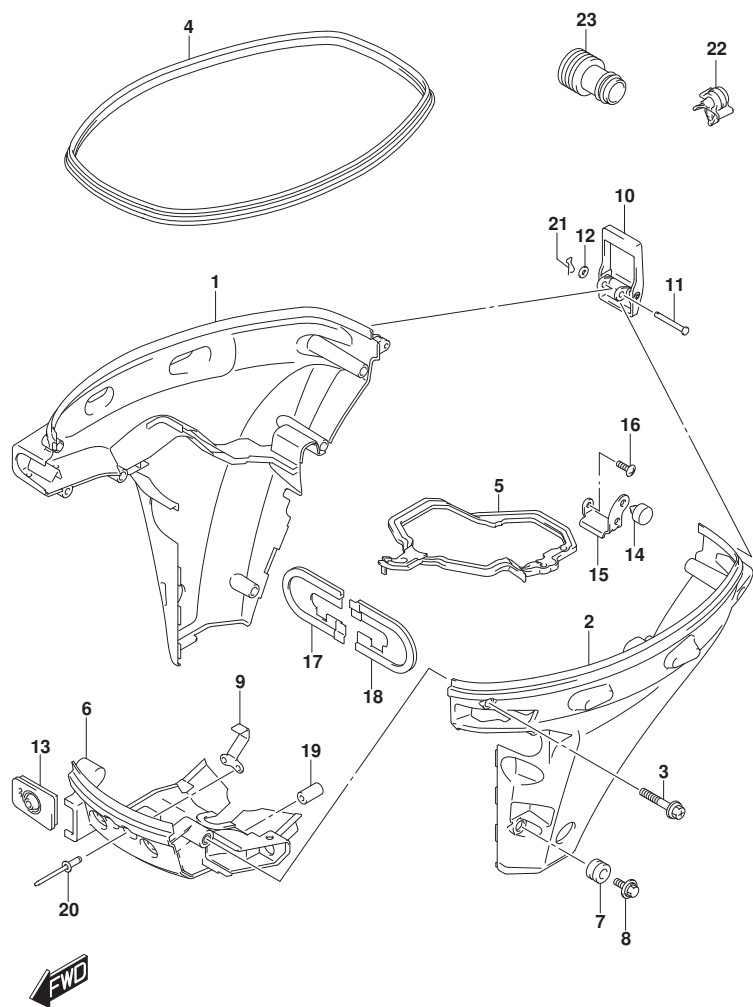


FIG.410E (1-H-11) SIDE COVER (DF9.9BTH,DF20ATH)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61810-89L30-QGF	COVER, SIDE STBD (BLACK)	1	STBD FOR YAY
1-2	61810-89L30-Y5S	COVER, SIDE STBD (WHITE)	1	STBD FOR Y5S
2-1	61820-89L00-QGF	COVER, SIDE PORT (BLACK)	1	PORT FOR YAY
2-2	61820-89L00-Y5S	COVER, SIDE PORT (WHITE)	1	PORT FOR Y5S
3	09116-06523	BOLT (6X35)	8	
4	61112-89L10	RUBBER, SIDE COVER	1	
5	61134-89L00	SEAL, SIDE COVER	1	
6-1	61831-89L00-QGF	PANEL, FRONT (BLACK)	1	FOR YAY
6-2	61831-89L00-Y5S	PANEL, FRONT (WHITE)	1	FOR Y5S
7	09320-11017	CUSHION (11X20X13.5)	2	
8	09116-06522	BOLT (6X17)	2	
9	61412-89L00	HOOK, FR PANEL	1	
10	61610-90L00	FASTENER	1	
11	61616-93EL0	PIN, LEVER	1	
12	09161-04012	WASHER (4.2X11X1)	1	
13	61124-89L40	GROMMET, CABLE	1	
14	61151-91J11	CUSHION, LOWER COVER HOLDER	1	
15	61827-89L00	HOLDER, SIDE COVER	1	
16	02142-0616C	SCREW	1	
17	54144-89L11	SEAL, UPR MOUNT STBD	1	STBD
18	54145-89L01	SEAL, UPR MOUNT PORT	1	PORT
19	09251-09007	CUSHION	2	
20	09229-04005	RIVET	2	
21	09385-04003	CLIP	1	
22	09403-07308	CLAMP	2	
23	17917-87L00	CONNECTOR, FLUSH WATER	1	

FIG.420A

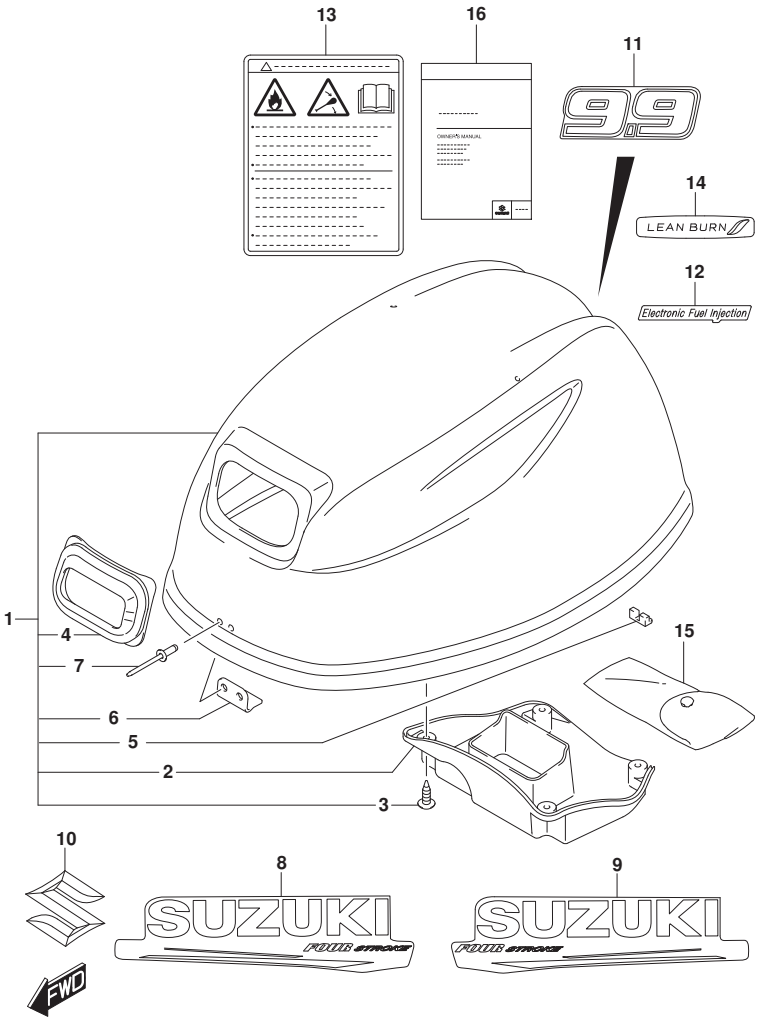


FIG.420A (1-H-12) ENGINE COVER ((DF9.9B,DF9.9BR):020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-97L01-YAY	STRIPE, ENG COVER STBD (BLACK)	1	STBD
8-2	61443-97L01-Y5S	STRIPE, ENG COVER STBD (WHITE)	1	STBD
9-1	61453-97L01-YAY	STRIPE, ENG COVER PORT (BLACK)	1	PORT
9-2	61453-97L01-Y5S	STRIPE, ENG COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L10-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L10-Y5S	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA0-055	MANUAL, OWNER'S	1	

FIG.420B

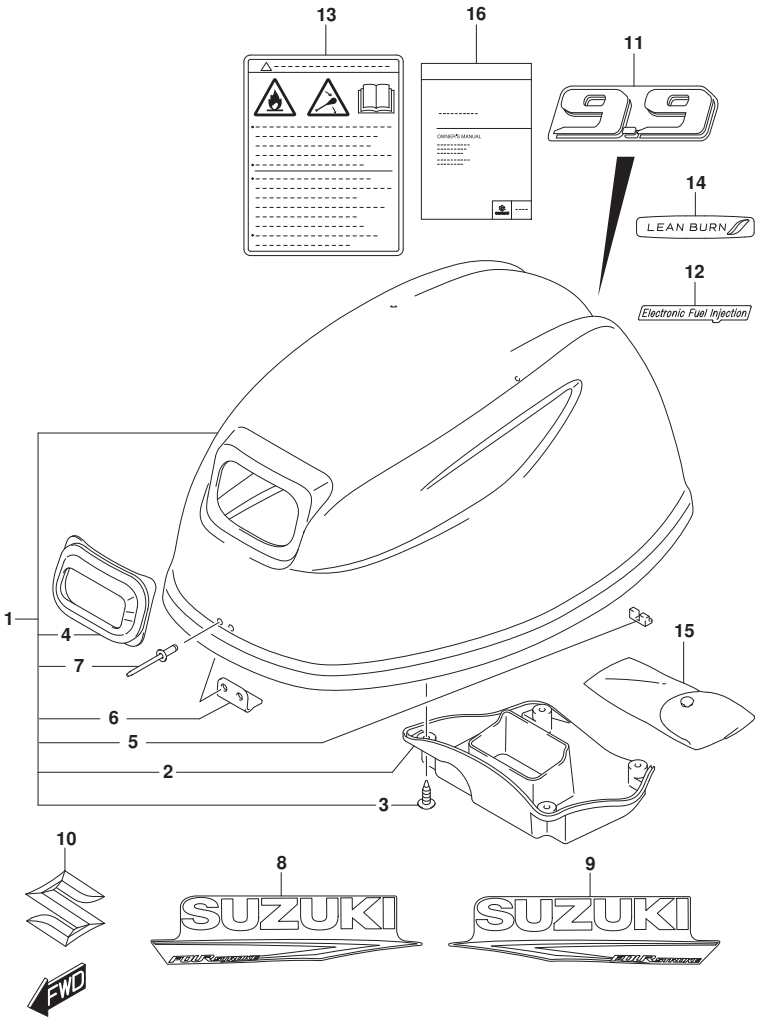


FIG.420B (1-H-13) ENGINE COVER ((DF9.9B,DF9.9BR):021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L40-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L40-QTN	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-QTN	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA1-055	MANUAL, OWNER'S	1	

FIG.420C

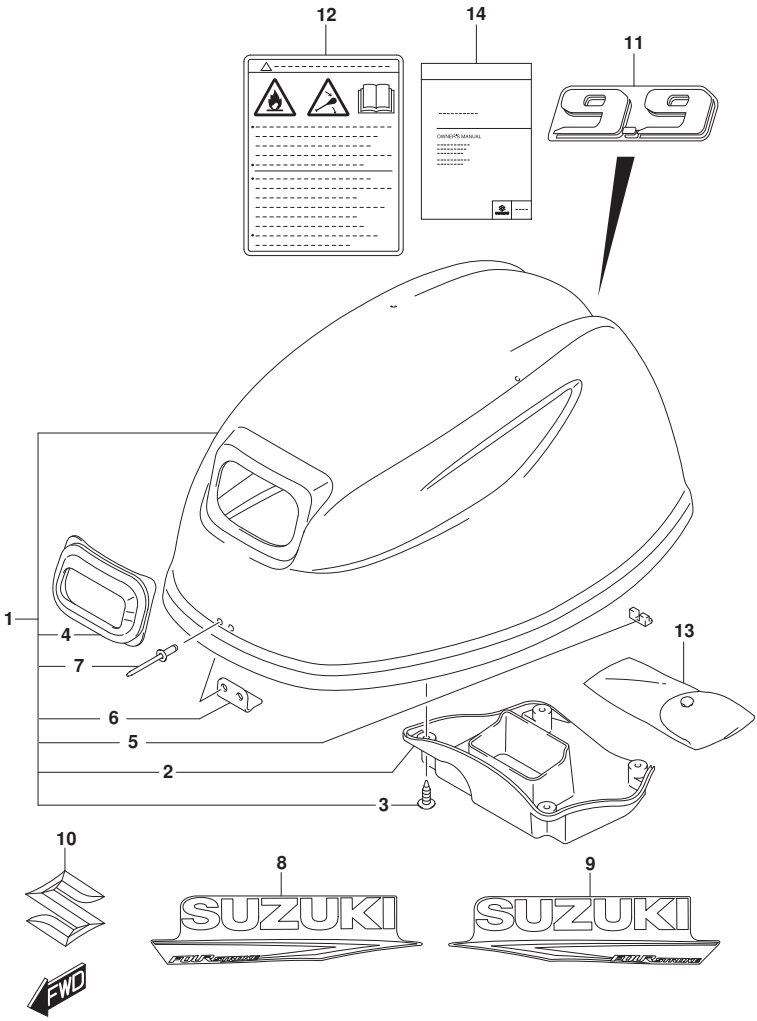


FIG.420C (1-H-14) ENGINE COVER ((DF9.9B,DF9.9BR):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L40-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L40-QTN	MARK, EMBLEM REAR (WHITE)	1	
12	61458-89L30	LABEL, ENGINE COVER	1	
13	59800-89L10	TOOL ASSY	1	
14	99011-89LC0-055	MANUAL, OWNER'S	1	

FIG.420D

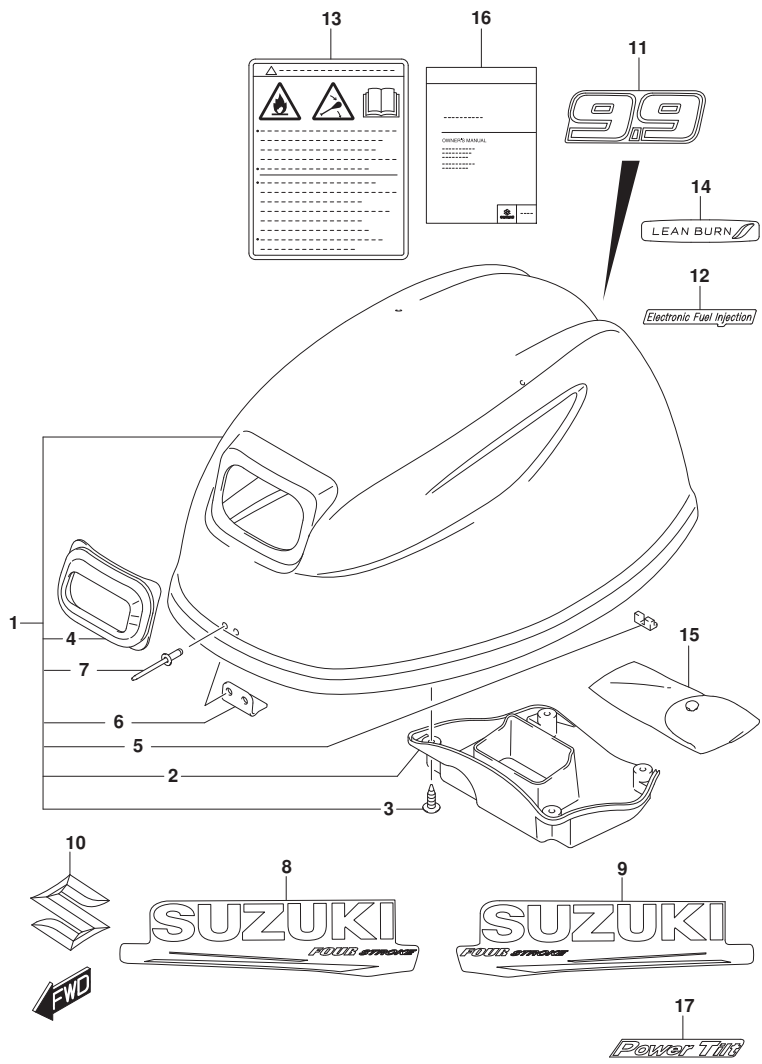


FIG.420D (1-1-2) ENGINE COVER ((DF9.9BT,DF9.9BTH):020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-97L01-YAY	STRIPE, ENG COVER STBD (BLACK)	1	STBD
8-2	61443-97L01-Y5S	STRIPE, ENG COVER STBD (WHITE)	1	STBD
9-1	61453-97L01-YAY	STRIPE, ENG COVER PORT (BLACK)	1	PORT
9-2	61453-97L01-Y5S	STRIPE, ENG COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L10-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L10-Y5S	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA0-055	MANUAL, OWNER'S	1	
17-1	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	
17-2	61447-89L00-Y5S	MARK, EMBLEM POWER TILT (WHITE)	1	

FIG.420E

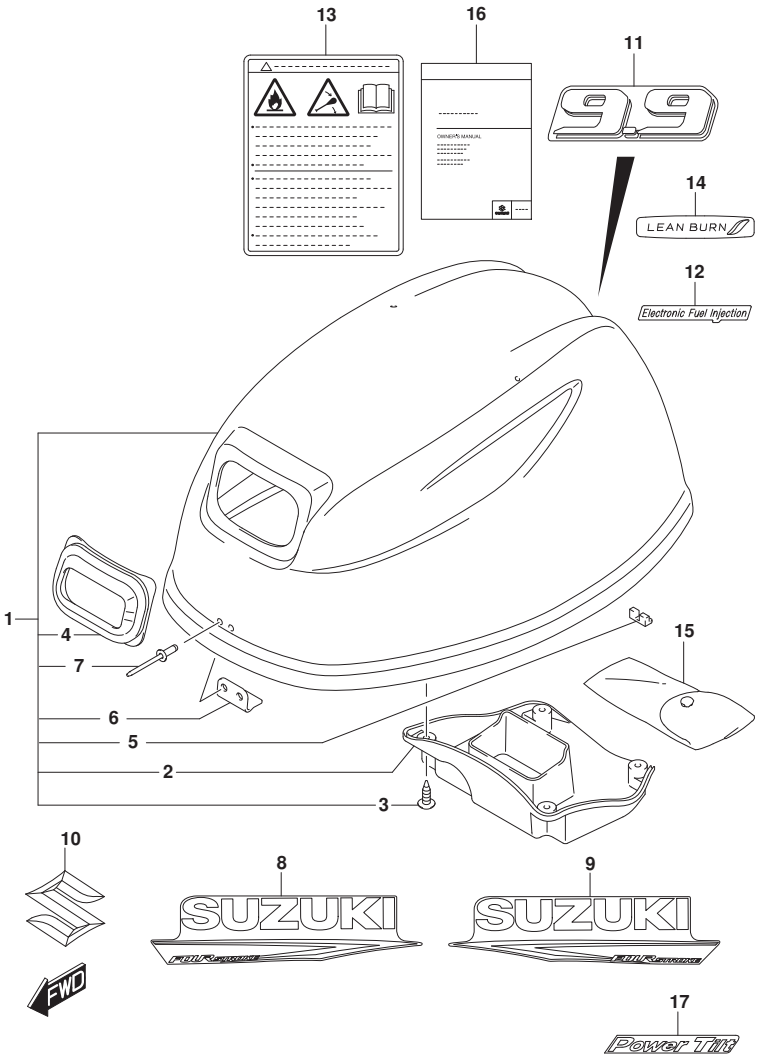


FIG.420E (1-1-3) ENGINE COVER (DF9.9BT:021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
9	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11	61435-89L40-YAY	MARK, EMBLEM REAR (BLACK)	1	
12	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA1-055	MANUAL, OWNER'S	1	
17	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	

FIG.420F

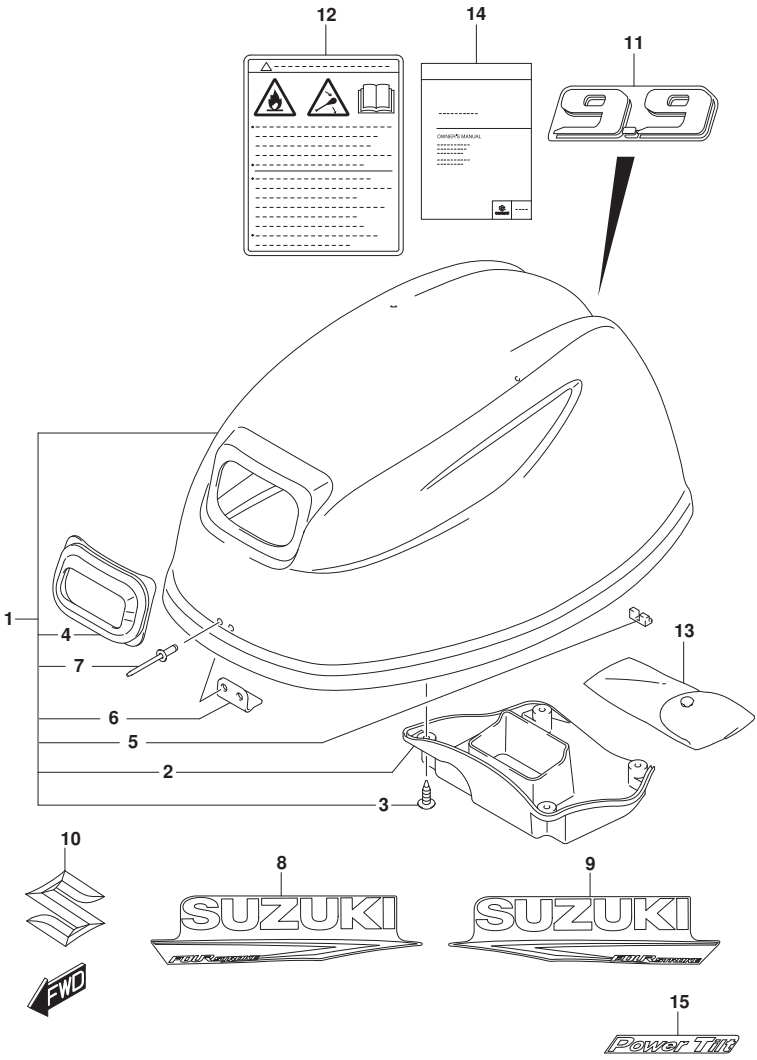


FIG.420F (1-1-4) ENGINE COVER (DF9.9BT:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
9	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11	61435-89L40-YAY	MARK, EMBLEM REAR (BLACK)	1	
12	61458-89L30	LABEL, ENGINE COVER	1	
13	59800-89L10	TOOL ASSY	1	
14	99011-89LC0-055	MANUAL, OWNER'S	1	
15	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	

DF20A_P01_022_420G
ENGINE COVER



DF20A_P01_022

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-97L01-YAY	STRIPE, ENG COVER STBD (BLACK)	1	STBD
8-2	61443-97L01-Y5S	STRIPE, ENG COVER STBD (WHITE)	1	STBD
9-1	61453-97L01-YAY	STRIPE, ENG COVER PORT (BLACK)	1	PORT
9-2	61453-97L01-Y5S	STRIPE, ENG COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L20-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L20-Y5S	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA0-055	MANUAL, OWNER'S	1	

FIG.420H

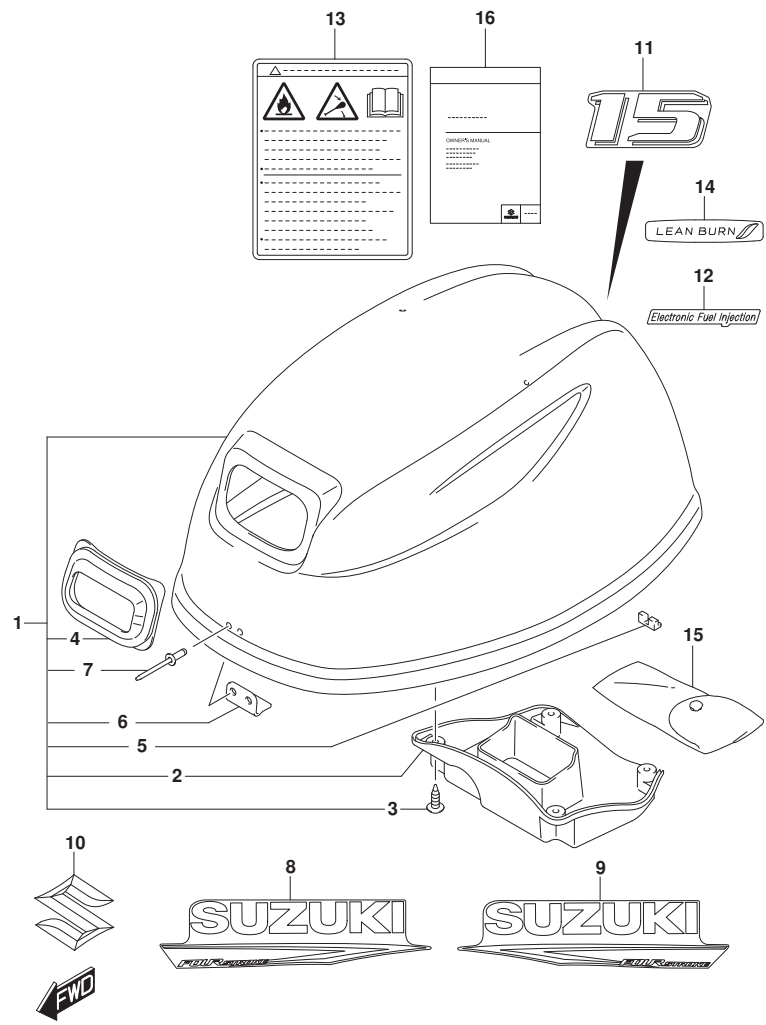


FIG.420H (1-1-6) ENGINE COVER ((DF15A,DF15AR):021)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L50-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L50-QTN	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-QTN	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA1-055	MANUAL, OWNER'S	1	

FIG.420J

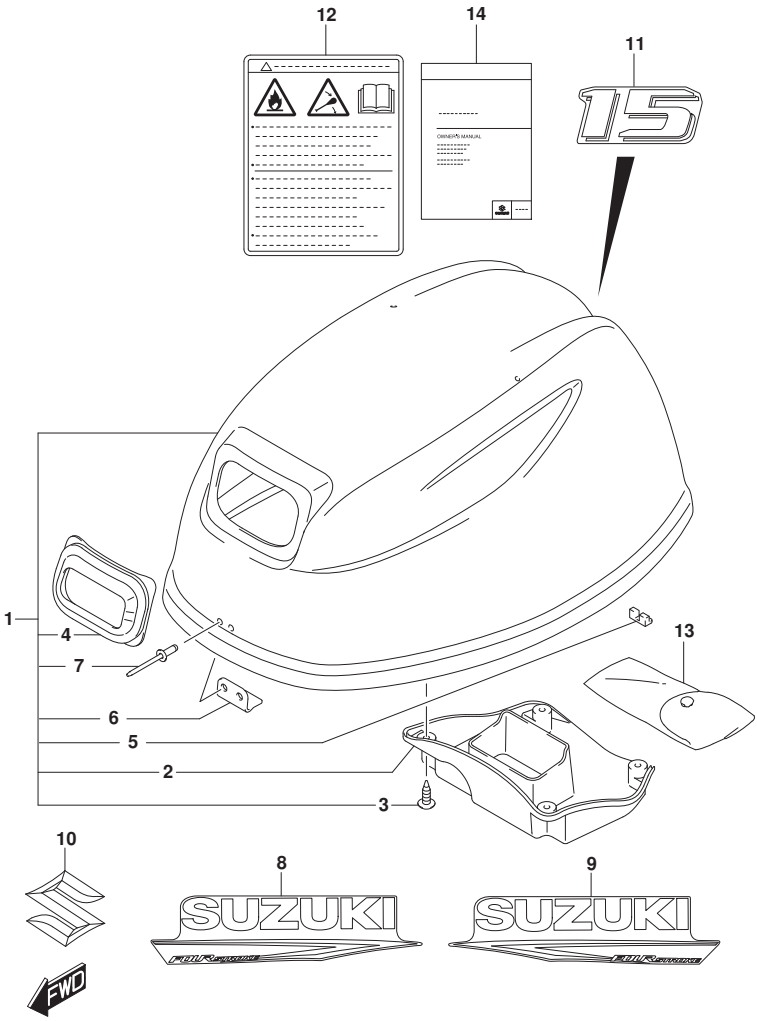


FIG.420J (1-I-7) ENGINE COVER ((DF15A,DF15AR):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L50-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L50-QTN	MARK, EMBLEM REAR (WHITE)	1	
12	61458-89L30	LABEL, ENGINE COVER	1	
13	59800-89L10	TOOL ASSY	1	
14	99011-89LC0-055	MANUAL, OWNER'S	1	

FIG.420K

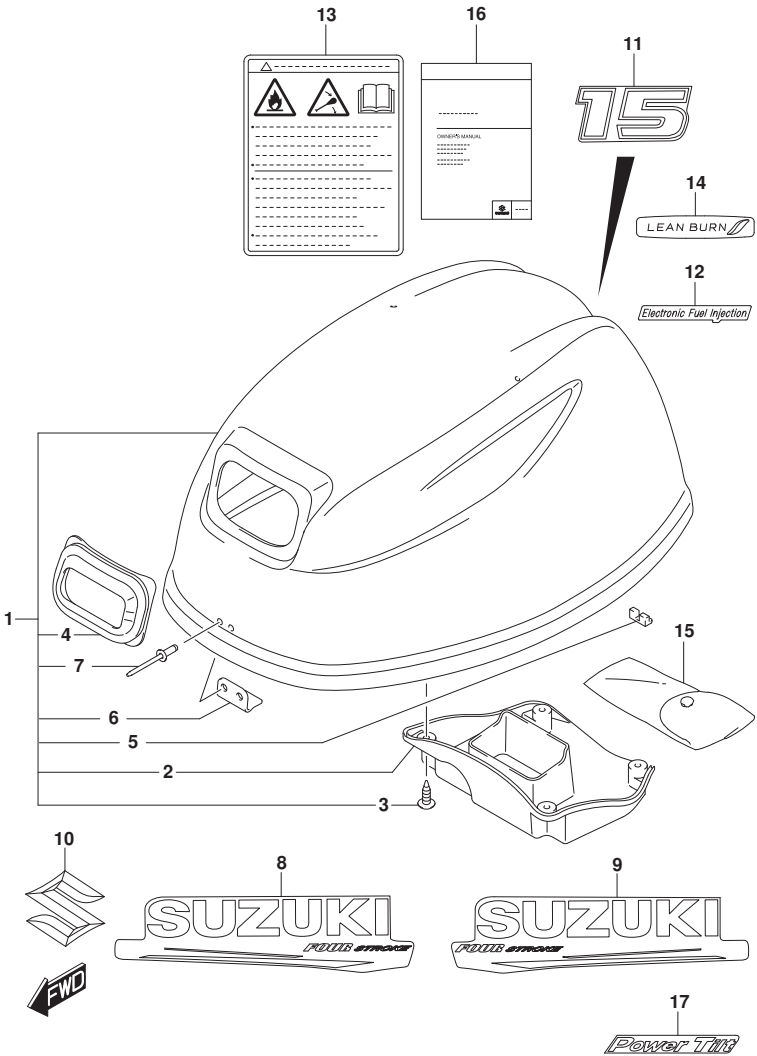


FIG.420K (1-1-8) ENGINE COVER (DF15AT:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-97L01-YAY	STRIPE, ENG COVER STBD (BLACK)	1	STBD
8-2	61443-97L01-Y5S	STRIPE, ENG COVER STBD (WHITE)	1	STBD
9-1	61453-97L01-YAY	STRIPE, ENG COVER PORT (BLACK)	1	PORT
9-2	61453-97L01-Y5S	STRIPE, ENG COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L20-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L20-Y5S	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA0-055	MANUAL, OWNER'S	1	
17-1	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	
17-2	61447-89L00-Y5S	MARK, EMBLEM POWER TILT (WHITE)	1	

FIG.420L

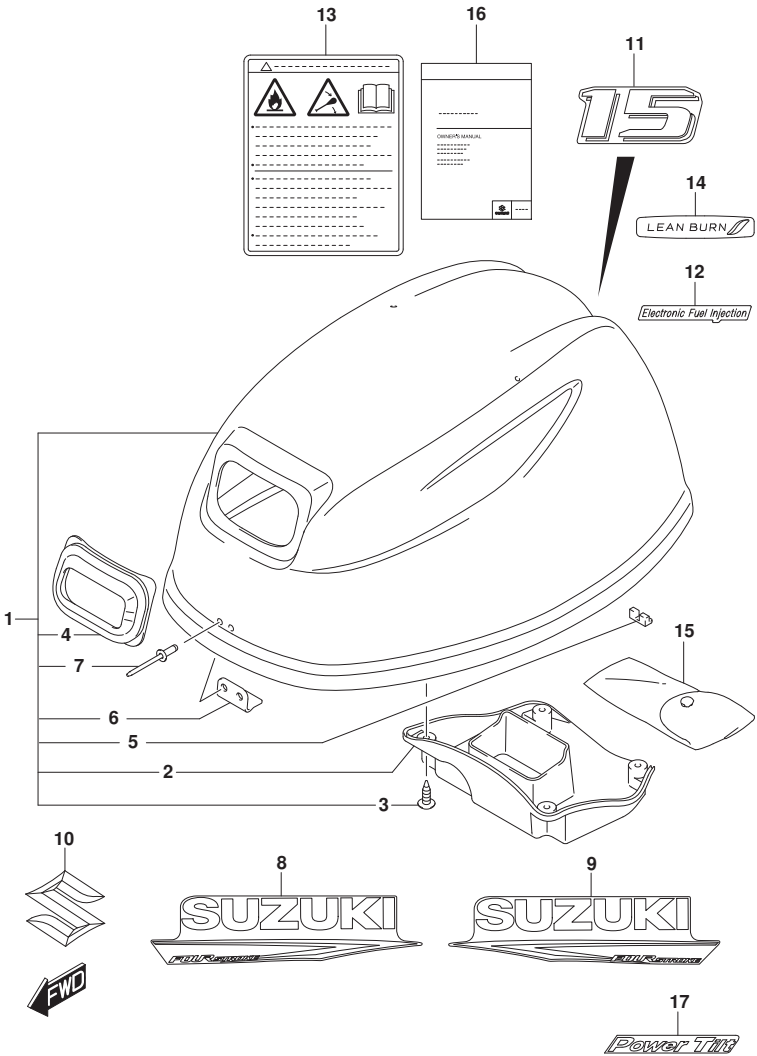


FIG.420L (1-1-9) ENGINE COVER (DF15AT:021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
9	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11	61435-89L50-YAY	MARK, EMBLEM REAR (BLACK)	1	
12	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA1-055	MANUAL, OWNER'S	1	
17	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	

FIG.420M

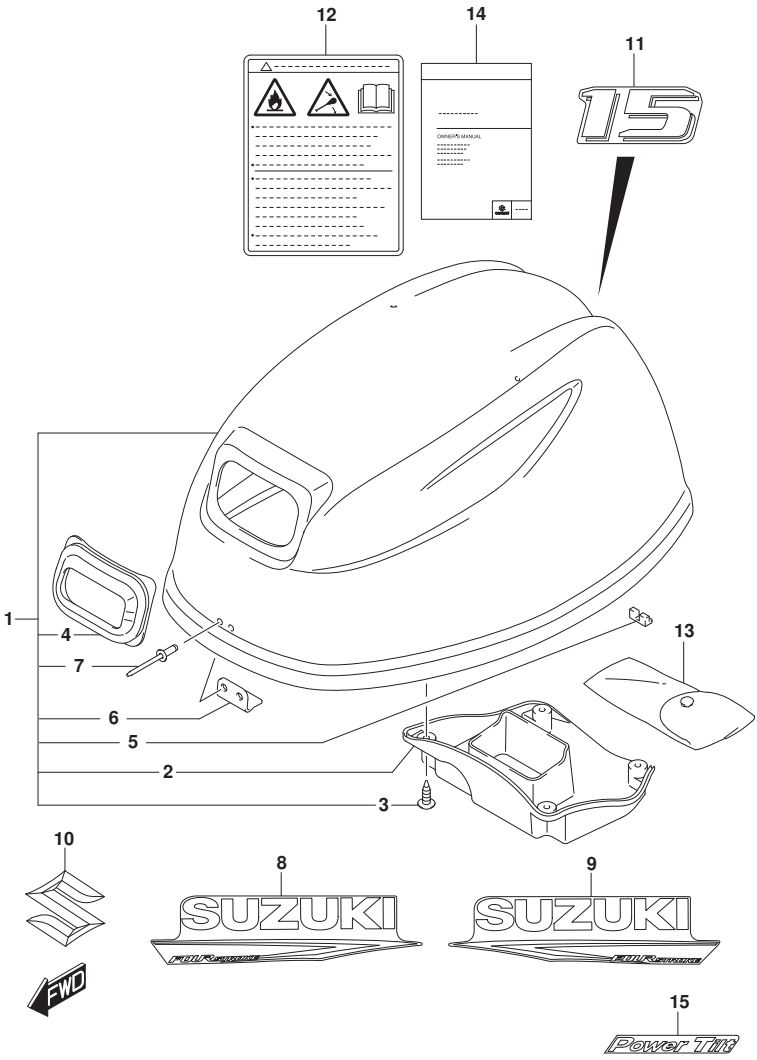


FIG.420M (1-I-10) ENGINE COVER (DF15AT:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
9	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11	61435-89L50-YAY	MARK, EMBLEM REAR (BLACK)	1	
12	61458-89L30	LABEL, ENGINE COVER	1	
13	59800-89L10	TOOL ASSY	1	
14	99011-89LC0-055	MANUAL, OWNER'S	1	
15	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	

FIG.420N

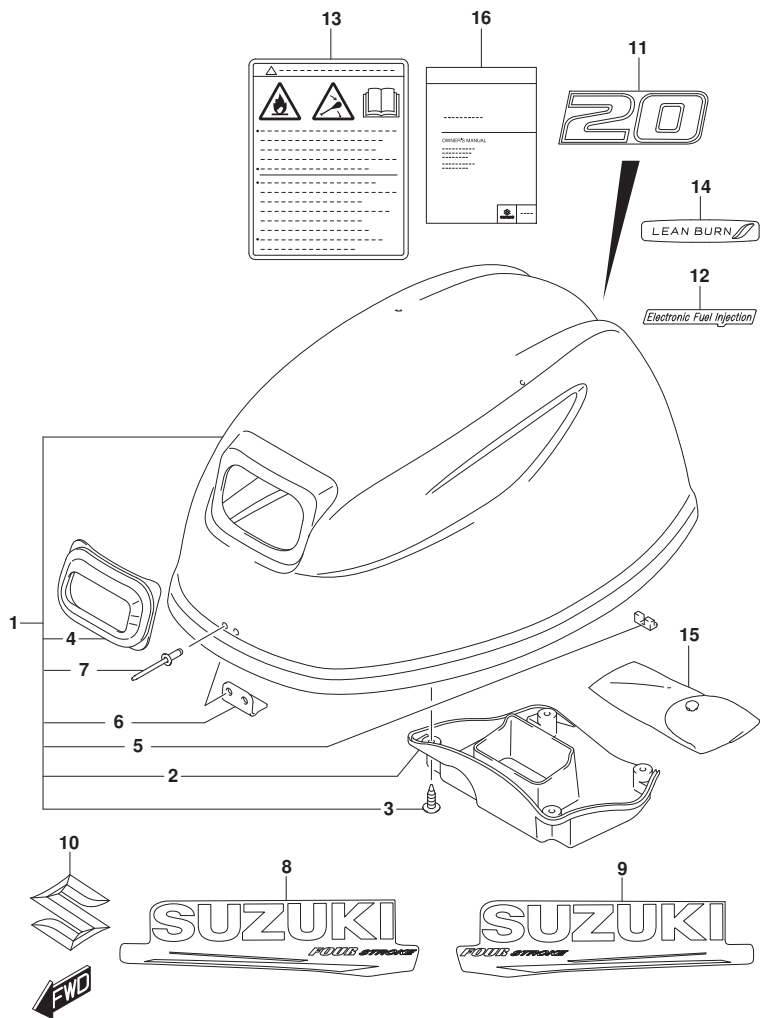


FIG.420N (1-1-11) ENGINE COVER ((DF20A:P01,DF20AR):020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-97L01-YAY	STRIPE, ENG COVER STBD (BLACK)	1	STBD
8-2	61443-97L01-Y5S	STRIPE, ENG COVER STBD (WHITE)	1	STBD
9-1	61453-97L01-YAY	STRIPE, ENG COVER PORT (BLACK)	1	PORT
9-2	61453-97L01-Y5S	STRIPE, ENG COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L30-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L30-Y5S	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA0-055	MANUAL, OWNER'S	1	

FIG.420P


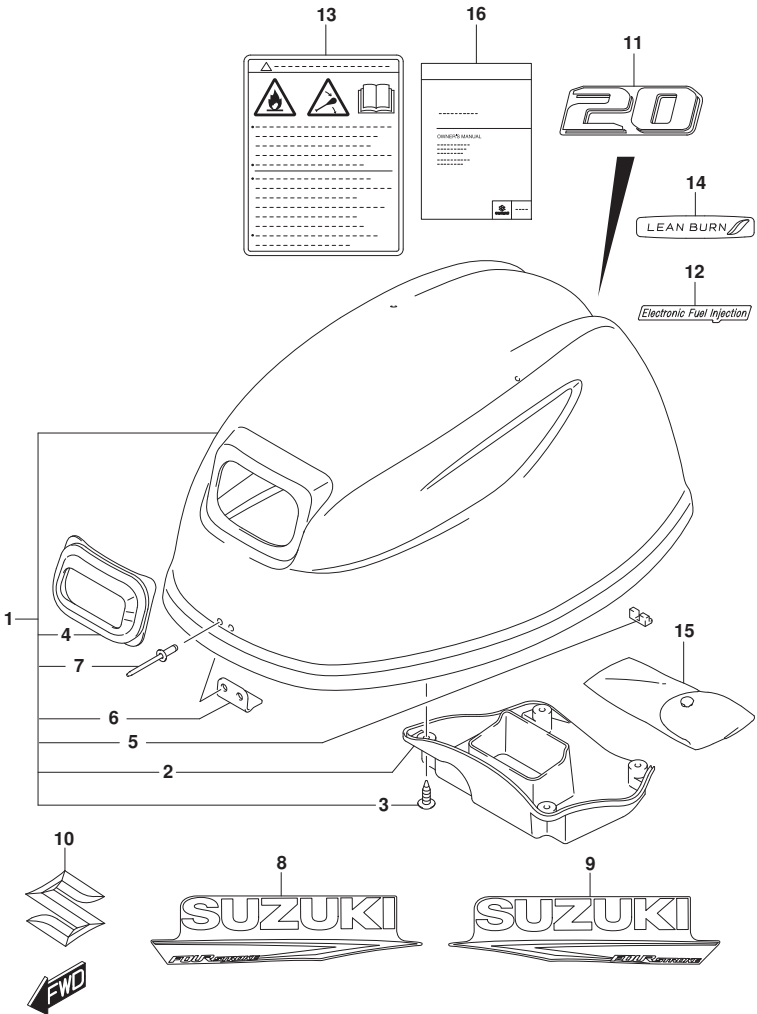


FIG.420P (1-1-12) ENGINE COVER ((DF20A:P01,DF20AR):021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L60-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L60-QTN	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-QTN	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA1-055	MANUAL, OWNER'S	1	

FIG.420R

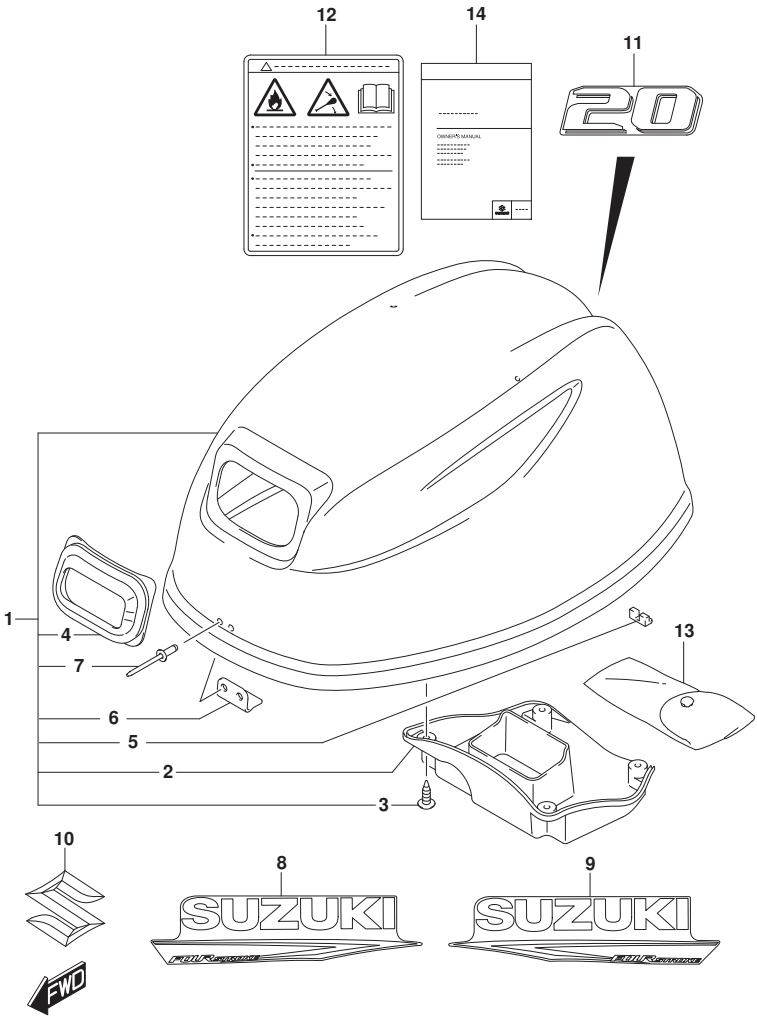

DF20A_P01_022_420R
ENGINE COVER

FIG.420R (1-1-13) ENGINE COVER ((DF20A:P01,DF20AR):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L60-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L60-QTN	MARK, EMBLEM REAR (WHITE)	1	
12	61458-89L30	LABEL, ENGINE COVER	1	
13	59800-89L10	TOOL ASSY	1	
14	99011-89LC0-055	MANUAL, OWNER'S	1	

DF20A_P01_022

FIG.420S

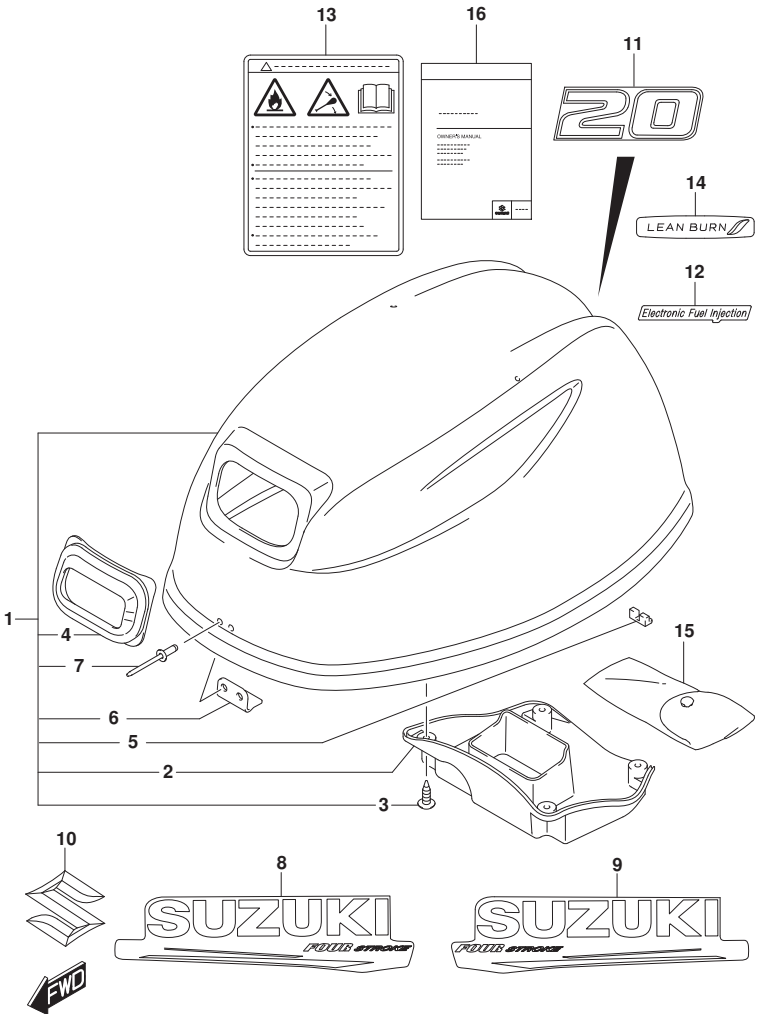


FIG.420S (1-I-14) ENGINE COVER (DF20A:P40:020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8	61443-97L01-YAY	STRIPE, ENG COVER STBD (BLACK)	1	STBD
9	61453-97L01-YAY	STRIPE, ENG COVER PORT (BLACK)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11	61435-89L30-YAY	MARK, EMBLEM REAR (BLACK)	1	
12	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA0-055	MANUAL, OWNER'S	1	

FIG.420T

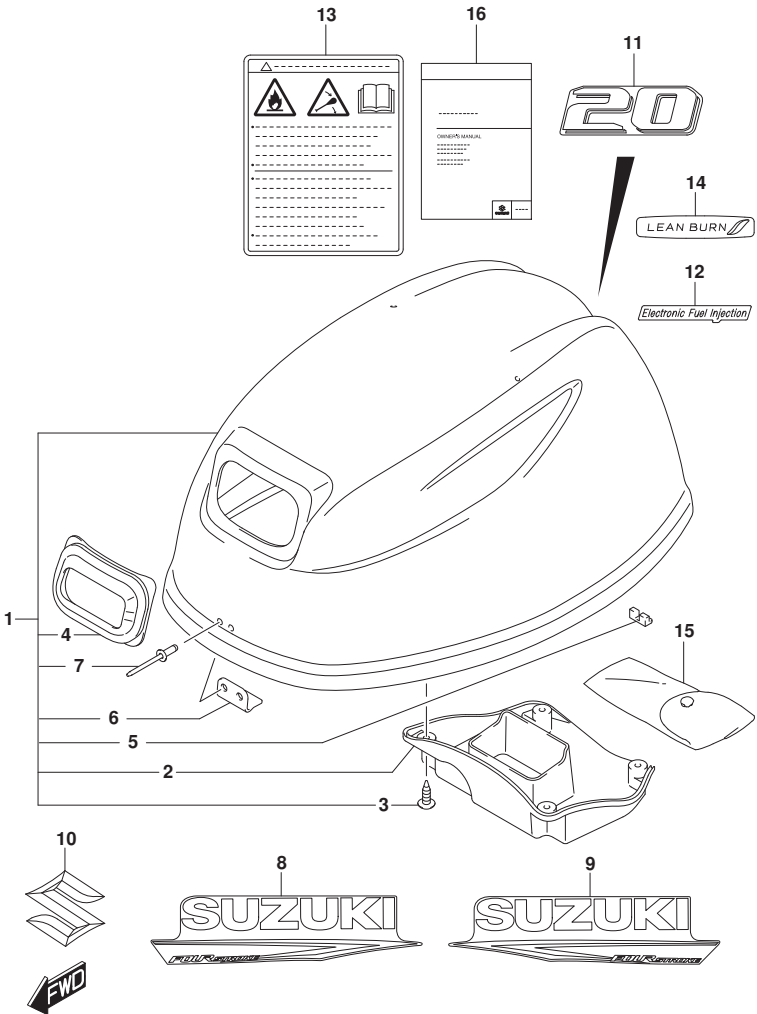


FIG.420T (1-J-2) ENGINE COVER (DF20A:P40:021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
9	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11	61435-89L60-YAY	MARK, EMBLEM REAR (BLACK)	1	
12	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA1-055	MANUAL, OWNER'S	1	

FIG.420U

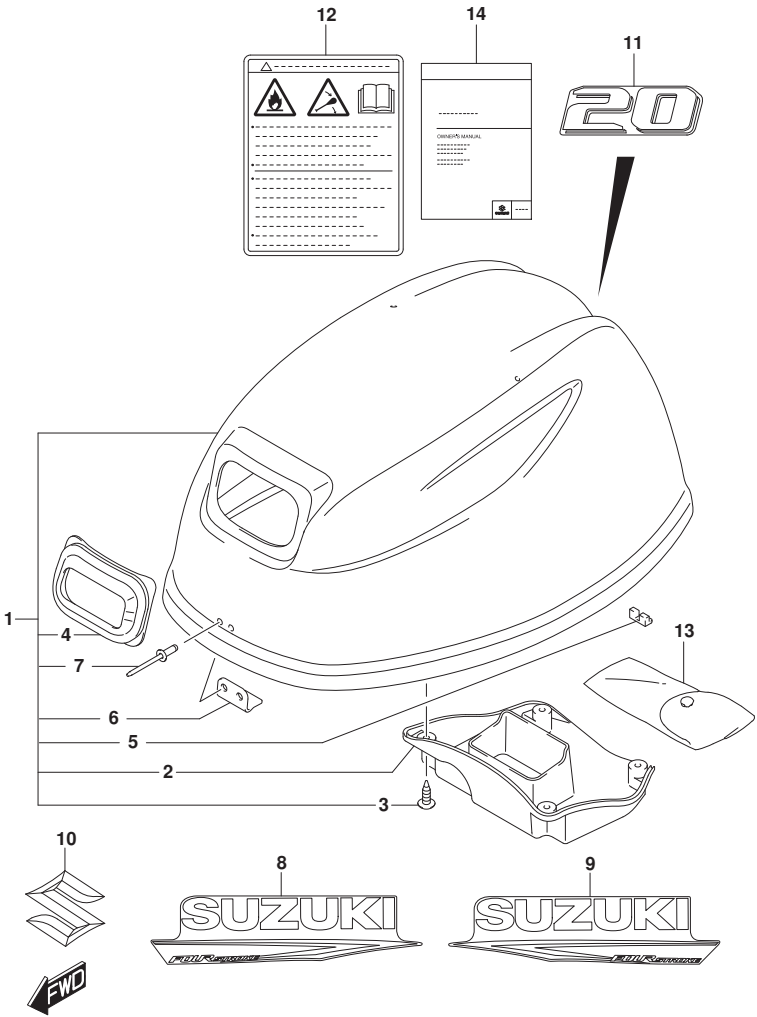


FIG.420U (1-J-3) ENGINE COVER (DF20A:P40:022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
9	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11	61435-89L60-YAY	MARK, EMBLEM REAR (BLACK)	1	
12	61458-89L30	LABEL, ENGINE COVER	1	
13	59800-89L10	TOOL ASSY	1	
14	99011-89LC0-055	MANUAL, OWNER'S	1	

FIG.420V

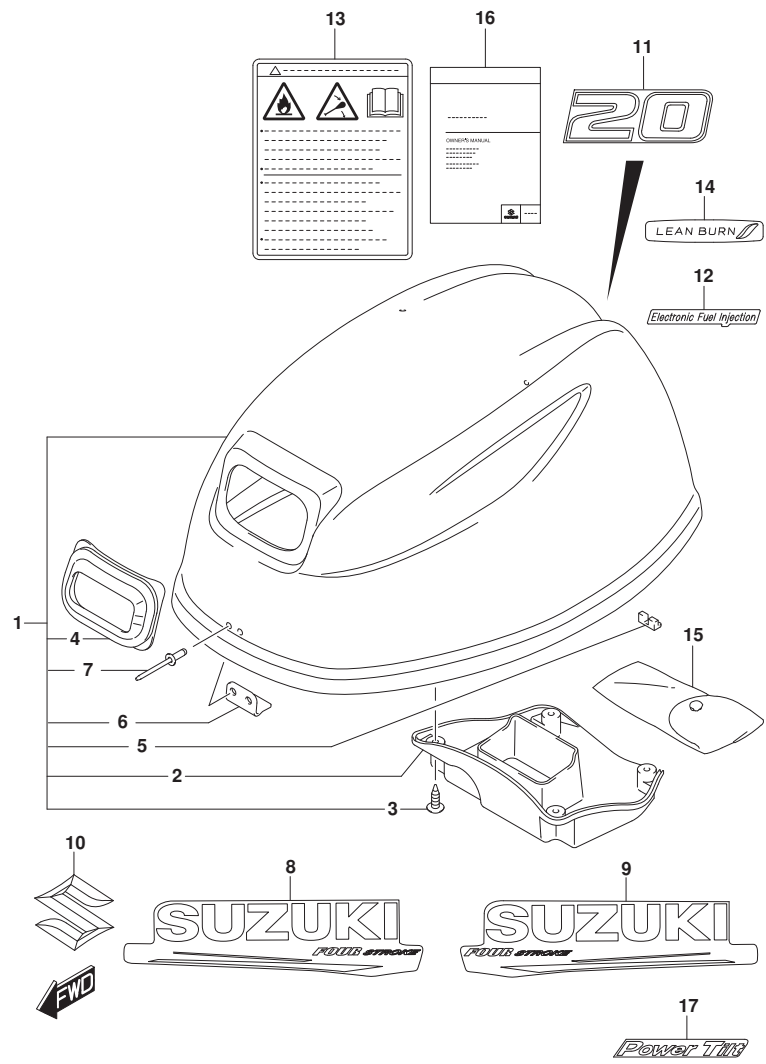


FIG.420V (1-J-4) ENGINE COVER ((DF20AT,DF20ATH):020)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-Y5S	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-97L01-YAY	STRIPE, ENG COVER STBD (BLACK)	1	STBD
8-2	61443-97L01-Y5S	STRIPE, ENG COVER STBD (WHITE)	1	STBD
9-1	61453-97L01-YAY	STRIPE, ENG COVER PORT (BLACK)	1	PORT
9-2	61453-97L01-Y5S	STRIPE, ENG COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L30-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L30-Y5S	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-Y5S	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA0-055	MANUAL, OWNER'S	1	
17-1	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	
17-2	61447-89L00-Y5S	MARK, EMBLEM POWER TILT (WHITE)	1	

FIG.420W

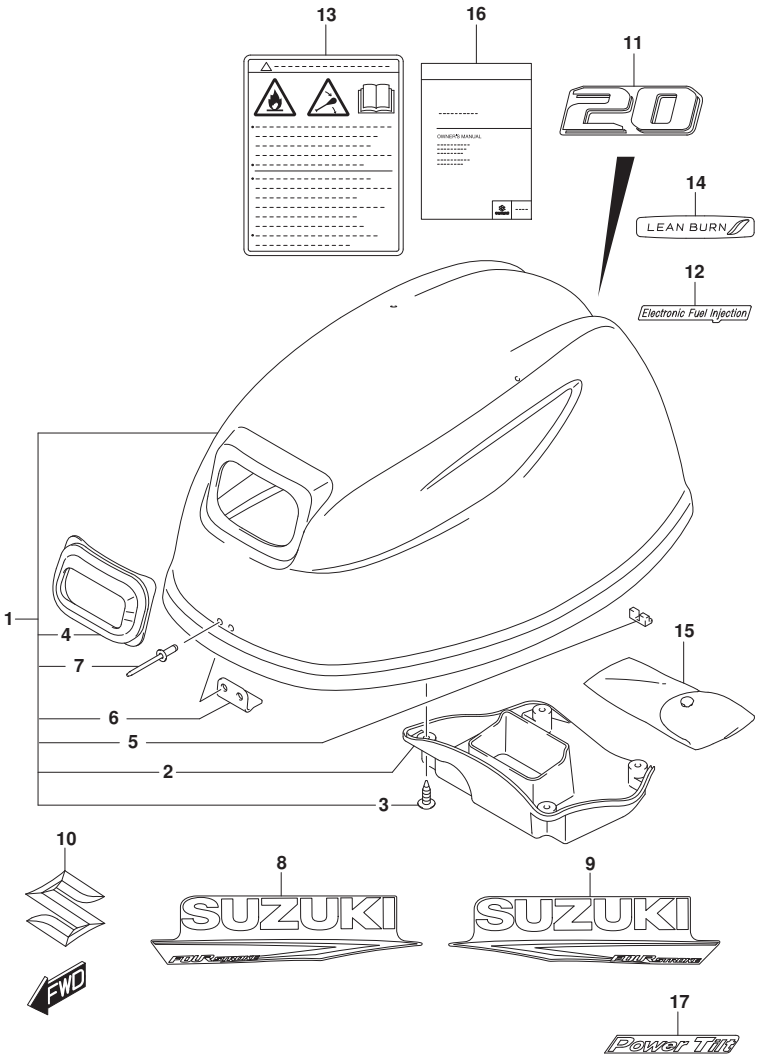


FIG.420W (1-J-5) ENGINE COVER ((DF20AT,DF20ATH):021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L60-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L60-QTN	MARK, EMBLEM REAR (WHITE)	1	
12-1	61446-89L10-YAY	DECAL, EFI (BLACK)	1	
12-2	61446-89L10-QTN	DECAL, EFI (WHITE)	1	
13	61458-89L30	LABEL, ENGINE COVER	1	
14	61471-89L00	DECAL, LEAN BURN	1	
15	59800-89L10	TOOL ASSY	1	
16	99011-89LA1-055	MANUAL, OWNER'S	1	
17-1	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	
17-2	61447-89L00-QTN	MARK, EMBLEM POWER TILT (WHITE)	1	

FIG.420X

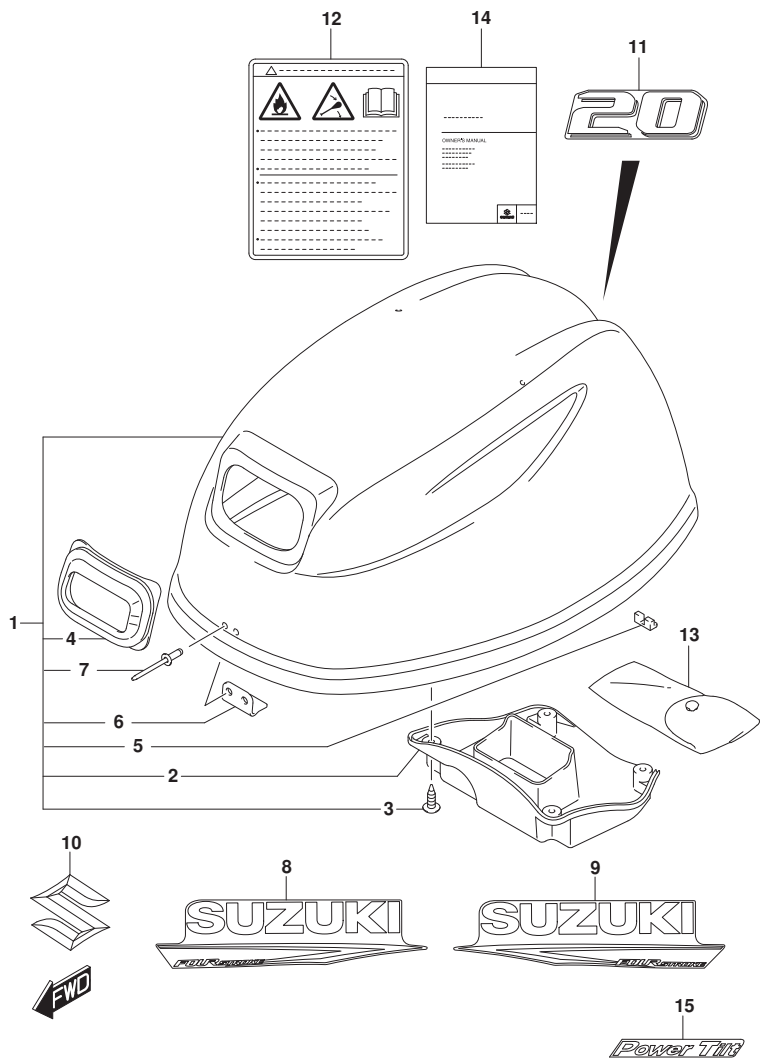


FIG.420X (1-J-6) ENGINE COVER ((DF20AT,DF20ATH):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-89L40-YAY	COVER ASSY, ENGINE (BLACK)	1	
1-2	61400-89L40-QTN	COVER ASSY, ENGINE (WHITE)	1	
2	61433-89L01	.COVER, AIR INTAKE INNER	1	
3	03542-05169	.SCREW	4	
4	61622-90L00	.OIL SEAL, REC STARTER	1	
5	61619-89L00	.CUSHION, FASTENER	1	
6	61631-99J00	.HOOK, ENGINE COVER	1	
7	09229-04005	.RIVET	2	
8-1	61443-89L00-YAY	STRIPE, ENGINE COVER STBD (BLACK)	1	STBD
8-2	61443-89L00-QTN	STRIPE, ENGINE COVER STBD (WHITE)	1	STBD
9-1	61453-89L00-YAY	STRIPE, ENGINE COVER PORT (BLACK)	1	PORT
9-2	61453-89L00-QTN	STRIPE, ENGINE COVER PORT (WHITE)	1	PORT
10	77811-54GB0-0PG	EMBLEM, RR MARK S (CHROME)	1	
11-1	61435-89L60-YAY	MARK, EMBLEM REAR (BLACK)	1	
11-2	61435-89L60-QTN	MARK, EMBLEM REAR (WHITE)	1	
12	61458-89L30	LABEL, ENGINE COVER	1	
13	59800-89L10	TOOL ASSY	1	
14	99011-89LC0-055	MANUAL, OWNER'S	1	
15-1	61447-89L00-YAY	MARK, EMBLEM POWER TILT (BLACK)	1	
15-2	61447-89L00-QTN	MARK, EMBLEM POWER TILT (WHITE)	1	

FIG.432A

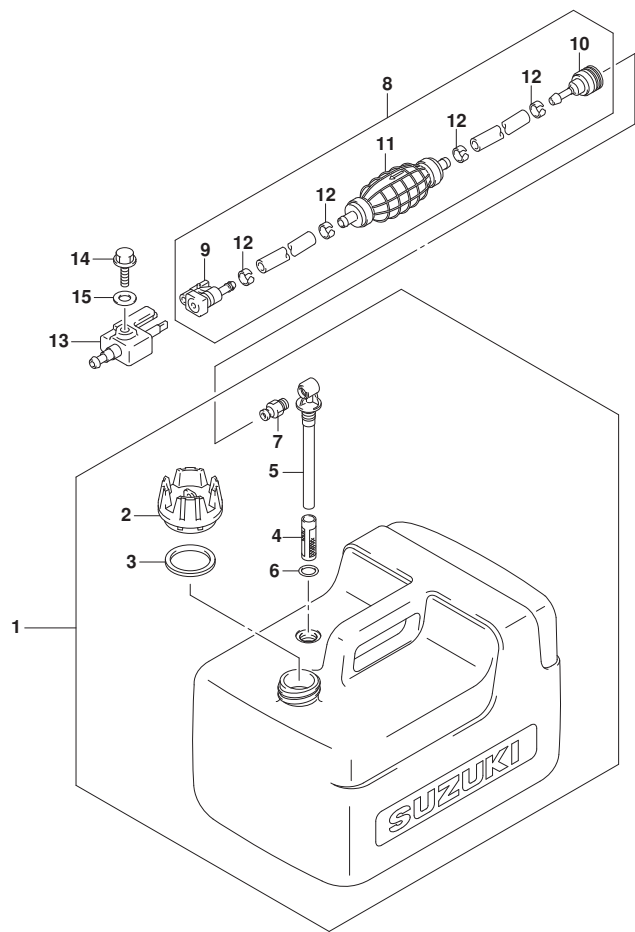


FIG.432A (1-J-7) FUEL TANK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-89L10	TANK ASSY, FUEL SEP	1	
2	65520-99100	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-99100	.OUTLET ASSY	1	
6	65892-95D00	.O RING, FUEL OUTLET	1	
7	65740-95D01	.PLUG, FUEL CONNECTOR	1	
8	65700-89L32	HOSE, FUEL	1	
9	65750-87J11	.SOCKET, FUEL HOSE	1	
10-1	65750-95501	.SOCKET, FUEL HOSE	1	020,021
10-2	65750-955L1	.SOCKET, FUEL HOSE	1	022
11	65770-89L00	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP, FUEL HOSE	4	
13	65720-986L0	PLUG, FUEL CONNECTOR	1	
14	09103-06237	BOLT (6X12.5)	1	
15-1	09160-06085	WASHER (6.5X15X1.0)	1	020
15-2	09160-06175	WASHER (6.5X15X1)	1	021,022

FIG.442A


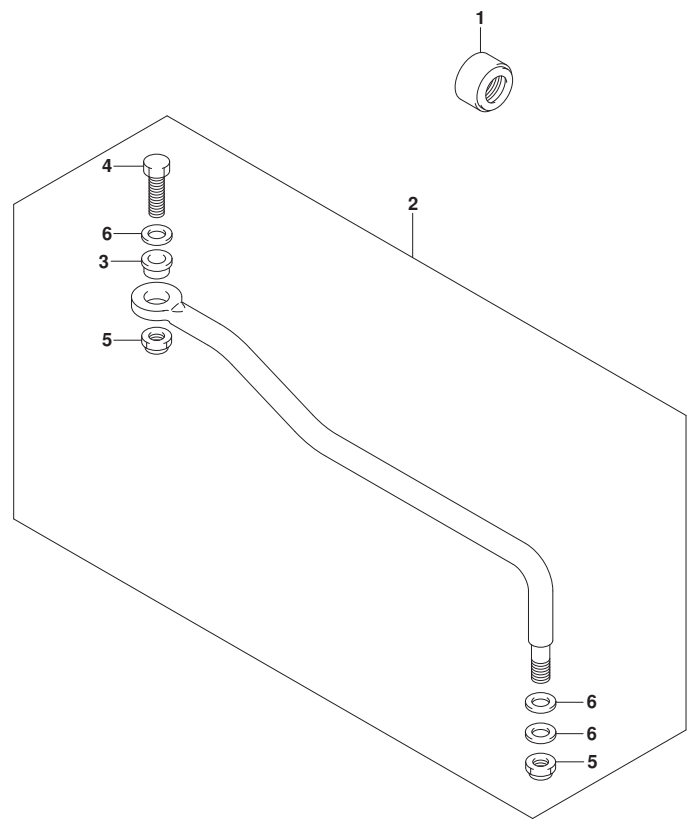


FIG.442A (1-J-8) DRAG LINK (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41161-94400	SEAL, STEERING CABLE	1	
2	67701-99J02	LINK ASSY, DRAG	1	
3	67721-93E10	.SPACER, DRAG LINK	1	
4	67725-96J00	.BOLT, DRAG LINK	1	
5	67726-99E00	.NUT, LOCK	2	
6	67728-99E00	.WASHER	4	

NOTE : DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT





NOTE : DF9.9B,DF9.9BTH,DF15A,DF20A:P01,DF20ATH

DF20A_P01_022

FIG.444A


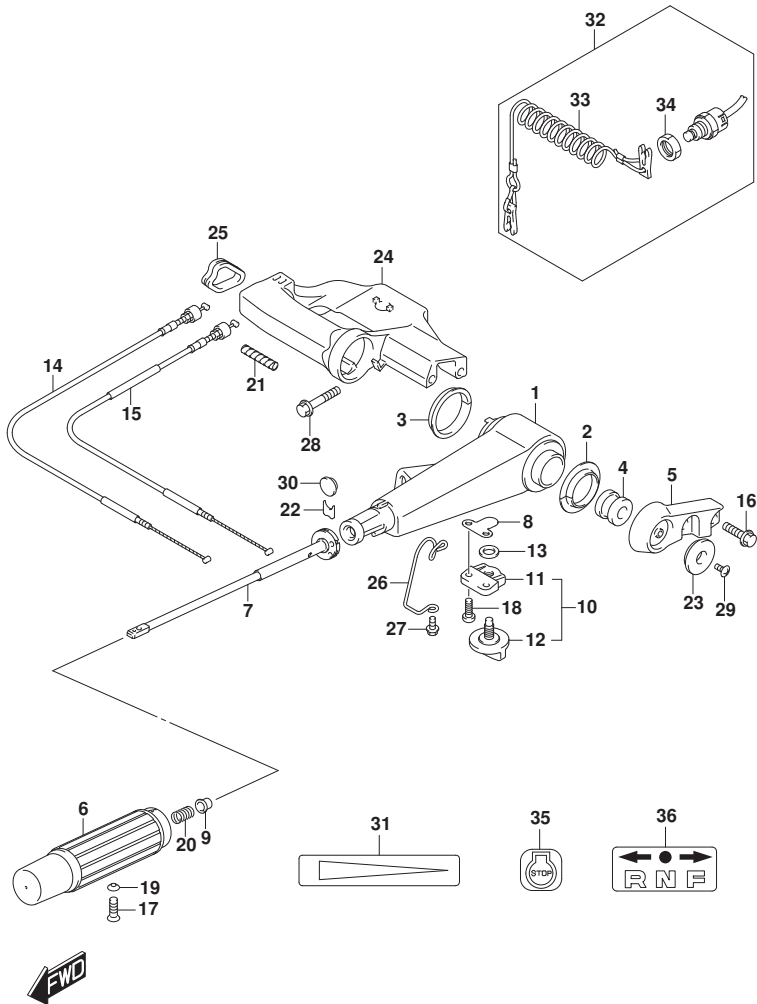


FIG.444A (1-J-10) TILLER HANDLE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	09116-06225	BOLT (6X16)	1	
28	09116-08155	BOLT (8X45)	2	
29	09125-05145	SCREW (5X10)	1	
30	09250-12016	CAP (OD:20)	1	
31	63215-93110	MARK, HANDLE GRIP	1	
32	37830-89L10	SWITCH ASSY, EMERGENCY & STOP	1	
33	37823-97J00	.PLATE, LOCK	1	
34	37826-97J01	.NUT, EMERGENCY SWITCH	1	
35-1	37835-91J00-YAY	LABEL, STOP (BLACK)	1	
35-2	37835-91J00-Y5S	LABEL, STOP (WHITE)	1	
35-3	37835-91J00-QTN	LABEL, STOP (WHITE)	1	
36-1	21131-94J00-YAY	MARK, CLUTCH SHIFT (BLACK)	1	
36-2	21131-94J00-Y5S	MARK, CLUTCH SHIFT (WHITE)	1	
36-3	21131-94J00-QTN	MARK, CLUTCH SHIFT (WHITE)	1	

NOTE : DF9.9B,DF9.9BTH,DF15A,DF20A:P01,DF20ATH

FIG.444B

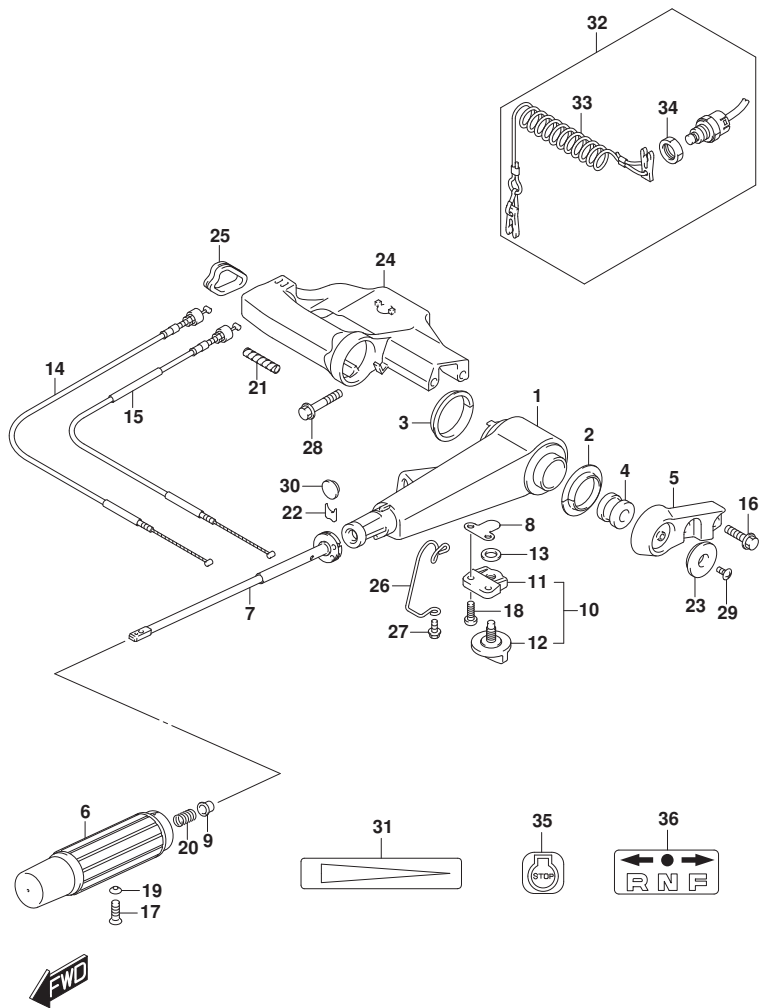

DF20A_P01_022_444B
TILLER HANDLE

FIG.444B (1-J-11) TILLER HANDLE (DF20A:P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63111-89L01-YAY	HANDLE, TILLER (BLACK)	1	
2	63115-99J10	BUSH, TILLER HANDLE NO.1	1	
3	63115-99J00	BUSH, TILLER HANDLE NO.2	1	
4	63116-99J00	RUBBER, TILLER HANDLE FRICTION	1	
5	63121-99J00-YAY	COVER, TILLER HANDLE (BLACK)	1	
6	63210-89L11	GRIP, HANDLE	1	
7	63220-89L00	ROD, HANDLE	1	
8	63225-98601	PLATE, THROTTLE ADJ	1	
9	63225-93200	BUSH, HANDLE ROD	1	
10	63240-94J20	ADJUSTER SET, HANDLE ROD	1	
11	63241-986C0	.SUPPORT, HANDLE ROD	1	PORT
12	63244-94J10	.KNOB, THROTTLE ADJ	1	
13	09148-06008	NUT (M6)	1	
14	63610-89L00	CABLE ASSY, THROTTLE	1	
15	63610-89L10	CABLE ASSY, THROTTLE	1	
16	09116-08151	BOLT (8X30)	2	
17	09126-06015	SCREW (6X23)	1	
18	09136-05041	SCREW (5X20)	2	
19	09163-06001	WASHER (6.4X12X0.5)	1	
20	09440-12027	SPRING	1	
21	33833-91J00	TUBE, SWITCH LEAD	1	L:250->50
22	63114-99J01	PLATE, WARNING INDICATOR	1	
23	63122-99J00	PROTECTOR, HANDLE COVER	1	
24	63131-99J11-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
25	63133-89L00	GROMMET, TILLER HANDLE BRACKET	1	
26	65793-89L00	HOLDER, FUEL HOSE	1	
27	09116-06225	BOLT (6X16)	1	
28	09116-08155	BOLT (8X45)	2	
29	09125-05145	SCREW (5X10)	1	
30	09250-12016	CAP (OD:20)	1	
31	63215-93110	MARK, HANDLE GRIP	1	
32	37830-89L10	SWITCH ASSY, EMERGENCY & STOP	1	
33	37823-97J00	.PLATE, LOCK	1	
34	37826-97J01	.NUT, EMERGENCY SWITCH	1	
35	37835-91J00-YAY	LABEL, STOP (BLACK)	1	
36	21131-94J00-YAY	MARK, CLUTCH SHIFT (BLACK)	1	

FIG.450A

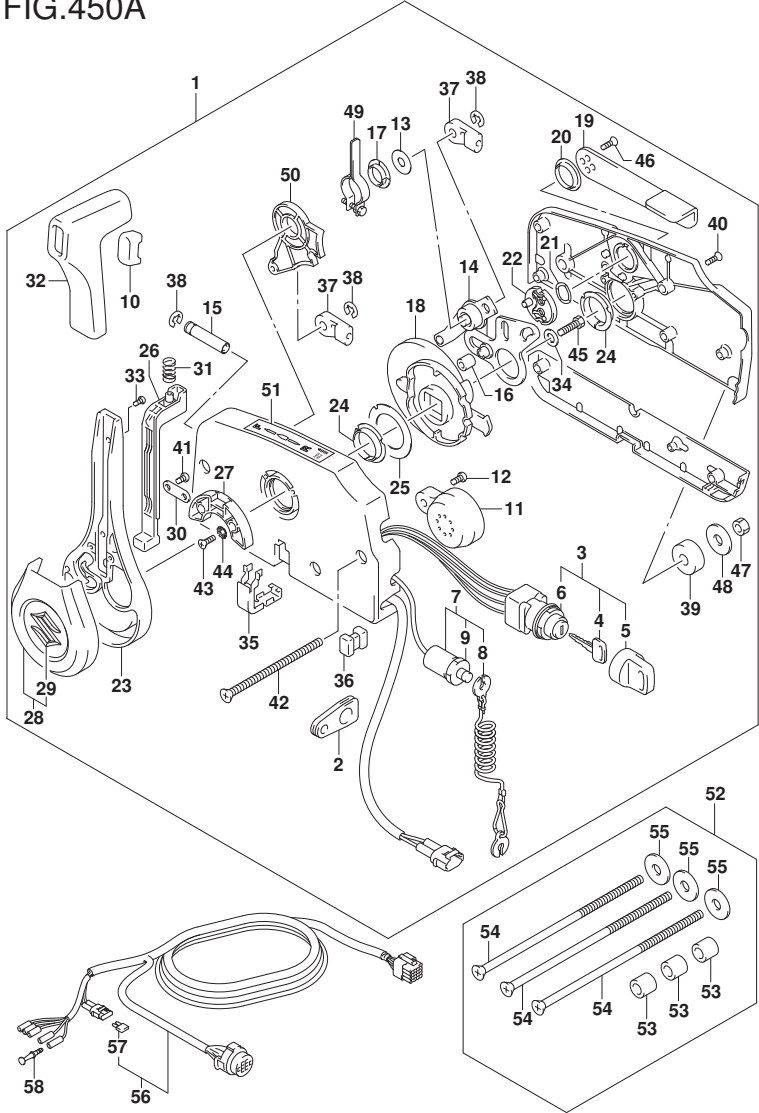


FIG.450A (1-J-12) REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J33	REMOTE CONTROL ASSY	1	
2	36628-91J00	..GROMMET, WIRING HARNESS	1	
3	37110-94J03	..SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E01	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37820-93J11	..SWITCH ASSY, EMERGENCY	1	
8	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
9	37826-92J10	..NUT	1	
10	67263-88L30	..CAP, GRIP SW HOLE	1	
11	38500-93J00	..BUZZER ASSY, WARNING	1	
12	67214-92E00	..SCREW (5X20)	1	
13	67212-95600	..WASHER	1	
14	67220-95630	..PLATE ASSY	1	
15	67223-99E10	..KNOB, BRAKE ADJUST	1	
16	67229-95600	..ROLLER	1	
17	67232-95600	..BUSH	1	
18	67238-87D00	..GEAR, DRIVE	1	
19	67241-99E11	..LEVER, FREE THROTTLE	1	
20	67243-95600	..BUSH	1	

NOTE : (DF9.9BR,DF15AR,DF20AR):(020,021)

FIG.450A

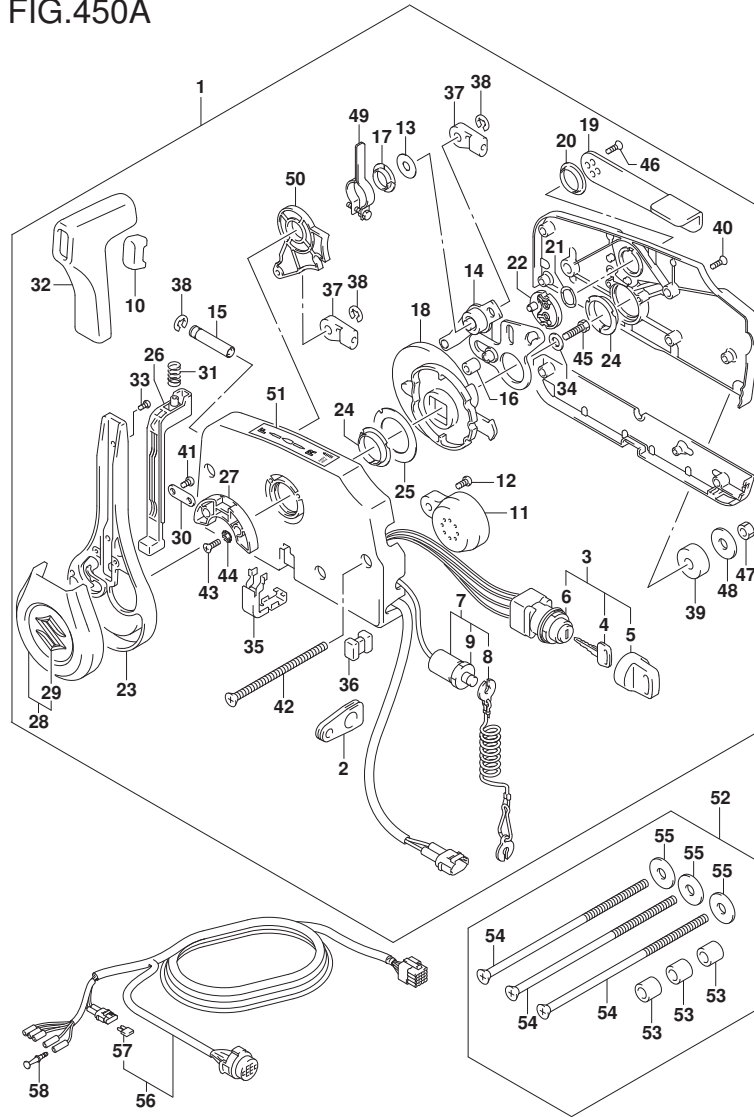


FIG.450A (1-J-13) REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	67244-95600	.WAVE WASHER	1	
22	67245-95600	.DRUM, FREE THROTTLE	1	
23	67251-96L00	.LEVER, HANDLE	1	
24	67252-95600	.BUSH	2	
25	67253-95600	.WASHER	1	
26	67255-96L00	.NEUTRAL LOCK ARM	1	
27	67256-95600	.HOLDER, NEUTRAL LOCK	1	
28	67257-96L00	.CAP ASSY, LEVER	1	
29	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-96L00	.GRIP	1	
33	67296-96L10	.SCREW	2	
34	67264-95600	.WASHER	1	
35	67267-96L00	.COVER, WIRE SUB ASSY	1	
36	67273-95601	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67292-94300	.E RING	3	
39	67294-95600	.SPACER	3	
40	67296-90J20	.SCREW	5	
41	67296-96L00	.SCREW	2	
42	67296-95630	.SCREW	3	
43	67296-95610	.SCREW	2	
44	67297-95600	.WASHER	2	
45	09100-08232	.BOLT (8X30)	1	
46	67269-96L10	.SCREW	2	
47	09140-06020	.NUT	3	
48	67288-94320	.WASHER	3	
49	67224-96L00	.ARM, BRAKE ASSY	1	
50	67238-96L00	.GEAR, SHIFT ASSY	1	
51	67284-94L10	.MARK, HANDLE LEVER	1	
52	67140-95601	KIT, R/CON	1	

NOTE : (DF9.9BR,DF15AR,DF20AR):(020,021)

FIG.450A

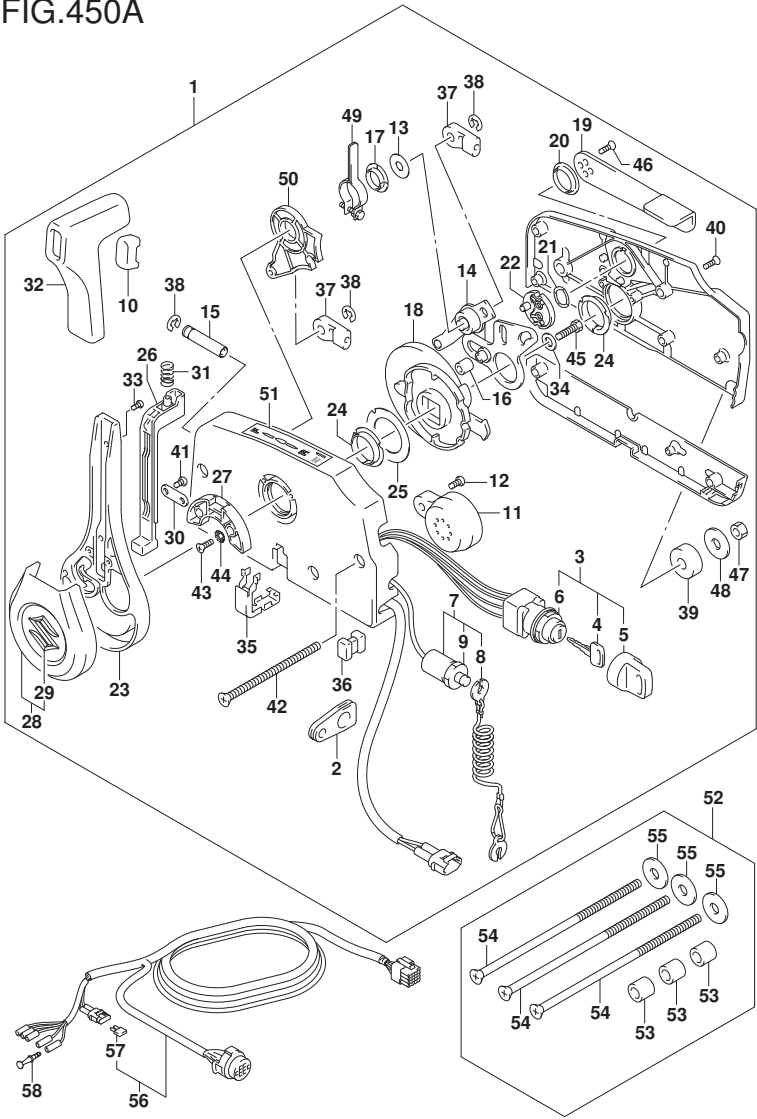


FIG.450A (1-J-14) REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
53	09180-06105	.SPACER (6.1X10X14)	3	
54	67296-95640	.SCREW	3	
55	67288-94320	.WASHER	3	
56	36620-89L00	WIRE ASSY, REMOTE CONTROL	1	
57	09481-10501	.FUSE (10A)	1	
58	36615-96300	TERMINAL	5	

NOTE : (DF9.9BR,DF15AR,DF20AR):(020,021)

FIG.450B

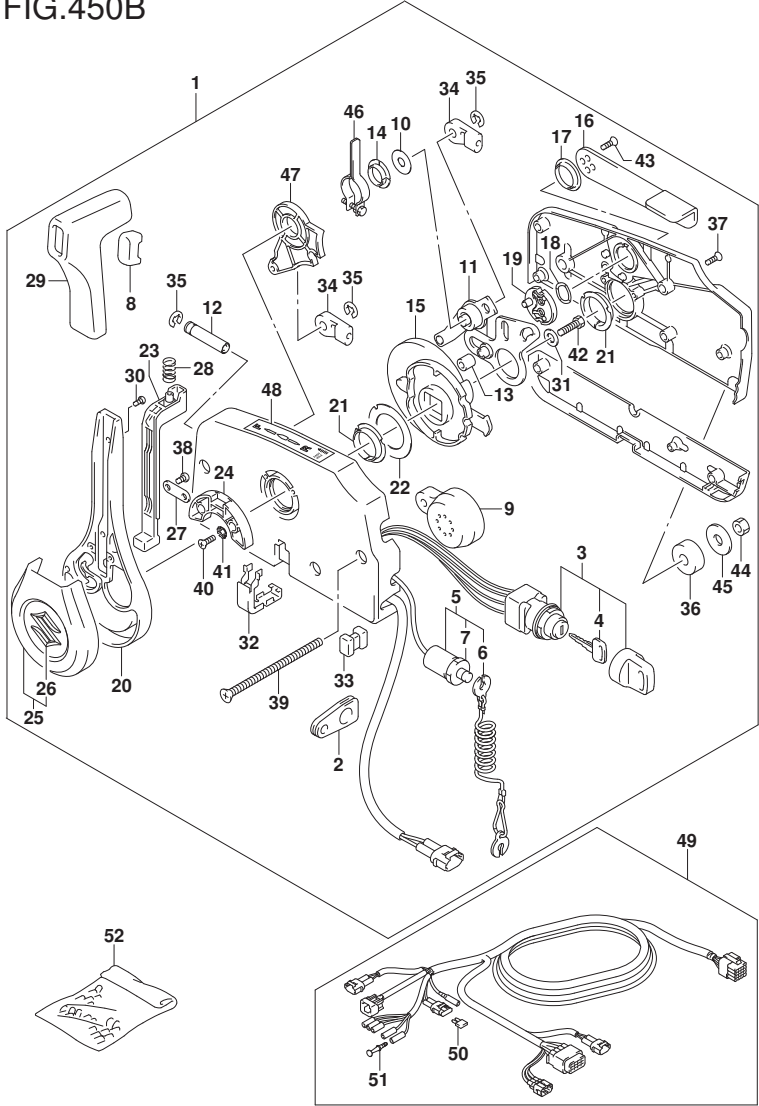


FIG.450B (1-K-2) REMOTE CONTROL ((DF9.9BR,DF15AR,DF20AR):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J40	REMOTE CONTROL ASSY	1	
2	36628-91J00	.GROMMET, WIRING HARNESS	1	
3	37110-94J10	.SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37820-93J11	.SWITCH ASSY, EMERGENCY	1	
6	37823-92E02	..PLATE ASSY, EMERGENCY SW	1	
7	37826-92J10	LOCK	1	
8	67263-88L30	..NUT	1	
9	38500-93J90	.CAP, GRIP SW HOLE	1	
10	67212-95600	.BUZZER, WARNING	1	
11	67220-95630	.WASHER	1	
12	67223-99E10	.PLATE ASSY	1	
13	67229-95600	.KNOB, BRAKE ADJUST	1	
14	67232-95600	.ROLLER	1	
15	67238-87D00	.BUSH	1	
16	67241-99E11	.GEAR, DRIVE	1	
17	67243-95600	.LEVER, FREE THROTTLE	1	
18	67244-95600	.BUSH	1	
19	67245-95600	.WAVE WASHER	1	
20	67251-96L00	.DRUM, FREE THROTTLE	1	
21	67252-95600	.LEVER, HANDLE	1	
22	67253-95600	.BUSH	2	
23	67255-96L00	.WASHER	1	
24	67256-95600	.NEUTRAL LOCK ARM	1	
		.HOLDER, NEUTRAL LOCK	1	

FIG.450B

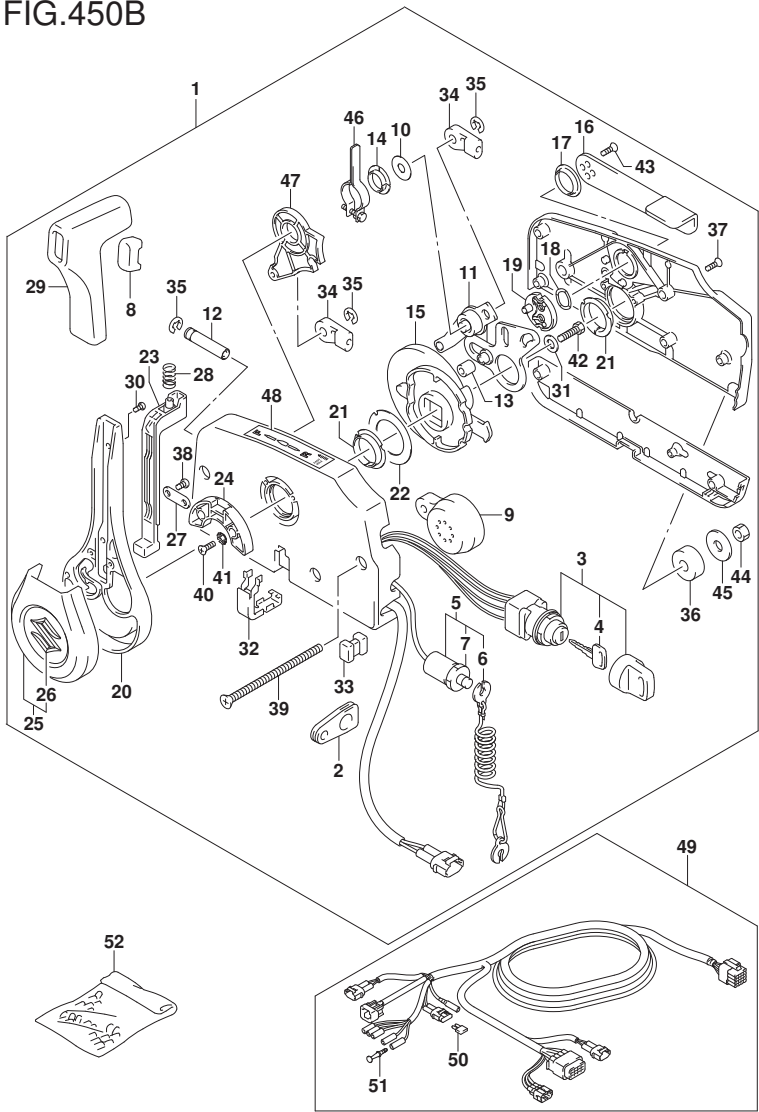


FIG.450B (1-K-3) REMOTE CONTROL ((DF9.9BR,DF15AR,DF20AR):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	67257-96L00	.CAP ASSY, LEVER	1	
26	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
27	67258-99E00	.BRACKET	1	
28	67259-87D00	.SPRING, NEUTRAL ARM	1	
29	67261-96L00	.GRIP	1	
30	67296-96L10	.SCREW	2	
31	67264-95600	.WASHER	1	
32	67267-96L00	.COVER, WIRE SUB ASSY	1	
33	67273-95601	.SPACER	1	
34	67275-95600	.END, CABLE	2	
35	67292-94300	.E RING	3	
36	67294-95600	.SPACER	3	
37	67296-90J20	.SCREW	5	
38	67296-96L00	.SCREW	2	
39	67296-95630	.SCREW	3	
40	67296-95610	.SCREW	2	
41	67297-95600	.WASHER	2	
42	09100-08232	.BOLT (8X30)	1	
43	67269-96L10	.SCREW	2	
44	09140-06020	.NUT	3	
45	67288-94320	.WASHER	3	
46	67224-96L00	.ARM, BRAKE ASSY	1	
47	67238-96L00	.GEAR, SHIFT ASSY	1	
48	67284-94L10	.MARK, HANDLE LEVER	1	
49	36620-89L10	WIRE ASSY, REMOTE CONTROL	1	
50	09481-10501	.FUSE (10A)	1	
51	36615-96300	.TERMINAL	5	
52	36990-87D00	TERMINAL & SLEEVE SET	1	OPT

FIG.450C


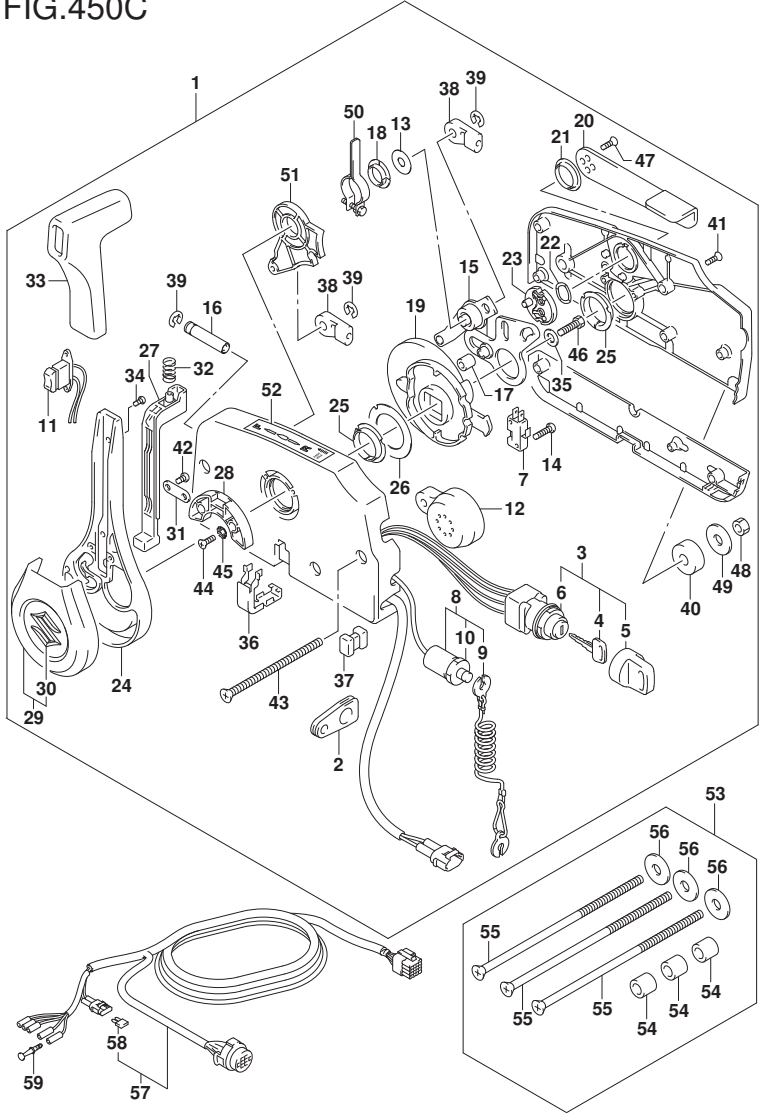


FIG.450C (1-K-4) REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J61	REMOTE CONTROL ASSY	1	
2	36628-92E01	..GROMMET, WIRING HARNESS	1	
3	37110-93J12	..SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E01	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37721-93J91	..SWITCH ASSY, NEUTRAL	1	
8	37820-93J11	..SWITCH ASSY, EMERGENCY	1	
9	37823-92E02	..PLATE ASSY, EMERGENCY SW	1	
		LOCK		
10	37826-92J10	..NUT	1	
11	37850-96L00	..SWITCH ASSY, PTT	1	
12	38500-93J90	..BUZZER, WARNING	1	
13	67212-95600	..WASHER	1	
14	67296-92E11	..SCREW, NEUTRAL SWITCH	2	
15	67220-95630	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	
17	67229-95600	..ROLLER	1	
18	67232-95600	..BUSH	1	
19	67238-87D00	..GEAR, DRIVE	1	
20	67241-99E11	..LEVER, FREE THROTTLE	1	

NOTE : (DF9.9BT,DF15AT,DF20AT):(020,021)

FIG.450C

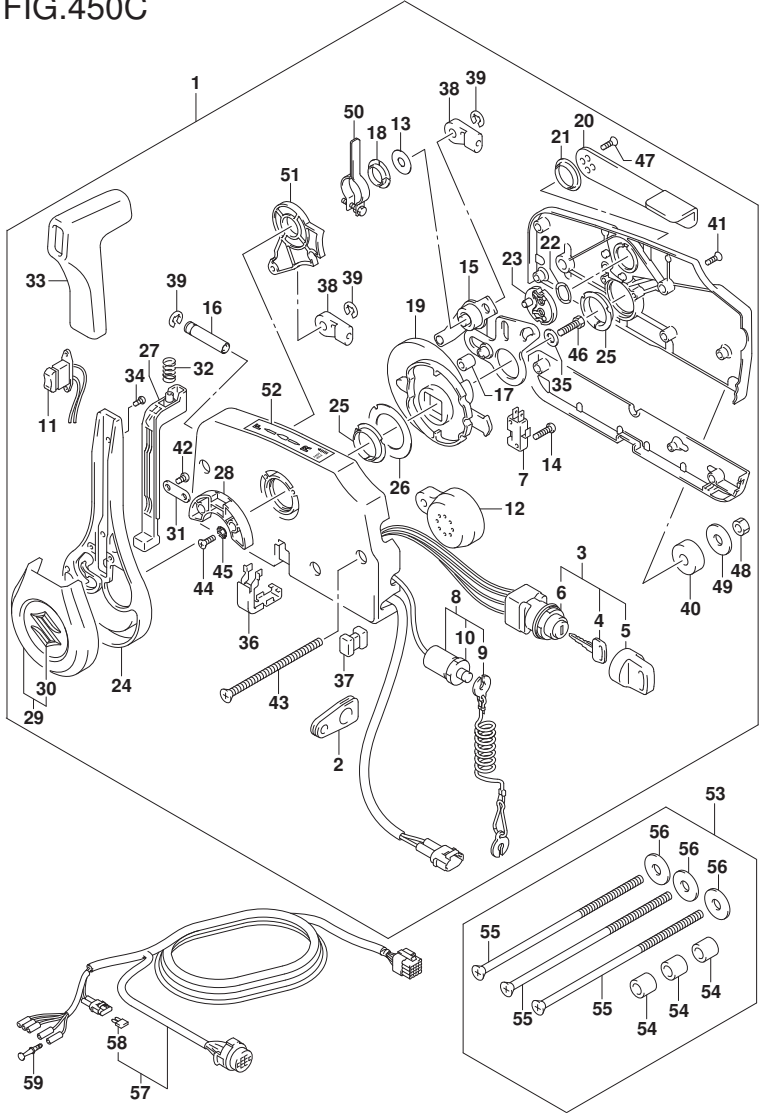

DF20A_P01_022_450C
REMOTE CONTROL

FIG.450C (1-K-5) REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	67243-95600	.BUSH	1	
22	67244-95600	.WAVE WASHER	1	
23	67245-95600	.DRUM, FREE THROTTLE	1	
24	67251-96L00	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-96L00	.NEUTRAL LOCK ARM	1	
28	67256-95600	.HOLDER, NEUTRAL LOCK	1	
29	67257-96L00	.CAP ASSY, LEVER	1	
30	77811-54GB0-0PG	.EMBLEM, RR MARK S (CHROME)	1	
31	67258-99E00	.BRACKET	1	
32	67259-87D00	.SPRING, NEUTRAL ARM	1	
33	67261-96L00	.GRIP	1	
34	67296-96L10	.SCREW	2	
35	67264-95600	.WASHER	1	
36	67267-96L00	.COVER, WIRE SUB ASSY	1	
37	67273-95601	.SPACER	1	
38	67275-95600	.END, CABLE	2	
39	67292-94300	.E RING	3	
40	67294-95600	.SPACER	3	
41	67296-90J20	.SCREW	5	
42	67296-96L00	.SCREW	2	
43	67296-95630	.SCREW	3	
44	67296-95610	.SCREW	2	
45	67297-95600	.WASHER	2	
46	09100-08232	.BOLT (8X30)	1	
47	67269-96L10	.SCREW	2	
48	09140-06020	.NUT	3	
49	67288-94320	.WASHER	3	
50	67224-96L00	.ARM, BRAKE ASSY	1	
51	67238-96L00	.GEAR, SHIFT ASSY	1	
52	67284-94L10	.MARK, HANDLE LEVER	1	

NOTE : (DF9.9BT,DF15AT,DF20AT):(020,021)

FIG.450C

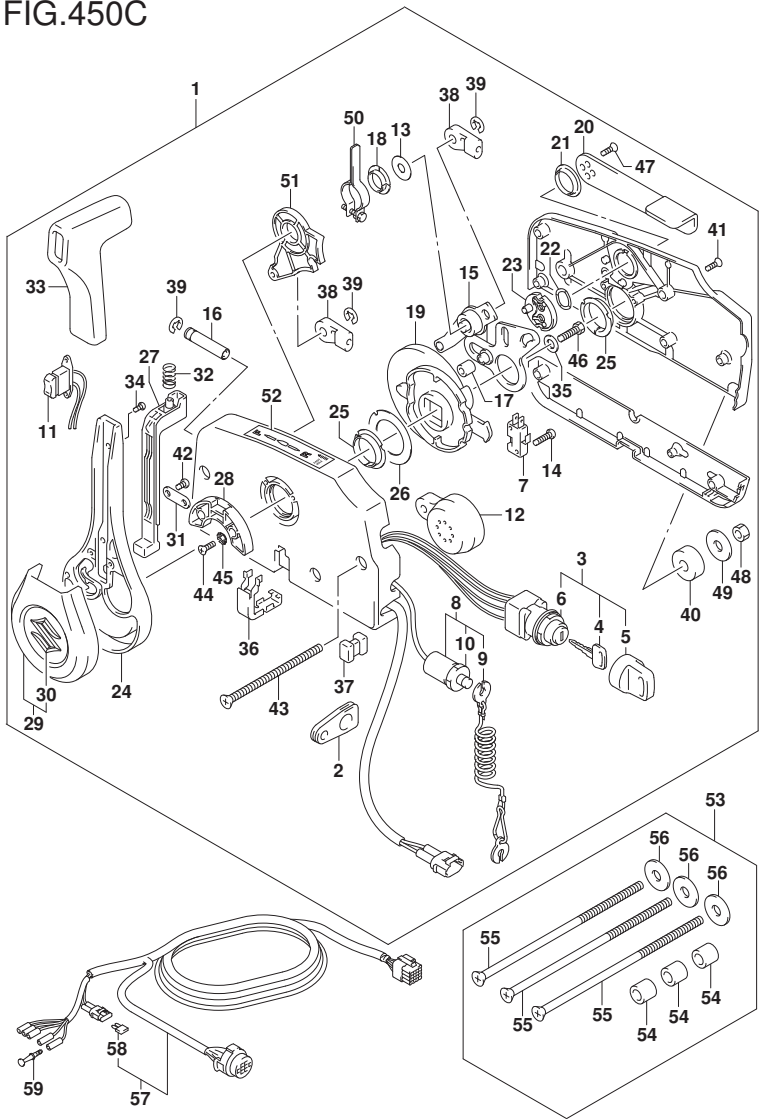


FIG.450C (1-K-6) REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
53	67140-95601	KIT, R/CON	1	
54	09180-06105	.SPACER (6.1X10X14)	3	
55	67296-95640	.SCREW	3	
56	67288-94320	.WASHER	3	
57	36620-89L00	WIRE ASSY, REMOTE CONTROL	1	
58	09481-10501	.FUSE (10A)	1	
59	36615-96300	TERMINAL	5	

NOTE : (DF9.9BT,DF15AT,DF20AT):(020,021)

FIG.450D

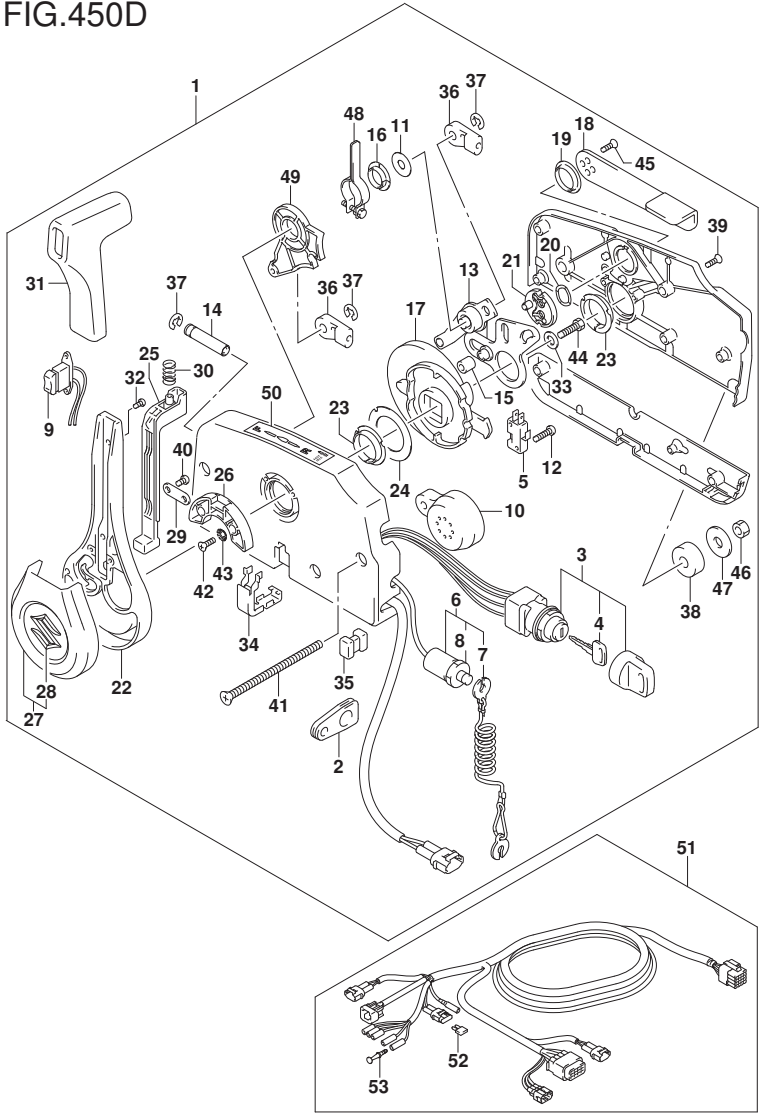


FIG.450D (1-K-7) REMOTE CONTROL ((DF9.9BT,DF15AT,DF20AT):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-93J70	REMOTE CONTROL ASSY	1	
2	36628-92E01	.GROMMET, WIRING HARNESS	1	
3	37110-93J20	.SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37721-93J91	.SWITCH ASSY, NEUTRAL	1	
6	37820-93J11	.SWITCH ASSY, EMERGENCY	1	
7	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
8	37826-92J10	..NUT	1	
9	37850-96L00	.SWITCH ASSY, PTT	1	
10	38500-93J90	.BUZZER, WARNING	1	
11	67212-95600	.WASHER	1	
12	67296-92E11	.SCREW, NEUTRAL SWITCH	2	
13	67220-95630	.PLATE ASSY	1	
14	67223-99E10	.KNOB, BRAKE ADJUST	1	
15	67229-95600	.ROLLER	1	
16	67232-95600	.BUSH	1	
17	67238-87D00	.GEAR, DRIVE	1	
18	67241-99E11	.LEVER, FREE THROTTLE	1	
19	67243-95600	.BUSH	1	
20	67244-95600	.WAVE WASHER	1	
21	67245-95600	.DRUM, FREE THROTTLE	1	
22	67251-96L00	.LEVER, HANDLE	1	
23	67252-95600	.BUSH	2	
24	67253-95600	.WASHER	1	

FIG.450D

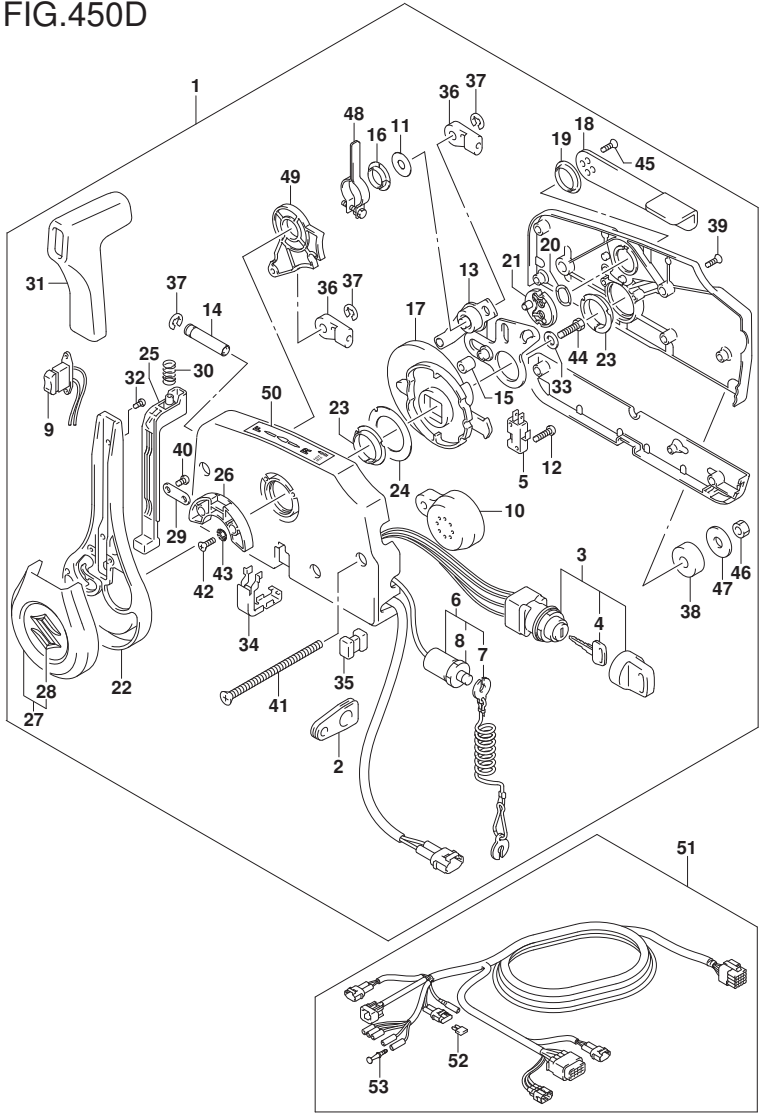


FIG.450D (1-K-8) REMOTE CONTROL ((DF9.9BT,DF15AT,DF20AT):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	67255-96L00	.NEUTRAL LOCK ARM	1	
26	67256-95600	.HOLDER, NEUTRAL LOCK	1	
27	67257-96L00	.CAP ASSY, LEVER	1	
28	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
29	67258-99E00	.BRACKET	1	
30	67259-87D00	.SPRING, NEUTRAL ARM	1	
31	67261-96L00	.GRIP	1	
32	67296-96L10	.SCREW	2	
33	67264-95600	.WASHER	1	
34	67267-96L00	.COVER, WIRE SUB ASSY	1	
35	67273-95601	.SPACER	1	
36	67275-95600	.END, CABLE	2	
37	67292-94300	.E RING	3	
38	67294-95600	.SPACER	3	
39	67296-90J20	.SCREW	5	
40	67296-96L00	.SCREW	2	
41	67296-95630	.SCREW	3	
42	67296-95610	.SCREW	2	
43	67297-95600	.WASHER	2	
44	09100-08232	.BOLT (8X30)	1	
45	67269-96L10	.SCREW	2	
46	09140-06020	.NUT	3	
47	67288-94320	.WASHER	3	
48	67224-96L00	.ARM, BRAKE ASSY	1	
49	67238-96L00	.GEAR, SHIFT ASSY	1	
50	67284-94L10	.MARK, HANDLE LEVER	1	
51	36620-89L10	WIRE ASSY, REMOTE CONTROL	1	
52	09481-10501	.FUSE (10A)	1	
53	36615-96300	.TERMINAL	5	

FIG.501A

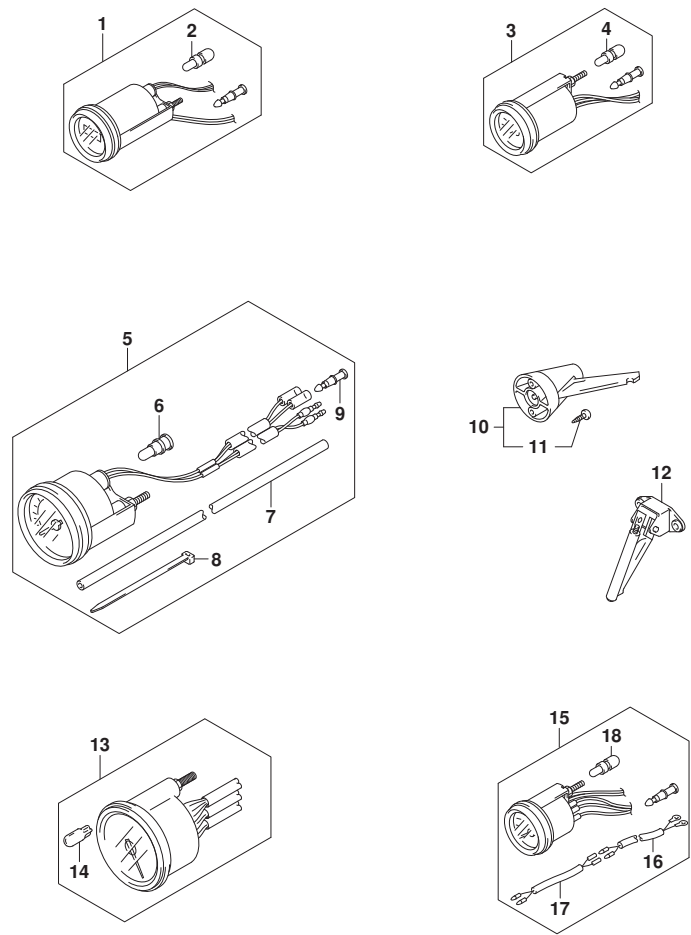


FIG.501A (1-K-9) OPT:METER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34500-93J02	METER ASSY, HOUR	1	BLACK
1-2	34500-93J13	METER ASSY, HOUR	1	WHITE
2	09471-12103	.BULB (12V3W,T6.5)	1	
3-1	34600-93J02	METER ASSY, VOLTAGE	1	BLACK
3-2	34600-93J13	METER ASSY, VOLTAGE	1	WHITE
4	09471-12103	.BULB (12V3W,T6.5)	1	
5-1	34100-93J22	SPEEDOMETER ASSY (MAX 80KM/H)	1	MAX 80KM/H BLACK
5-2	34100-93J33	SPEEDOMETER ASSY (MAX 80KM/H)	1	MAX 80KM/H WHITE
5-3	34100-93J42	SPEEDOMETER ASSY (MAX 45KNOTS)	1	MAX 45KNOTS BLACK
5-4	34100-93J53	SPEEDOMETER ASSY (MAX 45KNOTS)	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL	2	
10	34190-95500	SENDER, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER, SPEEDOMETER	1	
13-1	34200-93J22	TACHOMETER ASSY, BLACK	1	BLACK
13-2	34200-93J34	TACHOMETER ASSY, WHITE	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34300-93J03	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J14	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E01	.LEAD ASSY, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V3W,T6.5)	1	

NOTE : (DF9.9BR,DF9.9BT,DF 15AR,DF 15AT,DF20AR,DF20AT):(020,021)

FIG.501B

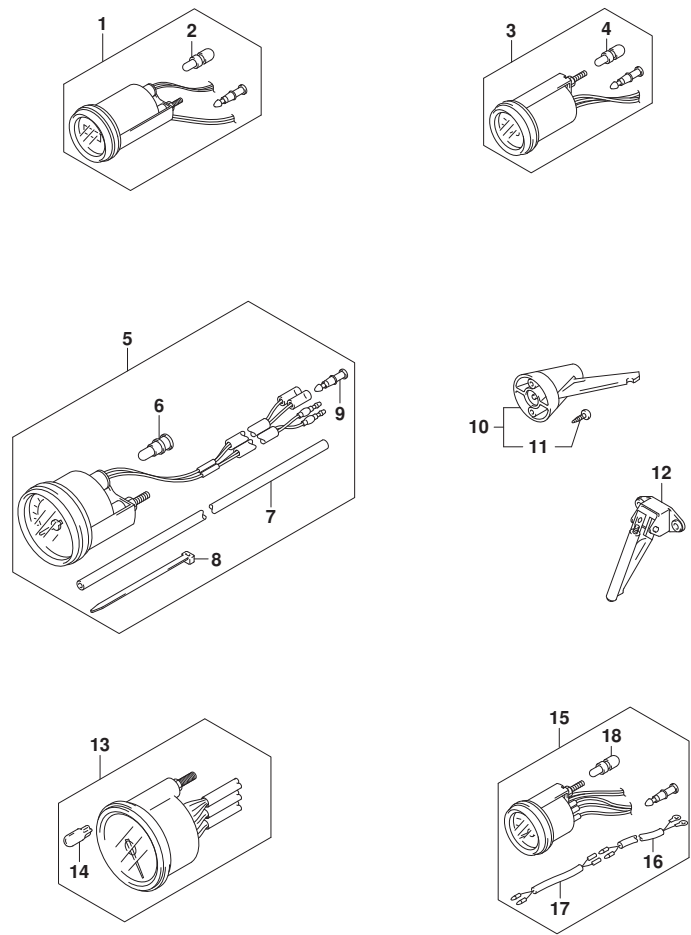


FIG.501B (1-K-10) OPT:METER (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34500-93J02	METER ASSY, HOUR	1	BLACK
1-2	34500-93J13	METER ASSY, HOUR	1	WHITE
2	09471-12103	.BULB (12V3W,T6.5)	1	
3-1	34600-93J02	METER ASSY, VOLTAGE	1	BLACK
3-2	34600-93J13	METER ASSY, VOLTAGE	1	WHITE
4	09471-12103	.BULB (12V3W,T6.5)	1	
5-1	34100-93J22	SPEEDOMETER ASSY (MAX 80KM/H)	1	MAX 80KM/H BLACK
5-2	34100-93J33	SPEEDOMETER ASSY (MAX 80KM/H)	1	MAX 80KM/H WHITE
5-3	34100-93J42	SPEEDOMETER ASSY (MAX 45KNOTS)	1	MAX 45KNOTS BLACK
5-4	34100-93J53	SPEEDOMETER ASSY (MAX 45KNOTS)	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL	2	
10	34190-95500	SENDER, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER, SPEEDOMETER	1	
13-1	34200-93J22	TACHOMETER ASSY, BLACK	1	BLACK
13-2	34200-93J34	TACHOMETER ASSY, WHITE	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34300-93J03	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J14	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E01	.LEAD ASSY, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V3W,T6.5)	1	

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT,DF20A,DF20AR,DF20AT):022

FIG.508A

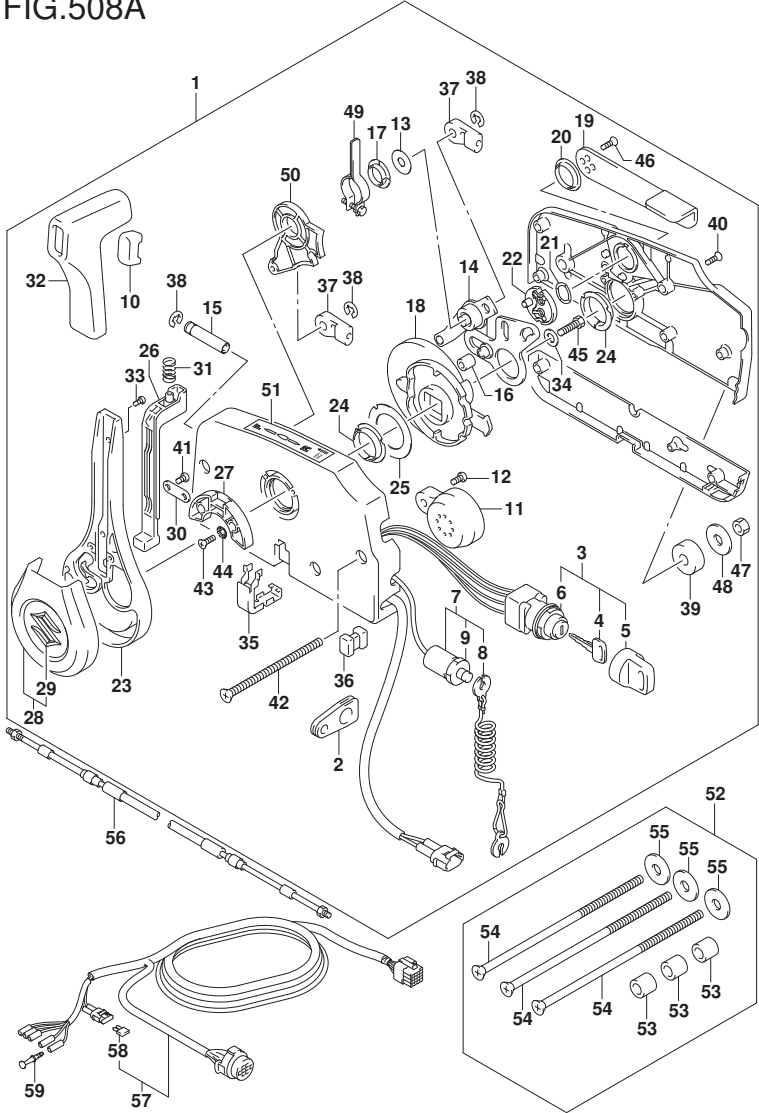


FIG.508A (1-K-11) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J31	REMOTE CONTROL ASSY	1	
2	36628-91J00	..GROMMET, WIRING HARNESS	1	
3	37110-94J03	..SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37143-99E01	..CAP, KEY	2	
6	37149-93J00	..CAP, CYLINDER BODY	1	
7	37820-93J11	..SWITCH ASSY, EMERGENCY	1	
8	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
9	37826-92J10	..NUT	1	
10	67263-88L30	..CAP, GRIP SW HOLE	1	
11	38500-93J00	..BUZZER ASSY, WARNING	1	
12	67214-92E00	..SCREW (5X20)	1	
13	67212-95600	..WASHER	1	
14	67220-95630	..PLATE ASSY	1	
15	67223-99E10	..KNOB, BRAKE ADJUST	1	
16	67229-95600	..ROLLER	1	
17	67232-95600	..BUSH	1	
18	67238-87D00	..GEAR, DRIVE	1	
19	67241-99E11	..LEVER, FREE THROTTLE	1	
20	67243-95600	..BUSH	1	

NOTE : (DF9.9B,DF15A,DF20A):(020,021)

FIG.508A


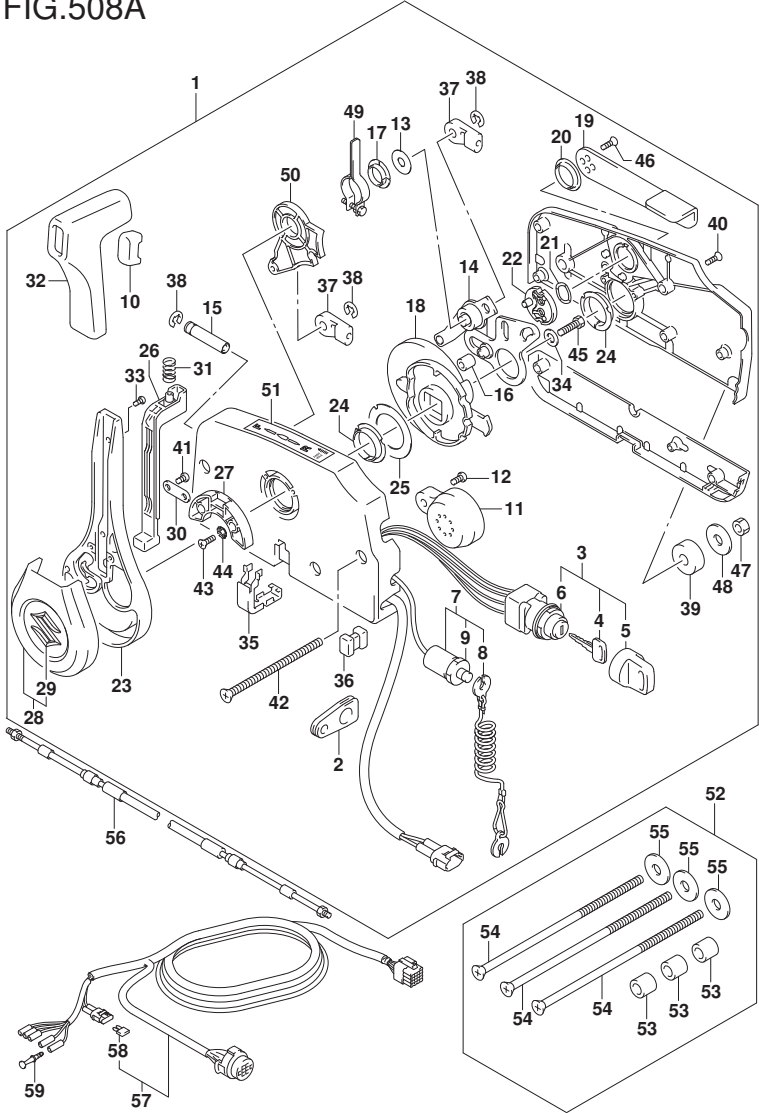


FIG.508A (1-K-12) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	67244-95600	.WAVE WASHER	1	
22	67245-95600	.DRUM, FREE THROTTLE	1	
23	67251-96L00	.LEVER, HANDLE	1	
24	67252-95600	.BUSH	2	
25	67253-95600	.WASHER	1	
26	67255-96L00	.NEUTRAL LOCK ARM	1	
27	67256-95600	.HOLDER, NEUTRAL LOCK	1	
28	67257-96L00	.CAP ASSY, LEVER	1	
29	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-96L00	.GRIP	1	
33	67296-96L10	.SCREW	2	
34	67264-95600	.WASHER	1	
35	67267-96L00	.COVER, WIRE SUB ASSY	1	
36	67273-95601	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67292-94300	.E RING	3	
39	67294-95600	.SPACER	3	
40	67296-90J20	.SCREW	5	
41	67296-96L00	.SCREW	2	
42	67296-95630	.SCREW	3	
43	67296-95610	.SCREW	2	
44	67297-95600	.WASHER	2	
45	09100-08232	.BOLT (8X30)	1	
46	67269-96L10	.SCREW	2	
47	09140-06020	.NUT	3	
48	67288-94320	.WASHER	3	
49	67224-96L00	.ARM, BRAKE ASSY	1	
50	67238-96L00	.GEAR, SHIFT ASSY	1	
51	67284-94L10	.MARK, HANDLE LEVER	1	
52	67140-95601	KIT, R/CON	1	

NOTE : (DF9.9B,DF15A,DF20A):(020,021)

FIG.508A

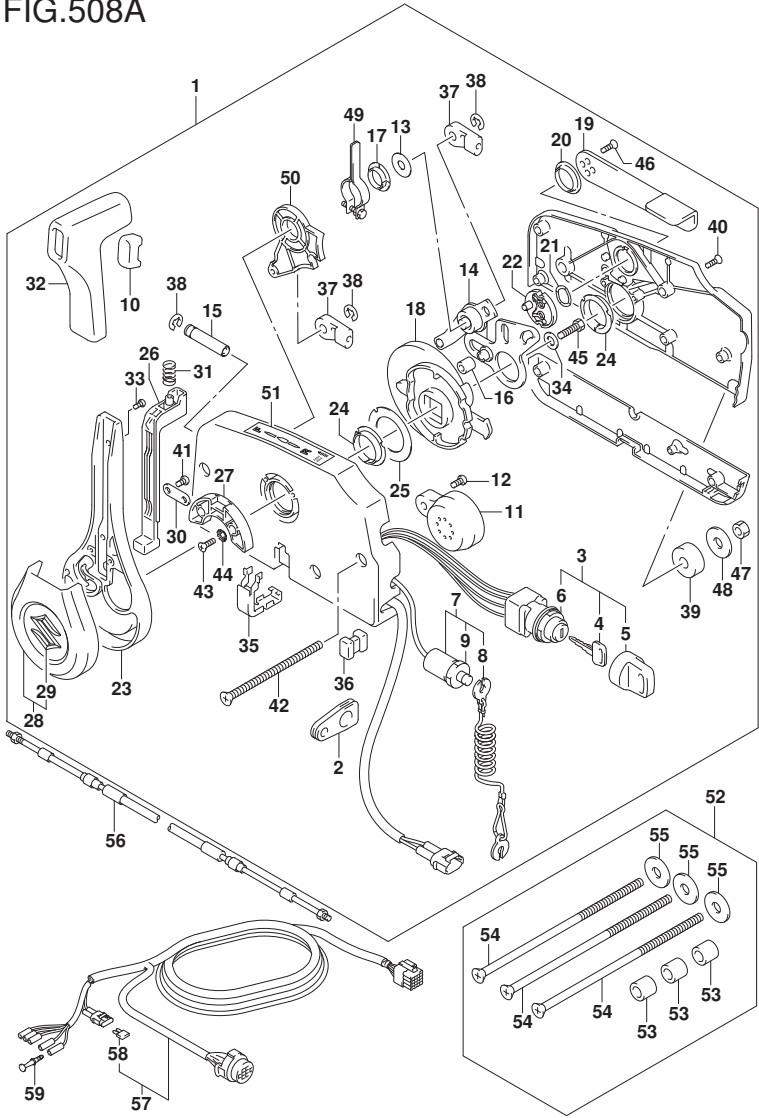

DF20A_P01_022_508A
OPT:REMOTE CONTROL

FIG.508A (1-K-13) OPT:REMOTE CONTROL (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
53	09180-06105	.SPACER (6.1X10X14)	3	
54	67296-95640	.SCREW	3	
55	67288-94320	.WASHER	3	
56-1	67320-93J00	CABLE ASSY, REMOCON (2.4M)	1	
56-2	67320-93J10	CABLE ASSY, REMOCON (3.1M)	1	
56-3	67320-93J20	CABLE ASSY, REMOCON (3.7M)	1	
56-4	67320-93J30	CABLE ASSY, REMOCON (4.2M)	1	
56-5	67320-93J40	CABLE ASSY, REMOCON (4.8M)	1	
56-6	67320-93J50	CABLE ASSY, REMOCON (5.4M)	1	
56-7	67320-93J60	CABLE ASSY, REMOCON (6.1M)	1	
56-8	67320-93J70	CABLE ASSY, REMOCON (6.7M)	1	
56-9	67320-93J80	CABLE ASSY, REMOCON (7.3M)	1	
57	36620-89L00	WIRE ASSY, REMOTE CONTROL	1	
58	09481-10501	.FUSE (10A)	1	
59	36615-96300	TERMINAL	5	

NOTE : (DF9.9B,DF15A,DF20A):(020,021)

FIG.508B

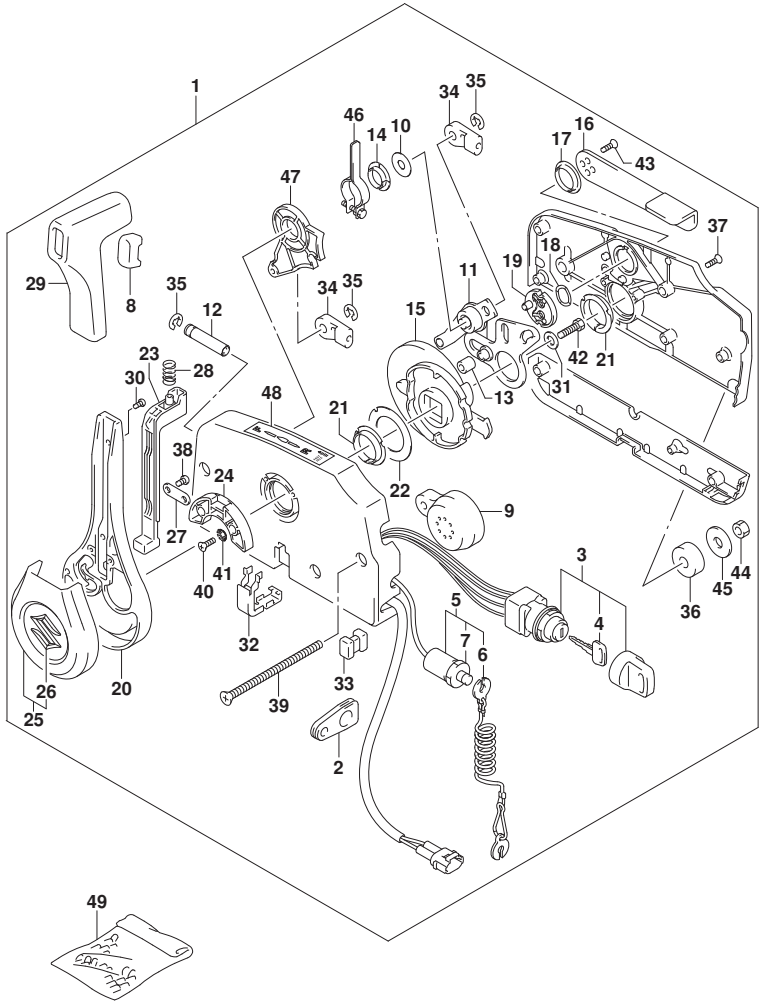


FIG.508B (1-K-14) OPT:REMOTE CONTROL ((DF9.9B,DF15A,DF20A):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-94J40	REMOTE CONTROL ASSY	1	
2	36628-91J00	..GROMMET, WIRING HARNESS	1	
3	37110-94J10	..SWITCH ASSY, IGNITION	1	
4-1	37141-99E00	..KEY (931)	2	
4-2	37141-99E10	..KEY (932)	2	
4-3	37141-99E20	..KEY (933)	2	
4-4	37141-99E30	..KEY (934)	2	
4-5	37141-99E40	..KEY (935)	2	
4-6	37141-99E50	..KEY (936)	2	
4-7	37141-99E60	..KEY (937)	2	
4-8	37141-99E70	..KEY (938)	2	
4-9	37141-99E80	..KEY (939)	2	
4-10	37141-99E90	..KEY (940)	2	
4-11	37141-99EA0	..KEY (941)	2	
4-12	37141-99EB0	..KEY (942)	2	
5	37820-93J11	..SWITCH ASSY, EMERGENCY	1	
6	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
7	37826-92J10	..NUT	1	
8	67263-88L30	..CAP, GRIP SW HOLE	1	
9	38500-93J90	..BUZZER, WARNING	1	
10	67212-95600	..WASHER	1	
11	67220-95630	..PLATE ASSY	1	
12	67223-99E10	..KNOB, BRAKE ADJUST	1	
13	67229-95600	..ROLLER	1	
14	67232-95600	..BUSH	1	
15	67238-87D00	..GEAR, DRIVE	1	
16	67241-99E11	..LEVER, FREE THROTTLE	1	
17	67243-95600	..BUSH	1	
18	67244-95600	..WAVE WASHER	1	
19	67245-95600	..DRUM, FREE THROTTLE	1	
20	67251-96L00	..LEVER, HANDLE	1	
21	67252-95600	..BUSH	2	
22	67253-95600	..WASHER	1	
23	67255-96L00	..NEUTRAL LOCK ARM	1	
24	67256-95600	..HOLDER, NEUTRAL LOCK	1	

FIG.508B

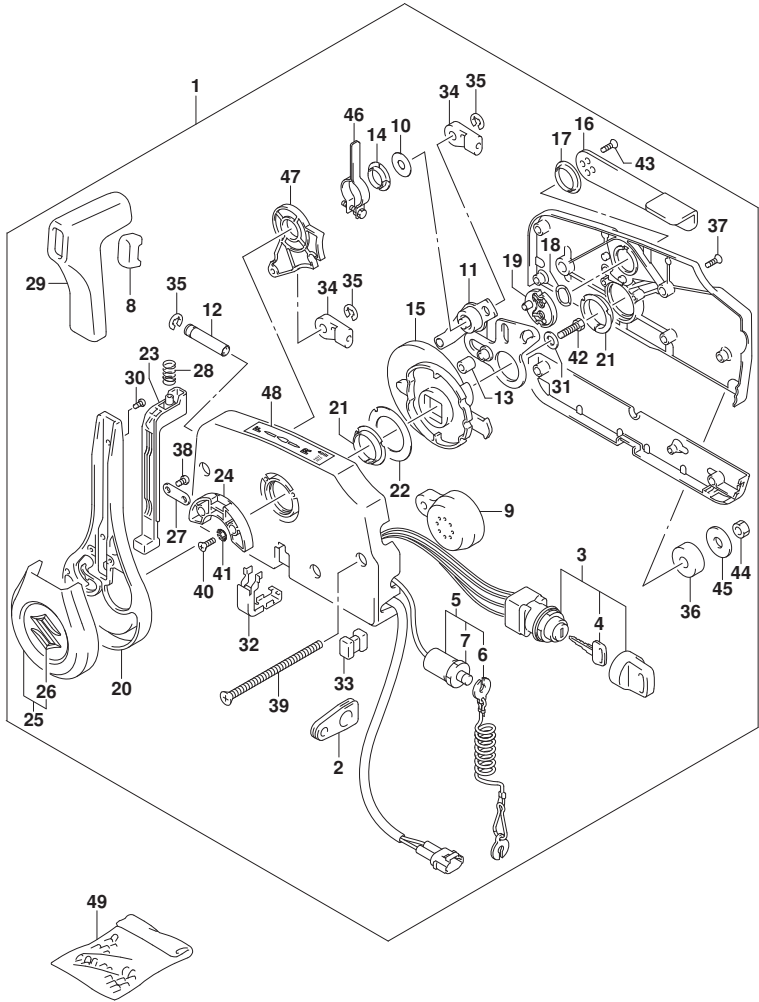


FIG.508B (1-K-15) OPT:REMOTE CONTROL ((DF9.9B,DF15A,DF20A):022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
25	67257-96L00	.CAP ASSY, LEVER	1	
26	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
27	67258-99E00	.BRACKET	1	
28	67259-87D00	.SPRING, NEUTRAL ARM	1	
29	67261-96L00	.GRIP	1	
30	67296-96L10	.SCREW	2	
31	67264-95600	.WASHER	1	
32	67267-96L00	.COVER, WIRE SUB ASSY	1	
33	67273-95601	.SPACER	1	
34	67275-95600	.END, CABLE	2	
35	67292-94300	.E RING	3	
36	67294-95600	.SPACER	3	
37	67296-90J20	.SCREW	5	
38	67296-96L00	.SCREW	2	
39	67296-95630	.SCREW	3	
40	67296-95610	.SCREW	2	
41	67297-95600	.WASHER	2	
42	09100-08232	.BOLT (8X30)	1	
43	67269-96L10	.SCREW	2	
44	09140-06020	.NUT	3	
45	67288-94320	.WASHER	3	
46	67224-96L00	.ARM, BRAKE ASSY	1	
47	67238-96L00	.GEAR, SHIFT ASSY	1	
48	67284-94L10	.MARK, HANDLE LEVER	1	
49	36990-87D00	TERMINAL & SLEEVE SET	1	

FIG.513A

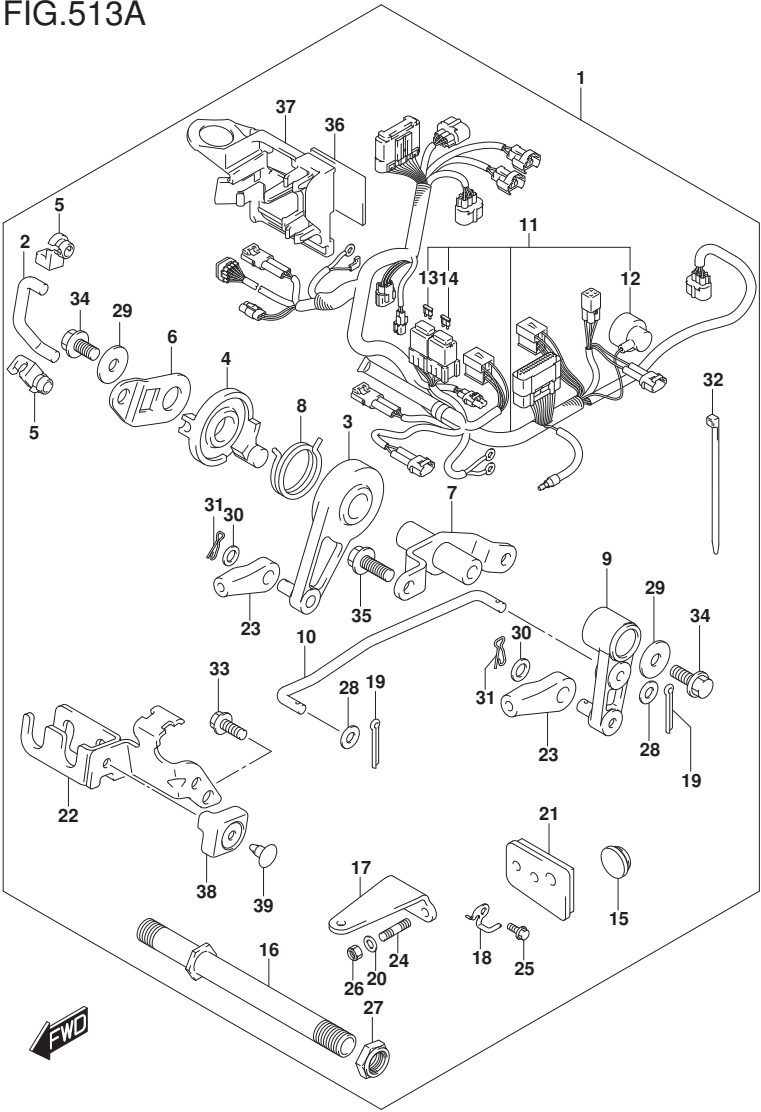


FIG.513A (1-L-2) OPT:REMOTE CONTROL PARTS (DF9.9B,DF15A,DF20A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-89L22	PARTS SET, R/CON	1	
2	13513-89L10	.ROD, THROTTLE	1	
3	19120-99J11	.LEVER, THROTTLE CONTROL	1	
4	19122-99J00	.LEVER, INTERLINK THROTTLE	1	
5	19131-89L00	NO.2 .CONNECTOR	2	
6	19148-89L10	NO.1 .LEVER, INTERLINK THROTTLE	1	
7	19150-89L00	.BRACKET, THROTTLE LEVER	1	
8	19185-99J00	.SPRING, THROTTLE LEVER	1	
9	21110-89L10	.LEVER, CLUTCH	1	
10	23115-89L10	.LINK, CLUTCH LEVER	1	
11	36610-89LH0	.HARNES ASSY, WIRING	1	
12	36618-43410	..CAP, OIL PRESSURE SWITCH	1	
13	09481-10501	..FUSE (10A)	1	
14	09481-30501	..FUSE (30A)	1	
15	37163-89L00	.PLUG, STARTING SWITCH HOLE	1	
16	41130-89L00	.SHAFT, CLAMP BRACKET	1	
17	43755-99J01	.ATTACHMENT, STEERING BRACKET	1	
18	43759-89L00	.HOLDER, DRAIN HOSE	1	
19	09204-01002	.PIN	2	
20	09160-08082	.WASHER (8.5X16X1.2)	2	
21	61124-89L50	.GROMMET, R/CON CABLE	1	
22	67340-89L10	.HOLDER, R/CON CABLE	1	
23	67467-89J01	.CONNECTOR	2	
24	09108-08286	.STUD BOLT	2	
25	09116-06225	.BOLT (6X16)	1	
26	09159-08059	.NUT	2	
27	09159-22006	.NUT	1	
28	09160-05029	.WASHER (5.5X12X0.8)	2	
29	09160-06046	.WASHER (6.5X20X1.5)	2	
30	09160-06055	.WASHER (7X12X1.0)	2	
31	09385-06012	.CLIP	2	
32	09407-14407	.CLAMP (L:145)	13	
33	01547-06167	.BOLT	2	
34	01550-06127	.BOLT	2	

FIG.513A

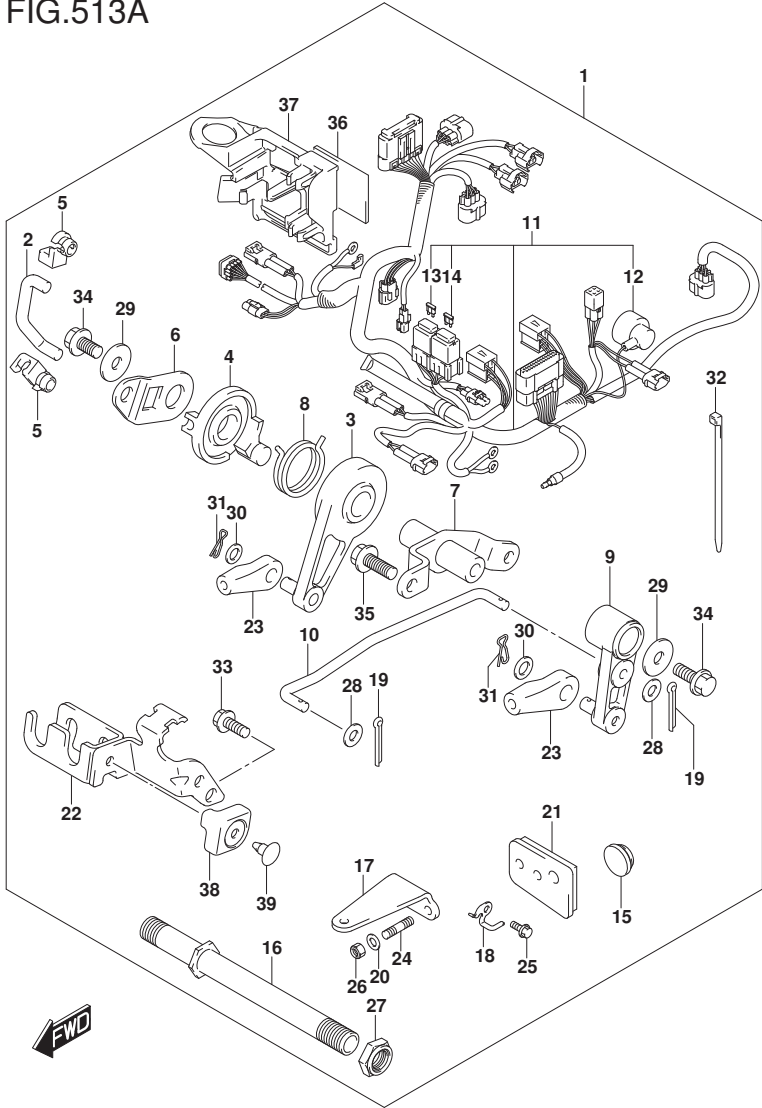


FIG.513A (1-L-3) OPT:REMOTE CONTROL PARTS (DF9.9B,DF15A,DF20A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01550-06167	.BOLT	2	
36	32851-93J00	.CUSHION, LEAD WIRE	1	
37	36616-89L30	.HOLDER, CONNECTOR	1	
38	67345-89L10	.PROTECTOR, R/CON CABLE HOLDER	1	
39	09409-10304-5ES	.CLIP (4.7X11) (BLACK)	1	

FIG.515A

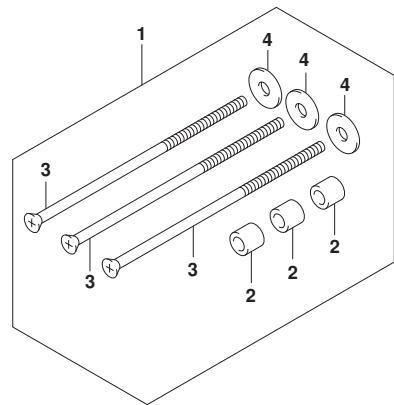


FIG.515A (1-L-4) OPT:REMOCON CABLE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67140-95601	KIT, R/CON	1	
2	09180-06105	.SPACER (6.1X10X14)	3	
3	67296-95640	.SCREW	3	
4	67288-94320	.WASHER	3	
5-1	67320-93J00	CABLE ASSY, REMOCON (2.4M)	1	
5-2	67320-93J10	CABLE ASSY, REMOCON (3.1M)	1	
5-3	67320-93J20	CABLE ASSY, REMOCON (3.7M)	1	
5-4	67320-93J30	CABLE ASSY, REMOCON (4.2M)	1	
5-5	67320-93J40	CABLE ASSY, REMOCON (4.8M)	1	
5-6	67320-93J50	CABLE ASSY, REMOCON (5.4M)	1	
5-7	67320-93J60	CABLE ASSY, REMOCON (6.1M)	1	
5-8	67320-93J70	CABLE ASSY, REMOCON (6.7M)	1	
5-9	67320-93J80	CABLE ASSY, REMOCON (7.3M)	1	

NOTE : DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT

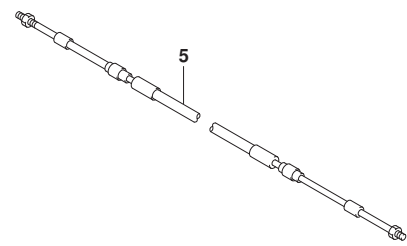


FIG.515B

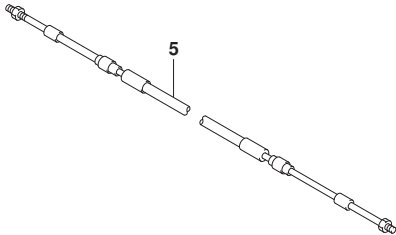
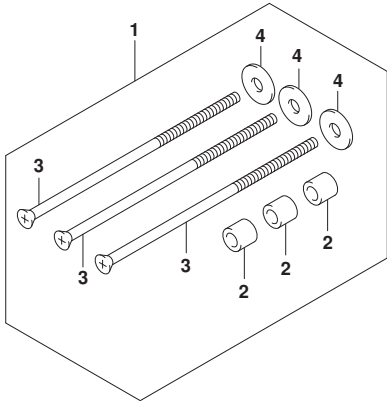


FIG.515B (1-L-5) OPT:REMOCON CABLE (DF20A,DF20AR,DF20AT)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67140-95601	KIT, R/CON	1	
2	09180-06105	.SPACER (6.1X10X14)	3	
3	67296-95640	.SCREW	3	
4	67288-94320	.WASHER	3	
5-1	67320-93J00	CABLE ASSY, REMOCON (2.4M)	1	
5-2	67320-93J10	CABLE ASSY, REMOCON (3.1M)	1	
5-3	67320-93J20	CABLE ASSY, REMOCON (3.7M)	1	
5-4	67320-93J30	CABLE ASSY, REMOCON (4.2M)	1	
5-5	67320-93J40	CABLE ASSY, REMOCON (4.8M)	1	
5-6	67320-93J50	CABLE ASSY, REMOCON (5.4M)	1	
5-7	67320-93J60	CABLE ASSY, REMOCON (6.1M)	1	
5-8	67320-93J70	CABLE ASSY, REMOCON (6.7M)	1	
5-9	67320-93J80	CABLE ASSY, REMOCON (7.3M)	1	

FIG.521A

FIG.521A (1-L-6) OPT:HARNESS ((DF9.9BTH,DF20ATH):(020,021))

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36990-87D00	TERMINAL & SLEEVE SET	1	

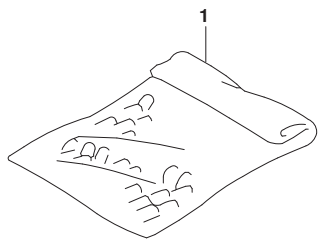


FIG.521B

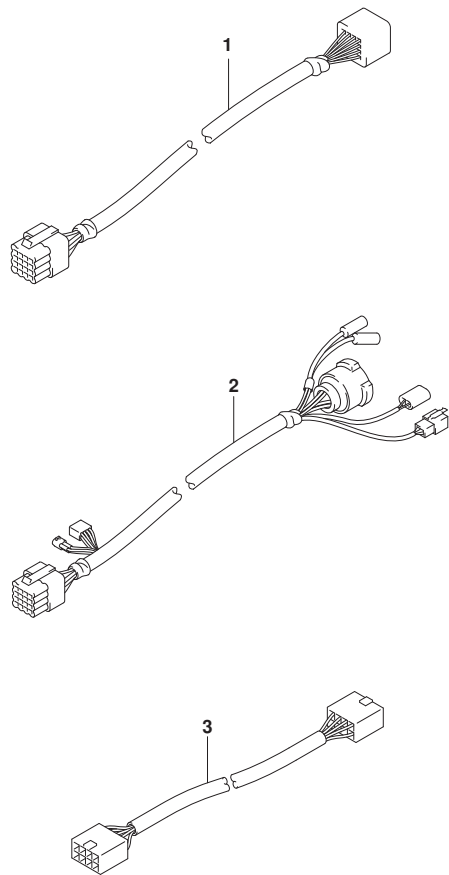


FIG.521B (1-L-7) OPT:HARNESS (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36620-93J12	WIRE ASSY, REMOCON EXT (L:2000)	1	
1-2	36620-93J42	WIRE ASSY, REMOCON EXT (L:3000)	1	
2	36621-93J00	WIRE, R/CON ADAPTER	1	
3	36667-96L20	WIRE, GAUGE EXT	1	

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT,
DF20A,DF20AR,DF20AT):022

FIG.530A


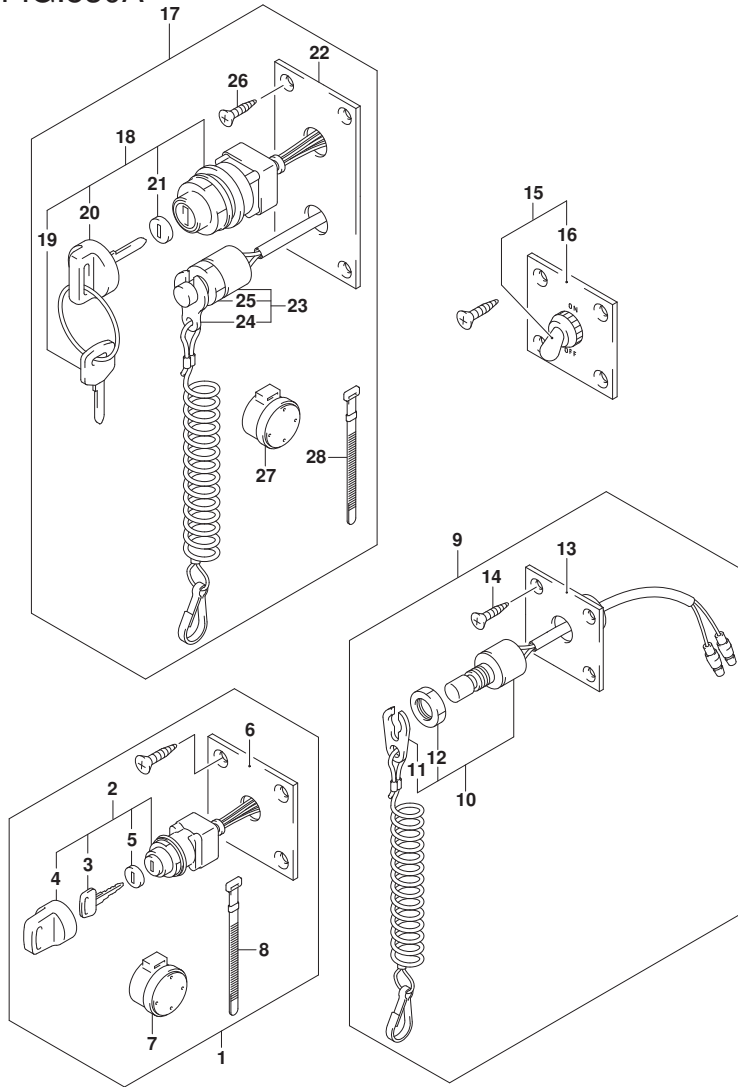


FIG.530A (1-L-8) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-96J01	PANEL ASSY, IGNITION SWITCH	1	
2	37110-93J02	..SWITCH ASSY, IGNITION	1	
3-1	37141-99E00	..KEY (931)	2	
3-2	37141-99E10	..KEY (932)	2	
3-3	37141-99E20	..KEY (933)	2	
3-4	37141-99E30	..KEY (934)	2	
3-5	37141-99E40	..KEY (935)	2	
3-6	37141-99E50	..KEY (936)	2	
3-7	37141-99E60	..KEY (937)	2	
3-8	37141-99E70	..KEY (938)	2	
3-9	37141-99E80	..KEY (939)	2	
3-10	37141-99E90	..KEY (940)	2	
3-11	37141-99EA0	..KEY (941)	2	
3-12	37141-99EB0	..KEY (942)	2	
4	37143-99E01	..CAP, KEY	1	
5	37149-93J00	..CAP, CYLINDER BODY	1	
6	37139-99E00	..PANEL, IGNITION SW	1	
7	38500-93J90	..BUZZER, WARNING	1	
8	09407-08401	..CLAMP (L:80)	1	
9	37803-93J06	PANEL ASSY, EMERGENCY SW	1	
10	37820-93J11	..SWITCH ASSY, EMERGENCY	1	
11	37823-92E02	..PLATE ASSY, EMERGENCY SW	1	
		LOCK		
12	37826-92J10	..NUT	1	
13	37825-99E10	..PANEL, EMERGENCY STOP SW	1	
14	03122-05165	..SCREW	4	
15	37210-93J00	PANEL ASSY, LIGHTING SW	1	
16	37212-93J00	..PANEL, LIGHTING SW	1	
17	37100-96J27	PANEL ASSY, ENGINE SWITCH	1	
18	37110-93J02	..SWITCH ASSY, IGNITION	1	

NOTE : (DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT):(020,021)

FIG.530A

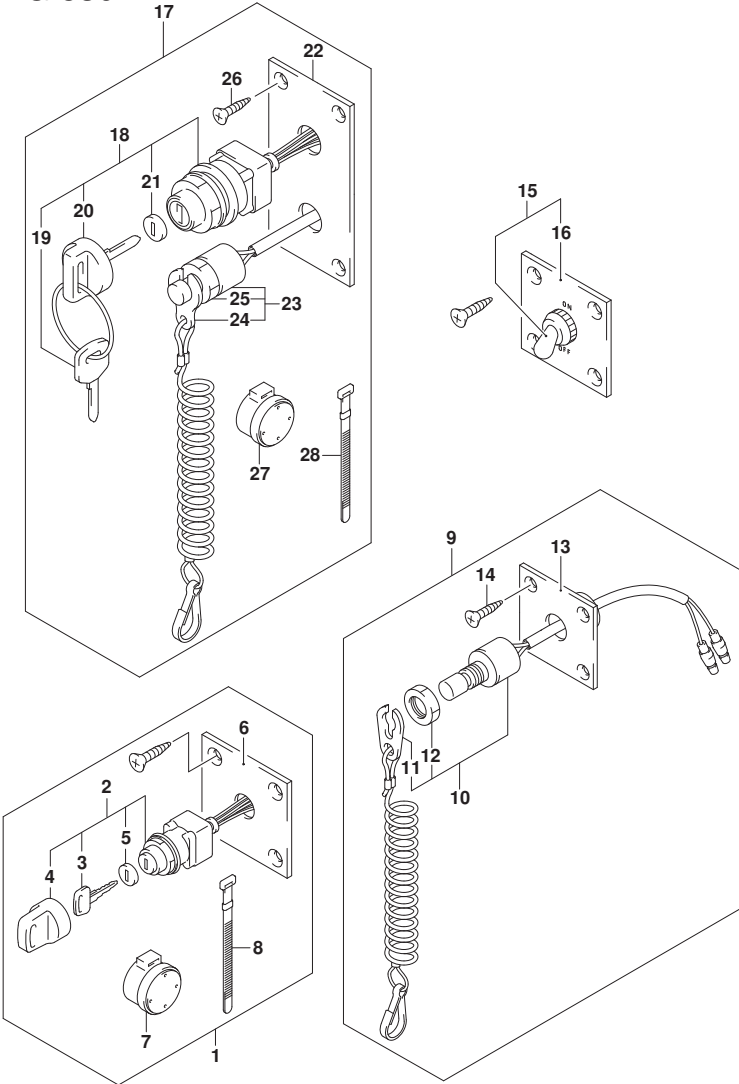

DF20A_P01_022_530A
OPT:SWITCH

FIG.530A (1-L-9) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19-1	37141-99E00	..KEY (931)	2	
19-2	37141-99E10	..KEY (932)	2	
19-3	37141-99E20	..KEY (933)	2	
19-4	37141-99E30	..KEY (934)	2	
19-5	37141-99E40	..KEY (935)	2	
19-6	37141-99E50	..KEY (936)	2	
19-7	37141-99E60	..KEY (937)	2	
19-8	37141-99E70	..KEY (938)	2	
19-9	37141-99E80	..KEY (939)	2	
19-10	37141-99E90	..KEY (940)	2	
19-11	37141-99EA0	..KEY (941)	2	
19-12	37141-99EB0	..KEY (942)	2	
20	37143-99E01	..CAP, KEY	1	
21	37149-93J00	..CAP, CYLINDER BODY	1	
22	37139-99E40	..PANEL, IGNITION SWITCH	1	
23	37820-93J11	..SWITCH ASSY, EMERGENCY	1	
24	37823-92E02	..PLATE ASSY, EMERGENCY SW LOCK	1	
25	37826-92J10	..NUT	1	
26	03121-0516A	..SCREW	4	
27	38500-93J90	..BUZZER, WARNING	1	
28	09407-08401	..CLAMP (L:80)	1	

NOTE : (DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT):(020,021)

FIG.530B

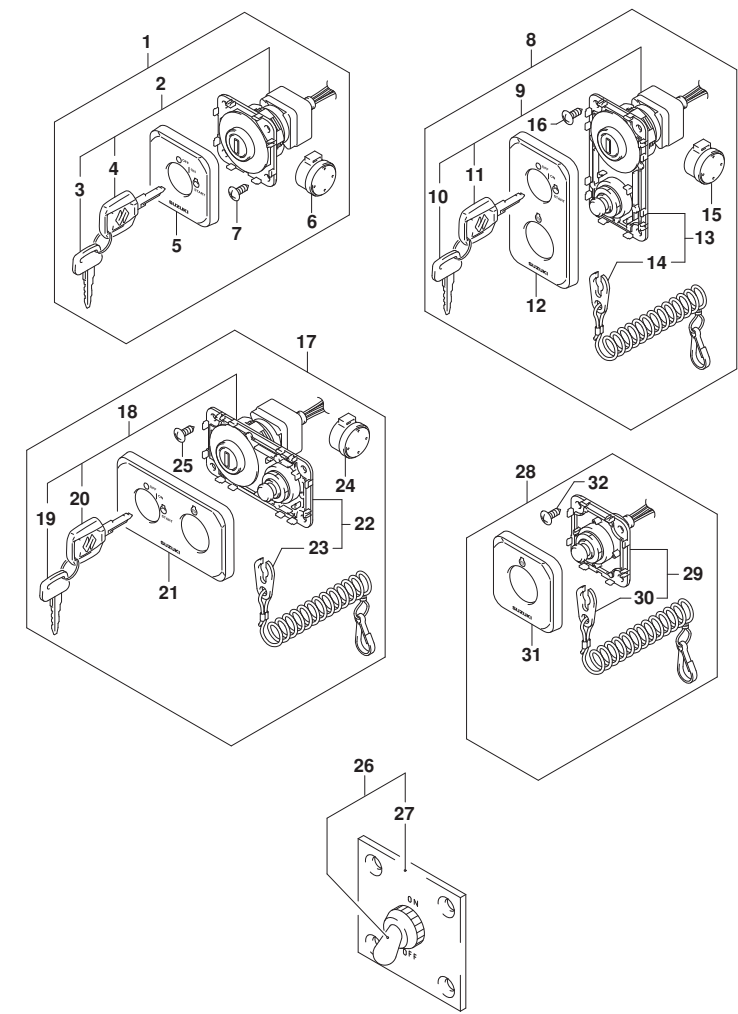


FIG.530B (1-L-10) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98L00	PANEL ASSY, MAIN SWITCH	1	
2	37110-98L00	.SWITCH ASSY, MAIN	1	
3-1	37141-98LA0	..KEY (941)	1	
3-2	37141-98LB0	..KEY (942)	1	
3-3	37141-98L00	..KEY (931)	1	
3-4	37141-98L10	..KEY (932)	1	
3-5	37141-98L20	..KEY (933)	1	
3-6	37141-98L30	..KEY (934)	1	
3-7	37141-98L40	..KEY (935)	1	
3-8	37141-98L50	..KEY (936)	1	
3-9	37141-98L60	..KEY (937)	1	
3-10	37141-98L70	..KEY (938)	1	
3-11	37141-98L80	..KEY (939)	1	
3-12	37141-98L90	..KEY (940)	1	
4-1	37141-99EA0	..KEY (941)	1	
4-2	37141-99EB0	..KEY (942)	1	
4-3	37141-99E00	..KEY (931)	1	
4-4	37141-99E10	..KEY (932)	1	
4-5	37141-99E20	..KEY (933)	1	
4-6	37141-99E30	..KEY (934)	1	
4-7	37141-99E40	..KEY (935)	1	
4-8	37141-99E50	..KEY (936)	1	
4-9	37141-99E60	..KEY (937)	1	
4-10	37141-99E70	..KEY (938)	1	
4-11	37141-99E80	..KEY (939)	1	
4-12	37141-99E90	..KEY (940)	1	
5	37138-98L00	.COVER, MAIN SW PANEL	1	
6	38500-93J90	.BUZZER, WARNING	1	
7	03142-05169	.SCREW	4	
8	37100-98L10	PANEL ASSY, MAIN SWITCH	1	
9	37110-98L00	.SWITCH ASSY, MAIN	1	

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT,DF20A,DF20AR,DF20AT):022

FIG.530B

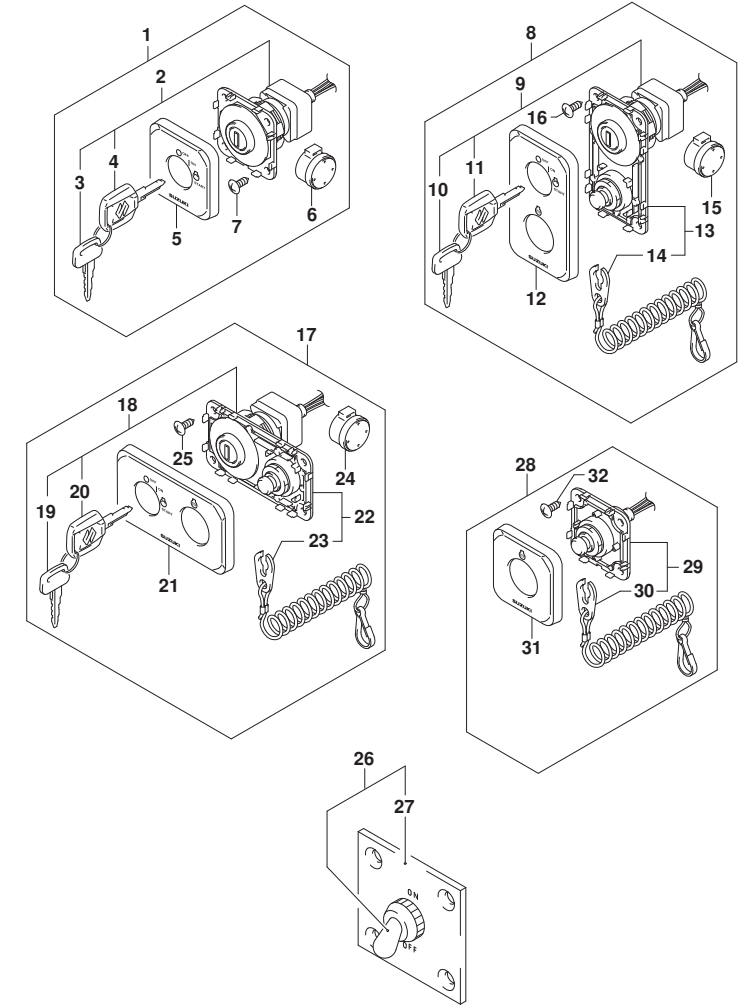


FIG.530B (1-L-11) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
10-1	37141-98LA0	..KEY (941)	1	
10-2	37141-98LB0	..KEY (942)	1	
10-3	37141-98L00	..KEY (931)	1	
10-4	37141-98L10	..KEY (932)	1	
10-5	37141-98L20	..KEY (933)	1	
10-6	37141-98L30	..KEY (934)	1	
10-7	37141-98L40	..KEY (935)	1	
10-8	37141-98L50	..KEY (936)	1	
10-9	37141-98L60	..KEY (937)	1	
10-10	37141-98L70	..KEY (938)	1	
10-11	37141-98L80	..KEY (939)	1	
10-12	37141-98L90	..KEY (940)	1	
11-1	37141-99EA0	..KEY (941)	1	
11-2	37141-99EB0	..KEY (942)	1	
11-3	37141-99E00	..KEY (931)	1	
11-4	37141-99E10	..KEY (932)	1	
11-5	37141-99E20	..KEY (933)	1	
11-6	37141-99E30	..KEY (934)	1	
11-7	37141-99E40	..KEY (935)	1	
11-8	37141-99E50	..KEY (936)	1	
11-9	37141-99E60	..KEY (937)	1	
11-10	37141-99E70	..KEY (938)	1	
11-11	37141-99E80	..KEY (939)	1	
11-12	37141-99E90	..KEY (940)	1	
12	37138-98L10	..COVER, MAIN SW PANEL VERT	1	
13	37820-98L00	..SWITCH ASSY, EMERGENCY	1	
14	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	
15	38500-93J90	..BUZZER, WARNING	1	
16	03142-05169	..SCREW	4	
17	37100-98L20	PANEL ASSY, MAIN SWITCH HORIZ	1	
18	37110-98L00	..SWITCH ASSY, MAIN	1	

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT,DF20A,DF20AR,DF20AT):022

FIG.530B


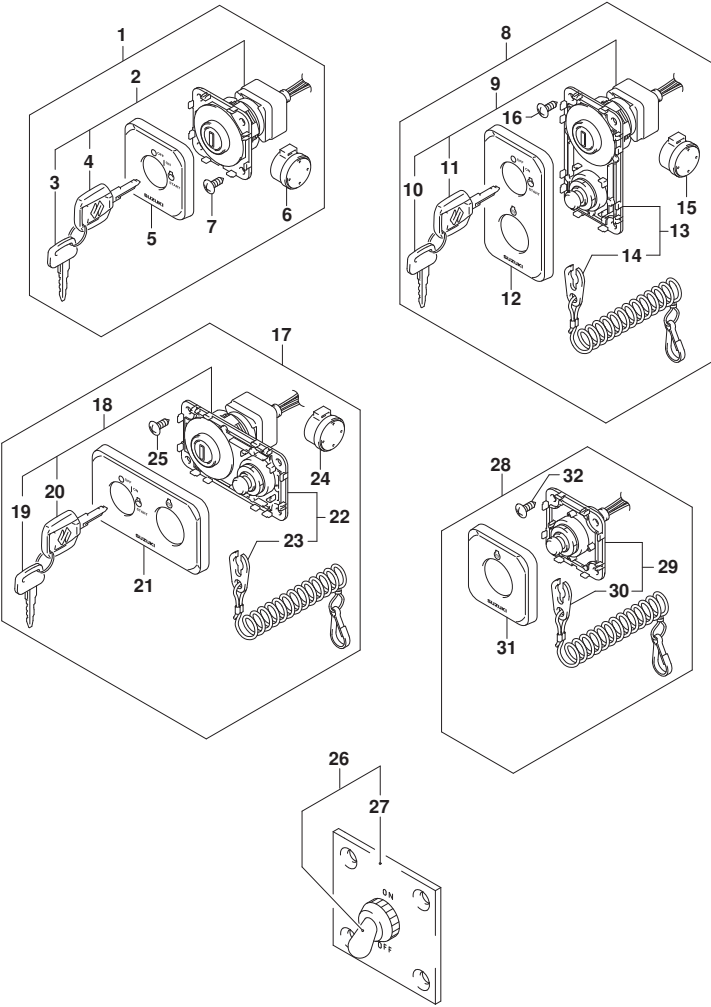


FIG.530B (1-L-12) OPT:SWITCH (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19-1	37141-98LA0	..KEY (941)	1	
19-2	37141-98LB0	..KEY (942)	1	
19-3	37141-98L00	..KEY (931)	1	
19-4	37141-98L10	..KEY (932)	1	
19-5	37141-98L20	..KEY (933)	1	
19-6	37141-98L30	..KEY (934)	1	
19-7	37141-98L40	..KEY (935)	1	
19-8	37141-98L50	..KEY (936)	1	
19-9	37141-98L60	..KEY (937)	1	
19-10	37141-98L70	..KEY (938)	1	
19-11	37141-98L80	..KEY (939)	1	
19-12	37141-98L90	..KEY (940)	1	
20-1	37141-99EA0	..KEY (941)	1	
20-2	37141-99EB0	..KEY (942)	1	
20-3	37141-99E00	..KEY (931)	1	
20-4	37141-99E10	..KEY (932)	1	
20-5	37141-99E20	..KEY (933)	1	
20-6	37141-99E30	..KEY (934)	1	
20-7	37141-99E40	..KEY (935)	1	
20-8	37141-99E50	..KEY (936)	1	
20-9	37141-99E60	..KEY (937)	1	
20-10	37141-99E70	..KEY (938)	1	
20-11	37141-99E80	..KEY (939)	1	
20-12	37141-99E90	..KEY (940)	1	
21	37138-98L20	..COVER, MAIN SW PANEL HORIZ	1	
22	37820-98L00	..SWITCH ASSY, EMERGENCY	1	
23	37823-98L00	..PLATE, EMERGENCY SW LOCK	1	
24	38500-93J90	..BUZZER, WARNING	1	
25	03142-05169	..SCREW	4	
26	37210-93J00	PANEL ASSY, LIGHTING SW	1	
27	37212-93J00	..PANEL, LIGHTING SW	1	

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT,DF20A,DF20AR,DF20AT):022

FIG.530B (1-L-13) OPT:SWITCH (SEE NOTE)

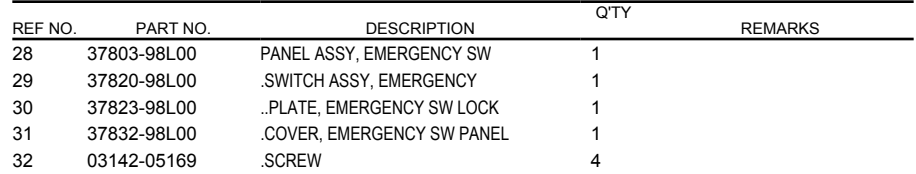

DF20A_P01_022

FIG.544A

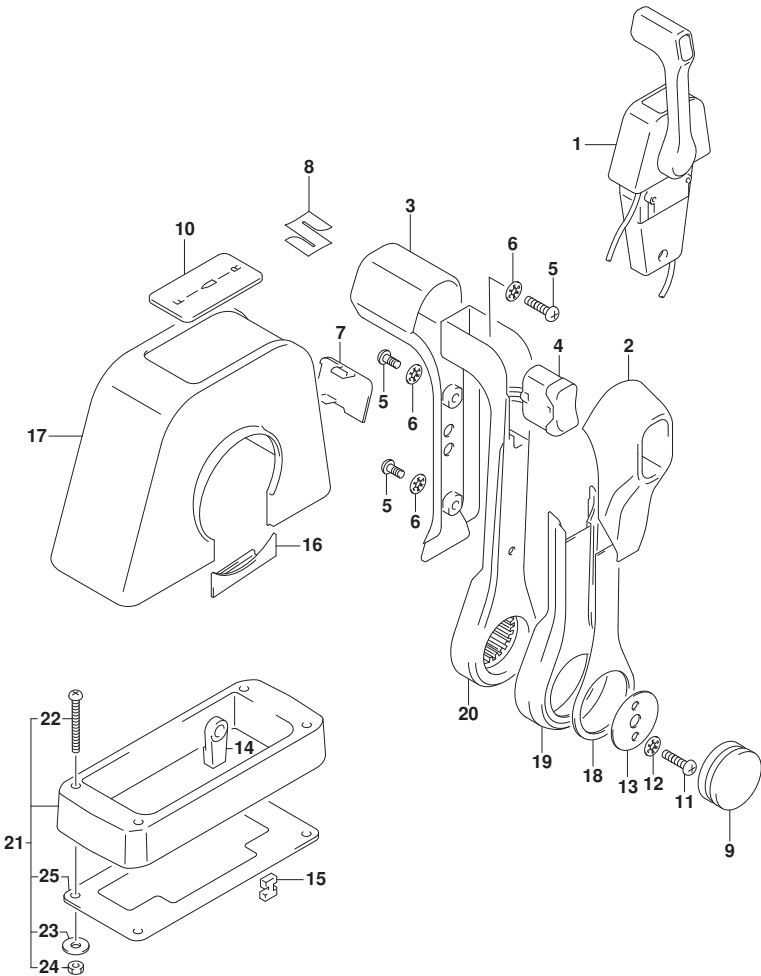


FIG.544A (1-L-14) OPT:REMOTE CONTROL ASSY SINGLE (1) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67261-88L10	.GRIP, REMOCON NO.2	1	
3	67261-88L00	.GRIP, REMOCON NO.1	1	
4	37850-88L00	.SWITCH ASSY, GRIP PTT	1	
5	67296-88L00	.SCREW	3	
6	67288-92E20	.WASHER	3	
7	67212-88L00	.COVER, PLUG	1	
8	68111-88L00	.EMBLEM, MARK	1	
9	67257-88L00	.CAP, REMOCON LEVER	1	
10	67281-88L00	.DECAL	1	
11	67296-92E60	.SCREW	2	
12	67288-92E60	.WASHER	2	
13	67253-92E00	.WASHER	1	
14	67275-95600	.END, CABLE	2	
15	67273-95601	.SPACER	1	
16	67271-88L10	.COVER, REMOCON LEVER LOWER	1	
17	67211-88L00	.COVER	1	
18	67264-88L00	.COVER, LEVER DESIGN	1	
19	67264-88L10	.COVER, LEVER PLATING	1	
20	67251-88L00	.LEVER, HANDLE	1	
21	67500-88L00	KIT, R/CON SPACER SINGLE	1	
22	09125-05135	.SCREW (5X65)	4	
23	09160-05029	.WASHER (5.5X12X0.8)	4	
24	09140-05005	.NUT	4	
25	67273-88L00	.GROMMET, R/CON SINGLE	1	

NOTE : DF9.9B,DF9.9BR,DF9.9BT,DF15A

FIG.544B

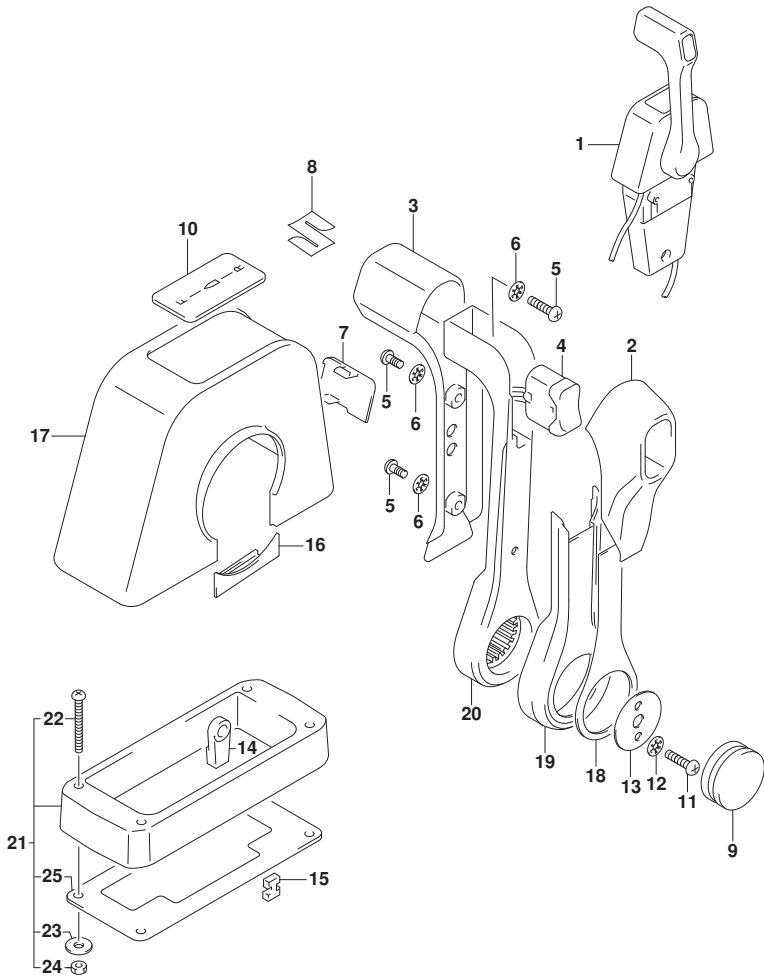


FIG.544B (2-B-2) OPT:REMOTE CONTROL ASSY SINGLE (1) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67261-88L10	.GRIP, REMOCON NO.2	1	
3	67261-88L00	.GRIP, REMOCON NO.1	1	
4	37850-88L00	.SWITCH ASSY, GRIP PTT	1	
5	67296-88L00	.SCREW	3	
6	67288-92E20	.WASHER	3	
7	67212-88L00	.COVER, PLUG	1	
8	68111-88L00	.EMBLEM, MARK	1	
9	67257-88L00	.CAP, REMOCON LEVER	1	
10	67281-88L00	.DECAL	1	
11	67296-92E60	.SCREW	2	
12	67288-92E60	.WASHER	2	
13	67253-92E00	.WASHER	1	
14	67275-95600	.END, CABLE	2	
15	67273-95601	.SPACER	1	
16	67271-88L10	.COVER, REMOCON LEVER LOWER	1	
17	67211-88L00	.COVER	1	
18	67264-88L00	.COVER, LEVER DESIGN	1	
19	67264-88L10	.COVER, LEVER PLATING	1	
20	67251-88L00	.LEVER, HANDLE	1	
21	67500-88L00	KIT, R/CON SPACER SINGLE	1	
22	09125-05135	.SCREW (5X65)	4	
23	09160-05029	.WASHER (5.5X12X0.8)	4	
24	09140-05005	.NUT	4	
25	67273-88L00	.GROMMET, R/CON SINGLE	1	

NOTE : DF15AR,DF15AT,DF20A

FIG.544C

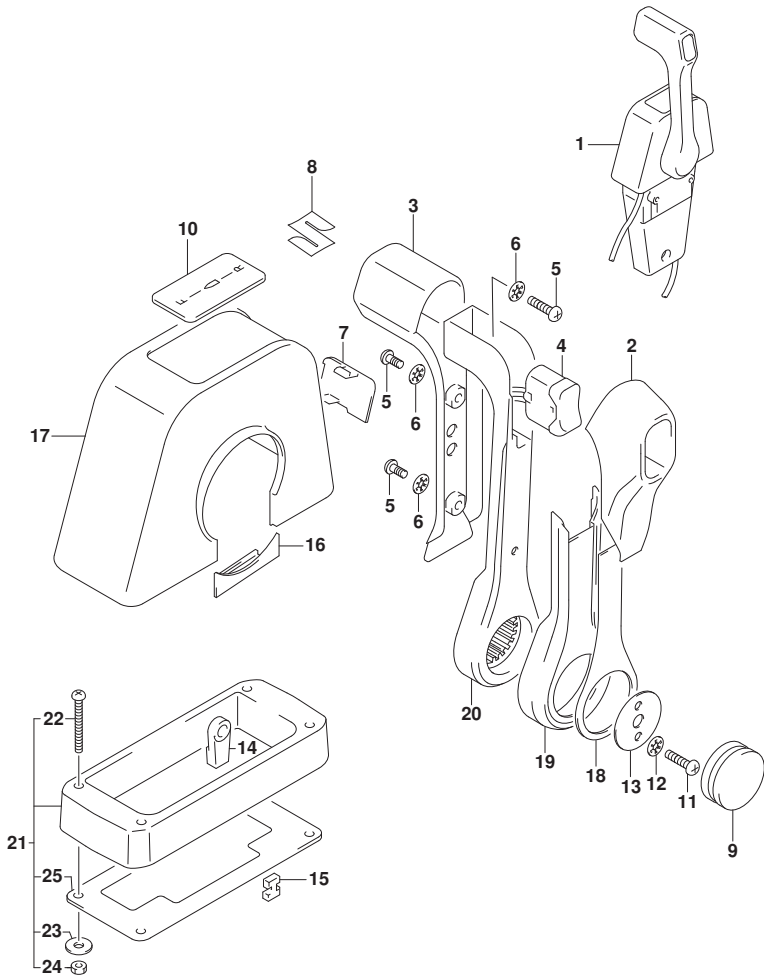


FIG.544C (2-B-3) OPT:REMOTE CONTROL ASSY SINGLE (1) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67261-88L10	.GRIP, REMOCON NO.2	1	
3	67261-88L00	.GRIP, REMOCON NO.1	1	
4	37850-88L00	.SWITCH ASSY, GRIP PTT	1	
5	67296-88L00	.SCREW	3	
6	67288-92E20	.WASHER	3	
7	67212-88L00	.COVER, PLUG	1	
8	68111-88L00	.EMBLEM, MARK	1	
9	67257-88L00	.CAP, REMOCON LEVER	1	
10	67281-88L00	.DECAL	1	
11	67296-92E60	.SCREW	2	
12	67288-92E60	.WASHER	2	
13	67253-92E00	.WASHER	1	
14	67275-95600	.END, CABLE	2	
15	67273-95601	.SPACER	1	
16	67271-88L10	.COVER, REMOCON LEVER LOWER	1	
17	67211-88L00	.COVER	1	
18	67264-88L00	.COVER, LEVER DESIGN	1	
19	67264-88L10	.COVER, LEVER PLATING	1	
20	67251-88L00	.LEVER, HANDLE	1	
21	67500-88L00	KIT, R/CON SPACER SINGLE	1	
22	09125-05135	.SCREW (5X65)	4	
23	09160-05029	.WASHER (5.5X12X0.8)	4	
24	09140-05005	.NUT	4	
25	67273-88L00	.GROMMET, R/CON SINGLE	1	

NOTE : DF20AR,DF20AT

FIG.545A

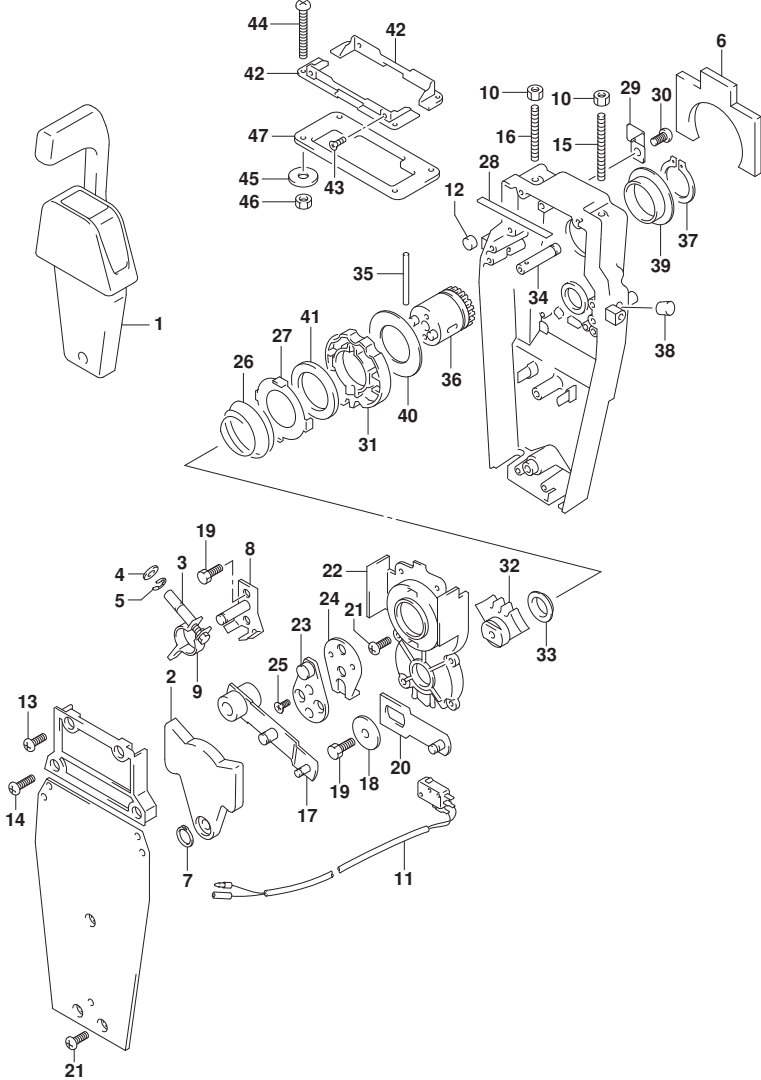


FIG.545A (2-B-4) OPT:REMOTE CONTROL ASSY SINGLE (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67222-92E00	.DUEL PLATE	1	
3	67223-92E00	.BRAKE ADJUST	1	
4	67288-92E00	.WASHER	1	
5	67292-94300	.E RING	4	
6	67272-88L00	.GOM SEAL, WATERPROOF	1	
7	67291-92E00	.SNAP RING	1	
8	67221-92E00	.SHIFT ASSY	1	
9	67224-92E00	.BRAKE ARM ASSY	1	
10	09140-06020	.NUT	2	
11	37721-88L01	.SWITCH ASSY, NEUTRAL	1	
12	67236-92E00	.ROLLER	1	
13	67296-88D10	.SCREW (5X16)	2	
14	67296-92E20	.SCREW	2	
15	67226-92E00	.BOLT, STOPPER	1	
16	67226-92E10	.BOLT, STOPPER	1	
17	67240-92E00	.THROTTLE ARM ASSY	1	
18	67228-92E00	.WASHER	1	
19	67286-92E00	.BOLT	3	
20	67230-88L00	ARM ASSY, REMOCON SHIFT	1	
21	09125-05042	.SCREW (5X10)	10	
22	67234-88L00	.CASE, REMOCON GEAR	1	
23	67245-92E00	.LEVER ASSY, THROTTLE	1	
24	67227-92E00	.STOPPER	1	
25	09126-06006	.SCREW (6X20)	2	
26	67233-92E00	.SPRING	1	
27	67235-92E00	.PLATE, SHIFT LOCK	1	
28	67237-92E01	.SPRING	5	
29	67269-92E01	.BRACKET	1	
30	67296-88D10	.SCREW (5X16)	1	
31	67238-88L00	.GEAR, REMOCON DRIVE	1	
32	67231-88L00	.GEAR, REMOCON SHIFT	1	

NOTE : DF9.9B,DF9.9BR,DF9.9BT,DF15A

FIG.545A

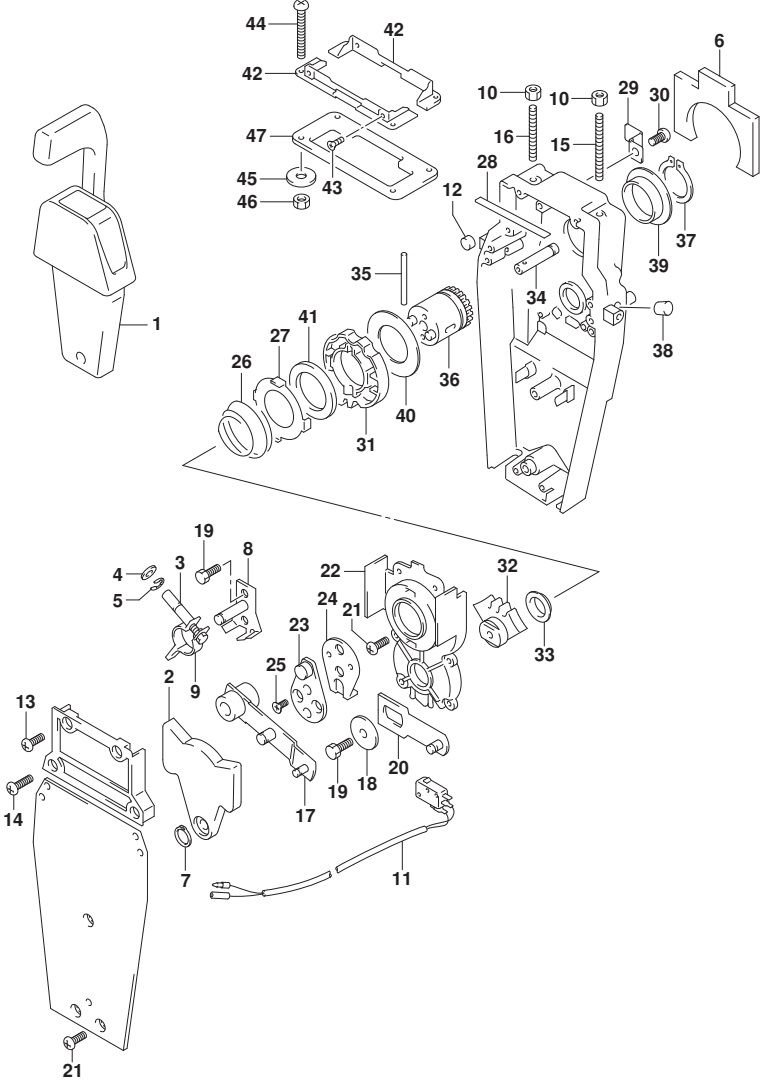


FIG.545A (2-B-5) OPT:REMOTE CONTROL ASSY SINGLE (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	67232-88L00	.BUSH, SHIFT GEAR	1	
34	67241-88L00	.ROD, REMOCON FREE ACCEL	1	
35	67239-92E00	.PIN	1	
36	67246-88L00	.SHAFT, REMOCON DRIVE	1	
37	67291-92E10	.SNAP RING	1	
38	67243-92E00	.CAP, HOLE	1	
39	67252-88L00	.BUSH, REMOCON DRIVE SHAFT	1	
40	67253-88L00	.WASHER, REMOCON DRIVE SHAFT	1	
41	67239-92E10	.PLATE, SHIFT PIN	1	
42	67274-88L00	.FLANGE, COVER BASE	2	
43	67296-95610	.SCREW	4	
44	67296-92E30	.SCREW	4	
45	09160-05024	.WASHER (5.5X16X1.5)	4	
46	67287-92E00	.NUT	4	
47	67273-88L00	.GROMMET, R/CON SINGLE	1	

NOTE : DF9.9B,DF9.9BR,DF9.9BT,DF15A

FIG.545B

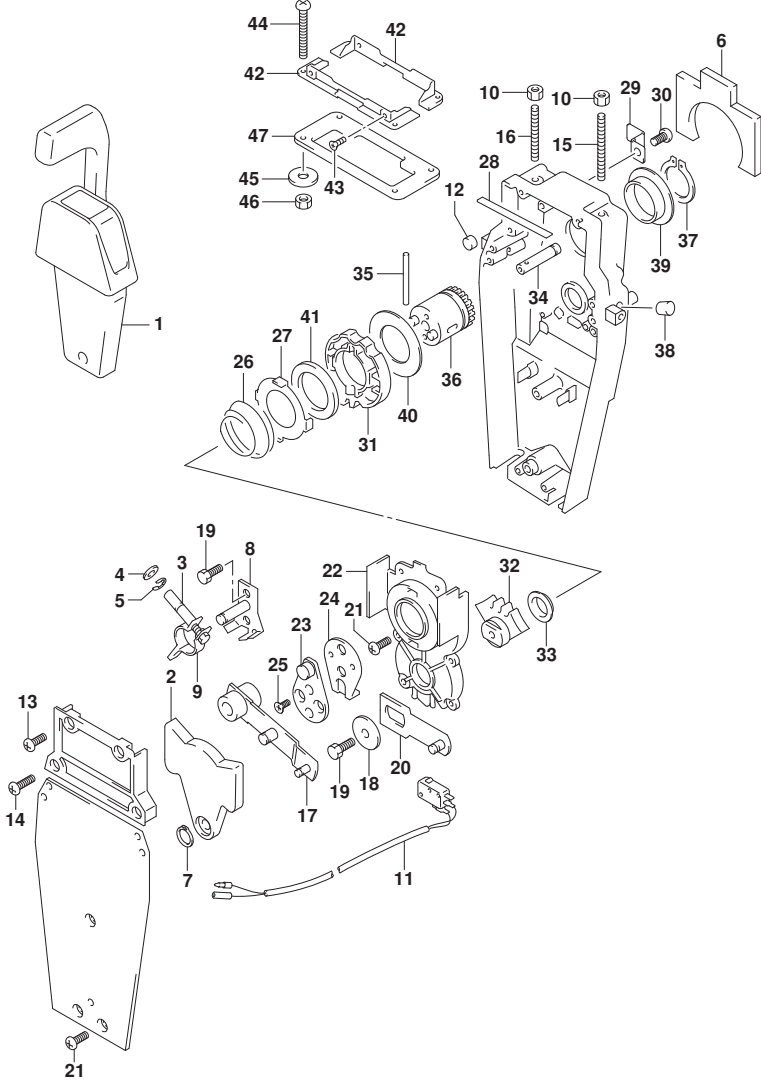


FIG.545B (2-B-6) OPT:REMOTE CONTROL ASSY SINGLE (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67222-92E00	.DUEL PLATE	1	
3	67223-92E00	.BRAKE ADJUST	1	
4	67288-92E00	.WASHER	1	
5	67292-94300	.E RING	4	
6	67272-88L00	.GOM SEAL, WATERPROOF	1	
7	67291-92E00	.SNAP RING	1	
8	67221-92E00	.SHIFT ASSY	1	
9	67224-92E00	.BRAKE ARM ASSY	1	
10	09140-06020	.NUT	2	
11	37721-88L01	.SWITCH ASSY, NEUTRAL	1	
12	67236-92E00	.ROLLER	1	
13	67296-88D10	.SCREW (5X16)	2	
14	67296-92E20	.SCREW	2	
15	67226-92E00	.BOLT, STOPPER	1	
16	67226-92E10	.BOLT, STOPPER	1	
17	67240-92E00	.THROTTLE ARM ASSY	1	
18	67228-92E00	.WASHER	1	
19	67286-92E00	.BOLT	3	
20	67230-88L00	ARM ASSY, REMOCON SHIFT	1	
21	09125-05042	.SCREW (5X10)	10	
22	67234-88L00	.CASE, REMOCON GEAR	1	
23	67245-92E00	.LEVER ASSY, THROTTLE	1	
24	67227-92E00	.STOPPER	1	
25	09126-06006	.SCREW (6X20)	2	
26	67233-92E00	.SPRING	1	
27	67235-92E00	.PLATE, SHIFT LOCK	1	
28	67237-92E01	.SPRING	5	
29	67269-92E01	.BRACKET	1	
30	67296-88D10	.SCREW (5X16)	1	
31	67238-88L00	.GEAR, REMOCON DRIVE	1	
32	67231-88L00	.GEAR, REMOCON SHIFT	1	

NOTE : DF15AR,DF15AT,DF20A

FIG.545B

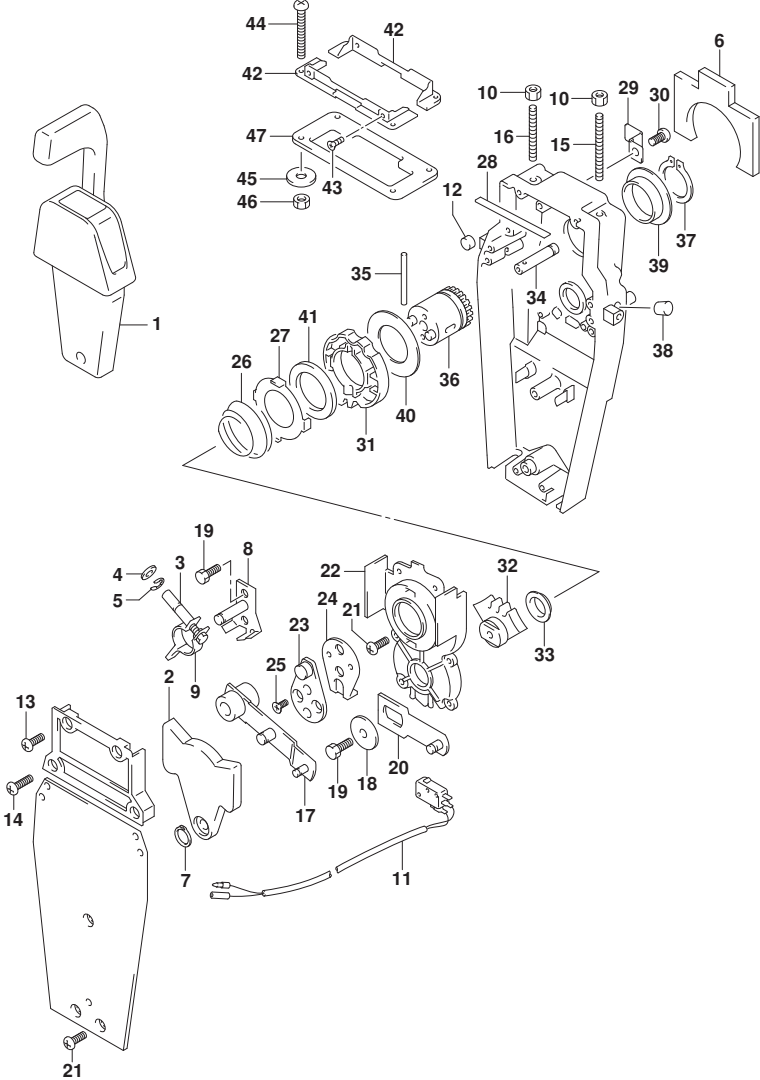


FIG.545B (2-B-7) OPT:REMOTE CONTROL ASSY SINGLE (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	67232-88L00	.BUSH, SHIFT GEAR	1	
34	67241-88L00	.ROD, REMOCON FREE ACCEL	1	
35	67239-92E00	.PIN	1	
36	67246-88L00	.SHAFT, REMOCON DRIVE	1	
37	67291-92E10	.SNAP RING	1	
38	67243-92E00	.CAP, HOLE	1	
39	67252-88L00	.BUSH, REMOCON DRIVE SHAFT	1	
40	67253-88L00	.WASHER, REMOCON DRIVE SHAFT	1	
41	67239-92E10	.PLATE, SHIFT PIN	1	
42	67274-88L00	.FLANGE, COVER BASE	2	
43	67296-95610	.SCREW	4	
44	67296-92E30	.SCREW	4	
45	09160-05024	.WASHER (5.5X16X1.5)	4	
46	67287-92E00	.NUT	4	
47	67273-88L00	.GROMMET, R/CON SINGLE	1	

NOTE : DF15AR,DF15AT,DF20A

FIG.545C

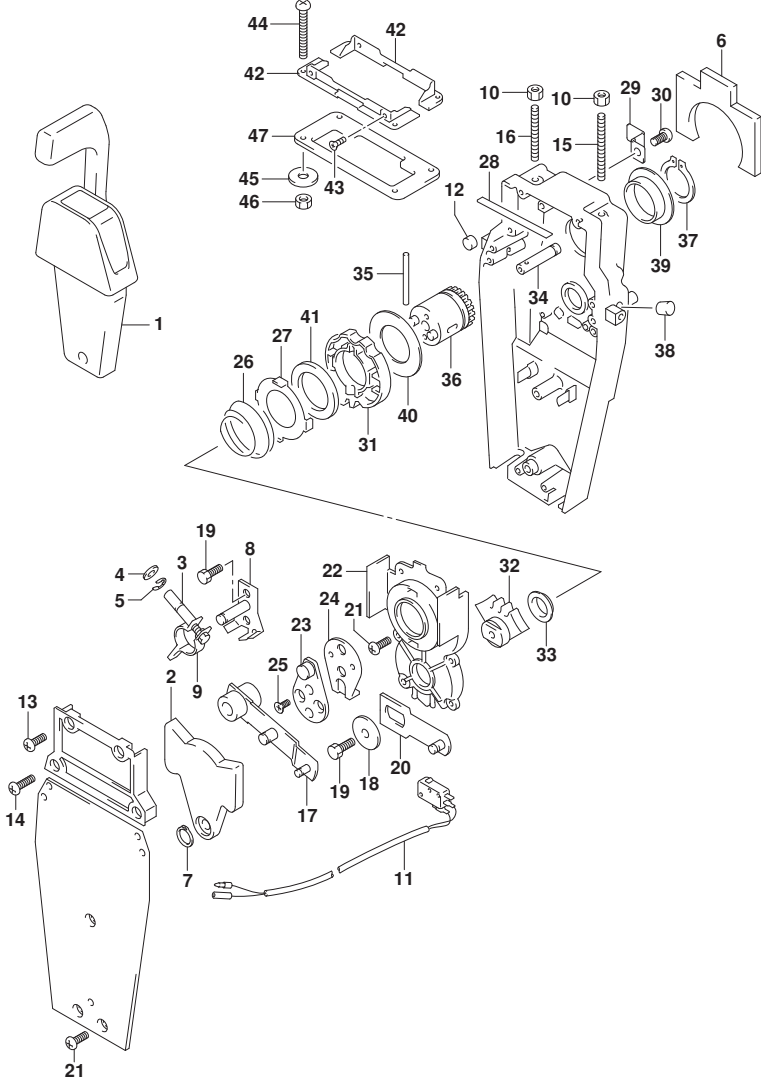


FIG.545C (2-B-8) OPT:REMOTE CONTROL ASSY SINGLE (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-88L01	REMOTE CONTROL ASSY, SINGLE	1	
2	67222-92E00	.DUEL PLATE	1	
3	67223-92E00	.BRAKE ADJUST	1	
4	67288-92E00	.WASHER	1	
5	67292-94300	.E RING	4	
6	67272-88L00	.GOM SEAL, WATERPROOF	1	
7	67291-92E00	.SNAP RING	1	
8	67221-92E00	.SHIFT ASSY	1	
9	67224-92E00	.BRAKE ARM ASSY	1	
10	09140-06020	.NUT	2	
11	37721-88L01	.SWITCH ASSY, NEUTRAL	1	
12	67236-92E00	.ROLLER	1	
13	67296-88D10	.SCREW (5X16)	2	
14	67296-92E20	.SCREW	2	
15	67226-92E00	.BOLT, STOPPER	1	
16	67226-92E10	.BOLT, STOPPER	1	
17	67240-92E00	.THROTTLE ARM ASSY	1	
18	67228-92E00	.WASHER	1	
19	67286-92E00	.BOLT	3	
20	67230-88L00	ARM ASSY, REMOCON SHIFT	1	
21	09125-05042	.SCREW (5X10)	10	
22	67234-88L00	.CASE, REMOCON GEAR	1	
23	67245-92E00	.LEVER ASSY, THROTTLE	1	
24	67227-92E00	.STOPPER	1	
25	09126-06006	.SCREW (6X20)	2	
26	67233-92E00	.SPRING	1	
27	67235-92E00	.PLATE, SHIFT LOCK	1	
28	67237-92E01	.SPRING	5	
29	67269-92E01	.BRACKET	1	
30	67296-88D10	.SCREW (5X16)	1	
31	67238-88L00	.GEAR, REMOCON DRIVE	1	
32	67231-88L00	.GEAR, REMOCON SHIFT	1	

NOTE : DF20AR,DF20AT

FIG.545C

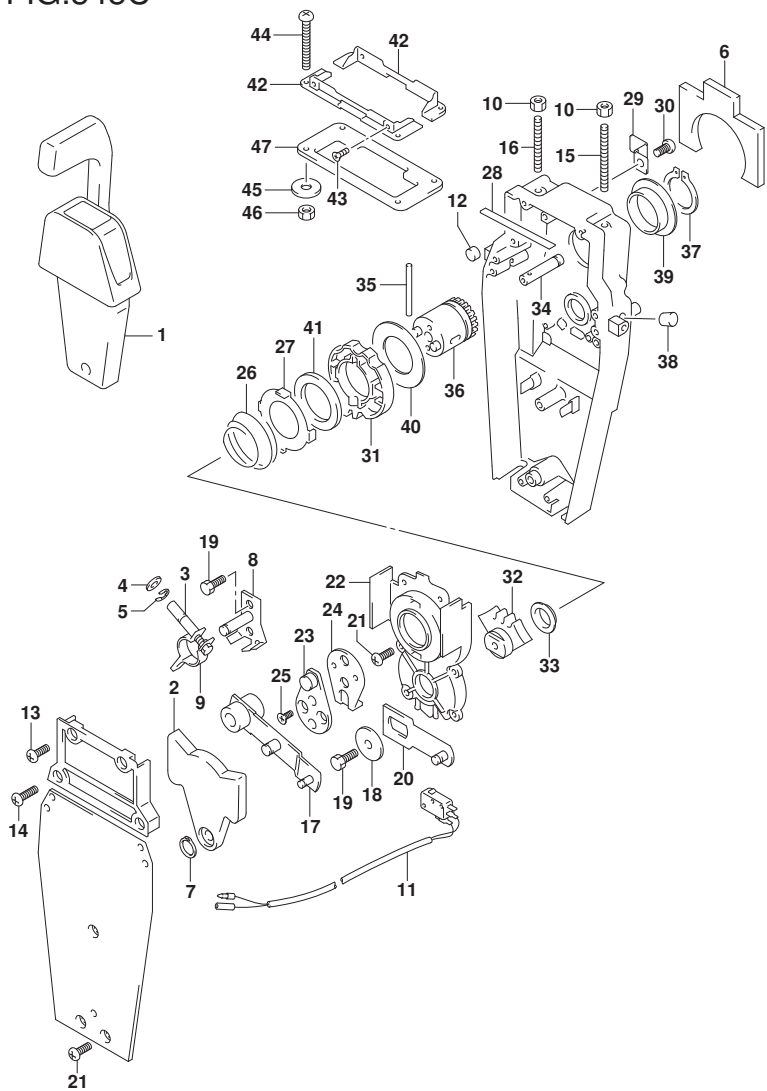


FIG.545C (2-B-9) OPT:REMOTE CONTROL ASSY SINGLE (2) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	67232-88L00	.BUSH, SHIFT GEAR	1	
34	67241-88L00	.ROD, REMOCON FREE ACCEL	1	
35	67239-92E00	.PIN	1	
36	67246-88L00	.SHAFT, REMOCON DRIVE	1	
37	67291-92E10	.SNAP RING	1	
38	67243-92E00	.CAP, HOLE	1	
39	67252-88L00	.BUSH, REMOCON DRIVE SHAFT	1	
40	67253-88L00	.WASHER, REMOCON DRIVE SHAFT	1	
41	67239-92E10	.PLATE, SHIFT PIN	1	
42	67274-88L00	.FLANGE, COVER BASE	2	
43	67296-95610	.SCREW	4	
44	67296-92E30	.SCREW	4	
45	09160-05024	.WASHER (5.5X16X1.5)	4	
46	67287-92E00	.NUT	4	
47	67273-88L00	.GROMMET, R/CON SINGLE	1	

NOTE : DF20AR,DF20AT

FIG.546A

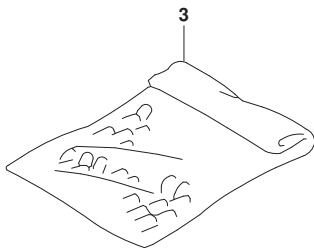
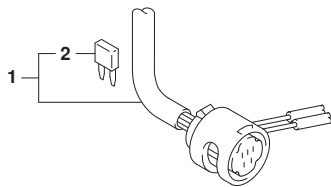


FIG.546A (2-B-10) OPT:REMOCON CABLE (ELECTRIC STARTER) (020,021)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-89L00	WIRE ASSY, REMOTE CONTROL	1	
2	09481-10501	.FUSE (10A)	1	
3	36990-87D00	TERMINAL & SLEEVE SET	1	

FIG.546B

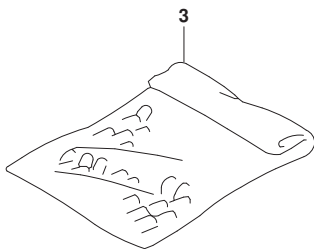
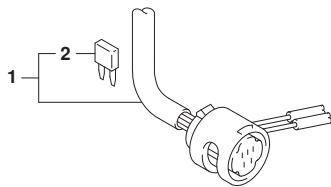


FIG.546B (2-B-11) OPT:REMOCON CABLE (ELECTRIC STARTER) (022)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-89L10	WIRE ASSY, REMOTE CONTROL	1	
2	09481-10501	.FUSE (10A)	1	
3	36990-87D00	TERMINAL & SLEEVE SET	1	

FIG.553A

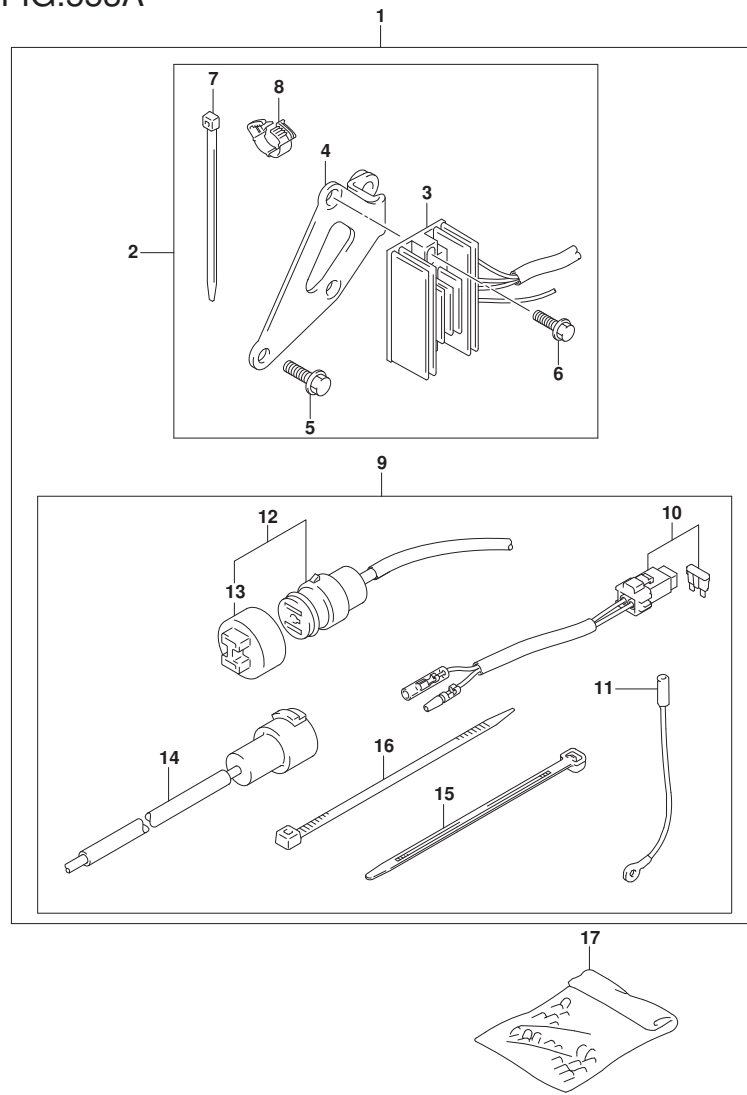


FIG.553A (2-B-12) OPT:ELECTRICAL (MANUAL STARTER) (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32000-89L03	KIT, BATTERY CHARGING	1	
2	32801-89L01	..RECTIFIER & REGULATOR SET	1	
3	32800-94J11	..RECTIFIER & REGULATOR ASSY	1	
4	32815-89L10	..BRACKET, RECTIFIER	1	
5	01550-08207	..BOLT	2	
6	01550-06207	..BOLT	2	
7	09407-14407	..CLAMP (L:145)	3	
8	09408-00184	..CLAMP	1	
9	39600-89L02	..RECEPTACLE SET	1	
10	36740-94J00	..CASE ASSY, FUSE	1	
11	37801-98301	..LEAD, STOP SWITCH	1	
12	39601-95D01	..RECEPTACLE	1	
13	36634-93910	...CAP	1	
14	39602-93900	..PLUG ASSY, LAMP CORD	1	
15	09407-14403	..CLAMP (L:125)	2	
16	09407-14407	..CLAMP (L:145)	3	
17	36990-87D00	TERMINAL & SLEEVE SET	1	

NOTE : DF9.9B,DF15A,DF20A

FIG.561A

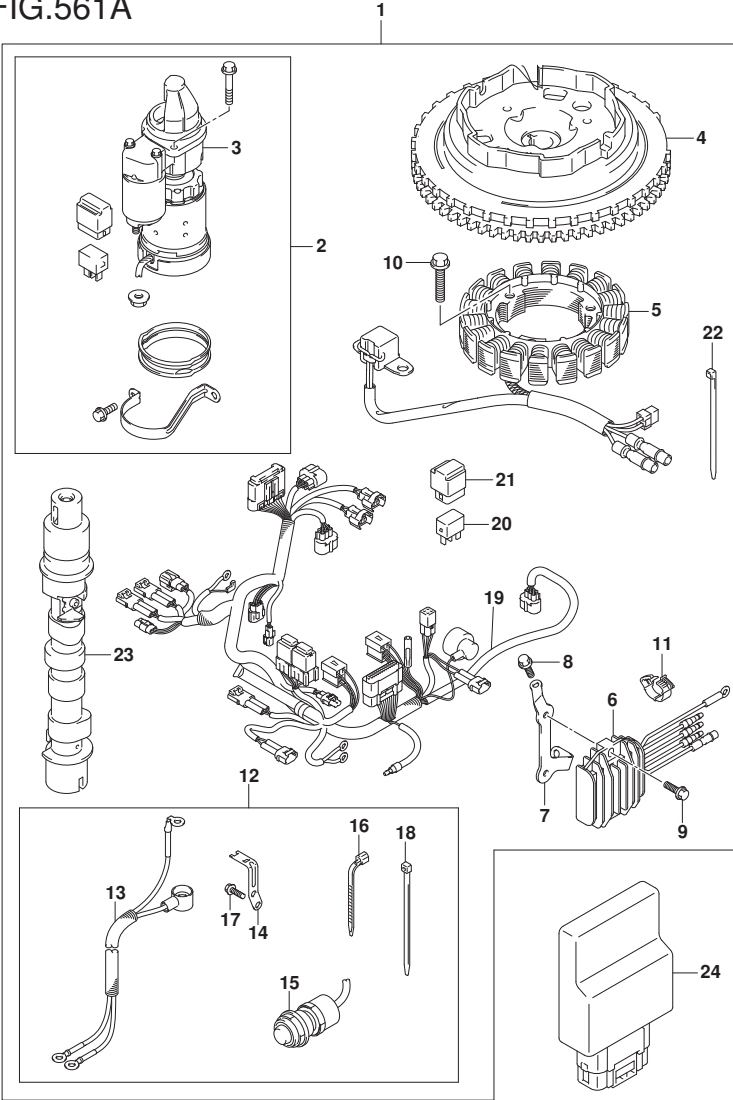


FIG.561A (2-B-13) OPT:STARTING MOTOR (MANUAL STARTER) (DF9.9B)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31000-89L21	STARTER SET, ELECTRIC	1	
2	31101-89L10	.MOTOR SET, STARTER	1	
3	31100-89L00	..MOTOR ASSY, STARTING	1	
4	32102-89L00	..FLYWHEEL, MAGNETO	1	
5	32120-89L20	..COIL, STATOR & PULSER	1	
6	32800-89L02	..RECTIFIER & REGULATOR ASSY	1	
7	32815-89L00	..BRACKET, RECTIFIER	1	
8	01550-06167	..BOLT	1	
9	01550-06207	..BOLT	2	
10	01547-0625A	..BOLT	3	
11	09408-00184	..CLAMP	1	
12	33800-89L10	..CABLE SET, STARTER	1	
13	33810-89L10	..CABLE, STARTER	1	
14	36617-89L10	..BRACKET, HARNESS	1	
15	37161-89L02	..SWITCH ASSY, STARTER MOTOR	1	
16	09407-14403	..CLAMP (L:125)	1	
17	01547-06167	..BOLT	2	
18	09407-14407	..CLAMP (L:145)	1	
19	36610-89LG0	..HARNESS ASSY, WIRING	1	
20	38860-76F01	..RELAY ASSY	1	
21	38915-90J00	..HOLDER, RELAY	1	
22	09407-14407	..CLAMP (L:145)	12	
23	12700-89L21	..CAMSHAFT ASSY	1	
24	33930-89L40	UNIT, ENGINE CONTROL	1	

FIG.561B

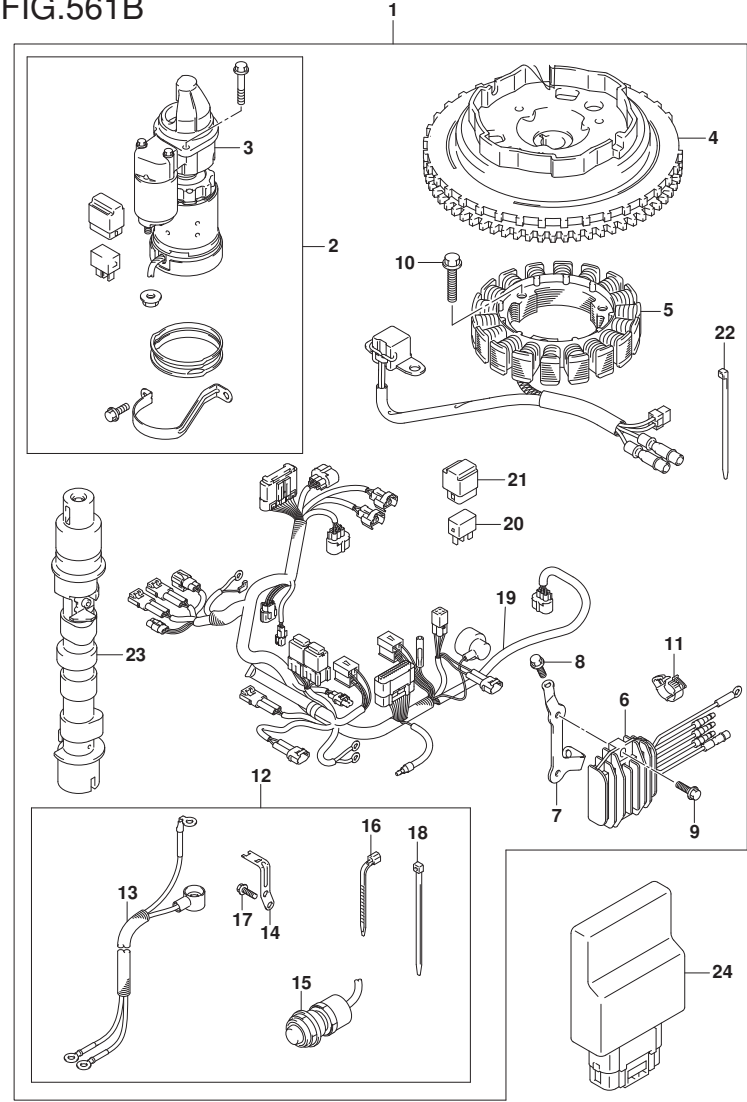


FIG.561B (2-B-14) OPT:STARTING MOTOR (MANUAL STARTER) (DF15A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31000-89L21	STARTER SET, ELECTRIC	1	
2	31101-89L10	.MOTOR SET, STARTER	1	
3	31100-89L00	..MOTOR ASSY, STARTING	1	
4	32102-89L00	.FLYWHEEL, MAGNETO	1	
5	32120-89L20	.COIL, STATOR & PULSER	1	
6	32800-89L02	.RECTIFIER & REGULATOR ASSY	1	
7	32815-89L00	.BRACKET, RECTIFIER	1	
8	01550-06167	.BOLT	1	
9	01550-06207	.BOLT	2	
10	01547-0625A	.BOLT	3	
11	09408-00184	.CLAMP	1	
12	33800-89L10	.CABLE SET, STARTER	1	
13	33810-89L10	..CABLE, STARTER	1	
14	36617-89L10	..BRACKET, HARNESS	1	
15	37161-89L02	..SWITCH ASSY, STARTER MOTOR	1	
16	09407-14403	..CLAMP (L:125)	1	
17	01547-06167	..BOLT	2	
18	09407-14407	..CLAMP (L:145)	1	
19	36610-89LG0	.HARNESS ASSY, WIRING	1	
20	38860-76F01	.RELAY ASSY	1	
21	38915-90J00	.HOLDER, RELAY	1	
22	09407-14407	.CLAMP (L:145)	12	
23	12700-89L21	.CAMSHAFT ASSY	1	
24	33930-89L00	UNIT, ENGINE CONTROL	1	

FIG.561C

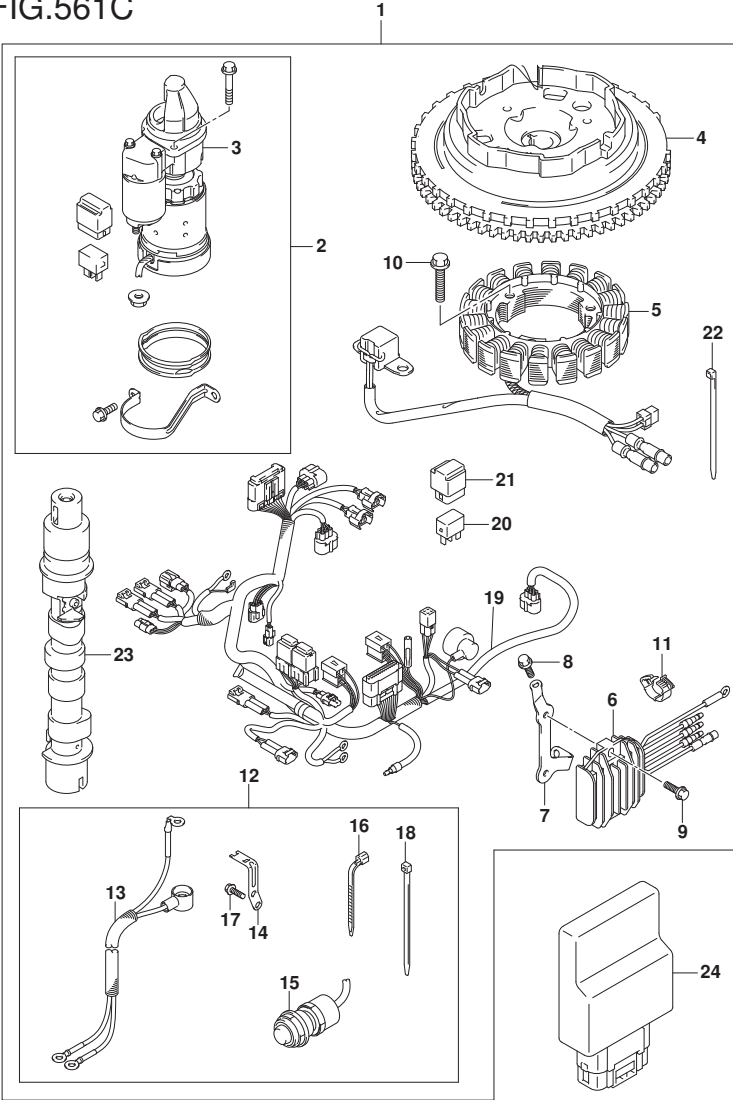


FIG.561C (2-C-2) OPT:STARTING MOTOR (MANUAL STARTER) (DF20A:P01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31000-89L21	STARTER SET, ELECTRIC	1	
2	31101-89L10	.MOTOR SET, STARTER	1	
3	31100-89L00	..MOTOR ASSY, STARTING	1	
4	32102-89L00	.FLYWHEEL, MAGNETO	1	
5	32120-89L20	.COIL, STATOR & PULSER	1	
6	32800-89L02	.RECTIFIER & REGULATOR ASSY	1	
7	32815-89L00	.BRACKET, RECTIFIER	1	
8	01550-06167	.BOLT	1	
9	01550-06207	.BOLT	2	
10	01547-0625A	.BOLT	3	
11	09408-00184	.CLAMP	1	
12	33800-89L10	.CABLE SET, STARTER	1	
13	33810-89L10	..CABLE, STARTER	1	
14	36617-89L10	..BRACKET, HARNESS	1	
15	37161-89L02	..SWITCH ASSY, STARTER MOTOR	1	
16	09407-14403	..CLAMP (L:125)	1	
17	01547-06167	..BOLT	2	
18	09407-14407	..CLAMP (L:145)	1	
19	36610-89LG0	.HARNESS ASSY, WIRING	1	
20	38860-76F01	.RELAY ASSY	1	
21	38915-90J00	.HOLDER, RELAY	1	
22	09407-14407	.CLAMP (L:145)	12	
23	12700-89L21	.CAMSHAFT ASSY	1	
24	33930-89L20	UNIT, ENGINE CONTROL	1	

FIG.561D

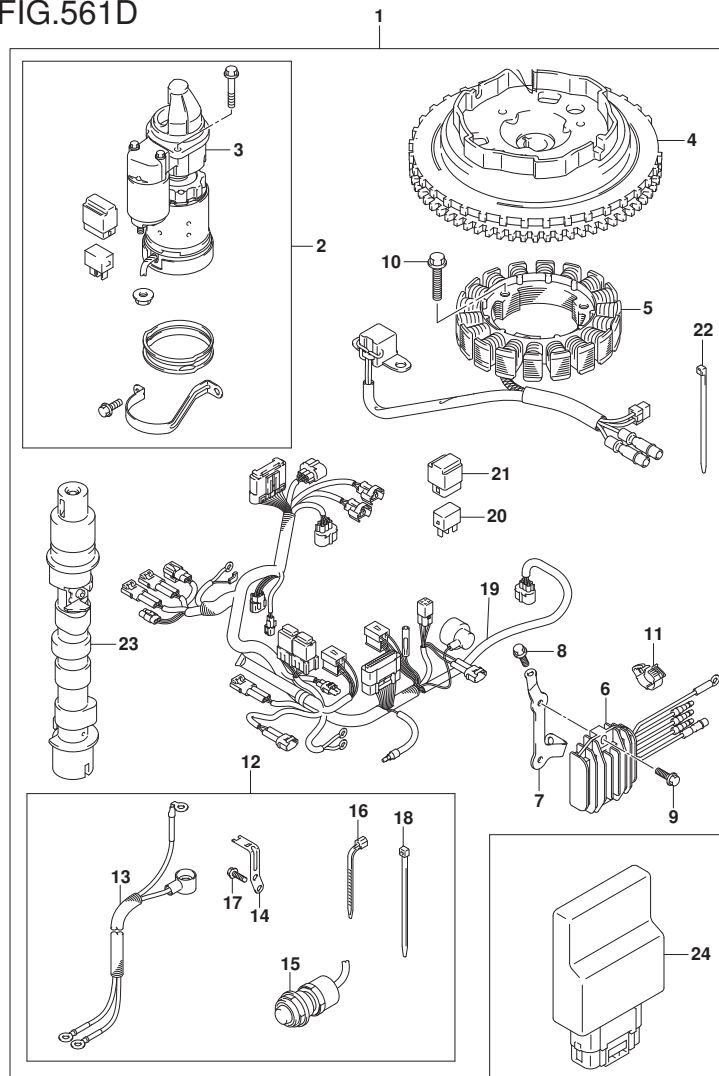


FIG.561D (2-C-3) OPT:STARTING MOTOR (MANUAL STARTER) (DF20A:P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31000-89L21	STARTER SET, ELECTRIC	1	
2	31101-89L10	.MOTOR SET, STARTER	1	
3	31100-89L00	..MOTOR ASSY, STARTING	1	
4	32102-89L00	..FLYWHEEL, MAGNETO	1	
5	32120-89L20	..COIL, STATOR & PULSER	1	
6	32800-89L02	..RECTIFIER & REGULATOR ASSY	1	
7	32815-89L00	..BRACKET, RECTIFIER	1	
8	01550-06167	..BOLT	1	
9	01550-06207	..BOLT	2	
10	01547-0625A	..BOLT	3	
11	09408-00184	..CLAMP	1	
12	33800-89L10	..CABLE SET, STARTER	1	
13	33810-89L10	..CABLE, STARTER	1	
14	36617-89L10	..BRACKET, HARNESS	1	
15	37161-89L02	..SWITCH ASSY, STARTER MOTOR	1	
16	09407-14403	..CLAMP (L:125)	1	
17	01547-06167	..BOLT	2	
18	09407-14407	..CLAMP (L:145)	1	
19	36610-89LG0	..HARNESS ASSY, WIRING	1	
20	38860-76F01	..RELAY ASSY	1	
21	38915-90J00	..HOLDER, RELAY	1	
22	09407-14407	..CLAMP (L:145)	12	
23	12700-89L21	..CAMSHAFT ASSY	1	
24	33930-89L60	UNIT, ENGINE CONTROL	1	

DF20A_P01_022_561D

OPT:STARTING MOTOR (MANUAL STARTER)

FIG.575A

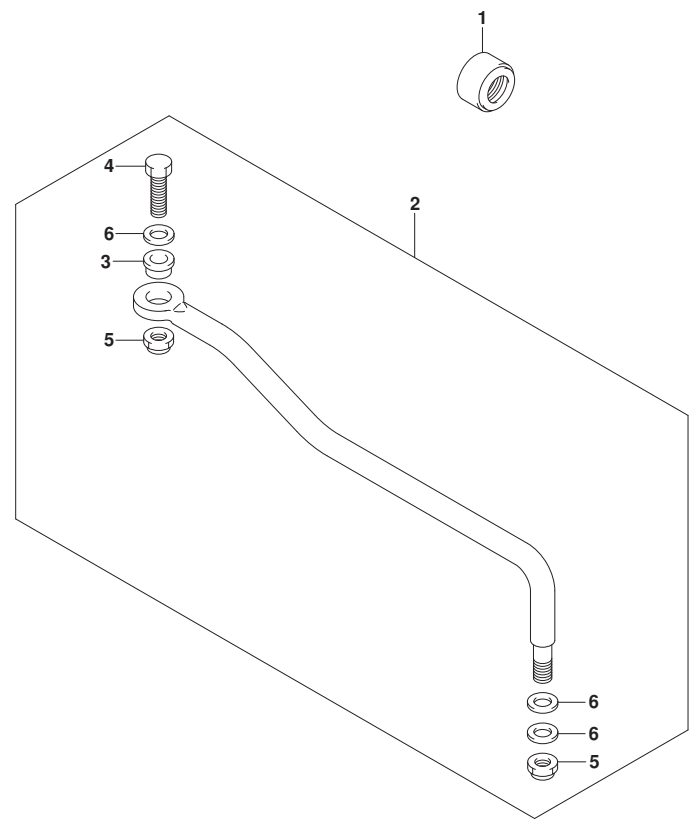


FIG.575A (2-C-4) OPT:DRAG LINK (DF9.9B,DF15A,DF20A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41161-94400	SEAL, STEERING CABLE	1	
2	67701-99J02	LINK ASSY, DRAG	1	
3	67721-93E10	.SPACER, DRAG LINK	1	
4	67725-96J00	.BOLT, DRAG LINK	1	
5	67726-99E00	.NUT, LOCK	2	
6	67728-99E00	.WASHER	4	

FIG.583A

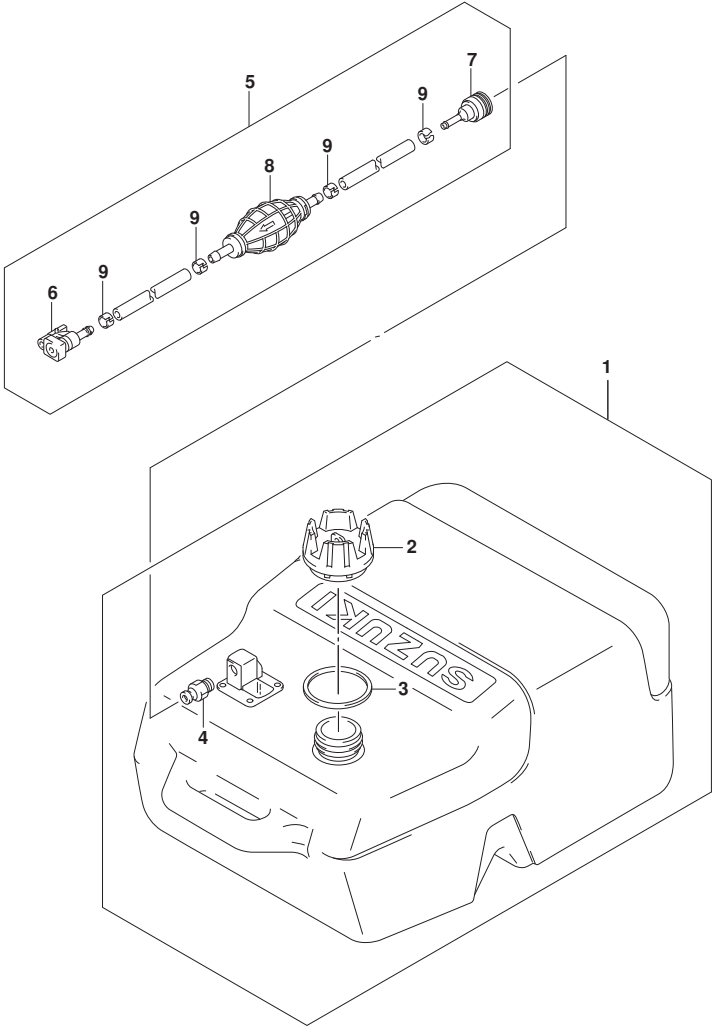


FIG.583A (2-C-5) OPT:FUEL TANK (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-94L10	TANK ASSY, FUEL	1	
2	65520-99100	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65700-87J19	HOSE, FUEL	1	
6	65750-87J11	.SOCKET, FUEL HOSE	1	
7	65750-95501	.SOCKET, FUEL HOSE	1	
8	65770-90J13	.PUMP, SQUEEZE	1	
9	65781-98500	.CLIP, FUEL HOSE	4	

NOTE : DF9.9B,DF9.9BR,DF9.9BT,DF9.9BTH,DF15A,DF15AR

FIG.583B


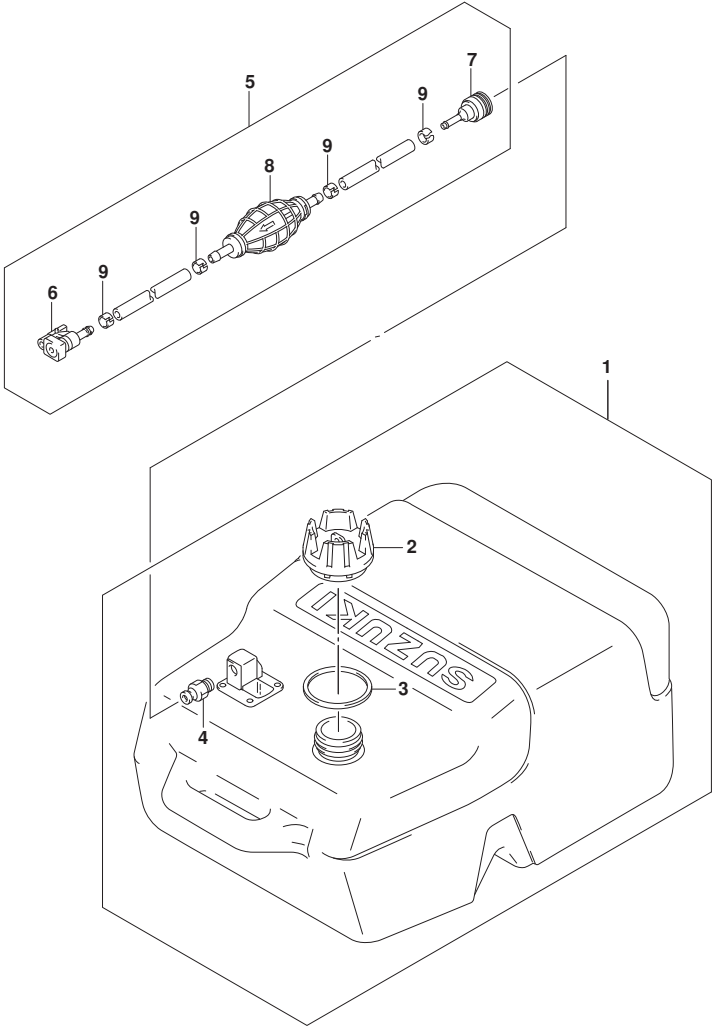


FIG.583B (2-C-6) OPT:FUEL TANK (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-94L10	TANK ASSY, FUEL	1	
2	65520-99100	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65700-87J19	HOSE, FUEL	1	
6	65750-87J11	.SOCKET, FUEL HOSE	1	
7	65750-95501	.SOCKET, FUEL HOSE	1	
8	65770-90J13	.PUMP, SQUEEZE	1	
9	65781-98500	.CLIP, FUEL HOSE	4	

NOTE : DF15AT,DF20A,DF20AR,DF20AT,DF20ATH

FIG.600A

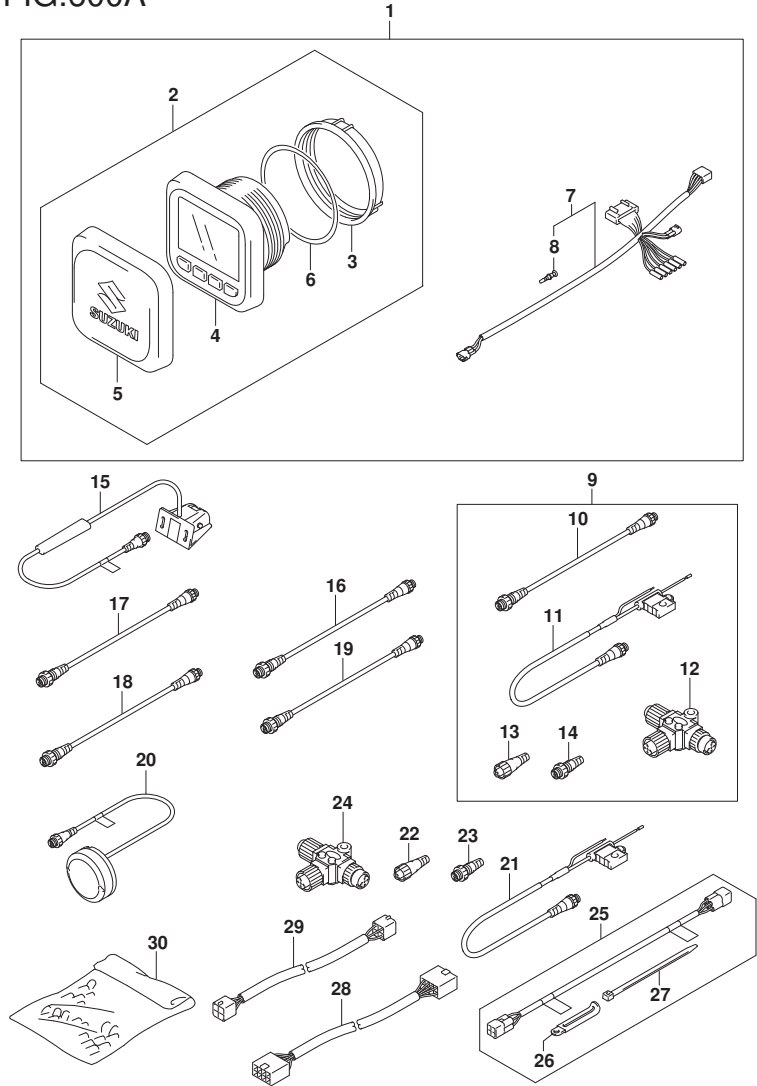

DF20A_P01_022_600A
OPT: MULTI FUNCTION GAUGE

FIG.600A (2-C-7) OPT: MULTI FUNCTION GAUGE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34000-96L45	KIT, SINGLE GAUGE MECH	1	
2	34011-96L15	.GAUGE SET, MULTI	1	
3	34112-96L00	..NUT, GAUGE	1	
4	34193-96L00	..BEZEL, GAUGE	1	
5	34211-96L00	..COVER, GAUGE	1	
6	34825-96L00	..PACKING, GAUGE	1	
7	36661-96L30	ADAPTER, GAUGE	1	
8	36615-96300	..TERMINAL	5	
9	36001-88L00	SET, WIRE	1	
10	36662-88L10	.WIRE, 2 EXTENSION	1	
11	36663-88L00	.HARNESS ASSY, NETWORK POWER	1	
12	36664-88L00	.CONNECTOR, BRANCH	1	
13	36665-88L00	.UNIT, RESISTOR FEMALE	1	
14	36665-88L10	.UNIT, RESISTOR MALE	1	
15	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
16	36662-88L10	WIRE, 2 EXTENSION	1	
17	36662-88L20	WIRE, 6 EXTENSION	1	
18	36662-88L30	WIRE, 15 EXTENSION	1	
19	36662-88L00	WIRE, 25 EXTENSION	1	
20	39950-88L02	MODULE ASSY, GPS RECEIVER	1	
21	36663-88L00	HARNESS ASSY, NETWORK POWER	1	
22	36665-88L00	UNIT, RESISTOR FEMALE	1	
23	36665-88L10	UNIT, RESISTOR MALE	1	
24	36664-88L00	CONNECTOR, BRANCH	1	
25	36660-89L03	SET, ENG TO INTERFACE WIRE	1	
26	29404-93J01	.CLAMP	1	
27	09407-14407	.CLAMP (L:145)	4	
28	36667-96L20	WIRE, GAUGE EXT	1	
29	36682-92E00	WIRE, TRIM METER EXT (L:6500)	1	
30	36990-87D00	TERMINAL & SLEEVE SET	1	

NOTE : (DF9.9BR,DF9.9BT,DF15AR,DF15AT,DF20AR,DF20AT):(020,021)

FIG.600B


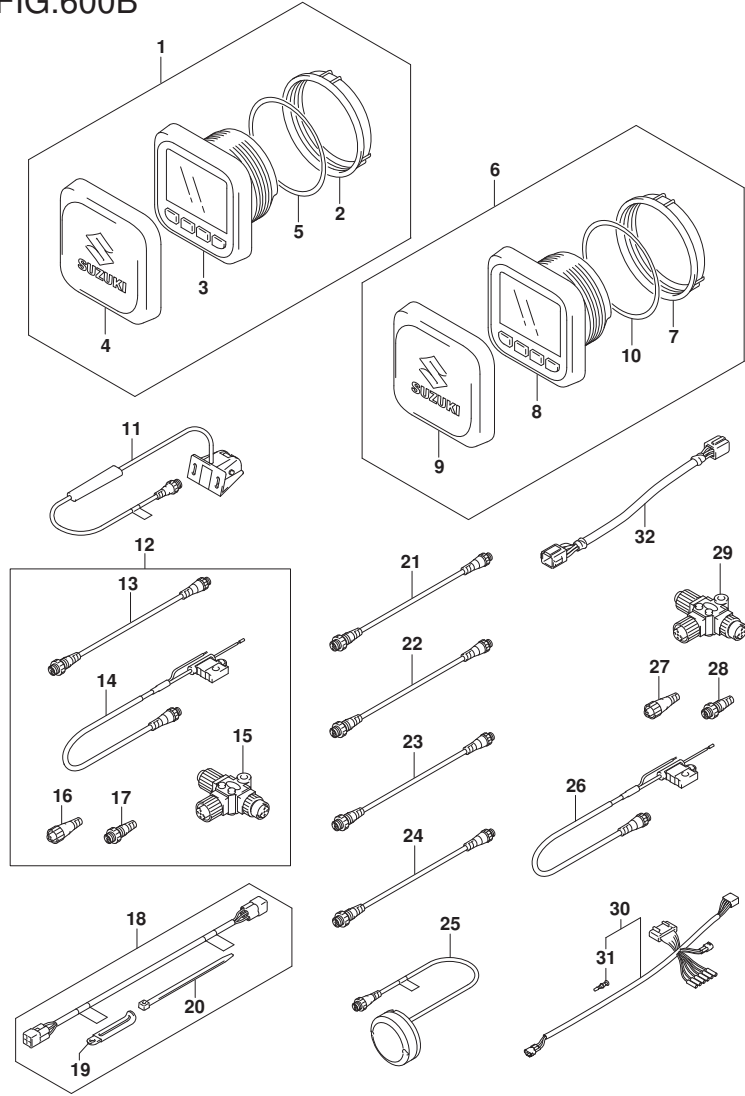


FIG.600B (2-C-8) OPT: MULTI FUNCTION GAUGE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34011-96L41	GAUGE SET, MULTI	1	W/INSTRUCTION
2	34112-96L00	.NUT, GAUGE	1	
3	34193-96L00	.BEZEL, GAUGE	1	
4	34211-96L00	.COVER, GAUGE	1	
5	34825-96L00	.PACKING, GAUGE	1	
6	34011-96L51	GAUGE SET, MULTI	1	
7	34112-96L00	.NUT, GAUGE	1	
8	34193-96L00	.BEZEL, GAUGE	1	
9	34211-96L00	.COVER, GAUGE	1	
10	34825-96L00	.PACKING, GAUGE	1	
11	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
12	36001-88L00	SET, WIRE	1	
13	36662-88L10	.WIRE, 2 EXTENSION	1	
14	36663-88L00	.HARNESS ASSY, NETWORK POWER	1	
15	36664-88L00	.CONNECTOR, BRANCH	1	
16	36665-88L00	.UNIT, RESISTOR FEMALE	1	
17	36665-88L10	.UNIT, RESISTOR MALE	1	
18	36660-89L03	SET, ENG TO INTERFACE WIRE	1	
19	29404-93J01	.CLAMP	1	
20	09407-14407	.CLAMP (L:145)	4	
21	36662-88L00	WIRE, 25 EXTENSION	1	
22	36662-88L10	WIRE, 2 EXTENSION	1	
23	36662-88L20	WIRE, 6 EXTENSION	1	
24	36662-88L30	WIRE, 15 EXTENSION	1	
25	39950-88L02	MODULE ASSY, GPS RECEIVER	1	
26	36663-88L00	HARNESS ASSY, NETWORK POWER	1	
27	36665-88L00	UNIT, RESISTOR FEMALE	1	
28	36665-88L10	UNIT, RESISTOR MALE	1	
29	36664-88L00	CONNECTOR, BRANCH	1	
30	36661-96L30	ADAPTER, GAUGE	1	
31	36615-96300	.TERMINAL	5	

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT,DF20A,DF20AR,DF20AT):022

FIG.600B

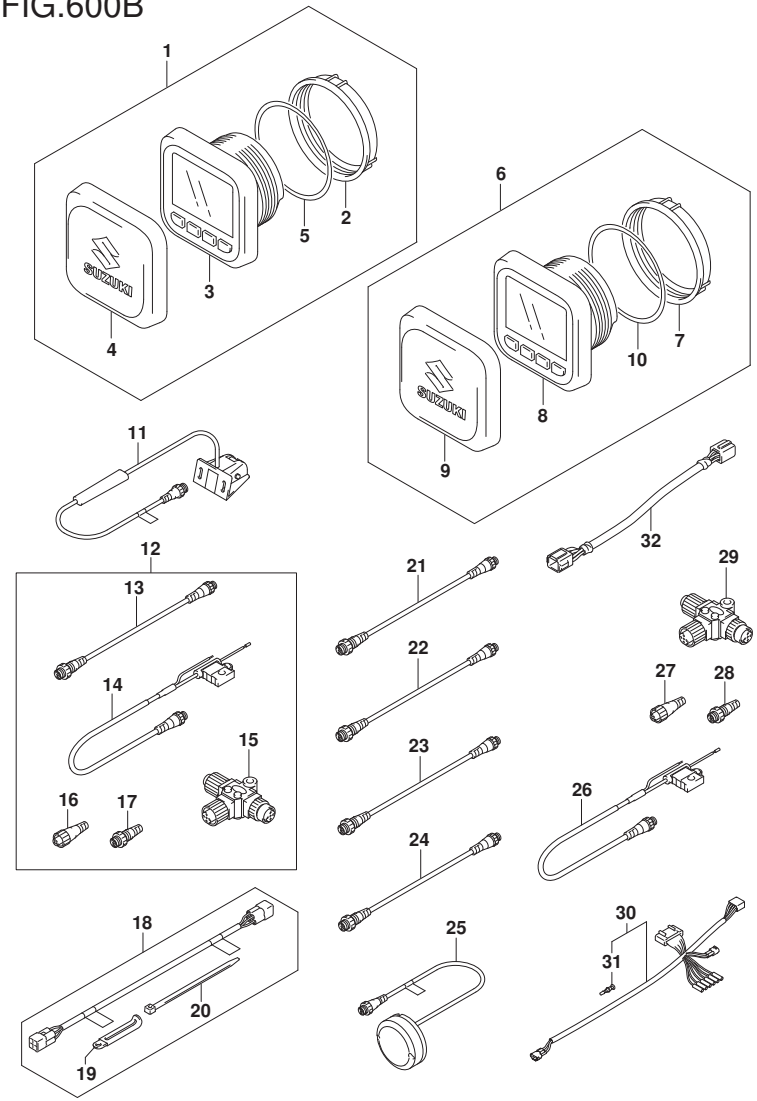

DF20A_P01_022_600B
OPT:MULTI FUNCTION GAUGE

FIG.600B (2-C-9) OPT:MULTI FUNCTION GAUGE (SEE NOTE)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	36682-92E00	WIRE, TRIM METER EXT (L:6500)	1	

NOTE : (DF9.9B,DF9.9BR,DF9.9BT,DF15A,DF15AR,DF15AT,
DF20A,DF20AR,DF20AT):022

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		12911-94J01	121A-8		334B-13
			121B-8		334C-12
		12915-94J50	121A-9		334D-12
			121B-9	13684-89L00	146A-1
		12921-89L00	121A-10		146B-1
11110-89L01	111A-1		121B-10	13710-89L00	126C-6
11115-93E00-001	111A-19	12931-78G00	121A-11	13811-89L10	126A-5
11141-89L00	111A-2		121B-11		126B-5
11162-89L01	111A-14	12932-24400	121A-12		126C-5
11170-89L00	111A-13		121B-12	13820-89L00	126B-9
11174-89L00	111A-16	12933-71C00	121A-13	13820-89L10	126A-9
11261-93J00	111A-5		121B-13	13831-89L00	126A-11
11291-91B50	113A-6	13111-89L00	126A-1		126B-11
11300-89L03	113A-1-1		126B-1		126C-11
11300-89L11	113A-1-2		126C-1	13832-89L00	126C-7
11382-93E00	111A-10	13116-94J00	126A-8	15100-89L11	146B-24
12100-89L30-050	116A-10		126B-8	15100-89L21	146A-24
12111-89L10-0B0	116A-1		126C-10	15191-89L00	146A-25
12140-89L10	116A-2	13119-89L00	126A-2		146B-25
12140-89L10-050	116A-11		126B-2	15192-89L02	146A-26
12151-89L00	116A-3		126C-2		146B-26
12160-89L11	116A-5	13279-13G10	163A-6	15192-89L10	146A-27
12163-89L02	116A-6		163B-6		146B-27
12220-89L00	116A-7	13295-29901	163A-7	15192-89L21	146A-28
12341-89L10	116A-8		163B-7		146B-28
12625-89L10	120A-11	13300-89L01	163A-1	15192-89L30	146A-29
12631-89L10	120A-1	13300-89L11	163B-1		146B-29
12635-89L00	120A-2	13326-89L00	163A-4	15192-89L40	146A-30
12636-89L00	120A-3		163B-4		146B-30
12637-89L00	120A-4	13365-89L00	163A-8	15193-89L10	146A-31
12638-89L00	120A-5		163B-8		146B-31
12700-89L01	121A-1	13420-16HA1	163A-2	15194-89L10	146A-32
12700-89L21	121B-1		163B-2		146B-32
	561A-23	13421-89L00	163A-5	15200-89L11	146A-2
	561B-23		163B-5		146B-2
	561C-23	13425-33G01	163A-3	15211-91J01-130	163A-10
	561D-23		163B-3		163B-10
12741-89L00	120A-6	13513-89L10	166A-1	15217-89L00	146A-3
12744-89L00	120A-17		513A-2		146B-3
12761-93EL0	120A-16	13606-47A00	163A-9	15218-89L00	146A-4
12840-93E01	121A-3		163B-9		146B-4
	121B-3	13640-32G20	334A-1	15410-87L00	146A-33
12842-49201	121A-4		334B-1		146B-33
	121B-4		334C-1	15419-87J00	146A-35
12843-27A00	121A-5		334D-1		146B-35
	121B-5	13650-52G00	334A-12	15421-89L01	146A-36
12861-89L00	121A-6		334B-12		146B-36
	121B-6		334C-11	15422-89L00	146A-37
12891-94J00	121A-7		334D-11		146B-37
	121B-7	13655-89L10	334A-13	15600-89L00	146A-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	146B-5	17561-99J10	160A-7-2	19120-99J11	166A-2
15629-89L00	146A-8		160B-7-2		513A-3
	146B-8	17561-99J20	160A-7-3	19122-99J00	166A-3
15662-89L10	146A-17		160B-7-3		513A-4
	146B-17	17563-94J00	160A-8	19131-89L00	166A-4
15676-89L01	146A-44		160B-8		513A-5
	146B-44	17564-99J00	160A-9	19148-89L10	166A-5
15681-89L00	144A-1		160B-9		513A-6
15685-89L00	146A-38	17565-99J01	160A-18	19150-89L00	166A-6
	146B-38		160B-18		513A-7
15690-89L02	146A-6	17631-99J20	160A-10	19185-99J00	166A-7
	146B-6		160B-10		513A-8
15710-50M00	144A-2	17632-99J30	160A-11		
15716-65DT0	144A-3		160B-11		
	144A-4	17670-91J02	162A-1		
15734-89L00	144A-5	17680-89L00	162A-2		
15735-89L01	144A-6		162A-7		
15751-89L00	144A-6	17685-89L00	162A-7		
15770-89L02	146A-7	17712-89L03	162A-5		
	146B-7	17712-89L12	162A-4		
15790-89L00	146A-9	17913-93J00	405A-1		
	146B-9		405B-1	21110-89L10	206B-1
16400-89L00	175A-1	17914-93J01	405A-2		513A-9
16431-89L00	175A-12		405B-2	21111-89L01	206A-1
16440-11D00	113A-5	17917-87L00	410A-22	21120-89L00	206A-2
16510-45H10	175A-2		410B-22		206B-2
16512-99J00	175A-3		410C-22	21122-89L00	206A-3
16515-89L10	401A-6		410D-23		206B-3
16520-99J00	401A-17		410E-23	21131-94J00-QTN	444A-36-3
16910-89L01	175A-9	18100-94JN0	167A-1	21131-94J00-Y5S	444A-36-2
16930-89L02	175A-10		167B-1	21131-94J00-YAY	444A-36-1
17400-99J02	160A-19-1	18121-94JL0	167A-2		444B-36
17400-99J12	160B-19-1		167B-2	21210-89L01	206A-4
17400-99J20	160A-19-2	18130-93E01	167A-3		206B-4
17400-99J30	160B-19-2		167B-3	22511-99011	336A-1
17411-94J00	160A-1	18132-89L00	167A-5		336B-1
	160B-1		167B-5		336C-1
17413-94J00	160A-2	18142-93E00	167A-4		336D-1-1
17413-94J10	160B-2		167B-4		336D-1-2
17461-939M0	160A-3	18210-95L00	167A-6		336E-1-1
	160B-3		167B-6		336E-1-2
17471-99J00	160A-4-1	18280-93E00	167A-7	23111-89L00	206A-5-1
17471-99J10	160B-4-1		167B-7		206B-5-1
17471-99J20	160A-4-2	18290-94J01	167A-10	23111-89L10	206A-5-2
17471-99J30	160B-4-2		167B-10		206B-5-2
17472-99J00	160A-5	18498-87JB1	146A-10	23115-89L00	206A-6
	160B-5		146B-10	23115-89L10	206B-6
17473-94J00	160A-6	18590-58M00	334A-14		513A-10
	160B-6		334B-14	23211-89L00	206A-7
17561-99J00	160A-7-1		334C-13		206B-7
	160B-7-1		334D-13	23311-95J00	210A-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
25111-99J01	210A-2-1	31173-98L00	301A-4		561D-6
25111-99J10	210A-2-2	31174-89LA1	340A-2	32800-94J11	553A-3
25211-99JL0	210A-5	31191-63J00	301A-5	32801-89L01	553A-2
25215-99J00	210A-6	31192-92J00	301A-8	32815-89L00	310A-2
25311-99J00	210A-3	31192-94J01	338A-11		310B-2
29103-93J00	327B-6	31193-94J00	338A-10		310C-2
29141-93J00	160A-13	31220-89L00	301A-6		310D-2
	160B-13	31261-75F10	301A-9		310E-2
	210A-7	31281-94J01	338A-12		310F-2
	335A-12	31311-63J00	301A-7		310G-2
	335B-12	31311-94J00	340A-9		310H-2
29162-93J10	335C-12	31313-86030	301A-11		310J-2
	335A-18	31320-89L00	301A-12		310K-2
	335B-18	31340-89L00	301A-10		310L-2
	335C-18	31341-89L00	301A-13		310M-2
	335D-22	31343-63J00	301A-14		310N-2
29404-93J01	600A-26	31344-63J00	301A-15		310P-2
	600B-19	31912-89L00	301A-16		310R-2
29440-93J00	336A-21	31918-92J01	301A-17		561A-7
	336B-21	32000-89L03	553A-1		561B-7
	336C-21	32102-89L00	303B-4		561C-7
	336D-11		561A-4	32815-89L10	561D-7
	336E-11		561B-4	32851-93J00	553A-4
			561C-4		334C-15
			561D-4		513A-36
		32102-89L10	303A-4	32890-89L03	310A-5
		32120-89L10	303A-1		310C-5
		32120-89L20	303B-1		310E-5
			561A-5		310G-5
			561B-5		310J-5
31000-89L21	561A-1		561C-5		310L-5
	561B-1	32800-89L01	561D-5		310N-5
	561C-1		310A-1		310P-5
	561D-1		310C-1	32890-89L10	310B-5
31100-89L00	301A-1		310E-1		310D-5
	561A-3		310G-1		310F-5
	561B-3		310J-1		310H-5
	561C-3		310L-1		310K-5
	561D-3		310N-1		310M-5
31101-89L10	561A-2		310P-1		310R-5
	561B-2	32800-89L02	310B-1	32916-89L00	322A-11
	561C-2		310D-1		322B-7
	561D-2		310F-1		322C-7
31123-89J10	338A-7		310H-1		322D-11
31123-94J01	340A-5		310K-1	33220-84M10	303A-9
31133-94910	340A-4		310M-1		303B-9
31135-94900	340A-7		310R-1	33410-89L11	310A-15
31136-94J00	340A-3		561A-6		310B-15
31150-98L00	301A-2		561B-6		310C-15
31170-89L00	301A-3		561C-6		310D-15

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	310E-15		310E-18	34112-96L00	600A-3
	310F-15		310F-18		600B-2
	310G-15		310G-18		600B-7
	310H-15		310H-18	34190-87D00	501A-12
	310J-15		310J-18		501B-12
	310K-15		310K-18	34190-88L00	600A-15
	310L-15		310L-18		600B-11
	310M-15		310M-18	34190-95500	501A-10
	310N-15		310N-18		501B-10
	310P-15		310P-18	34191-92E00	501A-7
	310R-15		310R-18		501B-7
33500-07H00	310A-12	33930-89L00	310E-17-1	34193-96L00	600A-4
	310B-12		310F-17-1		600B-3
	310C-12		310G-17		600B-8
	310D-12		310H-17	34200-93J22	501A-13-1
	310E-12		561B-24		501B-13-1
	310F-12	33930-89L10	310E-17-2	34200-93J34	501A-13-2
	310G-12		310F-17-2		501B-13-2
	310H-12	33930-89L20	310J-17-1	34211-96L00	600A-5
	310J-12		310K-17-1		600B-4
	310K-12		310L-17		600B-9
	310L-12		310P-17	34300-93J03	501A-15-1
	310M-12		310R-17		501B-15-1
	310N-12		561C-24	34300-93J14	501A-15-2
	310P-12	33930-89L30	310J-17-2		501B-15-2
	310R-12		310K-17-2	34310-92E01	501A-16
33634-94L00	322A-13-2	33930-89L40	310A-17-1		501B-16
33634-96J00	322A-13-1		310B-17-1	34360-92E00	501A-17
	322B-8		310C-17		501B-17
	322C-8		310D-17	34500-93J02	501A-1-1
	322D-13		561A-24		501B-1-1
33799-97E00	340A-6	33930-89L50	310A-17-2	34500-93J13	501A-1-2
33800-89L10	561A-12		310B-17-2		501B-1-2
	561B-12	33930-89L60	310L-17-1	34600-93J02	501A-3-1
	561C-12		310M-17-1		501B-3-1
	561D-12		561D-24	34600-93J13	501A-3-2
33810-89L10	322A-1	33930-89L70	310L-17-2		501B-3-2
	322B-1		310M-17-2	34825-96L00	600A-6
	322C-1	34000-96L45	600A-1		600B-5
	322D-1	34011-96L15	600A-2		600B-10
	561A-13	34011-96L41	600B-1	36001-88L00	600A-9
	561B-13	34011-96L51	600B-6		600B-12
	561C-13	34100-93J22	501A-5-1	36360-99J10	334A-3
	561D-13		501B-5-1		334B-3
33833-91J00	444A-21	34100-93J33	501A-5-2		334C-3
	444B-21		501B-5-2		334D-3
33925-89L00	310A-18	34100-93J42	501A-5-3	36367-89L00-QTN	334A-4-3
	310B-18		501B-5-3		334C-4-3
	310C-18	34100-93J53	501A-5-4	36367-89L00-Y5S	334A-4-2
	310D-18		501B-5-4		334C-4-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
36367-89L00-YAY	334D-4-2	36620-89L00	322C-5	36665-88L10	600A-14
	334A-4-1		322D-8		600A-23
	334B-4		513A-12		600B-17
	334C-4-1		450A-56		600B-28
36610-89LC0	334D-4-1	36620-89L10	450C-57	36667-96L20	521B-3
	322A-5-2		508A-57		600A-28
	322A-5-1		546A-1		600A-29
	561A-19		450B-49		600B-32
36610-89LG0	561B-19	36620-89L10	450D-51	36740-94J00	553A-10
	561C-19		546B-1		36894-87D00
	561D-19		322B-18-1		335D-9
	322B-2		322C-20-1		335D-10
36610-89LH0	513A-11	36620-93J42	521B-1-1	36895-87D01	335D-11
	322D-5		322B-18-2		450B-52
	322C-2		322C-20-2		508B-49
	36615-96300		521B-1-2		521A-1
36615-96300	303A-12	36621-93J00	521B-2	37100-96J01	546A-3
	322A-9		450A-2		546B-3
	322D-9		450B-2		553A-17
	450A-58		508A-2		600A-30
36615-96300	450B-51	36628-92E01	508B-2	37100-98L00	530A-1
	450C-59		450C-2		530A-17
	450D-53		450D-2		530B-1
	501A-9		553A-13		530B-8
36616-89L10	501B-9	36660-89L03	600A-25	37110-93J02	530B-17
	508A-59		600B-18		530A-2
	600A-8		600A-7		530A-18
	600B-31		600B-30		450C-3
36616-89L20	322C-17	36662-88L00	600B-19	37110-93J20	450D-3
	322D-22		600B-21		450A-3
	334A-10		600A-10		508A-3
	334B-10		600A-16		450B-3
36616-89L30	334D-9	36662-88L20	600B-13	37110-94J10	508B-3
	334C-9		600B-22		530B-2
	513A-37		600A-17		530B-9
	322A-14		600B-23		530B-18
36617-89L01	322B-9	36662-88L30	600A-18	37138-98L00	530B-5
	322A-12		600B-24		530B-12
	322D-12		600A-11		530B-21
	561A-14		600A-21		530A-6
36617-89L10	561B-14	36664-88L00	600B-14	37139-99E00	530A-22
	561C-14		600B-26		530B-3-3
	561D-14		600A-12		530B-10-3
	322C-10		600A-24		530B-19-3
36617-89L50	322C-9	36665-88L00	600B-15	37141-98L10	530B-3-4
	322D-14		600B-29		530B-10-4
	322A-15		600A-13		530B-19-4
	322B-10		600A-22		530B-3-5
36618-43410	322A-8	36665-88L00	600B-16	37141-98L20	530B-10-5
	322B-5		600B-27		530B-19-5
					530B-3-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37141-98L40	530B-10-6	37141-99E70	450C-4-3	37141-99E80	530B-4-9
	530B-19-6		450D-4-3		530B-11-9
	530B-3-7		508A-4-3		530B-20-9
	530B-10-7		508B-4-3		450A-4-8
37141-98L50	530B-19-7	37141-99E30	530A-3-3	37141-99E40	450B-4-8
	530B-3-8		530A-19-3		450C-4-8
	530B-10-8		530B-4-5		450D-4-8
	530B-19-8		530B-11-5		508A-4-8
37141-98L60	530B-3-9	37141-99E80	530B-20-5	37141-99E90	508B-4-8
	530B-10-9		450A-4-4		530A-3-8
	530B-19-9		450B-4-4		530A-19-8
	530B-3-10		450C-4-4		530B-4-10
37141-98L70	530B-10-10	37141-99E90	450D-4-4	37141-99E00	530B-11-10
	530B-19-10		508A-4-4		530B-20-10
	530B-3-11		508B-4-4		450A-4-9
	530B-10-11		530A-3-4		450B-4-9
37141-98L80	530B-19-11	37141-99E50	530A-19-4	37141-99E60	450C-4-9
	530B-3-12		530B-4-6		450D-4-9
	530B-10-12		530B-11-6		508A-4-9
	530B-19-12		530B-20-6		508B-4-9
37141-98LA0	530B-3-1	37141-99E10	450A-4-5	37141-99E20	530A-3-9
	530B-10-1		450B-4-5		530A-19-9
	530B-19-1		450C-4-5		530B-4-11
	530B-3-2		450D-4-5		530B-11-11
37141-98LB0	530B-10-2	37141-99E60	508A-4-5	37141-99E70	530B-20-11
	530B-19-2		508B-4-5		450A-4-10
	450A-4-1		530A-3-5		450B-4-10
	450B-4-1		530A-19-5		450C-4-10
37141-99E00	450C-4-1	37141-99E80	530B-11-7	37141-99E90	450D-4-10
	450D-4-1		530B-20-7		508A-4-10
	508A-4-1		450A-4-6		508B-4-10
	508B-4-1		450B-4-6		530A-3-10
37141-99E10	530A-3-1	37141-99E90	450B-4-6	37141-99E00	530A-19-10
	530A-19-1		450C-4-6		530B-4-12
	530B-4-3		450D-4-6		530B-11-12
	530B-11-3		508A-4-6		530B-20-12
37141-99E20	530B-20-3	37141-99E60	508B-4-6	37141-99E70	450A-4-11
	450A-4-2		530A-3-6		450B-4-11
	450B-4-2		530A-19-6		450C-4-11
	450C-4-2		530B-4-8		450D-4-11
37141-99E30	450D-4-2	37141-99E80	530B-11-8	37141-99E90	508A-4-11
	508A-4-2		530B-20-8		508B-4-11
	508B-4-2		450A-4-7		530A-3-11
	530A-3-2		450B-4-7		530A-19-11
37141-99E40	530A-19-2	37141-99E90	450C-4-7	37141-99E00	530B-4-1
	530B-4-4		450D-4-7		530B-11-1
	530B-11-4		508A-4-7		530B-20-1
	530B-20-4		508B-4-7		450A-4-12
37141-99E50	450A-4-3	37141-99E60	530A-3-7	37141-99E70	450B-4-12
	450B-4-3		530A-19-7		450C-4-12

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	450D-4-12	37801-98301	553A-11		544B-4
	508A-4-12	37803-93J06	530A-9		544C-4
	508B-4-12	37803-98L00	530B-28	37850-94JA3	327B-3
	530A-3-12	37820-89L00	334A-2	37850-96L00	450C-11
	530A-19-12		334B-2		450D-9
	530B-4-2		334C-2	37850-99E05	327A-3
	530B-11-2		334D-2	37851-89L00	327B-10
37143-99E01	530B-20-2	37820-93J11	450A-7	37852-94JB0	327B-4
	450A-5		450B-5	38100-89LA3	338A-14
	450C-5		450C-8		340A-1
	508A-5		450D-6	38410-93J21	327A-1
	530A-4		508A-7		327B-1
	530A-20		508B-5	38415-89L00	327A-2
37149-93J00	450A-6		530A-10		327B-2
	450C-6		530A-23	38500-93J00	450A-11
	508A-6	37820-98L00	530B-13		508A-11
	530A-5		530B-22	38500-93J90	450B-9
37161-89L02	530A-21		530B-29		450C-12
	334A-5	37823-92E02	450A-8		450D-10
	334B-5		450B-6		508B-9
	334D-5		450C-9		530A-7
	561A-15		450D-7		530A-27
	561B-15		508A-8		530B-6
	561C-15		508B-6		530B-15
	561D-15		530A-11		530B-24
37163-89L00	334A-6		530A-24	38860-76F01	310A-19
	334B-6	37823-97J00	444A-33		310B-19
	334C-5		444B-33		310C-19
	513A-15	37823-98L00	530B-14		310D-19
37210-93J00	530A-15		530B-23		310E-19
	530B-26		530B-30		310F-19
37212-93J00	530A-16	37825-99E10	530A-13		310G-19
	530B-27	37826-92J10	450A-9		310H-19
37721-88L01	545A-11		450B-7		310J-19
	545B-11		450C-10		310K-19
	545C-11		450D-8		310L-19
37721-89L00	334A-7		508A-9		310M-19
	334B-7		508B-7		310N-19
	334C-6		530A-12		310P-19
	334D-6		530A-25		310R-19
37721-93J91	450C-7	37826-97J01	444A-34		561A-20
	450D-5		444B-34		561B-20
37725-89L01	334A-11	37830-89L10	444A-32		561C-20
	334B-11		444B-32		561D-20
	334C-10	37832-98L00	530B-31	38915-90J00	310A-20
	334D-10	37835-91J00-QTN	444A-35-3		310B-20
37726-89L00	334A-8	37835-91J00-Y5S	444A-35-2		310C-20
	334B-8	37835-91J00-YAY	444A-35-1		310D-20
	334C-7		444B-35		310E-20
	334D-7	37850-88L00	544A-4		310F-20

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	310G-20		575A-1		336D-7
	310H-20	41210-89LA0	335D-28		336E-7
	310J-20	41210-99JL1	335A-25	43411-89L00	336A-27
	310K-20		335B-25		336B-27
	310L-20		335C-25	43411-89LA0	336E-14
	310M-20	41211-94L00	335D-4	43411-939L0	336A-19
	310N-20	41211-99JL0	335A-3		336B-19
	310P-20		335B-3		336C-19
	310R-20		335C-3		336D-9
	561A-21	41212-91J00	335A-4		336E-9
	561B-21		335B-4	43412-93901	336A-20
	561C-21		335C-4		336B-20
	561D-21		335D-5		336C-20
39600-89L02	553A-9	41213-94J01	335A-5		336D-10
39601-95D01	553A-12		335B-5		336E-10
39602-93900	553A-14		335C-5	43415-89L01	336A-28
39950-88L02	600A-20		335D-6		336B-28
	600B-25	41221-94JA0	335D-14		336E-15
		41222-94JA0	335D-15	43420-89L00	336A-29
		41225-89L00	336A-9		336B-29
			336B-9		336E-16
			336C-9	43425-89L00	336A-30
		41226-94JA0	335D-16		336B-30
		43111-89L00-QTN	336A-2-3		336E-17
		43111-89L00-Y5S	336A-2-2	43512-89L00	336A-31
41111-89L00-QTN	335A-1-3		336C-2-2		336B-31
41111-89L00-Y5S	335A-1-2	43111-89L00-YAY	336A-2-1		336E-18
	335C-1-2		336B-2-1	43515-88L00	336A-32
41111-89L00-YAY	335A-1-1		336C-2-1		336B-32
	335B-1	43111-89L11-QTN	336A-2-6		336E-19
	335C-1-1	43111-89L11-Y5S	336A-2-5	43516-89J00	336A-33
41111-89LA0-QTN	335D-1-3		336C-2-4		336B-33
41111-89LA0-Y5S	335D-1-2	43111-89L11-YAY	336A-2-4		336E-20
41111-89LA0-YAY	335D-1-1		336B-2-2	43517-89L00	336A-34
41121-89L00-QTN	335A-2-3		336C-2-3		336B-34
41121-89L00-Y5S	335A-2-2	43111-89LA0-QTN	336D-2-6		336E-21
	335C-2-2	43111-89LA0-Y5S	336D-2-5	43711-94JA0	336D-3
41121-89L00-YAY	335A-2-1		336E-2-4		336E-3
	335B-2	43111-89LA0-YAY	336D-2-4	43711-99J00	336A-3
	335C-2-1		336E-2-3		336B-3
41121-89LA0-QTN	335D-2-3	43111-89LB0-QTN	336D-2-3		336C-3
41121-89LA0-Y5S	335D-2-2	43111-89LB0-Y5S	336D-2-2	43750-99J60-QTN	336A-4-3
41121-89LA0-YAY	335D-2-1		336E-2-2		336D-4-3
41130-89L00	335C-7	43111-89LB0-YAY	336D-2-1	43750-99J60-Y5S	336A-4-2
	513A-16		336E-2-1		336C-4-2
41130-90L00	335A-7	43112-94L01	405A-4		336D-4-2
	335B-7		405B-4		336E-4-2
41130-94JA1	335D-7	43211-87JL0	336A-7	43750-99J60-YAY	336A-4-1
41135-93J11	335D-8		336B-7		336B-4-1
41161-94400	442A-1		336C-7		336C-4-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
43750-99J70-QTN	336D-4-1	45722-94J11	336A-25	54145-89L01	410D-17
	336E-4-1		336B-25		410E-17
	336A-4-6		336C-25		410A-18
	336D-4-6	48000-89LA4	338A-1		410B-18
43750-99J70-Y5S	336A-4-5	48121-94JA0	338A-16	54151-99J00	410C-18
	336C-4-4	48321-97E01	338A-17		410D-18
	336D-4-5	48325-97E00	338A-18		410E-18
	336E-4-4	48510-94600	338A-5		405A-11
43750-99J70-YAY	336A-4-4	48553-88L00	338A-4	54167-99J01	405B-11
	336B-4-2	48572-94J00	338A-8		405A-12
	336C-4-3	48582-97E00	338A-13		405B-12
	336D-4-4	48583-95E00	338A-6	54211-99J01-QTN	405A-13-3
43755-99J00	336E-4-3	48664-87D00	338A-9		405A-13-2
	336C-27		338A-15		405A-13-1
	336D-14	48681-87J11	338A-3		405B-13
43755-99J01	513A-17	48864-89LA0	338A-2	54213-93901	405A-15
43759-89L00	336C-31				405B-15
	336D-18			54221-99J01-QTN	405A-14-3
	513A-18			54221-99J01-Y5S	405A-14-2
45212-89L00	336A-10			54221-99J01-YAY	405A-14-1
45231-89L00	336B-10	50000		55100-99J40-QTN	405B-14
	336C-10				407A-1-3
	336A-11				407C-1-3
	336B-11				407D-1-3
	336C-11				407E-1-3
45241-89L00	336A-12	51110-89L03	401A-1	55100-99J40-Y5S	407A-1-2
	336B-12	51211-89L00	401A-2		407C-1-2
	336C-12	52110-89L40-QTN	405A-3-3		407D-1-2
45247-99J00	336A-14	52110-89L40-Y5S	405A-3-2		407E-1-2
	336B-14	52110-89L40-YAY	405A-3-1		407G-1-2
	336C-14		405B-3-1	55100-99J40-YAY	407A-1-1
45250-89L03	336A-15	52110-89L50-QTN	405A-3-6		407B-1
	336B-15	52110-89L50-Y5S	405A-3-5		407C-1-1
	336C-15	52110-89L50-YAY	405A-3-4		407D-1-1
45261-89L00	335A-13		405B-3-2		407E-1-1
	335B-13	52113-89L00	405A-6		407F-1
	335C-13		405B-6		407G-1-1
45269-89L00	335A-23	52131-89L00-QTN	405A-17-3	55321-87J01	111A-7
	335B-23	52131-89L00-Y5S	405A-17-2		335D-20-1
	335C-23	52131-89L00-YAY	405A-17-1		336D-20-1
45420-89L01	335A-19		405B-17		336E-25-1
	335B-19	54112-99J01	401A-7		338A-19-1
	335C-19	54113-99J00	401A-8		407A-6
45421-94JA0	335D-17	54125-99J00	401A-10		407B-6
45425-94J01	335A-20	54127-89L00	401A-9		407C-6
	335B-20	54130-89L00	401A-11		407D-6
	335C-20	54137-89L00	401A-12		407E-6
45710-89L10	336A-24	54144-89L11	410A-17		407F-6
	336B-24		410B-17		407G-6
	336C-24		410C-17	55321-87J11	335D-20-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	336D-20-2	57311-99J10	220A-8	58120-94JA1	407C-16
	336E-25-2		220B-8		407D-16
	338A-19-2	57510-99J11	220A-9		407E-16
	407A-23		220B-9		407F-16
	407B-23	57521-99J10	220A-10		407G-16
	407C-24		220B-10	59178-97J00	407A-8
	407D-24	57610-99JL0	220A-14		407B-8
	407E-24		220B-14		407C-8
	407F-24	57621-99J11	220A-15		407D-8
	407G-24		220B-15		407E-8
55331-99J10	407A-21	57631-93901	220A-19		407F-8
	407B-21		220B-19		407G-8
	407C-21	57632-94J00	407A-17	59262-94J00	175A-13
	407D-21		407B-17	59315-94J00	335A-14
	407E-21		407C-17		335B-14
	407F-21		407D-17		335C-14
	407G-21		407E-17	59441-94J00	220A-17
55332-99J10	407A-22		407F-17		220B-17
	407B-22		407G-17	59441-99J00	220A-18
	407C-22	57632-97L00	220A-20		220B-18
	407D-22		220B-20	59800-89L10	420A-15
	407E-22	57633-93901	407C-23		420B-15
	407F-22		407D-23		420C-15
	407G-22		407E-23		420D-15
56120-99J41-QTN	407A-10-3		407F-23		420E-15
	407C-10-3		407G-23		420F-13
	407D-10-3	58100-89L00-019	407A-15-1		420G-15
	407E-10-3		407B-15-1		420H-15
56120-99J41-Y5S	407A-10-2	58100-89L20-019	407A-15-2		420J-13
	407C-10-2		407B-15-2		420K-15
	407D-10-2	58100-89L50-019	407A-15-5		420L-15
	407E-10-2		407B-15-5		420M-13
	407G-10-2	58100-89L60-019	407A-15-3		420N-15
56120-99J41-YAY	407A-10-1		407B-15-3		420P-15
	407B-10	58100-89L70-019	407A-15-4		420R-13
	407C-10-1		407B-15-4		420S-15
	407D-10-1	58100-90L41-019	407A-15-6		420T-15
	407E-10-1		407B-15-6		420U-13
	407F-10	58100-90L50-019	407A-15-7		420V-15
	407G-10-1		407B-15-7		420W-15
56130-99J30	220A-21	58100-90L60-019	407A-15-8		420X-13
	220B-21		407B-15-8		
56132-99J10	220A-23	58100-94JA2-019	407G-15-1		
	220B-23	58100-94JB1-019	407C-15		
57100-90L30	220A-1-2		407D-15		
	220B-1-2		407E-15		
57100-90L40	220A-1-1		407F-15		
	220B-1-1		407G-15-2		
57100-90L50	220A-1-3	58120-89L00	407A-16	60000	
	220B-1-3		407B-16		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61112-89L10	410A-4 410B-4 410C-4 410D-4 410E-4		420M-1 420N-1-1 420P-1-1 420R-1-1 420S-1	61435-89L40-YAY	420C-11-2 420B-11-1 420C-11-1 420E-11 420F-11
61124-89L40	410A-13 410B-13 410E-13		420T-1 420U-1 420V-1-1	61435-89L50-QTN	420H-11-2 420J-11-2 420H-11-1
61124-89L50	410C-13 410D-13		420W-1-1 420X-1-1	61435-89L50-YAY	420J-11-1 420L-11
61134-89L00	513A-21 410A-5 410B-5 410C-5 410D-5 410E-5	61412-89L00	410A-9 410B-9 410C-9 410D-9 410E-9	61435-89L60-QTN	420M-11 420P-11-2 420R-11-2 420W-11-2
61151-91J11	146A-43 146B-43 410A-14 410B-14 410C-14 410D-14 410E-14	61433-89L01	420A-2 420B-2 420C-2 420D-2 420E-2 420F-2	61435-89L60-YAY	420P-11-1 420R-11-1 420T-11 420U-11 420W-11-1
61155-89L00	405A-5 405B-5		420H-2 420J-2 420K-2	61443-89L00-QTN	420X-11-1 420B-8-2 420C-8-2 420H-8-2 420J-8-2
61400-89L40-QTN	420B-1-2 420C-1-2 420H-1-2 420J-1-2 420P-1-2 420R-1-2 420W-1-2 420X-1-2 420A-1-2 420D-1-2		420L-2 420M-2 420N-2 420P-2 420R-2 420S-2 420T-2 420U-2 420V-2 420W-2		420P-8-2 420R-8-2 420W-8-2 420X-8-2 420B-8-1 420C-8-1 420E-8 420F-8 420H-8-1 420J-8-1
61400-89L40-Y5S	420G-1-2 420K-1-2 420N-1-2 420V-1-2 420A-1-1 420B-1-1 420C-1-1 420D-1-1 420E-1 420F-1	61435-89L10-Y5S 61435-89L10-YAY 61435-89L20-Y5S 61435-89L20-YAY 61435-89L30-Y5S	420X-2 420A-11-2 420D-11-2 420A-11-1 420D-11-1 420G-11-2 420K-11-2 420G-11-1 420K-11-1 420N-11-2 420V-11-2 420N-11-1 420S-11 420V-11-1	61443-89L00-YAY	420B-8-1 420C-8-1 420E-8 420F-8 420H-8-1 420J-8-1 420L-8 420M-8 420P-8-1 420R-8-1 420T-8 420U-8 420W-8-1 420X-8-1 420A-8-2 420D-8-2 420G-8-2 420K-8-2 420N-8-2 420V-8-2 420A-8-1
61400-89L40-YAY	420G-1-1 420H-1-1 420J-1-1 420K-1-1 420L-1	61435-89L30-YAY 61435-89L40-QTN	420B-11-2	61443-97L01-YAY	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	420D-8-1 420G-8-1 420K-8-1 420N-8-1 420S-8 420V-8-1	61453-89L00-YAY	420W-9-2 420X-9-2 420B-9-1 420C-9-1 420E-9 420F-9	61471-89L00	420A-14 420B-14 420D-14 420E-14 420G-14 420H-14
61446-89L10-QTN	420B-12-2 420H-12-2 420P-12-2 420W-12-2		420H-9-1 420J-9-1 420L-9 420M-9 420P-9-1 420R-9-1 420T-9 420U-9		420K-14 420L-14 420N-14 420P-14 420S-14 420T-14 420V-14 420W-14
61446-89L10-Y5S	420A-12-2 420D-12-2 420G-12-2 420K-12-2 420N-12-2 420V-12-2		420W-9-1 420X-9-1 420A-9-2 420D-9-2 420G-9-2 420K-9-2 420N-9-2 420V-9-2 420A-9-1 420D-9-1 420G-9-1 420K-9-1 420N-9-1 420S-9 420V-9-1 420A-13 420B-13 420C-12 420D-13 420E-13 420F-12	61472-97J00 61494-89L10 61610-90L00 61616-93EL0 61619-89L00	167A-13 167B-13 126A-12 126B-12 126C-13 410A-10 410B-10 410C-10 410D-10 410E-10 410A-11 410B-11 410C-11 410D-11 410E-11 420A-5 420B-5 420C-5 420D-5 420E-5 420F-5 420G-5 420H-5 420J-5 420K-5 420L-5 420M-5 420N-5 420P-5 420R-5 420S-5 420T-5 420U-5 420V-5 420W-5 420X-5
61447-89L00-QTN	420W-12-1 420W-17-2 420X-15-2 420D-17-2 420K-17-2 420V-17-2	61458-89L30	420A-13 420B-13 420C-12 420D-13 420E-13 420F-12 420G-13 420H-13 420J-12 420K-13 420L-13 420M-12 420N-13 420P-13 420R-12 420S-13 420T-13 420U-12 420V-13 420W-13 420X-12		
61447-89L00-Y5S	420D-17-1 420E-17 420F-15 420K-17-1 420L-17 420M-15 420V-17-1 420W-17-1 420X-15-1 420B-9-2 420C-9-2 420H-9-2 420J-9-2 420P-9-2 420R-9-2				
61453-89L00-QTN					

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61622-90L00	420A-4	61810-89L30-QTN	410D-1-3	63131-99J11-YAY	444A-24-1	65781-98500	432A-12	67223-92E00	545B-2	67233-92E00	450D-16
	420B-4		410D-1-2		444B-24		583A-9		545C-2		508A-17
	420C-4		410E-1-2		63133-89L00		583B-9		545A-3		508B-14
	420D-4		410A-2-1		444B-25		444A-26		545B-3		545A-26
	420E-4		410B-2		63210-89L11		444B-26		545C-3		545B-26
	420F-4		410C-2-1		444B-6		432A-4		450A-15		545C-26
	420G-4		410E-2-1		63215-93110		432A-5		450B-12		545A-22
	420H-4		410A-2-3		444B-31		432A-6		450C-16		545B-22
	420J-4		410A-2-2		63220-89L00		513A-1		450D-14		545C-22
	420K-4		410C-2-2		444B-7		450A-52		508A-15		545A-27
61631-99J00	420L-4	61820-89L00-QTN	410E-2-2	63225-93200	444A-9	67200-88L01	450C-53	67224-92E00	508B-12	67236-92E00	545B-27
	420M-4		410D-2-1		444B-9		508A-52		545A-9		545C-27
	420N-4		410D-2-3		63225-98601		515A-1		545B-9		545A-12
	420P-4		410D-2-2		444B-8		515B-1		545C-9		545B-12
	420R-4		410A-15		63240-94J20		544A-1		450A-49		545C-12
	420S-4		410B-15		444B-10		544B-1		450B-46		545A-28
	420T-4		410C-15		63241-986C0		544C-1		450C-50		545B-28
	420U-4		410D-15		444B-11		545A-1		450D-48		545C-28
	420V-4		410E-15		63244-94J10		545B-1		508A-49		450A-18
	420W-4		410A-6-1		444B-12		545C-1		508B-46		450B-15
61810-89L20-QGF	420X-4	61831-89L00-QGF	410B-6	63610-89L00	444A-14	67200-93J61	450C-1	67226-92E00	545A-15	67238-88L00	450C-19
	420A-6		410C-6-1		444B-14		450D-1		545B-15		450D-17
	420B-6		410D-6-1		63610-89L10		508A-1		545C-15		508A-18
	420C-6		410E-6-1		444B-15		450A-1		545A-16		508B-15
	420D-6		410A-6-3		65000-89L10		450B-1		545B-16		545A-31
	420E-6		410D-6-3		583A-1		508B-1		545C-16		545B-31
	420F-6		410A-6-2		583B-1		544A-17		545A-24		545C-31
	420G-6		410C-6-2		65520-99100		544B-17		545B-24		450A-50
	420H-6		410D-6-2		583A-2		544C-17		545C-24		450B-47
	420J-6		410E-6-2		583B-2		544A-7		545A-18		450C-51
61810-89L20-QTN	420K-6	63111-89L01-QTN	444A-1-3	65561-95D00	432A-3	67212-88L00	544B-7	67228-92E00	545B-18	67239-92E00	450D-49
	420L-6		444A-1-2		583A-3		544C-7		545C-18		508A-50
	420M-6		444A-1-1		583B-3		450A-13		450A-16		508B-47
	420N-6		444B-1		65700-87J19		450B-10		450B-13		545A-35
	420P-6		444A-22		583B-5		450C-13		450C-17		545B-35
	420R-6		444B-22		65700-89L32		450D-11		450D-15		545C-35
	420S-6		444A-3		65720-986L0		508A-13		508A-16		545A-41
	420T-6		444B-3		65740-95D01		508B-10		508B-13		545B-41
	420U-6		444A-2		583A-4		450A-12		545A-20		545C-41
	420V-6		444B-2		583B-4		508A-12		545B-20		545A-17
61810-89L20-QGF	420W-6	63116-99J00	444A-4	65750-87J11	432A-9	67220-95630	450A-14	67230-88L00	450C-20	67241-88L00	545B-17
	420X-6		444B-4		583A-6		450B-11		545A-32		545C-17
	410A-1-1		444A-5-3		583B-6		450C-15		545B-32		545A-34
	410B-1		444A-5-2		65750-95501		450D-13		545C-32		545B-34
	410C-1-1		444A-5-1		583A-7		508A-14		545A-33		545C-34
	410A-1-3		444B-5		583B-7		508B-11		545B-33		450A-19
	410A-1-2		444A-23		432A-10-2		545A-8		545C-33		450B-16
	410C-1-2		444B-23		65770-89L00		545B-8		450A-17		450C-20
	410D-1-1		444A-24-3		65770-90J13		545C-8		450B-14		450D-18
	410E-1-1		444A-24-2		583B-8		545A-2		450C-18		508A-19

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67243-92E00	508B-16	67253-95600	544B-13	67263-88L30	450D-31
	545A-38		544C-13		508A-32
	545B-38		450A-25		508B-29
	545C-38		450B-22		450A-10
67243-95600	450A-20	67255-96L00	450C-26	67264-88L00	450B-8
	450B-17		450D-24		508A-10
	450C-21		508A-25		508B-8
	450D-19		508B-22		544A-18
67244-95600	508A-20	67256-95600	450A-26	67264-88L10	544B-18
	508B-17		450B-23		544C-18
	450A-21		450C-27		544A-19
	450B-18		450D-25		544B-19
67245-92E00	450C-22	67257-88L00	508A-26	67264-95600	544C-19
	450D-20		508B-23		450A-34
	508A-21		450A-27		450B-31
	508B-18		450B-24		450C-35
67245-95600	545A-23	67257-96L00	450C-28	67267-96L00	450D-33
	545B-23		450D-26		508A-34
	545C-23		508A-27		508B-31
	450A-22		508B-24		450A-35
67246-88L00	450B-19	67258-99E00	544A-9	67269-92E01	450B-32
	450C-23		544B-9		450C-36
	450D-21		544C-9		450D-34
	508A-22		450A-28		508A-35
67251-88L00	508B-19	67259-87D00	450B-25	67272-88L00	508B-32
	545A-36		450C-29		545A-29
	545B-36		450D-27		545B-29
	545C-36		508A-28		545C-29
67251-96L00	544A-20	67261-88L00	508B-25	67273-88L00	450A-46
	544B-20		450A-30		450B-43
	544C-20		450B-27		544A-16
	450A-23		450C-31		544B-16
67252-88L00	450B-20	67261-88L10	450D-29	67273-95601	544C-16
	450C-24		508A-30		545A-6
	450D-22		508B-27		545B-6
	508A-23		450A-31		545C-6
67252-95600	508B-20	67261-96L00	508B-28	67273-95610	450A-25
	545A-39		544A-3		544B-25
	545B-39		544B-3		544C-25
	545C-39		544C-3		545A-47
67253-88L00	450A-24	67261-96L00	544A-2	67273-95610	545B-47
	450B-21		544B-2		545C-47
	450C-25		544C-2		450A-36
	450D-23		450A-32		450B-33
67253-92E00	508A-24	67261-96L00	450B-29	67273-95610	450C-37
	508B-21		450C-33		450D-35
	545A-40				
	545C-40				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67291-92E00	508A-36	67291-92E10	515A-4	67296-95630	450B-40
	508B-33		515B-4		450C-44
	544A-15		545A-7		450D-42
	544B-15		545B-7		508A-43
67274-88L00	544C-15	67292-94300	545C-7	67296-95640	508B-40
	545A-42		545A-37		545A-43
	545B-42		545B-37		545B-43
	545C-42		545C-37		545C-43
67275-95600	450A-37	67296-96L00	450A-38	67296-96L10	450A-42
	450B-34		450B-35		450B-39
	450C-38		450C-39		450C-43
	450D-36		450D-37		450D-41
67281-88L00	508A-37	67296-88D10	508A-38	67296-96L10	508A-42
	508B-34		508B-35		508B-39
	544A-14		545A-5		508A-54
	544B-14		545B-5		450C-55
67284-94L10	544C-14	67296-88D10	545C-5	67296-96L10	508A-54
	544A-10		450A-39		515A-3
	544B-10		450B-36		515B-3
	544C-10		450C-40		450A-41
67286-92E00	450A-51	67296-88L00	450D-38	67297-95600	450B-38
	450B-48		508A-39		450C-42
	450C-52		508B-36		450D-40
	450D-50		545A-13		508A-41
67287-92E00	508A-51	67296-90J20	545A-30	67296-96L10	508B-38
	508B-48		545B-13		450A-33
	545A-19		545B-30		450B-30
	545B-19		545C-13		450C-34
67288-92E00	545C-19	67296-92E11	545C-30	67320-93J00	450D-32
	545A-46		544A-5		508A-33
	545B-46		544B-5		508B-30
	545C-46		544C-5		450A-44
67288-92E20	545A-4	67296-92E20	450A-40	67320-93J10	450B-41
	545B-4		450B-37		450C-45
	545C-4		450C-41		450D-43
	544A-6		450D-39		508A-44
67288-92E60	544B-6	67296-92E30	508A-40	67320-93J20	508B-41
	544C-6		508B-37		508A-56-1
	544A-12		450C-14		515A-5-1
	544B-12		450D-12		515B-5-1
67288-94320	544C-12	67296-92E60	545A-14	67320-93J40	508A-56-2
	450A-48		545B-14		515A-5-2
	450A-55		545C-14		515B-5-2
	450B-45		545A-44		508A-56-3
67296-92E30	450C-49	67296-92E60	545B-44	67320-93J40	515A-5-3
	450C-56		545C-44		515B-5-3
	450D-47		544A-11		508A-56-4
	508A-48		544B-11		515A-5-4
67296-95610	508A-55	67296-95610	544C-11	67296-95610	515B-5-4
	508B-45		450A-43		508A-56-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67320-93J50	515A-5-5	77811-54GB0-0PG	420A-10	99011-89LC0-055	420W-16
	515B-5-5		420B-10		420C-14
	508A-56-6		420C-10		420F-14
	515A-5-6		420D-10		420J-14
67320-93J60	515B-5-6		420E-10		420M-14
	508A-56-7		420F-10		420R-14
	515A-5-7		420G-10		420U-14
	515B-5-7		420H-10		420X-14
67320-93J70	508A-56-8		420J-10	00000	
	515A-5-8		420K-10		
	515B-5-8		420L-10		
	508A-56-9		420M-10		
67320-93J80	515A-5-9		420N-10		
	515B-5-9		420P-10		
	206B-21		420R-10		
	513A-22		420S-10		
67340-89L10	206B-23		420T-10		513A-33
	513A-38		420U-10		561A-17
	166A-11		420V-10		561B-17
	206B-18		420W-10		561C-17
67500-88L00	513A-23		420X-10		561D-17
	544A-21		450A-29		206B-22
	544B-21		450B-26		322A-4
	544C-21		450C-30		322D-4
67701-99J02	442A-2		450D-28		303B-2
	575A-2		508A-29		561A-10
	442A-3		508B-26		561B-10
	575A-3				561C-10
67721-93E10	442A-4				561D-10
	575A-4				303A-2
	442A-5				303A-3
	442A-6				303B-3
67726-99E00	575A-5	90000			322A-21
	442A-5				322B-16
	575A-6				322C-16
	544A-8				322D-21
67728-99E00	544B-8				513A-34
	544C-8				163A-12
	167A-12-2				166A-9
	167B-12-2				175A-8
69711-91J01	167A-12-1				206A-17
	167B-12-1				206B-9
	335A-24				206B-15
	335B-24				322A-20
69711-93E11	335C-24				322B-15
	335D-27				322C-15
69911-91J51					322D-20
					303A-10
					303B-10
					310A-11
70000					310B-11

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	310C-11		163B-11		410B-16
	310D-11		167A-11		410C-16
	310E-11		167B-11		410D-16
	310F-11		175A-7		410E-16
	310G-11	01550-0625C	334A-15	02142-06207	206A-19
	310H-11		334B-15		206B-17
	310J-11		334C-14		501A-11
	310K-11		334D-14		501B-11
	310L-11		120A-13	03112-0630B	530A-26
	310M-11		146A-11		530A-14
	310N-11		146A-22		160A-12
	310P-11		146B-11		160B-12
	310R-11		146B-22	03142-05169	530B-7
	513A-35		206A-18		530B-16
	561A-8		206B-16		530B-25
	561B-8		167A-9		530B-32
	561C-8	01550-0630C	167B-9	03542-05169	420A-3
	561D-8		310A-16		420B-3
	146A-20		310B-16		420C-3
	146B-20		310C-16		420D-3
	166A-10		310D-16	01550-06207	420E-3
	334A-9		310E-16		420F-3
	334B-9		310F-16		420G-3
	334C-8		310G-16		420H-3
	334D-8		310H-16		420J-3
	310A-10		310J-16		420K-3
	310B-10		310K-16		420L-3
	310C-10		310L-16		420M-3
	310D-10		310M-16		420N-3
	310E-10		310N-16		420P-3
	310F-10		310P-16		420R-3
	310G-10		310R-16		420S-3
	310H-10	01550-06357	113A-2		420T-3
	310J-10		120A-14		420U-3
	310K-10		144A-9		420V-3
	310L-10		113A-7		420W-3
	310M-10		301A-18	03542-06209	420X-3
	310N-10		553A-5		146A-23
	310P-10		111A-9		146B-23
	310R-10		301A-19		120A-12
	553A-6		401A-15	04211-11129	111A-12
	561A-9		113A-3		113A-4
	561B-9		126A-3		126A-4
	561C-9		126B-3		126B-4
	561D-9		126C-3	04221-05109	126C-4
	111A-15		120A-15		220A-2
	146A-21		175A-14		220B-2
	146B-21		322C-18		407A-11
	162A-3	02142-0616C	322D-23	08110-60050	407B-11
	163A-13		410A-16		407C-11

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
08316-10087	407D-11	09116-06196	310A-4	09116-06522	310N-3
	407E-11		310B-4		310P-3
	407F-11		310C-4		310R-3
	407G-11		310D-4		327A-4
	301A-20		310E-4		327B-8
08322-0106A	303A-11	09116-06225	310F-4	09116-06523	410A-8
08341-31039	120A-9		310G-4		410B-8
	120A-10		310H-4		410C-8
	303A-7		310J-4		410D-8
	303B-7		310K-4		410E-8
09100-06178	335A-9	09116-06227	310L-4	09116-08128	410A-3
	335B-9		310M-4		410B-3
	335C-9		310N-4		410C-3
09100-08232	336A-23		310P-4		410D-3
	336B-23		310R-4		410E-3
	336C-23	09116-06229	336A-35	09116-08137	335D-18-1
	336D-13		336B-35		401A-13-1
	336E-13		336C-32		401A-13-2
	450A-45		336D-19		338A-21
	450B-42		336E-22		401A-3
	450C-46	09116-06227	444A-27	09116-08151	405A-7
	450D-44		444B-27		405A-18
	508A-45		513A-25		405B-7
	508B-42		407A-14		405B-18
	335A-15		407B-14		407A-5
09100-08311	335B-15	09116-06234	407C-14	09116-08154	335A-16-1
	335C-15		407D-14		407C-5
	335D-24		407E-14		407D-5
	432A-14		407F-14		407E-5
	120A-7		407G-14		407F-5
09103-06237	111A-8	09116-06517	220A-24	09116-08155	407G-5
09103-06267	335D-21		220B-24		444A-16
09103-06281	336D-21		206A-9		444B-16
	336E-26		126A-7		405A-16
	338A-20		126B-7		405B-16
	407A-7	09116-06234	126C-9	09116-08178	444A-28
	407B-7		146A-12		444B-28
	407C-7		146B-12		335D-18-2
	407D-7		310A-3		111A-4
	407E-7		310B-3		111A-3
	407F-7	09116-06234	310C-3	09119-08L01	545A-21
	407G-7		310D-3		545B-21
	160A-14		310E-3		545C-21
	160B-14		310F-3		327B-5
	336C-29		310G-3		544A-22
09108-08286	336D-16	09116-06517	310H-3	09125-05046	544B-22
	513A-24		310J-3		544C-22
	336A-26		310K-3		444A-29
	336B-26		310L-3		444B-29
	336C-26		310M-3		335D-12

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09126-06006	545A-25	09160-05024	335D-13	09160-08170	336B-22
	545B-25		513A-27		336C-22
	545C-25		545A-45		336C-28
	444A-17		545B-45		336D-12
	444B-17		545C-45		336D-15
09126-06015	340A-8	09160-05029	206B-11	09160-12066	336E-12
	444A-18		513A-28		513A-20
	444B-18		544A-23		335A-22
	327B-7		544B-23		335B-22
	544A-24		544C-23		335C-22
09136-05041	544B-24	09160-06046	166A-8	09160-15057	335D-26
	544C-24		206A-10		407A-19
	450A-47		206B-10		407B-19
	450B-44		513A-29		407C-19
	450C-48		166A-12		407D-19
09140-05005	450D-46	09160-06055	206B-19	09160-06082	407E-19
	508A-47		513A-30		407F-19
	508B-44		160A-15		407G-19
	545A-10		160B-15		303A-6
	545B-10		210A-8		303B-6
09140-08016	545C-10	09160-06085	335A-10	09160-17024	220A-11-1
	335A-16-2		335B-10		220A-11-3
	335B-16-2		335C-10		220A-11-5
	335C-16-2		336A-17		220A-11-7
	335D-25-2		336B-17		220A-11-9
09140-08023-XC0	335A-16-1	09160-17028	336C-17	09160-17029	220A-11-2
	335B-16-1		432A-15-1		220A-11-4
	335C-16-1		206A-11		220A-11-6
	335D-25-1		310A-21		220A-11-8
	401A-14		310B-21		220B-11-1
09140-10031	303A-5	09160-06094	310C-21	09160-17041	220B-11-2
	303B-5		310D-21		220B-11-3
	407A-18		310E-21		220B-11-4
	407B-18		310F-21		220B-11-5
	407C-18		310G-21		220B-11-6
09140-14008	407D-18	09160-06168	310H-21	09160-17053	220B-11-7
	407E-18		310J-21		220B-11-8
	407F-18		310K-21		220B-11-9
	407G-18		310L-21		220A-4
	444A-13		310M-21		220B-4
09148-06008	444B-13	09160-06171	310N-21	09160-17054	220B-11-3
	336C-30		310P-21		220B-11-5
	336D-17		310R-21		220B-11-6
	513A-26		120A-8		220B-11-7
	336A-36		432A-15-2		220B-11-8
09159-08L02	336B-36	09160-06175	335A-17	09160-20042	220A-5-2
	336E-23		335B-17		220A-5-2
	335A-8		335C-17		220A-5-3
	335B-8		335D-23		220A-5-3
	335C-8		336A-22		220A-5-4
09159-22006	09160-08082	09160-08081	335A-17	09160-20043	220B-5-4
			335B-17		220A-6
			335C-17		220B-6
			335D-23		220A-12-4
			336A-22		220B-12-4

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09160-25041	220A-12-5		310B-8		160B-17
	220B-12-5		310C-8	09202-04025	220A-16
09160-25042	220A-12-6		310D-8		220B-16
	220B-12-6		310E-8	09202-06023	401A-4
09160-27012	336A-5		310F-8		405A-8
	336A-8		310G-8		405A-20
	336B-5		310H-8		405B-8
	336B-8		310J-8		405B-20
	336C-5		310K-8		407A-4
	336C-8		310L-8		407B-4
	336D-5		310M-8		407C-4
	336D-8		310N-8		407D-4
	336E-5		310P-8		407E-4
	336E-8		310R-8		407F-4
09161-04012	410A-12	09180-06105	450A-53		407G-4
	410B-12		450C-54	09204-01002	206A-8
	410C-12		508A-53		206B-8
	410D-12		515A-2		336A-13
	410E-12		515B-2		336B-13
09161-08019	336A-37	09180-06186	206A-13		336C-13
	336B-37	09180-06362	206A-14		513A-19
	336E-24		206B-12	09204-02004	407A-20
09163-06001	444A-19	09180-06366	335A-11		407B-20
	444B-19		335B-11		407C-20
09164-14008	206A-12		335C-11		407D-20
09168-12017	405A-9	09181-15241	220A-13		407E-20
	405B-9		220B-13		407F-20
09169-06062	126A-6	09181-20244	220A-5-5		407G-20
	126B-6		220B-5-5	09205-02004	210A-4
	126C-8	09181-20246	220A-5-6	09205-03004	335D-19
	146A-13		220B-5-6	09205-06021	335A-6
	146B-13	09181-20248	220A-5-7		335B-6
	310A-7		220B-5-7		335C-6
	310B-7	09181-20251	220A-5-1		335D-3
	310C-7		220B-5-1	09229-04005	410A-20
	310D-7	09181-25160	220A-12-1		410B-20
	310E-7		220B-12-1		410C-20
	310F-7	09181-25162	220A-12-2		410D-20
	310G-7		220B-12-2		410E-20
	310H-7	09181-25164	220A-12-3		420A-7
	310J-7		220B-12-3		420B-7
	310K-7	09181-25181	220A-12-7		420C-7
	310L-7		220B-12-7		420D-7
	310M-7	09200-05014	336A-18		420E-7
	310N-7		336B-18		420F-7
	310P-7		336C-18		420G-7
	310R-7	09200-06061	336A-16		420H-7
	327A-5		336B-16		420J-7
	327B-9		336C-16		420K-7
09169-06095	310A-8	09202-04008	160A-17		420L-7

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	420M-7	09280-17003	111A-11		310H-9
	420N-7	09280-22019	111A-6		310J-9
	420P-7	09280-26005	146A-39		310K-9
	420R-7		146B-39		310L-9
	420S-7	09280-54001	175A-5		310M-9
	420T-7	09280-57002	407A-12		310N-9
	420U-7		407B-12	09320-09016	310R-9
	420V-7		407C-12		310B-6
	420W-7		407D-12		310D-6
	420X-7		407E-12		310F-6
09248-08001	407A-9		407F-12		310H-6
	407B-9		407G-12		310K-6
	407C-9	09282-12L04	401A-5		310M-6
	407D-9	09282-13L01	220A-22		310R-6
	407E-9		220B-22	09320-09052	126A-10
	407F-9	09282-27002	336A-6		126B-10
09248-12009	407G-9		336B-6		126C-12
	405A-10		336C-6		146A-15
	405B-10		336D-6		146B-15
09250-12016	444A-30		336E-6	09320-11017	410A-7
	444B-30	09283-25096	121A-2		410B-7
09251-05006	146A-14		121B-2		410C-7
	146B-14	09283-32048	116A-9		410D-7
09251-09007	410A-19	09289-05012	121A-14		410E-7
	410B-19		121B-14	09320-13022	405A-19
	410C-19	09289-06L02	210A-11		405B-19
	410D-19	09289-17L02	407A-13	09321-08026	146A-16
	410E-19		407B-13		146B-16
09260-12003	206A-15		407C-13	09380-12002	338A-22
	206B-13		407D-13	09380-15001	220A-3
09262-25003	407A-3		407E-13		220B-3
	407B-3		407F-13	09381-16001	116A-4
	407C-3		407G-13	09385-04003	410A-21
	407D-3	09320-08051	310P-9		410B-21
	407E-3	09320-08056	310A-6		410C-21
	407F-3		310C-6		410D-21
09263-17048	407G-3		310E-6		410E-21
	407A-2		310G-6	09385-06012	513A-31
	407B-2		310J-6	09385-06016	166A-13
	407C-2		310L-6		206B-20
	407D-2		310N-6	09401-08412	146A-18
	407E-2		310P-6		146B-18
	407F-2	09320-08062	144A-7	09401-08413	162A-6
	407G-2	09320-08515	310A-9	09401-10412	146A-19
09263-20024	220A-7		310B-9		146B-19
	220B-7		310C-9	09401-11423	146A-34
09280-06012	210A-9		310D-9		146A-40
09280-09008	175A-11		310E-9		146B-34
09280-09012	210A-10		310F-9		146B-40
09280-13004	175A-4		310G-9	09401-11425	144A-8

SUZUKI DF9.9B/15A/20A PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material Development Group, Automobile & Motorcycle Service Engineering Dept.
300 Takatsuka, Minami, Hamamatsu, Japan

SUZUKI MOTOR CORPORATION